RUTHZIL TRATOR COMERCIAL DE PEÇAS LTDA 11 97083-6812 ROLANDO CITRANGULO

ABRIL 2021

Previous Next

Search...

Recent Posts

- The most complete list of forklift transmission charging pump
- Composition of wheel loader
- The forklift chain is too long and how to adjust it?
- Loader models and maintenance

Xinchai A490BPG C490BPG diesel engines

and parts

Xinchai diesel engine parts 490BPG A490BPG C490BPG B490BPG C490BT 4D27G31 **PARTS MANUAL.**

If you still haven't found what you need here, you can contact us directly

1. Cylinder block assembly for xinchai A490BPG C490BPG

490B-01001	cylinder block engine body
B490B-01001	cylinder block engine body
490B-01005	cylinder block engine body
490B-01006	O ring, liner
490B-01002A	cylinder head bolt
490B-01003A	cylinder head bolt
490B-01078	plug 30
490B-01008A	camshaft bush
490B-01009	plug58
490B-01079	plug40
490B-01019A	bolt,main bearing cover
490B-01032	main bearing cover
490B-01007A	camshaft bush
490B-01036	rear cranshaft oil seal
490B-01022A	thrust plate upper
490B-01081-1	
490B-01026A	thrust plate lower
490B-01029	Screw plugR1/8
490B-01027	Screw plug middle
490B-01033	main bearing upper
490B-01034	main bearing lower
490B-01080	plug15
490B-01074	pipe
490B-01081	Screw plugR1/4
490B-01004	cylinder head gasket
490B-01011	water pipe

WhatsApp Us For Any Request

› How to identify the damage level of forklift parts

产品类别

› Diesel engines and Parts

› HYUNDAI

› Parts for bulldozer

› Parts for diesel generator

› Parts for excavators

› Parts for handling equipments

› Parts for tractors


› Parts for wheel loaders

› Uncategorized

485-01100	Drain valve
B490B-01005	cylinder liner
490B-01001	cylinder block engine body
B490B-01001	cylinder block engine body
490B-01005	cylinder block engine body
490B-01006	O ring, liner
490B-01002A	cylinder head bolt
490B-01003A	cylinder head bolt
490B-01078	plug 30
490B-01008A	camshaft bush
490B-01009	plug58
490B-01079	plug40
490B-01019A	bolt,main bearing cover
490B-01032	main bearing cover
490B-01007A	camshaft bush
490B-01036	rear cranshaft oil seal
490B-01024A	seat,rear oil seal

490B-01022A	thrust pl
490B-01081-1	Screw plu
490B-01026A	thrust pl
490B-01029	Screw plu
490B-01027	Screw plu
490B-01033	main bea
490B-01034	main bea
490B-01080	plug15
490B-01074	pipe
490B-01081	Screw plu
490B-01004	cylinder l
490B-01011	water pip
485-01100	Drain val
B490B-01005	cylinder l
490B-01005	cylinder l

机体飞轮壳总成 Cylinder block flywheel housing assembly

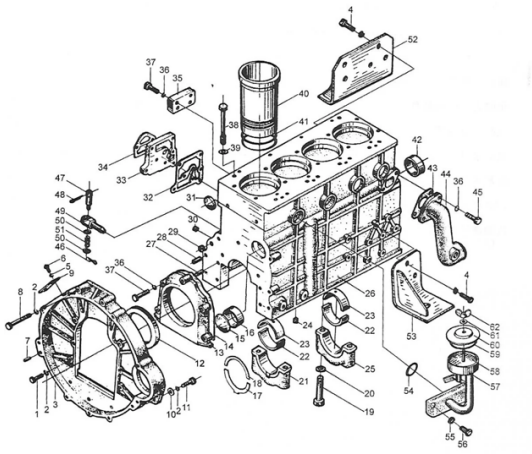

2. Flywheel assembly for Xinchai 490BPG A490BPG C490BPG A498BT1

490B-05100-41	flywheel assy
490B-05100-21	flywheel assy
A490B-05100-7	flywheel assy
490B-05100-13	flywheel assy
490B-05100-7	flywheel assy
490BT-05100-2	flywheel assy
490B-05102	flywheel ring gear
A490B-05102-1	flywheel ring gear
A490B-05102A	flywheel ring gear
493BPG-05102	flywheel ring gear
490B-05001-1	safe plate
490B-05002	flywheel bolt
490B-13005	bolt,flyw
490BT-13001A	flywheel
490B-13001-3	flywheel
490B-13001A	flywheel
409B-13001-1	flywheel
A490B-13001A	flywheel
490BT-13001B	flywheel
490BT-13001-1B	flywheel
490B-18001-6	clutch ho
490B-13001-3B	clutch ho
Y30H-07001A	clutch ho
Y30H-07001	clutch ho

490B-05100-41	flywheel assy
490B-05100-21	flywheel assy
A490B-05100-7	flywheel assy
490B-05100-13	flywheel assy
490B-05100-7	flywheel assy
490BT-05100-2	flywheel assy
490B-05102	flywheel ring gear
A490B-05102-1	flywheel ring gear
A490B-05102A	flywheel ring gear
493BPG-05102	flywheel ring gear
490B-05001-1	safe plate
490B-05002	flywheel bolt

490B-13005	bolt, flywheel housing
490BT-13001A	flywheel housing
490B-13001-3	flywheel housing
490B-13001A	flywheel housing
409B-13001-1	flywheel housing
A490B-13001A	flywheel housing
490BT-13001B	flywheel housing
490BT-13001-1B	flywheel housing
490B-18001-6	clutch housing

490B-13001-3B	clutch housing
Y30H-07001A	clutch housing
Y30H-07001	clutch housing

3. Crankshaft and camshaft assembly for Xinchai A490BPG C490BPG

D490BPG-05004	crankshaft
490B-05004D	crankshaft
B490B-05004	crankshaft
B490B-05004-1	crankshaft
A490BZL-05004	crankshaft
490B-05008	bolt
6302-2Z	bearing
490BPG-05200	crankshaft pulley
490B-05006-1	crankshaft pulley
490BT-05006-2	crankshaft pulley

495B-06001	camshaft
490B-06001	camshaft
490B-06002	Valve tap
490B-06003	Valve lift
490B-05006-2	cranksha
490B-05006-4	cranksha
490B-05006-7	cranksha
490B-05006-3	cranksha
490B-01007A	camshaft
490B-01008	camshaft
490BT-01007	camshaft

D490BPG-05004 crankshaft

B490BPG-05004	crankshaft
490B-05004D	crankshaft
B490B-05004	crankshaft
B490B-05004-1	crankshaft
A490BZL-05004	crankshaft
490B-05008	bolt
6302-2Z	bearing
490BPG-05200	crankshaft pulley
490B-05006-1	crankshaft pulley
490BT-05006-2	crankshaft pulley
495B-06001	camshaft
490B-06001	camshaft
490B-06002	Valve tappet
490B-06003	Valve lifter
490B-05006-2	crankshaft pulley
490B-05006-4	crankshaft pulley
490B-05006-7	crankshaft pulley
490B-05006-3	crankshaft pulley
490B-01007A	camshaft bushing
490B-01008	camshaft bushing
490BT-01007	camshaft bushing

4. Cylinder head assembly for Xinchai A490BPG C490BPG

490B-03200	valve rocker arm assy
490B-03018	plug12
490B-03001	double-screw bolt
490B-03003	exhaust pipe gasket
490B-03004	valve spring outside
490B-03005	valve spring inside
490B-03006	Valve lock clamp
490B-03007	valve spring upper
490B-03009A	holder
490B-03011	valve spring lower
490B-03012	rear covet
490B-03014	intake vavle
490B-03015	exhaust valve
A490BZL-03016	vavle oil seal
490B-11200B	Oil filler cap
490B-11201B	Oil filler cap
490B-11004	rubber, valve cover
A498B-11002	rubber, valve cover
A490B-11004-1	rubber, valve cover
A498B-11002	rubber
A498B-11003	rubber
A498B-11004	gasket
A498B-11001-2	Cylinder head cover
A490B-11001	Cylinder head cover
A490BPG-03100	cylinder head
490BPG-03100	cylinder head
490B-03107	seat, Intake vavle
490B-03108	seat, exhaust vavle

490B-03200	valve rocker arm assy
490B-03018	plug12
490B-03001	double-screw bolt
490B-03003	exhaust pipe gasket
490B-03004	valve spring outside
490B-03005	valve spring inside
490B-03006	Valve lock clamp
490B-03007	valve spring upper
490B-03009A	holder
490B-11200B	Oil filler c
490B-11201B	Oil filler c
490B-11004	rubber, v
A498B-11002	rubber, v
A490B-11004-1	rubber, v
A498B-11002	rubber
A498B-11003	rubber
A498B-11004	gasket
A498B-11001-2	Cylinder

490B-03009A	holder	A498B-11001-2	Cylinder
490B-03011	valve spring lower	A490B-11001	Cylinder
490B-03012	rear covet	A490BPG-03100	cylinder
490B-03014	intake vavle	490BPG-03100	cylinder
490B-03015	exhaust valve	490B-03107	seat, Int
A490BZL-03016	vavle oil seal	490B-03108	seat, exh

5. Gas exchanging system assembly

490B-08001-3	Exhaust manifold	490B-09002-4	intake m
490B-08001-3	Exhaust manifold	490B-09002	intake m
490B-08001	Exhaust manifold	490B-09002-5	intake m
485Q-08001	Exhaust manifold	490BT-09002	intake m
490B-08001-6	Exhaust manifold	490B-09002-6	intake m
490B-08001-6	Exhaust manifold	490BT-09002-2	intake m
490B-08001-3	Exhaust manifold	490B-09002	intake m
490B-08001-3	Exhaust manifold	490B-08002-3	gasket
490B-08001-1	Exhaust manifold	490B-09001	gasket
4D32X30-08001-2	Exhaust manifold	490B-09004	gasket
A490BZL-08001	Exhaust manifold	490B-54000-1	air heate
C490BZG-08001	Exhaust manifold	490B-54000	air heate
490B-08001-7	Exhaust manifold	490B-09003-7	cover
490B-08001-8	Exhaust manifold	495BT-08001	Exhaust
490BT-08001-3	Exhaust manifold	490B-43011	hoop
490B-43002	Thermostat	490B-43001-2	Thermos
490B-43101	Thermostat housing	490B-43001	Thermos
490B-43001	Thermostat cover	490BT-43001	Thermos
490B-43001-2	Thermostat cover	490B-43101-2	Thermos

490B-08001-3	Exhaust manifold
490B-08001	Exhaust manifold
485Q-08001	Exhaust manifold
490B-08001-6	Exhaust manifold

490B-08001-6	Exhaust manifold
490B-08001-3	Exhaust manifold
490B-08001-3	Exhaust manifold
490B-08001-1	Exhaust manifold
4D32X30-08001-2	Exhaust manifold
A490BZL-08001	Exhaust manifold
C490BZG-08001	Exhaust manifold
490B-08001-7	Exhaust manifold
490B-08001-8	Exhaust manifold
490BT-08001-3	Exhaust manifold
490B-43002	Thermostat
490B-43101	Thermostat housing
490B-43001	Thermostat cover
490B-43001-2	Thermostat cover
490B-09002-4	intake manifold
490B-09002	intake manifold
490B-09002-5	intake manifold
490BT-09002	intake manifold
490B-09002-6	intake manifold
490BT-09002-2	intake manifold
490B-09002	intake manifold
490B-08002-3	gasket
490B-09001	gasket
490B-09004	gasket
490B-54000-1	air heater 24V
490B-54000	air heater 12V
490B-09003-7	cover
495BT-08001	Exhaust manifold
490B-43011	hoop
490B-43001-2	Thermostat cover
490B-43001	Thermostat cover
490BT-43001	Thermostat cover
490B-43101-2	Thermostat housing

6. Oil sump assembly

490B-07100	oil pan
490B-07100-9	oil pan
490BT-07106	oil pan
490BT-07003	oil pan
490B-07600	screw plug, oil pan
490B-07101	plate
490B-07102	plate
490B-07002	gasket,oil pan
490BT-07002A	gasket,oil pan
490B-31000A	oil pump
490B-33000	pipe, oil
490B-32000B	oil filter J
495B-34000-2	Oil respi
490B-34000	Oil respi
490B-07105	sleeve, o
490B-07200	oil ruler
490BT-07200	oil ruler
490B-07211	oil ruler

490B-07100	oil pan
490B-07100-9	oil pan
490BT-07106	oil pan
490BT-07003	oil pan
490B-07600	screw plug, oil pan
490B-07101	plate
490B-07102	plate
490B-07002	gasket,oil pan
490BT-07002A	gasket,oil pan
490B-31000A	oil pump
490B-33000	pipe, oil pump
490B-32000B	oil filter JX85100C
495B-34000-2	Oil respirator
490B-34000	Oil respirator
490B-07105	sleeve, oil ruler
490B-07200	oil ruler
490BT-07200	oil ruler

490B-07211	oil ruler

7. Piston connecting rod assembly

490B-04100	piston ring set
490B-04200	connecting rod assy
490B-04004	piston pin
490B-04005A	connecting rod bush
490B-04007A	connecting rod bearing
490B-04009	connecting rod bolt
490B-04013	Snap ring

A490BPG-04001	Piston
E490BPG-04001	piston C4
D490BPG-04001	piston C4
490B-04001B	piston 49
XC4D27-04001	piston C4
C490BZG-04001	piston C4
B490B-04001	piston B4

490B-04100	piston ring set
490B-04200	connecting rod assy
490B-04004	piston pin
490B-04005A	connecting rod bush
490B-04007A	connecting rod bearing
490B-04009	connecting rod bolt
490B-04013	Snap ring
A490BPG-04001	Piston
E490BPG-04001	piston C490BPG
D490BPG-04001	piston C490BPG
490B-04001B	piston 490BPG

.

XC4D27-04001	piston C490BT
C490BZG-04001	piston C490BZG
B490B-04001	piston B490BPG

8. Timing gear assembly

490BPG-16001	Timing gear housing cover
490BPG-16002	gasket
490BPG-16003	Timing gear housing
490B-16004-1	gasket
490B-16008	gasket
490B-16035	front oil seal
490BPG-16009	gasket
490BPG-82003	gasket ring
490BPG-02006	idle gear
490B-02006	idle gear
490BT-02006	idle gear
490BPG-02100	oil pipe
490B-02004	shaft, idle
490B-02012-1	plate, idle gear
490B-02005	bush, idle gear
490BT-02010	hydraulic pump gear
490BT-02010-1	hydraulic pump gear

495BT-02011	hydraulic pump gear
495BT-02010	hydraulic pump gear
490BPG-82004	bridge gear
490BPG-82005	shaft, bridge
490BPG-82006	plate, bridge gear
490BPG-82008	cover
490BPG-82001	plate
490BPG-82009	gasket
490BPG-82007	hydraulic pump gear
490BPG-82011	plate
490BPG-82013A	end cover
490BT-16003	Timing gear housing
490BT-16001	Timing gear housing cover
490BPG-02007	crankshaft gear
490BPG-02009	camshaft gear
490B-02011	plate
490BPG-82007-6	hydraulic pump gear
490BPG-82007-5	hydraulic pump gear
490BT-02010-2	hydraulic pump gear

C490BZG-82007	hydraulic pump gear
490BPG-82007-5	hydraulic pump gear

490BPG-16001	Timing gear housing cover
490BPG-16002	gasket
490BPG-16003	Timing gear housing
490B-16004-1	gasket
490B-16008	gasket
490B-16035	front oil seal
490BPG-16009	gasket
490BPG-82003	gasket ring
490BPG-02006	idle gear
490B-02006	idle gear
490BT-02006	idle gear
490BPG-02100	oil pipe
490B-02004	shaft, idle

490BPG-82004	bridge g
490BPG-82005	shaft, bri
490BPG-82006	plate, bri
490BPG-82008	cover
490BPG-82001	plate
490BPG-82009	gasket
490BPG-82007	hydraulic
490BPG-82011	plate
490BPG-82013A	end cove
490BT-16003	Timing g
490BT-16001	Timing g
490BPG-02007	cranksha
490BPG-02009	camshaft

490B-02012-1	plate, idle gear
490B-02005	bush, idle gear
490BT-02010	hydraulic pump gear
490BT-02010-1	hydraulic pump gear
495BT-02011	hydraulic pump gear
495BT-02010	hydraulic pump gear

490B-02011	plate
490BPG-82007-6	hydraulic
490BPG-82007-5	hydraulic
490BT-02010-2	hydraulic
C490BZG-82007	hydraulic
490BPG-82007-5	hydraulic

9. Water pump assembly for Xinchai A490BPG C490BPG 490BPG

490B-42000	water pump
490BT-42000-1A	water pump
490B-41002-1	fan pulley
490B-41002-2	fan pulley
490B-41002-5	fan pulley
490B-41002-7	fan pulley
490B-43007	water pipe
490B-01074	connect pipe
490B-42000	water pump
490BT-42000-1A	water pump
490B-41002-1	fan pulley
490B-41002-2	fan pulley
490B-41002-5	fan pulley
490B-41002-7	fan pulley
490B-43007	water pipe
490B-01074	connect pipe
490B-41003-3	gasket, fan
490B-41001-3	belt
490B-41001-4	belt
F400-28-52-7	fan
490B-41002-5	fan pulley
490b-41100-4	fan
F380-28-52-7	fan

490B-41003-3	gasket, f
490B-41001-3	belt
490B-41001-4	belt
F400-28-52-7	fan
490B-41002-5	fan pulle
490b-41100-4	fan
F380-28-52-7	fan

10. Fuel injection pump and Injector assembly for xinchai

A490BZL-03017	locking bolt,injector	490BPG-21000	Fuel injec
A490B-03019	locking bolt,injector	A490BPG-21000	Fuel injec
490B-31009	injector bushing	4Q167Z1-1	Fuel injec BH4Q80R
A490B-03109	injector bushing	4Q167Z1	Fuel injec
490B-12000	advancer	B425ZH-1	Fuel injec
495B-12000	advancer	4QT72Z	Fuel injec 4QT80R9
490B-21010	fuel pipe	4QT72ZH-1	Fuel injec
490B-22000	fuel injector	4PL198	Fuel injec
A490B-22000	fuel injector	4PL311	Fuel injec
490B-24000	CX7085 fuel filter	4QT334ZH-1	Fuel injec
490B-23000	High pressure fuel pipe	B683Z-1	Fuel injec
A490B-23000	High pressure fuel pipe	4QT451Z-2	C490BPG
490B-25200-1	fuel pipe	4I378	Fuel injec
490B-25200	fuel pipe	490BT-25300	fuel pipe
490BT-25200	fuel pipe		
490BPG-21000	Fuel injection pump		
A490BPG-21000	Fuel injection pump		
4Q167Z1-1	Fuel injection pump BH4Q80R8		
4Q167Z1	Fuel injection pump		

4QT672Z	Fuel injection pump
B425ZH-1	Fuel injection pump
4QT72Z	Fuel injection pump 4QT80R9
4QT72ZH-1	Fuel injection pump
4PL198	Fuel injection pump
4PL311	Fuel injection pump
4QT334ZH-1	Fuel injection pump
B683Z-1	Fuel injection pump
4QT451Z-2	C490BPG
4I378	Fuel injection pump
490BT-25300	fuel pipe
A490BZL-03017	locking bolt,injector
A490B-03019	locking bolt,injector
490B-31009	injector bushing
A490B-03109	injector bushing
490B-12000	advancer
495B-12000	advancer
490B-21010	fuel pipe
490B-22000	fuel injector
A490B-22000	fuel injector
490B-24000	CX7085 fuel filter
490B-23000	High pressure fuel pipe
A490B-23000	High pressure fuel pipe
490B-25200-1	fuel pipe
490B-25200	fuel pipe
490BT-25200	fuel pipe

11. Starter and alternator assembly for Xinchai

Your Content Goes Here

490B-51000	starter	490B-53002	alternatc
QDJ1409E-P	starter	JF131X	alternatc
QDJ1309K-P	starter	JF11A	alternatc
1DJ1308L	starter	JF15A	alternatc

490B-51000	starter
QDJ1409E-P	starter
QDJ1309K-P	starter
1DJ1308L	starter
QDJ1408L	starter
490B-53002	alternator
JF131X	alternator
JF11A	alternator
JF15A	alternator

Check more Xinchai engine parts

Check Parts | Contact Us

By okaypart | April 21st, 2021 | Categories: Purchase guide from Chinese spare parts | Tags: 490BPG A490BPG

C490BPG B490BPG C490BT 4D27G31 PARTS MANUAL | 1 Comment

Share This Story, Choose Your Platform!

Related Posts



One Comment

Werner Allesch 06/21/2022 at pm7:28 - Reply

Hello team.

Xinchai A490BPG C490BPG diesel engines
we need a waterpumpm from this engine.
Please make us a offer.
Greeting from germany.
Werner Allesch
http://www.hoffux.de

Leave A Comment

Comment...

Name (require

Email (requirec

Website

Save my name, email, and website in this browser for the next time I comment.

Post Comment

Na

Whatsapp me: +86 13268041312

Home

Available Mon-Sun: 8:00AM – 9:00PM

About

email us:

Categories

Blogs

Contact

Get Started With JEREI Okayparts Now!

We always want to make sure that our customers are getting the best deal, so let us know what you're interested in and we'll get back with a quote!

Get Started

© Copyright 2015 – 2025 Okaypart | All Rights Reserved | Powered by JEREI engineering machinery