CLARK

C20-33(35)L

RUTHZIL TRATOR COMERCIAL DE PEÇAS LTDA 11 97083-6812 ROLANDO

AGOSTO 2007


부품 매뉴얼
PARTS MANUAL

TRUCK MODEL : C20-33(35)L

SERIAL NUMBER : P232L-0956 & above-9645 KF

부품 청구시 항상 장비의 SERIAL NO. 도 함께 알려 주십시오.

ALWAYS GIVE TRUCK SERIAL NUMBER WHEN ORDERING PARTS.

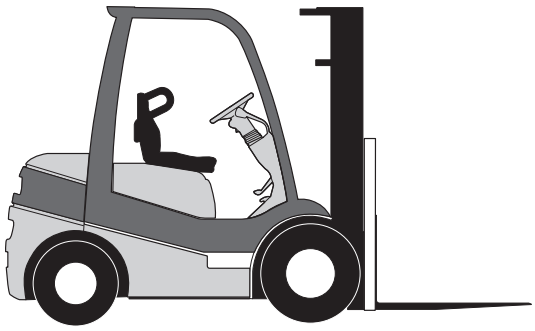


Part No. 8039005
Manual No. I-537-6
Aug, 2007

CLARK THE FORKLIFT


(본사) 경기도 부천시 오정구 오정동 202-1
(Head office) 202-1 Ojung-Dong, Ojung-Gu, Bucheon-city, Kyunggi-do, Korea
(공장) 경남 창원시 웅남동 40-1
(Factory) 40-1 Ungnam-dong, Changwon-city, Kyungnam, Korea

ENGINE OVERHAUL GASKET KIT

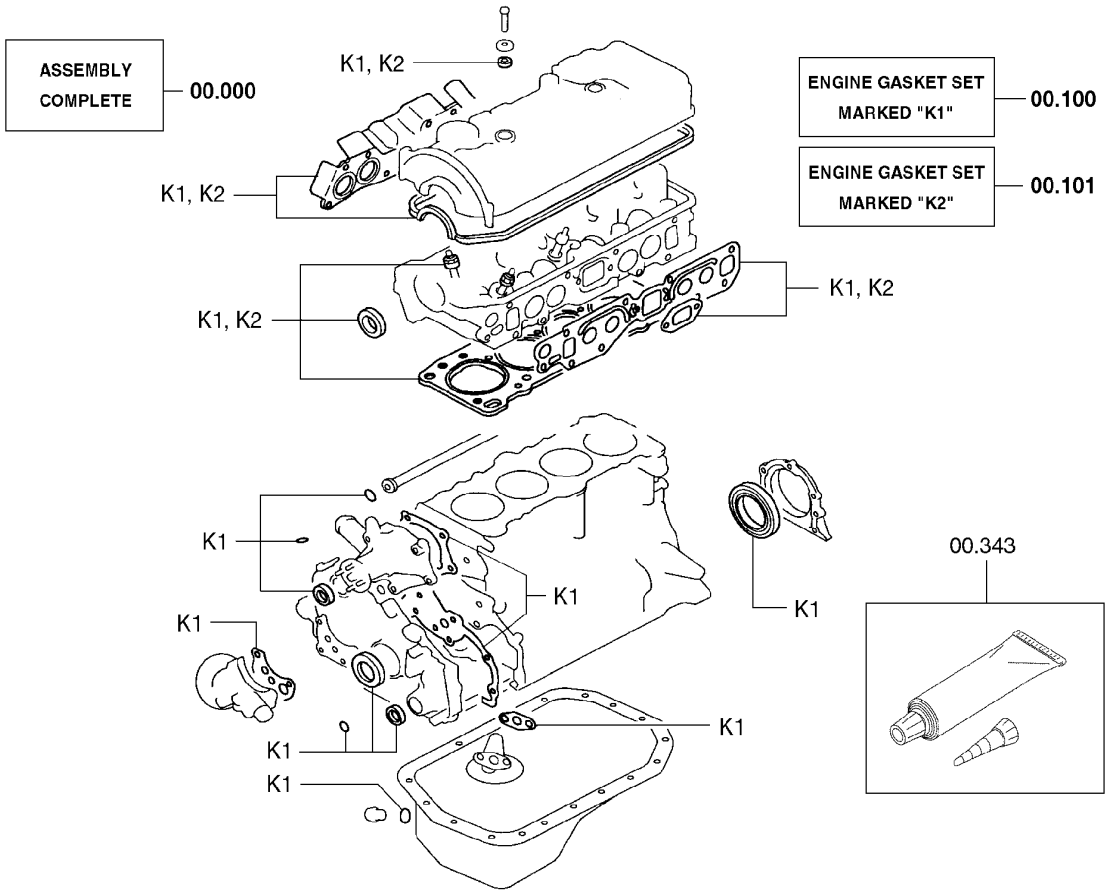

키이번호 key No.	부품명 Description	
00.000	엔진 조립체	Engine Assembly
00.100	가스킷 킷트	Gasket Kit, Engine Overhaul
00.101	밸브 가스킷	Valve Grind Gasket Kit (Top Set)
00.343	가스킷	Gasket, Liquid


ENGINE MOUNTING

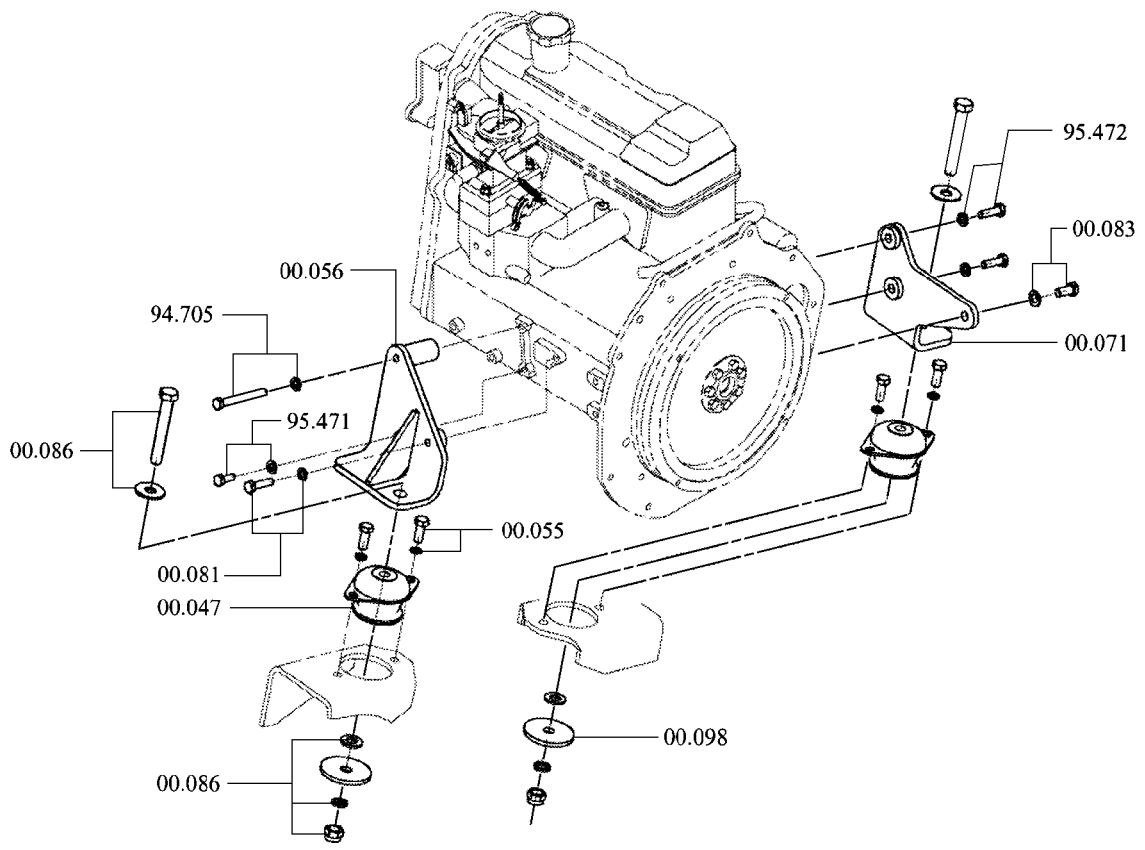

00-374

키이번호 key No.		부품명 Description
00.047	댐퍼너	Dampener, Engine Front Vibration
00.055	패스너	Fastener, Engine Front Vibration Dampener
00.056	우측 마운트	Mount, Engine, RH
00.071	좌측 마운트	Mount, Engine Lh
00.081	패스너	Fastener, Engine Mount (Rh)
00.083	패스너	Fastener, Engine Mount (Lh)
00.086	패스너	Fastener, Rh Engine Mount
00.098	와셔	Washer, Engine Mounting To Frame Rh
94.705	패스너	Fastener, Engine Mounting Bracket
95.471	패스너	Fastener, Engine Mount
95.472	패스너	Fastener, Engine Mount


CRANKCASE

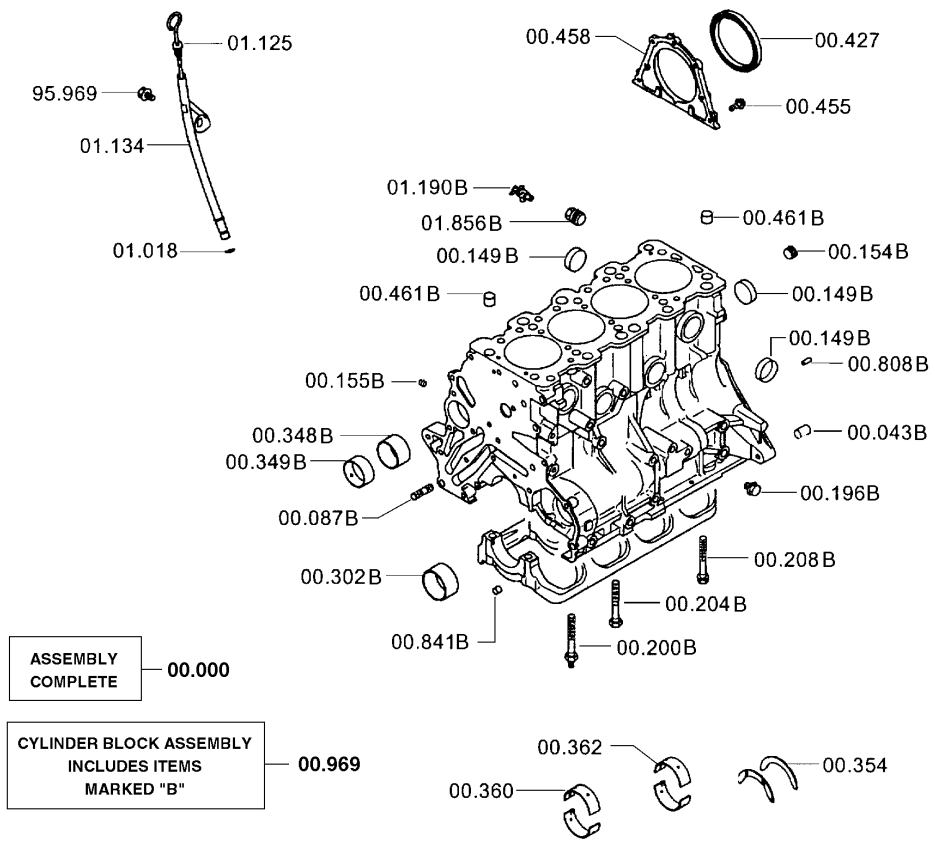

00-388

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
00.000	엔진 조립체	Production Engine Assymbly	00.362	베어링 #3	Bearing, No. 3 Main Journal
00.043	부싱	Bushing, Engine Rear Support Bracket	00.427	시일	Seal, Crankcase Rear Oil
00.087	스터드	Stud, Engine Front Support	00.455	패스너	Fastener, Rear Oil Seal Housing
00.149	확장 플러그	Plug - Expansion, Crankcase Side	00.458	하우징	Housing, Rear Oil Seal
00.154	확장 플러그	Plug - Expansion, Crankcase End	00.461	다웰	Dowel, Crankcase Head
00.155	확장 플러그	Plug - Expansion, Crankcase End	00.808	다웰 링	Dowel Ring, Crankcase Rear Adaptor Plate
00.196	확장 플러그	Plug-Expansion, Crankcase Side	00.841	다웰 링	Dowel Ring, Engine Front Gear Cover
00.200	패스너	Fastener, Crankshaft Bearing No. 1 Cap	00.969	블록 조립체	Block Assy, Cylinder
00.204	패스너	Fastener, Crankshaft Bearing No. 2 Cap	01.018	시일	Seal, Oil Level Dipstick Adaptor
00.208	패스너	Fastener, Crankshaft Bearing No. 3 Cap	01.125	딥스틱	Dipstick, Crankcase Oil Level
00.302	베어링	Bearing, Balancer Weight Rear	01.134	어댑터	Adaptor, Crankcase Oil Level Dipstick
00.348	베어링	Bearing, Engine Balancer Shaft Rear	01.190	드레인 콕	Drain Cock, Crankcase
00.349	베어링	Bearing, Engine Balancer Shaft Front	01.856	피팅	Fitting, Oil Pressure
00.354	와셔	Washer, Crankshaft Thrust	95.969	패스너	Fastener, Engine Oil Level Control
00.360	베어링 #1	Bearing, No. 1 Main Journal			


OIL PUMP

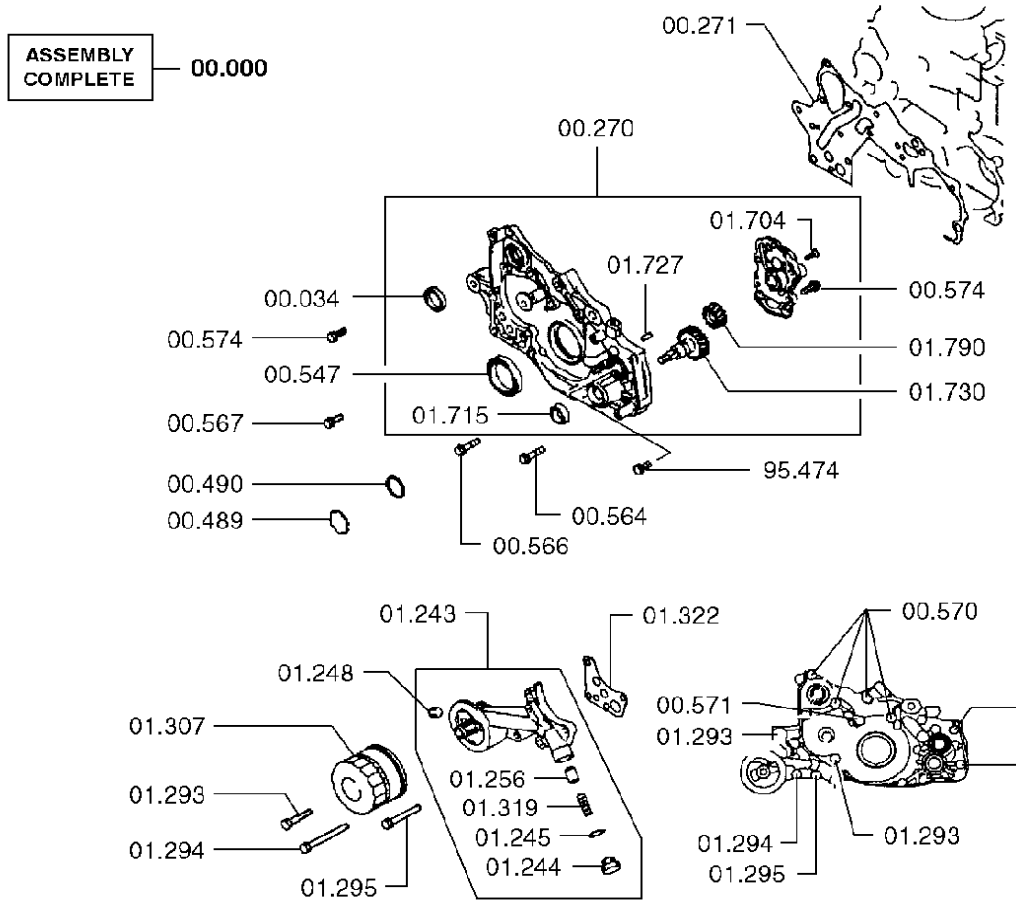

00-390


키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
00.000	엔진 조립체	Engine Assembly	01.244	플러그	Plug, Engine Oil Filter Base
00.034	시일	Seal, Engine Balancer Shaft Front Oil	01.245	가스킷	Gasket, Engine Oil Filter Base Plug
00.270	케이스 & 오일펌프	Case And Oil Pump, Engine Front End	01.248	플러그	Plug, Engine Oil Filter Adaptor
00.271	가스킷	Gasket, Eng Front End Case And Oil Pump Assy	01.256	시트	Seat, Engine Oil Filter Spring
00.489	플러그	Plug, Engine Front Gear Cover	01.293	패스너	Fastener, Engine Oil Filter Attaching
00.490	시일	Seal, Engine Front Gear Cover Plug	01.294	피팅	Fitting, Engine Oil Filter Outlet
00.547	시일	Seal, Engine Front Gear Cover	01.295	패스너	Fastener, Engine Oil Filter Attaching
00.564	패스너	Fastener, Engine Front Gear Cover	01.307	카트리지 & 가스킷	Cartridge & Gasket, Engine Oil Filter
00.566	패스너	Fastener, Engine Front Gear Cover	01.319	스프링	Spring, Engine Oil Filter
00.567	패스너	Fastener, Engine Front Gear Cover	01.322	가스킷	Gasket, Engine Oil Filter Adaptor
00.570	패스너	Fastener, Backing Plate	01.704	패스너	Fastener, Oil Pump Cover
00.571	패스너	Fastener, Backing Plate	01.715	가스킷	Gasket, Oil Pump Cover
00.572	패스너	Fastener, Backing Plate	01.727	다웰	Dowel, Oil Pump Body
00.573	패스너	Fastener, Backing Plate	01.730	기어	Gear, Oil Pump Drive Idler
00.574	패스너	Fastener, Backing Plate	01.790	기어	Gear, Oil Pump Driven
01.243	베이스	Base, Engine Oil Filter	95.474	패스너	Fastener, Engine Oil Pump Drive Chain Access Hole Cover

ENGINE SUB-ASSEMBLY MOUNTING

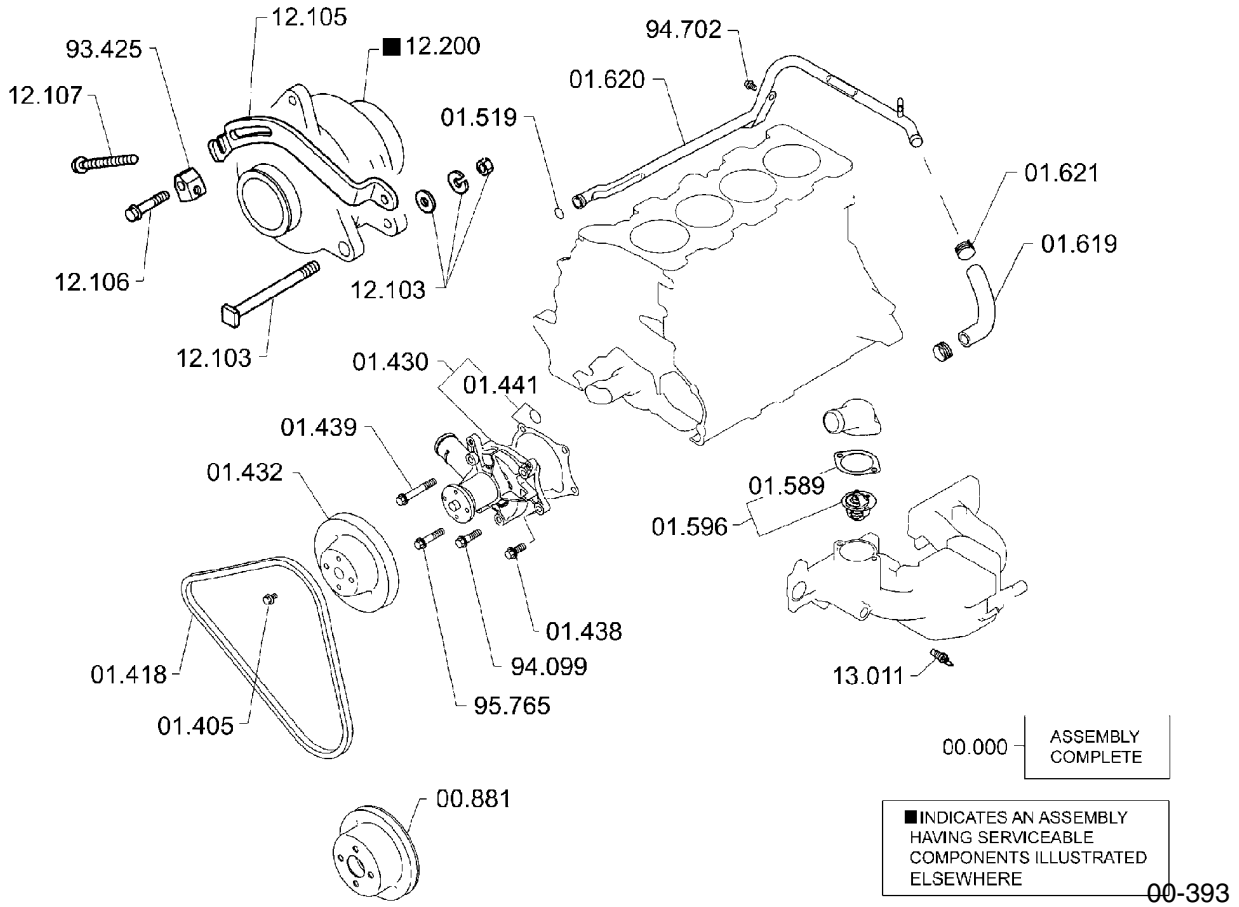


키이번호 key No.		부품명 Description
00.000	엔진 조립체	Engine Assembly
00.881	풀리	Pulley, Cooling Fan
01.405	패스너	Fastener, Fan Blade
01.418	벨트	Belt, Water Pump
01.430	펌프 조립체	Pump Assembly, Engine Water
01.432	풀리	Pulley, Water Pump
01.438	패스너	Fastener, Water Pump
01.439	패스너	Fastener, Water Pump
01.441	가스킷	Gasket, Engine Water Pump Attaching
01.519	시일	Seal, Water Pump Bleeder Line Fitting
01.589	가스킷	Gasket, Water Outlet Elbow
01.596	써머스태트	Thermostat, Engine
01.619	라인	Line, Water Pump Bleeder
01.620	피팅	Fitting, Water Pump Bleeder Line
01.621	클램프	Clamp, Water Pump Bleeder Line
12.103	패스너	Fastener, Alternator To Bracket
12.105	스트랩	Strap, Alternator Adjusting
12.106	패스너	Fastener, Adjusting Strap Mounting
12.107	패스너	Fastener, Adjusting Strap To Alternator
12.200	알터네이터조립체	Alternator Assembly
13.011	콘트롤	Control, Engine Temperature Indicator
93.425	너트	Nut, Alternator Adjusting Strap Fastener
94.099	패스너	Fastener, Water Pump Discharge Flange
94.702	패스너	Fastener, Water Pump Bleeder Line Clip
95.785	로크와셔	Lockwasher, Steer Axle Fork Upper Bearing Fastener

ROCKER COVER

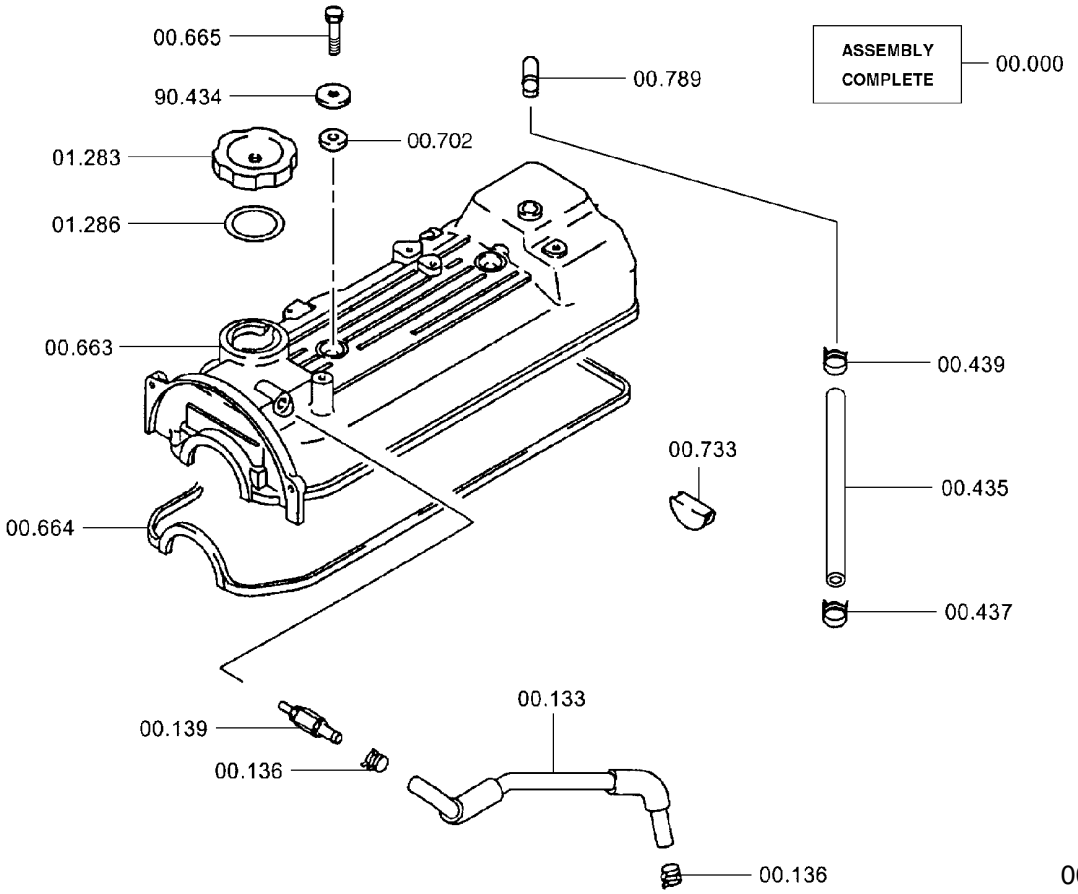

키이번호 key No.		부품명 Description
00.000	엔진 조립체	Engine Assembly
00.133	튜브	Tube, Crankcase Vent
00.136	클립	Clip, Crankcase Vent Tube
00.139	밸브	Valve, Crankcase Vent Tube
00.435	라인	Line, Crankcase Breather
00.437	클램프	Clamp, Crankcase Breather Line
00.439	클램프	Clamp, Crankcase Vent Line
00.663	커버	Cover, Rocker Arm
00.664	가스킷	Gasket, Rocker Arm Cover
00.665	패스너	Fastener, Rocker Arm Cover
00.702	시일	Seal, Rocker Arm Cover Fastener
00.733	플러그	Plug, Crankcase Head End Cover
00.789	플러그	Plug, Rocker Arm Cover
01.283	캡	Cap, Crankcase Oil Filler
01.286	가스킷	Gasket, Oil Filler Cap
90.434	와셔	Washer, Rocker Arm Cover Fastener


ENGINE IGNITION SYSTEM

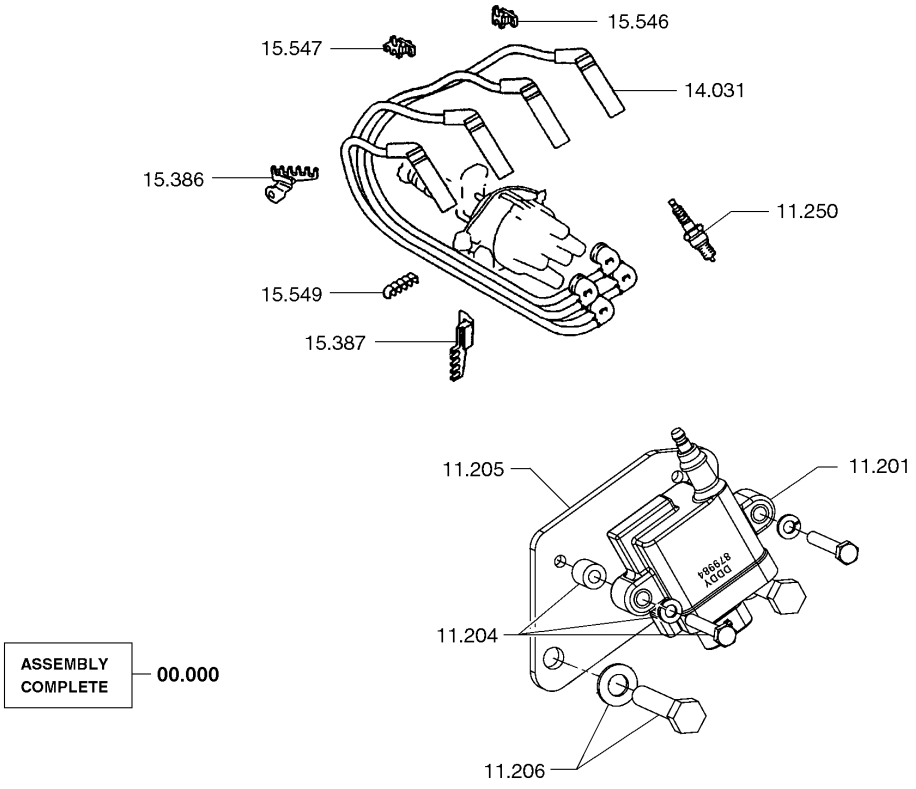

00-485

키이번호 key No.		부품명 Description
00.000	엔진 조립체	Engine Assembly
11.201	코일	Coil, Ignition
11.204	패스너	Fastener, Coil Strap
11.205	브래킷	Bracket, Coil Mounting
11.206	패스너	Fastener, Coil Mounting Bracke
11.250	스파크 플러그	Spark Plug
14.031	킷트	Kit, High Tension Wires & Boots
15.386	브래킷	Bracket, Spark Plug Wires
15.387	브래킷	Bracket, Spark Plug Wires
15.546	지지대	Support, Spark Plug Wires
15.547	지지대	Support, Spark Plug Wires
15.549	지지대	Support, Spark Plug Wires


ENGINE SUB-ASSEMBLY MOUNTING

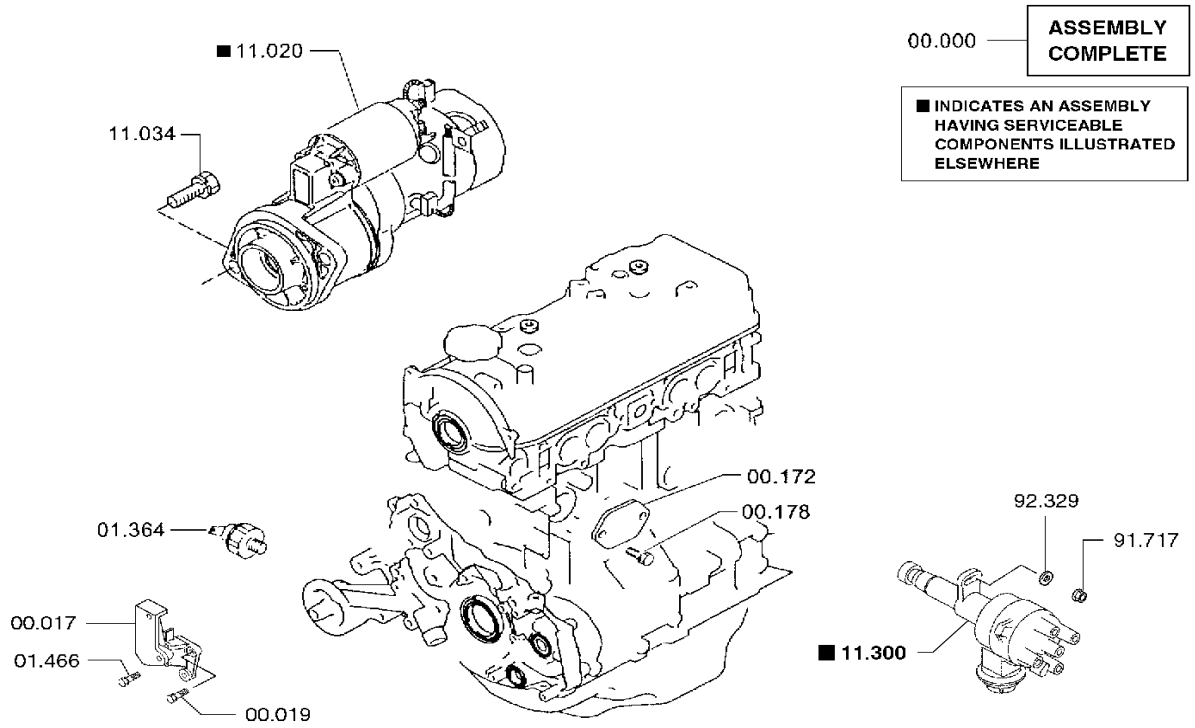

00-488

키이번호 key No.		부품명 Description
00.000	엔진 조립체	Engine Assembly
00.017	브래킷	Bracket, Engine Front Support
00.019	패스너	Fastener, Engine Front Support Bracket
00.172	커버	Cover, Crankcase Fuel Pump Hole
00.178	패스너	Fastener, Crankcase Fuel Pump Hole Cover
01.364	피팅	Fitting, Oil Pressure Gauge Line
01.466	패스너	Fastener, Water Pump Cover
11.020	모터 조립체	Motor Assembly, Starting
11.034	패스너	Fastener, Starting Motor
11.300	디스트리뷰터	Distributor Assembly
91.717	너트	Nut, Distributor Fastener
92.329	로크와셔	Lockwasher, Starting Motor Fastener


ENGINE BALANCER ASSEMBLY

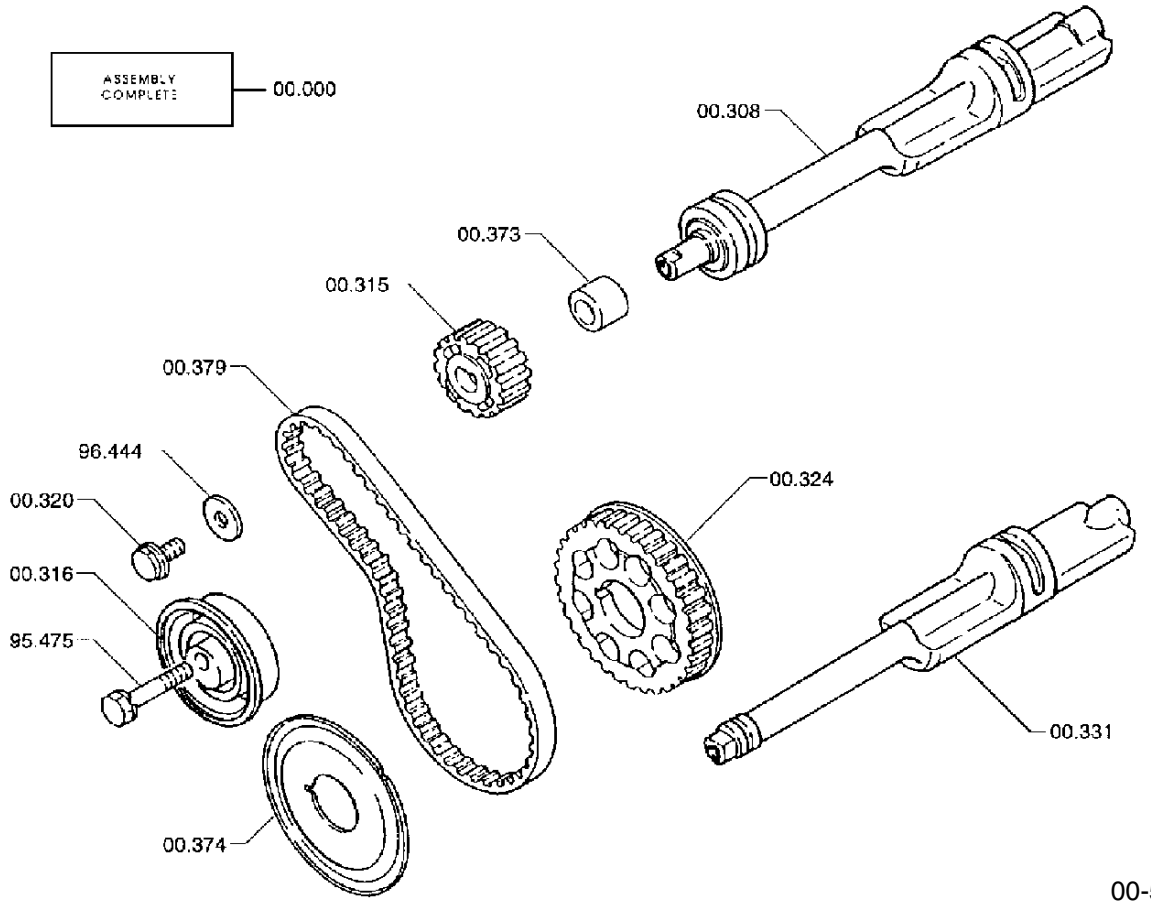

00-511


키이번호 key No.	부품명 Description	
00.000	엔진 조립체	Engine Assembly
00.308	발란서 웨이트	Weight, Engine Balancer
00.315	기어	Gear, Balancer Weight Driven
00.316	리테이너	Retainer, Balancer Weight Gears
00.320	패스너	Fastener, Engine Balancer Drive Gear
00.324	기어	Gear, Balancer Weight Drive
00.331	발란서 웨이트	Weight, Engine Balancer
00.373	스페이서	Spacer, Engine Balancer Weight Driven Gear
00.374	시일	Seal, Engine Balancer Weight Retainer
00.379	웨어 슬리브	Wear Sleeve, Crankshaft Pulley
95.475	패스너	Fastener, Engine Balancer Weight Retainer
96.444	와셔	Washer, Balancer Driven Gear

CRANKSHAFT

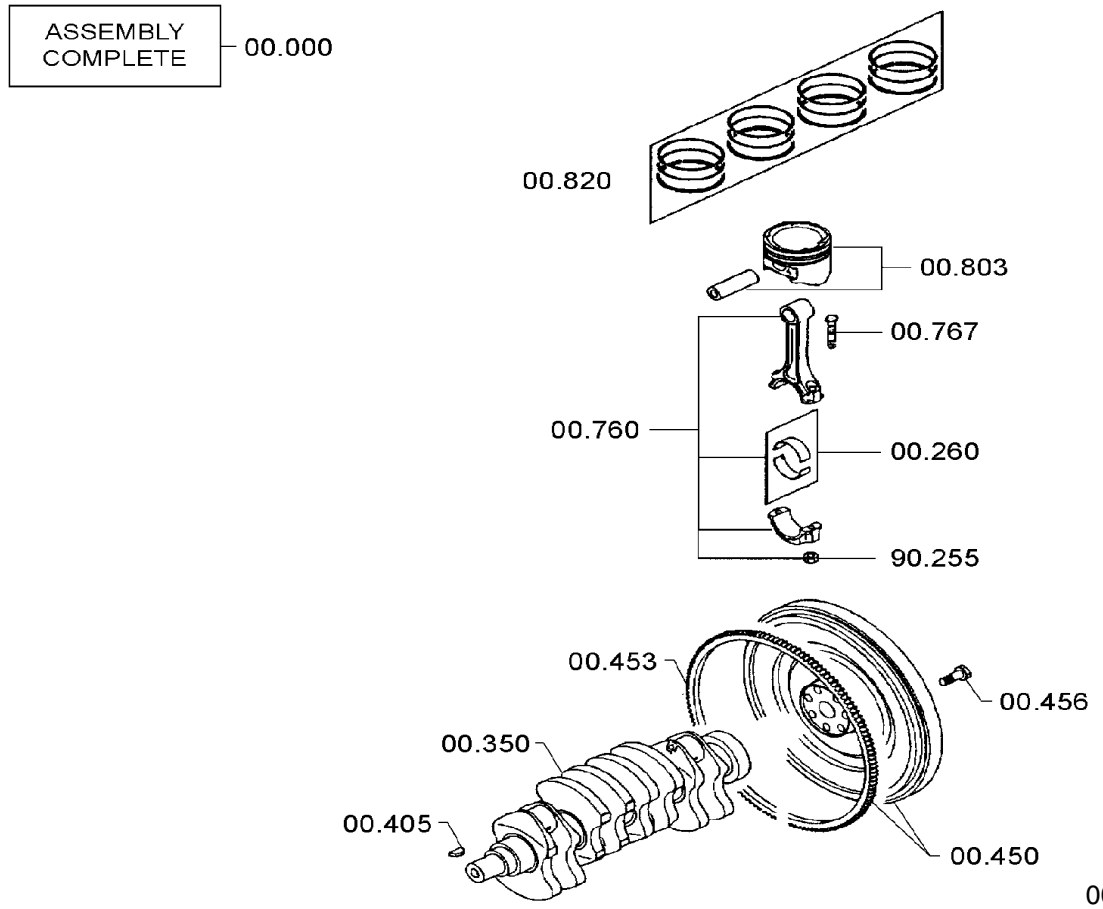

키이번호 key No.	부품명 Description	
00.000	엔진 조립체	Engine Assembly
00.260	베어링	Bearing, Connecting Rod (Cyl. #1)
00.350	크랭크축	Crankshaft
00.405	키	Key, Crankshaft Timing Gear
00.450	플라이휠 & 링기어	Flywheel & Ring Gear
00.453	기어	Gear, Flywheel Ring
00.456	패스너	Fastener, Crankshaft To Flywheel
00.760	로드 조립체	Rod Assembly, Connecting (Even Cylinders)
00.767	패스너	Fastener, Connecting Rod Bearing Cap
00.803	피스톤 & 핀	Piston & Pin (One Cylinder)
00.820	피스톤 링	Piston Ring (Engine Set)
90.255	너트	Nut, Connecting Rod Bearing Cap Fastener


OIL FAN

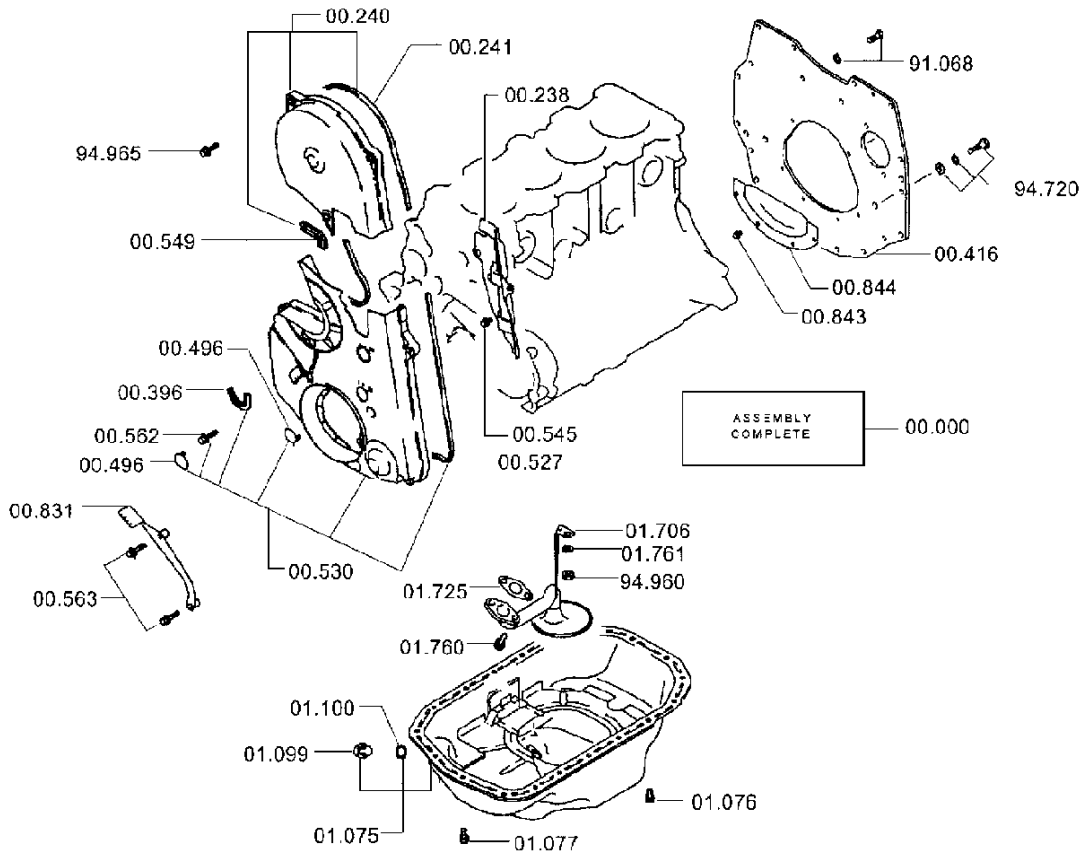

00-743

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
00.000	엔진 조립체	Engine Assembly	00.844	시일드	Shield, Flywheel Housing Dust
00.238	커버	Cover, Timing Belt Under Lower	01.075	팬	Pan, Crankcase Oil
00.240	커버	Cover, Timing Belt Front Upper	01.076	패스너	Fastener, Crankcase Oil Pan
00.241	가스킷	Gasket, Timing Belt Front Upper Cover	01.077	패스너	Fastener, Oil Pan To Crankcase
00.396	시일	Seal, Engine Front Gear Cover Gasket	01.099	플러그	Plug, Crankcase Oil Pan Drain
00.416	플레이트	Plate, Engine Rear	01.100	가스킷	Gasket, Crankcase Oil Pan Drain Plug
00.496	플러그	Plug, Engine Front Gear Cover	01.706	스트레이너	Strainer, Oil Pump Oil
00.527	가스킷	Gasket, Engine Front Gear Cover	01.725	가스킷	Gasket, Oil Strainer Frame
00.530	커버	Cover, Engine Front Gear	01.760	볼트	Bolt, Oil Pump Strainer Fastener
00.545	패스너	Fastener, Engine Front Gear Cover	01.761	로크와셔	Lockwasher, Oil Pump Strainer Fastener
00.549	가스킷	Gasket, Engine Front Gear Cover Seal	91.068	볼트	Bolt, Engine Rear Plate
00.562	패스너	Fastener, Engine Front Gear Cover	94.719	패스너	Fastener, Engine Rear Plate
00.563	패스너	Fastener, Engine Front Gear Cover	94.720	패스너	Fastener, Engine Rear Plate
00.831	타이밍 플레이트	Timing Indicator Plate	94.960	너트	Nut, Oil Pump Strainer Fastener
00.843	패스너	Fastener, Flywheel Housing Dust Shield	94.965	패스너	Fastener, Timing Belt Front Upper Cover


CYLINDER HEAD

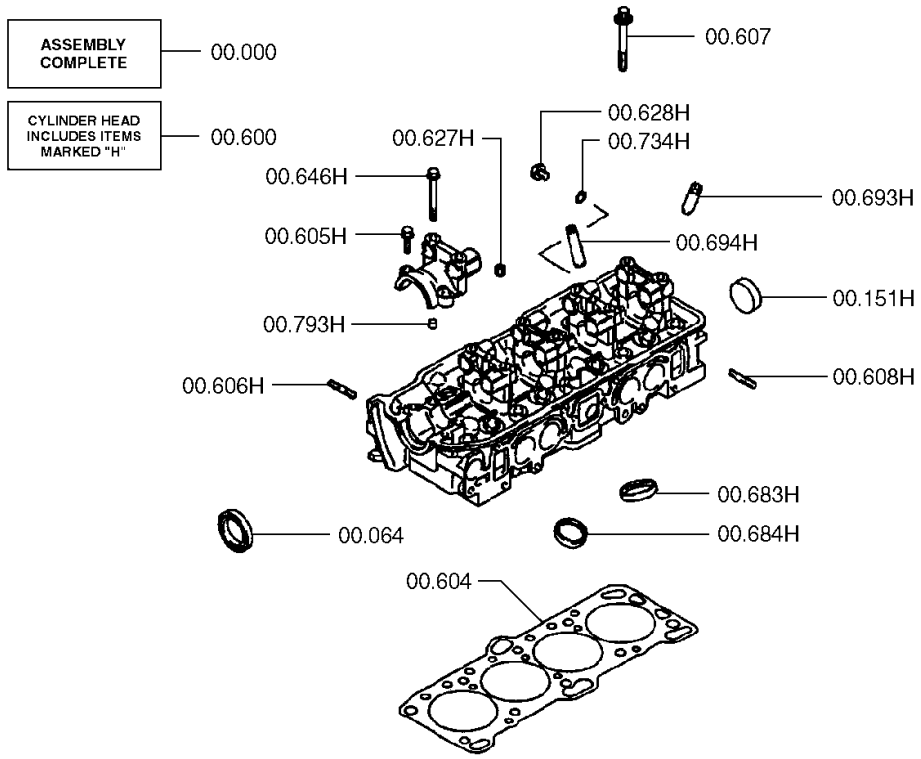

00-776

키이번호 key No.		부품명 Description
00.000	엔진 조립체	Engine Assembly
00.064	시일	Seal, Camshaft Oil
00.151	플러그	Plug, Crankcase Head Rear
00.600	헤드 조립체	Head Assembly, Crankcase
00.604	가스킷	Gasket, Crankcase Head
00.605	패스너	Fastener, Crankcase Head
00.606	패스너	Fastener, Crankcase Head
00.607	패스너	Fastener, Crankcase Head
00.608	패스너	Fastener, Crankcase Head
00.627	플러그	Plug, Crankcase Head
00.628	플러그	Plug, Crankcase Head
00.646	패스너	Fastener, Engine Rocker Arm Pivot Support
00.683	시트	Seat, Exhaust Valve Insert
00.684	시트	Seat, Intake Valve Insert
00.693	가이드	Guide, Intake Valve
00.694	가이드	Guide, Exhaust Valve
00.734	시일	Seal, Crankcase Head Plug
00.793	부싱	Bushing, Engine Rocker Arm Pivot Support


CAMSHAFT

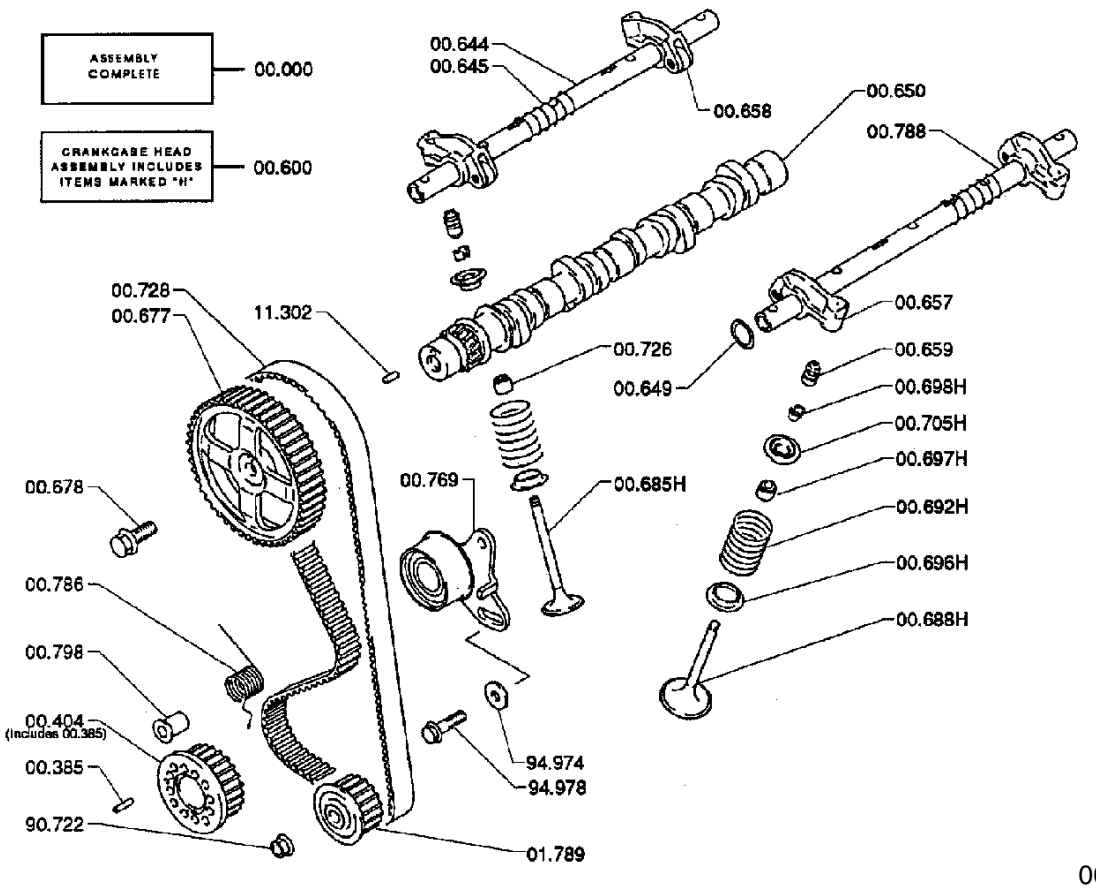

00-861

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
00.000	엔진 조립체	Production Engine Assymbly	00.696	파일롯	Pilot, Engine Valve Spring
00.385	키	Key, Crankshaft Pulley	00.697	시일	Seal, Engine Valve
00.404	기어	Gear, Crankshaft Timing	00.698	로크	Lock, Exhaust Valve Spring Seat
00.600	헤드 조립체	Head Assembly, Crankcase	00.705	시트	Seat, Exhaust Valve Spring
00.644	피봇	Pivot, Engine Rocker Arm	00.726	시일	Seal, Engine Valve
00.645	스프링	Spring, Engine Rocker Arm	00.728	체인	Chain, Camshaft Timing
00.649	와셔	Washer, Engine Rocker Arm Pivot	00.769	텐셔너	Tensioner, Camshaft Timing Chain
00.650	캠축	Camshaft	00.786	스프링	Spring, Camshaft Timing Chain Tensioner
00.657	로커 암 조립체	Rocker Arm Assembly, Engine Valve	00.788	피봇	Pivot, Engine Rocker Arm (Rh)
00.658	로커 암 조립체	Rocker Arm Assembly, Engine Valve	00.798	댐퍼너	Dampener, Camshaft Timing Chain Tensioner Spring
00.659	어드져스터	Adjustor, Engine Valve	01.789	기어	Gear, Oil Pump Drive
00.677	기어	Gear, Camshaft Timing	11.302	핀	Pin, Distributor Gear
00.678	패스너	Fastener, Timing Gear To Camshaft	90.722	너트	Nut, Oil Pump Fastener
00.685	밸브	Valve, Exhaust	94.974	와셔	Washer, Camshaft Timing Belt Tensioner Fastener
00.688	밸브	Valve, Intake	94.978	패스너	Fastener, Camshaft Timing Belt Tensioner
00.692	스프링	Spring, Engine Exhaust Valve			


RADIATOR SCREEN (OPTION)

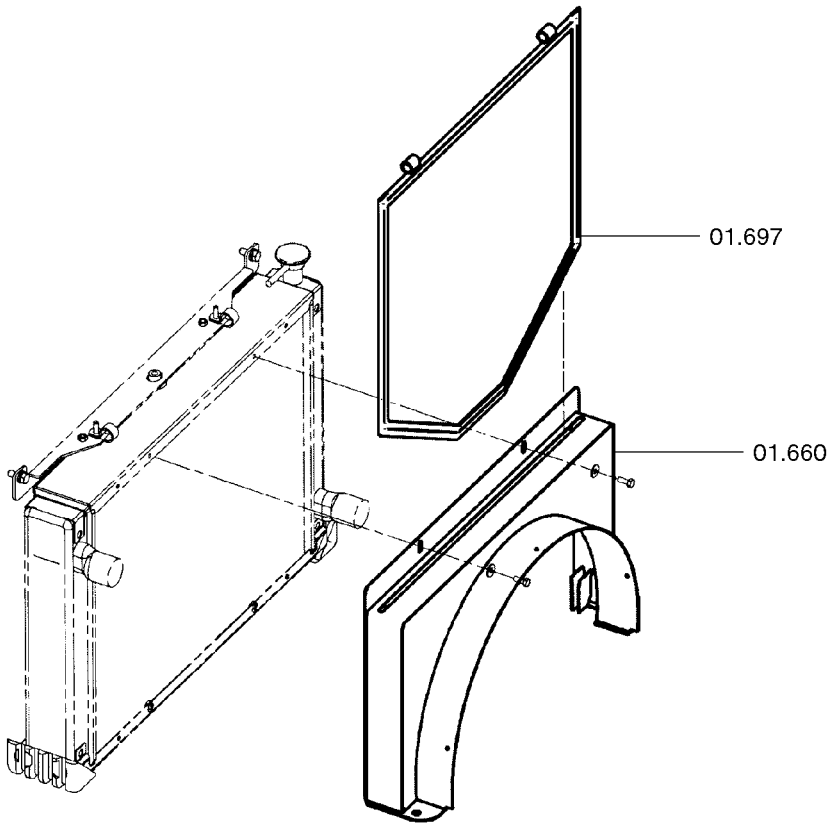

01-082


키이번호 key No.		부품명 Description
01.660	쉬라우드	Shroud, Radiator
01.697	스크린	Screen, Radiator Dust Protection

FAN DRIVE

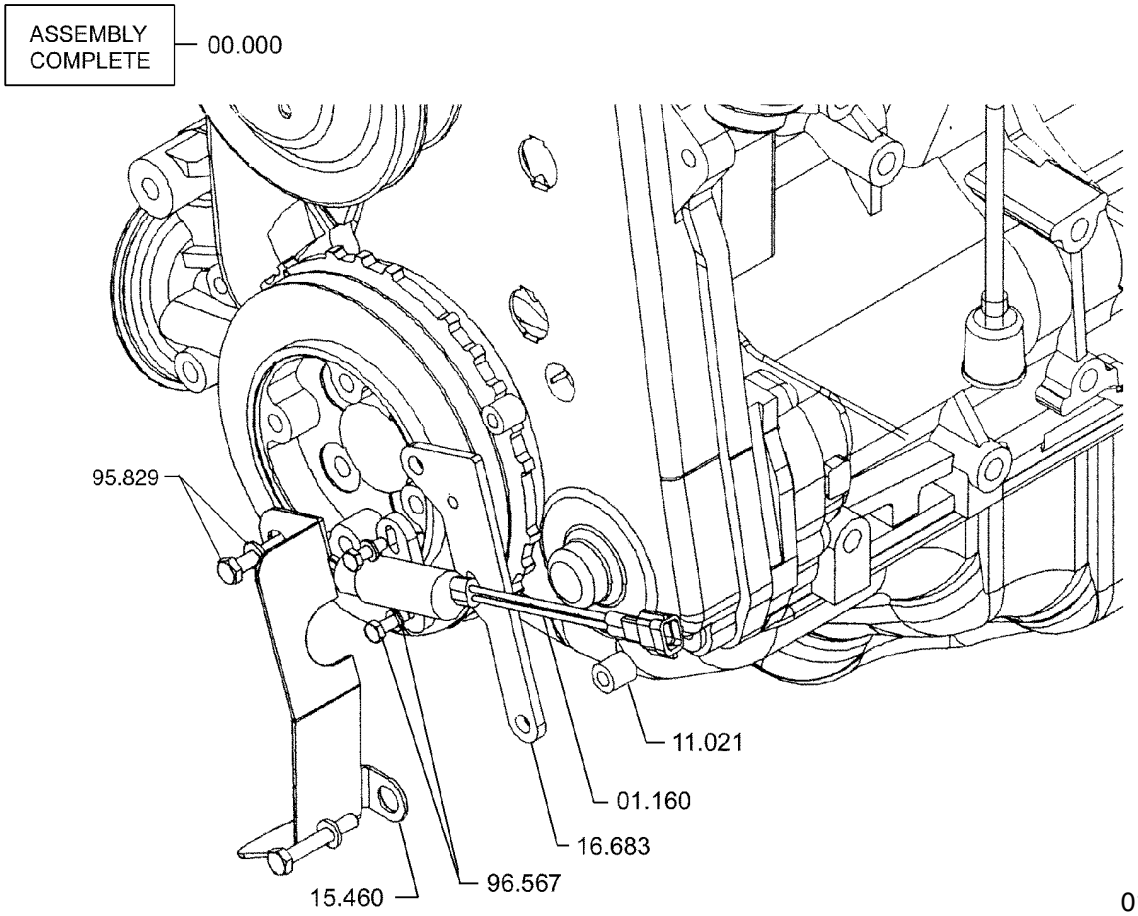

키이번호 key No.		부품명 Description
00.000	엔진 조립체	Engine Assembly
01.160	센서	Sensor, Fan Drive Magnetic
11.021	부싱	Bushing, Drive End Housing
15.460	브래킷	Bracket, Sensor Supply Modul Mounting
16.683	브래킷	Bracket, Sensor Mounting
95.829	패스너	Fastener, Sensor Supply Modul
96.567	패스너	Fastener, Sensor Mounting Bracket


OIL COOLING LINES

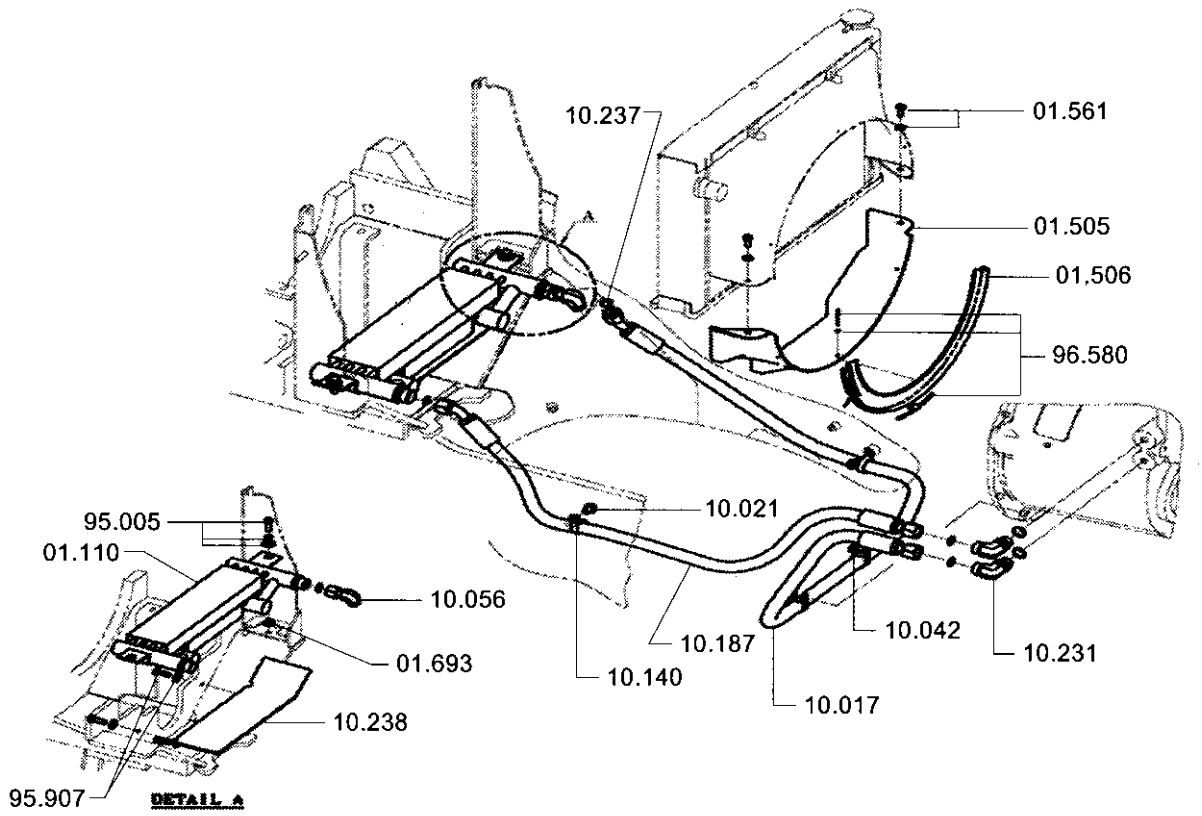

01-198

키이번호 key No.		부품명 Description
01.110	오일 쿨러	Oil Cooler
01.505	쉬라우드	Shroud, Radiator (Lower)
01.506	시일	Seal, Radiator And Shroud
01.561	패스너	Fastener, Radiator Mounting
01.693	댐퍼너	Dampener, Radiator Vibration
10.017	라인	Line, Cooler Outlet
10.021	패스너	Fastener, Cooler Outlet Line Clamp
10.042	패스너	Fastener, Cooler Inlet Line Clamp
10.056	피팅	Fitting, Cooler Outlet
10.140	클램프	Clamp, Cooler Line
10.187	라인	Line, Transmission Cooler Inlet
10.231	피팅	Fitting, Oil Cooling Lines
10.237	시일	Seal, Oil Cooler Line Fitting
10.238	시일드	Shield, Oil Cooler Heat
95.005	패스너	Fastener, Oil Cooler
95.907	패스너	Fastener, Heat Shield
96.580	패스너	Fastener, Radiator Seal


COOLING SYSTEM

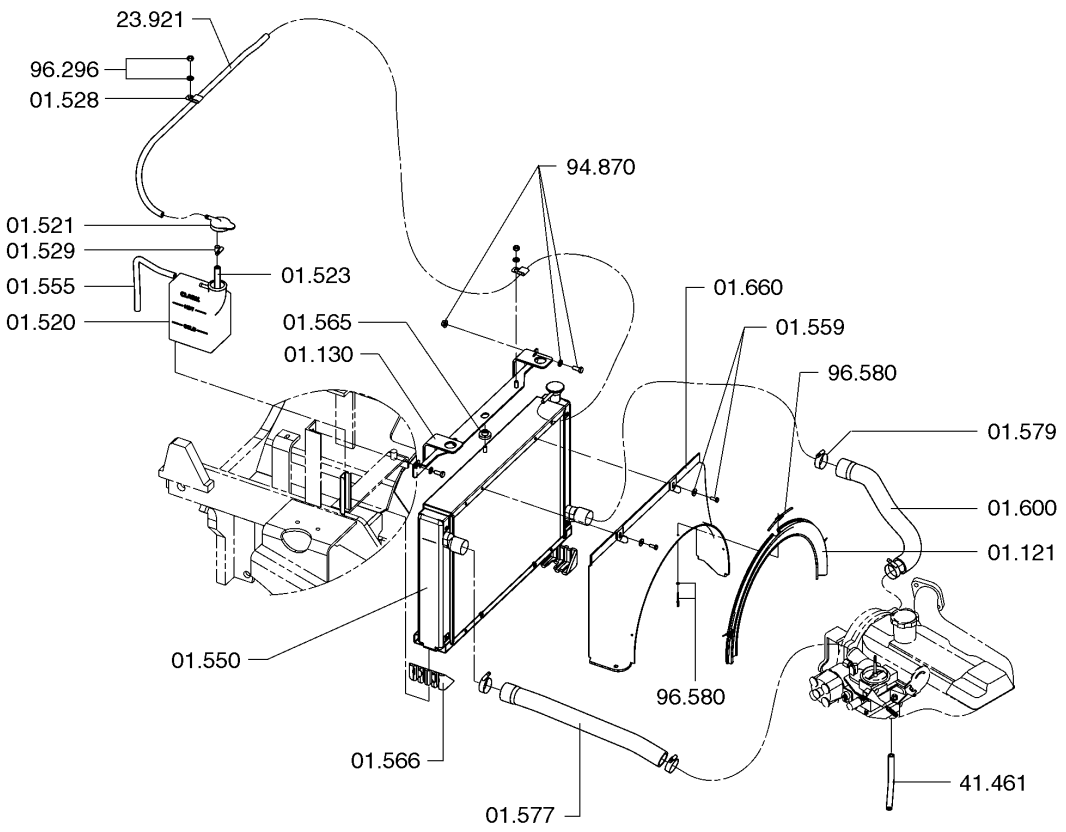

01-244

키이번호 key No.		부품명 Description
01.121	시일	Seal, Radiator And Shroud
01.130	브래킷	Bracket, Radiator
01.520	보정 탱크	Compensation Tank, Cooling System
01.521	커버	Cover, Compensation Tank
01.523	라인	Line, Cooling System Compensation Tank
01.528	클립	Clip, Radiator Overflow Line
01.529	클램프	Clamp, Radiator Overflow Line
01.550	라디에터	Radiator
01.555	라인	Line, Radiator Overflow
01.559	패스너	Fastener, Radiator Upper Support (Radiator End)
01.565	스페이서	Spacer, Radiator Mounting
01.566	패드	Pad, Radiator Mounting
01.577	호스	Hose, Radiator Upper
01.579	클램프	Clamp, Radiator Upper Hose
01.600	호스	Hose, Radiator Lower
01.660	쉬라우드	Shroud, Radiator
23.921	라인	Line, Reservoir Outlet
41.461	튜브	Tube, Drain
94.870	패스너	Fastener, Radiator Mounting Bracket
96.296	패스너	Fastener, Radiator Overflow Line Clip
96.580	패스너	Fastener, Radiator Seal


FAN DRIVE

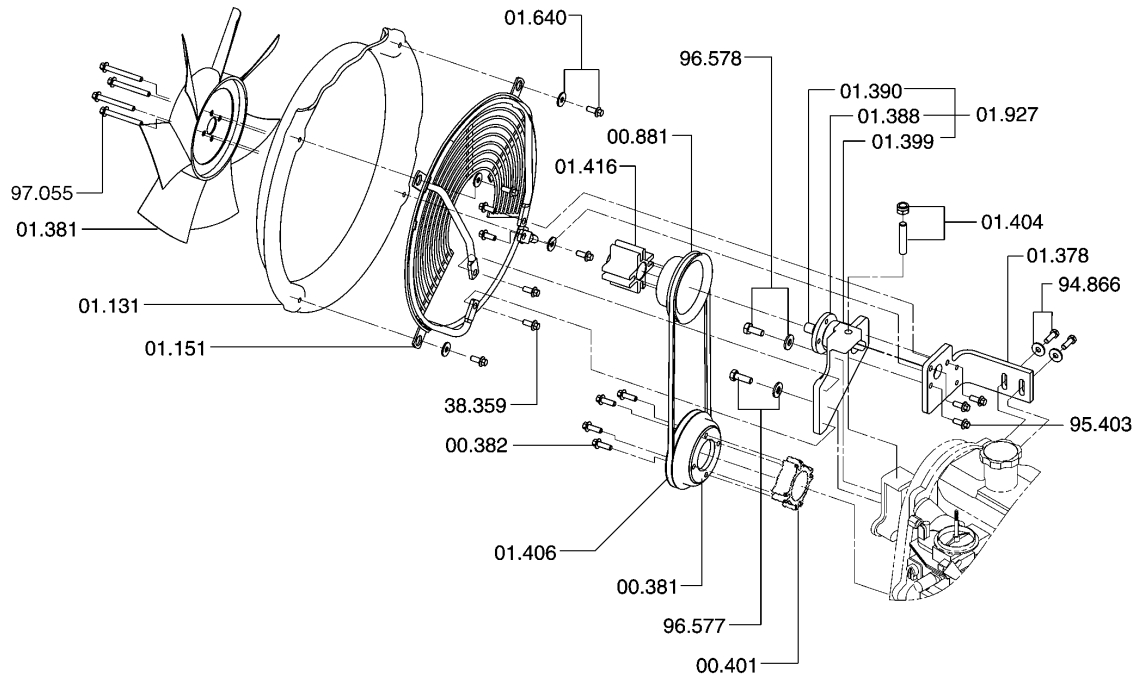

01-364

키이번호 key No.		부품명 Description
00.381	풀리	Pulley, Crankshaft Accessory Drive
00.382	패스너	Fastener, Crankshaft Access Dr Pulley
00.401	스페이서	Spacer, Crankshaft Pulley
00.881	풀리	Pulley, Cooling Fan
01.131	링	Ring, Fan Blade
01.151	가드	Guard, Radiator Fan
01.378	브레이스	Brace, Fan Bracket
01.381	팬 블레이드	Blade, Fan
01.388	허브 & 풀리	Hub & Pulley, Fan
01.390	스핀들	Spindle, Fan
01.399	브래킷	Bracket, Fan Mounting
01.404	패스너	Fastener, Fan Bracket
01.406	벨트 세트	Belt Set, Fan
01.416	스페이서	Spacer, Fan Blade
01.640	패스너	Fastener, Radiator Shroud Extention
01.927	가이드 팬	Guide Fan Assembly
38.359	패스너	Fastener, Radiator Guard
94.866	패스너	Fastener, Fan Blade Mounting Bracket Guide
95.403	패스너	Fastener, Radiator Shroud Bracket
96.577	패스너	Fastener, Fan Mounting Bracket
96.578	패스너	Fastener, Fan Mounting Bracket
97.055	패스너	Fastener, Fan Bracket Mounting


PRE-CLEANER (OPTION)

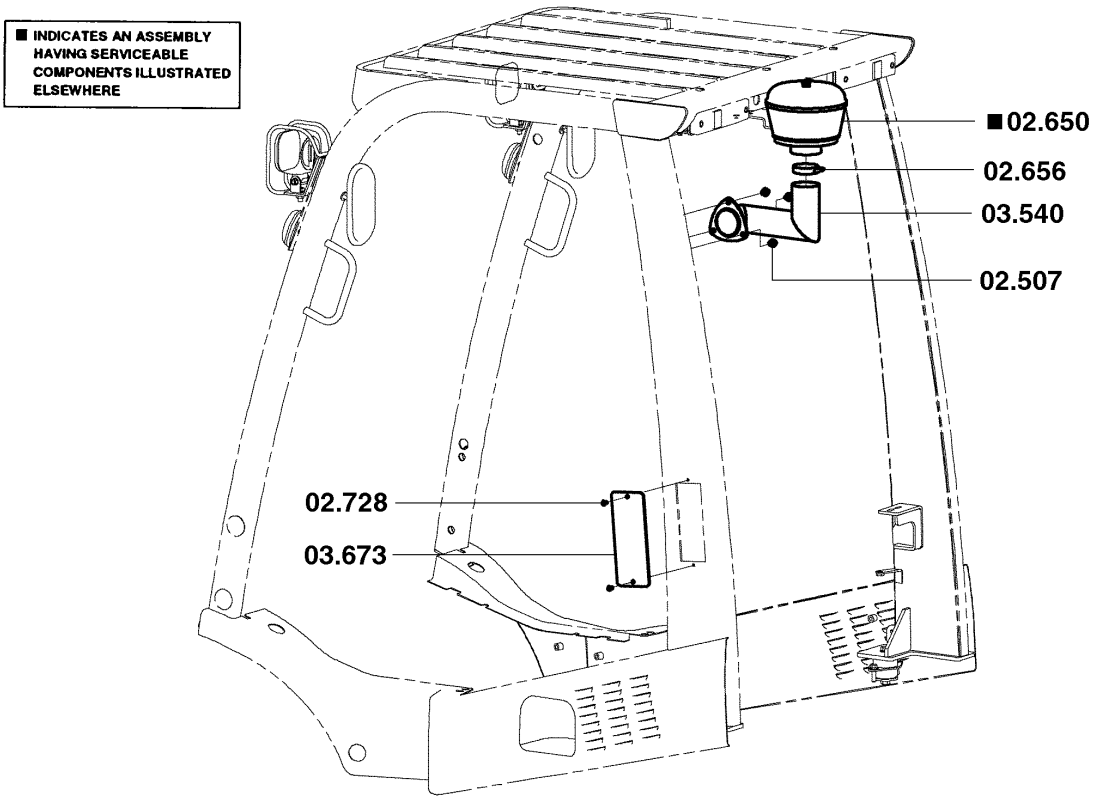

02-228

키이번호 key No.		부품명 Description
02.507	패스너	Fastener, Air Cleaner Outlet Line Mounting Bracket
02.650	프리크리너	Pre-Cleaner Assembly, Engine Air
02.656	클램프	Clamp, Pre-Cleaner Outlet Line
02.728	패스너	Fastener, Air Intake Bracket
03.540	튜브	Tube, Air Cleaner To Seat Support
03.673	벤트	Vent, Air Intake


ACCEL CONTROL ASSEMBLY

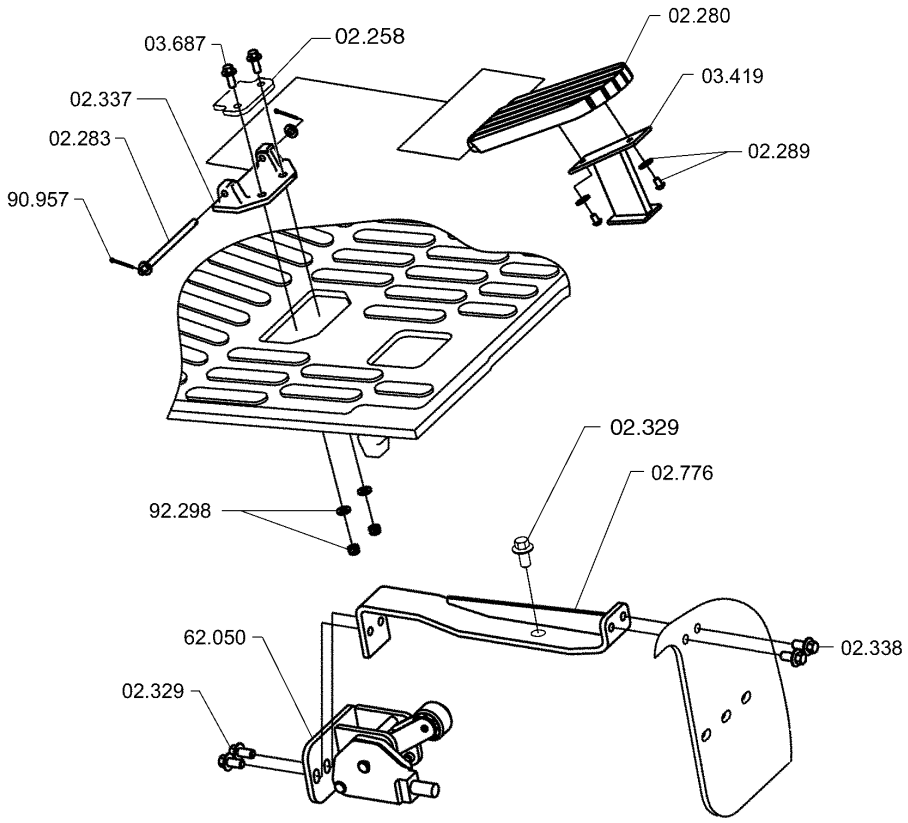

02-370

키이번호 key No.		부품명 Description
02.258	스톱	Stop, Accelerator Pedal
02.280	페달	Pedal, Accelerator
02.283	핀	Pin, Accelerator Pedal To Bracket Pivot
02.289	패스너	Fastener, Accelerator Pedal Bracket Attaching
02.329	패스너	Fastener, Accelerator Pedal
02.337	브래킷	Bracket, Accelerator Lever Mounting
02.338	패스너	Fastener, Accelerator Lever Mounting Bracket
02.776	브래킷	Bracket, Accelerator Control Cable
03.419	웨어 플레이트	Wear Plate, Accelerator Pedal Roller
03.687	패스너	Fastener, Acc Control Cable Bracket Mtg
62.050	페달 조립체	Pedal Assembly, Accelerator
90.957	리테이너	Retainer, Accelerator Linkage Lever Pin
92.298	너트	Nut, Accelerator Lever Attaching Bracket Fastener


REGULATOR MODULE

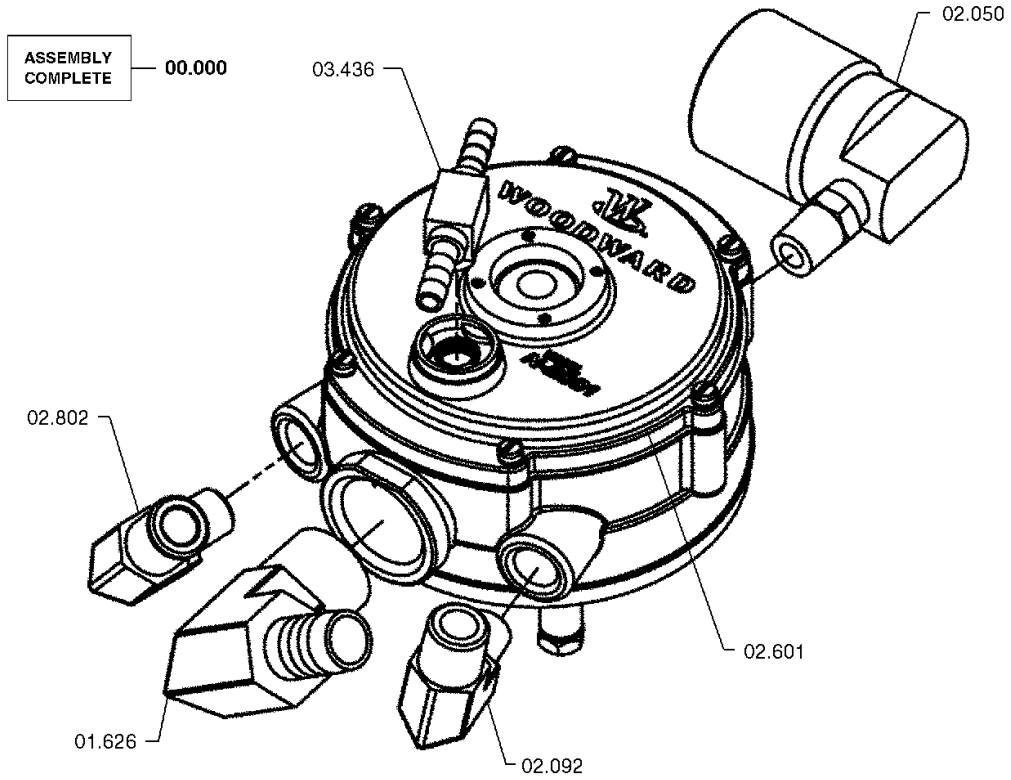

02-412

키이번호 key No.		부품명 Description
00.000	엔진 조립체	Engine Assembly
01.626	피팅	Fitting, Vaporizer Water Outlet
02.050	밸브	Valve, Lpg Lock Off
02.092	피팅	Fitting, Lpg Vaporizer Outlet
02.601	레귤레이터	Regulator, Vaporizer Assembly
02.802	피팅	Fitting, Lpg Vaporizer Inlet
03.436	피팅	Fitting, Vaporizer Balance Line


FUEL MODULE

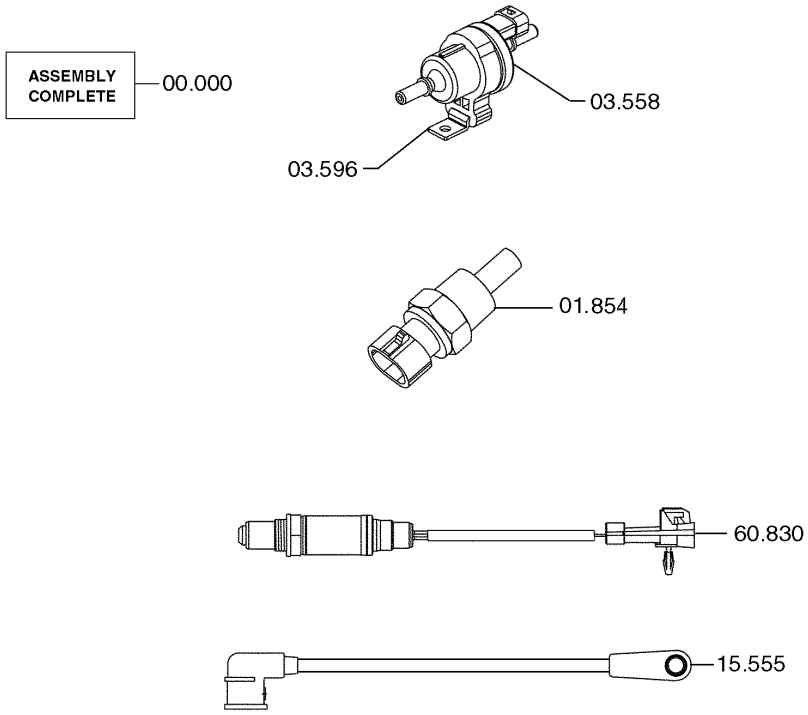

02-414

키이번호 key No.		부품명 Description
00.000	엔진 조립체	Engine Assembly
01.854	센서	Sensor, Engine Coolant Temperature
03.558	밸브	Valve, Fuel Control
03.596	브래킷	Bracket, Fuel Shut Off Valve
15.555	와이어	Wire, Ignition Lead
60.830	센서	Sensor, Eng Control Oxygen


MANIFOLD

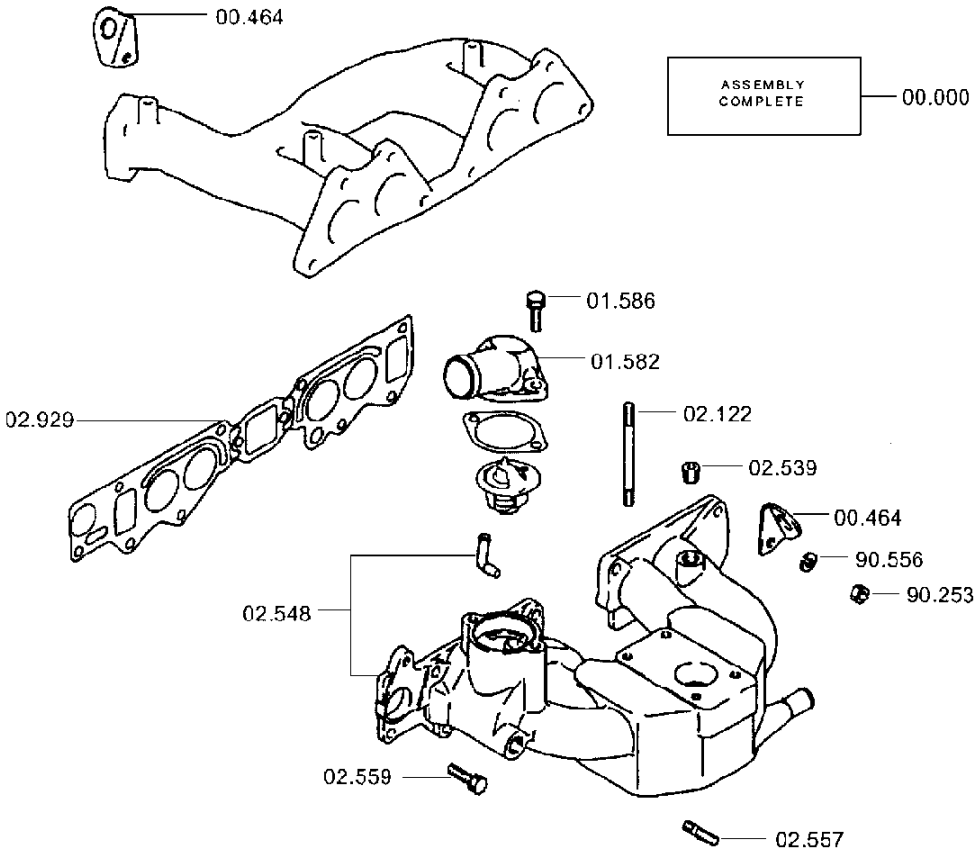

03-157

키이번호 key No.	부품명 Description	
00.000	엔진 조립체	Production Engine Assymbly
00.464	브래킷	Bracket, Engine Lifting
01.582	엘보우	Elbow, Water Outlet
01.586	패스너	Fastener, Water Outlet Elbow - Fanside
02.122	패스너	Fastener, Carburetor
02.539	플러그 - 파이프	Plug - Pipe, Manifold
02.548	매니폴드	Manifold, Intake
02.557	패스너	Fastener, Manifold To Crankcase
02.559	패스너	Fastener, Manifold To Crankcase
02.929	가스킷	Gasket, Intake Manifold
90.253	너트	Nut, Manifold Fastener
90.556	로크와셔	Lockwasher, Manifold Fastener


EXHAUST MANIFOLD

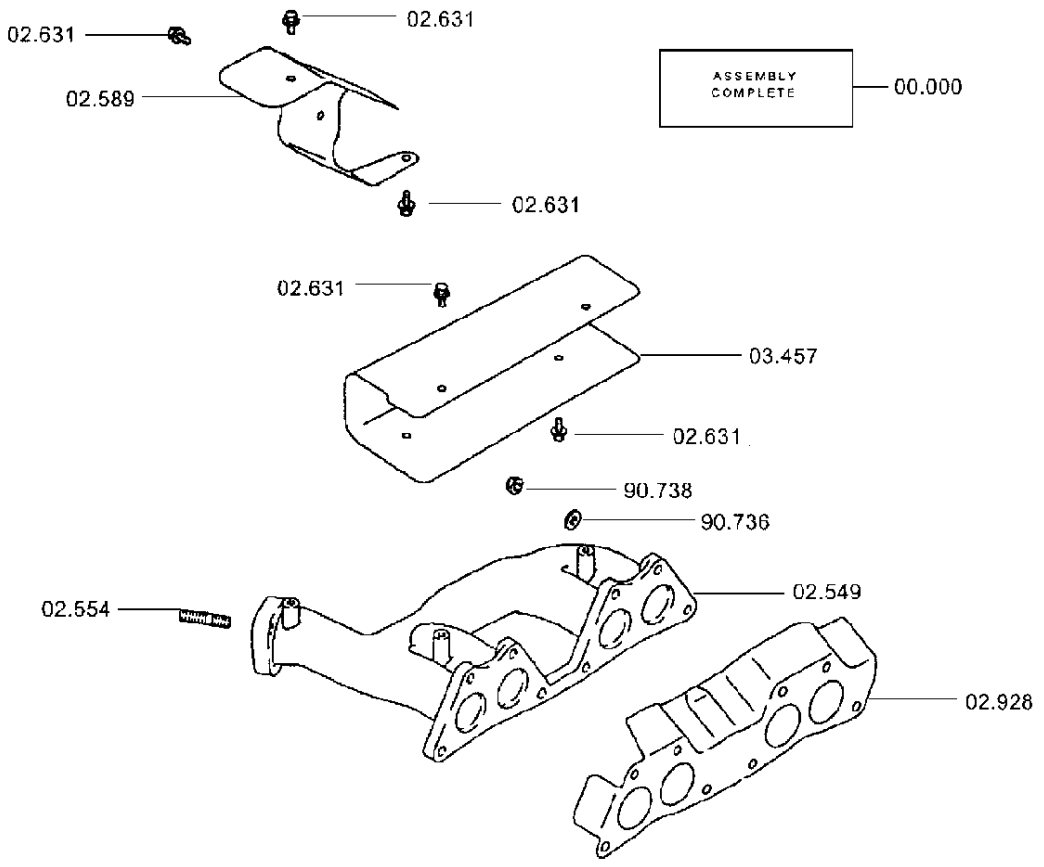

03-158

키이번호 key No.		부품명 Description
00.000	엔진 조립체	Production Engine Assymbly
02.549	매니폴드	Manifold, Exhaust
02.554	패스너	Fastener, Manifold To Crankcase
02.589	시일드	Shield, Heat (At Manifold)
02.631	패스너	Fastener, Heat Shield
02.928	가스킷	Gasket, Exhaust Manifold
03.457	시일드	Shield, Manifold Heat
90.736	와셔	Washer, Manifold Fastener
90.738	너트	Nut, Manifold Fastener


LPG TANK MOUNTING (OPTION)

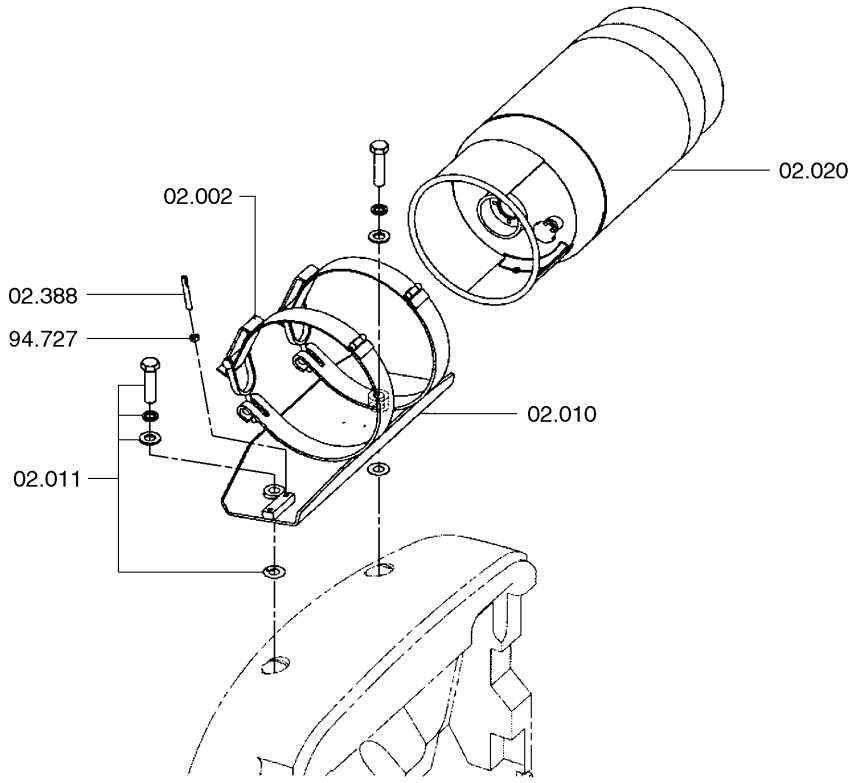

03-166

키이번호 key No.		부품명 Description
02.002	클램프 암	Clamp Arm, Lpg Tank Guard
02.010	브래킷	Bracket, Lpg Tank Rear Mounting
02.011	패스너	Fastener, Lpg Tank Rear Mounting Bracket
02.020	탱크	Tank, Fuel
02.388	핀	Pin, Tank Locating
94.727	너트	Nut, Lpg Tank Locating Pin Bracket Fastener


LPG TANK MOUNTING (OPTION)

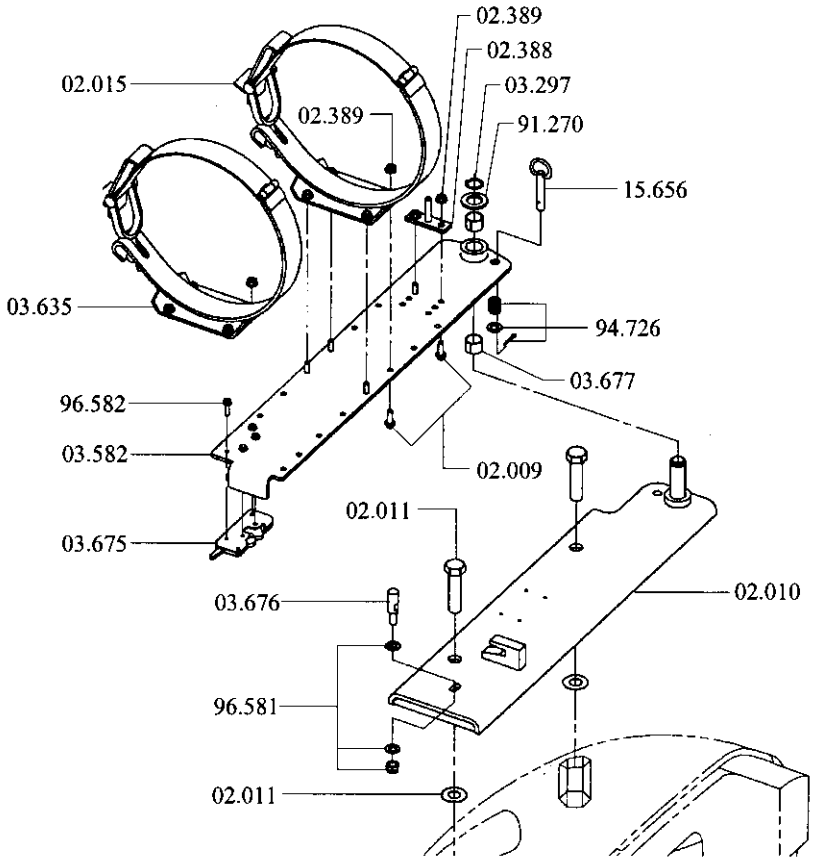

03-167

키이번호 key No.		부품명 Description
02.009	패스너	Fastener, Lpg Tank Guard Mounting
02.010	브래킷	Bracket, Lpg Tank Rear Mounting
02.011	패스너	Fastener, Lpg Tank Rear Mounting Bracket
02.015	스트랩	Strap, Lpg Tank Clamp
02.388	핀	Pin, Tank Locating
02.389	패스너	Fastener, Tank Locating Pin
03.297	리테이너	Retainer, Lpg Tank Guard
03.582	벨크랭크	Bellcrank, Engine Fuel Shut Off
03.635	브래킷	Bracket, Lpg Tank
03.675	브래킷	Bracket, Lpg Tank Pivot Handle
03.676	스톱	Stop, Lpg Tank Pivot
03.677	부싱	Bushing, Lpg Tank Pivot
15.656	핀	Pin, Cotter
91.270	와셔	Washer, Lpg Tank Support Fastener
94.726	패스너	Fastener, Lpg Tank Locating Pin Bracket
96.581	패스너	Fastener, Lpg Tank Pivot Stop
96.582	패스너	Fastener, Lpg Tank Pivot Handle Brkt

INTAKE SYSTEM (OPTION)

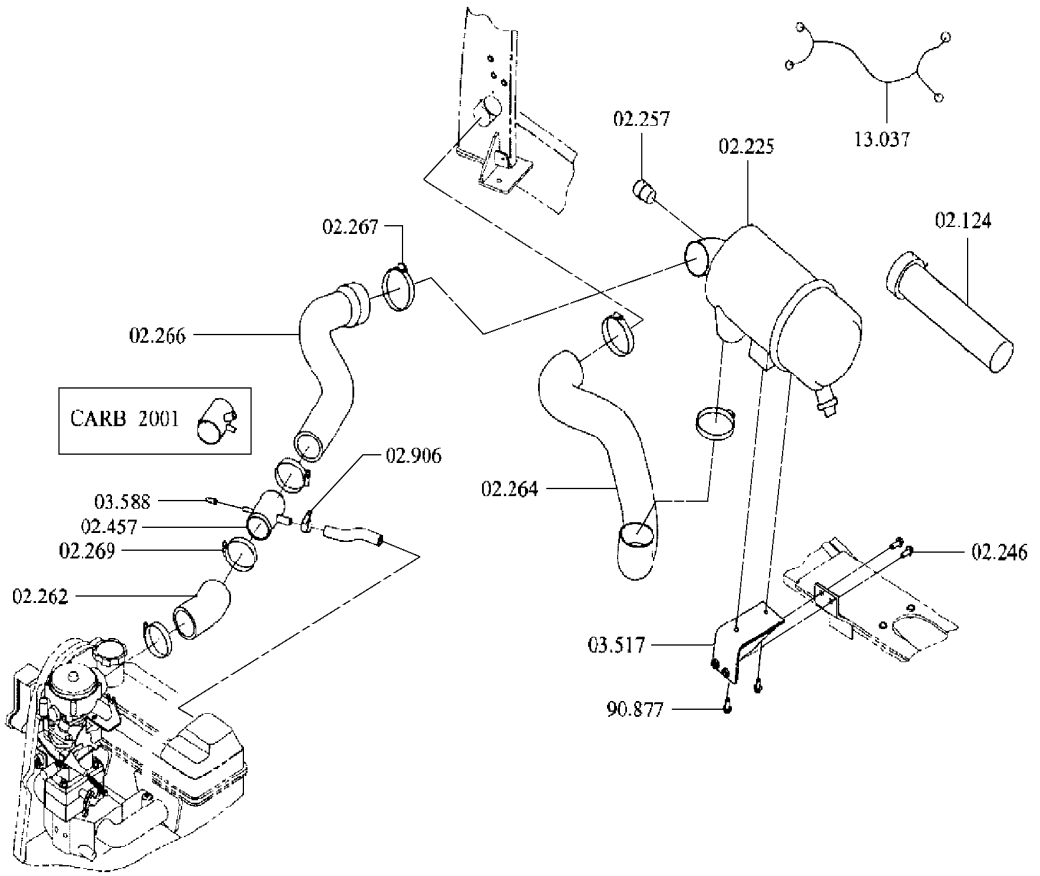


03-170

키이번호 key No.		부품명 Description
02.124	엘리먼트	Element, Filter
02.225	에어클리너	Cleaner Assembly, Engine Intake Air
02.246	패스너	Fastener, Engine Intake Air Cleaner Attaching
02.257	표시기	Indicator, Engine Intake Air Cleaner Restriction
02.262	호스	Hose, Main Air Cleaner Outlet
02.264	튜브	Tube, Main Air Cleaner Outlet
02.266	호스	Hose, Main Air Cleaner Outlet
02.267	클램프	Clamp, Main Air Cleaner Outlet Hose
02.269	클램프	Clamp, Main Air Cleaner Outlet Hose
02.457	피팅	Fitting, Main Air Cleaner Outlet Tube
02.906	클램프	Clamp, Carburetor Preheater Line
03.517	브래킷	Bracket, Air Cleaner Mounting
03.588	플러그	Plug, Adaptor Air Intake Hose
13.037	배선	Harness, Filter
90.877	너트	Nut, Engine Intake Air Cleaner Bracket

CARBURATOR

ASSEMBLY COMPLETE — 00.000


■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

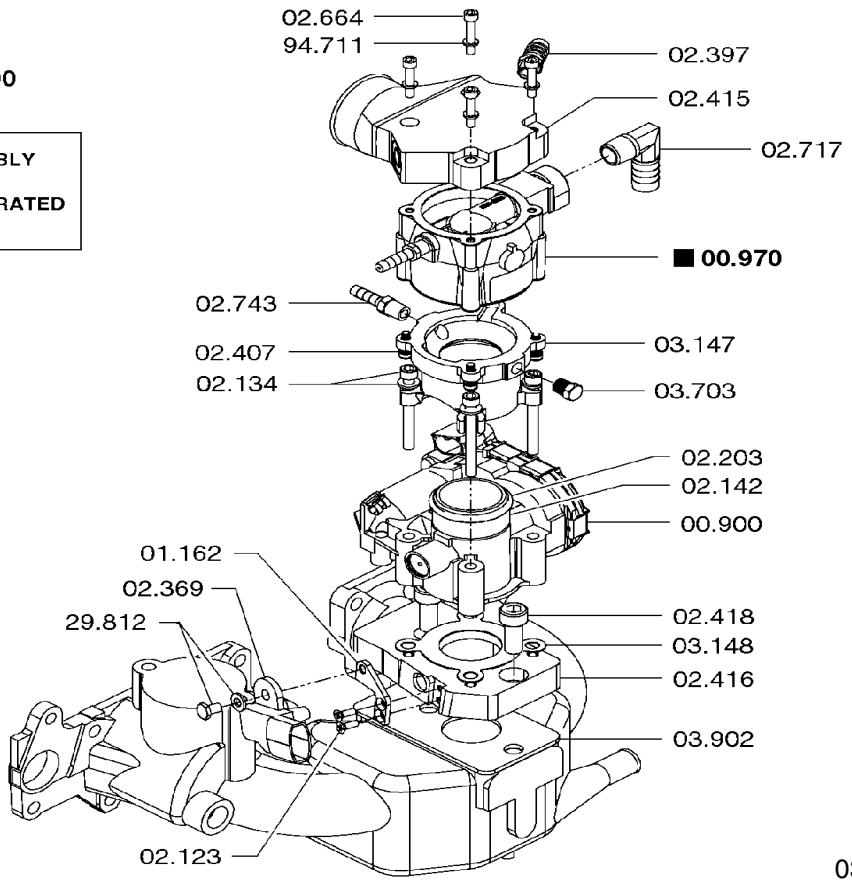

03-257

키이번호 key No.	부품명 Description	
00.000	엔진 조립체	Engine Assembly
00.970	믹서	Mixer, Carb Fuel
01.162	브래킷	Bracket, Carburetor Sensor Mounting
02.123	패스너	Fastener, Carburetor Intake To Bowl
02.134	패스너	Fastener, Carburetor
02.142	스페이서	Spacer, Carburetor Regulator Diaphragm
02.203	시일	Seal, Carburetor Throttle Shaft
02.369	센서	Sensor, Manifold Absolute Pressure (MAP)
02.397	스프링	Spring, Carb Metering Diaphragm
02.407	패스너	Fastener, Carb Metering Control Housing
02.415	어댑터	Adaptor, Carburetor Air Intake
02.416	어댑터	Adaptor, Carburetor Mounting
02.418	패스너	Fastener, Carburetor Adaptor
02.664	패스너	Fastener, Carburetor Cover
02.717	피팅	Fitting, Carburetor Inlet
02.743	피팅	Fitting, Vacuum Tube
03.147	어댑터	Adaptor, Carburetor Vacuum
03.148	가스킷	Gasket, Carburetor Vacuum Adaptor
03.703	플러그	Plug, Carburetor
03.829	스로틀바디 & 축	Throttle Body And Shaft
03.902	가스킷	Gasket, Governor To Manifold Adapter
29.812	패스너	Fastener, Adaptor Mounting Bracket
94.711	와셔	Washer, Carburetor Cover Fastener


MIXER

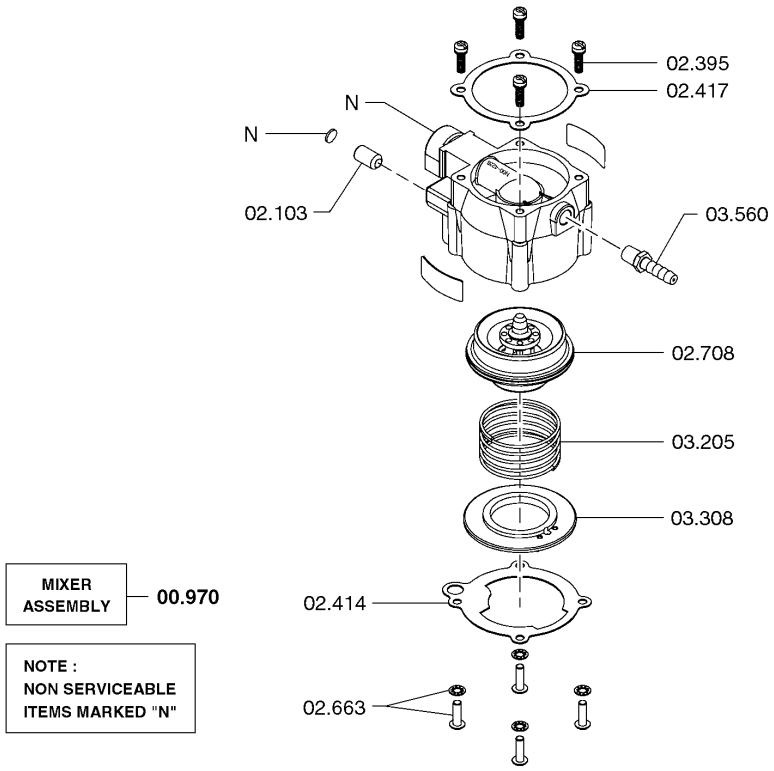

03-259

키이번호 key No.		부품명 Description
00.970	믹서	Mixer, Carb Fuel
02.103	스크류	Screw, Carburetor Idle Adjust
02.395	패스너	Fastener, Carb Metering Diaphragm Cover
02.414	가스킷	Gasket, Carb Metering Control Hsg
02.417	가스킷	Gasket, Carburetor Adaptor Mounting
02.663	패스너	Fastener, Carburetor Cover
02.708	밸브 조립체	Valve Assembly Metering
03.205	스프링	Spring, Carburetor Air Valve
03.308	어댑터	Adaptor, Carburetor Air Inlet
03.560	피팅	Fitting, Carburetor Vacuum Line


ELEC. CONTROL MODULE GP

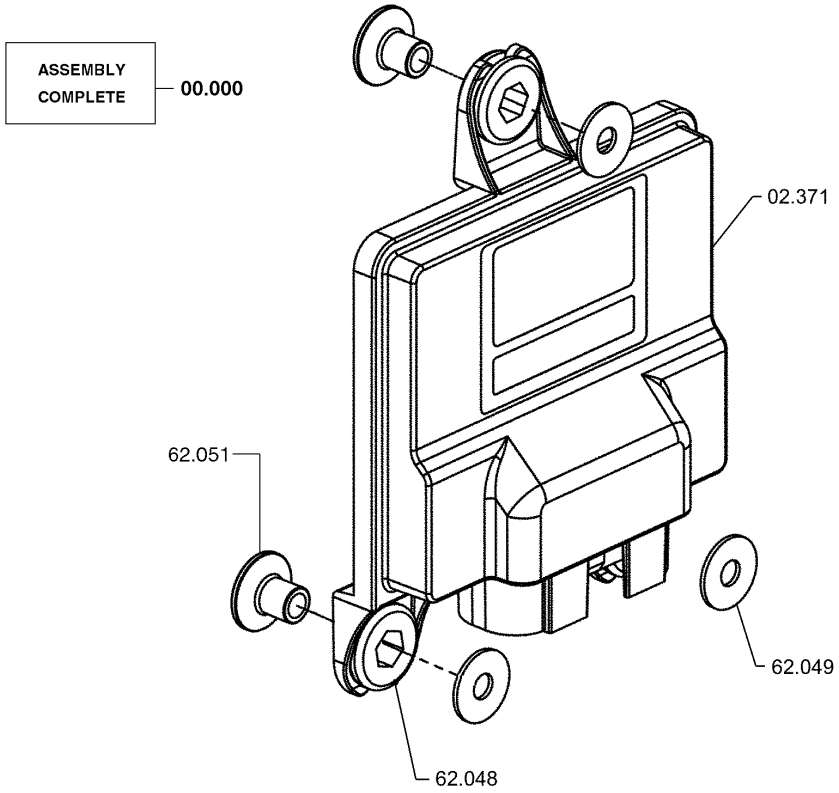

03-260

키이번호 key No.		부품명 Description
00.000	엔진 조립체	Engine Assembly
02.371	콘트롤 유니트	Control Unit, Electronic (ECU)
62.048	러버	Rubber, Electronic Control Module Mtg
62.049	와셔	Washer, Electronic Control Module Mtg
62.051	부시	Bush, Electronic Control Module MTG


INTAKE SYSTEM

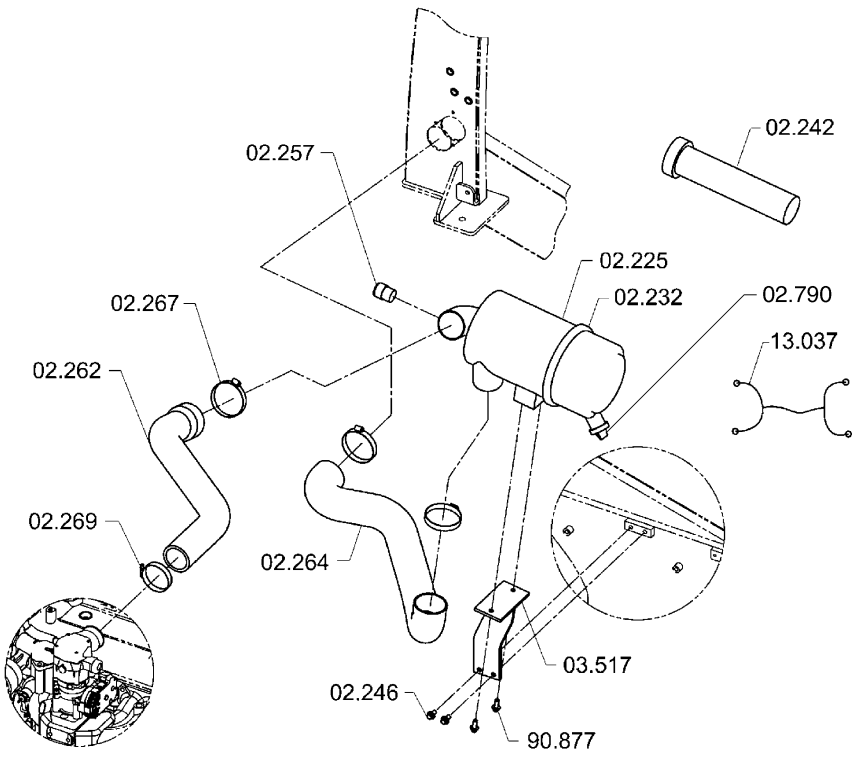

03-266

키이번호 key No.	부품명 Description	
02.225	에어클리너	Cleaner Assembly, Engine Intake Air
02.232	클램프	Clamp, Intake Air Cleaner
02.242	엘리먼트 & 가스킷	Element & Gasket, Engine Intake Air Cleaner
02.246	패스너	Fastener, Engine Intake Air Cleaner Attaching
02.257	표시기	Indicator, Engine Intake Air Cleaner Restriction
02.262	호스	Hose, Main Air Cleaner Outlet
02.264	튜브	Tube, Main Air Cleaner Outlet
02.267	클램프	Clamp, Main Air Cleaner Outlet Hose
02.269	클램프	Clamp, Main Air Cleaner Outlet Hose
02.790	밸브	Valve, Engine Intake Air Cleaner Dust
03.517	브래킷	Bracket, Air Cleaner Mounting
13.037	배선	Harness, Filter
90.877	너트	Nut, Engine Intake Air Cleaner Bracket


EXHAUST SYSTEM

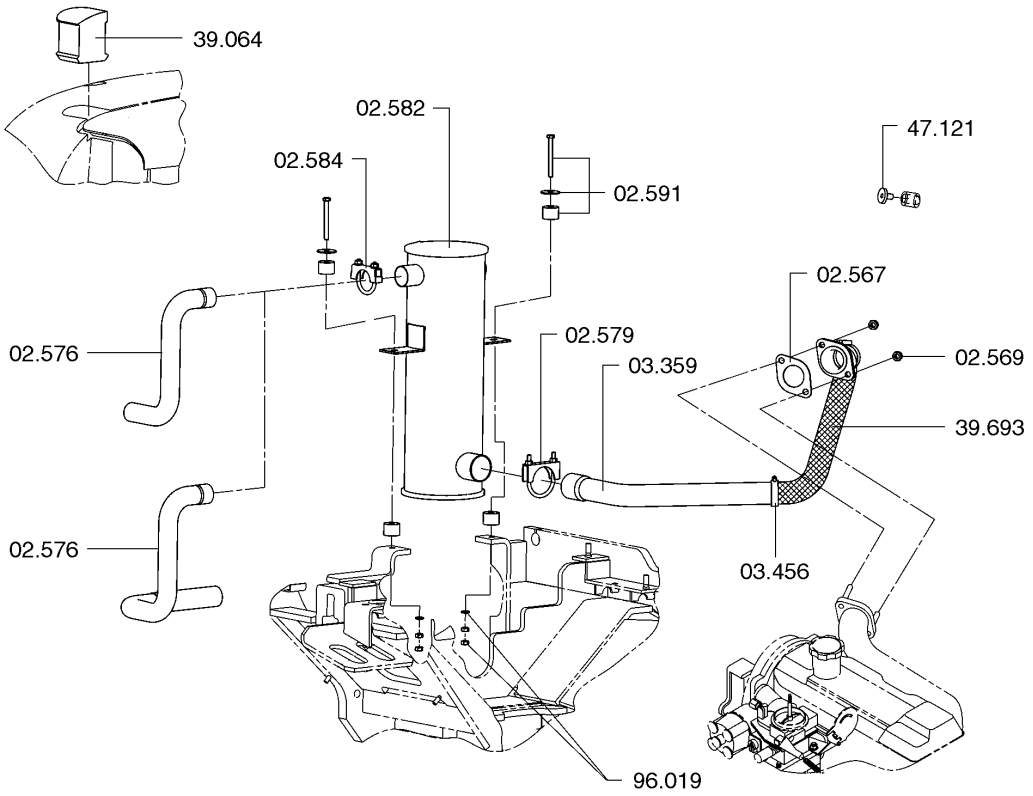

03-362

키이번호 key No.		부품명 Description
02.567	가스킷	Gasket, Exhaust Pipe Flange To Manifold
02.569	패스너	Fastener, Exhaust Pipe Flange To Manifold
02.576	파이프	Pipe, Exhaust
02.579	클램프	Clamp, Exhaust Pipe To Muffler
02.582	머펄러	Muffler
02.584	클램프	Clamp, Tail Pipe To Muffler
02.591	패스너	Fastener, Muffler Mounting
03.359	파이프	Pipe, Exhaust
03.456	클램프	Clamp, Exhaust Pipe Heat Shield
39.064	커버	Cover, Counterweight Upper
39.693	시일드	Shield, Exhaust Pipe
47.121	플러그	Plug, Overhead Guard
96.019	패스너	Fastener, Exhaust Pipe Bracket


EXHAUST SYSTEM-VERTICAL

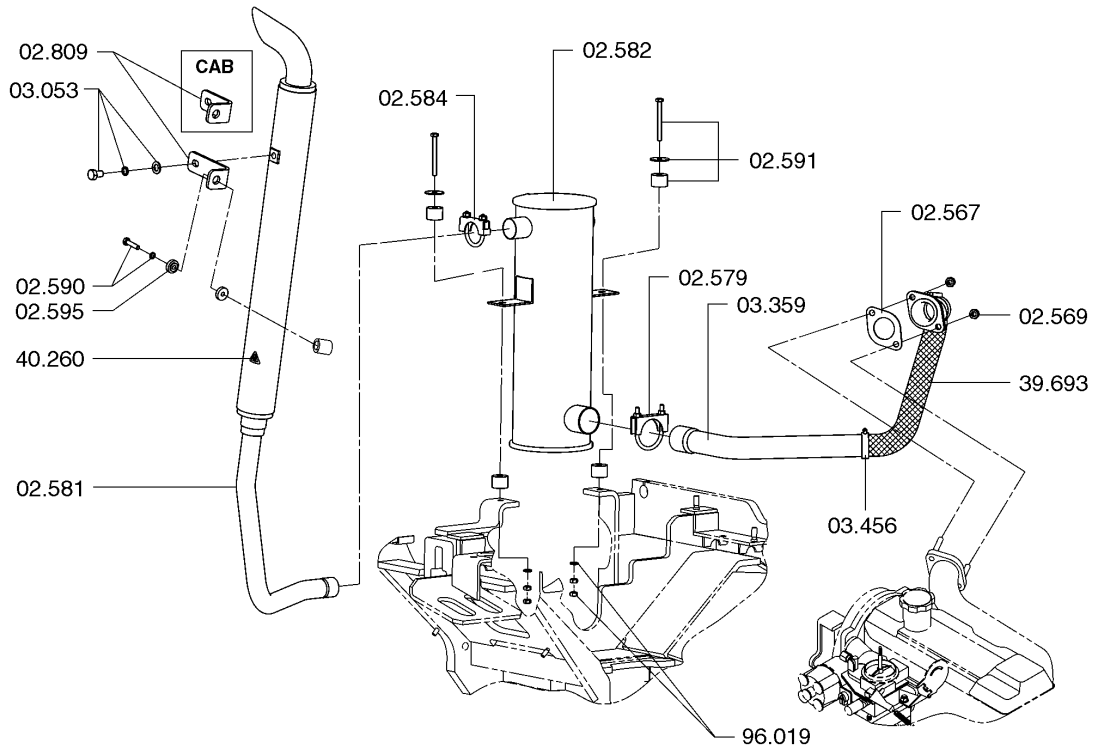

03-363

키이번호 key No.		부품명 Description
02.567	가스킷	Gasket, Exhaust Pipe Flange To Manifold
02.569	패스너	Fastener, Exhaust Pipe Flange To Manifold
02.579	클램프	Clamp, Exhaust Pipe To Muffler
02.581	익스텐션	Extension, Tail Pipe
02.582	머펄러	Muffler
02.584	클램프	Clamp, Tail Pipe To Muffler
02.590	패스너	Fastener, Muffler Mounting Bracket
02.591	패스너	Fastener, Muffler Mounting
02.595	댐퍼너	Dampener, Exhaust Pipe Vibration
02.809	브래킷	Bracket, Muffler Mounting
03.053	리테이너	Retainer, Tail Pipe Guard
03.359	파이프	Pipe, Exhaust
03.456	클램프	Clamp, Exhaust Pipe Heat Shield
39.693	시일드	Shield, Exhaust Pipe
40.260	데칼	Decal, Hot Surface Warning
96.019	패스너	Fastener, Exhaust Pipe Bracket


FUEL SYSTEM

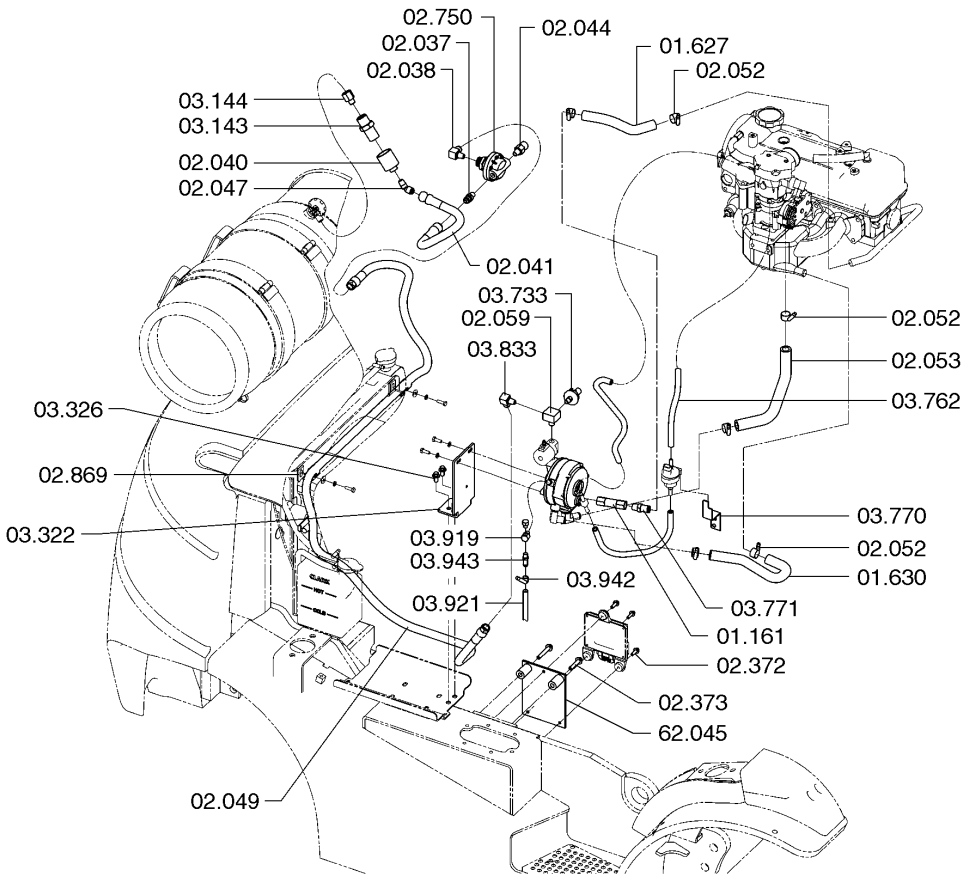

03-364

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
01.161	써머스태트	Thermostat, Regulator	02.869	클립	Clip, Lpg Line
01.627	라인	Line, Vaporizer Water Outlet	03.143	커플러	Coupler, Lpg Quick Disconnect
01.630	라인	Line, Vaporizer Water Inlet	03.144	커플러	Coupler, Lpg Quick Disconnect
02.037	피팅	Fitting, Fuel Filter Inlet	03.322	브래킷	Bracket, Lpg Regulator Mounting
02.038	피팅	Fitting, Fuel Filter Outlet	03.326	패스너	Fastener, Lpg Regulator Mounting Bracket
02.040	커플러	Coupler, Lpg Quick Disconnect	03.733	스위치	Switch, Pressure
02.041	라인	Line, Lp Gas Tank Outlet	03.762	호스	Hose, Vacuum
02.044	밸브	Valve, Hydrostatic Relief	03.770	브래킷	Bracket, Vacuum Throttle Positioner
02.047	피팅	Fitting, Lpg Adaptor Outlet	03.771	패스너	Fastener, Vacuum Throttle Positioner Bracket
02.049	라인	Line, Adaptor Outlet	03.833	피팅	Fitting, Fuel Inlet
02.052	클램프	Clamp, Regulator Outlet Hose	03.919	피팅	Fitting, Relief Valve
02.053	라인	Line, Regulator Outlet	03.921	호스	Hose, Relief Valve
02.059	피팅	Fitting, Lpg Vaporizer Inlet	03.942	클램프	Clamp, Relief Valve Hose
02.372	패스너	Fastener, Electronic Control Unit Cover	03.943	밸브	Valve, Hydrostatic Relief
02.373	패스너	Fastener, ECU to Fuel Module	62.045	브래킷	Bracket,Electronic Control Unit
02.750	필터 조립체	Filter Assembly, Fuel			


LPG TANK MOUNTING

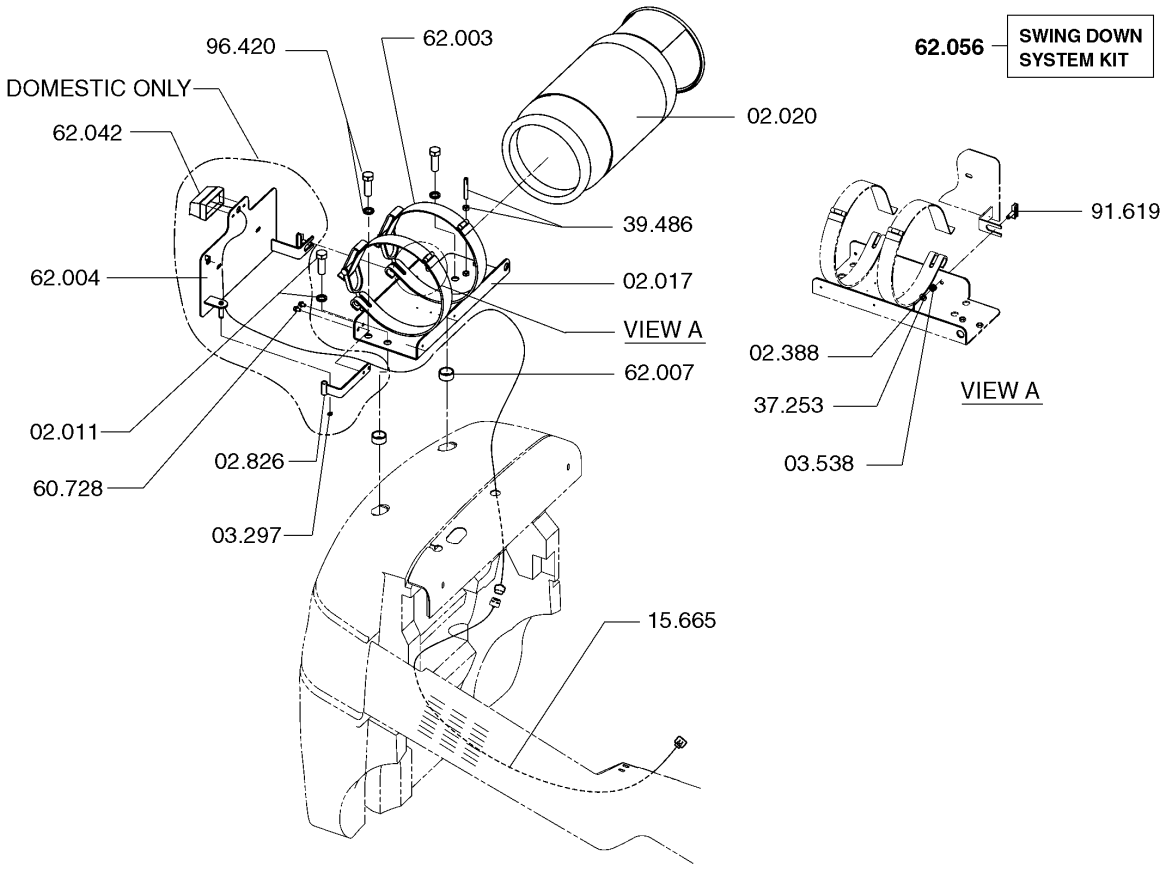

03-376

키이번호 key No.		부품명 Description
02.011	패스너	Fastener, Lpg Tank Rear Mounting Bracket
02.017	지지대	Support, Lp Gas Tank Mounting
02.020	탱크	Tank, Fuel
02.388	핀	Pin, Tank Locating
02.826	브래킷	Bracket, Fuel Line Clip
03.297	리테이너	Retainer, Lpg Tank Guard
03.538	스프링	Spring, Lpg Tank Bracket Retaining
15.665	전기 배선	Wire Harness
37.253	와셔	Washer, Gas Tank Shield Fastener
39.486	패스너	Fastener, Gas Tank Shield
60.728	스크류	Capscrew, Bracket Fastener
62.003	클램프	Clamp, LPG Tank
62.004	플레이트	Plate, License
62.007	심	Shim, Tank Bracket
62.042	램프 조립체	Lamp Assembly, License Plate
62.056	킷트	Kit, Swing Down System
91.619	로크와셔	Lockwasher, Bracket Attaching Fastener
96.420	패스너	Fastener, Lpg Tank Mounting Bracket


SWING DOWN ASSY (EXPORT) (OPTION)

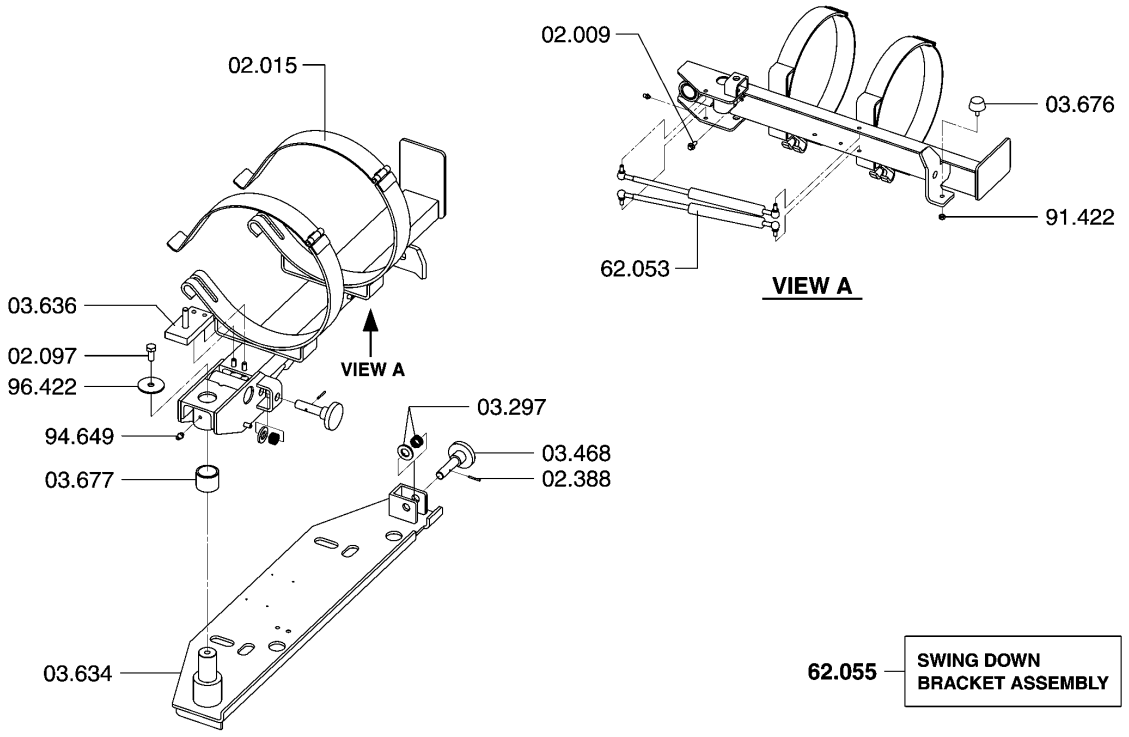

03-394


키이번호 key No.		부품명 Description
02.009	패스너	Fastener, Lpg Tank Guard Mounting
02.015	스트랩	Strap, Lpg Tank Clamp
02.097	패스너	Fastener, Tank Guard Pivot Rod
02.388	핀	Pin, Tank Locating
03.297	리테이너	Retainer, Lpg Tank Guard
03.468	핸들	Handle, Lpg Tank Mounting Bracket
03.634	지지대	Support, Lpg Tank Bracket
03.636	지지대	Support, Lpg Tank Mounting Bracket
03.676	스톱	Stop, Lpg Tank Pivot
03.677	부싱	Bushing, Lpg Tank Pivot
62.053	프롭	Prop, Swing Down Lpg Tank Mtg
62.055	브라킷	Bracket, Swing Down Lpg Tank Mtg
91.422	너트	Nut, Lpg Tank Support
94.649	패스너	Fastener, Lpg Tank Mounting Support Bumper
96.422	와셔	Washer, Lpg Tank Bracket Pivot

SWING DOWN LPG TANK MOUNTING (OPTION)

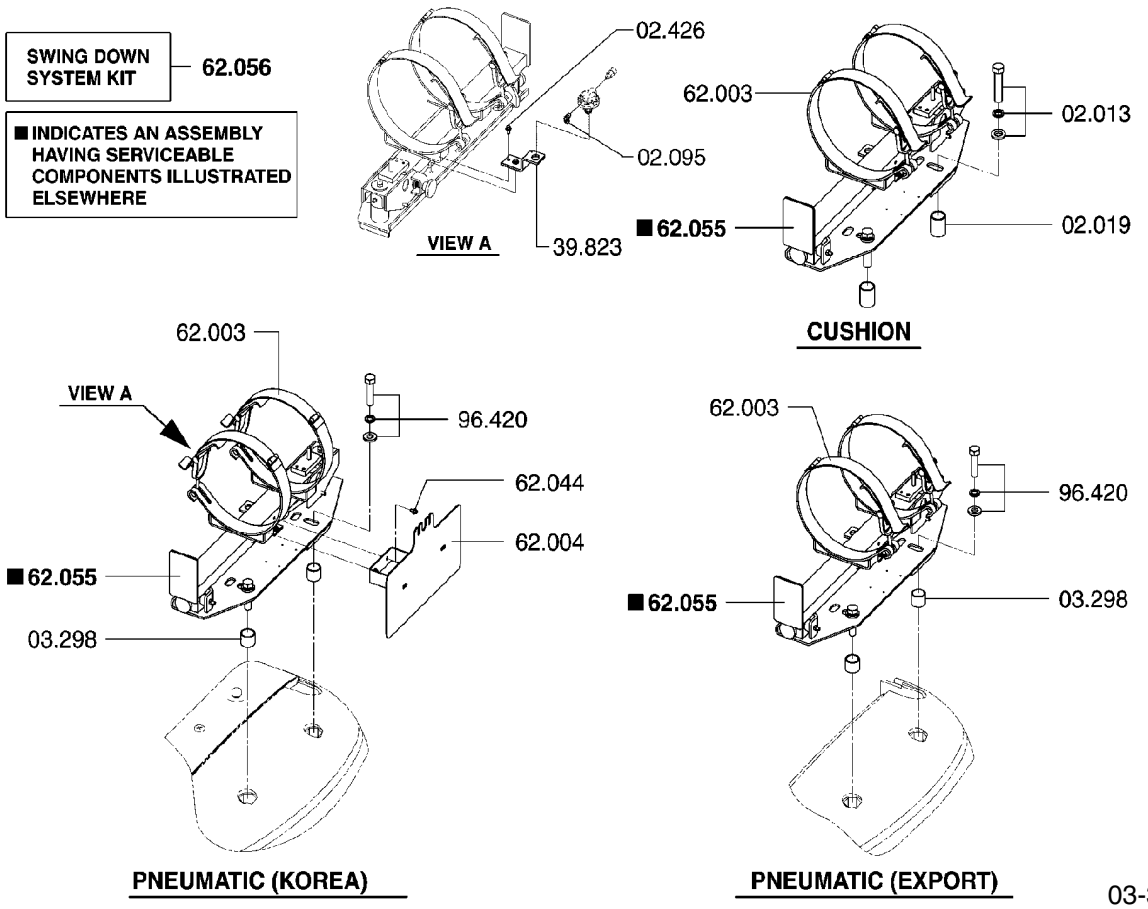

키이번호 key No.		부품명 Description
02.013	패스너	Fastener, Lpg Tank Front Mounting Bracket
02.019	스페이서	Spacer, Lpg Tank Mounting Support
02.426	패스너	Fastener, Fuel Filter Bracket
03.298	스페이서	Spacer, Lpg Tank Guard
39.823	브래킷	Bracket, Fuel Filter
62.003	클램프	Clamp, LPG Tank
62.004	플레이트	Plate, License
62.044	패스너	Fastener, License Plate Mounting
62.055	브라킷	Bracket, Swing Down Lpg Tank Mtg
62.056	킷트	Kit, Swing Down System
96.420	패스너	Fastener, Lpg Tank Mounting Bracket


TRANSMISSION PUMP & HYDRAULICS

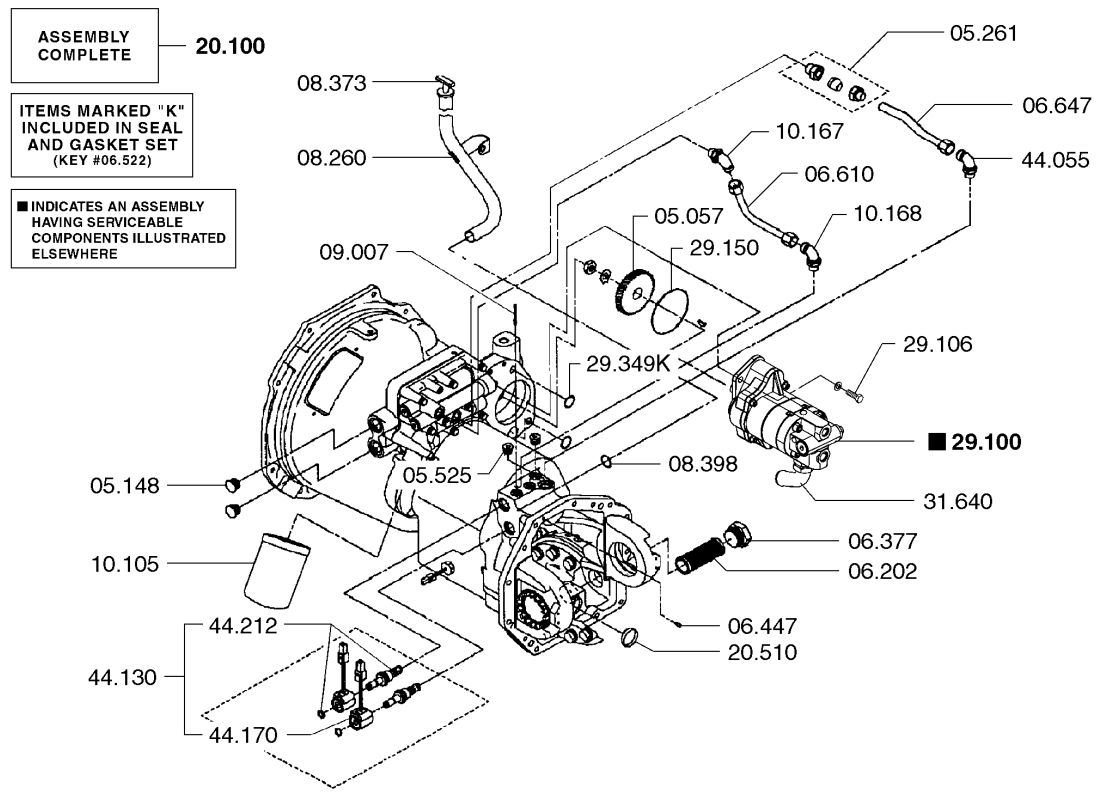

05-035


키이번호 key No.		부품명 Description
05.057	기어	Gear, Pump Drive
05.148	플러그	Plug, Converter Housing
05.261	튜브 피팅	Tube Fitting, Transmission Lub Line
05.525	플러그	Plug, Transmission Case
06.202	스트레이너	Strainer, Transmission Sump
06.377	플러그	Plug, Transmission Sump Oil Level
06.447	플러그	Plug, Transmission Case
06.610	튜브	Tube, Transmission "High" Oil
06.647	라인	Line, Transmission Lubrication
08.260	튜브	Tube, Tran Oil Level Dipstick Support
08.373	딥스틱	Dipstick, Transmission
08.398	시일	Seal, Transmission Dipstick Support
09.007	확장 플러그	Plug - Expansion, Gear Case
10.105	엘리먼트 & 가스킷	Element & Gasket, Oil Filter
10.167	피팅	Fitting, Transmission Control Cover Outlet
10.168	피팅	Fitting, Transmission Control Cover Outlet
20.100	트랜스액슬	Transaxle Assembly
20.510	확장 플러그	Expansion Plug, Internal Gear Hub
29.100	펌프 조립체	Pump Assembly, Hydraulic
29.106	패스너	Fastener, Pump To Plate
29.150	가스킷	Gasket, Hydraulic Pump Mounting
29.349	시일	Seal, Pump Cover Seal Locator
31.640	피팅	Fitting, Hyd Pump Outlet (Cover End)
44.055	피팅	Fitting, Transmission Control Cover Return Line
44.130	솔레노이드 밸브	Solenoid Valve, Control Cover
44.170	코일	Coil, Transmission Control Cover Solenoid
44.212	카트리지	Cartridge, Control Valve Shift Solenoid

CONVERTER HOUSING & PUMP DRIVE

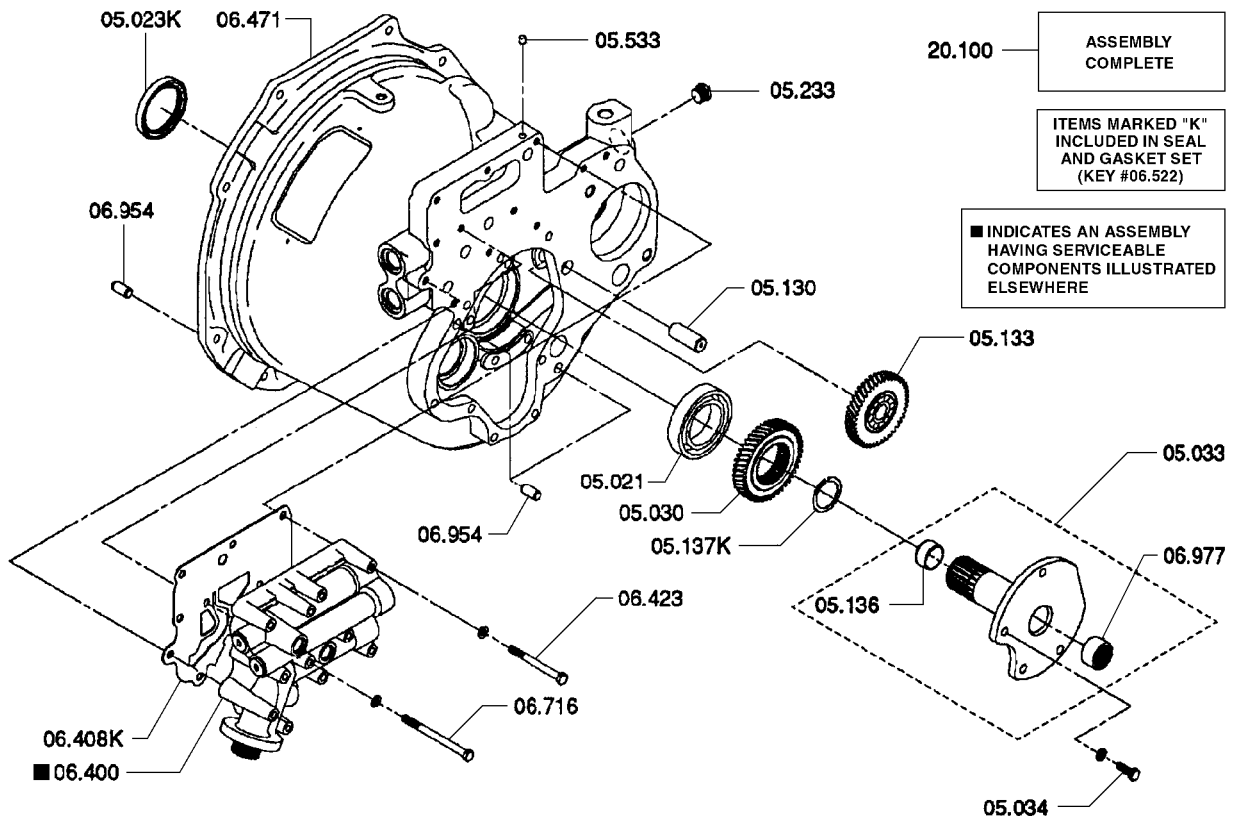


키이번호 key No.	부품명 Description	
05.021	베어링	Bearing, Impeller Hub
05.023	시일	Seal, Converter Impeller Hub
05.030	기어	Gear, Impeller Hub
05.033	스테이터 조립체	Stator Support Assembly, Converter
05.034	패스너	Fastener, Stator Support
05.130	축	Shaft, Converter Pump Idler Gear
05.133	기어	Gear, Convertor Pump Idler
05.136	베어링	Bearing, Converter Stator Support
05.137	로케이터	Locator, Converter Stator Support (Outer)
05.233	플러그	Plug, Convertor Housing Expander
05.533	플러그	Plug, Converter Housing
06.400	콘트롤커버 & 밸브	Control Cover & Valve Assembly
06.408	가스킷	Gasket, Control Cover Attaching
06.423	패스너	Fastener, Control Valve Housing
06.471	하우징	Housing, Converter
06.716	패스너	Fastener, Control Cover
06.954	다웰	Dowel, Transmission Case To Converter
06.977	베어링	Bearing, Reverse Clutch Hub (Engine End)
20.100	트랜스액슬 조립	Transaxle Assembly

CONVERTER HOUSING & CLUTCH ASSY

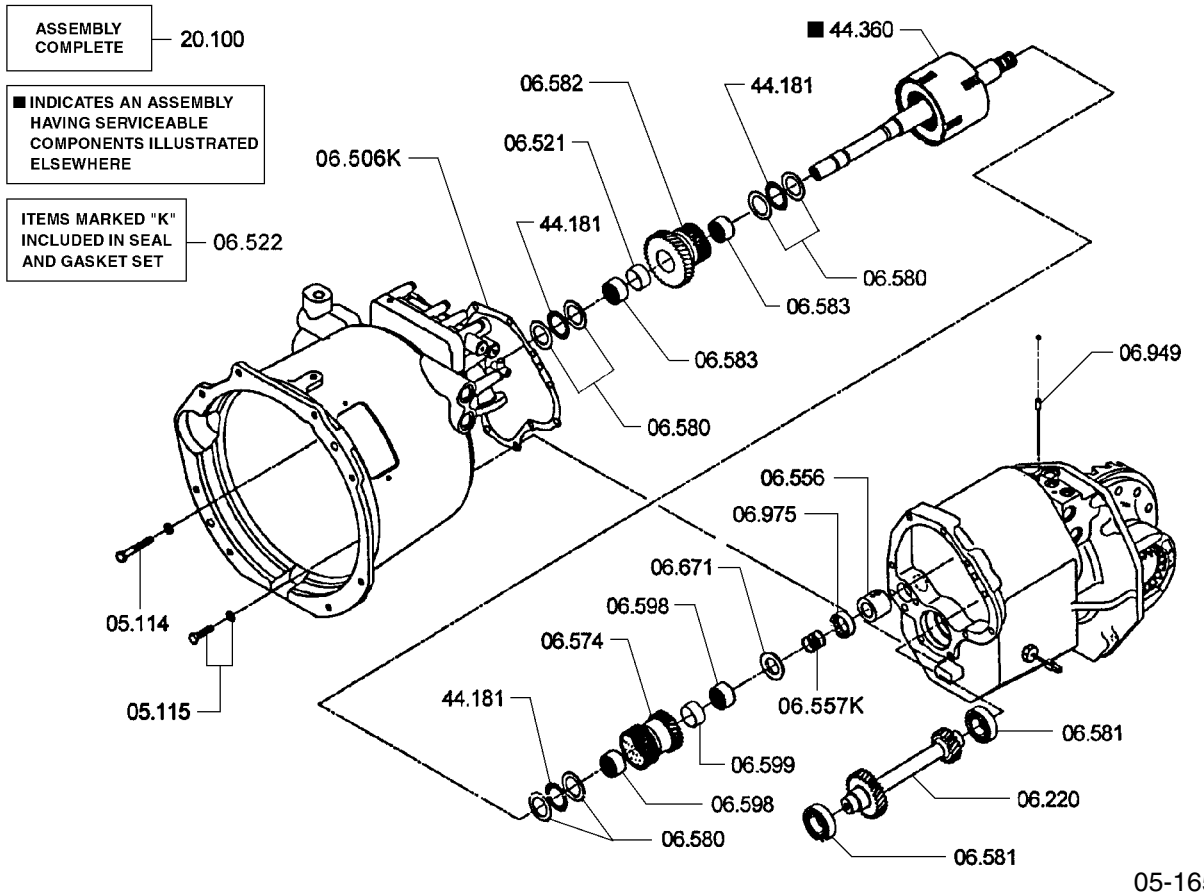

키이번호 key No.	부품명 Description	
05.114	패스너	Fastener, Converter To Case
05.115	패스너	Fastener, Converter To Case
06.220	기어	Gear, Reverse Idler
06.506	시일	Seal, Converter Housing To Case-Inner
06.521	볼	Ball, Inching Relief Valve
06.522	시일 & 가스킷 킷트	Seal And Gasket Kit, Transmission
06.556	디스트리뷰터	Distributor, Transmission Direction Sel Oil
06.557	시일	Seal, Transmission Direction Selector Oil Dist
06.574	기어 & 베어링	Gear & Bearing Forward
06.580	스러스트 와셔	Thrust Washer, Reverse Clutch Hub & Drum
06.581	베어링	Bearing, Reverse Gear
06.582	기어 & 베어링	Gear & Bearing Reverse
06.583	베어링	Bearing, Reverse Gear
06.598	베어링	Bearing, Transmission Intermediate Shaft Outer
06.599	스페이서	Spacer, Transmission Intermediate Shaft
06.671	베어링	Bearing, Direction Sel Cl Hub
06.949	리테이너	Retainer, Clutch Oil Distribution Sleeve
06.975	베어링	Bearing, Reverse Clutch Hub (Axle End)
20.100	트랜스액슬	Transaxle Assembly
44.181	베어링	Bearing, Clutch Shaft Thrust
44.360	터빈 축	Turbine Shaft, Drum & Clutch Assy


TRANSAXLE ASSEMBLY

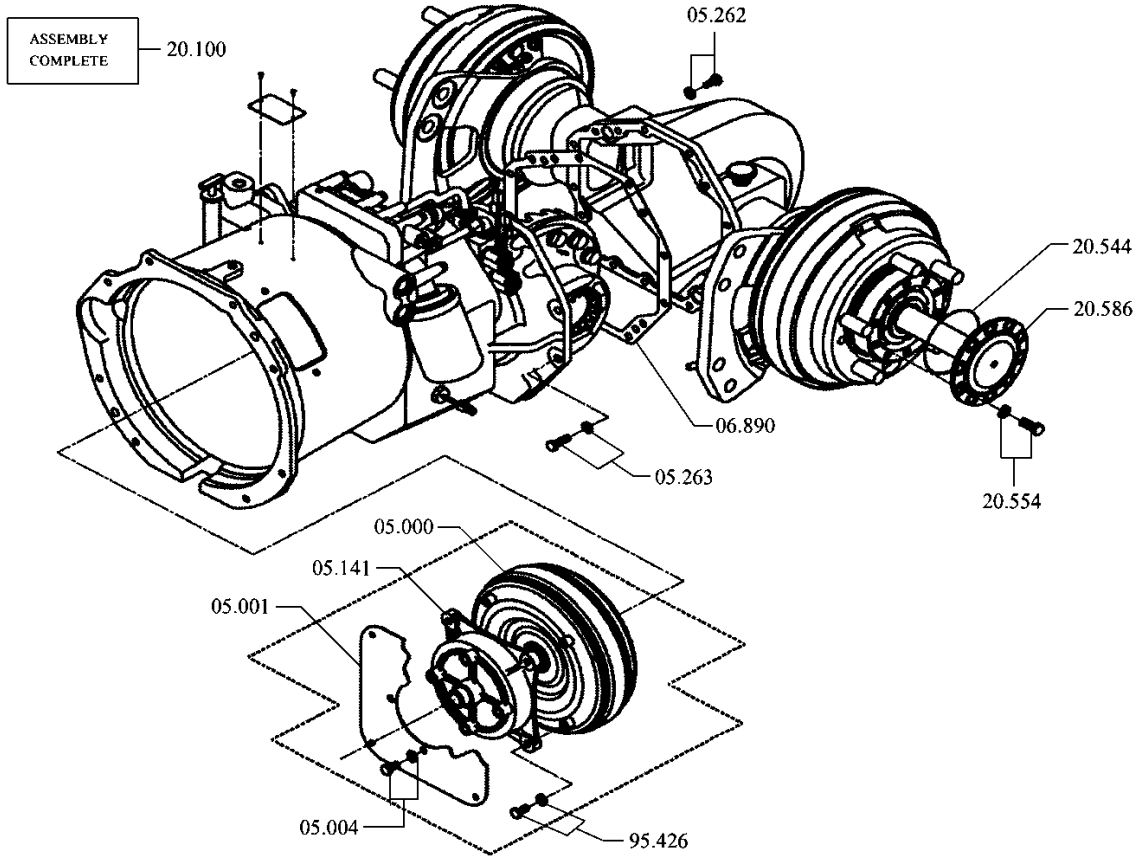

06-109

키이번호 key No.		부품명 Description
05.000	컨버터	Converter Assembly, Torque
05.001	기어	Gear, Converter Ring
05.004	패스너	Fastener, Converter Drive & Reinforcing Plate
05.141	어댑터	Adaptor, Converter Drive
05.262	패스너	Fastener, Axle Housing To Case
05.263	패스너	Fastener, Case To Axle Housing
06.890	가스킷	Gasket, Control Cover Plate
20.100	트랜스액슬 조립	Transaxle Assembly
20.544	시일	Seal, Drive Axle Shaft
20.554	패스너	Fastener, Drive Axle Hub Cap
20.586	축	Shaft, Drive Axle
95.426	패스너	Fastener, Converter Drive Adaptor


TRANSAXLE ASSEMBLY (OPTION)

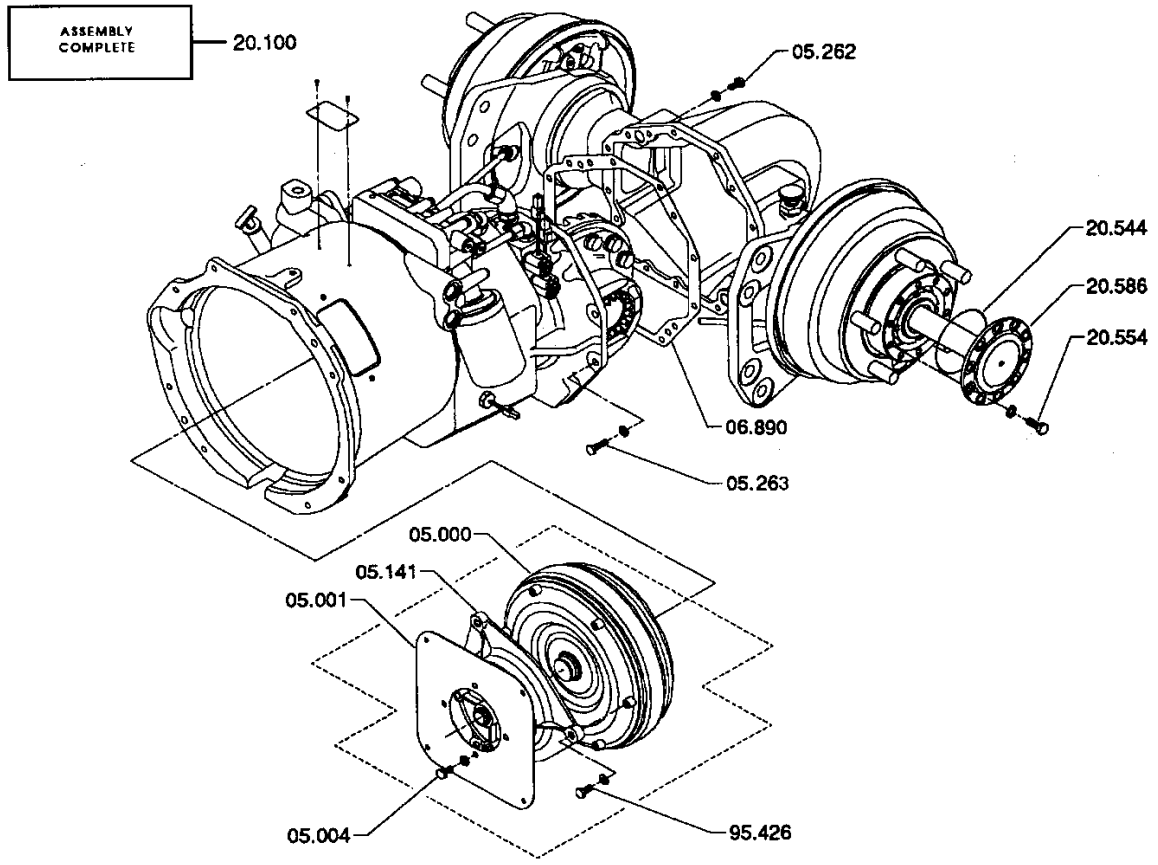

06-110

키이번호 key No.		부품명 Description
05.000	컨버터	Converter Assembly, Torque
05.001	기어	Gear, Converter Ring
05.004	패스너	Fastener, Converter Drive & Reinforcing Plate
05.141	어댑터	Adaptor, Converter Drive
05.262	패스너	Fastener, Axle Housing To Case
05.263	패스너	Fastener, Case To Axle Housing
06.890	가스킷	Gasket, Control Cover Plate
20.100	트랜스액슬	Transaxle Assembly
20.544	시일	Seal, Drive Axle Shaft
20.554	패스너	Fastener, Drive Axle Hub Cap
20.586	축	Shaft, Drive Axle
95.426	패스너	Fastener, Converter Drive Adaptor


TRANSMISSION CASE & DIFFERENTIAL ASSEMBLY

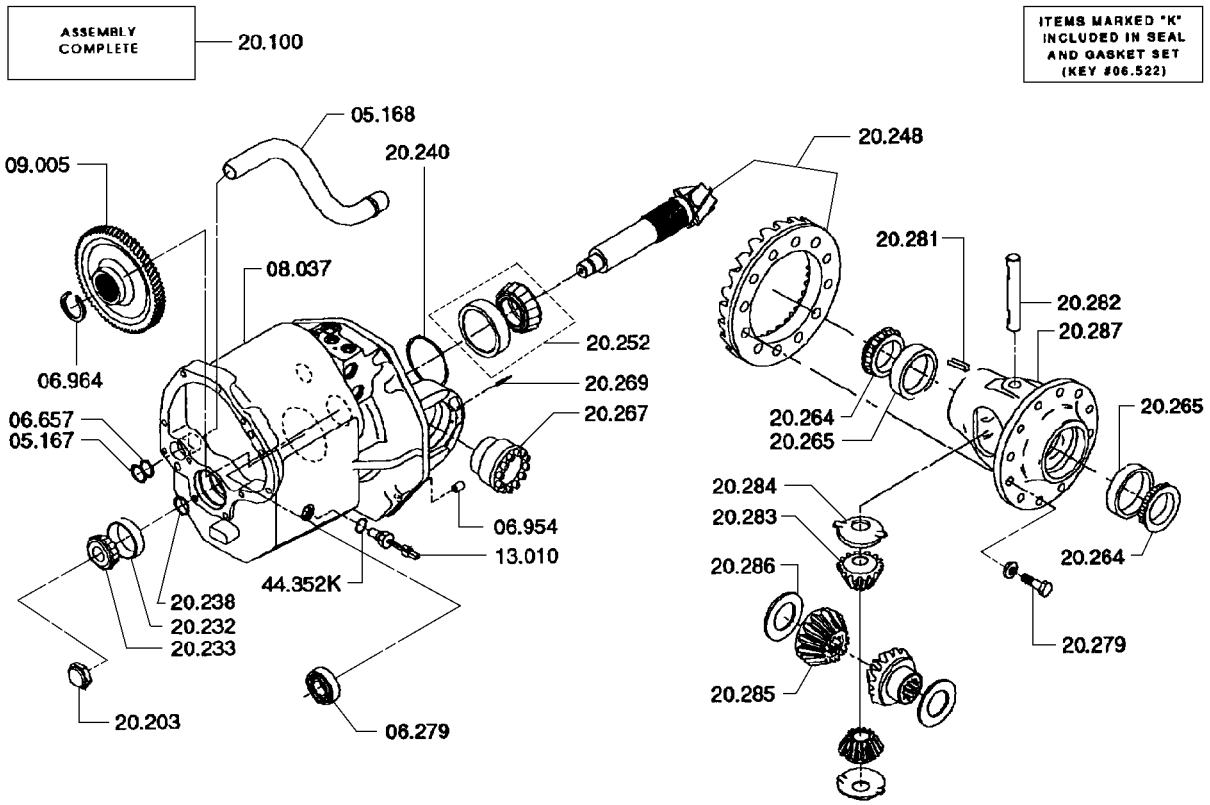

06-619

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
05.167	패스너	Fastener, Converter Pump Inlet Line	20.248	링기어 & 피니언	Ring Gear & Pinion Set, Differential
05.168	라인	Line, Converter Pump Inlet	20.252	베어링	Bearing, Differential Pinion Inner
06.279	베어링	Bearing, Transmission Output Shaft	20.264	콘	Cone, Differential Bearing
06.657	시일	Seal, Trans Valve Press Pump Inlet Line	20.265	컵	Cup, Differential Bearing
06.954	다웰	Dowel, Transmission Case To Converter	20.267	너트	Nut, Differential Bearing Adjusting
06.964	링	Ring, Output Shaft Gear Locating	20.269	패스너	Fastener, Diff Bearing Adjusting Nut Lock
08.037	케이스	Case, Transmission	20.279	패스너	Fastener, Differential Case To Ring Gear
09.005	기어	Gear, Output	20.281	패스너	Fastener, Diff Side Pinion Pin
13.010	콘트롤	Control, Convertor Temperature Indicator	20.282	스파이더	Spider, Differential Pinion
20.100	트랜스액슬 조립	Transaxle Assembly	20.283	기어	Gear, Differential Side Pinion
20.203	너트	Nut, Differential Pinion Companion Flange	20.284	와셔	Washer, Diff Side Pinion Gear Thrust
20.232	콘	Cone, Differential Pinion Outer Bearing	20.285	기어	Gear, Differential Side
20.233	컵	Cup, Differential Pinion Outer Bearing	20.286	와셔	Washer, Differential Side Gear Thrust
20.238	심 킷트	Shim Kit, Differential Pinion Bearing Cage	20.287	케이스 & 기어	Case & Gear Assembly, Differential
20.240	스페이서	Spacer, Differential Pinion Bearing	44.352	시일	Seal, Convertor Temp Indicator Control


TRANSMISSION CLUTCH PACK

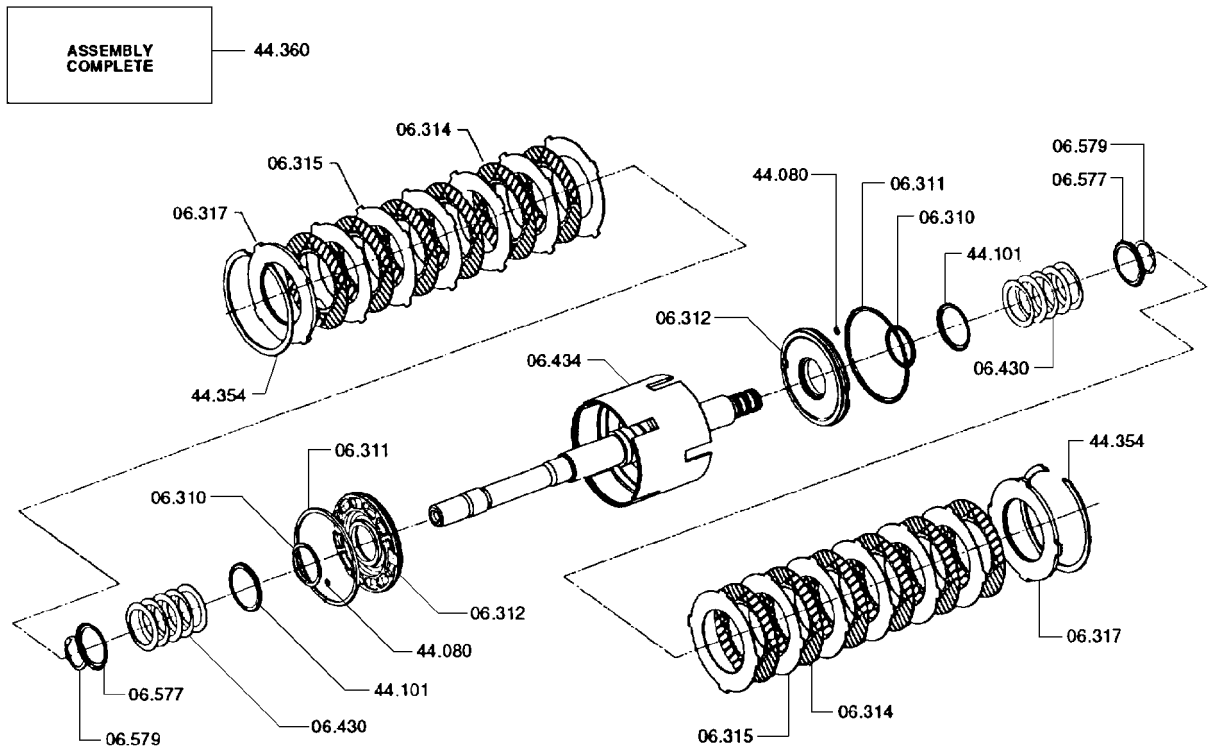

06-750E


키이번호 key No.		부품명 Description
06.310	시일	Seal, Forward Cluch Piston Inner Continued
06.311	시일	Seal, Forward Clutch Piston Outer
06.312	피스톤	Piston, Forward Clutch
06.314	디스크	Disc, Forward Clutch Inner
06.315	디스크	Disc, Forward Clutch Outer
06.317	플레이트	Plate, Forward Clutch Disc End
06.430	스프링	Spring, Forward Clutch Piston Return
06.434	축 & 기어	Shaft & Gear, Clutch Drive
06.577	리테이너	Retainer, Forward Clutch Spring
06.579	패스너	Fastener, Reverse Clutch Spring Retainer
44.080	시일	Seal, Forward Clutch Lubrication Pressure Port Plug
44.101	스러스트 와셔	Thrust Washer, Clutch Shaft Pilot Bearing
44.354	링	Ring, Clutch Pack Retaining
44.360	터빈 축	Turbine Shaft, Drum & Clutch Assy

CONTROL COVER

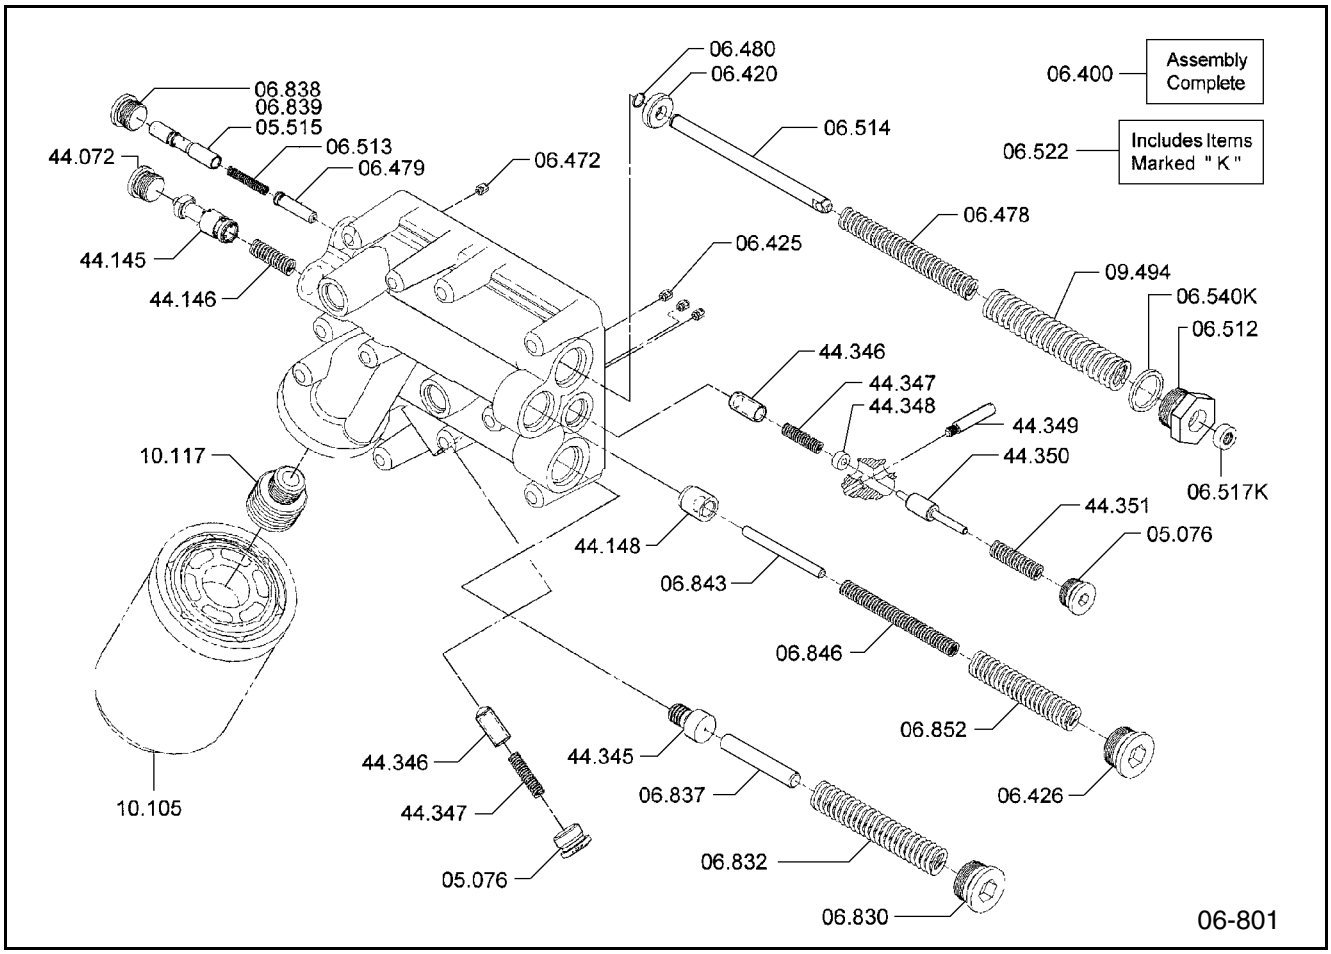

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
05.076	플러그	Plug, Cooler Port (Small)	06.838	스톱	Stop, Inching Valve
05.515	스풀	Spool, Inching	06.839	시일	Seal, Inching Valve Stop
06.400	콘트롤 커버 & 밸브	Control Cover & Valve Assembly	06.843	스톱	Stop, Accumulator Piston
06.420	가이드 & 스톱	Guide & Stop, Shut-Off Valve Spring	06.846	스프링	Spring, Accumulator Piston (Inner)
06.425	플러그	Plug, Control Cover Oil Passage	06.852	스프링	Spring, Accumulator Piston (Outer)
06.426	플러그	Plug, Control Cover	09.494	스프링	Spring, Inching Spool Return
06.472	플러그	Plug, Control Valve Housing Oil Passage	10.105	엘리먼트 & 가스킷	Element & Gasket, Oil Filter
06.478	스프링	Spring, Inching Piston Return	10.117	피팅	Fitting, Oil Filter To Base
06.479	피스톤	Piston, Inching	44.072	플러그	Plug, Modulation Valve Body
06.480	시일	Seal, Inching Piston	44.145	스풀	Spool, Modulator
06.512	스톱	Stop, Inching Spool	44.146	스프링	Spring, Modulator Spool
06.513	스프링	Spring, Inching Valve	44.148	스풀	Spool, Accumulator
06.514	로드	Rod, Inching Valve	44.345	스풀	Spool, Clutch Pressure Regulator
06.517	시일	Seal, Inching Valve Piston Port Fitting	44.346	스풀	Spool, Trans Cooler/Lube Oil Filter By-Pass
06.522	시일 & 가스킷 킷트	Seal And Gasket Kit, Transmission	44.347	스프링	Spring, Trans Cooler/Lube Oil Filter By-Pass Spool
06.540	시일	Seal, Inching Piston Housing	44.348	스톱	Stop, Trans Lube By-Pass Spool Spring
06.830	스톱	Stop, Pressure Regulating Valve	44.349	핀	Pin, Trans Lube By-Pass And Cooler Separator
06.832	스프링	Spring, Clutch Pressure Regulating Valve	44.350	스풀	Spool, Trans Lube By-Ass Relief
06.837	패스너	Fastener, Pressure Regulating Valve Stop	44.351	스프링	Spring, Trans Lube By-Pass Relief Spool


TRANSAXLE MOUNTING

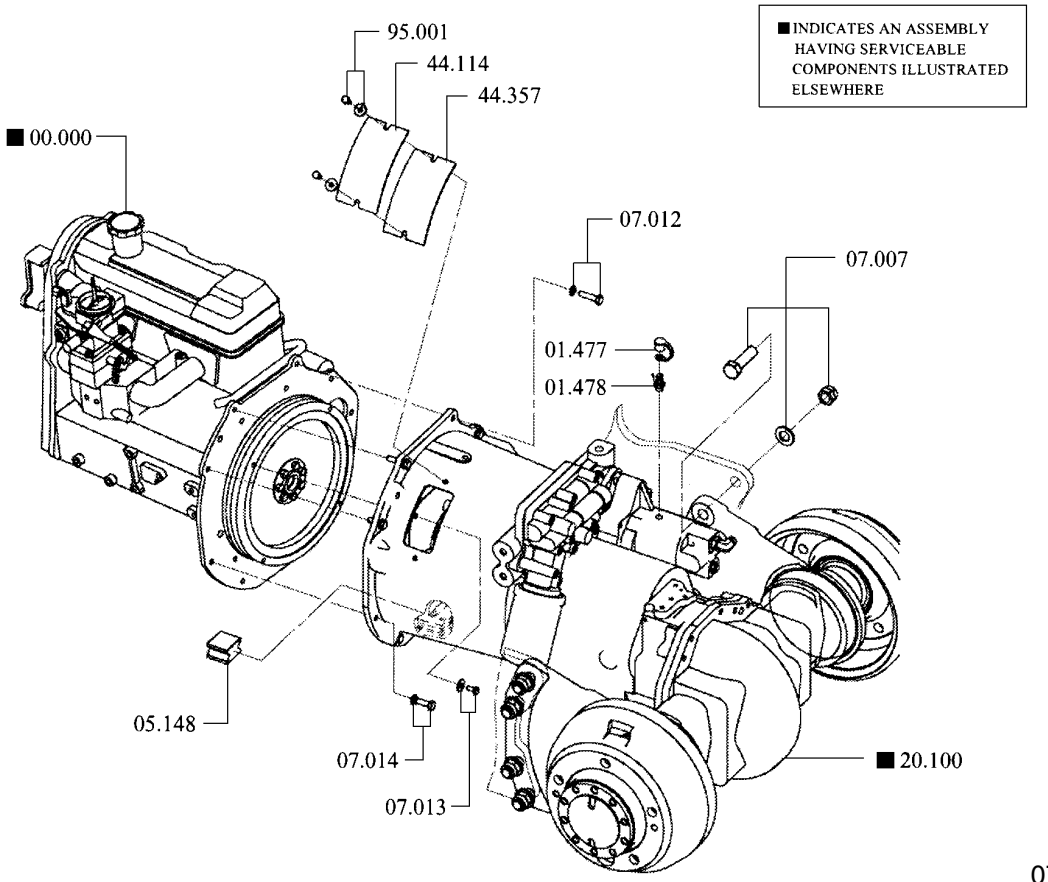

07-047

키이번호 key No.	부품명 Description	
00.000	엔진 조립체	Engine Assembly
01.477	피팅	Fitting, Pump Drive Lubricating Line
01.478	시일	Seal, Pump Drive Lub Line Fitting
05.148	플러그	Plug, Converter Housing
07.007	패스너	Fastener, Transmission Mounting Bracket Lh
07.012	패스너	Fastener, Transmission To Engine
07.013	패스너	Fastener, Transmission To Engine
07.014	패스너	Fastener, Transmission To Engine
20.100	트랜스액슬 조립	Transaxle Assembly
44.114	리테이너	Retainer, Clutch Release Spring
44.357	가스킷	Gasket, Converter Housing Cover
95.001	패스너	Fastener, Converter Housing


DISTRIBUTOR

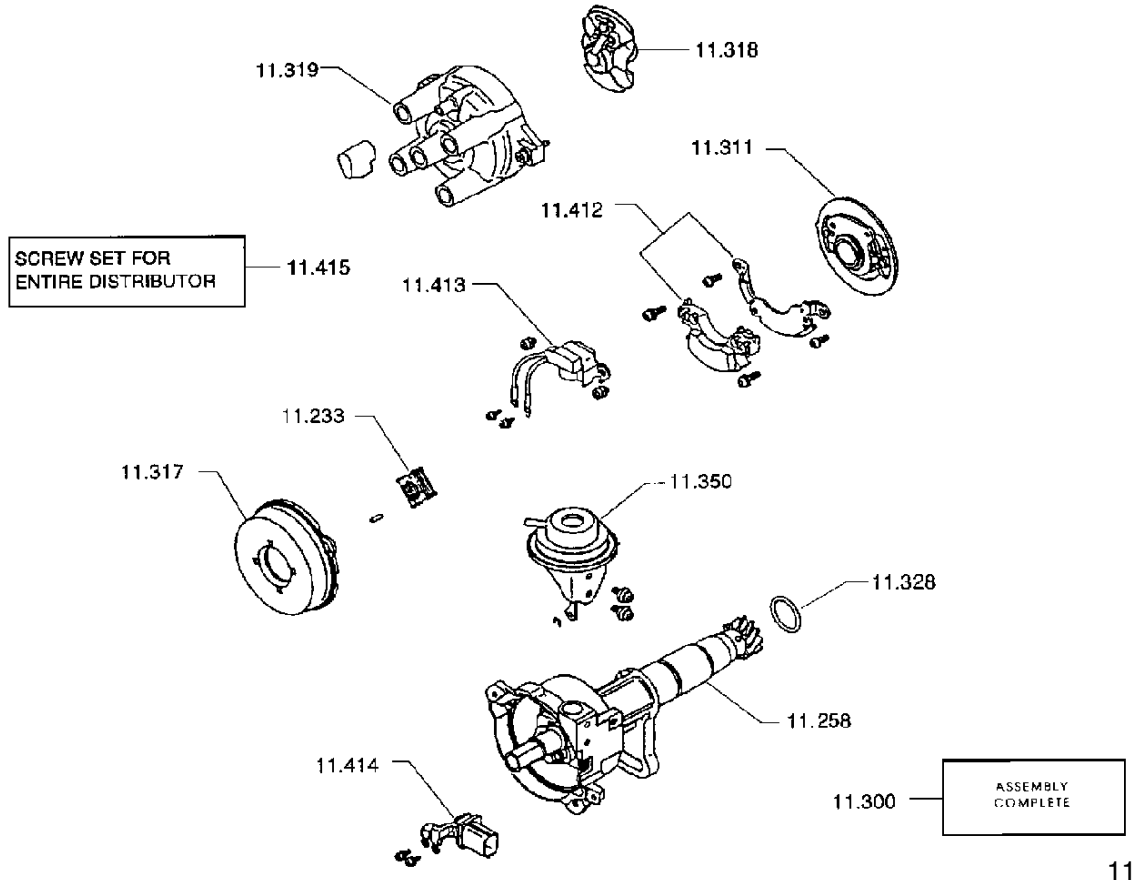

11-040


키이번호 key No.		부품명 Description
11.233	인덕터	Inductor, Distributor Electronic Timer
11.258	하우징	Housing, Distributor
11.300	디스트리뷰터	Distributor Assembly
11.311	플레이트	Plate, Distributor Breaker
11.317	커버 - 가스킷 - 시일	Cover - Gasket - Seal, Distributor Housing
11.318	로터	Rotor, Distributor
11.319	캡	Cap, Distributor
11.328	시일	Seal, Distributor Housing
11.350	진공어드밴스	Assembly, Distributor Vacuum Advance
11.412	시동 킷트	Igniter Kit, Distributor
11.413	픽업 킷트	Pickup Kit, Distributor
11.414	커넥터 킷트	Connector Kit, Distributor
11.415	스크류 세트	Screw Set, Distributor

ALTERNATOR ASSEMBLY

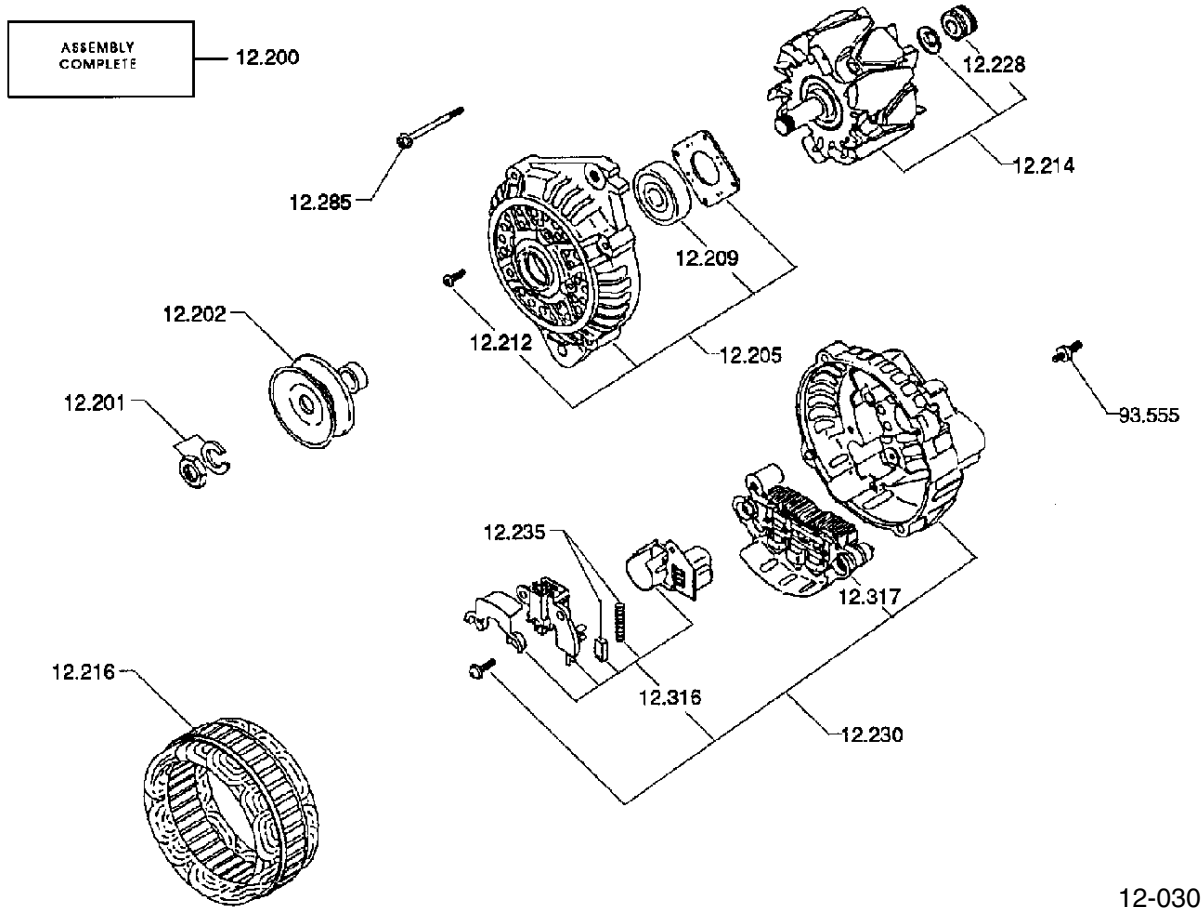

키이번호 key No.		부품명 Description
12.200	알터네이터조립체	Alternator Assembly
12.201	패스너	Fastener, Alternator Pulley To Shaft
12.202	풀리	Pulley, Alternator
12.205	프레임	Frame, Alternator Drive End
12.209	베어링	Bearing, Alternator Drive End
12.212	패스너	Fastener, Alternator Drive End Bearing Retainer Plate
12.214	로터 조립체	Rotor Assembly, Alternator
12.216	스테이터 조립체	Stator Assembly, Alternator
12.228	베어링	Bearing, Alternator Slip Ring Frame End
12.230	프레임	Frame, Alternator Slip Ring End
12.235	브러쉬 킷트	Brush Kit, Alternator
12.285	패스너	Fastener, Through
12.316	레귤레이터	Regulator, Alternator Voltage Output
12.317	정류기 조립체	Rectifier Assembly, Alternator
93.555	패스너	Fastener, Alternator Rectifier Housing Cover


BATTERY

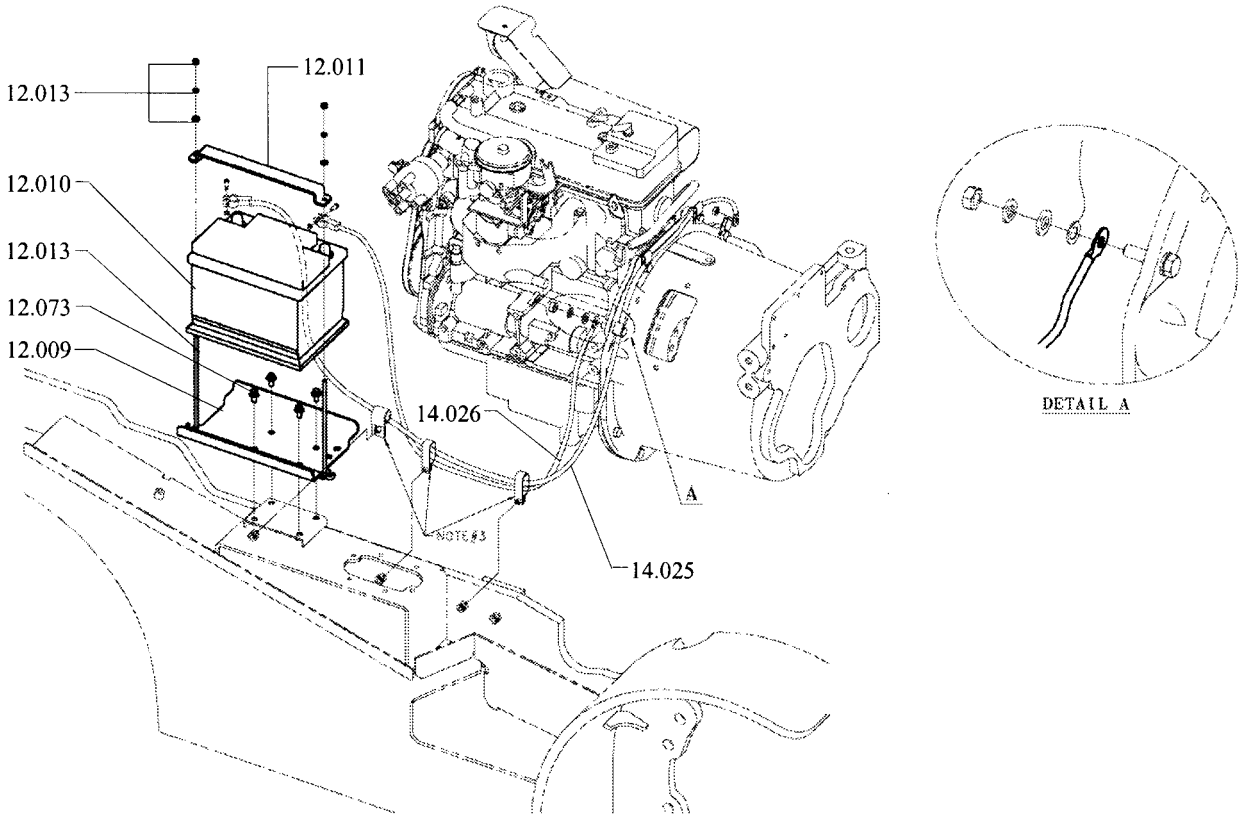


12-136

키이번호 key No.		부품명 Description
12.009	지지대	Support, Battery
12.010	밧테리	Battery
12.011	클램프	Clamp, Battery Hold Down
12.013	패스너	Fastener, Battery Hold Down (At Clamp)
12.073	패스너	Fastener, Battery Support Attaching
14.025	케이블	Cable, Battery To Starter
14.026	케이블	Cable, Battery Ground

SWITCHES

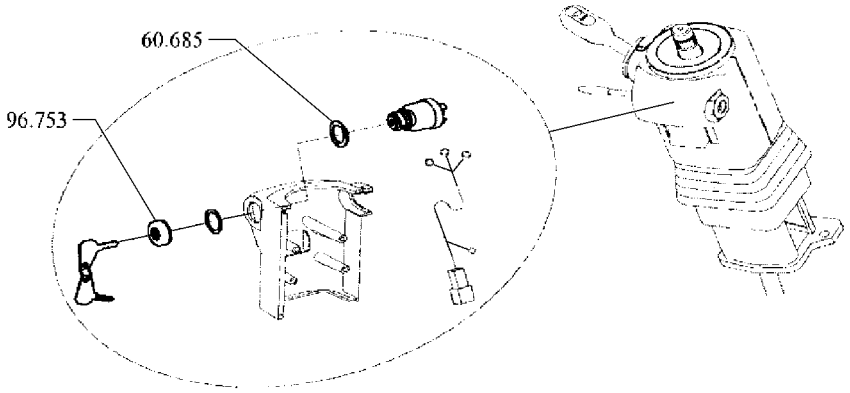

COMBINATION KEY & SWITCH

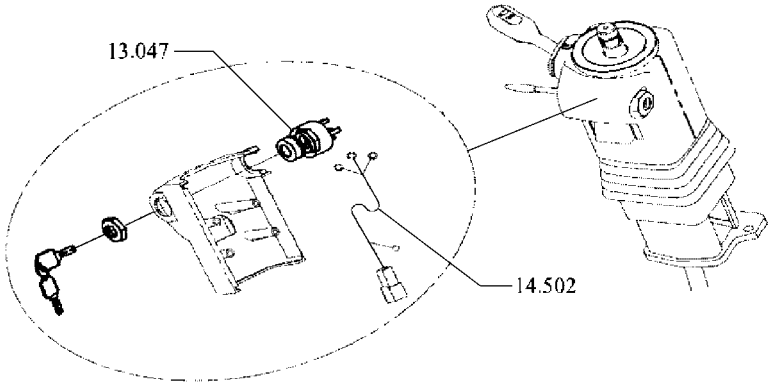


ANTI-RESTART KEY & SWITCH

13-032

키이번호 key No.		부품명 Description
13.047	스위치	Switch, Circuit Locking
14.502	와이어	Wire, Ignition Switch To Engine Harness
60.685	어댑터	Adaptor, Circuit Locking Switch Mounting
96.753	와셔	Washer, Circuit Locking Switch Fastener


HEAD LAMP INSTALLATION (OPTION)

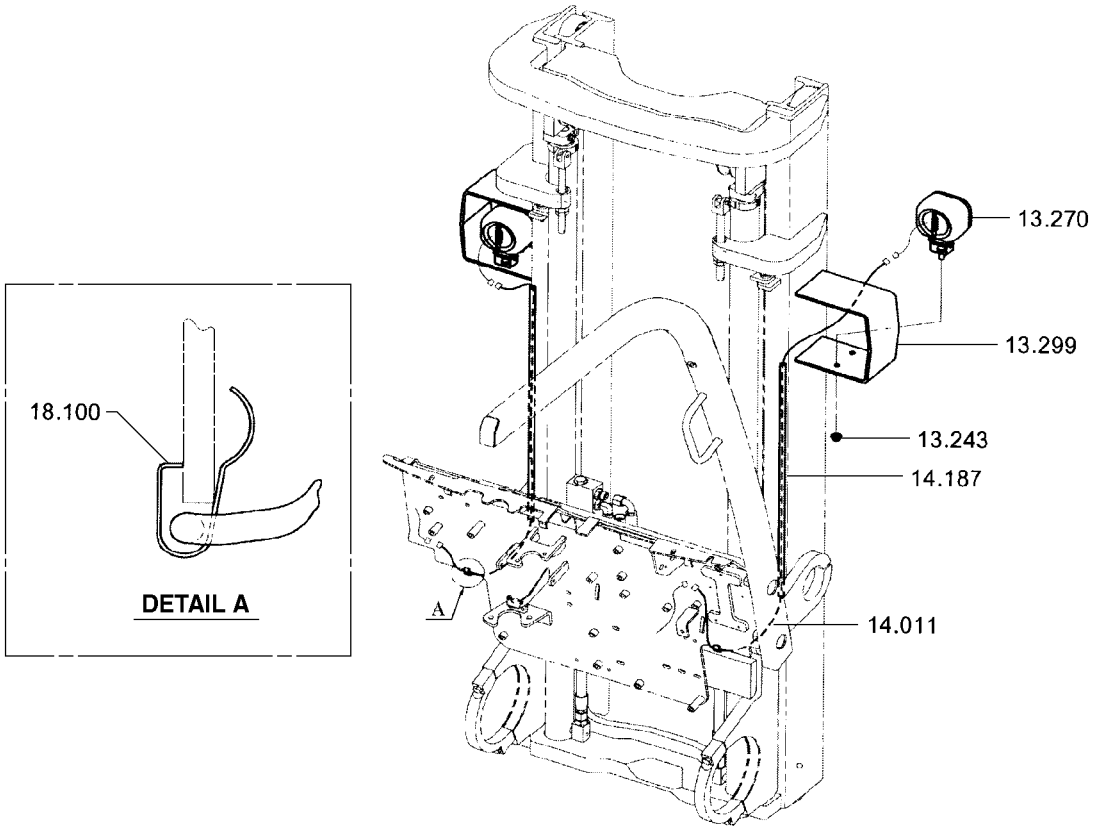

13-034


키이번호 key No.		부품명 Description
13.243	패스너	Fastener, Head Lamp Bracket
13.270	헤드 램프	Headlamp, Adjustable (See Separate Picture)
13.299	가드	Guard, Headlight
14.011	와이어	Wire, Headlight
14.187	시일드	Shield, Headlight Wire
18.100	클립	Clip, Head Light Wire

LAMP INSTALLATION

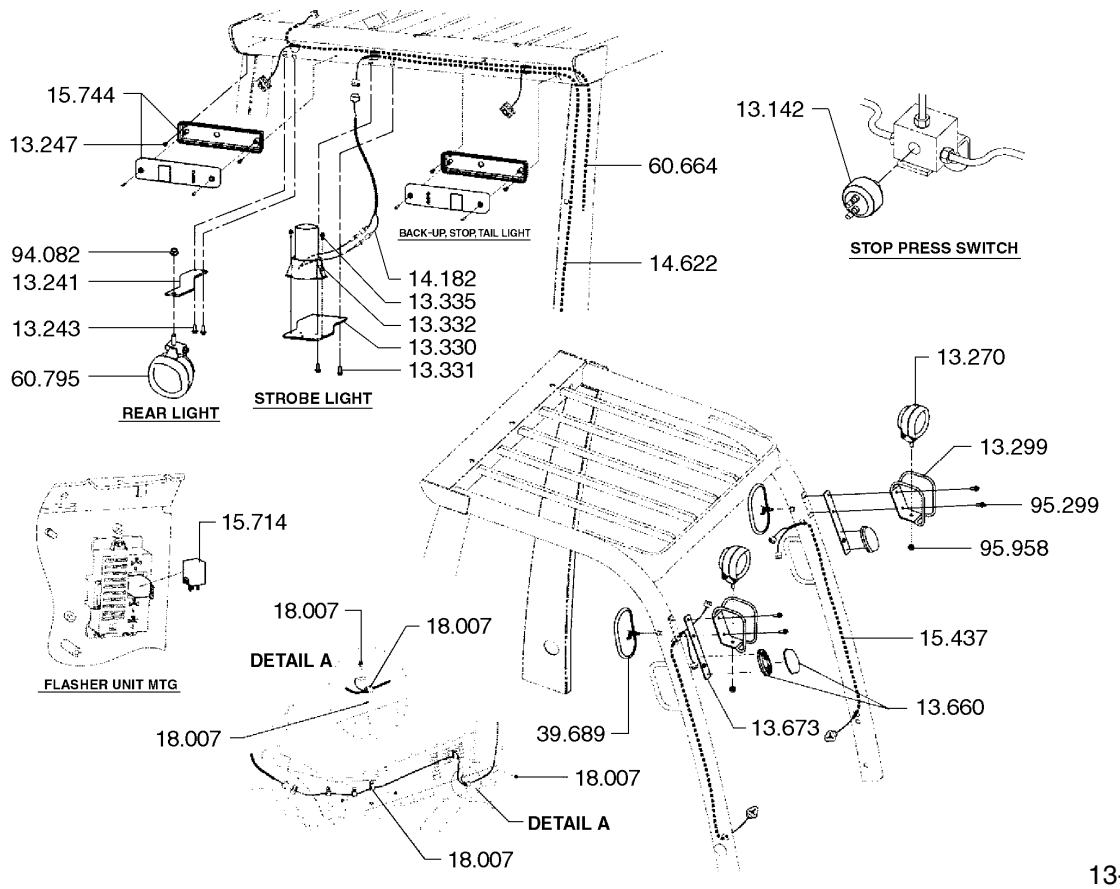

키이번호 key No.		부품명 Description
13.142	스위치	Switch, Brake Interlock
13.241	브래킷	Bracket, Head Lamp
13.243	패스너	Fastener, Head Lamp Bracket
13.247	패스너	Fastener, Tail Lamp Assembly
13.270	헤드 램프	Headlamp, Adjustable (See Separate Picture)
13.299	가드	Guard, Headlight
13.330	브래킷	Bracket, Warning Light
13.331	패스너	Fastener, Warning Light Bracket
13.332	경고등 조립체	Assembly, Warning Light
13.335	패스너	Fastener, Warning Light
13.660	라이트	Light, Turn Signal
13.673	브래킷	Bracket, Turn Light
14.182	와이어	Wire, Warning Light
14.622	배선	Harness, Towing Lights
15.437	배선	Harness, Lh Headlamp Wiring
15.714	플래셔	Flasher, Unit
15.744	램프 조립체	Lamp Assembly,Combination Stop & Tail
18.007	패스너	Fastener, Harness Clip
39.689	미러	Mirror, Rear View
60.664	배선	Harness, Warning Device
60.795	라이트	Light, Rear Work
94.082	너트	Nut, Headlamp Mounting Bracket Fastener
95.299	패스너	Fastener, Headlamp Guard
95.958	너트	Nut, Headlamp Guard Fastener

STROBE LIGHT

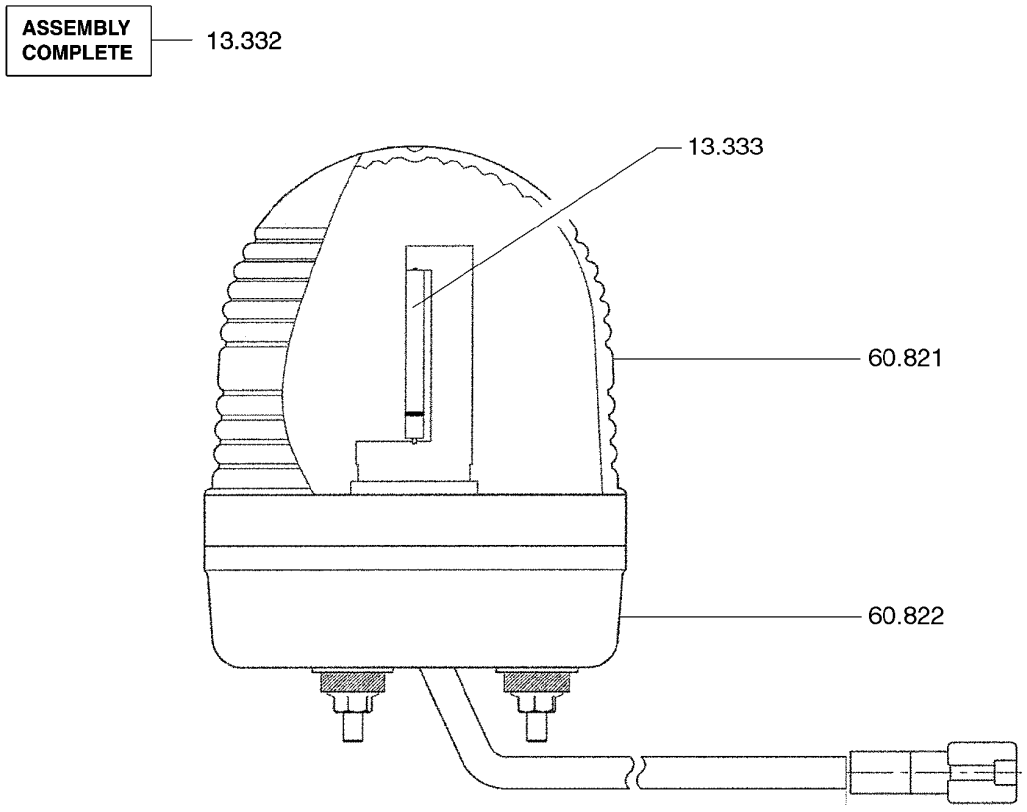


13-182

키이번호 key No.		부품명 Description
13.332	경고등 조립체	Assembly, Warning Light
13.333	전구	Bulb, Warning Light
60.821	글로브	Globe, Strobe Light
60.822	베이스	Base, Strobe Light

STROBE LIGHT MOUNTING (OPTION)


■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

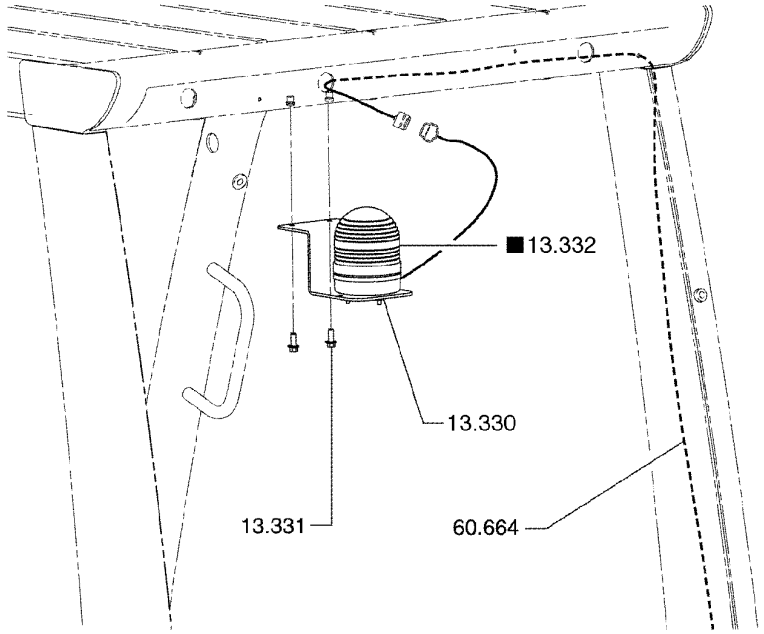

13-183

키이번호 key No.		부품명 Description
13.330	브래킷	Bracket, Warning Light
13.331	패스너	Fastener, Warning Light Bracket
13.332	경고등 조립체	Assembly, Warning Light
60.664	배선	Harness, Warning Device


LPS CONSTRUCTION (OPTION)

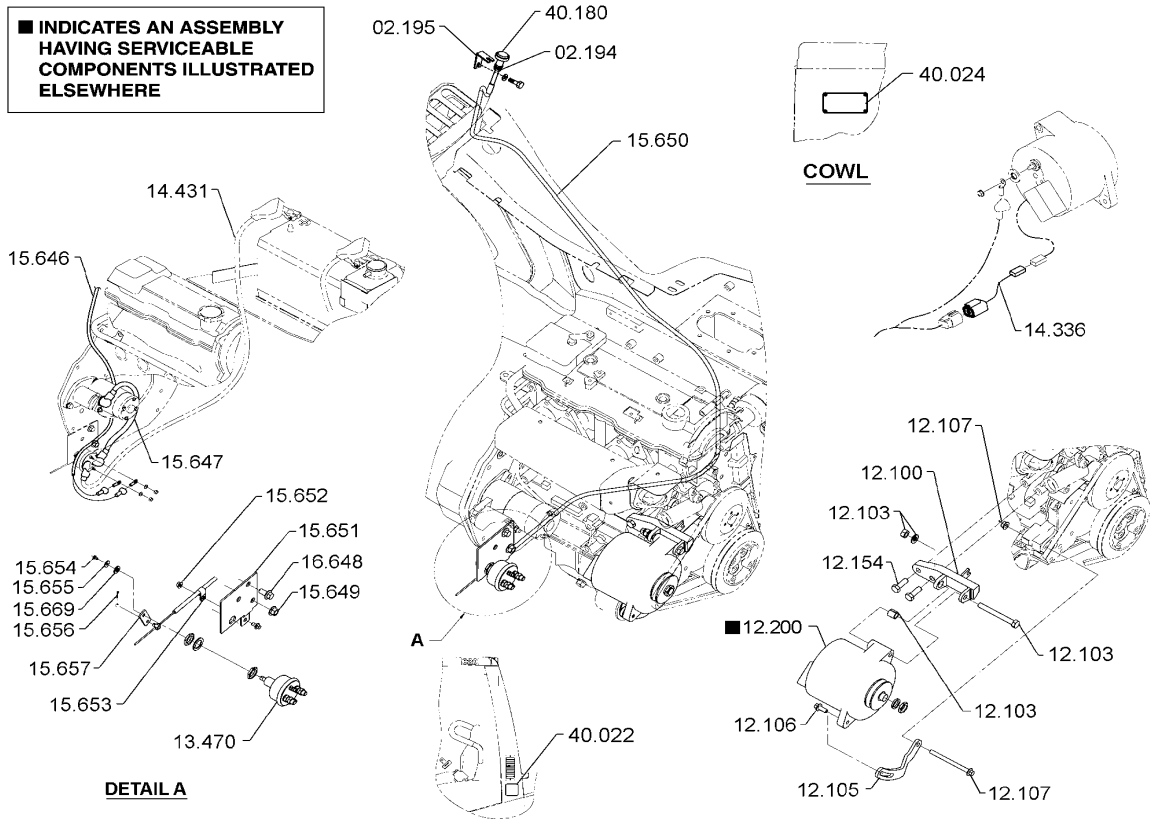

14-339


키이번호 key No.		부품명 Description
02.194	콘트롤	Control, Choke
02.195	브래킷	Bracket, Choke Cable Mounting
12.100	브래킷	Bracket, Alternator Mounting
12.103	패스너	Fastener, Alternator To Bracket
12.105	스트랩	Strap, Alternator Adjusting
12.106	패스너	Fastener, Adjusting Strap Mounting
12.107	패스너	Fastener, Adjusting Strap To Alternator
12.154	패스너	Fastener, Alternator Mounting
12.200	알터네이터조립체	Alternator Assembly
13.470	스위치	Switch, Disconnect
14.336	배선	Harness, Alternator
14.431	케이블	Cable, Battery To Disconnect Switch
15.646	배선	Harness, Engine Disconnect
15.647	케이블	Cable, Disconnect Switch To Starter
15.649	패스너	Fastener, Disconnect Switch Mounting Bracket
15.650	케이블	Cable, Disconnect Switch To Knob
15.651	브래킷	Bracket, Disconnect Switch Mounting
15.652	패스너	Fastener, Clamp
15.653	클램프	Clamp, Cable Retainer
15.654	패스너	Fastener, Disconnect Switch Bracket To Lever
15.655	와셔	Washer, Disconnect Switch Bracket To Lever Fastener
15.656	핀	Pin, Cotter
15.657	레버	Lever, Disconnect Switch Actuating
15.669	마그넷	Magnet, Proximity Switch
16.648	패스너	Fastener, Auxiliary Pump Motor Fan To Shaft
40.022	데칼	Decal, Underwriters Label
40.024	플레이트	Plate, Underwriters Label
40.180	데칼	Decal, Battery Disconnect Switch

INSTRUMENT PANEL

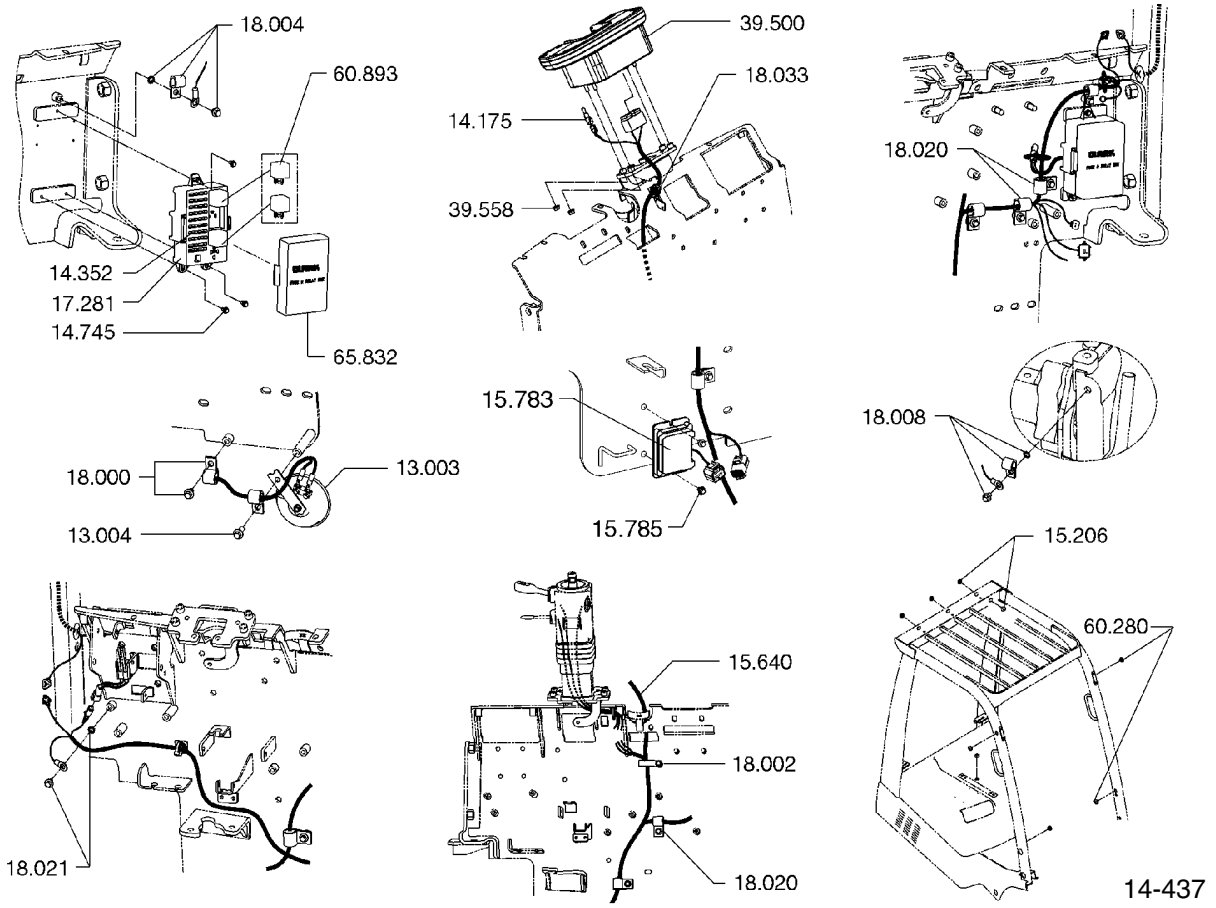


키이번호 key No.		부품명 Description
13.003	혼	Horn
13.004	패스너	Fastener, Horn Mounting Bracket
14.175	커넥터	Connector, Harness To Wire Assembly
14.352	퓨즈	Fuse, Control Circuit
14.745	패스너	Fastener, Fuse Holder Mounting Bracket
15.206	그로멧	Grommet, Headlamp Conductor
15.640	전기배선	Wiring Harness, Machine Cowl
15.783	트랙션디세이블컨	Traction Disable Control
15.785	패스너	Fastener, Traction Disable Control
17.281	블록	Block, Main Fuse
18.000	클립	Clip, Wiring Harness
18.002	클립	Clip, Wiring Harness
18.004	클립	Clip, Wiring Harness
18.008	클립	Clip, Wiring Harness
18.020	클립	Clip, Harness
18.021	패스너	Fastener, Wire Harness Clip
18.033	타이 스트랩	Tie Strap, Harness
39.500	판넬	Panel, Instrument
39.558	패스너	Fastener, Cowl Front
60.280	그로멧	Grommet, Headlamp Conductor
60.893	릴레이	Relay, Horn & Engine Shutdown
65.832	커버	Cover, Fuse Box

ELECTRICAL WIRING

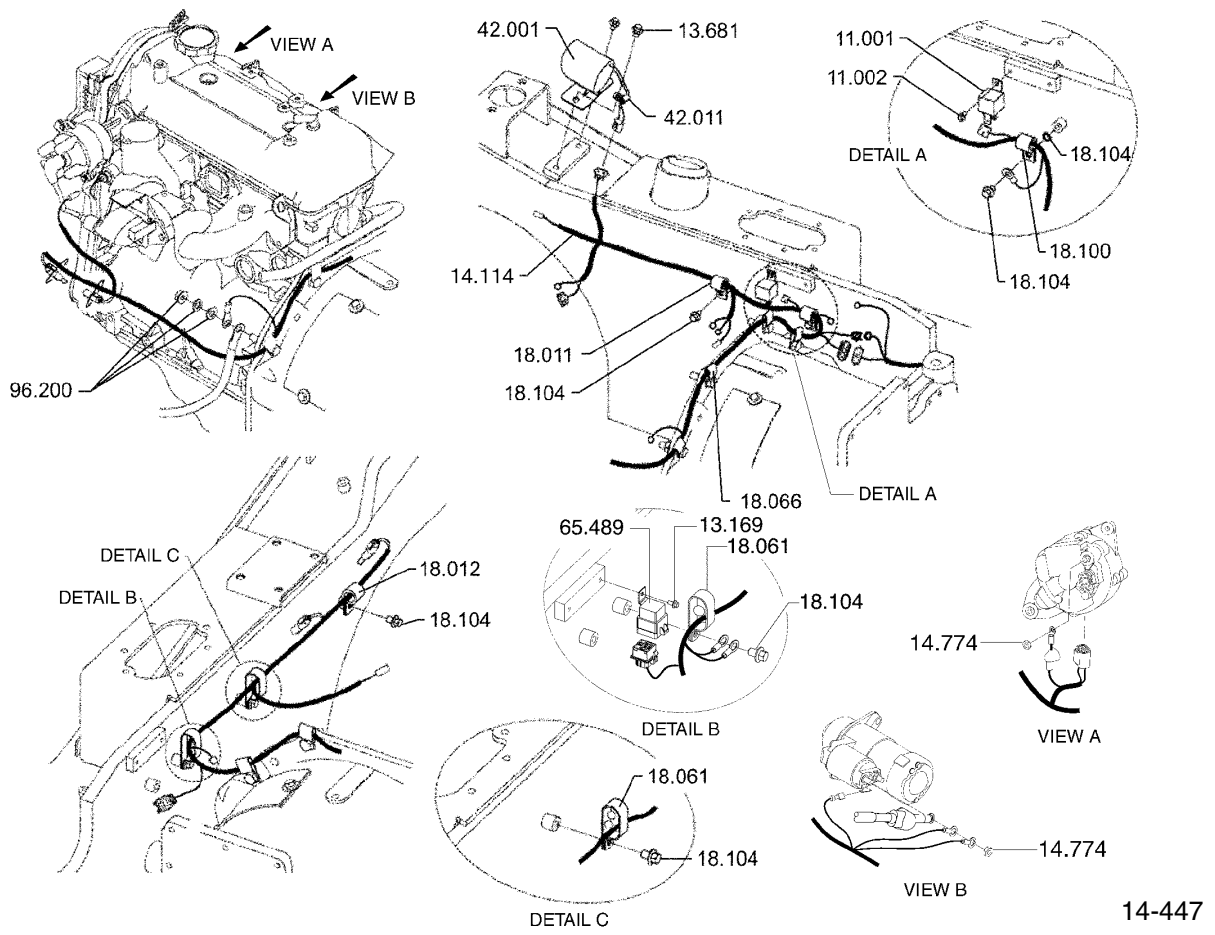

키이번호 key No.		부품명 Description
11.001	릴레이	Relay, Starter
11.002	패스너	Fastener, Starter Relay
13.169	패스너	Fastener, Switch Actuator
13.681	패스너	Fastener, Warning Device
14.114	배선	Harness, Machine Wiring
14.774	패스너	Fastener, Wiring Harness Connector
18.011	패스너	Fastener, Harness Clip
18.012	클립	Clip, Harness
18.061	클램프	Clamp, Electrical Wire
18.066	클립	Clip, Interlock Harness
18.100	클립	Clip, Head Light Wire
18.104	패스너	Fastener, Adj Headlamp Wire Clip
42.001	경보 장치	Warning Device, Audible (Air Oper)
42.011	클립	Clip, Audible Warning Device Cable
65.489	릴레이	Relay, Circuit Switch
96.200	패스너	Fastener, Wiring Harness Ground


WIRE HARNESS (SECM)

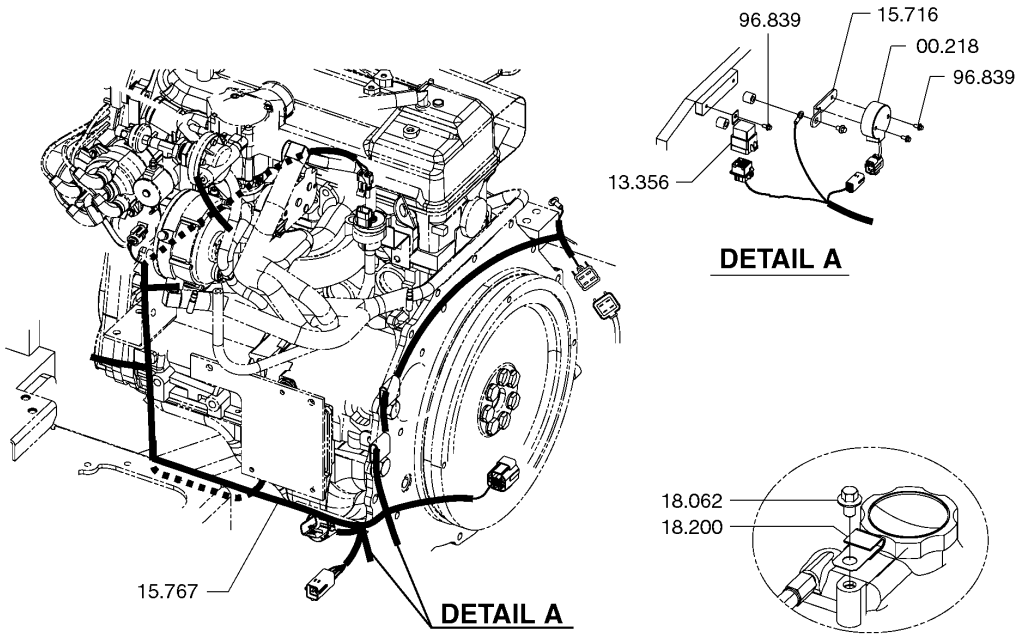

14-493

키이번호 key No.		부품명 Description
00.218	타이머	Timer, Engine Adjustment Of Injection
13.356	릴레이	Relay, Warning Device Systems
15.716	브래킷	Bracket, Relay Mounting
15.767	전기 배선	Wire Harness, Electronic Control Unit
18.062	패스너	Fastener, Electrical Wire Clamp
18.200	클립	Clip, Wire Harness
96.839	패스너	Fastener, Relay Mounting


SEAT OPERATED BRAKE (OPTION)

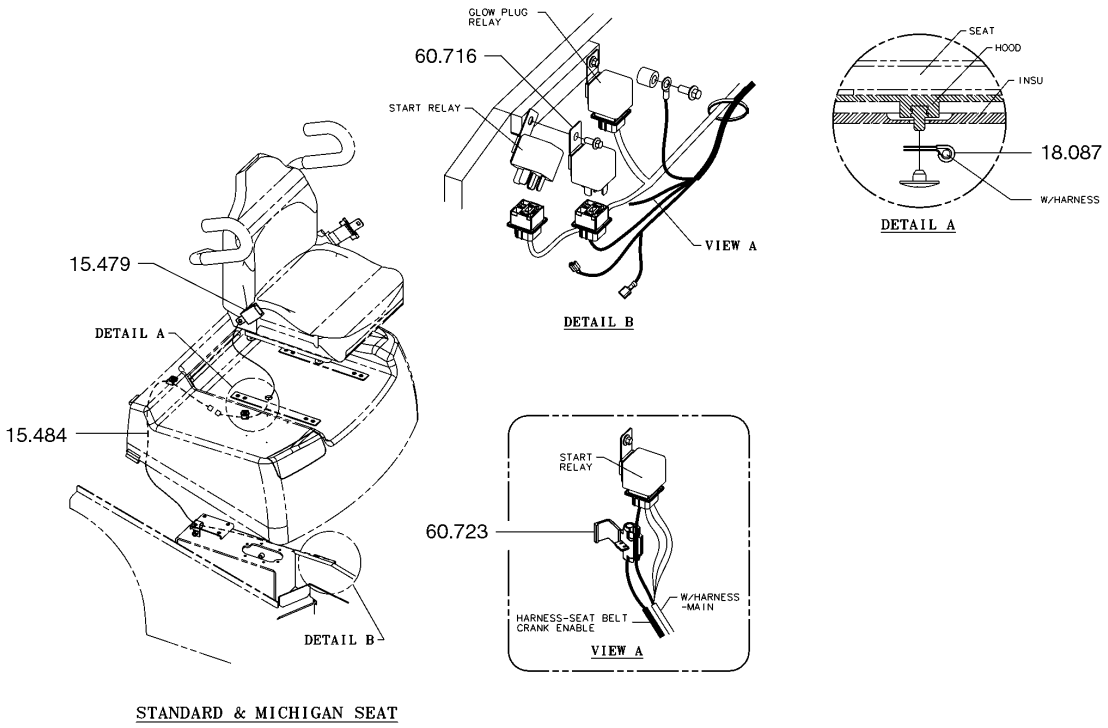

14-878


키이번호 key No.		부품명 Description
15.479	스위치	Switch, Seat Installation
15.484	배선	Harness, Seat Switch Installation
18.087	클립	Clip, Seat Safety Switch Wire
60.716	릴레이	Relay, Safety Start
60.723	커넥터	Connector, Seat Switch Wiring

DRIVE AXLE

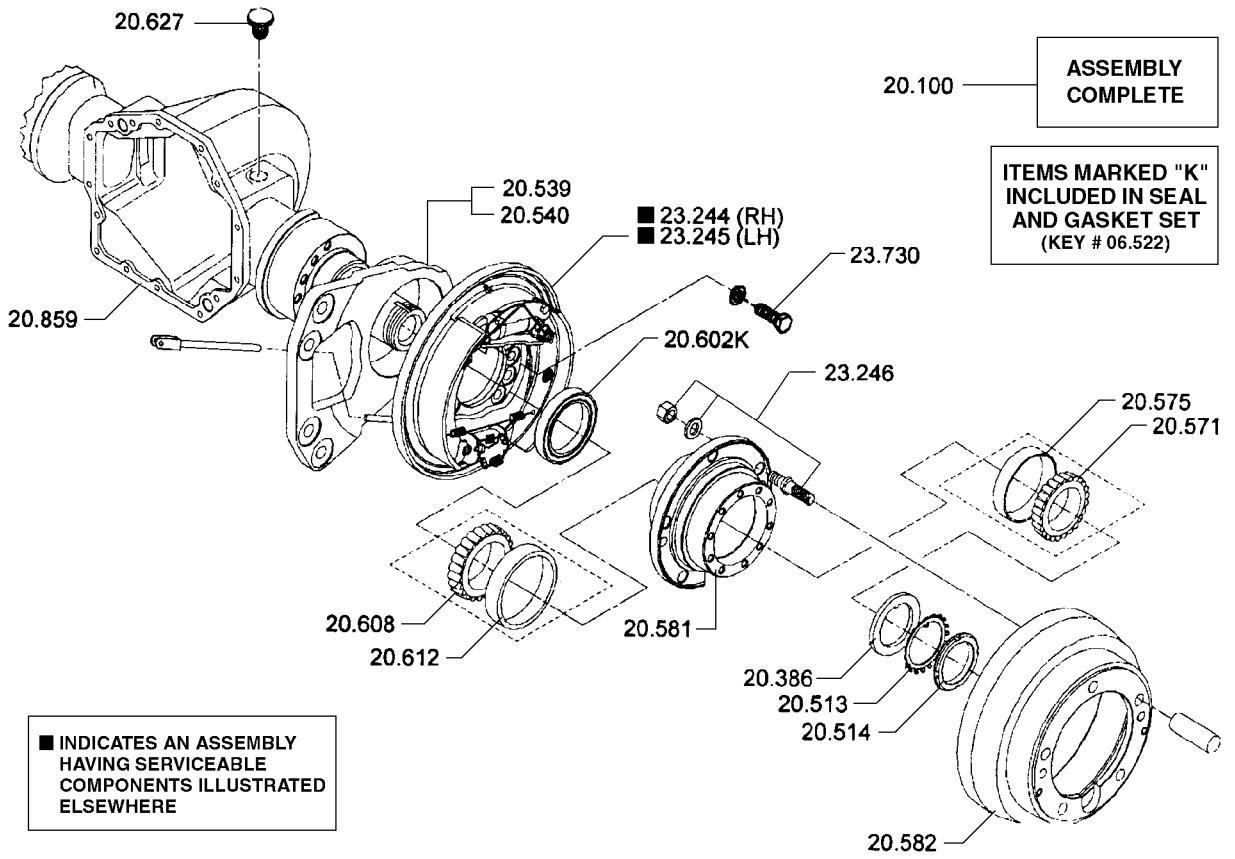

키이번호 key No.		부품명 Description
20.100	트랜스액슬 조립	Transaxle Assembly
20.386	와셔	Washer, Drive Axle Hub Seal
20.513	리테이너	Retainer, Drive Axle Hub Bearing
20.514	로크 플레이트	Lockplate, Drive Axle Hub Bearing Retainer
20.539	지지대	Support, Drive Axle Spindle (Rh)
20.540	지지대	Support, Drive Axle Spindle (Lh)
20.571	콘	Cone, Drive Axle Hub Outer Bearing
20.575	컵	Cup, Drive Axle Hub Outer Bearing
20.581	허브 조립체	Hub Assembly, Drive Wheel
20.582	허브	Hub, Drive Wheel
20.602	시일	Seal, Drive Axle Hub Inner Oil
20.608	콘	Cone, Drive Axle Hub Inner Bearing
20.612	컵	Cup, Drive Axle Hub Inner Bearing
20.627	벤트	Vent, Differential & Axle
20.859	하우징	Housing, Drive Axle
23.244	브레이크 조립체	Brake Assembly, Rh Drive Wheel
23.245	브레이크 조립체	Brake Assembly, Lh Drive Wheel
23.246	패스너	Fastener, Brake Assembly
23.730	패스너	Fastener, Brake Assembly


BRAKE ASSEMBLY

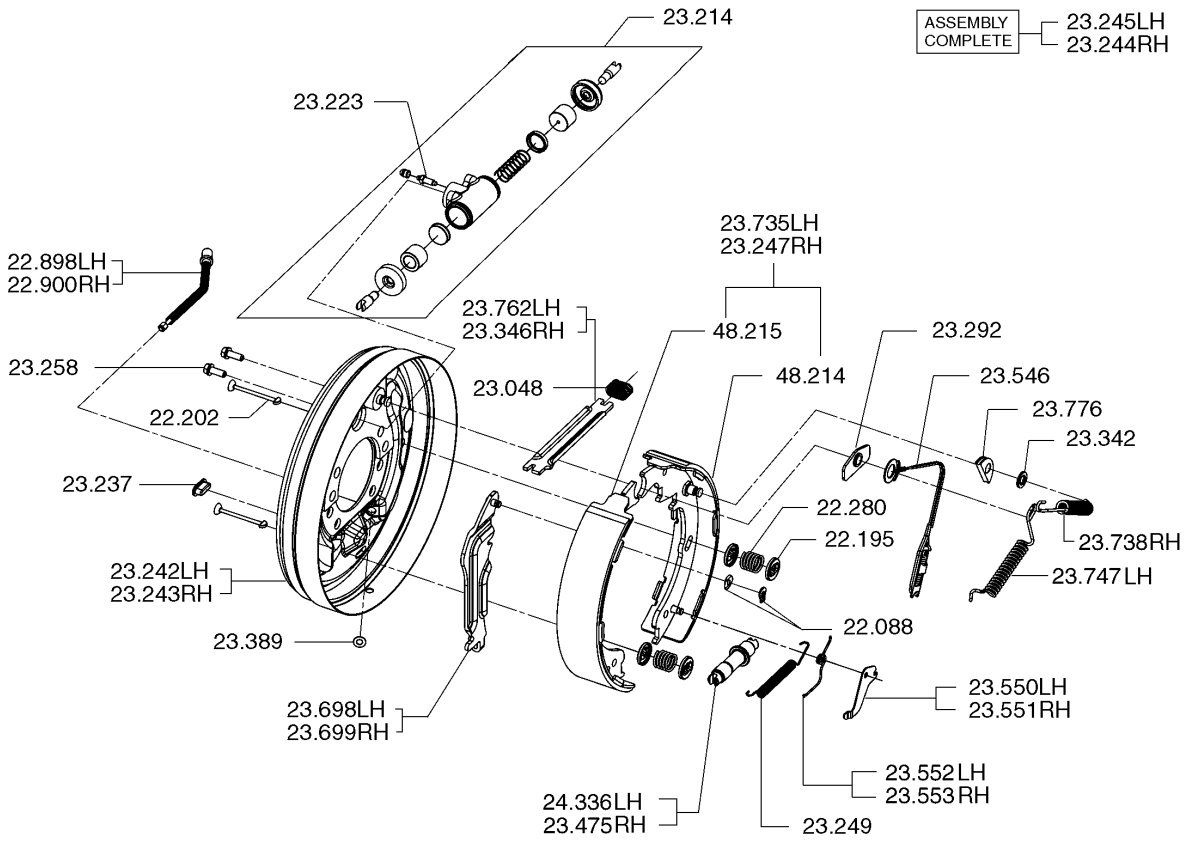

22-011

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
22.088	리테이너	Retainer, Parking Brake Linkage Lever Fulcrum	23.346	아암	Arm, Parking Brake
22.195	컵	Cup, Brake Shoe Guide	23.389	리테이너	Retainer, Parking Brake Cable
22.202	핀	Pin, Brake Cable Clevis	23.475	어드져스터	Adjustor, Brake Shoe Adjusting
22.280	스프링	Spring, Brake Shoe Guide Pin	23.546	케이블	Cable, Brake Adjuster (Rh)
22.898	케이블	Cable, Parking Brake Draw - Lh	23.550	레버	Lever, Brake Adjuster (Lh)
22.900	케이블	Cable, Parking Brake Draw - Rh	23.551	레버	Lever, Brake Adjuster (Rh)
23.048	스프링	Spring, Parking Brake Operating Arm Anti-Rattle	23.552	스프링	Spring, Brake Adjuster (Lh)
23.214	실린더 조립체	Cylinder Assembly, Lh Brake	23.553	스프링	Spring, Brake Adjuster (Rh)
23.223	블리더	Bleeder, Brake Wheel Cylinder	23.698	레버	Lever, Parking Brake Operating Lh
23.237	커버	Cover, Rh Brake Adjustor	23.699	아암	Arm, Brake Adjustor Reaction Lh
23.242	플레이트	Plate, Lh Brake Backing	23.735	슈 & 라이닝	Shoe & Lining, Brake (Axle Set)
23.243	플레이트	Plate, Rh Brake Backing	23.738	스프링	Spring, Brake Shoe Return (Rh)
23.244	브레이크 조립체	Brake Assembly, Rh Drive Wheel	23.747	스프링	Spring, Brake Shoe Return (Lh)
23.245	브레이크 조립체	Brake Assembly, Lh Drive Wheel	23.762	아암	Arm, Parking Brake Operating
23.247	슈	Shoe, Lining & Adjustor (Axle Set)	23.776	쉬브	Sheave, Parking Brake Cable
23.249	스프링	Spring, Lh Brake Return	24.336	어드져스터	Adjustor, Brake Shoe LH
23.258	패스너	Fastener, Lh Wheel Cylinder	48.214	슈 & 라이닝	Shoe & Lining Assembly, Trailer Brake (Rh)
23.292	앵커	Anchor, Brake Shoe	48.215	슈 & 라이닝	Shoe & Lining Assembly, Trailer Brake (Lh)
23.342	패스너	Fastener, Brake Spring Anchor			


DRIVE WHEEL & TIRE

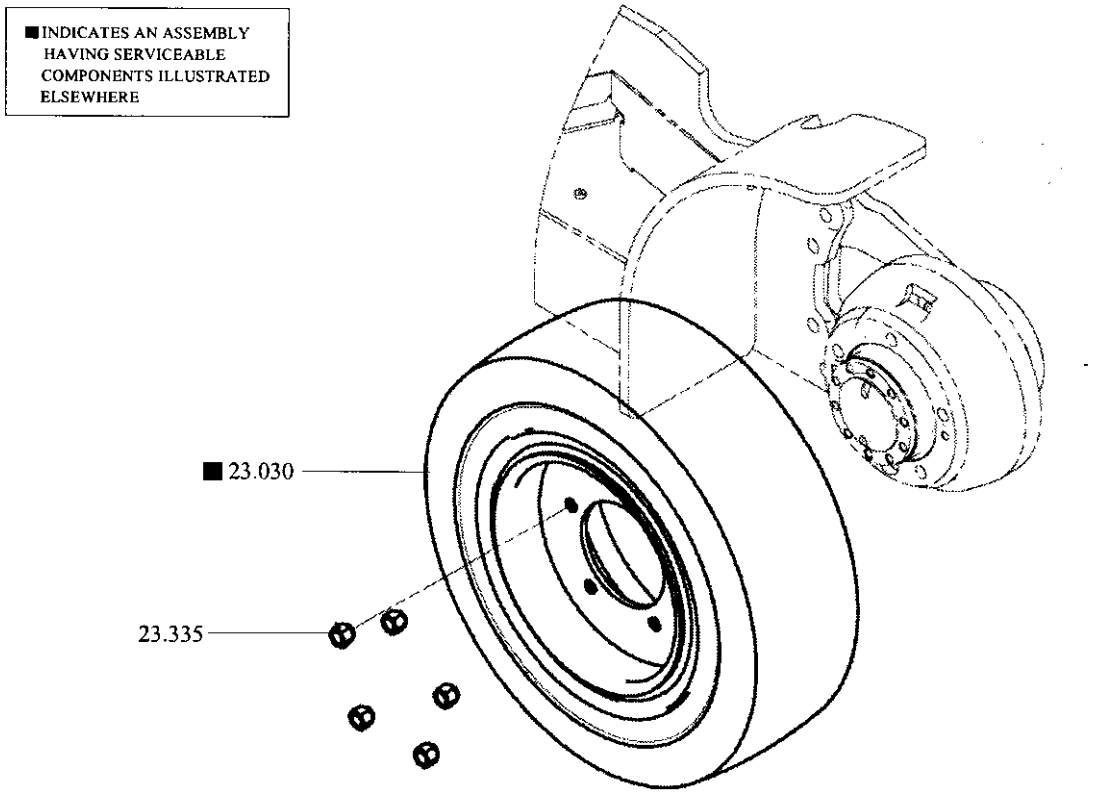

23-239

키이번호 key No.		부품명 Description
23.030	휠 & 타이어	Drive Wheel And Tire Assembly
23.335	패스너	Fastener, Drive Wheel


STEER WHEEL & TIRE

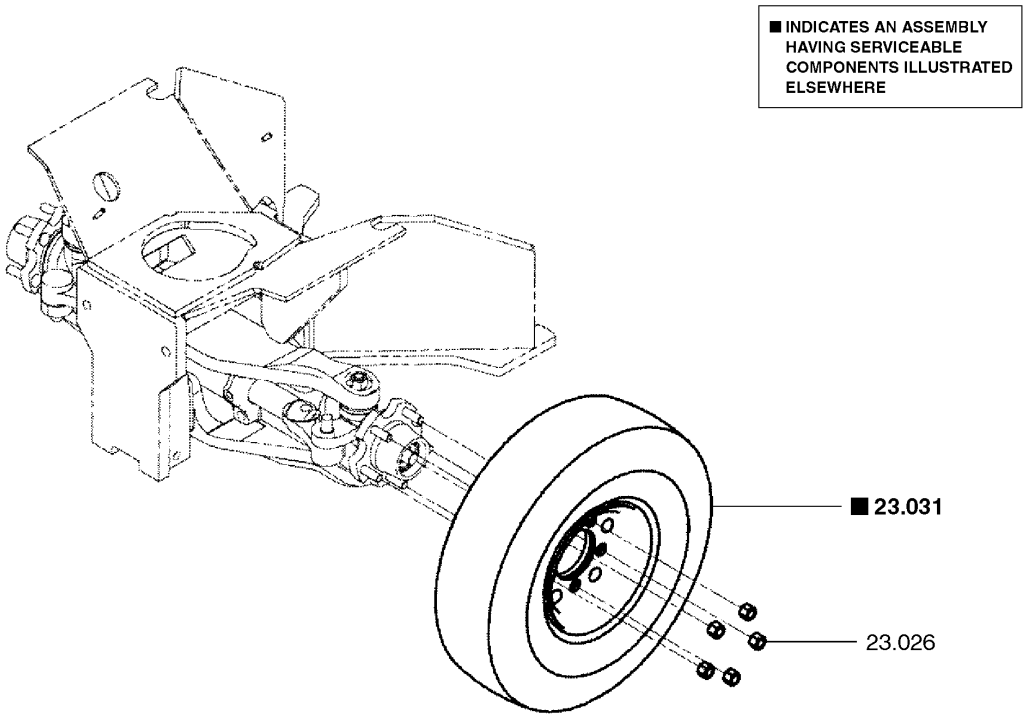

23-240

키이번호 key No.		부품명 Description
23.026	패스너	Fastener, Steer Wheel
23.031	휠 & 타이어	Steer Wheel And Tire Assembly


DUAL DRIVE WHEEL & TIRE (OPTION)

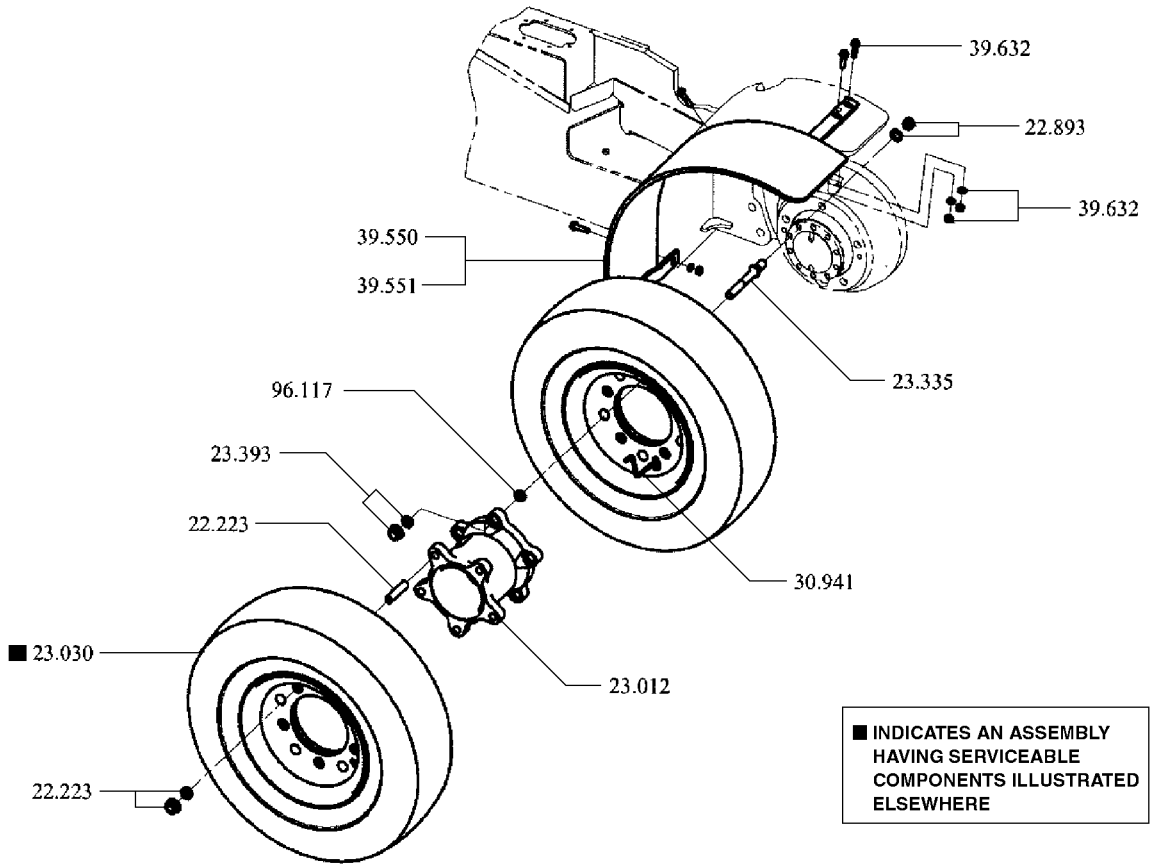

23-241

키이번호 key No.		부품명 Description
22.223	패스너	Fastener, Drive Wheel
22.893	너트	Nut, Split Wheel Retainer
23.012	스페이서	Spacer, Drive Wheel Dual Rim
23.030	휠 & 타이어	Drive Wheel And Tire Assembly
23.335	패스너	Fastener, Drive Wheel
23.393	패스너	Fastener, Drive Wheel
30.941	익스텐션	Extension, Valve Spool
39.550	펜더	Fender, Rear (Rh)
39.551	펜더	Fender, Rear (Lh)
39.632	패스너	Fastener, Fender Support
96.117	와셔	Washer, Drive Wheel Mounting Fastener


DRIVE WHEEL & TIRE (WIDE) - OPTION

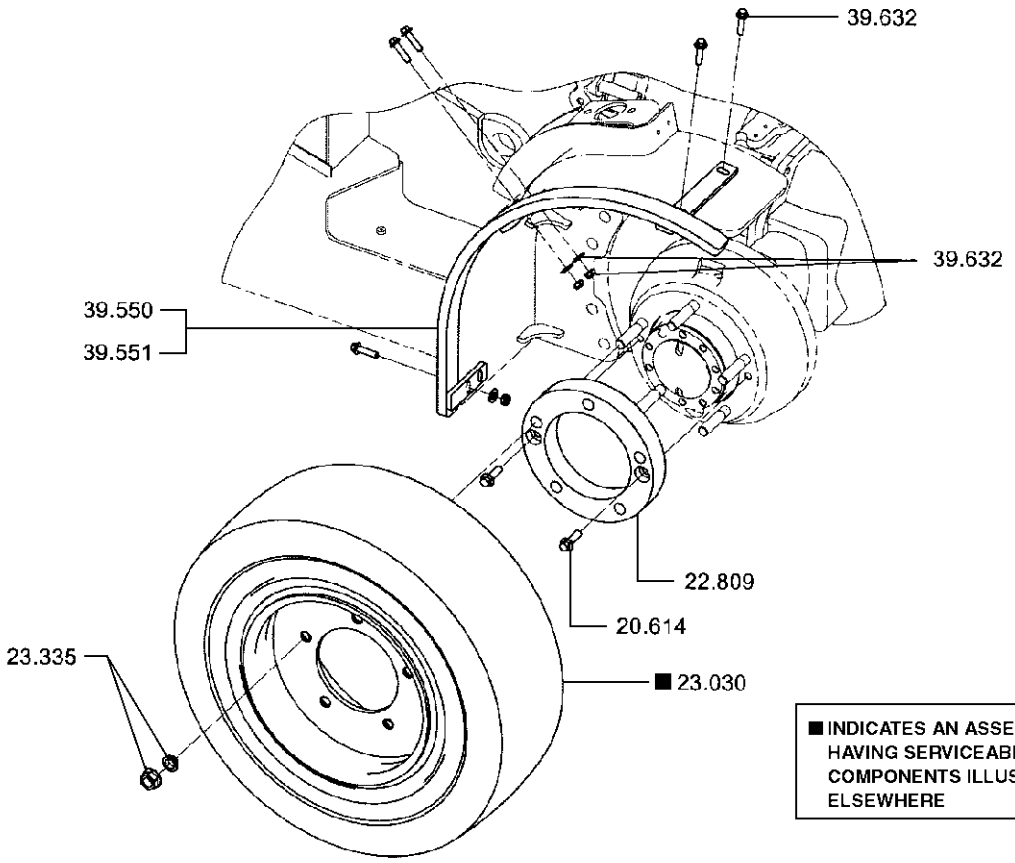

23-248

키이번호 key No.		부품명 Description
20.614	패스너	Fastener, Drive Wheel Brake Drum
22.809	스페이서	Spacer, Drive Wheel Offset Mounting
23.030	휠 & 타이어	Drive Wheel And Tire Assembly
23.335	패스너	Fastener, Drive Wheel
39.550	펜더	Fender, Rear (Rh)
39.551	펜더	Fender, Rear (Lh)
39.632	패스너	Fastener, Fender Support


BRAKE LINES

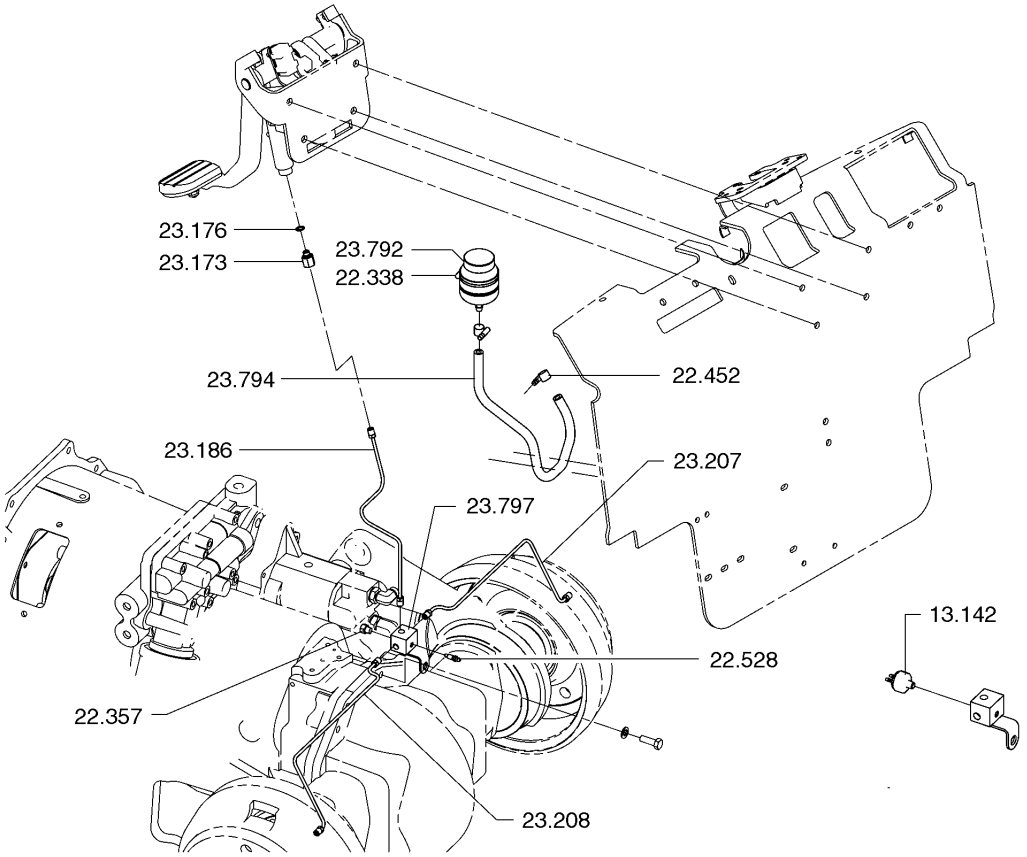

23-265

키이번호 key No.		부품명 Description
22.338	클램프	Clamp, Brake Fluid Reservoid
22.452	클램프	Clamp, Brake Master Cylinder Filler Line
22.528	블리더	Bleeder, Brake Lines Adaptor
23.173	피팅	Fitting, Brake Master Cylinder Outlet
23.176	가스킷	Gasket, Brake Master Cylinder Outlet Ftg Bolt
23.186	라인	Line, Brake Master Cylinder Outlet
23.207	라인	Line, Lh Drive Wheel Brake Cylinder To Tee
23.208	라인	Line, Rh Drive Wheel Brake Cylinder To Tee
23.792	리저버	Reservoir, Brake Fluid
23.794	라인	Line, Brake Master Cylinder Inlet
23.797	피팅	Fitting, Brake Line Tee Inlet


DRIVE WHEEL & TIRE ASSY

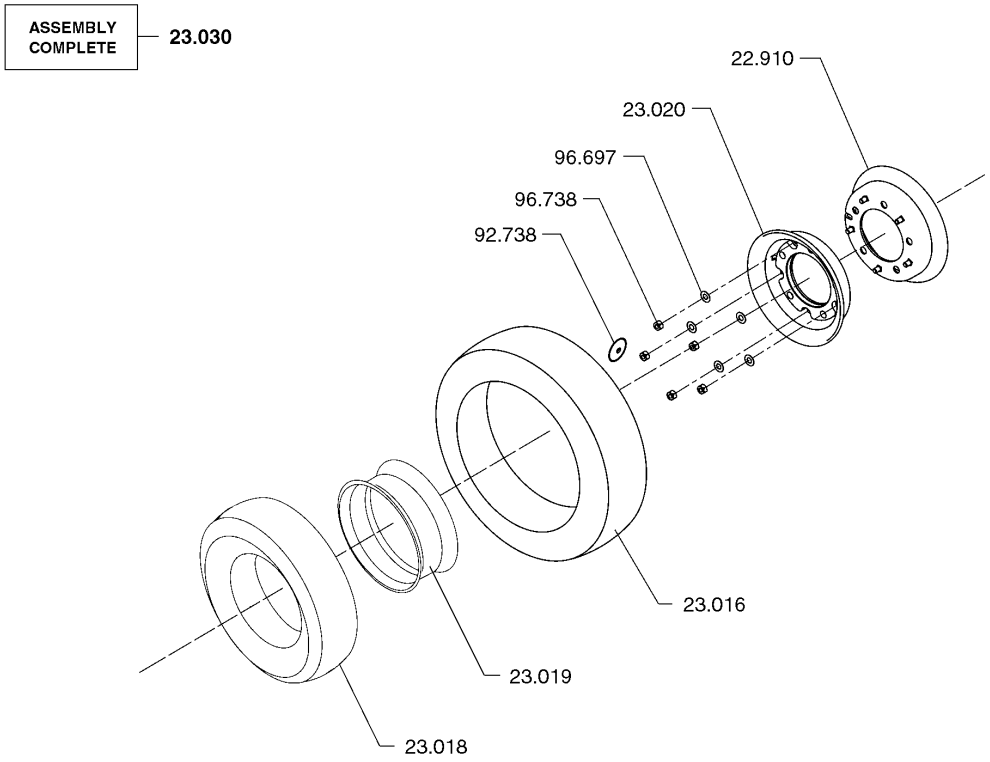

23-405

키이번호 key No.		부품명 Description
22.910	휠 조립체	Wheel Assembly, Drive
23.016	타이어	Tire, Drive Wheel
23.018	튜브	Tube, Drive Wheel
23.019	플랩	Flap, Drive Wheel Tube
23.020	휠 조립체	Wheel Assembly, Drive
23.030	휠 & 타이어	Drive Wheel And Tire Assembly
92.738	와셔	Washer, Drive Wheel Assembly Fastener
96.697	와셔	Washer, Drive Wheel Fastener
96.738	너트	Nut, Drive Wheel Mounting Fastener


STEER WHEEL & TIRE ASSY

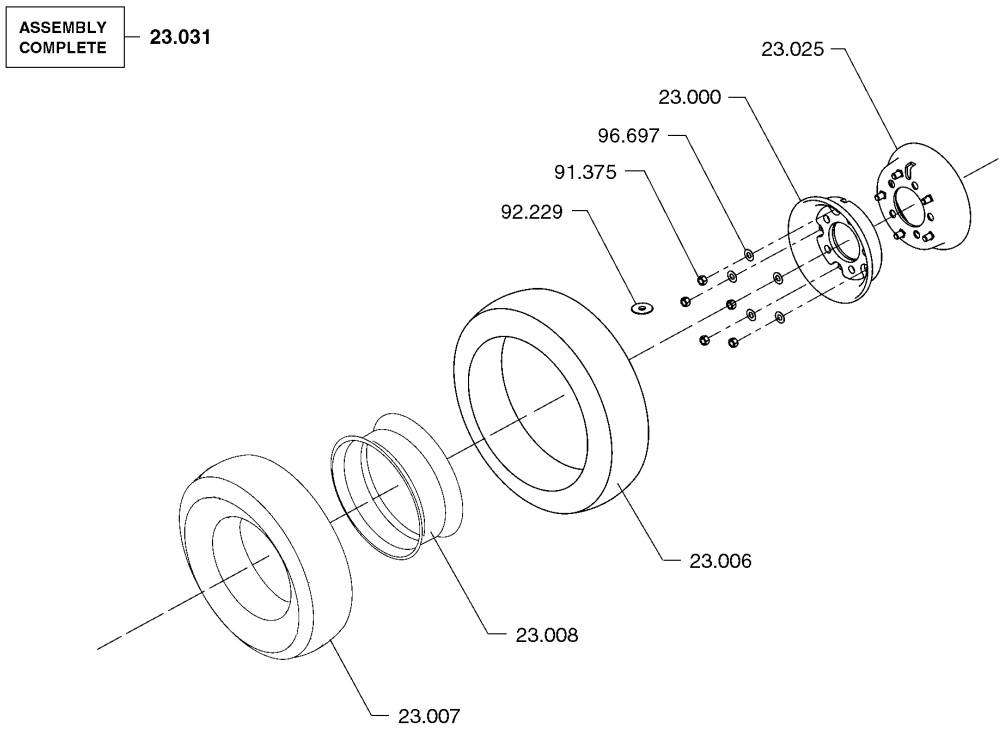

23-406

키이번호 key No.		부품명 Description
23.000	림 조립체	Rim Assembly, Steer Wheel
23.006	타이어	Tire, Steer Wheel
23.007	튜브	Tube, Steer Wheel
23.008	플랩	Flap, Steer Wheel
23.025	휠 조립체	Wheel Assembly, Steer
23.031	휠 & 타이어	Steer Wheel And Tire Assembly
91.375	너트	Nut, Steer Wheel Fastener
92.229	와셔	Washer, Steer Wheel Assembly Fastener
96.697	와셔	Washer, Drive Wheel Fastener


DRIVE WHEEL & TIRE ASSY

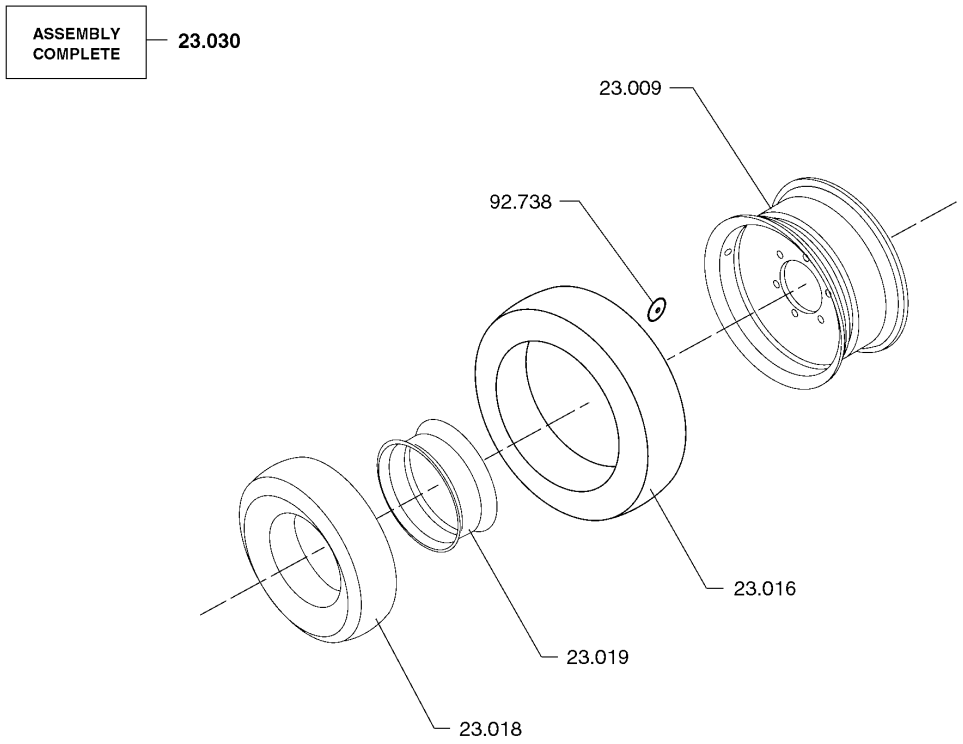

23-407

키이번호 key No.		부품명 Description
23.009	림 조립체	Rim Assembly, Drive Wheel
23.016	타이어	Tire, Drive Wheel
23.018	튜브	Tube, Drive Wheel
23.019	플랩	Flap, Drive Wheel Tube
23.030	휠 & 타이어	Drive Wheel And Tire Assembly
92.738	와셔	Washer, Drive Wheel Assembly Fastener


STEER WHEEL & TIRE ASSY

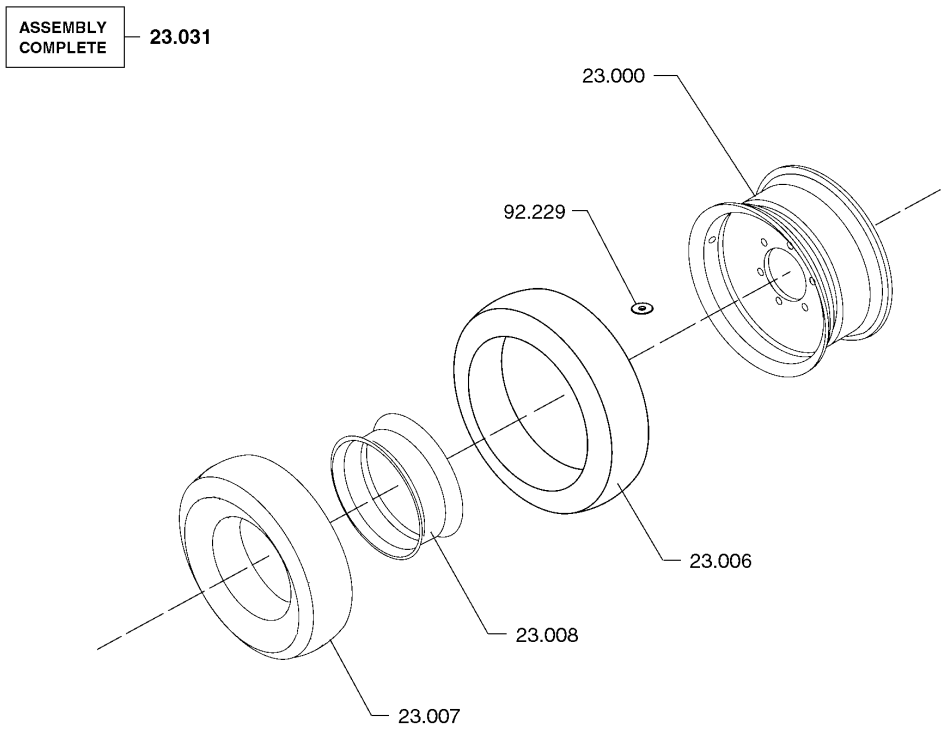

23-408

키이번호 key No.		부품명 Description
23.000	림 조립체	Rim Assembly, Steer Wheel
23.006	타이어	Tire, Steer Wheel
23.007	튜브	Tube, Steer Wheel
23.008	플랩	Flap, Steer Wheel
23.031	휠 & 타이어	Steer Wheel And Tire Assembly
92.229	와셔	Washer, Steer Wheel Assembly Fastener


PARKING BRAKE LINKAGE

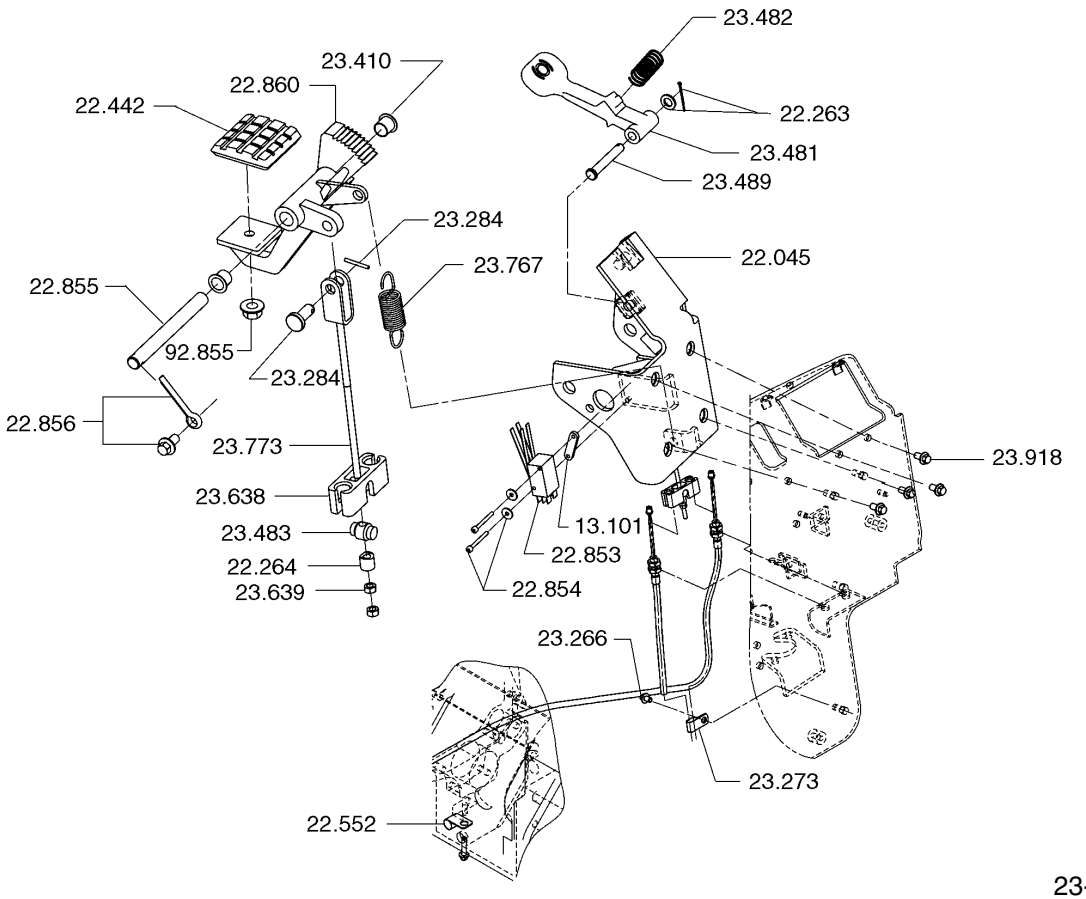

23-410

키이번호 key No.		부품명 Description
13.101	플레이트	Plate, Brake Lock Actuating Switch
22.045	브래킷	Bracket, Parking Brake Pedal Pivot Mtg
22.263	리테이너	Retainer, Parking Brake Release Lever Pivot
22.264	어드져스터	Adjustor, Parking Brake
22.442	패드	Pad, Parking Brake Pedal
22.552	클램프	Clamp, Parking Brake Cable
22.853	스위치	Switch, Parking Brake Pedal Actuating
22.854	패스너	Fastener, Parking Brake Pedal Actuating
22.855	피봇	Pivot, Parking Brake Pedal
22.856	리테이너	Retainer, Parking Brake Pedal Pivot
22.860	페달	Pedal, Parking Brake
23.266	패스너	Fastener, Parking Brake Cable Clamp
23.273	클램프	Clamp, Parking Brake Lever To Cable
23.284	패스너	Fastener, Parking Brake Cable Bracket
23.410	베어링	Bearing, Parking Brake Cam Roller
23.481	레버	Lever, Parking Brake Release
23.482	스프링	Spring, Parking Brake Release Lever
23.483	피봇	Pivot, Parking Brake Release Lever
23.489	피봇	Pivot, Parking Brake Release Lever
23.638	앵커	Anchor, Parking Brake Cable
23.639	패스너	Fastener, Parking Brake Cable Anchor
23.767	스프링	Spring, Parking Brake Draw
23.773	케이블	Cable, Parking Brake Wheel End
23.918	패스너	Fastener, Parking Brake Pedal Pivot Bracket
92.855	너트	Nut, Parking Brake Fastener


BRAKE & INCHING LINES

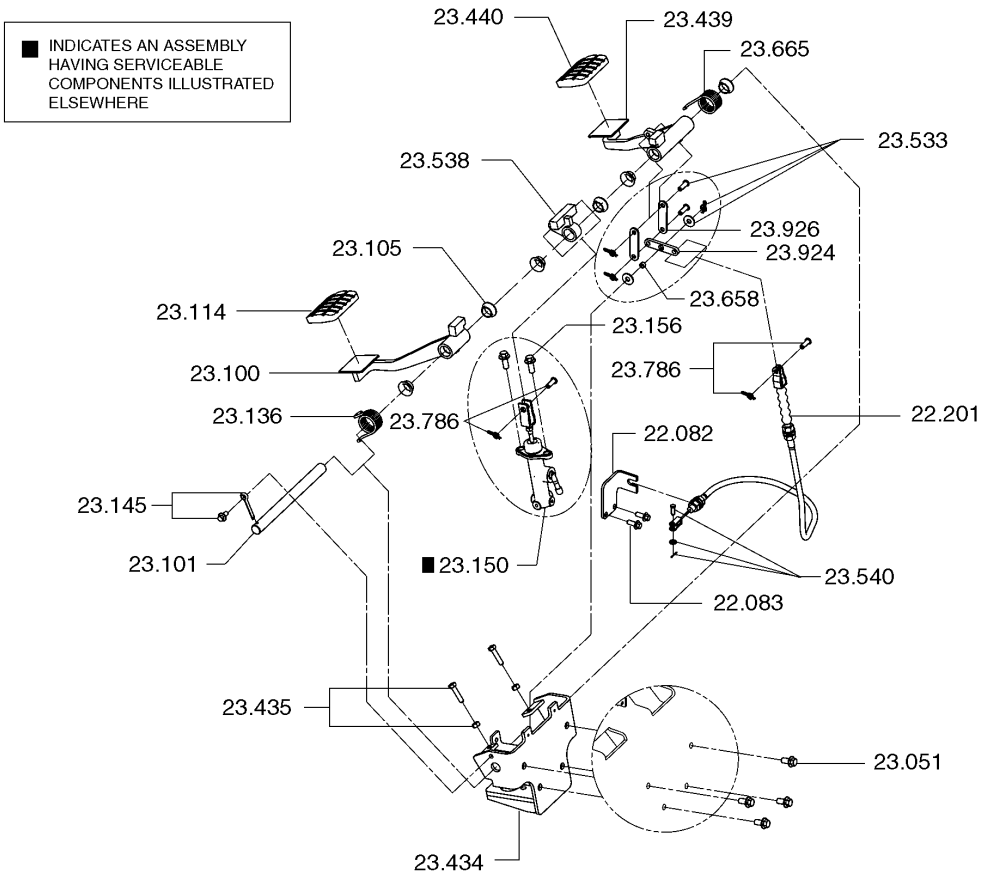

23-411

키이번호 key No.		부품명 Description
22.082	브래킷	Bracket, Brake Cable (Brake End)
22.083	패스너	Fastener, Brake Cable Bracket (Brake End)
22.201	케이블	Cable, Brake
23.051	패스너	Fastener, Master Cylinder Mounting Bracket
23.100	페달	Pedal, Brake
23.101	축	Shaft, Brake Pedal
23.105	베어링	Bearing, Brake Pedal
23.114	패드 & 패스너	Pad & Fastener, Brake Pedal
23.136	스프링	Spring, Brake Pedal Return Cont'd
23.145	패스너	Fastener, Brake Pedal Shaft
23.150	실린더 조립체	Cylinder Assembly, Brake Master Complete
23.156	패스너	Fastener, Cylinder & Tank Attaching
23.434	브래킷	Bracket, Brake Pedal Pivot
23.435	패스너	Fastener, Brake Pedal Pivot Bracket
23.439	페달	Pedal, Inching
23.440	패드 & 패스너	Pad & Fastener, Inching Pedal
23.533	패스너	Fastener, Brake Link Clevis
23.538	아암	Arm, Brake Linkage Pivot
23.540	패스너	Fastener, Brake Linkage Pivot Arm
23.658	베어링	Bearing, Brake Pedal Link
23.665	스프링	Spring, Inching Pedal Return
23.786	패스너	Fastener, Inching Brake Pedal
23.924	링크	Link, Brake Adjustor
23.926	링크	Link, Brake Adjustor


BRAKE MASTER CYLINDER

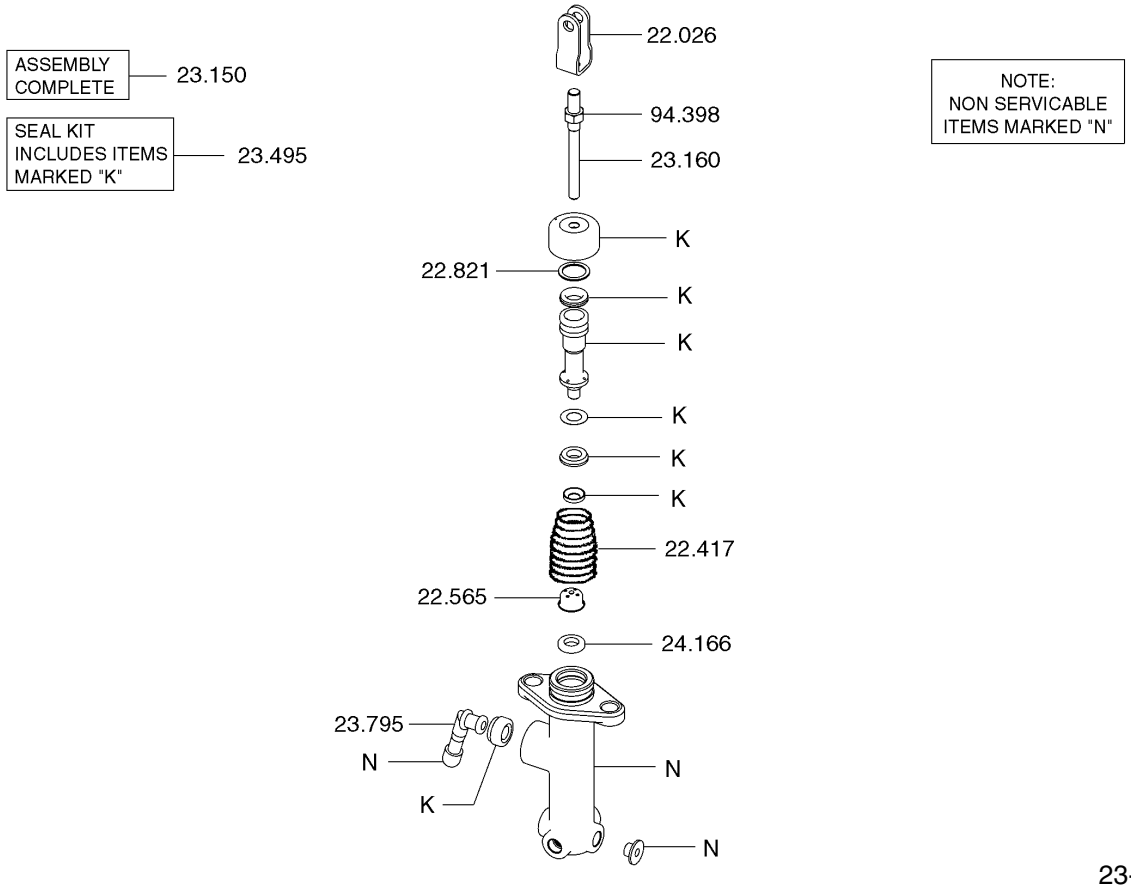

23-414

키이번호 key No.	부품명 Description	
22.026	로드 엔드	Rod End, Brake Pedal Linkage
22.417	스프링	Spring, Master Cylinder Piston Return
22.565	밸브 조립체	Valve Assy, Brake Energizer Assy
22.821	스냅 링	Snap Ring, Brk Energizer/Master Cyl Shaft Retaining
23.150	실린더 조립체	Cylinder Assembly, Brake Master Complete
23.160	로드	Rod, Push
23.495	시일 킷트	Seal Kit, Master Cylinder
23.795	피팅	Fitting, Brake Master Cylinder Inlet
24.166	시트	Seat, Brake Valve Piston Spring
94.398	너트	Nut, Brake Master Cylinder Actuating Rod Fastener

STEERING GEAR MOUNTING

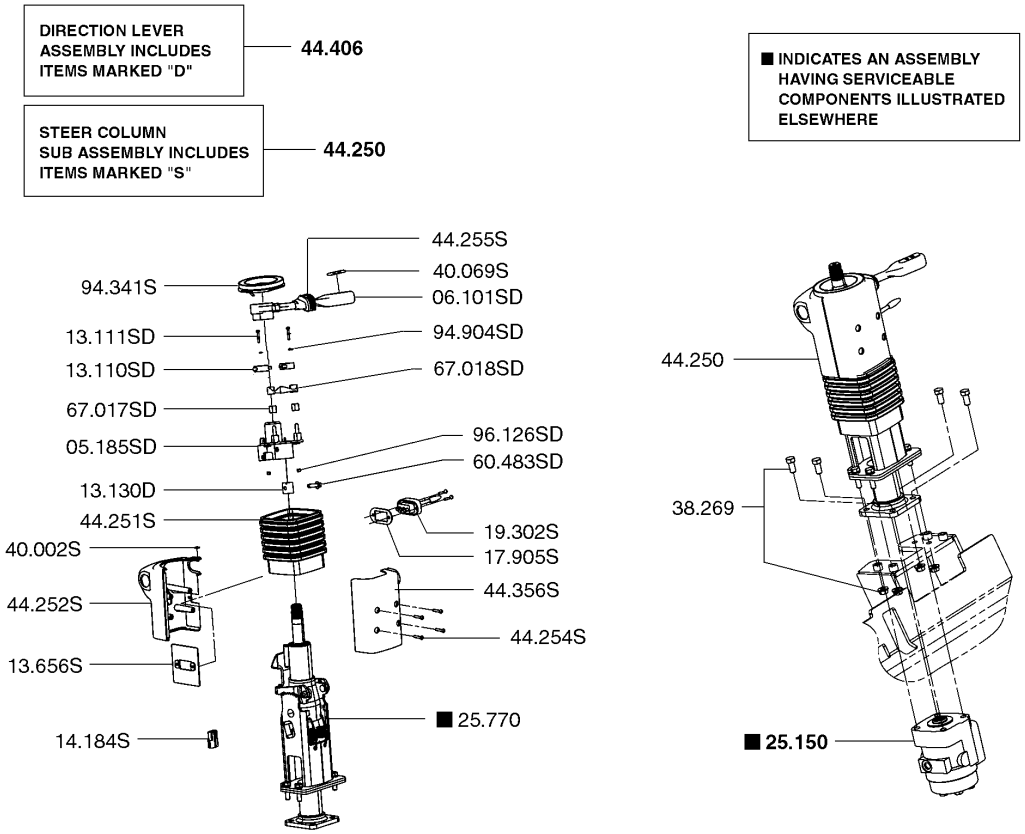

25-141

키이번호 key No.	부품명 Description	
05.185	베이스	Base, Directional Selector Lever
06.101	레버 조립체	Lever Assembly, Forward & Reverse
13.110	스위치	Switch, Directional Control (Forward)
13.111	패스너	Fastener, Directional Control Switch
13.130	패스너	Fastener, Direction Control Lever
13.656	브래킷	Bracket, Turn Indicator Switch
14.184	와이어	Wire, Warning Light Switch Feed
17.905	가스킷	Gasket, Direction Switch Mounting
19.302	액츄에이터	Actuator, Direction Switch
25.150	기어 박스 조립체	Gear Box Assembly, Steering
25.770	축 & 컬럼 조립체	Shaft & Column Assy, Power Steering (Tilt)
38.269	패스너	Fastener, Steering Column Support
40.002	범례	Legend, Shift Pattern
40.069	데칼	Decal, Forward-Back
44.250	방향 콘터롤	Directional Control Assembly
44.251	하우징	Housing, Directional Control Assembly
44.252	커버	Cover, Directional Control Assembly Housing
44.254	패스너	Fastener, Directional Control Assy Housing Cover
44.255	시일	Seal, Directional Control Assy Lever
44.356	커버	Cover, Directional Control Assembly Housing Rear
44.406	디렉션 레버 조립	Direction Lever Assy
60.483	리테이너	Retainer, Directional Control Lever
67.017	패스너	Fastener, Directional Control Detent Support
67.018	스프링	Spring, Directional Control Detent
94.341	패스너	Fastener, Horn Contact
94.904	와셔	Washer, Direction Control Switch Housing Fastener
96.126	너트	Nut, Direction Switch Fastener


STEERING UNIT

ASSEMBLY COMPLETE — 25.150

SEAL KIT INCLUDES ITEMS MARKED "K" — 25.630

NEEDLE BEARING KIT INCLUDES ITEMS MARKED "R" — 25.109


NOTE : NO SERVICEABLE ITEMS MARKED "N"

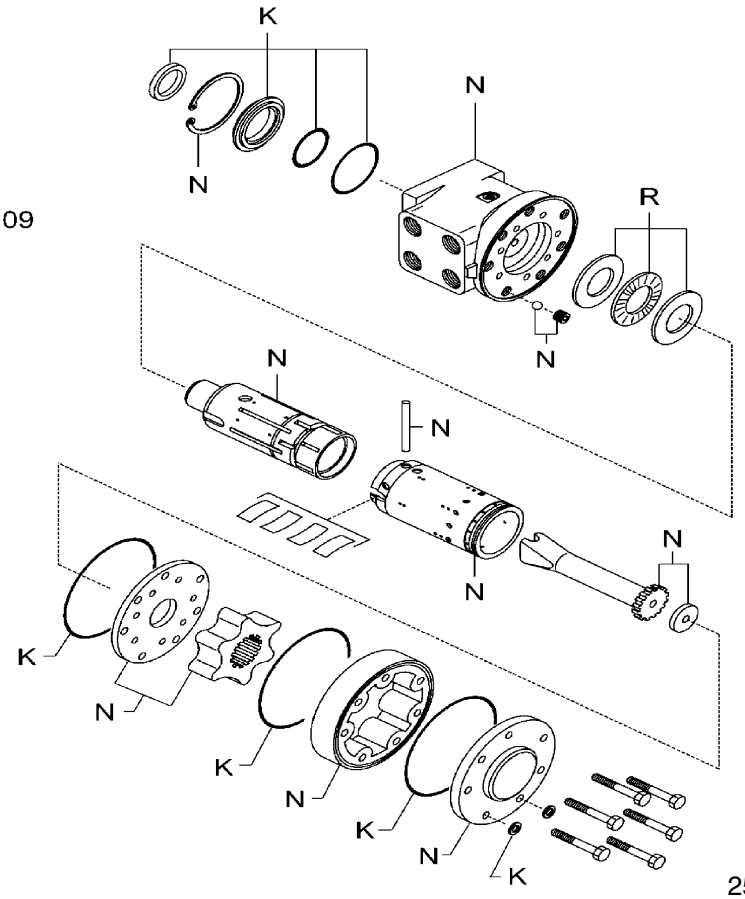

25-143

키이번호 key No.	부품명 Description	
25.109	킷트	Kit, Steer Gear Seal
25.150	기어 박스 조립체	Gear Box Assembly, Steering
25.630	수리 킷트	Repair Kit, Steering Column


STEERING COLUMN

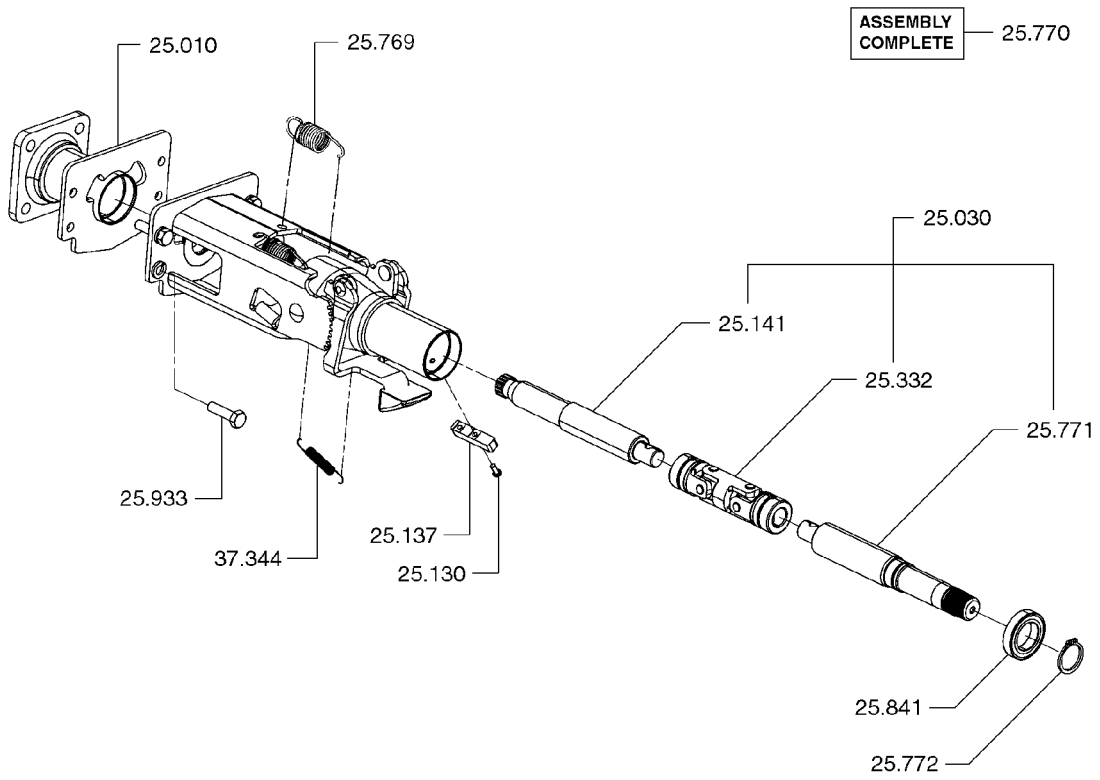

25-144

키이번호 key No.		부품명 Description
25.010	자켓	Jacket, Steering Column
25.030	축 조립체	Shaft Assembly, Steering Column
25.130	패스너	Fastener, Directional Assembly
25.137	키	Key, Directional Assembly
25.141	축	Shaft, Steering Gear
25.332	요크	Yoke, Steer Universal Joint Clamp
25.769	스프링	Spring, Steering Column Tilting (Lower)
25.770	축 & 컬럼 조립체	Shaft & Column Assy, Power Steering (Tilt)
25.771	축	Shaft, Steering Column (Tilt)
25.772	리테이너	Retainer, Steering Column Shaft
25.841	부싱	Bushing, Steering Gear Shaft
25.933	패스너	Fastener, Steering Column
37.344	스프링	Spring, Steering Column Tilting


STEERING HANDWHEEL

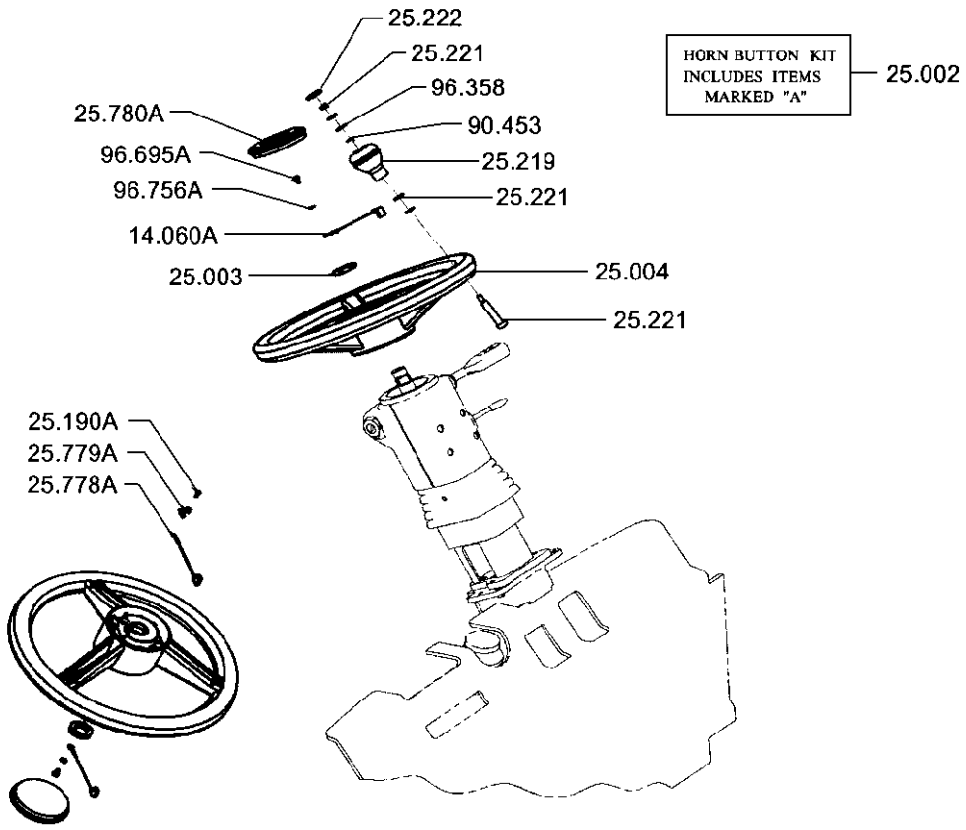

25-250

키이번호 key No.		부품명 Description
14.060	와이어	Wire, Horn Button Term To Connector
25.002	혼 버튼 킷트	Horn Button Kit
25.003	너트	Nut, Handwheel
25.004	핸드 휠	Hand Wheel, Steering Gear
25.190	패스너	Fastener, Horn Button
25.219	노브	Knob, Steering Hand Wheel Spinner
25.221	패스너	Fastener, Steering Spinner Knob
25.222	플러그	Plug, Steering Spinner Knob
25.778	와이어	Wire, Contact Horn
25.779	컨택트	Contact, Horn
25.780	혼 버튼	Horn Button
90.453	와셔	Washer, Steering Spinner Knob Fastener
96.358	와셔	Washer, Steering Handwheel Spinner Knob Fastener
96.695	패스너	Fastener, Wire Mounting
96.756	와셔	Washer, Wire Mounting Fastener


STEERING LINES

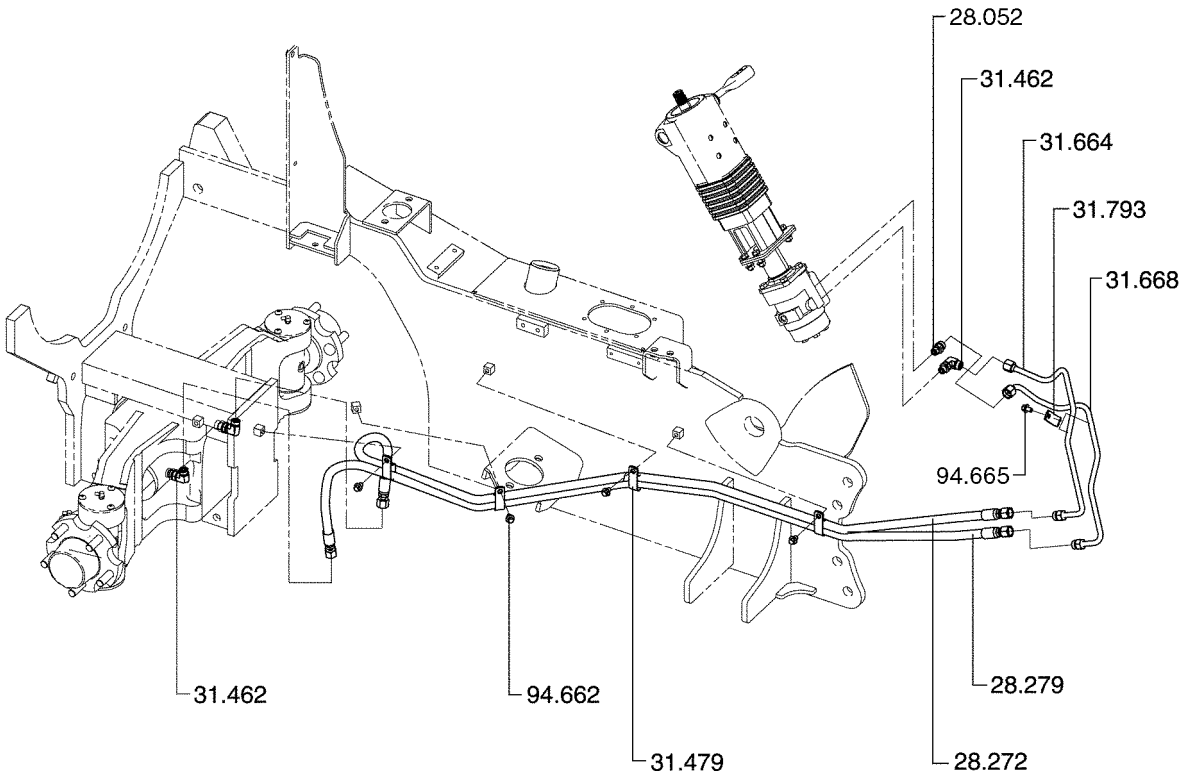

키이번호 key No.		부품명 Description
28.052	피팅	Fitting, Steering Gear
28.272	라인	Line, Steer Cylinder Inlet
28.279	라인	Line, Steer Cylinder Inlet
31.462	시일	Seal, Steer Valve Outlet Port
31.479	클램프	Clamp, Steering Lines
31.664	라인	Line, Steering Cylinder Anchor Port
31.668	라인	Line, Steering Cylinder Rod Port
31.793	클램프	Clamp, Power Steering Lines
94.662	패스너	Fastener, Power Steering Lines Clamp
94.665	패스너	Fastener, Power Steering Lines Clamp

STEER AXLE MOUNTING


■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

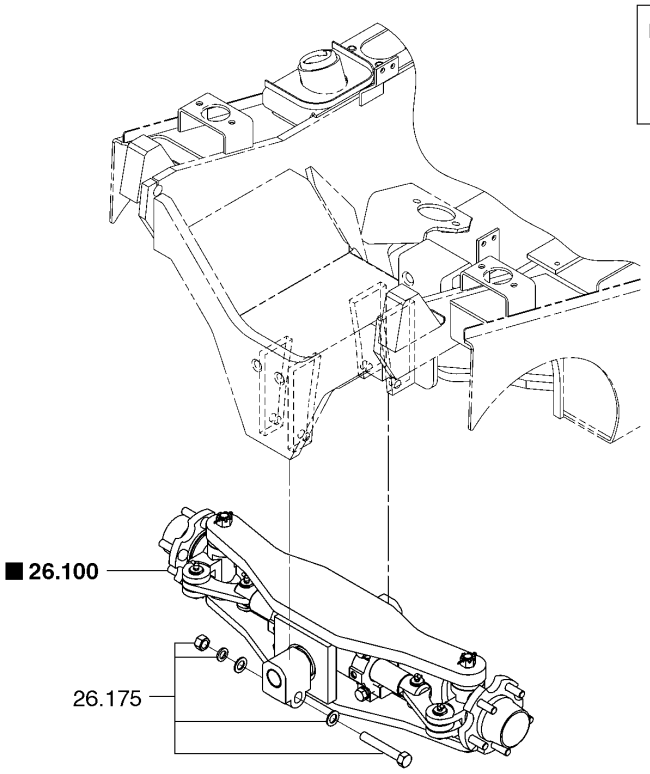

26-202

키이번호 key No.	부품명 Description	
26.100	조향액슬 조립체	Axle Assembly, Steering
26.175	패스너	Fastener, Silent Block To Frame (Rear)


STEERING AXLE

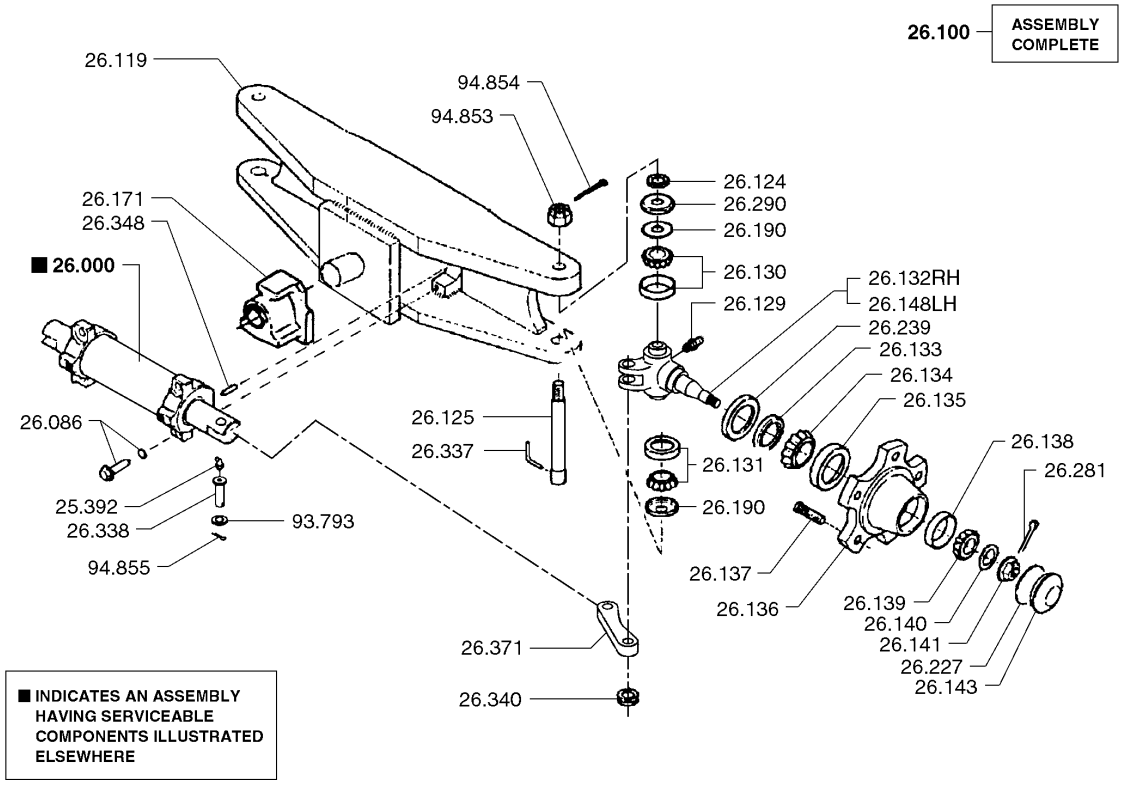

26-211

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
25.392	피팅	Fitting-Lub, Steering Arm	26.141	패스너	Fastener, Steer Wheel Hub
26.000	실린더 조립체	Cylinder Assembly, Steering	26.143	캡	Cap, Steer Wheel Hub
26.086	패스너	Fastener, Steering Cylinder Anchor End	26.148	너클	Knuckle, Steer Axle Lh
26.100	조향액슬 조립체	Axle Assembly, Steering	26.171	사일런트 블록	Silent Block, Axle Mounting (Front)
26.119	액슬	Axle, Steer	26.190	시일	Seal, Steer Axle Knuckle Oil
26.124	심	Shim, Steer Axle Knuckle	26.227	시일	Seal, Steer Axle Fork Housing
26.125	핀	Pin, Steer Axle Knuckle	26.239	시일	Seal, Steer Axle Fork Cover
26.129	피팅 - 윤활	Fitting - Lub, Steer Axle Knuckle	26.281	리테이너	Retainer, Steer Axle Hub Brg Knuckle Nut
26.130	베어링	Bearing, Steer Axle Knuckle Pin Upper	26.290	리테이너	Retainer, Steer Axle Knuckle Pin Lower Bearing
26.131	베어링	Bearing, Steer Axle Knuckle Pin Lower	26.337	로케이터	Locator, Steer Axle Knuckle Pin
26.132	너클	Knuckle, Steer Axle	26.338	핀	Pin, Steering Arm
26.133	시일	Seal, Steer Wheel Hub	26.340	베어링	Bearing, Steering Arm Pin
26.134	콘	Cone, Steer Wheel Hub Bearing (Inner)	26.348	로케이터	Locator, Steer Cylinder
26.135	컵	Cup, Steer Wheel Hub Bearing (Inner)	26.371	타이로드 조립체	Tie Rod Assy Complete, Steer Axle
26.136	허브 & 컵	Hub & Cup, Steer Wheel	93.793	와셔	Washer, Steering Arm Pivot Fastener
26.137	패스너	Fastener, Steer Wheel	94.853	패스너	Fastener, Steer Axle Knuckle Pin
26.138	컵	Cup, Steer Wheel Hub Bearing (Outer)	94.854	코터	Cotter, Steer Axle Knuckle Pin Fastener
26.139	콘	Cone, Steer Wheel Hub Bearing (Outer)	94.855	리테이너	Retainer, Steering Arm Pin
26.140	와셔	Washer, Steer Wheel Hub Bearing Thrust			


HYDRAULIC LINES (RETURN)

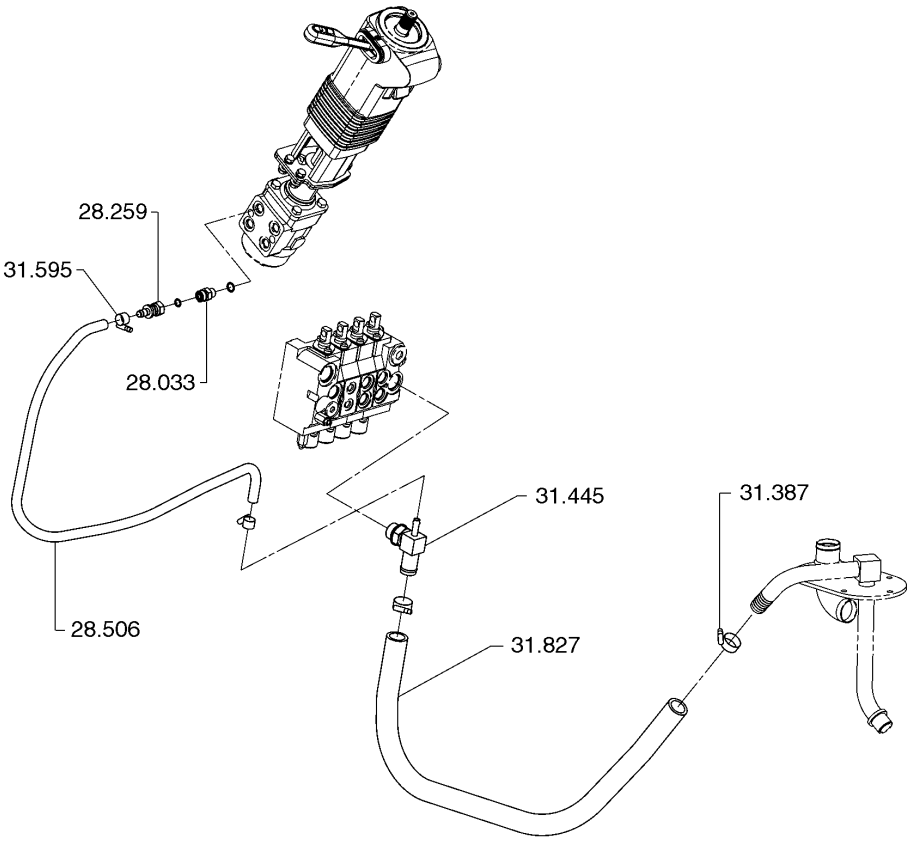

26-225

키이번호 key No.		부품명 Description
28.033	피팅	Fitting, Sump Return
28.259	피팅	Fitting, Sump Return Line
28.506	라인	Line, Sump Return
31.387	클램프	Clamp, Main Valve To Sump Line
31.445	피팅	Fitting, Main Valve To Filter Line
31.595	클램프	Clamp, Sump Return Line Fitting
31.827	라인	Line, Filter Inlet


STEER CYLINDER

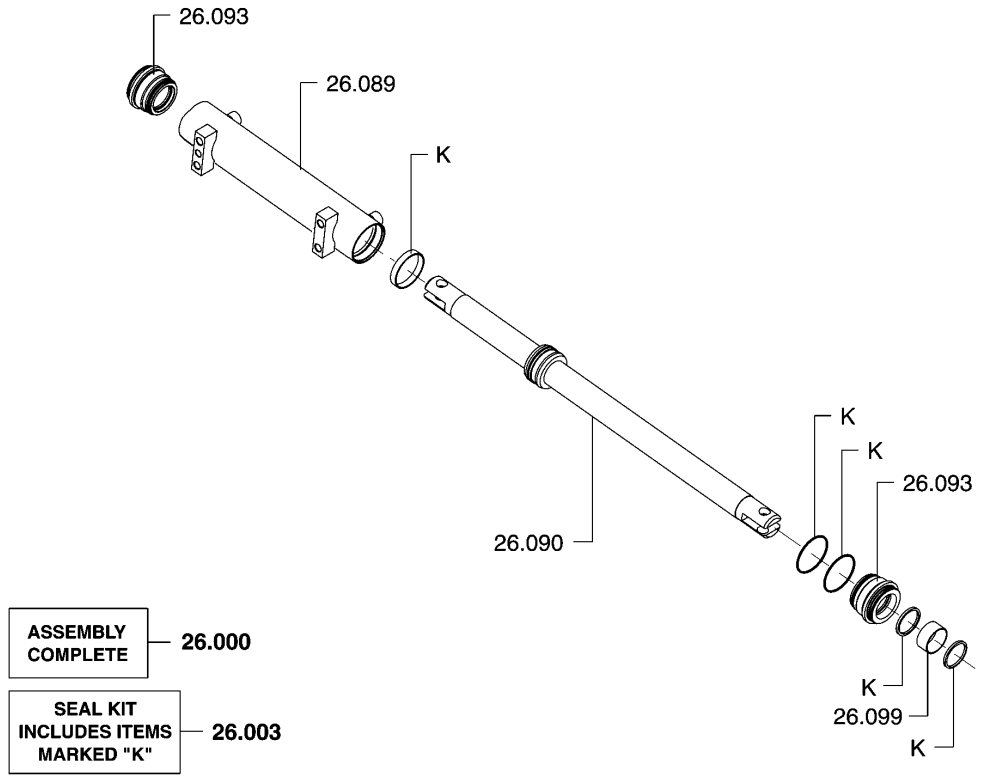

26-274

키이번호 key No.		부품명 Description
26.000	실린더 조립체	Cylinder Assembly, Steering
26.003	시일 킷트	Seal Kit, Piston Rod
26.089	배럴	Barrel, Steering Cylinder
26.090	로드 & 피스톤	Rod & Piston Assembly, Steering Cylinder
26.093	글랜드	Gland, Steering Cylinder
26.099	부싱	Bushing, Steering Cylinder Gland


HYDRAULIC SUMP (OPTION)

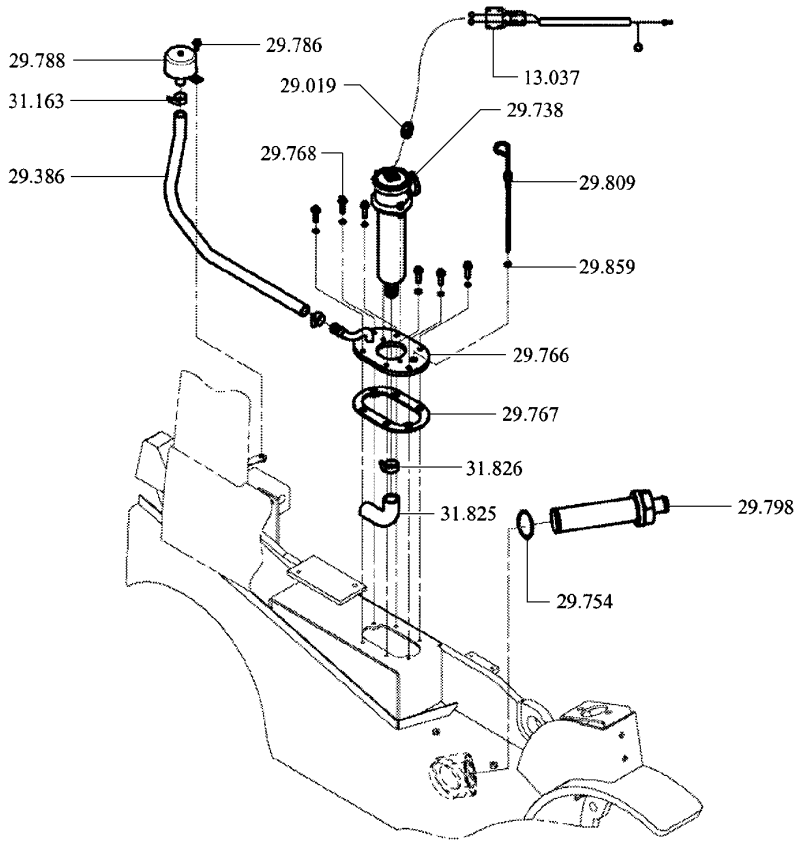

29-144


키이번호 key No.		부품명 Description
13.037	배선	Harness, Filter
29.019	표시기	Indicator, Hydraulic Oil Filter
29.386	라인	Line, Sump Breather
29.738	필터 조립체	Filter Assembly, Hydraulic Sump
29.754	시일	Seal, Hydraulic Sump Filter Screen
29.766	커버	Cover, Sump Tank
29.767	시일	Seal, Sump Tank Cover
29.768	패스너	Fastener, Sump Tank Cover
29.786	패스너	Fastener, Sump Breather
29.788	브리더	Breather, Sump
29.798	스크린	Screen, Hydraulic Sump Pre Filter
29.809	딥스틱	Dipstick, Sump Level
29.859	시일	Seal, Dipstick Sump Level Adaptor
31.163	클램프	Clamp, Sump Return Line
31.825	라인	Line, Filter Inlet
31.826	클램프	Clamp, Filter Inlet Line

HYDRAULIC PUMP

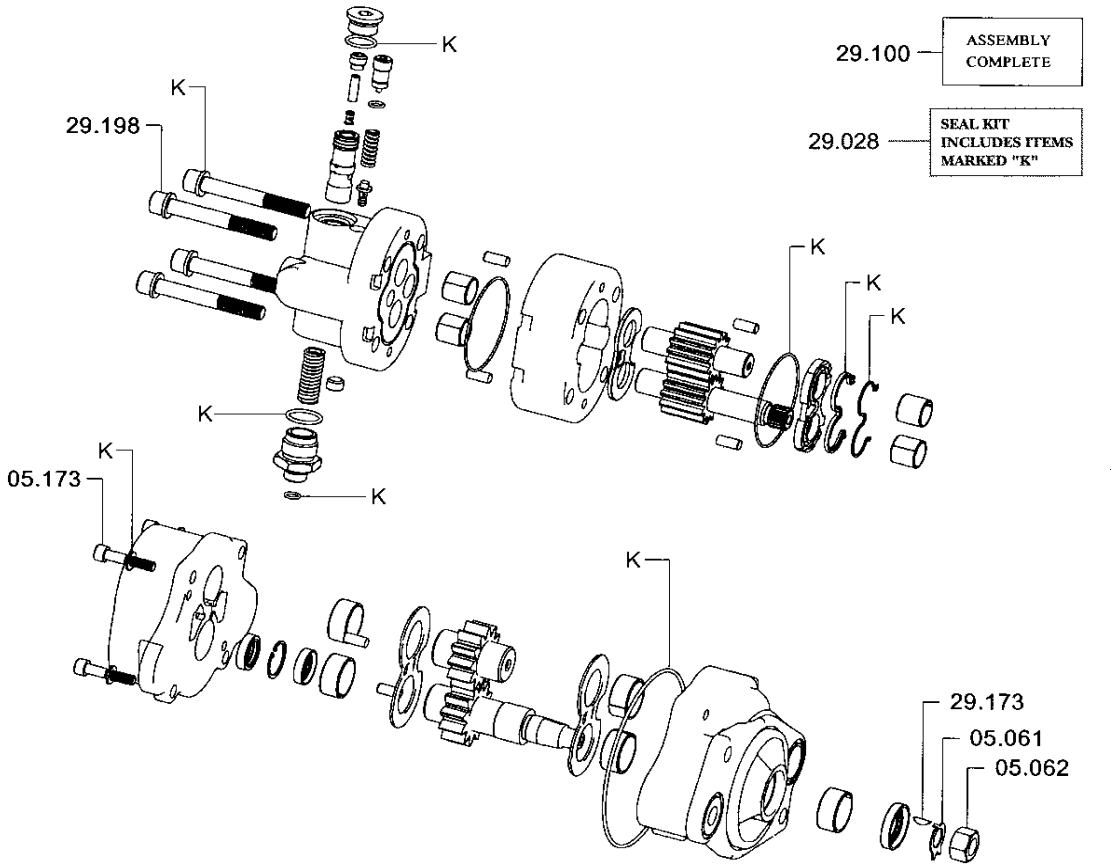

키이번호 key No.		부품명 Description
05.061	링 - 리테이닝	Ring-Retaining, Bearing Locating
05.062	링 - 리테이닝	Ring-Retaining, Pump Shaft Bearing
05.173	패스너	Fastener, Converter Pump Cover
29.028	시일 킷트	Seal Kit, Hydraulic Unit Pump
29.100	펌프 조립체	Pump Assembly, Hydraulic
29.173	키	Key, Pump Gear
29.198	패스너	Fastener, Pump Housing


HYDRAULIC SUMP

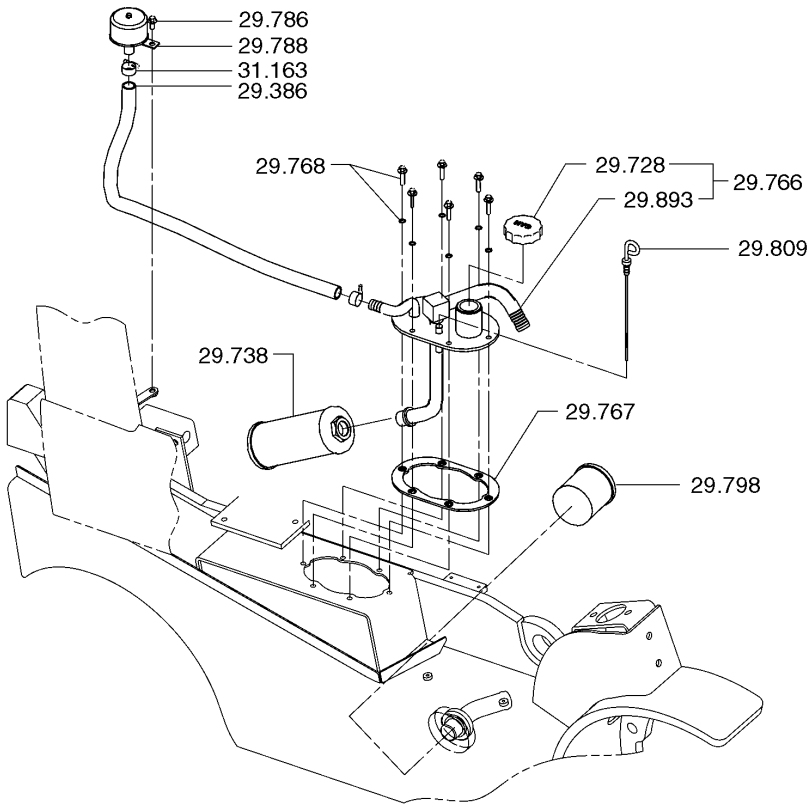

29-237

키이번호 key No.		부품명 Description
29.386	라인	Line, Sump Breather
29.728	캡	Cap, Hydraulic Sump Filler
29.738	필터 조립체	Filter Assembly, Hydraulic Sump
29.766	커버	Cover, Sump Tank
29.767	시일	Seal, Sump Tank Cover
29.768	패스너	Fastener, Sump Tank Cover
29.786	패스너	Fastener, Sump Breather
29.788	브리더	Breather, Sump
29.798	스크린	Screen, Hydraulic Sump Pre Filter
29.809	딥스틱	Dipstick, Sump Level
29.893	플레이트	Plate, Hydraulic Sump
31.163	클램프	Clamp, Sump Return Line


MAIN CONTROL VALVE - 2SPOOL (OPTION)

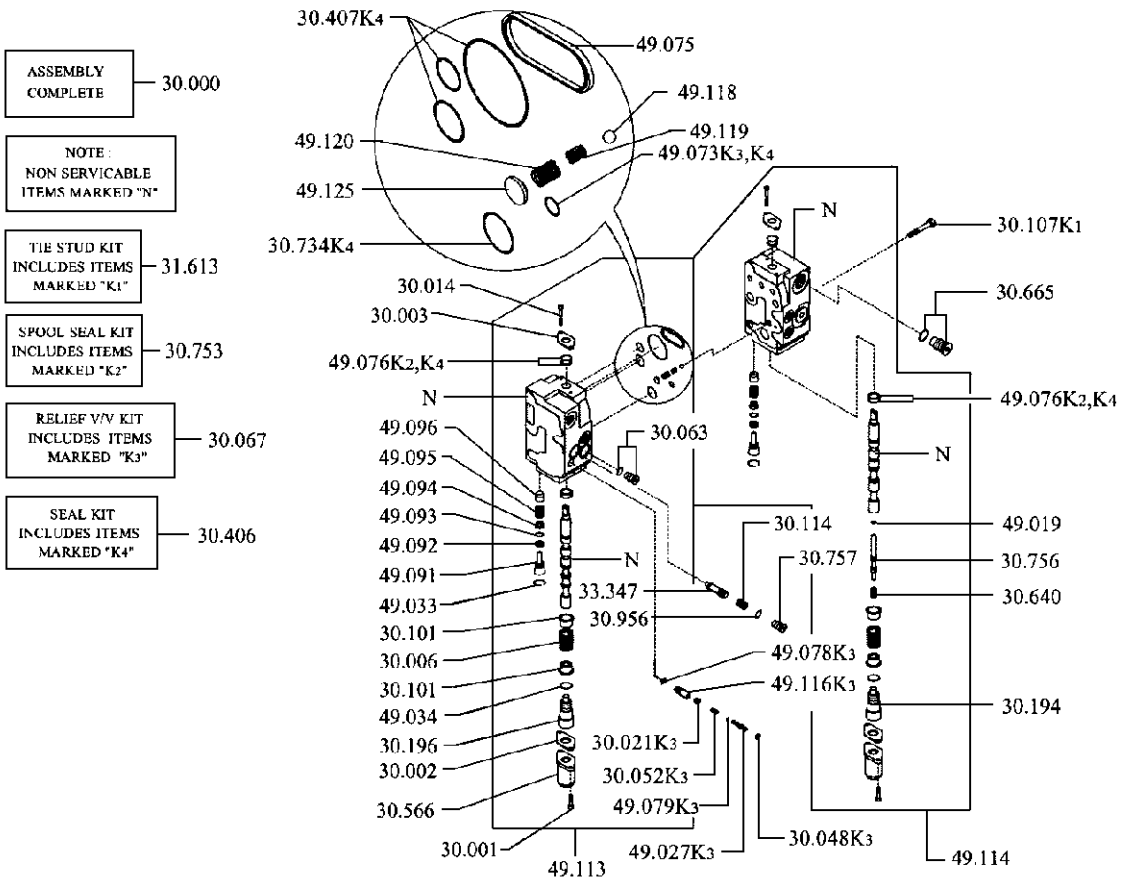

30-128

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
30.000	밸브 조립체	Valve Assembly, Hydraulic	30.956	시일	Seal, Relief Valve Plug
30.001	패스너	Fastener, Spring Cover	31.613	타이 스터드 킷트	Tie Stud Kit, Hydraulic Valve
30.002	커버	Cover, Spool Centering Spring	33.347	릴리프 밸브	Relief Valve, Lift Line Check Valve
30.003	리테이너	Retainer, Valve Spool Lower Seal	49.019	시일	Seal, Hydraulic Valve Spool Eye
30.006	스프링	Spring, Valve Spool Centering	49.027	스프링	Spring, Hydraulic Valve Bank
30.014	패스너	Fastener, Spool Wiper Retainer	49.033	시일	Seal, Hydraulic Valve Bank
30.021	포펫	Poppet, Relief	49.034	시일	Seal, Hydraulic Valve Bank
30.048	패스너	Fastener, Spool Wiper Retainer	49.073	시일	Seal, Valve Inlet Section Check Valve Ball
30.052	스프링	Spring, Relief Valve	49.075	리테이너	Retainer, Hydraulic Valve Section Seal
30.063	플러그	Plug, Inlet Section Pressure Port	49.076	시일	Seal, Main Hydraulic Valve Inlet Section
30.067	릴리프 밸브 킷트	Relief Valve Kit, Valve Inlet Section	49.078	시일	Seal, Main Hydraulic Valve Inlet Section
30.101	리테이너	Retainer, Spool Centering Spring	49.079	시일	Seal, Main Hydraulic Valve Inlet Section
30.107	패스너	Fastener, Valve Thru	49.091	어드져스터	Adjustor, Main Valve Flow Control
30.114	스프링	Spring, Valve Outlet Section Check Valve	49.092	시일	Seal, Main Valve Flow Control Back-Up
30.194	패스너	Fastener, Spool Centering Spring Guide	49.093	시일	Seal, Main Valve Flow Control Adjustor
30.196	패스너	Fastener, Spool Centering Spring Guide	49.094	시일	Seal, Main Valve Flow Control Adjustor Relief
30.406	시일 킷트	Seal Kit, Hydraulic Valve	49.095	스프링	Spring, Main Valve Flow Control Adjustor Relief Seat
30.407	시일	Seal, Tilt Valve Spool	49.096	포펫	Poppet, Main Valve Flow Control Adjustor Relief Seat
30.566	더스트 시일드	Dust Shield, Hydraulic Valve Spool	49.113	리프트 섹션	Lift Section, Hydraulic Valve
30.640	스프링	Spring, Valve Spool Poppet	49.114	틸트 섹션	Tilt Section, Hydraulic Valve
30.665	플러그	Plug, Inlet Section Pressure Port	49.116	플러그	Plug, Valve Lift Section
30.734	시일	Seal, Valve Outlet Section (Rear)	49.118	볼	Ball, Valve Section Check Valve
30.753	스풀 시일 킷트	Spool Seal Kit	49.119	스프링	Spring, Valve Section Check Valve
30.756	플로우 콘트롤	Flow Control, Hydraulic Valve Tilt Section	49.120	스프링	Spring, Valve Section Check Valve
30.757	플러그	Plug, Hydraulic Valve Check Valve	49.125	플러그	Plug, Valve Aux Section


MAIN CONTROL VALVE - 3SPOOL (OPTION)

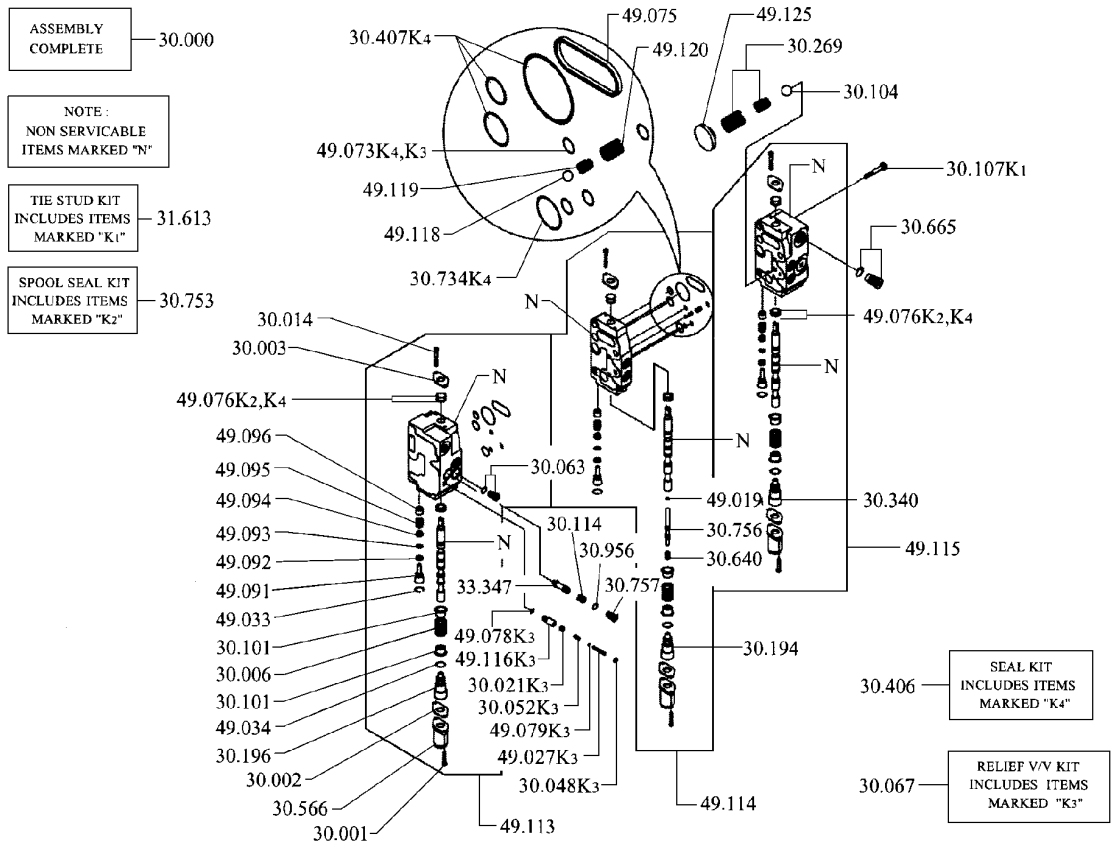

30-129

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
30.000	밸브 조립체	Valve Assembly, Hydraulic	30.757	플러그	Plug, Hydraulic Valve Check Valve
30.001	패스너	Fastener, Spring Cover	30.956	시일	Seal, Relief Valve Plug
30.002	커버	Cover, Spool Centering Spring	31.613	타이 스터드 킷트	Tie Stud Kit, Hydraulic Valve
30.003	리테이너	Retainer, Valve Spool Lower Seal	33.347	릴리프 밸브	Relief Valve, Lift Line Check Valve
30.006	스프링	Spring, Valve Spool Centering	49.019	시일	Seal, Hydraulic Valve Spool Eye
30.014	패스너	Fastener, Spool Wiper Retainer	49.027	스프링	Spring, Hydraulic Valve Bank
30.021	포펫	Poppet, Relief	49.033	시일	Seal, Hydraulic Valve Bank
30.048	패스너	Fastener, Spool Wiper Retainer	49.034	시일	Seal, Hydraulic Valve Bank
30.052	스프링	Spring, Relief Valve	49.073	시일	Seal, Valve Inlet Section Check Valve Ball
30.063	플러그	Plug, Inlet Section Pressure Port	49.075	리테이너	Retainer, Hydraulic Valve Section Seal
30.067	릴리프 밸브 킷트	Relief Valve Kit, Valve Inlet Section	49.076	시일	Seal, Main Hydraulic Valve Inlet Section
30.101	리테이너	Retainer, Spool Centering Spring	49.078	시일	Seal, Main Hydraulic Valve Inlet Section
30.104	볼	Ball, Valve Inlet Section Check Valve	49.079	시일	Seal, Main Hydraulic Valve Inlet Section
30.107	패스너	Fastener, Valve Thru	49.091	어드져스터	Adjustor, Main Valve Flow Control
30.114	스프링	Spring, Valve Outlet Section Check Valve	49.092	시일	Seal, Main Valve Flow Control Back-Up
30.194	패스너	Fastener, Spool Centering Spring Guide	49.093	시일	Seal, Main Valve Flow Control Adjustor
30.196	패스너	Fastener, Spool Centering Spring Guide	49.094	시일	Seal, Main Valve Flow Control Adjustor Relief
30.269	스프링	Spring, Auxiliary Inlet Section Check Valve	49.095	스프링	Spring, Main Valve Flow Control Adjustor Relief Seat
30.340	패스너	Fastener, Aux Valve Spool Wiper Retainer	49.096	포펫	Poppet, Main Valve Flow Control Adjustor Relief Seat
30.406	시일 킷트	Seal Kit, Hydraulic Valve	49.113	리프트 섹션	Lift Section, Hydraulic Valve
30.407	시일	Seal, Tilt Valve Spool	49.114	틸트 섹션	Tilt Section, Hydraulic Valve
30.566	더스트 시일드	Dust Shield, Hydraulic Valve Spool	49.115	보조밸브 섹션	Aux Section, Hydraulic Valve
30.640	스프링	Spring, Valve Spool Poppet	49.116	플러그	Plug, Valve Lift Section
30.665	플러그	Plug, Inlet Section Pressure Port	49.118	볼	Ball, Valve Section Check Valve
30.734	시일	Seal, Valve Outlet Section (Rear)	49.119	스프링	Spring, Valve Section Check Valve
30.753	스풀 시일 킷트	Spool Seal Kit	49.120	스프링	Spring, Valve Section Check Valve
30.756	플로우 콘트롤	Flow Control, Hydraulic Valve Tilt Section	49.125	플러그	Plug, Valve Aux Section


MAIN CONTROL VALVE - 4SPOOL (OPTION)

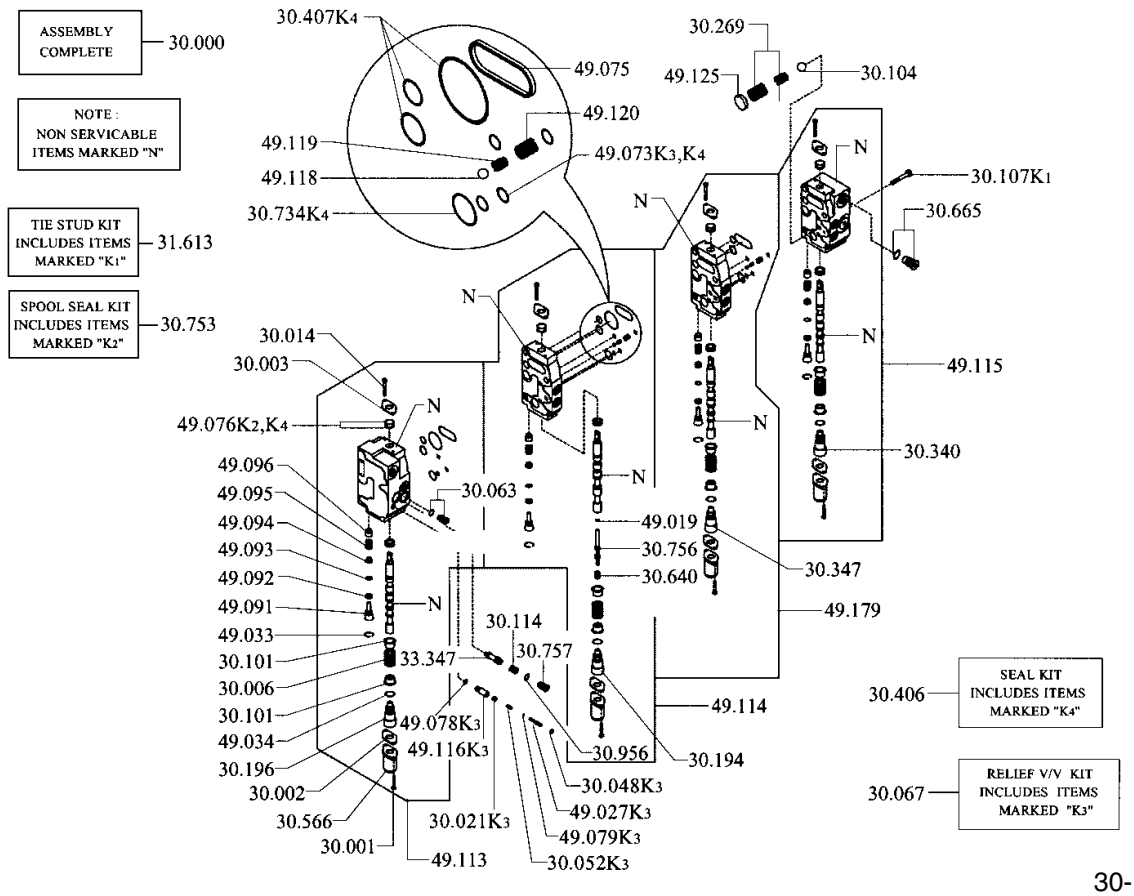

30-130

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
30.000	밸브 조립체	Valve Assembly, Hydraulic	30.757	플러그	Plug, Hydraulic Valve Check Valve
30.001	패스너	Fastener, Spring Cover	30.956	시일	Seal, Relief Valve Plug
30.002	커버	Cover, Spool Centering Spring	31.613	타이 스터드 킷트	Tie Stud Kit, Hydraulic Valve
30.003	리테이너	Retainer, Valve Spool Lower Seal	33.347	릴리프 밸브	Relief Valve, Lift Line Check Valve
30.006	스프링	Spring, Valve Spool Centering	49.019	시일	Seal, Hydraulic Valve Spool Eye
30.014	패스너	Fastener, Spool Wiper Retainer	49.027	스프링	Spring, Hydraulic Valve Bank
30.021	포펫	Poppet, Relief	49.033	시일	Seal, Hydraulic Valve Bank
30.048	패스너	Fastener, Spool Wiper Retainer	49.034	시일	Seal, Hydraulic Valve Bank
30.052	스프링	Spring, Relief Valve	49.073	시일	Seal, Valve Inlet Section Check Valve Ball
30.063	플러그	Plug, Inlet Section Pressure Port	49.075	리테이너	Retainer, Hydraulic Valve Section Seal
30.067	릴리프 밸브 킷트	Relief Valve Kit, Valve Inlet Section	49.076	시일	Seal, Main Hydraulic Valve Inlet Section
30.101	리테이너	Retainer, Spool Centering Spring	49.078	시일	Seal, Main Hydraulic Valve Inlet Section
30.104	볼	Ball, Valve Inlet Section Check Valve	49.079	시일	Seal, Main Hydraulic Valve Inlet Section
30.107	패스너	Fastener, Valve Thru	49.091	어드져스터	Adjustor, Main Valve Flow Control
30.114	스프링	Spring, Valve Outlet Section Check Valve	49.092	시일	Seal, Main Valve Flow Control Back-Up
30.194	패스너	Fastener, Spool Centering Spring Guide	49.093	시일	Seal, Main Valve Flow Control Adjustor
30.196	패스너	Fastener, Spool Centering Spring Guide	49.094	시일	Seal, Main Valve Flow Control Adjustor Relief
30.269	스프링	Spring, Auxiliary Inlet Section Check Valve	49.095	스프링	Spring, Main Valve Flow Control Adjustor Relief Seat
30.340	패스너	Fastener, Aux Valve Spool Wiper Retainer	49.096	포펫	Poppet, Main Valve Flow Control Adjustor Relief Seat
30.347	패스너	Fastener, Aux Valve Spool Wiper Retainer	49.113	리프트 섹션	Lift Section, Hydraulic Valve
30.406	시일 킷트	Seal Kit, Hydraulic Valve	49.114	틸트 섹션	Tilt Section, Hydraulic Valve
30.407	시일	Seal, Tilt Valve Spool	49.115	보조밸브 섹션	Aux Section, Hydraulic Valve
30.566	더스트 시일드	Dust Shield, Hydraulic Valve Spool	49.116	플러그	Plug, Valve Lift Section
30.640	스프링	Spring, Valve Spool Poppet	49.118	볼	Ball, Valve Section Check Valve
30.665	플러그	Plug, Inlet Section Pressure Port	49.119	스프링	Spring, Valve Section Check Valve
30.734	시일	Seal, Valve Outlet Section (Rear)	49.120	스프링	Spring, Valve Section Check Valve
30.753	스풀 시일 킷트	Spool Seal Kit	49.125	플러그	Plug, Valve Aux Section
30.756	플로우 콘트롤	Flow Control, Hydraulic Valve Tilt Section	49.179	보조밸브섹션	Aux Section, Hydraulic Valve


VALVE CONTROL LINKAGE-2SPOOL

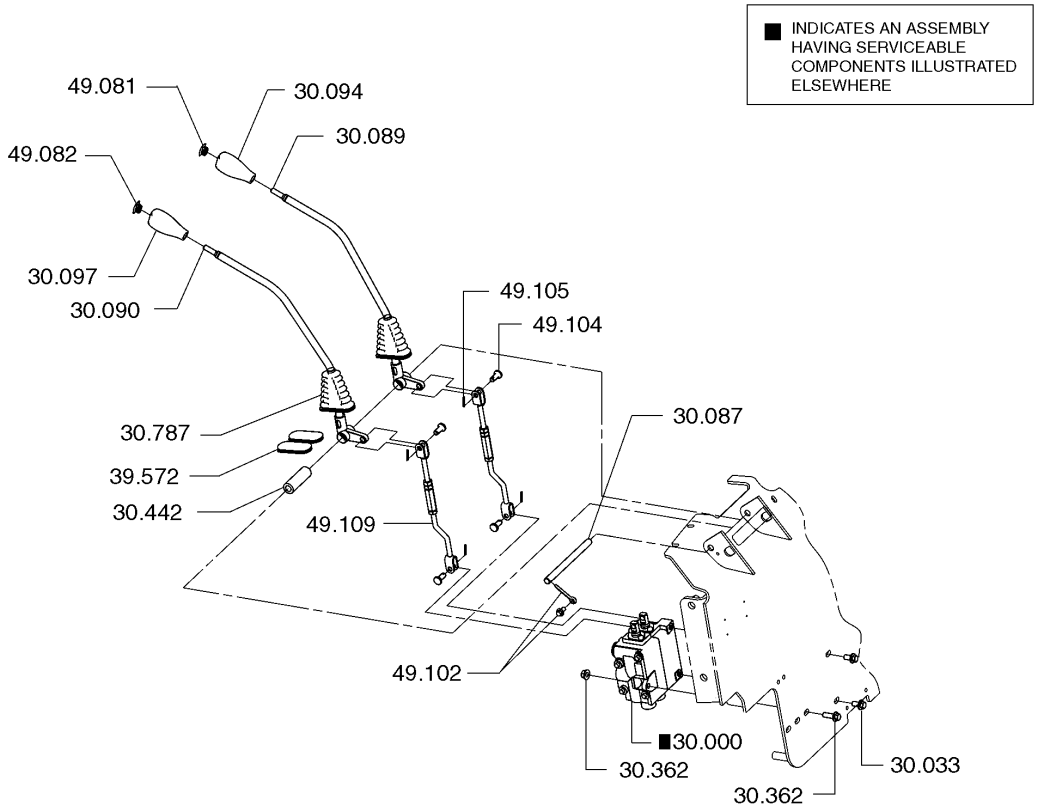

30-209

키이번호 key No.	부품명 Description	
30.000	밸브 조립체	Valve Assembly, Hydraulic
30.033	패스너	Fastener, Hydraulic Valve Mounting
30.087	핀	Pin, Valve Control Lever Pivot
30.089	레버	Lever, Lift Control
30.090	레버	Lever, Tilt Control
30.094	노브	Knob, Lift Control Lever
30.097	노브	Knob, Tilt Control Lever
30.362	패스너	Fastener, Valve Mounting Plate
30.442	스페이서	Spacer, Control Levers
30.787	부트	Boot, Valve Control Lever
39.572	커버	Cover, Auxiliary Valve Lever Hole
49.081	캡	Cap, Lift Control Lever
49.082	캡	Cap, Lift Control Lever
49.102	패스너	Fastener, Valve Control Lever Pivot Retainer
49.104	핀	Pin, Valve Control Lever Clevis Rod
49.105	리테이너	Retainer, Valve Control Lever Clevis Rod Pin
49.109	로드	Rod, Valve Control Clevis


VALVE CONTROL LINKAGE-3SPOOL

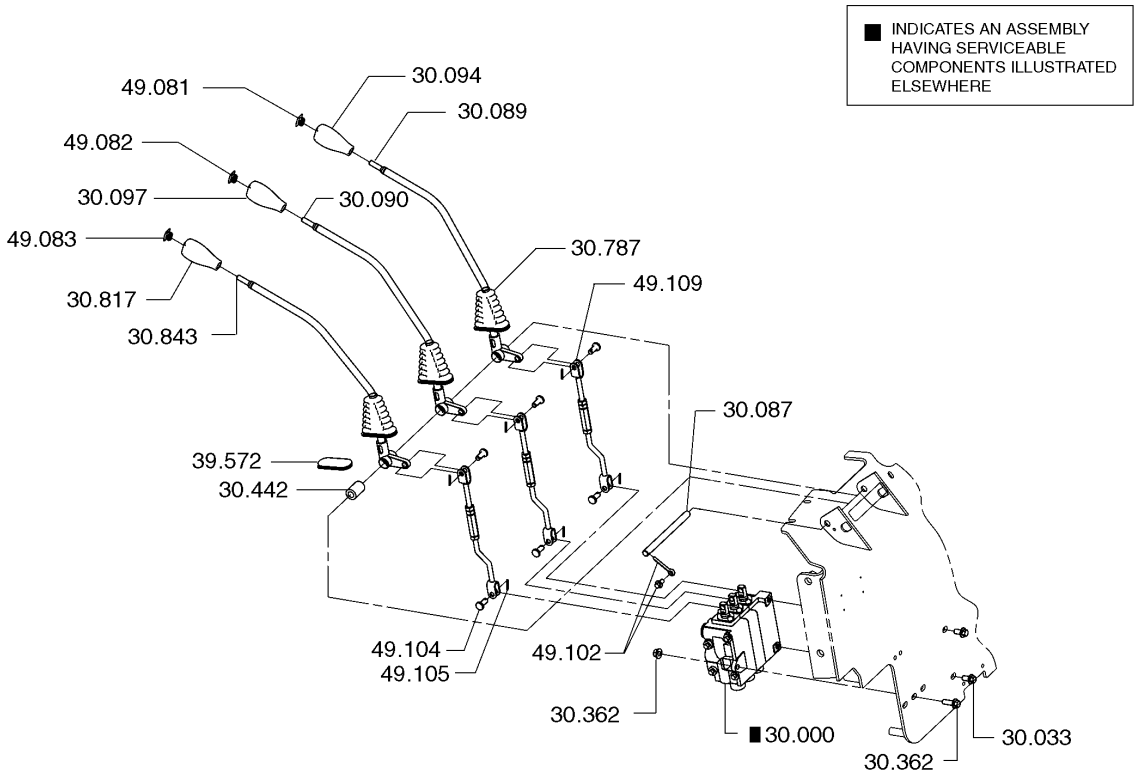

30-210

키이번호 key No.		부품명 Description
30.000	밸브 조립체	Valve Assembly, Hydraulic
30.033	패스너	Fastener, Hydraulic Valve Mounting
30.087	핀	Pin, Valve Control Lever Pivot
30.089	레버	Lever, Lift Control
30.090	레버	Lever, Tilt Control
30.094	노브	Knob, Lift Control Lever
30.097	노브	Knob, Tilt Control Lever
30.362	패스너	Fastener, Valve Mounting Plate
30.442	스페이서	Spacer, Control Levers
30.787	부트	Boot, Valve Control Lever
30.817	노브	Knob, Auxiliary Valve Control Lever
30.843	레버 조립체	Lever Assembly, Valve Lh
39.572	커버	Cover, Auxiliary Valve Lever Hole
49.081	캡	Cap, Lift Control Lever
49.082	캡	Cap, Lift Control Lever
49.083	캡	Cap, Valve Control Lever Decal
49.102	패스너	Fastener, Valve Control Lever Pivot Retainer
49.104	핀	Pin, Valve Control Lever Clevis Rod
49.105	리테이너	Retainer, Valve Control Lever Clevis Rod Pin
49.109	로드	Rod, Valve Control Clevis


VALVE CONTROL LINKAGE-4SPOOL

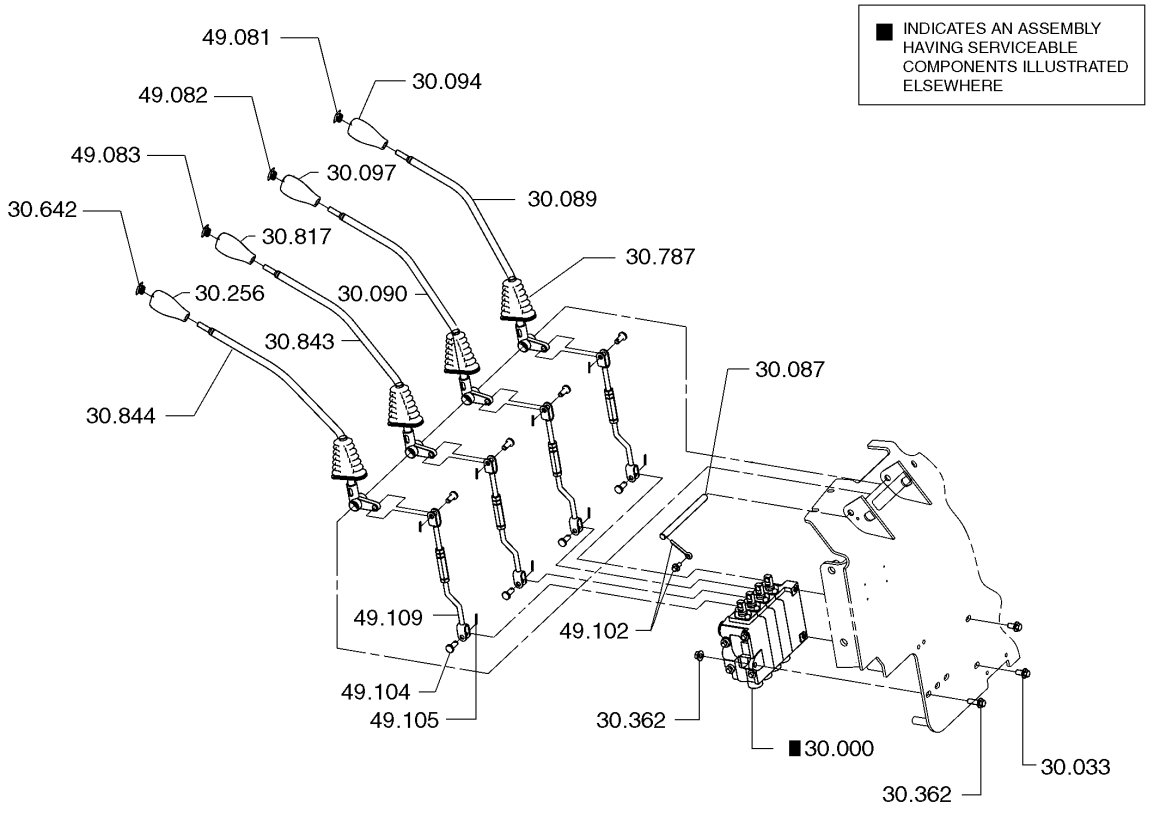

30-211


키이번호 key No.		부품명 Description
30.000	밸브 조립체	Valve Assembly, Hydraulic
30.033	패스너	Fastener, Hydraulic Valve Mounting
30.087	핀	Pin, Valve Control Lever Pivot
30.089	레버	Lever, Lift Control
30.090	레버	Lever, Tilt Control
30.094	노브	Knob, Lift Control Lever
30.097	노브	Knob, Tilt Control Lever
30.256	노브	Knob, Auxiliary Valve Control Lever
30.362	패스너	Fastener, Valve Mounting Plate
30.642	캡	Cap, Auxiliary Valve Spool
30.787	부트	Boot, Valve Control Lever
30.817	노브	Knob, Auxiliary Valve Control Lever
30.843	레버 조립체	Lever Assembly, Valve Lh
30.844	레버 조립체	Lever Assembly, Valve Rh
49.081	캡	Cap, Lift Control Lever
49.082	캡	Cap, Lift Control Lever
49.083	캡	Cap, Valve Control Lever Decal
49.102	패스너	Fastener, Valve Control Lever Pivot Retainer
49.104	핀	Pin, Valve Control Lever Clevis Rod
49.105	리테이너	Retainer, Valve Control Lever Clevis Rod Pin
49.109	로드	Rod, Valve Control Clevis

AUX. VALVE PLUMBING (SINGLE) - OPTION

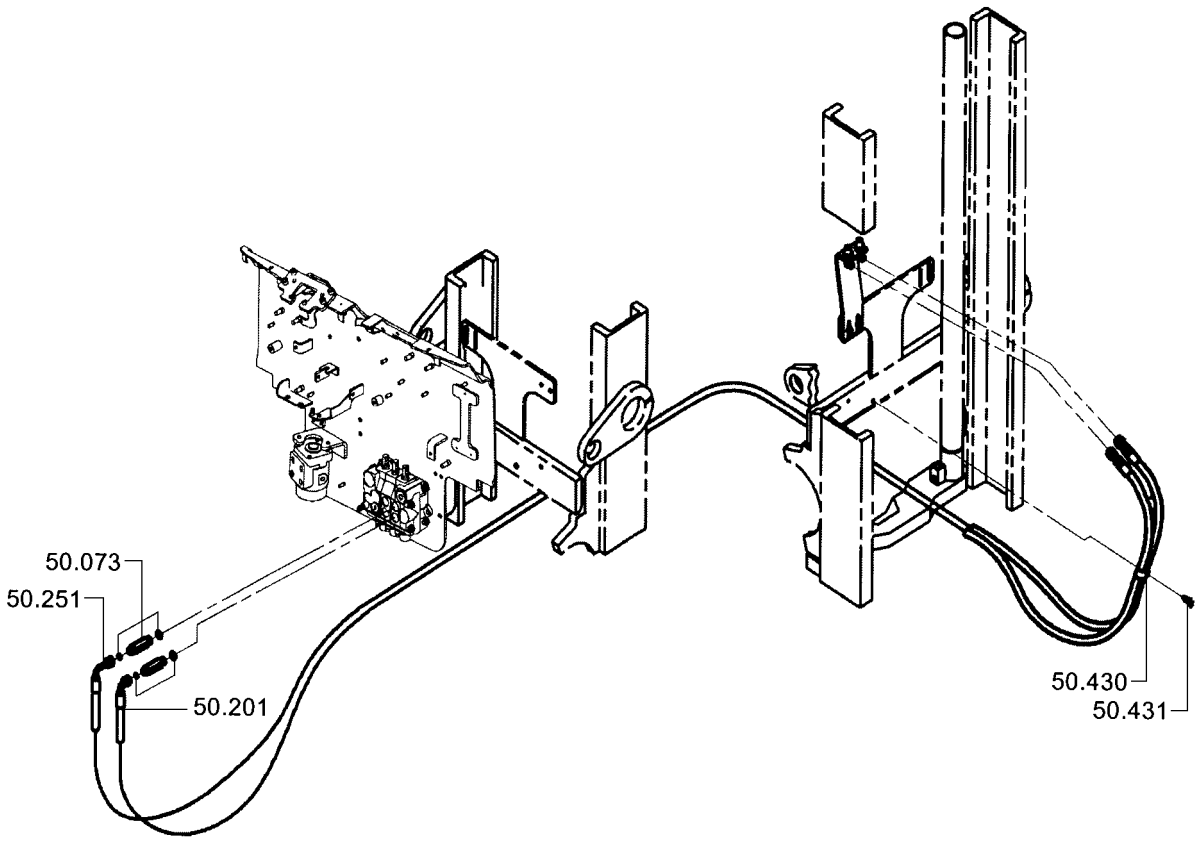


키이번호 key No.		부품명 Description
50.073	피팅	Fitting, 2nd Auxiliary Valve "B" Port
50.201	라인	Line, Device
50.251	라인	Line, Device
50.430	클램프	Clamp, Auxiliary Valve Lines
50.431	패스너	Fastener, Aux Valve Lines Clamp

AUX. VALVE PLUMBING (DOUBLE) - OPTION

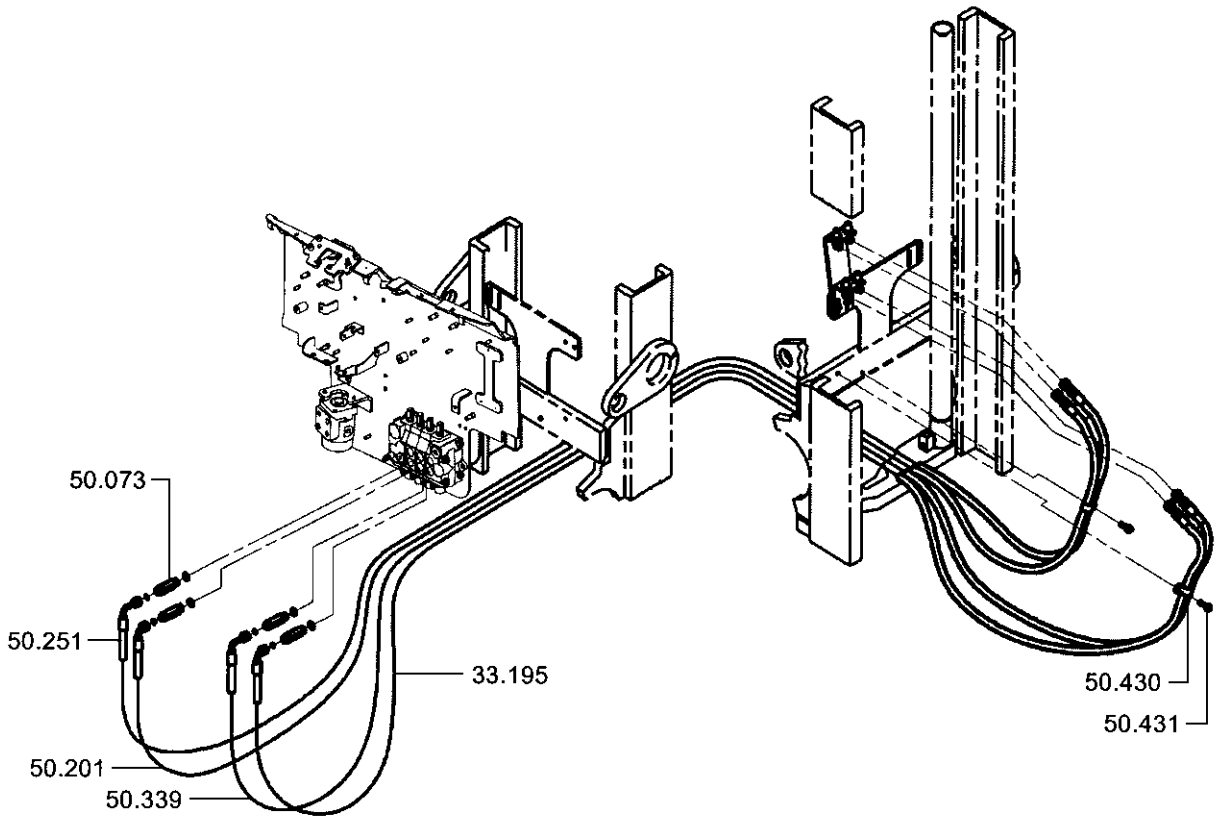

키이번호 key No.		부품명 Description
33.195	라인	Line, Device Rh
50.073	피팅	Fitting, 2nd Auxiliary Valve "B" Port
50.201	라인	Line, Device
50.251	라인	Line, Device
50.339	라인	Line, Device Lh
50.430	클램프	Clamp, Auxiliary Valve Lines
50.431	패스너	Fastener, Aux Valve Lines Clamp


HYDRAULIC CONTROL VALVE (SINGLE) - OPTION

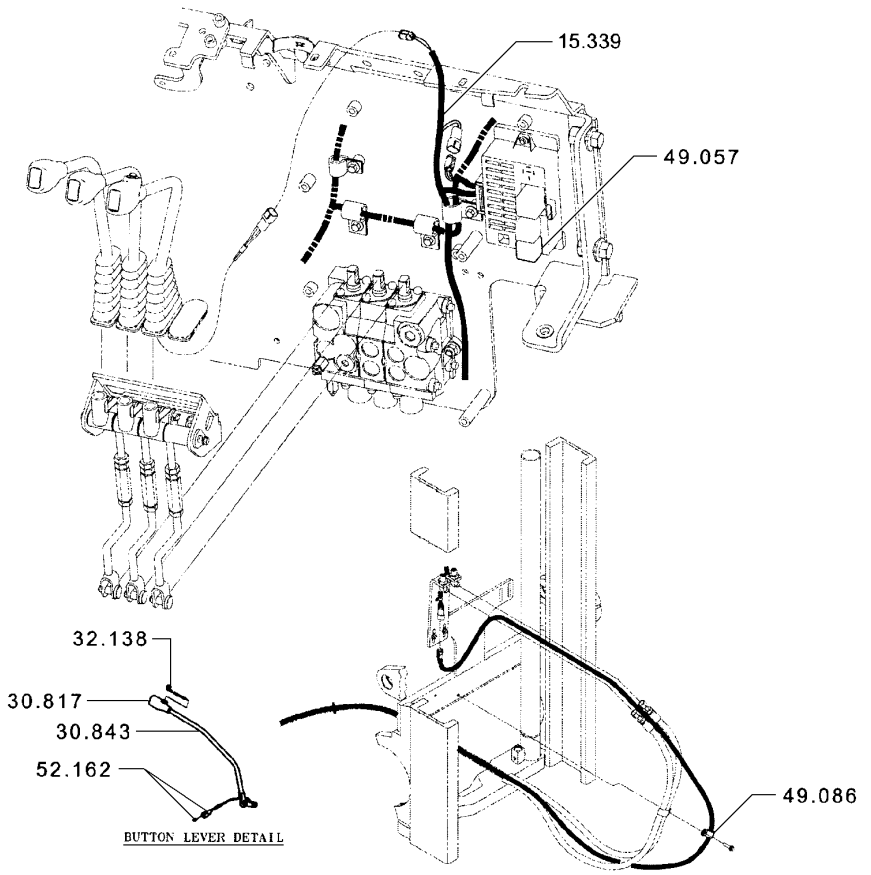

31-082

키이번호 key No.		부품명 Description
15.339	배선	Harness, Auxiliary Valve Switch Wiring
30.817	노브	Knob, Auxiliary Valve Control Lever
30.843	레버 조립체	Lever Assembly, Valve Lh
32.138	스위치	Switch, Push Button
49.057	릴레이	Relay, Auxiliary Valve Conrol
49.086	클램프	Clamp, Control Cable
52.162	커넥터	Connector, Auxiliary Valve Lever Wire


HYDRAULIC CONTROL VALVE (DOUBLE) - OPTION

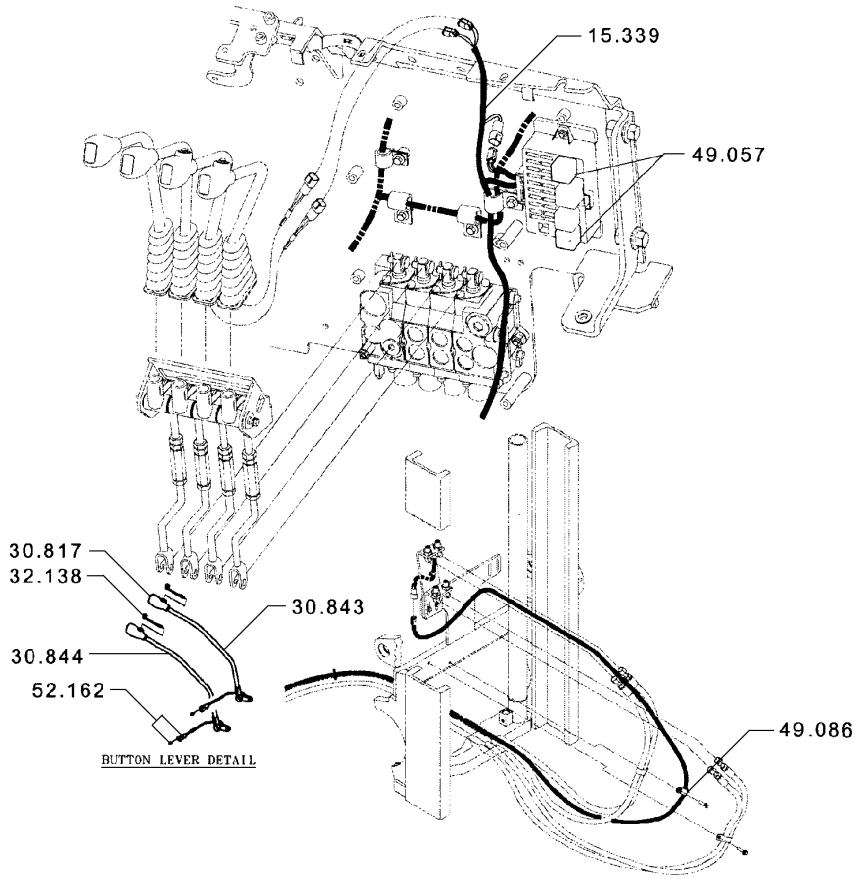

31-084


키이번호 key No.		부품명 Description
15.339	배선	Harness, Auxiliary Valve Switch Wiring
30.817	노브	Knob, Auxiliary Valve Control Lever
30.843	레버 조립체	Lever Assembly, Valve Lh
30.844	레버 조립체	Lever Assembly, Valve Rh
32.138	스위치	Switch, Push Button
49.057	릴레이	Relay, Auxiliary Valve Conrol
49.086	클램프	Clamp, Control Cable
52.162	커넥터	Connector, Auxiliary Valve Lever Wire

SINGLE AUX. PLUMBING (QUAD MAST) - OPTION

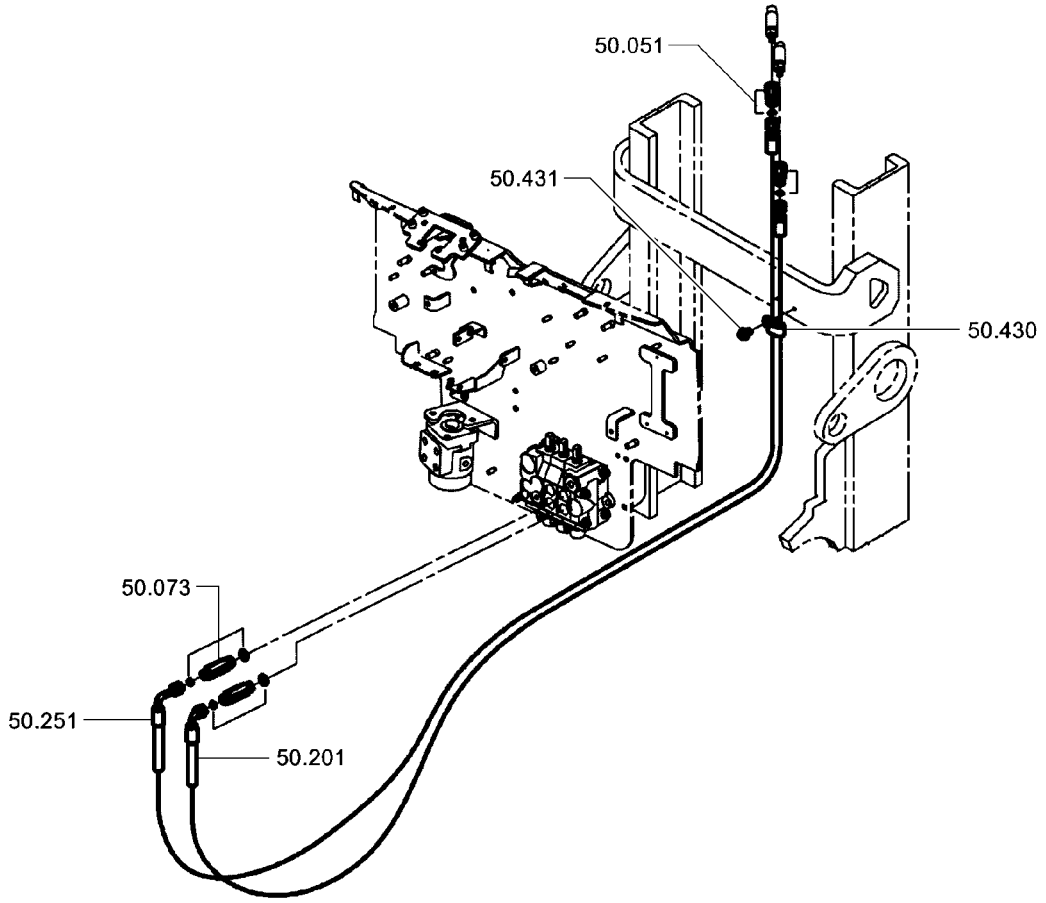

키이번호 key No.		부품명 Description
50.051	스위블 커플링	Swivel Coupling, Device Hose Lh
50.073	피팅	Fitting, 2nd Auxiliary Valve "B" Port
50.201	라인	Line, Device
50.251	라인	Line, Device
50.430	클램프	Clamp, Auxiliary Valve Lines
50.431	패스너	Fastener, Aux Valve Lines Clamp


DOUBLE AUX. PLUMBING (QAUD MAST) - OPTION

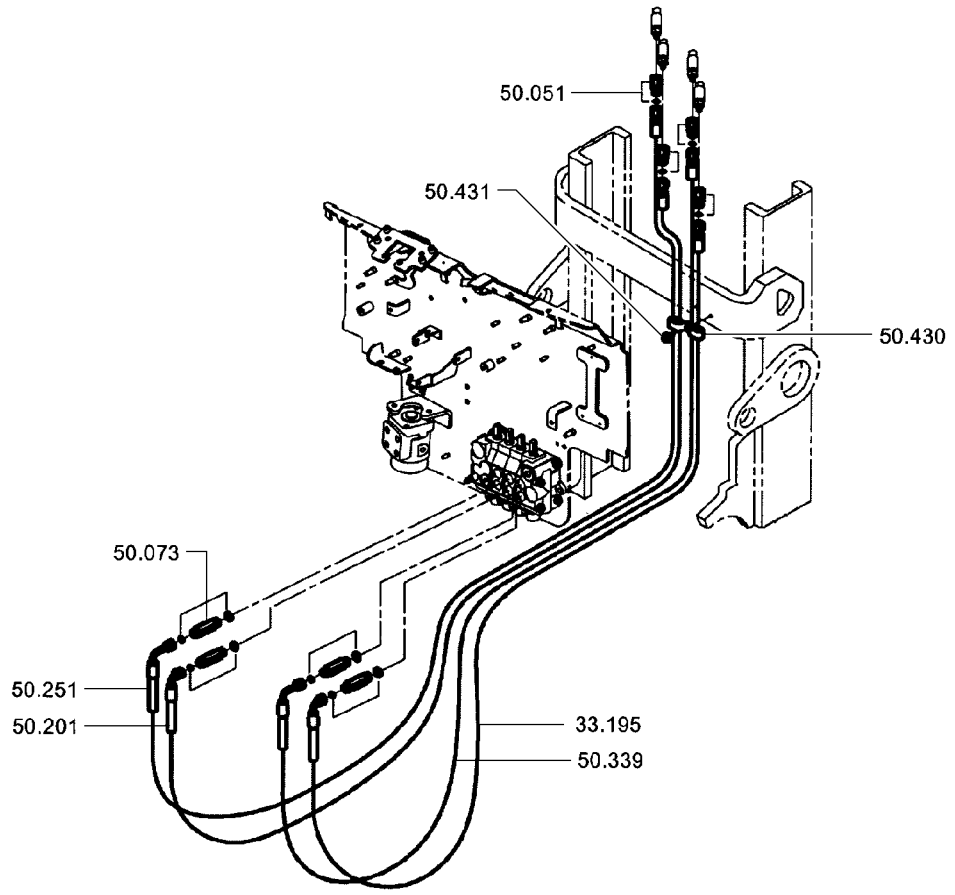

31-100


키이번호 key No.		부품명 Description
33.195	라인	Line, Device Rh
50.051	스위블 커플링	Swivel Coupling, Device Hose Lh
50.073	피팅	Fitting, 2nd Auxiliary Valve "B" Port
50.201	라인	Line, Device
50.251	라인	Line, Device
50.339	라인	Line, Device Lh
50.430	클램프	Clamp, Auxiliary Valve Lines
50.431	패스너	Fastener, Aux Valve Lines Clamp

HYDRAULIC LINES C33(C35) - OPTION

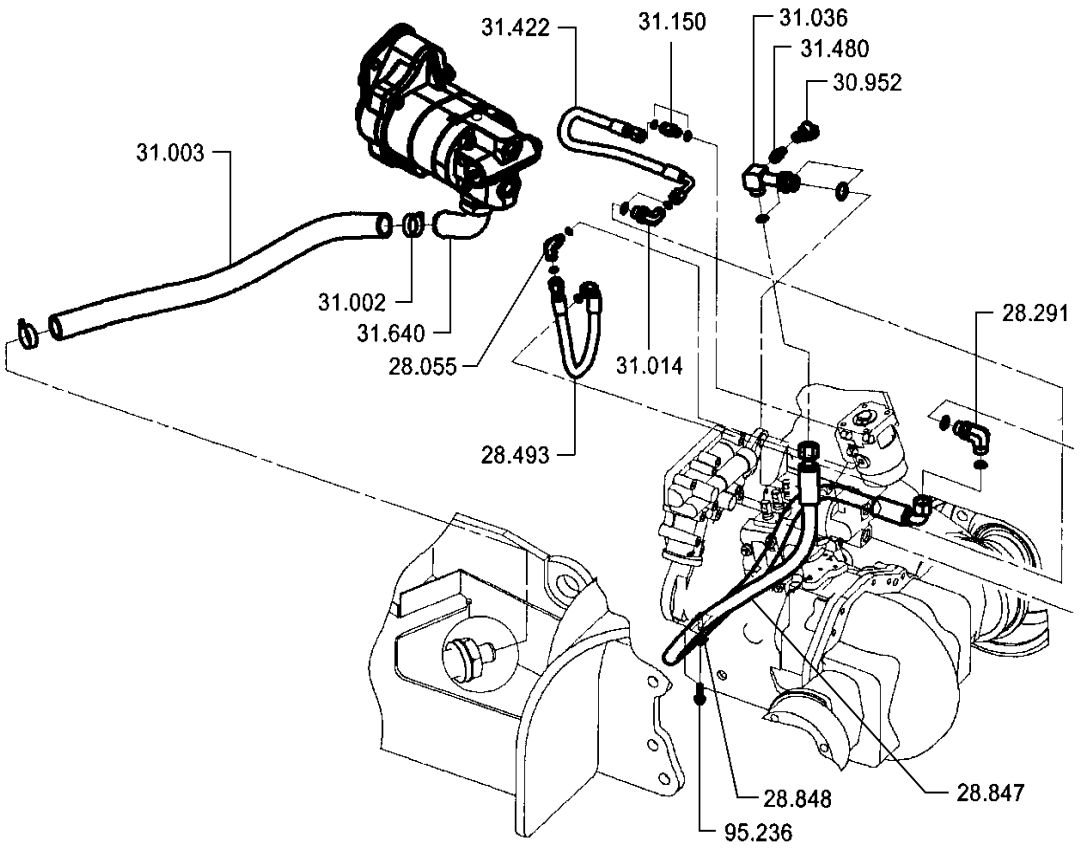

키이번호 key No.		부품명 Description
28.055	피팅	Fitting, Steering Gear
28.291	피팅	Fitting, Pump Outlet
28.493	라인	Line, Pressure Sensing
28.847	라인	Line, Main Valve Inlet
28.848	클램프	Clamp, Main Valve Inlet Line
30.952	더스트 캡	Dust Cap, Pressure Gauge Port Fitting
31.002	클램프	Clamp, Sump Outlet Line
31.003	라인	Line, Pump Inlet
31.014	피팅	Fitting, Pump Outlet
31.036	피팅	Fitting, Main Valve Inlet Port
31.150	피팅	Fitting, Steer Valve Discharge Port
31.422	라인	Line, Pump Outlet (Cover End)
31.480	플러그	Plug, Pressure Gauge Port
31.640	피팅	Fitting, Hyd Pump Outlet (Cover End)
95.236	패스너	Fastener, Hydraulic Line Clamp


TILT LIMIT WITH OVERRIDE (OPTION)

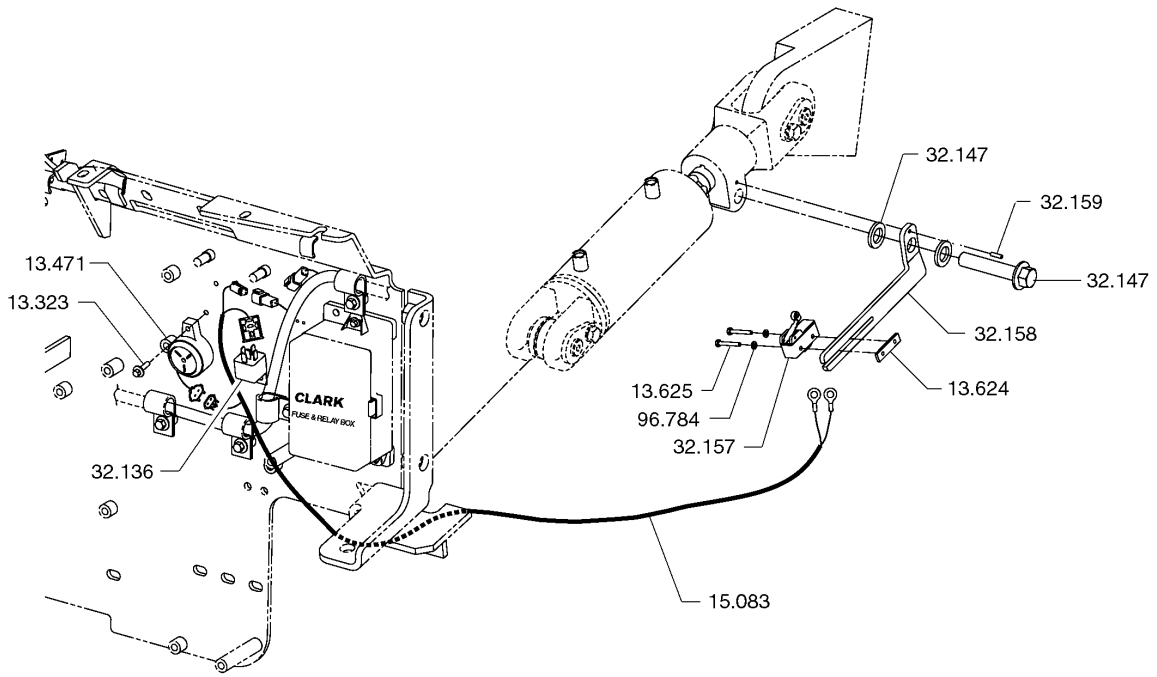

31-123

키이번호 key No.		부품명 Description
13.323	패스너	Fastener, Air Brake Lp Warning Buzzer
13.471	부져	Buzzer, Warning
13.624	브래킷	Bracket, Tilt Limit Switch
13.625	패스너	Fastener, Tilt Limit Switch
15.083	컨덕터	Conductor, Tilt Limit Device Feed
32.136	릴레이	Relay, Tilt Limit Device
32.147	와셔	Washer, Tilt Limit Fastener
32.157	스위치	Switch, Tilt Limit
32.158	브래킷	Bracket, Tilt Limit Switch
32.159	리테이너	Retainer, Tilt Limit Switch Bracket
96.784	와셔	Washer, Tilt Limit Switch Fastener


TILT/LIFT PLUMBING

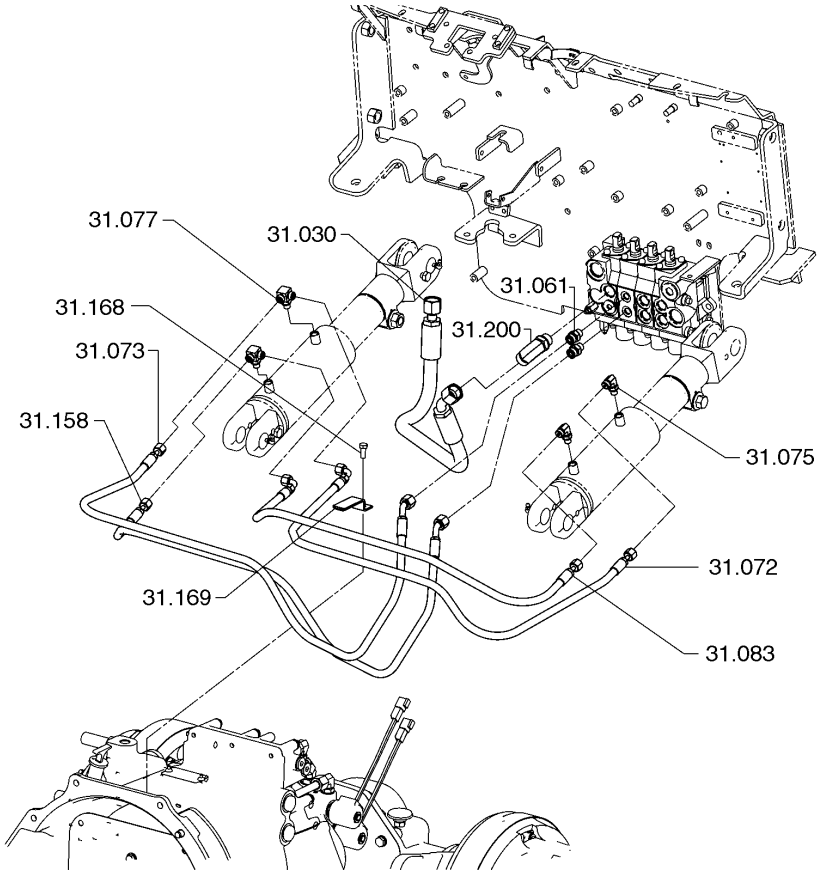

31-139

키이번호 key No.		부품명 Description
31.030	라인	Line, Valve To Lift Cylinder
31.061	피팅	Fitting, Valve Tilt Port "A"
31.072	라인	Line, Rh Tilt Cylinder Rod Port
31.073	라인	Line, Lh Tilt Cylinder Rod Port
31.075	피팅	Fitting, Rh Tilt Cylinder Rod Port
31.077	피팅	Fitting, Lh Tilt Cylinder Rod Port
31.083	라인	Line, Rh Tilt Cylinder Anchor Port
31.158	라인	Line, Lh Tilt Cylinder Anchor Port
31.168	패스너	Fastener, Tilt Line Clamp
31.169	클램프	Clamp, Tilt Line
31.200	피팅	Fitting, Main Valve Lift Port


HYDRAULIC SUPPLY LINES

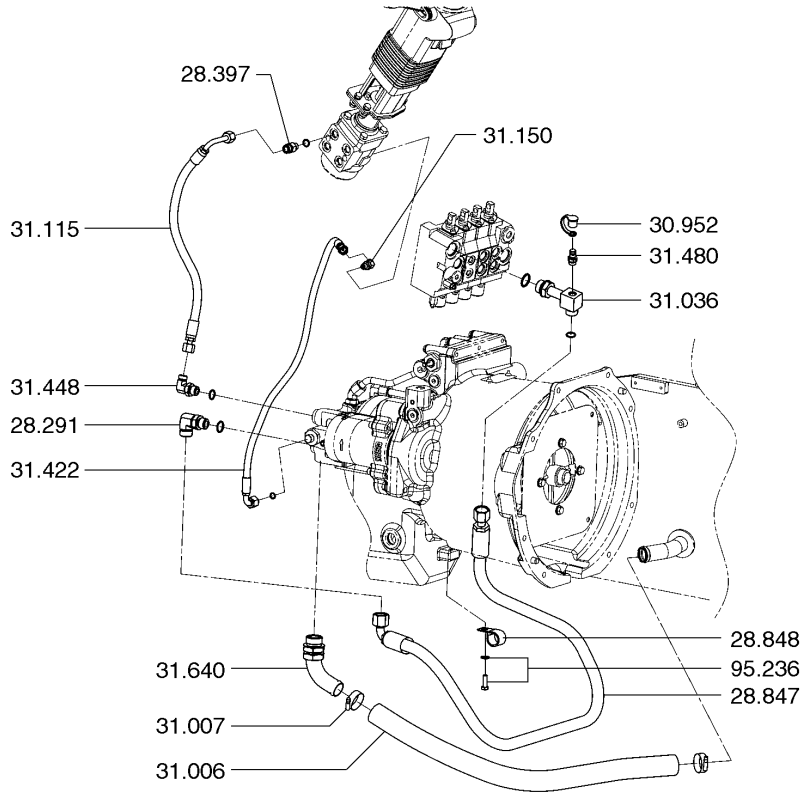

31-140

키이번호 key No.		부품명 Description
28.291	피팅	Fitting, Pump Outlet
28.397	피팅	Fitting, Steering Gear Line
28.847	라인	Line, Main Valve Inlet
28.848	클램프	Clamp, Main Valve Inlet Line
30.952	더스트 캡	Dust Cap, Pressure Gauge Port Fitting
31.006	라인	Line, Pump Inlet
31.007	클램프	Clamp, Pump Inlet Line
31.036	피팅	Fitting, Main Valve Inlet Port
31.115	라인	Line, Steering Pump Outlet
31.150	피팅	Fitting, Steer Valve Discharge Port
31.422	라인	Line, Pump Outlet (Cover End)
31.448	피팅	Fitting, Pump Outlet Line
31.480	플러그	Plug, Pressure Gauge Port
31.640	피팅	Fitting, Hyd Pump Outlet (Cover End)
95.236	패스너	Fastener, Hydraulic Line Clamp


TILT CYLINDER

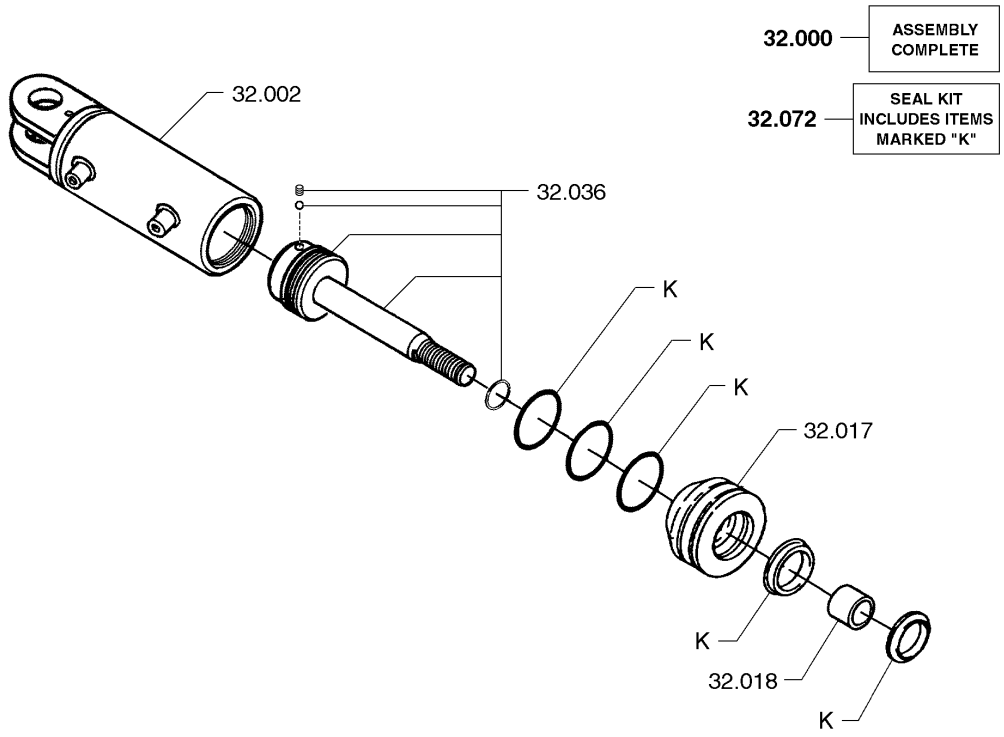

32-129

키이번호 key No.		부품명 Description
32.000	실린더 조립체	Cylinder Assembly, Tilt
32.002	실린더 조립체	Cylinder Assembly, Welded
32.017	글랜드	Gland, Tilt Cylinder
32.018	부싱	Bushing, Tilt Cylinder Gland
32.036	로드 & 피스톤	Rod & Piston Assembly, Tilt Cylinder
32.072	패킹 킷트	Packing Kit, Tilt Cylinder


TILT CYLINDER MOUNTING

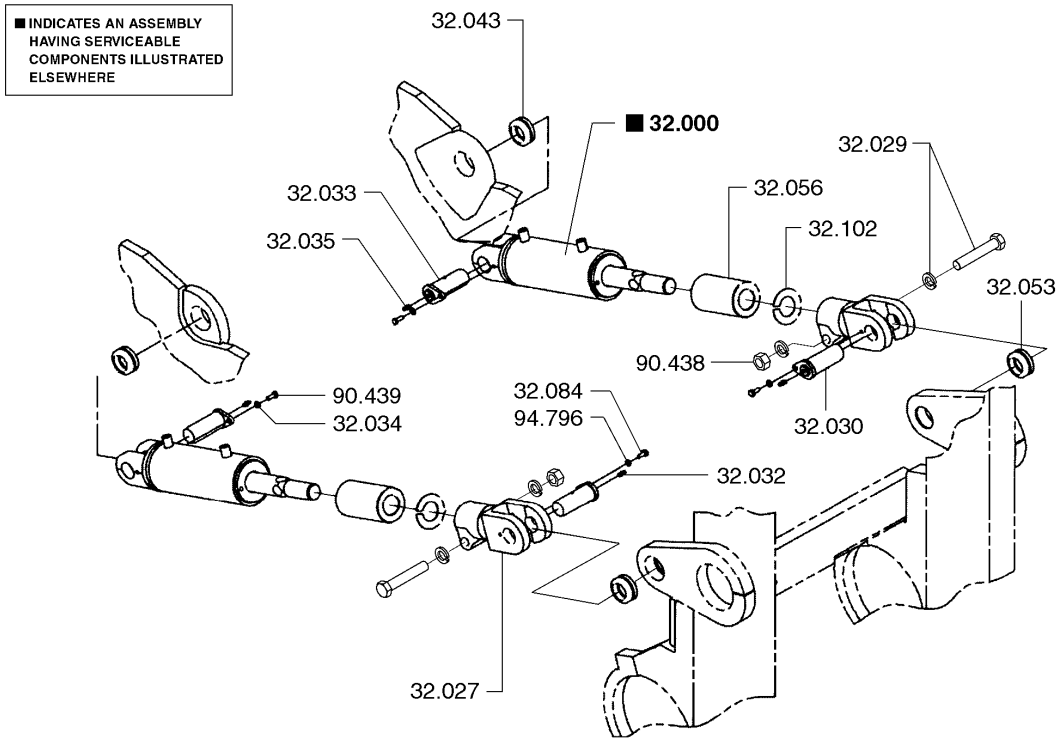

32-132

키이번호 key No.		부품명 Description
32.000	실린더 조립체	Cylinder Assembly, Tilt
32.027	엔드	End, Rh Tilt Cylinder Rod
32.029	패스너	Fastener, Tilt Cylinder Rod End
32.030	핀	Pin, Tilt Cylinder To Upright
32.032	피팅	Fitting, Tilt Cylinder To Upright Pin Lub
32.033	핀	Pin, Tilt Cylinder Rear Mounting Rh
32.034	리테이너	Retainer, Tilt Cylinder Anchor Pin
32.035	피팅	Fitting, Tilt Cylinder To Frame Pin Lub
32.043	베어링	Bearing, Tilt Cylinder Frame Mounting
32.053	베어링	Bearing, Tilt Cylinder Rod End
32.056	스페이서	Spacer, Tilt Cylinder Rod End
32.084	패스너	Fastener, Tilt Cylinder Rod End Pin Retainer
32.102	심	Shim, Tilt Cylinder Stroke Adjusting
90.438	너트	Nut, Tilt Cylinder Rod End Fastener
90.439	볼트	Bolt, Tilt Cylinder To Frame Pin Lock
94.796	와셔	Washer, Tilt Cylinder Rod End Pin Retainer Fastener


ACCUMULATOR (OPTION)

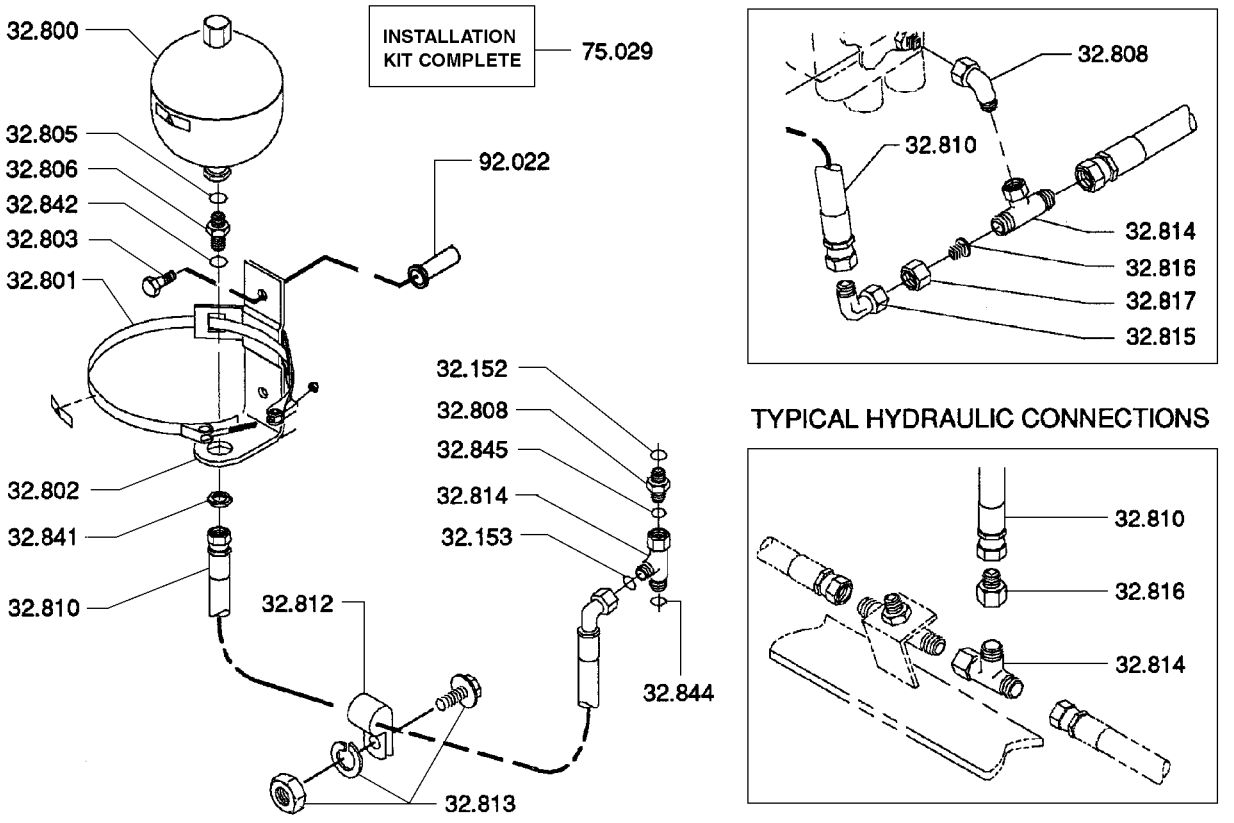

32-845

키이번호 key No.		부품명 Description
32.152	시일	Seal, Hydraulic Accumulator Line Fitting
32.153	시일	Seal, Hydraulic Accumulator Line Fitting
32.800	어큐뮬레이터	Accumulator, Hydraulic
32.801	클램프	Clamp, Hydraulic Accumulator Mounting
32.802	브래킷	Bracket, Hydraulic Accumulator
32.803	패스너	Fastener, Hydraulic Accumulator Clamp
32.805	시일	Seal, Hydraulic Accumulator Connector
32.806	커넥터	Connector, Hydraulic Accumulator
32.808	피팅	Fitting, Hydraulic Accumulator Line
32.810	라인	Line, Hydraulic Accumulator
32.812	클립	Clip, Hydraulic Accumulator Line
32.813	패스너	Fastener, Hydraulic Accumulator Line Clip
32.814	피팅	Fitting, Hydraulic Accumulator Line
32.815	피팅	Fitting, Hydraulic Accumulator Line
32.816	피팅	Fitting, Hydraulic Accumulator Line
32.817	피팅	Fitting, Hydraulic Accumulator Line
32.841	너트	Nut, Hydraulic Accumulator Fitting
32.842	시일	Seal, Hydraulc Accumulator Fitting
32.844	시일	Seal, Accumulator Line Fitting
32.845	시일	Seal, Accumulator Line Fitting
75.029	유압어큐뮬레이터	Hydraulic Accumulator Installation
92.022	너트	Nut, Hydraulic Accumulator Mounting Clamp Fastener


RELIEF VALVE ASSEMBLY (OPTION)

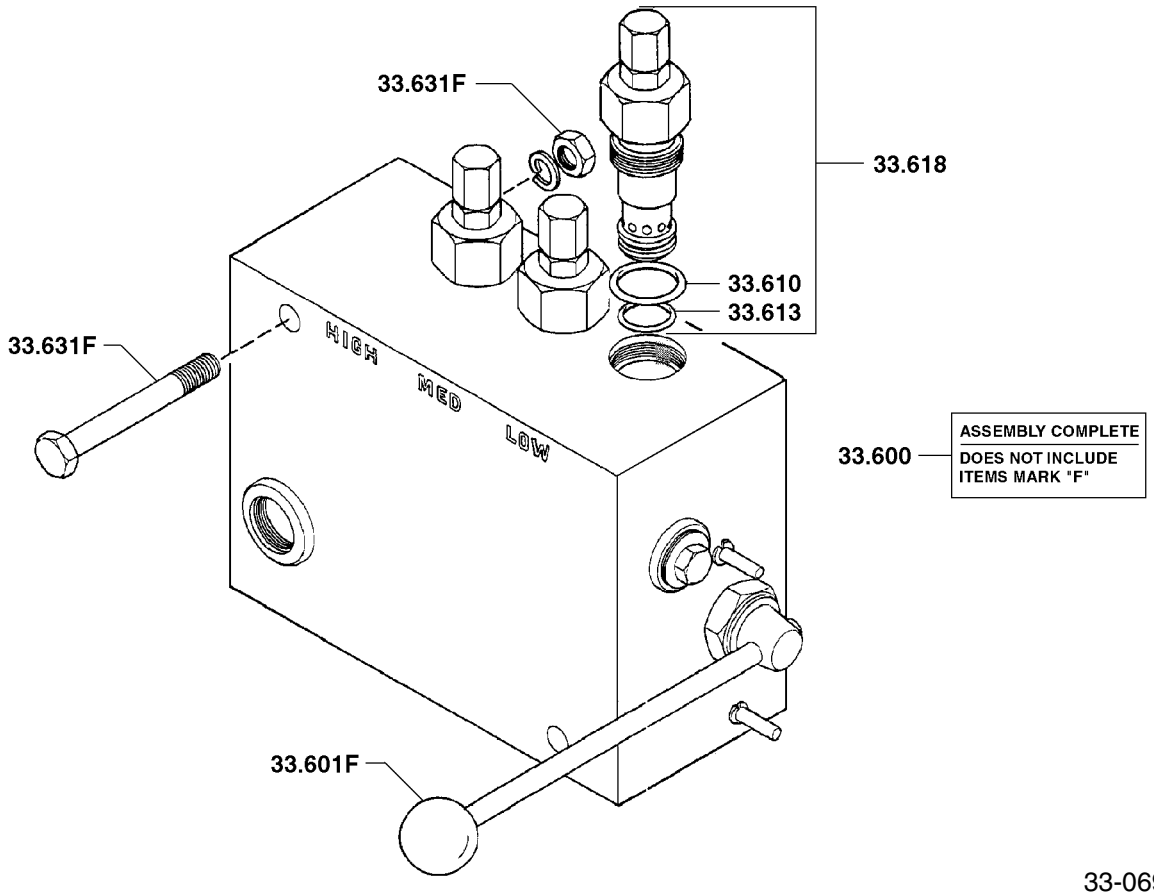

키이번호 key No.	부품명 Description	
33.600	릴리프 밸브	Relief Valve, Device Variable Pressure
33.601	레버	Lever, Device Variable Relief Valve
33.610	시일	Seal, Device Press Relief Val Check Port Plug
33.613	시일	Seal, Device Relief Valve Piston Adj End
33.618	카트리지 킷트	Cartridge Kit, Device Variable Relief Valve
33.631	패스너	Fastener, Device Relief Valve

UPRIGHT MOUNTING


■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

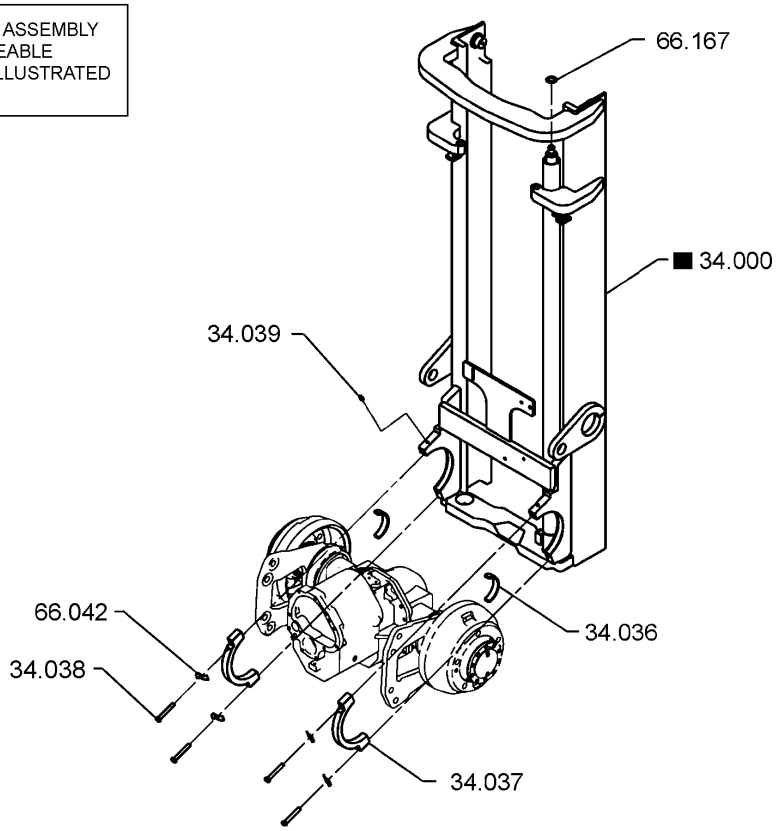

34-734

키이번호 key No.		부품명 Description
34.000	업라이트 & 실린더	Upright & Lift Cyl Assembly
34.036	부싱	Bushing, Upright Trunnion
34.037	캡	Cap, Upright Trunnion
34.038	패스너	Fastener, Upright Trunnion Cap
34.039	피팅	Fitting-Lub, Upright Trunnion
66.167	심	Shim, Lift Cylinder Upper
66.442	키퍼	Keeper, Upright Trunnion Cap


LIFT CARRIAGE ASSEMBLY (OPTION)

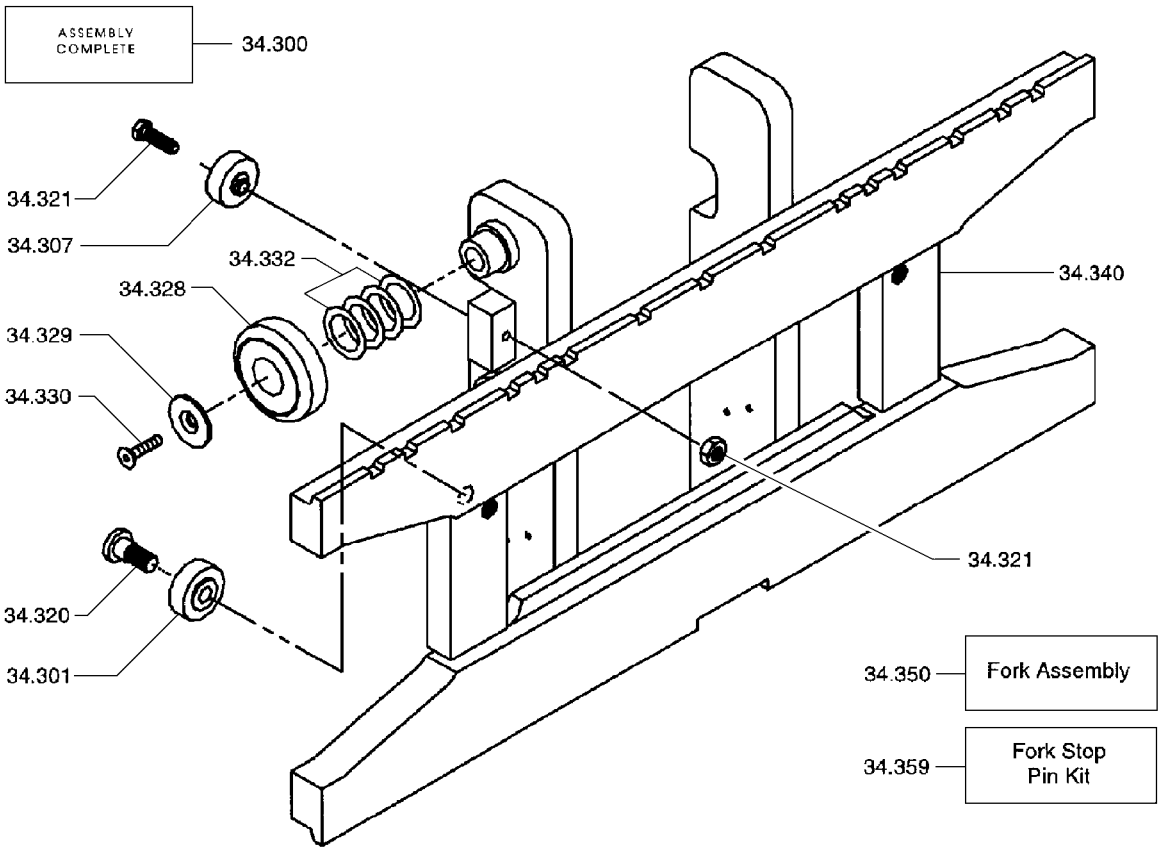

34-998

키이번호 key No.		부품명 Description
34.300	캐리지 조립체	Assembly, Fork Bars & Carriage
34.301	롤러	Roller, Carriage Outer Thrust
34.307	롤러	Roller, Carriage Inner Thrust
34.320	축	Shaft, Carriage Outer Thrust Roller
34.321	패스너	Fastener, Carriage Roller Shaft
34.328	롤러	Roller, Carriage Captive
34.329	리테이너	Retainer, Carriage Captive Roller
34.330	패스너	Fastener, Carriage Captive Roller Retainer
34.332	심	Shim, Carriage Captive Roller
34.340	캐리지 용접체	Carriage Welded Assembly
34.350	포크 조립체	Fork Assembly
34.359	킷트	Kit, Fork Stop Pin (Captive)


FRAME & COUNTERWEIGHT

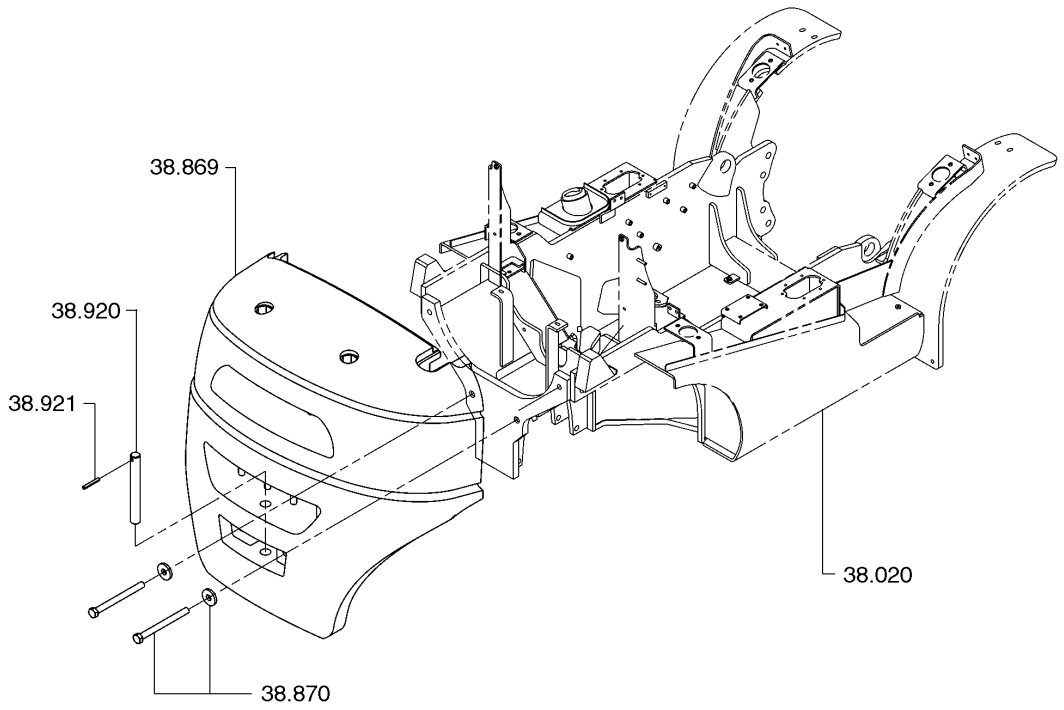

38-225

키이번호 key No.		부품명 Description
38.020	프레임 조립체	Frame Assembly
38.869	카운터웨이터	Counterweight
38.870	패스너	Fastener, Counterweight (Lower)
38.920	핀	Pin, Coupler
38.921	핀	Pin, Coupler Pin Cross

LEAD WIRE GROUND

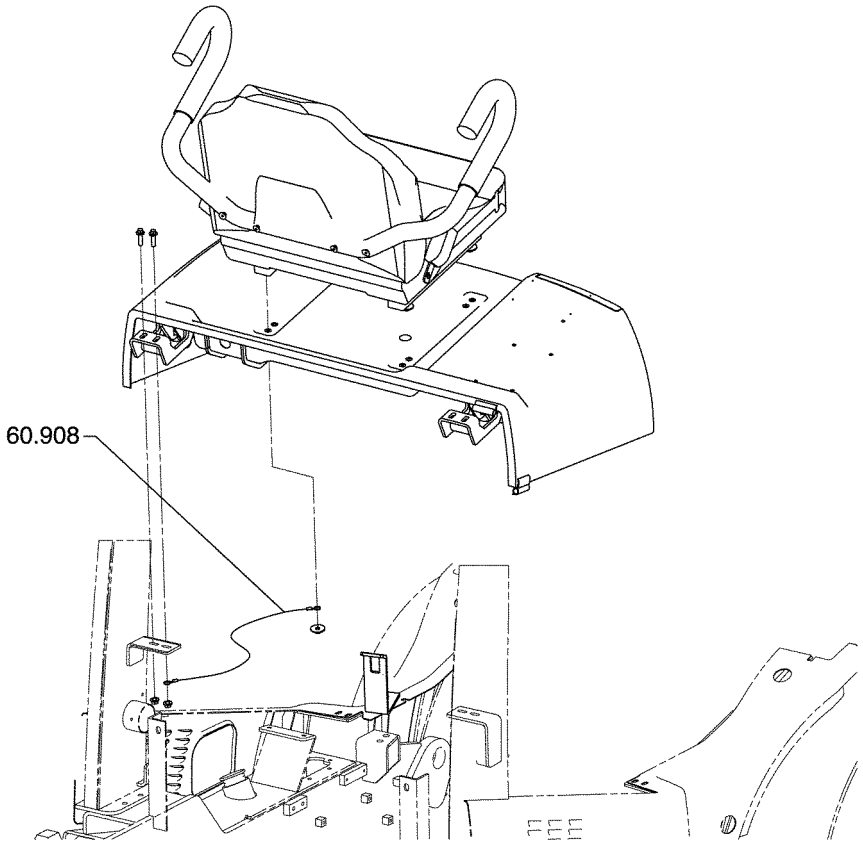


39-012

키이번호 key No.		부품명 Description
60.908	와이어	Wire, Lead Ground

SEAT MOUNTING (OPTION)


■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

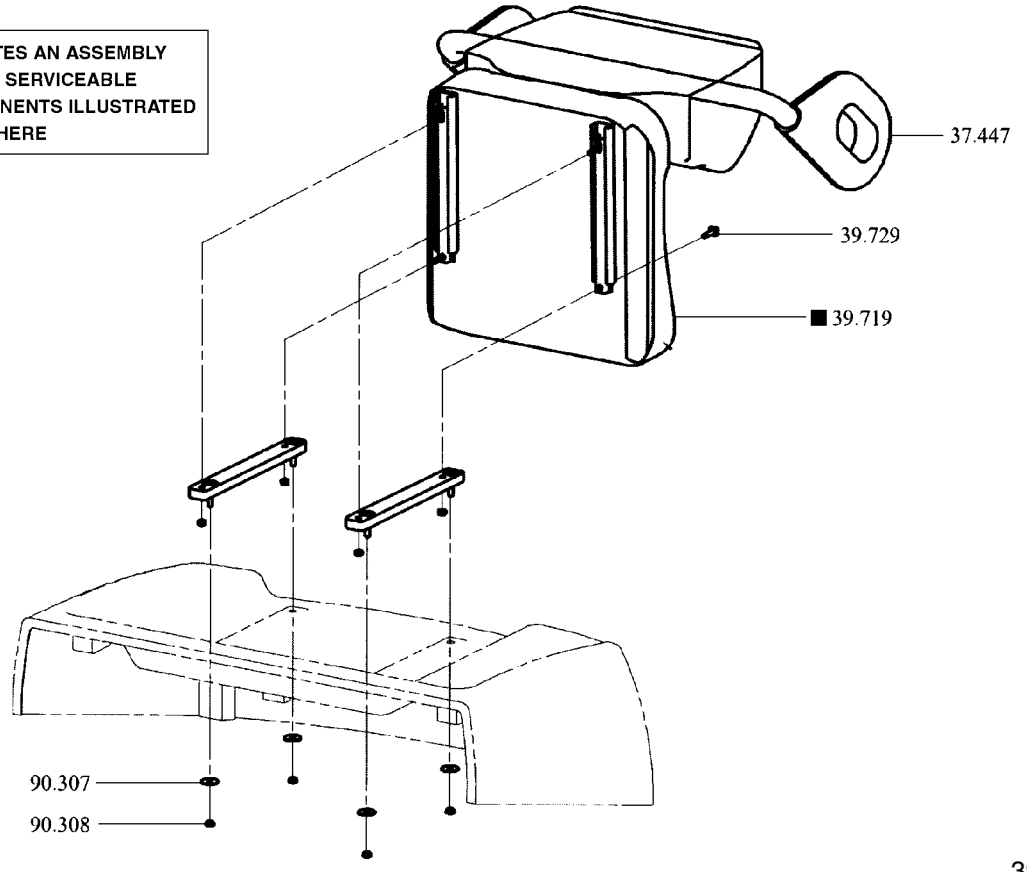

39-509

키이번호 key No.	부품명 Description	
37.447	리스트레인트	Restraint, Operator Seat Lateral
39.719	시트 조립체	Seat Assembly
39.729	패스너	Fastener, Adjustor To Seat Support
90.307	로크와셔	Lockwasher, Adjustor To Seat Support Fastener
90.308	너트	Nut, Adjustor To Seat Support Fastener


OVERHEAD GUARD

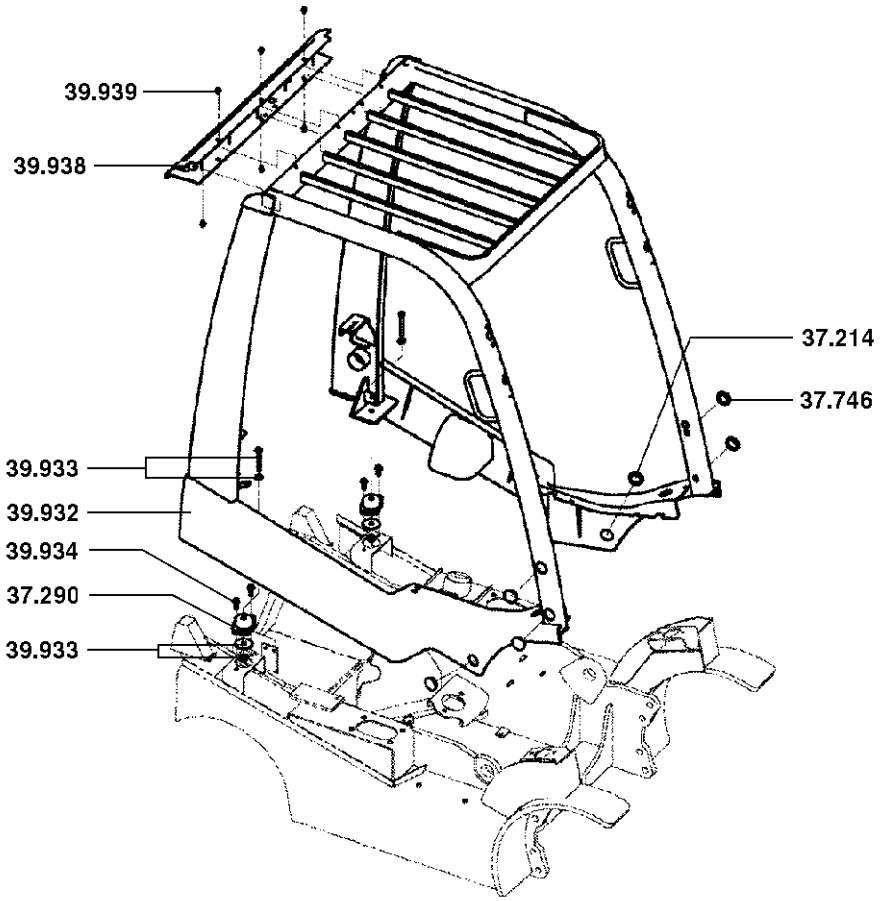

39-510

키이번호 key No.		부품명 Description
37.214	플러그 - 버튼	Plug-Button
37.290	댐퍼너	Dampener, Overhead Guard Vibration
37.746	플러그	Plug, Driver Overhead Guard
39.932	가드	Guard, Overhead
39.933	패스너	Fastener, Overhead Guard
39.934	패스너	Fastener, Overhead Guard
39.938	브래킷	Bracket, Overhead Guard Rear Support
39.939	패스너	Fastener, Overhead Guard Rear Support Bracket


COWL MOUNTING

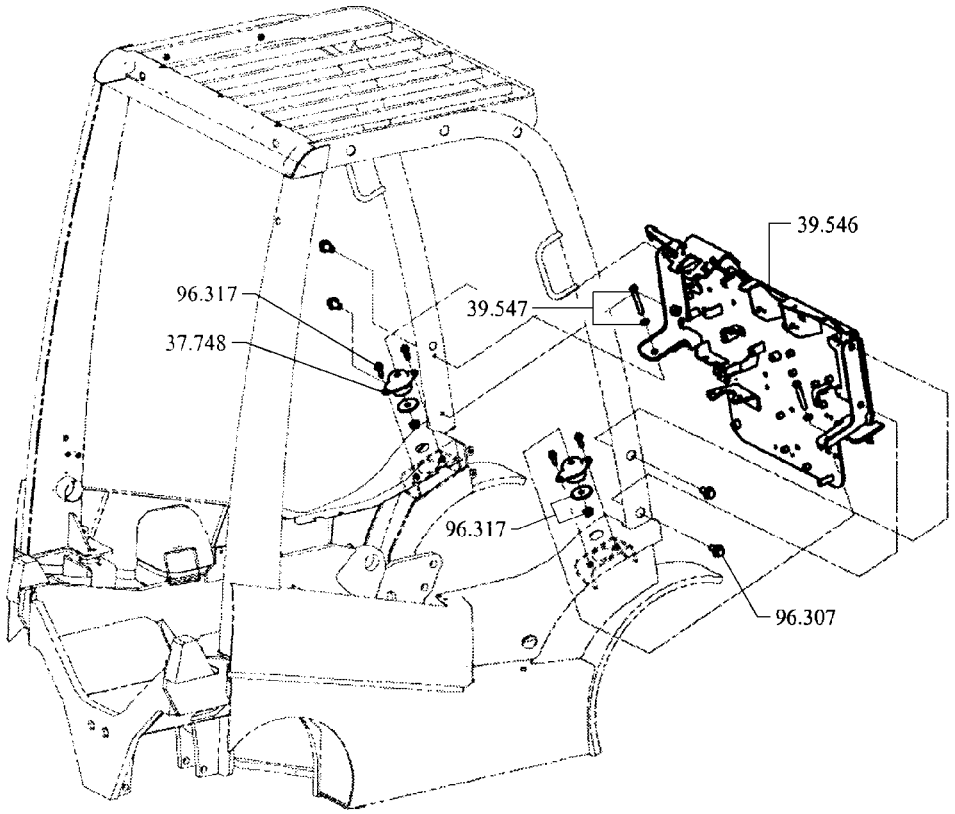

39-511

키이번호 key No.		부품명 Description
37.748	댐퍼너	Dampener, Cowl Vibration
39.546	카울 조립체	Cowl Assembly
39.547	패스너	Fastener, Cowl Assembly
96.307	패스너	Fastener, Cowl Plate
96.317	패스너	Fastener, Cowl Plate Sound Seal

BELLY PAN MOUNTING

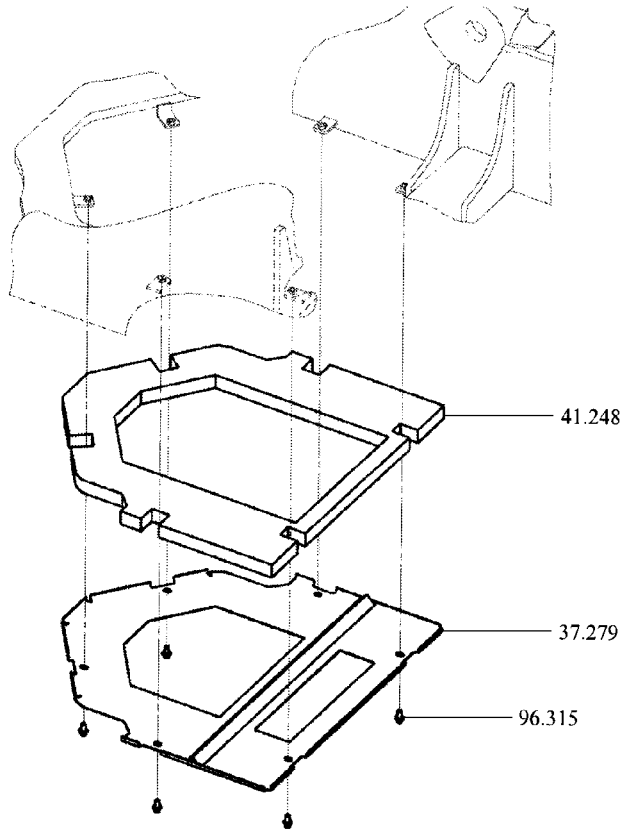


39-513

키이번호 key No.	부품명 Description	
37.279	플레이트	Plate, Frame Side
41.248	사운드 시일	Sound Seal, Frame Belly
96.315	패스너	Fastener, Steering Interlock Switch Actuator

SEAT MOUNTING (WOOCHANG)


■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

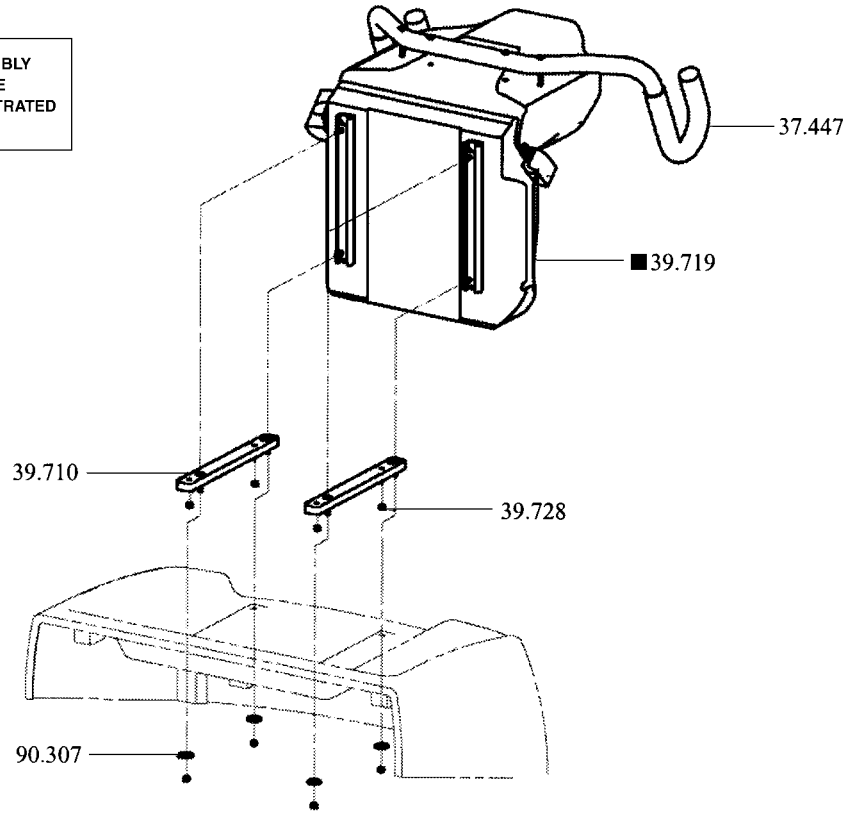

39-514

키이번호 key No.	부품명 Description	
37.447	리스트레인트	Restraint, Operator Seat Lateral
39.710	지지대	Support, Seat Adjustor (Rh)
39.719	시트 조립체	Seat Assembly
39.728	패스너	Fastener, Seat Frame To Adjustor
90.307	로크와셔	Lockwasher, Adjustor To Seat Support Fastener


SEAT ASSEMBLY (WOOCHANG) - OPTION

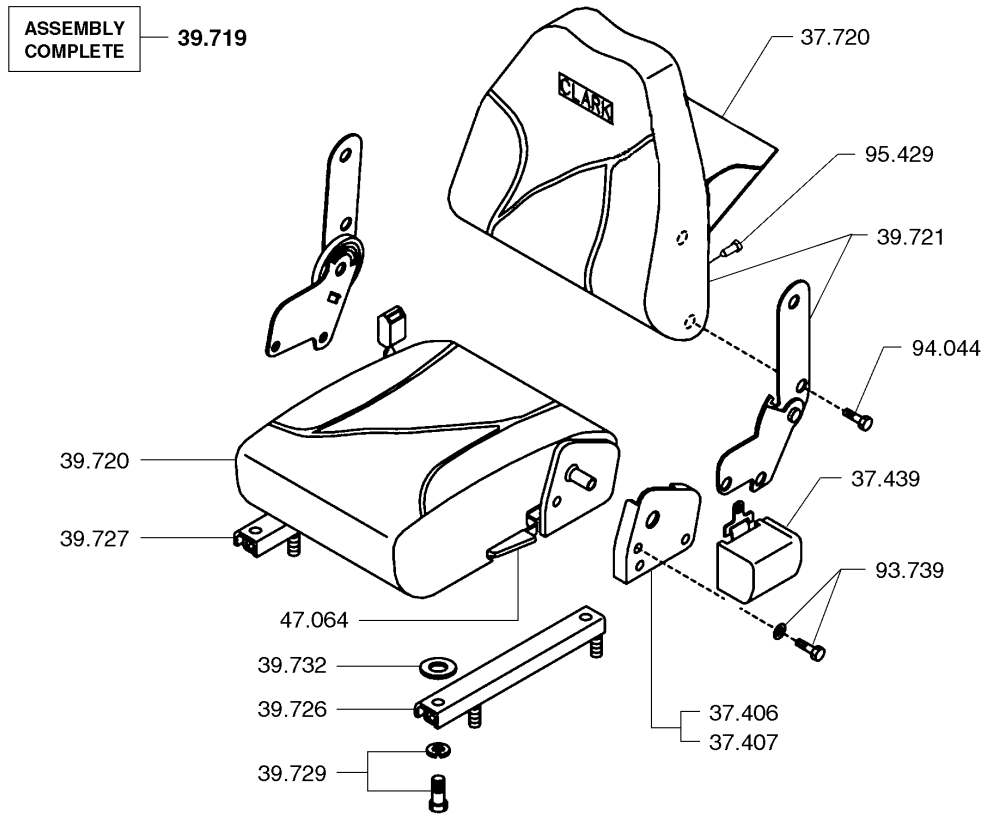

39-518

키이번호 key No.		부품명 Description
37.406	브래킷	Bracket, Seat Back Rest Cover Lh
37.407	브래킷	Bracket, Seat Back Rest Cover Rh
37.439	안전밸트	Safety Belt, Seat
37.720	커버	Cover, Operator Seat Lateral Restraint
39.719	시트 조립체	Seat Assembly
39.720	쿠션	Cushion, Seat
39.721	쿠션	Cushion, Seat Back Rest
39.726	어드져스터	Adjustor, Seat
39.727	어드져스터	Adjustor, Seat With Latch
39.729	패스너	Fastener, Adjustor To Seat Support
39.732	스페이서	Spacer, Seat Frame To Adjustor
47.064	노브	Knob, Seat Assembly Weight Adjuster
93.739	패스너	Fastener, Safety Belt Assembly
94.044	패스너	Fastener, Seat Cushion Mounting Plate
95.429	패스너	Fastener, Seat Lateral Restraint Cover


TALL LOAD BACK REST (OPTION)

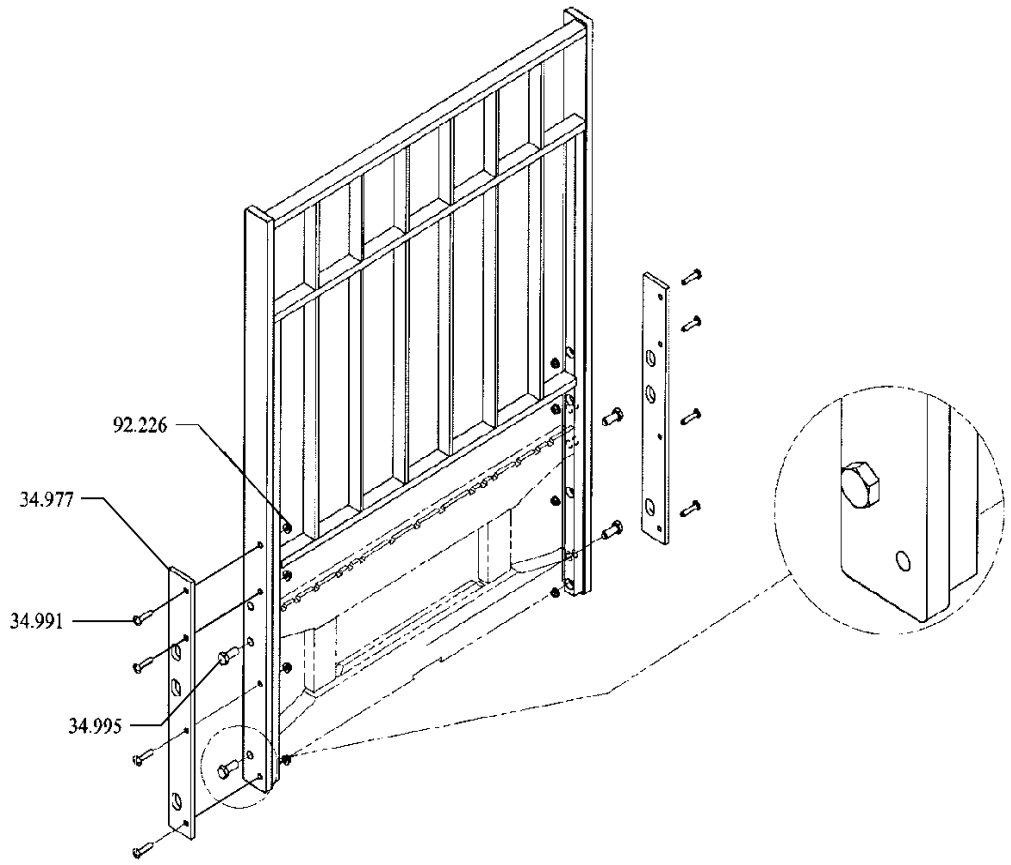

39-519

키이번호 key No.		부품명 Description
34.977	리테이너	Retainer, Load Back Rest Trunnion Pin
34.991	패스너	Fastener, Load Safety Back Rest Ext
34.995	패스너	Fastener, Load Safety Back Rest
92.226	너트	Nut, Load Safety Back Rest Fastener


LOAD BACK REST

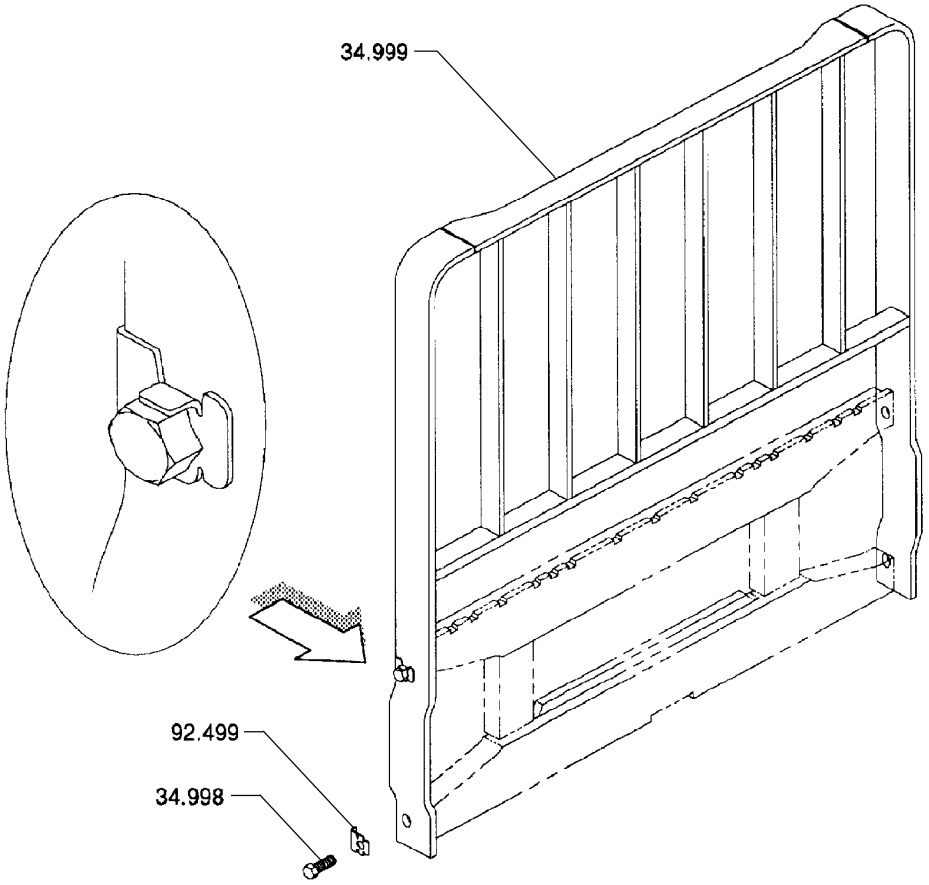

39-547

키이번호 key No.		부품명 Description
34.998	패스너	Fastener, Load Safety Back Rest
34.999	백 레스트	Back Rest, Load Safety-Complete
92.499	로크와셔	Lockwasher, Load Safety Back Rest Fastener


NOISE REDUCTION INSTALLATION (OPTION)

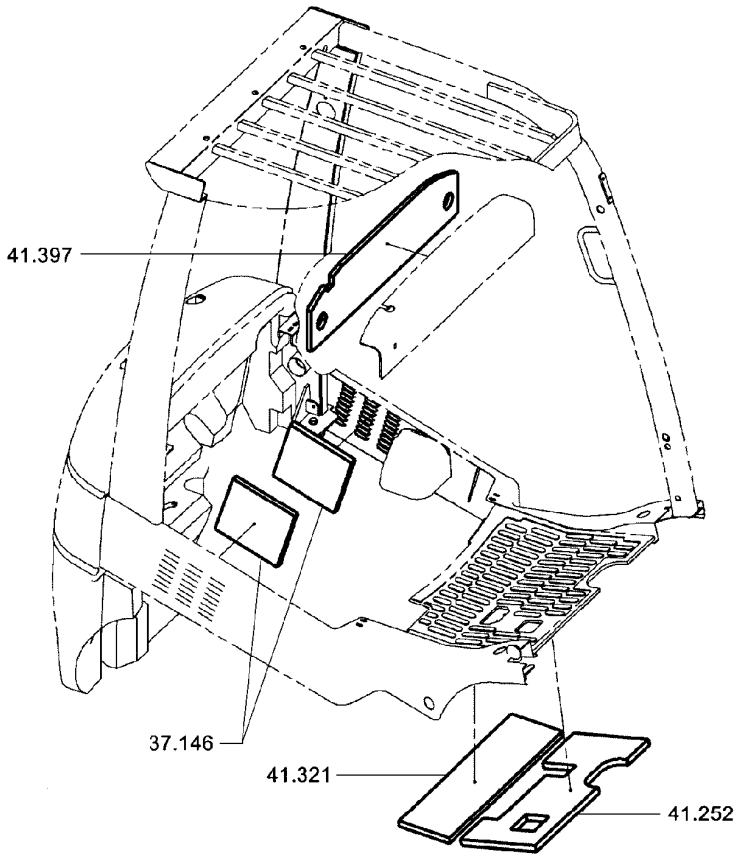

39-559

키이번호 key No.		부품명 Description
37.146	흡음재	Sound Absorber, Overhead Guard
41.252	사운드 시일	Sound Seal, Floor Plate Front
41.321	사운드 시일	Sound Seal, Floor Plate Rear
41.397	흡음재	Sound Absorber, Radiator Cover


SEAT ASSEMBLY (MICHIGAN) - (OPTION)

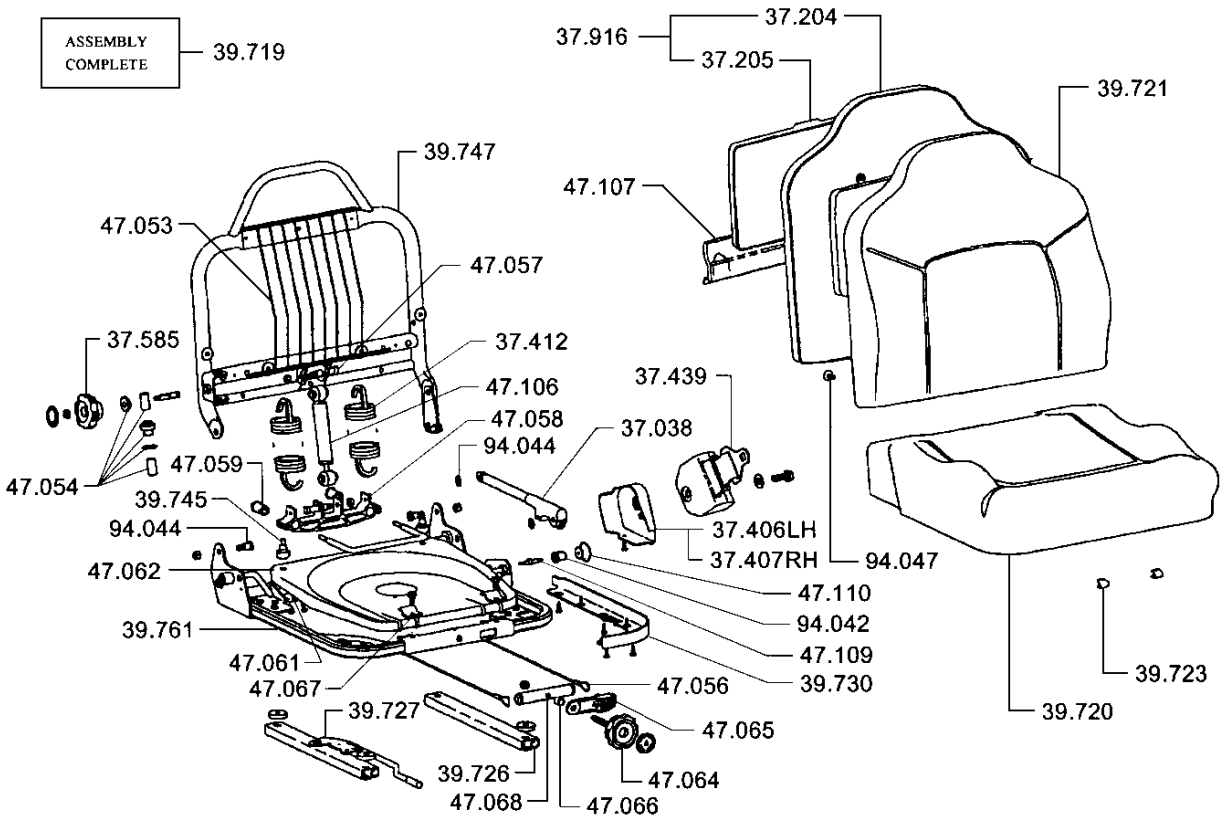

39-565

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
37.038	어드져스터	Adjustor, Seat Return Linkage	47.054	기어	Gear Kit
37.204	커버	Cover, Seat Back Rest Cushion	47.056	클립	Clip, Spring
37.205	트레이	Tray, Literature	47.057	핀	Pin, Back Frame Shock
37.406	브래킷	Bracket, Seat Back Rest Cover Lh	47.058	샤들 스프링	Saddle Spring, Spring Arm
37.407	브래킷	Bracket, Seat Back Rest Cover Rh	47.059	샤들 부싱	Saddle Bushing, Spring Arm
37.412	스프링	Spring, Seat Suspension Tension	47.061	베어링	Bearing, Spring Arm
37.439	안전밸트	Safety Belt, Seat	47.062	팬	Pan, Suspension
37.585	노브	Knob, Seat Back Rest Cushion Adjustor	47.064	노브	Knob, Seat Assembly Weight Adjuster
37.916	커버	Cover, Seat Suspension Back Side	47.065	웨이트인디케이터	Weight Indicator Assembly
39.719	시트 조립체	Seat Assembly	47.066	스페이서	Spacer, Seat Assembly Weight Adjust Screw
39.720	쿠션	Cushion, Seat	47.067	클립	Clip, Front Seat Frame
39.721	쿠션	Cushion, Seat Back Rest	47.068	바아	Bar, Weight Adjuster
39.723	클립	Clip, Seat Back Rest To Frame	47.106	쇽 압쇼버	Shock Absorber, Suspension Seat
39.726	어드져스터	Adjustor, Seat	47.107	커버	Cover, Mechanism
39.727	어드져스터	Adjustor, Seat With Latch	47.109	노브	Knob, Fold Down Seat
39.730	커버	Cover, Seat Cushion	47.110	플런저	Plunger, Fold Down Seat
39.745	범퍼	Bumper, Seat Support	94.042	스페이서	Spacer, Seat Back Rest Cover Fastener
39.747	플레이트	Plate, Seat Back Rest Cushion Mounting	94.044	패스너	Fastener, Seat Cushion Mounting Plate
39.761	플레이트	Plate, Seat Cushion Mounting	94.047	패스너	Fastener, Seat Back Rest Cushion
47.053	룸바	Lumbar Flexolator			


SEAT MOUNTING (OPTION)

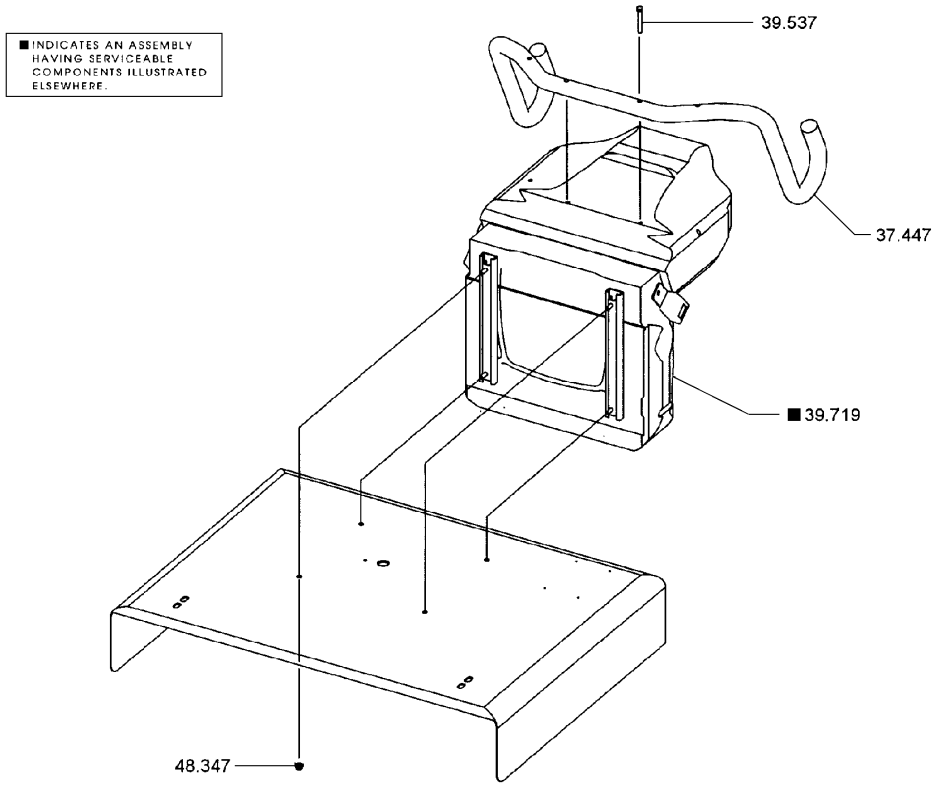

39-584

키이번호 key No.	부품명 Description	
37.447	리스트레인트	Restraint, Operator Seat Lateral
39.537	패스너	Fastener, Top Hood Mounting Bracket
39.719	시트 조립체	Seat Assembly
48.347	패스너	Fastener, Seat Assembly


CAB MOUNTING (OPTION)

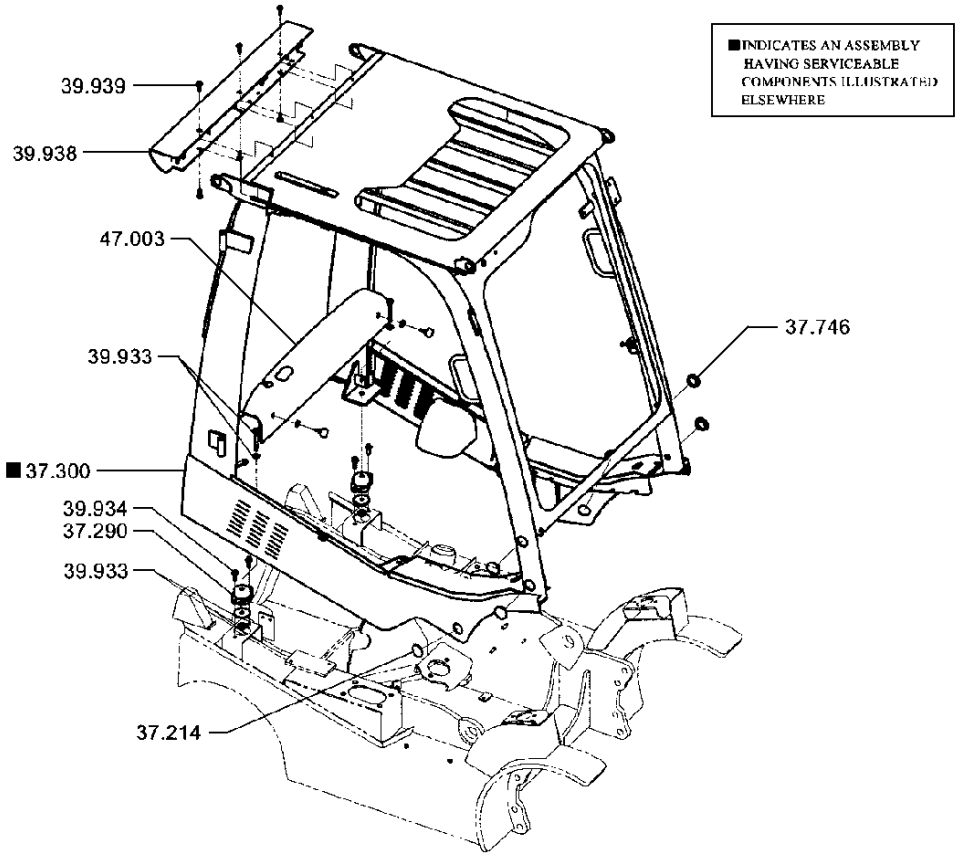

39-597

키이번호 key No.		부품명 Description
37.214	플러그 - 버튼	Plug-Button
37.290	댐퍼너	Dampener, Overhead Guard Vibration
37.300	캡 조립체	Cab Assembly
37.746	플러그	Plug, Driver Overhead Guard
39.933	패스너	Fastener, Overhead Guard
39.934	패스너	Fastener, Overhead Guard
39.938	브래킷	Bracket, Overhead Guard Rear Support
39.939	패스너	Fastener, Overhead Guard Rear Support Bracket
47.003	커버	Cover, Radiator


ENCLOSED CAB (OPTION)

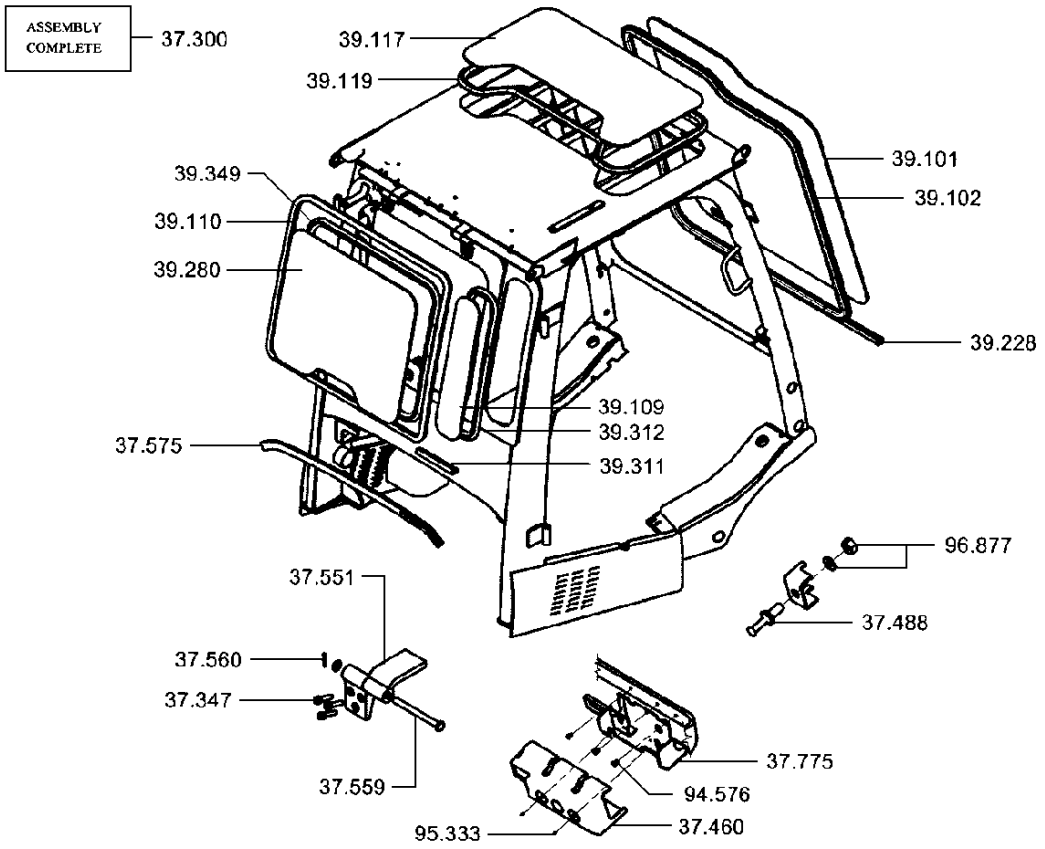

39-612


키이번호 key No.	부품명 Description	
37.300	캡 조립체	Cab Assembly
37.347	브래킷	Bracket, Tilt Steering Column Cover
37.460	커버	Cover, Windshield Wiper Motor
37.488	스트라이커	Striker Plate, Door Inside Latch
37.551	행거	Hanger, Cab Rear Glass
37.559	핀	Pin, Cabin Rear Glass Hanger
37.560	리테이너	Retainer, Cab Rear Glass Hanger Pin
37.575	커버	Cover, Lower Rear Panel
37.775	브래킷	Bracket, Windshield Wiper Motor
39.101	유리	Glass, Windshield
39.102	웨더 시일	Weatherseal, Windshield Setting
39.109	유리	Glass, Rear
39.110	웨더 시일	Weatherseal, Rear Glass Setting
39.117	유리	Glass, Roof Window
39.119	시일 스트립	Seal Strip, Roof Window
39.228	웨더 시일	Weatherseal, Windshield Setting
39.280	유리	Glass, Rear Window - Moveable
39.311	웨더 시일	Weatherseal, Corner Window Rh
39.312	웨더 시일	Weatherseal, Corner Window Lh
39.349	웨더 시일	Weatherseal, Cab Rear Window
94.576	패스너	Fastener, Windshield Wiper Motor Cover
95.333	패스너	Fastener, Windshield Wiper Motor
96.877	패스너	Fastener, Door Inside Latch Striker

ENCLOSED CAB (OPTION)

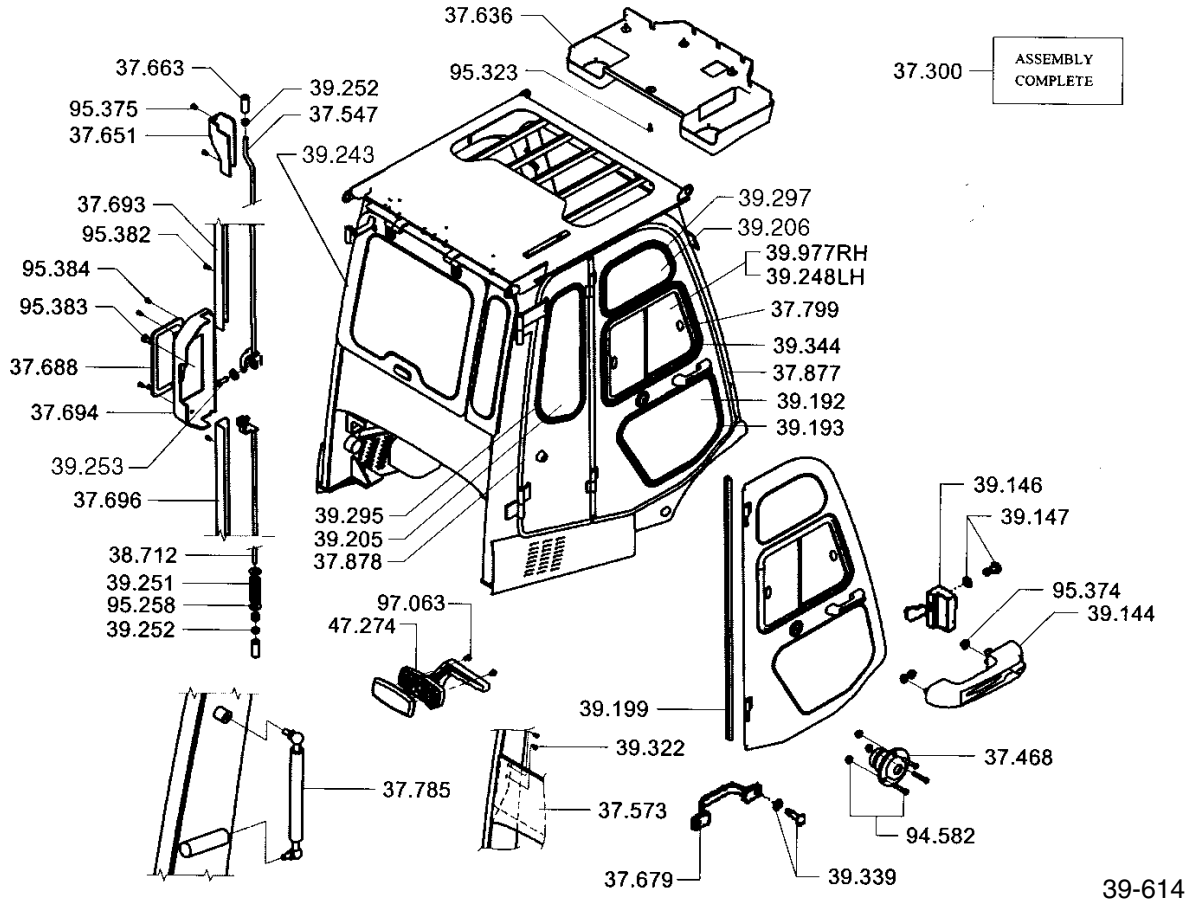

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
37.300	캡 조립체	Cab Assembly	39.205	유리	Glass, Door - Rear
37.468	캐치	Catch, Cab Door Latch	39.206	유리	Glass, Door - Front
37.547	로드	Rod, Rear Glass Installtion	39.243	프레임	Frame, Windshield Glass
37.573	지지대	Support, Door Stop	39.248	창문 조립체	Window Assembly, Cab Door (Lh)
37.636	커버링	Covering, Cab Inside Roof	39.251	스프링	Spring, Door Stop Tension
37.651	커버	Cover, Cab Door Latch Catch Thread Plate	39.252	패스너	Fastener, Door Stop - Door End
37.663	플러그	Plug, Cab Frame	39.253	패스너	Fastener, Door Stop - Anchor End
37.679	핸들	Handle, Rh Door Inside	39.295	웨더 시일	Weatherseal, Door Rear Glass
37.688	러버 플레이트	Rubber Plate, Door Outside Handle	39.297	웨더 시일	Weatherseal, Door Front Glass - Front
37.693	커버	Cover, Door Inside Latch Lh	39.322	패스너	Fastener, Rear Window Guard
37.694	커버	Cover, Door Inside Latch Rh	39.339	패스너	Fastener, Rh Door Inside Handle
37.696	커버	Cover, Door Inside Latch Lh	39.344	웨더 시일	Weatherseal, Rh Door Window Assembly
37.785	쇽 압쇼버	Shock Absorber, Cab Inspection Frame	39.977	창문 조립체	Window Assembly, Cab Door (Rh)
37.799	래치	Latch, Cab Door Window Assembly	47.274	핸들	Handle, Rear Door
37.877	프레임	Frame, Cab Door-Rh	94.582	패스너	Fastener, Cab Door Latch Catch
37.878	프레임	Frame, Cab Door-Lh	95.258	너트	Nut, Cab Door Spring Lock Support Fastener
38.712	로드	Rod, Release Lever Actuating	95.323	패스너	Fastener, Cab Inside Roof Covering
39.144	핸들	Handle, Rh Door Outside	95.374	와셔	Washer, Door Inside Handle Fastener
39.146	래치	Latch, Right Hand Door Inside	95.375	패스너	Fastener, Door Inside Cover
39.147	패스너	Fastener, Right Hand Door Latch	95.382	패스너	Fastener, Door Inside Handle
39.192	유리	Glass, Right Hand Door (Lower)	95.383	패스너	Fastener, Door Inside Latch Cover
39.193	웨더 시일	Weatherseal, Rh Door Glass (Lower)	95.384	패스너	Fastener, Door Inside Latch Cover
39.199	채널	Channel, Left Hand Door Glass	97.063	패스너	Fastener, Handle Rear Door Mounting


ENCLOSED CAB (OPTION)

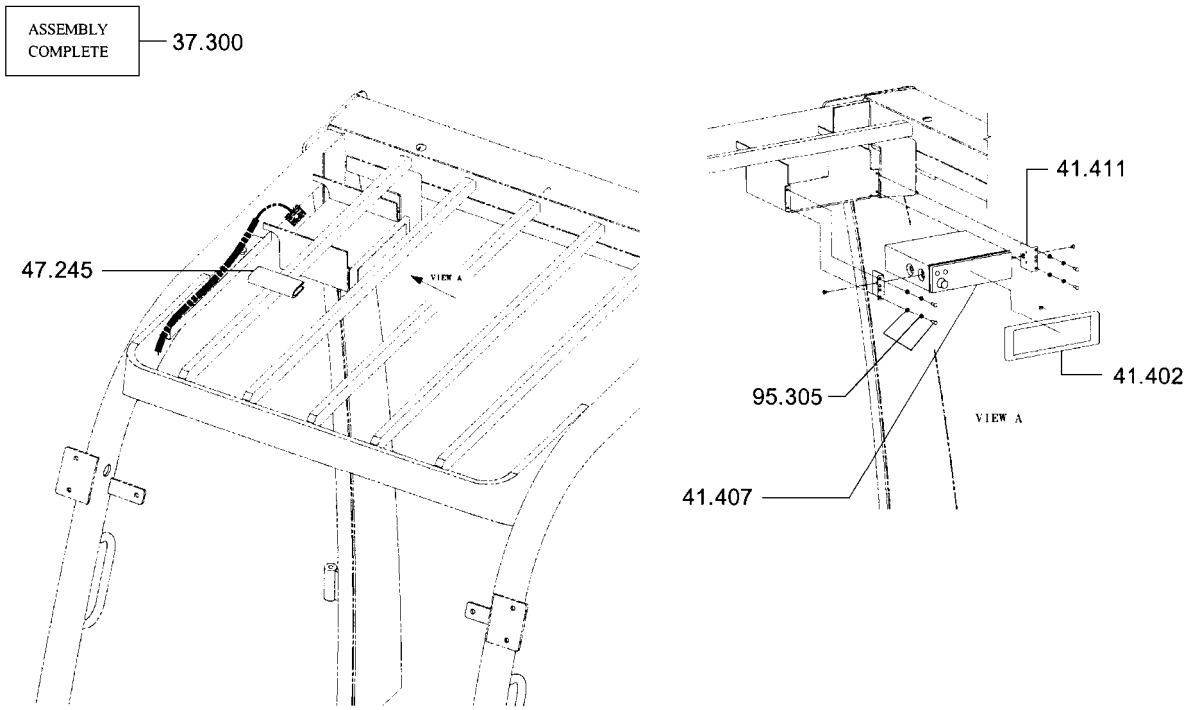

39-626

키이번호 key No.		부품명 Description
37.300	캡 조립체	Cab Assembly
41.402	커버	Cover, Radio And Transceiver Mounting Box
41.407	라디오	Radio
41.411	브래킷	Bracket, Radio And Transceiver Box Mounting
47.245	매뉴얼	Manual, Cassette
95.305	패스너	Fastener, Radio And Transceiver Box To Mounting Bracket


ENCLOSED CAB (OPTION)

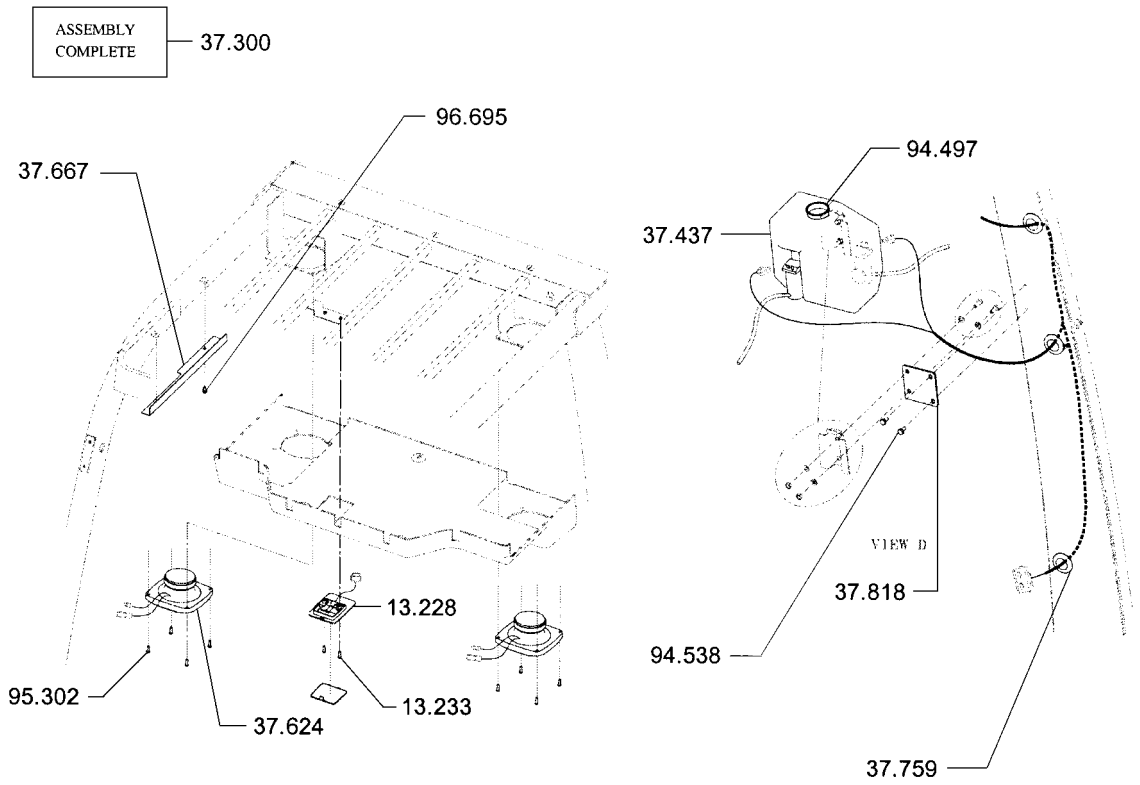

39-627

키이번호 key No.		부품명 Description
13.228	램프 조립체	Lamp Assembly, Dome
13.233	패스너	Fastener, Dome Lamp
37.300	캡 조립체	Cab Assembly
37.437	펌프 & 탱크	Pump & Tank, Windshield Washer
37.624	스피커	Speaker, Cabin
37.667	커버	Cover, Cab Rear Panel Wiper Motor
37.759	그로멧	Grommet, Cab Front Frame Harness
37.818	브래킷	Bracket, Windshield Washer Tank
94.497	패스너	Fastener, Windshield Washer Tank
94.538	와셔	Washer, Windshield Washer Tank Fastener
95.302	패스너	Fastener, Loudspeaker
96.695	패스너	Fastener, Wire Mounting


ENCLOSED CAB (OPTION)

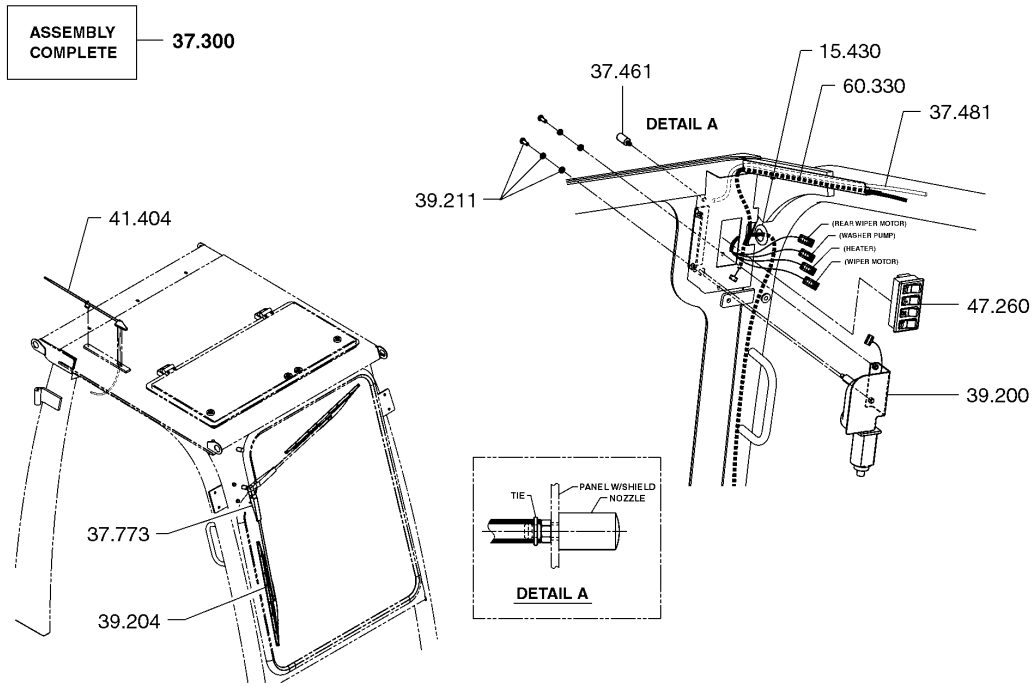

39-628

키이번호 key No.		부품명 Description
15.430	그로멧	Grommet, Cabin Wiring Harness
37.300	캡 조립체	Cab Assembly
37.461	노즐	Nozzle, Windshield Glass Washer
37.481	라인	Line, Window Glass Washer
37.773	윈드실드 와이퍼	Windshield Wiper Installation
39.200	모터	Motor, Windshield Wiper
39.204	블레이드	Blade, Windshield Wiper
39.211	패스너	Fastener, Wiper Motor Mounting
41.404	안테나	Antenna, Radio
47.260	스위치 조립체	Switch Assembly, Cabin
60.330	전기배선	Wiring Harness, Cab


ENCLOSED CAB (OPTION)

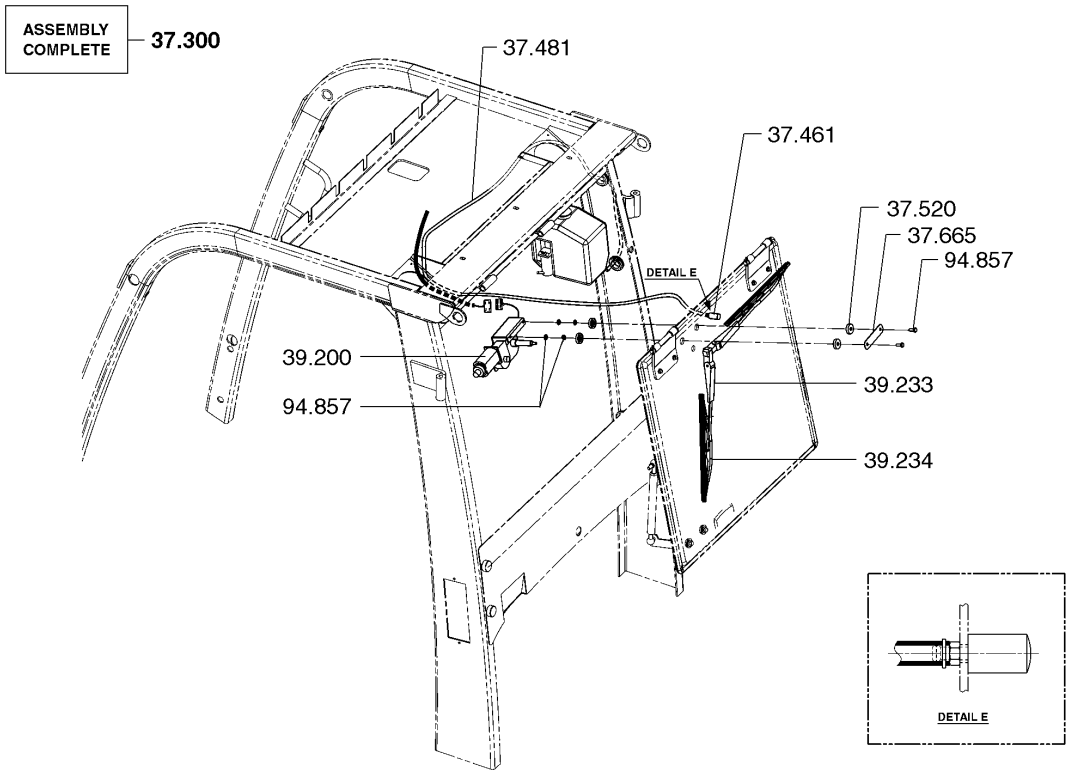

39-629

키이번호 key No.		부품명 Description
37.300	캡 조립체	Cab Assembly
37.461	노즐	Nozzle, Windshield Glass Washer
37.481	라인	Line, Window Glass Washer
37.520	부트	Boot, Rear Window Wiper Arm Shaft
37.665	가스킷	Gasket, Rear Window Wiper Motor Mounting
39.200	모터	Motor, Windshield Wiper
39.233	아암	Arm, Rear Window Wiper
39.234	블레이드	Blade, Rear Window Wiper
94.857	패스너	Fastener, Rear Window Wiper Arm


ENCLOSED CAB (OPTION)

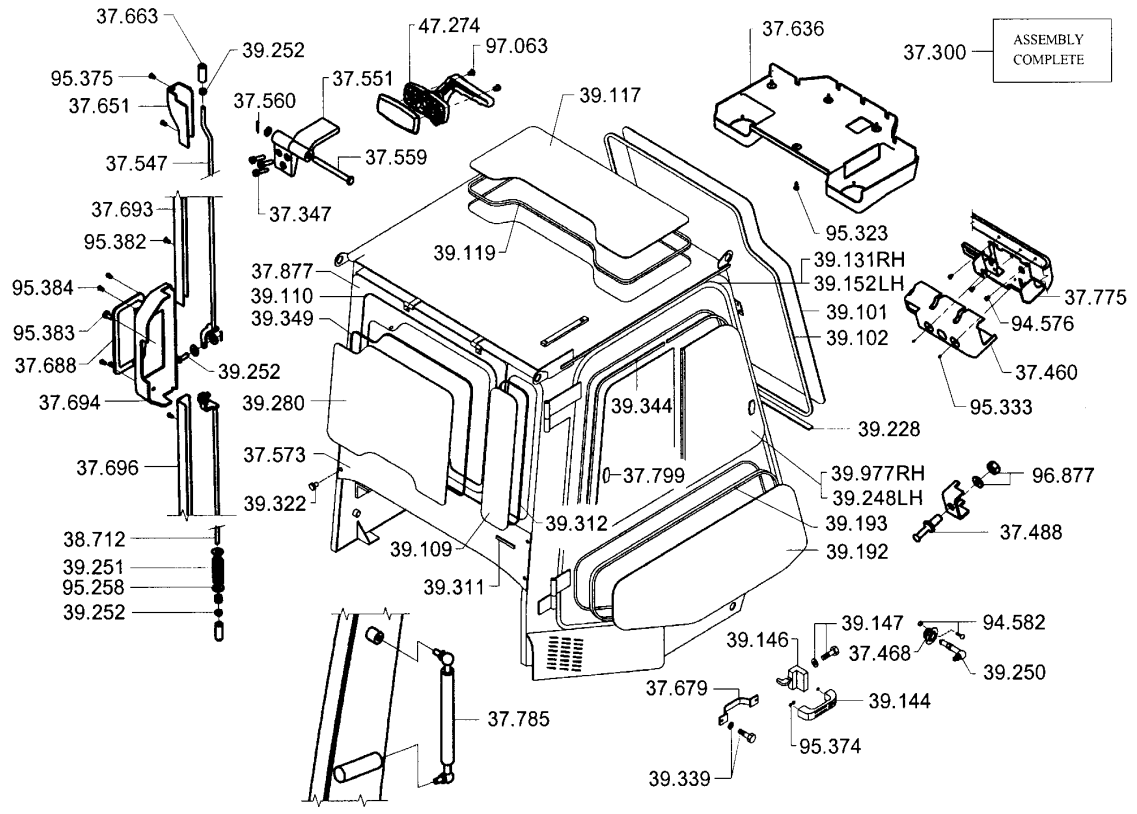

39-632

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
37.300	캡 조립체	Cab Assembly	39.146	래치	Latch, Right Hand Door Inside
37.347	브래킷	Bracket, Tilt Steering Column Cover	39.147	패스너	Fastener, Right Hand Door Latch
37.460	커버	Cover, Windshield Wiper Motor	39.152	도어 조립체	Door Assembly, Left Hand
37.468	캐치	Catch, Cab Door Latch	39.192	유리	Glass, Right Hand Door (Lower)
37.488	스트라이커	Striker Plate, Door Inside Latch	39.193	웨더 시일	Weatherseal, Rh Door Glass (Lower)
37.547	로드	Rod, Rear Glass Installtion	39.228	웨더 시일	Weatherseal, Windshield Setting
37.551	행거	Hanger, Cab Rear Glass	39.248	창문 조립체	Window Assembly, Cab Door (Lh)
37.559	핀	Pin, Cabin Rear Glass Hanger	39.250	스톱	Stop, Door
37.560	리테이너	Retainer, Cab Rear Glass Hanger Pin	39.251	스프링	Spring, Door Stop Tension
37.573	지지대	Support, Door Stop	39.252	패스너	Fastener, Door Stop - Door End
37.636	커버링	Covering, Cab Inside Roof	39.280	유리	Glass, Rear Window - Moveable
37.651	커버	Cover, Cab Door Latch Catch Thread Plate	39.311	웨더 시일	Weatherseal, Corner Window Rh
37.663	플러그	Plug, Cab Frame	39.312	웨더 시일	Weatherseal, Corner Window Lh
37.679	핸들	Handle, Rh Door Inside	39.322	패스너	Fastener, Rear Window Guard
37.688	러버 플레이트	Rubber Plate, Door Outside Handle	39.339	패스너	Fastener, Rh Door Inside Handle
37.693	커버	Cover, Door Inside Latch Lh	39.344	웨더 시일	Weatherseal, Rh Door Window Assembly
37.694	커버	Cover, Door Inside Latch Rh	39.349	웨더 시일	Weatherseal, Cab Rear Window
37.696	커버	Cover, Door Inside Latch Lh	39.977	창문 조립체	Window Assembly, Cab Door (Rh)
37.775	브래킷	Bracket, Windshield Wiper Motor	47.274	핸들	Handle, Rear Door
37.785	쇽 압쇼버	Shock Absorber, Cab Inspection Frame	94.576	패스너	Fastener, Windshield Wiper Motor Cover
37.799	래치	Latch, Cab Door Window Assembly	94.582	패스너	Fastener, Cab Door Latch Catch
37.877	프레임	Frame, Cab Door-Rh	95.258	너트	Nut, Cab Door Spring Lock Support Fastener
38.712	로드	Rod, Release Lever Actuating	95.323	패스너	Fastener, Cab Inside Roof Covering
39.101	유리	Glass, Windshield	95.333	패스너	Fastener, Windshield Wiper Motor
39.102	웨더 시일	Weatherseal, Windshield Setting	95.374	와셔	Washer, Door Inside Handle Fastener
39.109	유리	Glass, Rear	95.375	패스너	Fastener, Door Inside Cover
39.110	웨더 시일	Weatherseal, Rear Glass Setting	95.382	패스너	Fastener, Door Inside Handle
39.117	유리	Glass, Roof Window	95.383	패스너	Fastener, Door Inside Latch Cover
39.119	시일 스트립	Seal Strip, Roof Window	95.384	패스너	Fastener, Door Inside Latch Cover
39.131	도어 조립체	Door Assembly, Right Hand	96.877	패스너	Fastener, Door Inside Latch Striker
39.144	핸들	Handle, Rh Door Outside	97.063	패스너	Fastener, Handle Rear Door Mounting


SPONGE MOUNTING

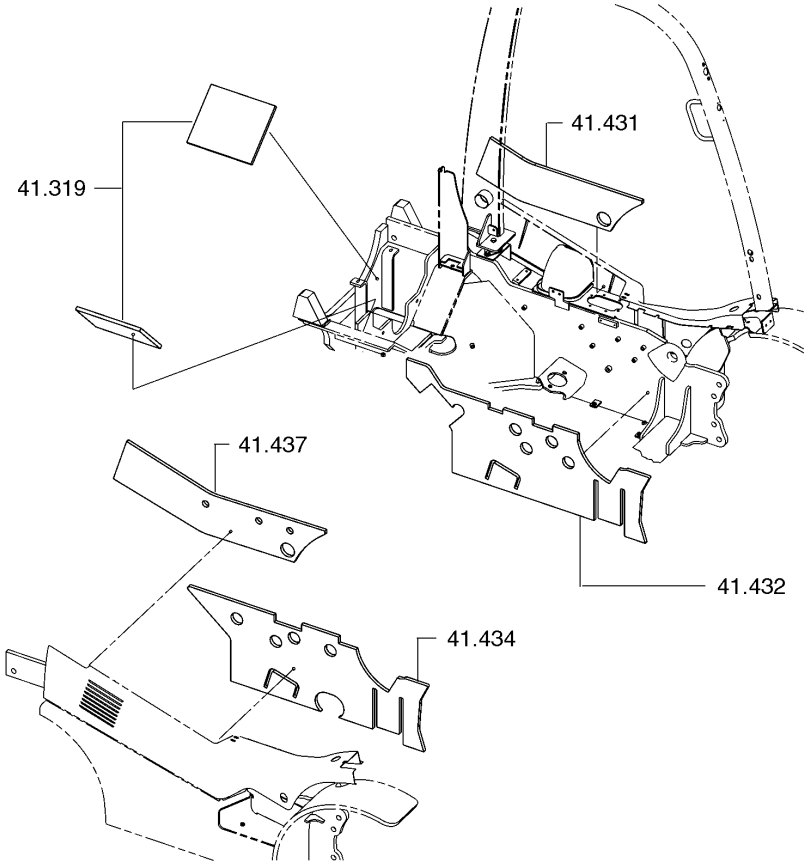

39-672


키이번호 key No.		부품명 Description
41.319	사운드 시일	Sound Seal, Rear Frame Lower
41.431	사운드 시일	Sound Seal, Frame Upper Lh
41.432	사운드 시일	Sound Seal, Frame Lower Lh
41.434	사운드 시일	Sound Seal, Frame Lower Rh
41.437	사운드 시일	Sound Seal, Frame Rh Upper

HOOD MOUNTING

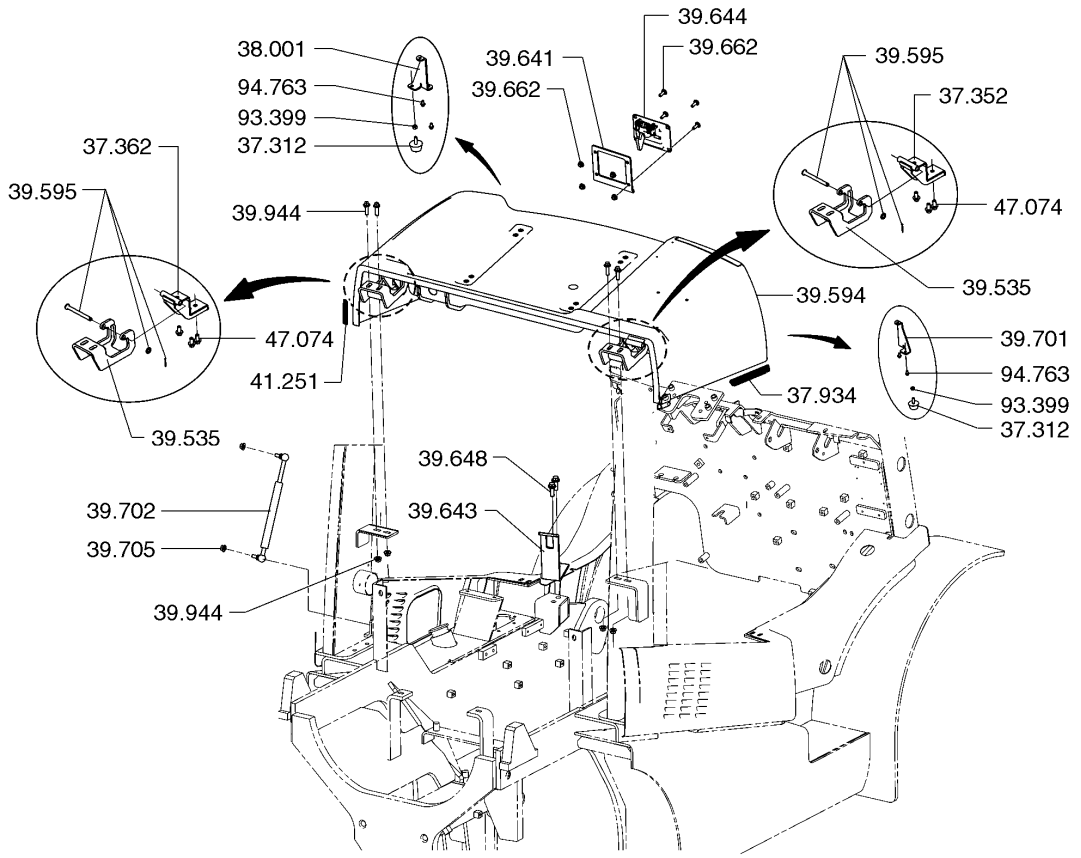

39-673


키이번호 key No.		부품명 Description
37.312	스톱	Stop, Top Hood
37.352	브래킷	Bracket, Top Hood Spring (Rh)
37.362	브래킷	Bracket, Top Hood Spring (Lh)
37.934	시일	Seal, Hood Access Cover
38.001	브래킷	Bracket, Hood Support
39.535	브래킷	Bracket, Top Hood Mounting
39.594	후드	Hood, Top
39.595	패스너	Fastener, Top Hood
39.641	플레이트	Plate, Top Hood Latch Mounting
39.643	캐치	Catch, Top Hood Latch
39.644	래치	Latch, Top Hood
39.648	패스너	Fastener, Top Hood Latch Catch
39.662	패스너	Fastener, Top Hood Latch Bracket
39.701	스톱	Stop, Hood Prop
39.702	프롭	Prop, Hood
39.705	패스너	Fastener, Hood Prop
39.944	패스너	Fastener, Overhead Guard Bracket
41.251	사운드 시일	Sound Seal, Top Hood
47.074	패스너	Fastener, Top Hood Spring Bracket
93.399	패스너	Fastener, Top Hood Stop
94.763	패스너	Fastener, Hood Support

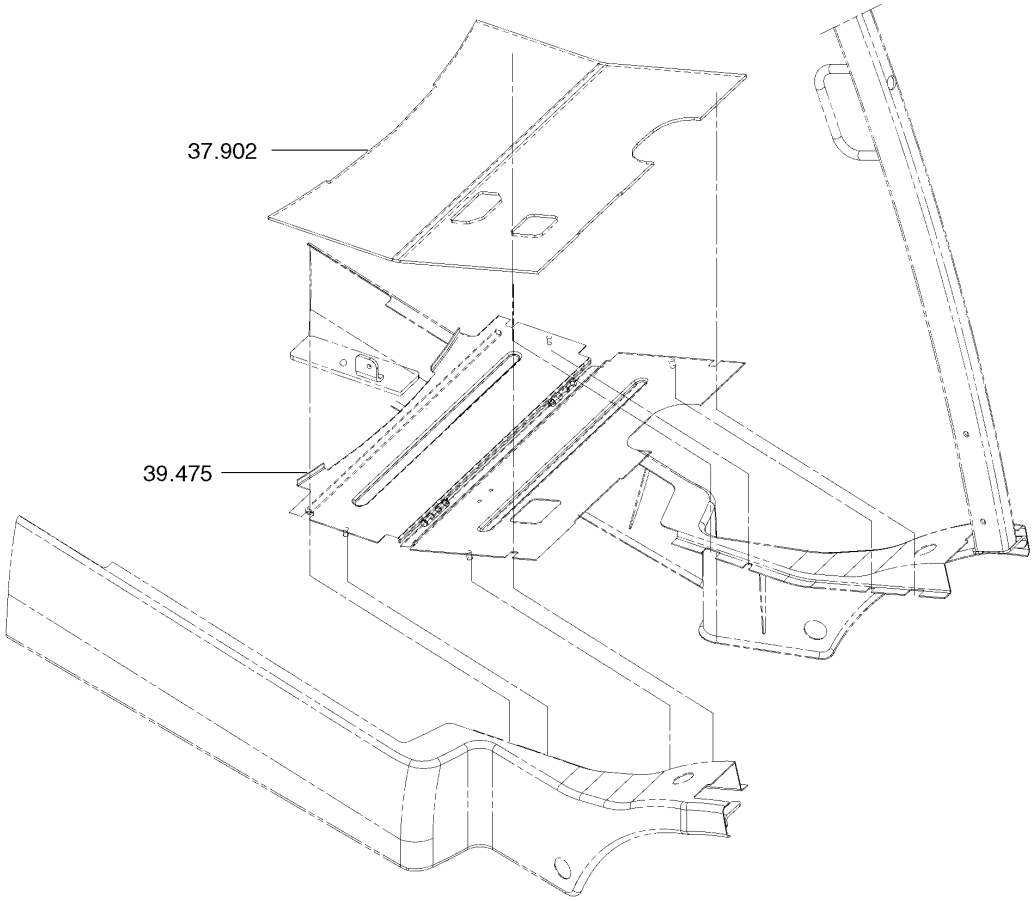

39-674

키이번호 key No.		부품명 Description
37.902	매트	Mat, Floorplate
39.475	플레이트	Plate, Front Floor


SHEET METAL & TRIM

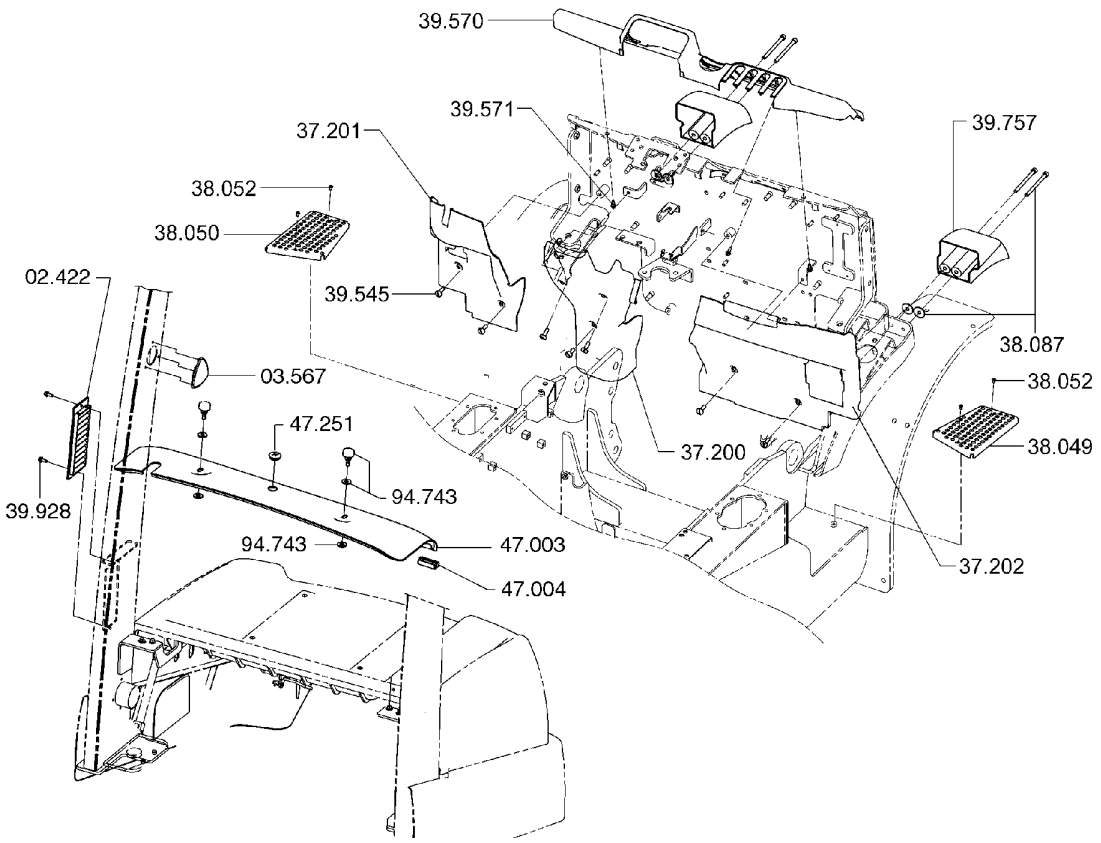

39-675

키이번호 key No.		부품명 Description
02.422	스크린	Screen, Engine Intake Air
03.567	플러그	Plug, Air Intake Driver Overhead Guard
37.200	판넬	Panel, Front
37.201	판넬	Panel, Lh Side
37.202	판넬	Panel, Rh Side
38.049	스텝 조립체	Step Assembly, Rh
38.050	스텝 조립체	Step Assembly, LH
38.052	패스너	Fastener, Step Front
38.087	패스너	Fastener, Cowl Support Front
39.545	패스너	Fastener, Cowl Access Hole Cover
39.570	커버 조립체	Cover Assembly, Dash
39.571	패스너	Fastener, Dash Cover
39.757	커버	Cover, Frame End
39.928	패스너	Fastener, Overhead Guard Gate
47.003	커버	Cover, Radiator
47.004	시일 스트립	Seal Strip
47.251	그로멧	Grommet, Radiator Cover
94.743	패스너	Fastener, Radiator Cover Trim


ENCLOSED CAB (OPTION)

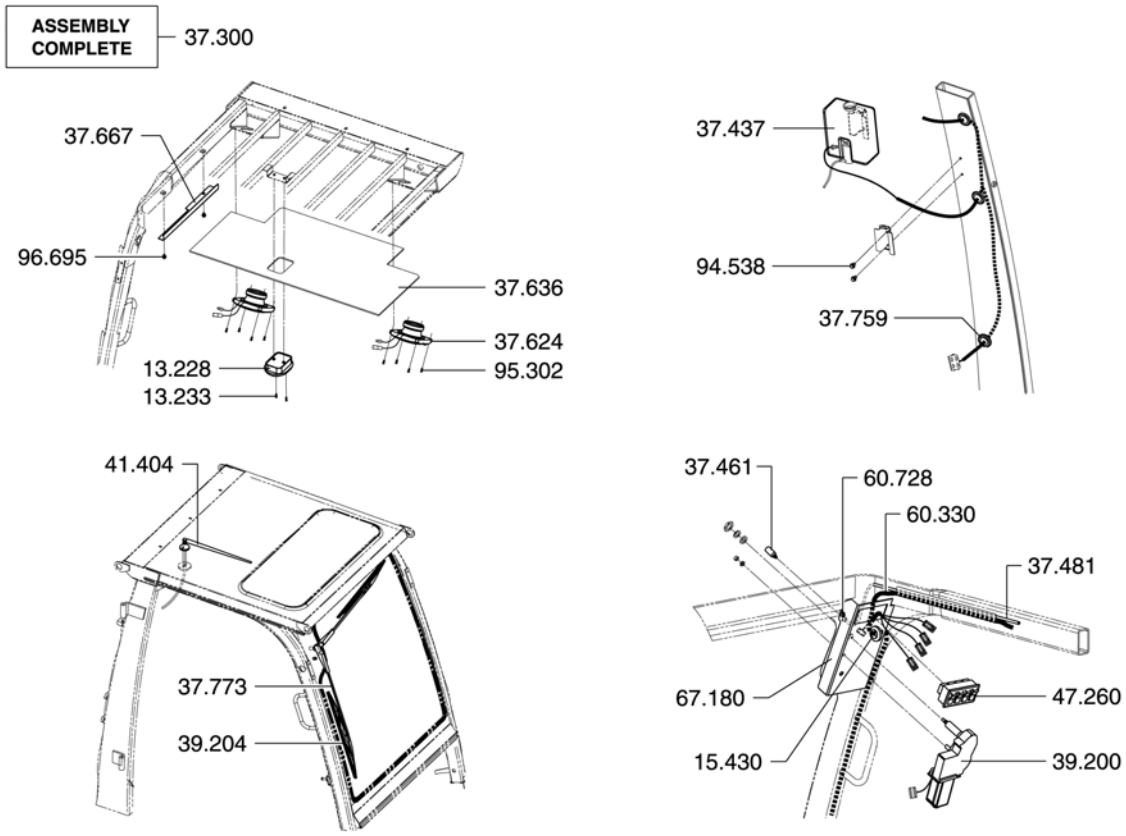

39-792

키이번호 key No.	부품명 Description	
13.228	램프 조립체	Lamp Assembly, Dome
13.233	패스너	Fastener, Dome Lamp
15.430	그로멧	Grommet, Cabin Wiring Harness
37.300	캡 조립체	Cab Assembly
37.437	펌프 & 탱크	Pump & Tank, Windshield Washer
37.461	노즐	Nozzle, Windshield Glass Washer
37.481	라인	Line, Window Glass Washer
37.624	스피커	Speaker, Cabin
37.636	커버링	Covering, Cab Inside Roof
37.667	커버	Cover, Cab Rear Panel Wiper Motor
37.759	그로멧	Grommet, Cab Front Frame Harness
37.773	윈드실드 와이퍼	Windshield Wiper Installation
39.200	모터	Motor, Windshield Wiper
39.204	블레이드	Blade, Windshield Wiper
41.404	안테나	Antenna, Radio
47.260	스위치 조립체	Switch Assembly, Cabin
60.330	전기배선	Wiring Harness, Cab
60.728	스크류	Capscrew, Bracket Fastener
67.180	브래킷	Bracket, Switch MTG
94.538	와셔	Washer, Windshield Washer Tank Fastener
95.302	패스너	Fastener, Loudspeaker
96.695	패스너	Fastener, Wire Mounting


ENCLOSED CAB (OPTION)

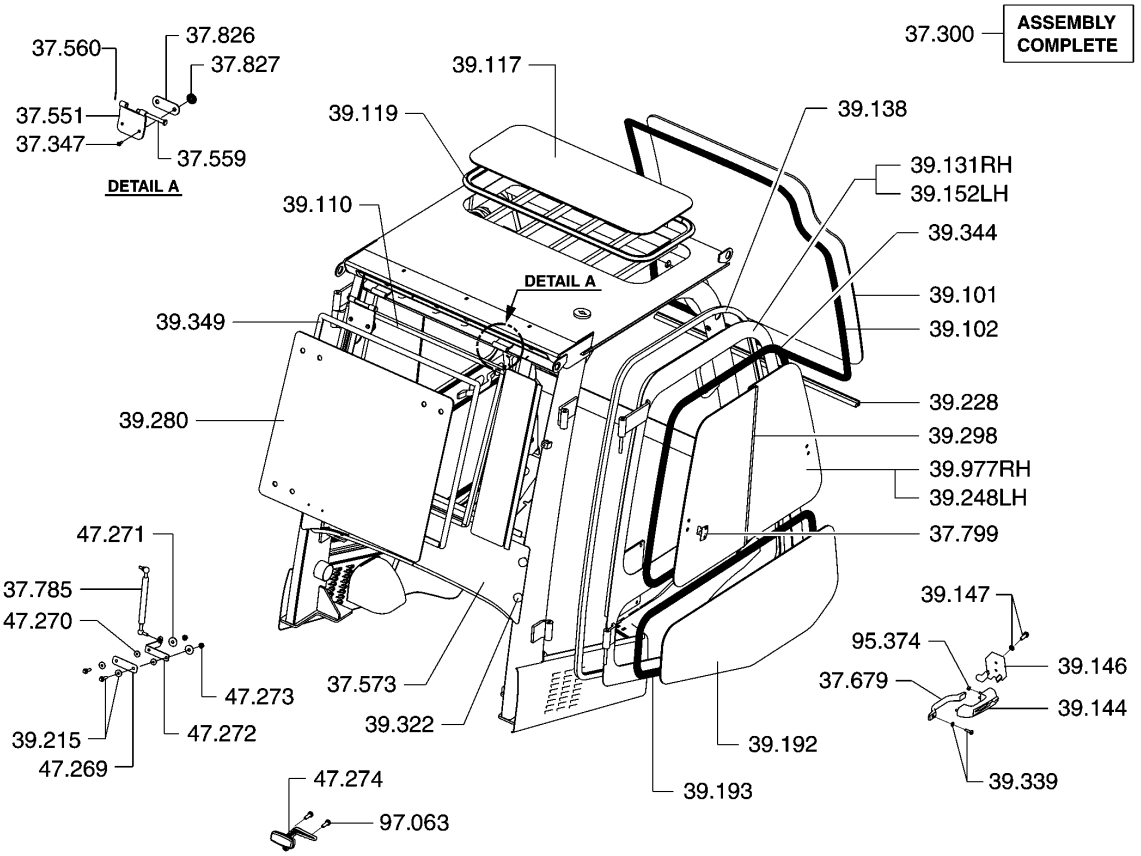

39-796

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
37.300	캡 조립체	Cab Assembly	39.152	도어 조립체	Door Assembly, Left Hand
37.347	브래킷	Bracket, Tilt Steering Column Cover	39.192	유리	Glass, Right Hand Door (Lower)
37.551	행거	Hanger, Cab Rear Glass	39.193	웨더 시일	Weatherseal, Rh Door Glass (Lower)
37.559	핀	Pin, Cabin Rear Glass Hanger	39.215	패스너	Fastener, Gas Spring
37.560	리테이너	Retainer, Cab Rear Glass Hanger Pin	39.228	웨더 시일	Weatherseal, Windshield Setting
37.573	지지대	Support, Door Stop	39.248	창문 조립체	Window Assembly, Cab Door (Lh)
37.679	핸들	Handle, Rh Door Inside	39.280	유리	Glass, Rear Window - Moveable
37.785	쇽 압쇼버	Shock Absorber, Cab Inspection Frame	39.298	채널	Channel, Front Door Glass - Front
37.799	래치	Latch, Cab Door Window Assembly	39.322	패스너	Fastener, Rear Window Guard
37.826	브래킷	Bracket, Cab Rear Panel Fastener Protection	39.339	패스너	Fastener, Rh Door Inside Handle
37.827	캡	Cap, Rear Panel Dampener Bracket Fastener Protection	39.344	웨더 시일	Weatherseal, Rh Door Window Assembly
39.101	유리	Glass, Windshield	39.349	웨더 시일	Weatherseal, Cab Rear Window
39.102	웨더 시일	Weatherseal, Windshield Setting	39.977	창문 조립체	Window Assembly, Cab Door (Rh)
39.110	웨더 시일	Weatherseal, Rear Glass Setting	47.269	브래켓	Bracket, Gas Spring Support
39.117	유리	Glass, Roof Window	47.270	러버	Rubber, Gas Spring
39.119	시일 스트립	Seal Strip, Roof Window	47.271	러버	Rubber, Gas Spring Mtg
39.131	도어 조립체	Door Assembly, Right Hand	47.272	브래킷	Bracket, Gas Spring Mtg
39.138	웨더 시일	Weatherseal, Right Hand Door	47.273	너트	Nut, Gas Spring
39.144	핸들	Handle, Rh Door Outside	47.274	핸들	Handle, Rear Door
39.146	래치	Latch, Right Hand Door Inside	95.374	와셔	Washer, Door Inside Handle Fastener
39.147	패스너	Fastener, Right Hand Door Latch	97.063	패스너	Fastener, Handle Rear Door Mounting


ENCLOSED CAB (OPTION)

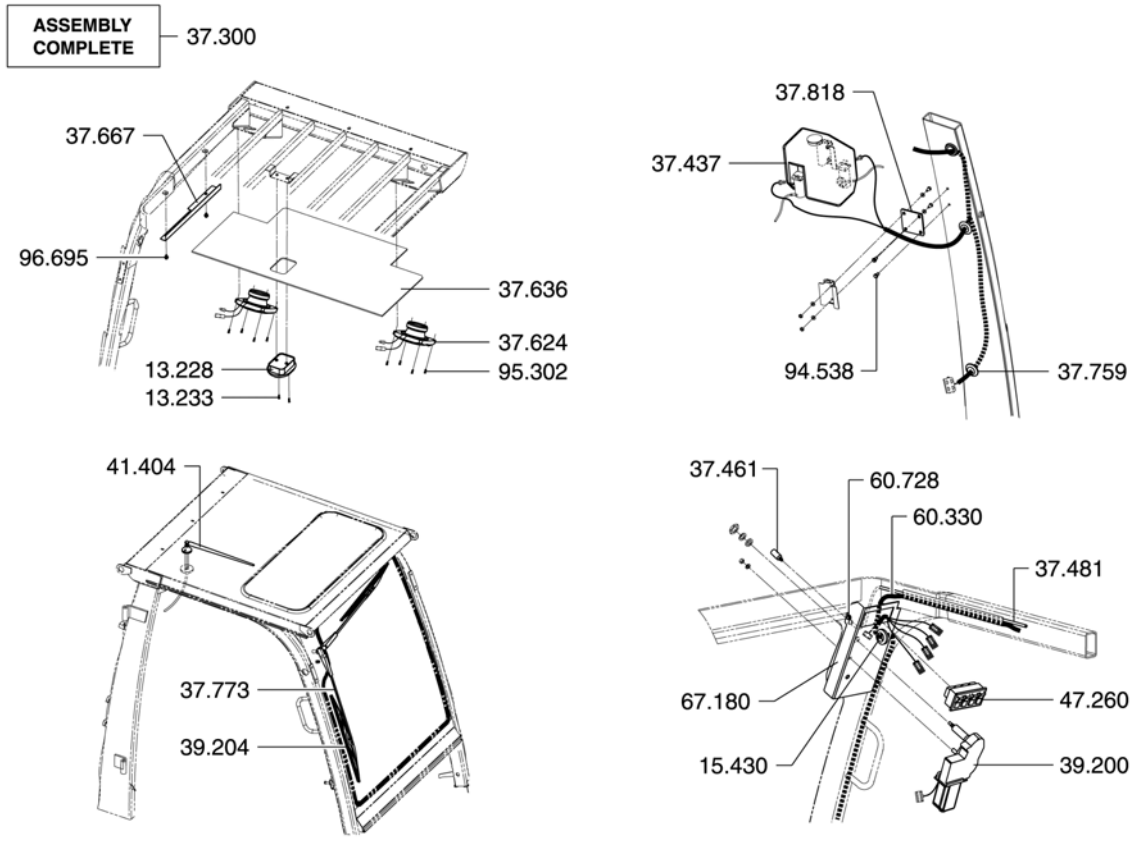

39-836


키이번호 key No.	부품명 Description	
13.228	램프 조립체	Lamp Assembly, Dome
13.233	패스너	Fastener, Dome Lamp
15.430	그로멧	Grommet, Cabin Wiring Harness
37.300	캡 조립체	Cab Assembly
37.437	펌프 & 탱크	Pump & Tank, Windshield Washer
37.461	노즐	Nozzle, Windshield Glass Washer
37.481	라인	Line, Window Glass Washer
37.624	스피커	Speaker, Cabin
37.636	커버링	Covering, Cab Inside Roof
37.667	커버	Cover, Cab Rear Panel Wiper Motor
37.759	그로멧	Grommet, Cab Front Frame Harness
37.773	윈드실드 와이퍼	Windshield Wiper Installation
37.818	브래킷	Bracket, Windshield Washer Tank
39.200	모터	Motor, Windshield Wiper
39.204	블레이드	Blade, Windshield Wiper
41.404	안테나	Antenna, Radio
47.260	스위치 조립체	Switch Assembly, Cabin
60.330	전기배선	Wiring Harness, Cab
60.728	스크류	Capscrew, Bracket Fastener
67.180	브래킷	Bracket, Switch MTG.
94.538	와셔	Washer, Windshield Washer Tank Fastener
95.302	패스너	Fastener, Loudspeaker
96.695	패스너	Fastener, Wire Mounting

ENCLOSED CAB (OPTION)

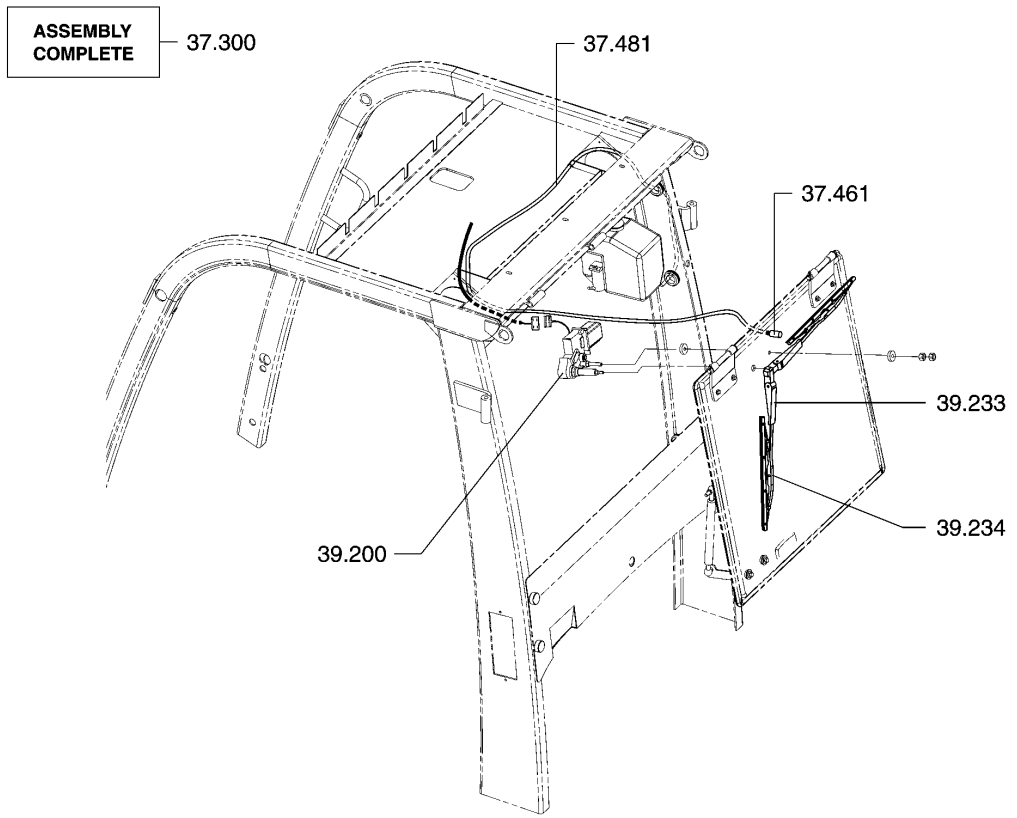


키이번호 key No.		부품명 Description
37.300	캡 조립체	Cab Assembly
37.461	노즐	Nozzle, Windshield Glass Washer
37.481	라인	Line, Window Glass Washer
39.200	모터	Motor, Windshield Wiper
39.233	아암	Arm, Rear Window Wiper
39.234	블레이드	Blade, Rear Window Wiper

ENCLOSED CAB (OPTION)

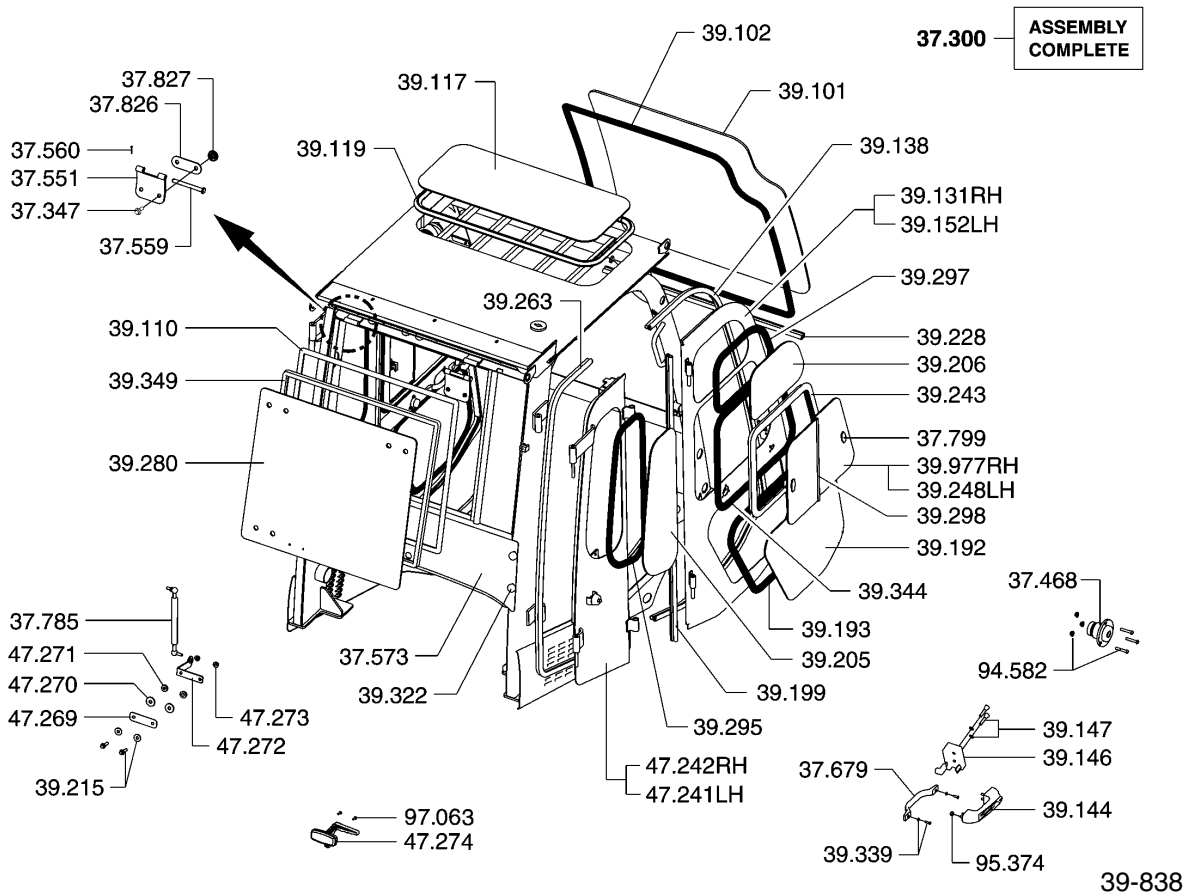

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
37.300	캡 조립체	Cab Assembly	39.206	유리	Glass, Door - Front
37.347	브래킷	Bracket, Tilt Steering Column Cover	39.215	패스너	Fastener, Gas Spring
37.468	캐치	Catch, Cab Door Latch	39.228	웨더 시일	Weatherseal, Windshield Setting
37.551	행거	Hanger, Cab Rear Glass	39.243	프레임	Frame, Windshield Glass
37.559	핀	Pin, Cabin Rear Glass Hanger	39.248	창문 조립체	Window Assembly, Cab Door (Lh)
37.560	리테이너	Retainer, Cab Rear Glass Hanger Pin	39.263	웨더 시일	Weatherseal, Cab To Truck - Rear
37.573	지지대	Support, Door Stop	39.280	유리	Glass, Rear Window - Moveable
37.679	핸들	Handle, Rh Door Inside	39.295	웨더 시일	Weatherseal, Door Rear Glass
37.785	쇽 압쇼버	Shock Absorber, Cab Inspection Frame	39.297	웨더 시일	Weatherseal, Door Front Glass - Front
37.799	래치	Latch, Cab Door Window Assembly	39.298	채널	Channel, Front Door Glass - Front
37.826	브래킷	Bracket, Cab Rear Panel Fastener Protection	39.322	패스너	Fastener, Rear Window Guard
37.827	캡	Cap, Rear Panel Dampener Bracket Fastener Protection	39.339	패스너	Fastener, Rh Door Inside Handle
39.101	유리	Glass, Windshield	39.344	웨더 시일	Weatherseal, Rh Door Window Assembly
39.102	웨더 시일	Weatherseal, Windshield Setting	39.349	웨더 시일	Weatherseal, Cab Rear Window
39.110	웨더 시일	Weatherseal, Rear Glass Setting	39.977	창문 조립체	Window Assembly, Cab Door (Rh)
39.117	유리	Glass, Roof Window	47.241	도어 조립체	Door Assy, Cab Rear (RH)
39.119	시일 스트립	Seal Strip, Roof Window	47.242	도어 조립체	Door Assy, Cab Rear (LH)
39.131	도어 조립체	Door Assembly, Right Hand	47.269	브래켓	Bracket, Gas Spring Support
39.138	웨더 시일	Weatherseal, Right Hand Door	47.270	러버	Rubber, Gas Spring
39.144	핸들	Handle, Rh Door Outside	47.271	러버	Rubber, Gas Spring Mtg
39.146	래치	Latch, Right Hand Door Inside	47.272	브래킷	Bracket, Gas Spring Mtg
39.147	패스너	Fastener, Right Hand Door Latch	47.273	너트	Nut, Gas Spring
39.152	도어 조립체	Door Assembly, Left Hand	47.274	핸들	Handle, Rear Door
39.192	유리	Glass, Right Hand Door (Lower)	94.582	패스너	Fastener, Cab Door Latch Catch
39.193	웨더 시일	Weatherseal, Rh Door Glass (Lower)	95.374	와셔	Washer, Door Inside Handle Fastener
39.199	채널	Channel, Left Hand Door Glass	97.063	패스너	Fastener, Handle Rear Door Mounting
39.205	유리	Glass, Door - Rear			


DATA PLATES AND DECALS

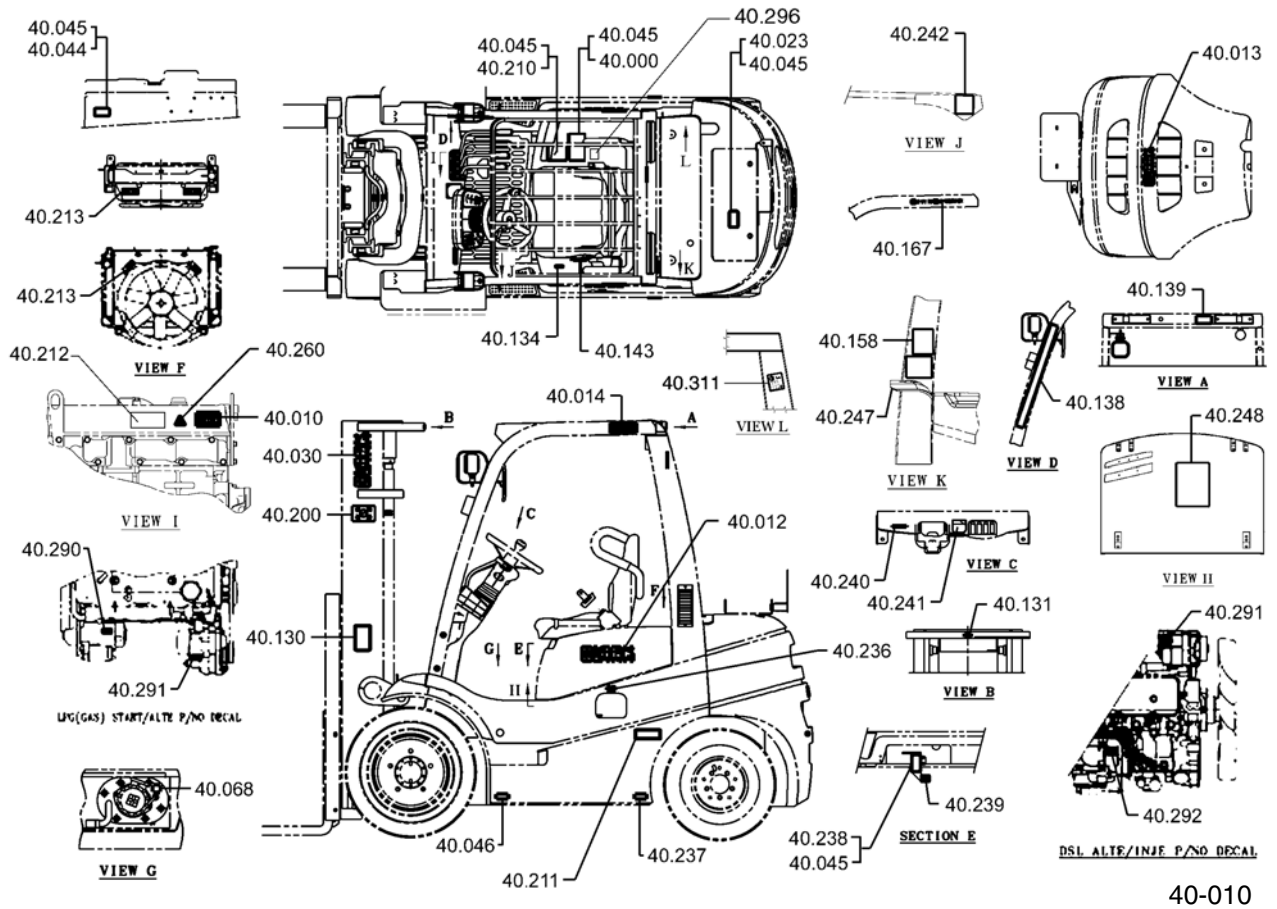

40-010

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
40.000	플레이트	Plate, Capacity & Serial Number	40.200	데칼	Decal, Country Of Origin
40.010	데칼	Decal, Clark	40.210	플레이트	Plate, Name
40.012	데칼	Decal, Clark Logo-Small	40.211	데칼	Decal, Warning
40.013	데칼	Decal, Clark Logo-Large	40.212	데칼	Decal
40.014	데칼	Decal, Model Name	40.213	데칼	Decal, Radiator
40.023	데칼	Decal, Factory Mutual Label	40.236	데칼	Decal, Fuel
40.030	데칼	Decal, Clark Vertical	40.237	데칼	Decal, Tire Pressure
40.044	플레이트	Plate, Manufacturer Name	40.238	데칼	Decal, Fuel Selection
40.045	패스너	Fastener, Name Plate	40.239	데칼	Decal, Fuel Selection Switch
40.046	데칼	Decal, Tire Pressure	40.240	데칼	Decal, Fuel Warning
40.068	데칼	Decal, Hyd-System Oil	40.241	데칼	Decal, Brake Oil spec
40.130	범례	Legend, Safety	40.242	데칼	Decal, Warning
40.131	범례	Legend, Safety	40.247	데칼	Decal, Lpg Fuel Cyl Replacement Procedure
40.134	데칼	Decal, Operators Manual Location	40.248	데칼	Decal, Service Chart
40.138	데칼	Decal, Safety	40.260	데칼	Decal, Hot Surface Warning
40.139	데칼	Decal, Model Designation	40.290	데칼	Decal, Clark Logo Starter
40.143	데칼	Decal, Operators Instructions	40.291	데칼	Decal, Clark Logo Alternater
40.158	데칼	Decal, Warning Indicator	40.292	데칼	Decal, Clark Logo Injection Pump
40.167	데칼	Decal, Safety	40.296	데칼	Decal, Tire Pressure
			40.311	데칼	Decal, Sound Power Level


STORAGE CONSOLE (OPTION)

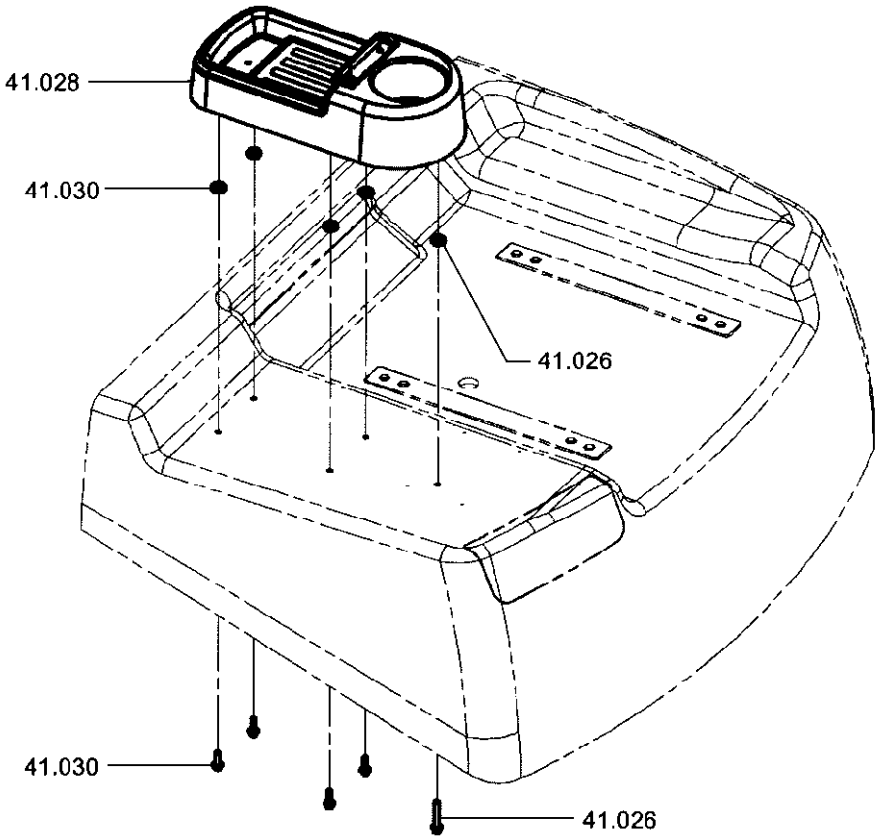

41-008

키이번호 key No.		부품명 Description
41.026	패스너	Fastener, Storage Console Document Clip
41.028	콘솔	Console, Operator Storage Console
41.030	패스너	Fastener, Storage Console


HEATER INSTALLATION (OPTION)

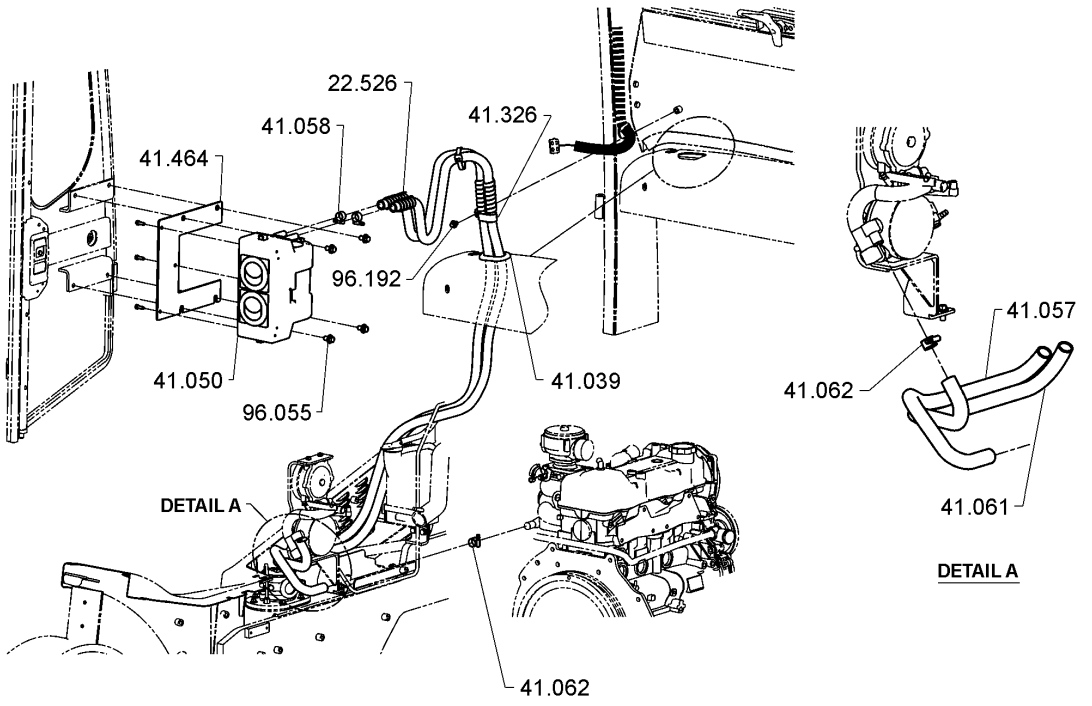

41-009

키이번호 key No.		부품명 Description
22.526	가드	Guard, Heater Hose Protection
41.039	그로멧	Grommet, Heater Line
41.050	히터 조립체	Heater Assembly
41.057	라인	Line, Heater Inlet
41.058	클램프	Clamp, Heater Inlet Line
41.061	라인	Line, Heater Outlet
41.062	클램프	Clamp, Heater Outlet Line
41.326	클램프	Clamp, Heater Hose Protector
41.464	브래킷	Bracket, Heater
96.055	패스너	Fastener, Heater Mounting Bracket
96.192	패스너	Fastener, Heater Inlet Line Clamp


HEATER INSTALLATION (OPTION)

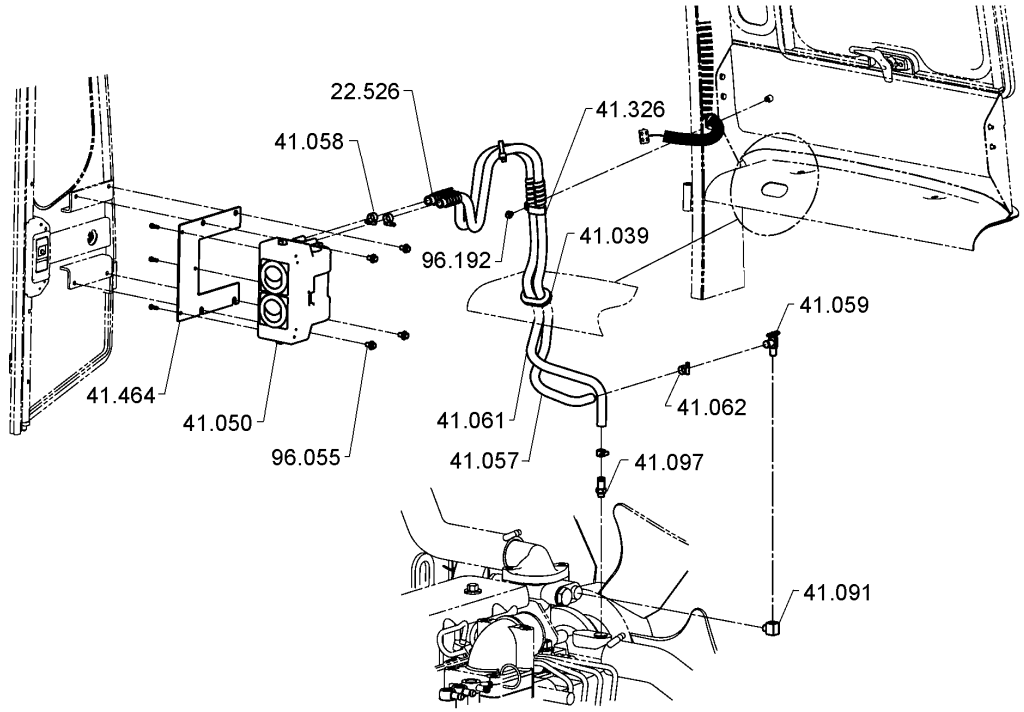

41-010


키이번호 key No.		부품명 Description
22.526	가드	Guard, Heater Hose Protection
41.039	그로멧	Grommet, Heater Line
41.050	히터 조립체	Heater Assembly
41.057	라인	Line, Heater Inlet
41.058	클램프	Clamp, Heater Inlet Line
41.059	피팅	Fitting, Heater Line (Engine)
41.061	라인	Line, Heater Outlet
41.062	클램프	Clamp, Heater Outlet Line
41.091	피팅	Fitting, Heater Inlet Line Engine
41.097	피팅	Fitting, Heater Outlet Line
41.326	클램프	Clamp, Heater Hose Protector
41.464	브래킷	Bracket, Heater
96.055	패스너	Fastener, Heater Mounting Bracket
96.192	패스너	Fastener, Heater Inlet Line Clamp

HOSE ADAPTATION (OPTION)

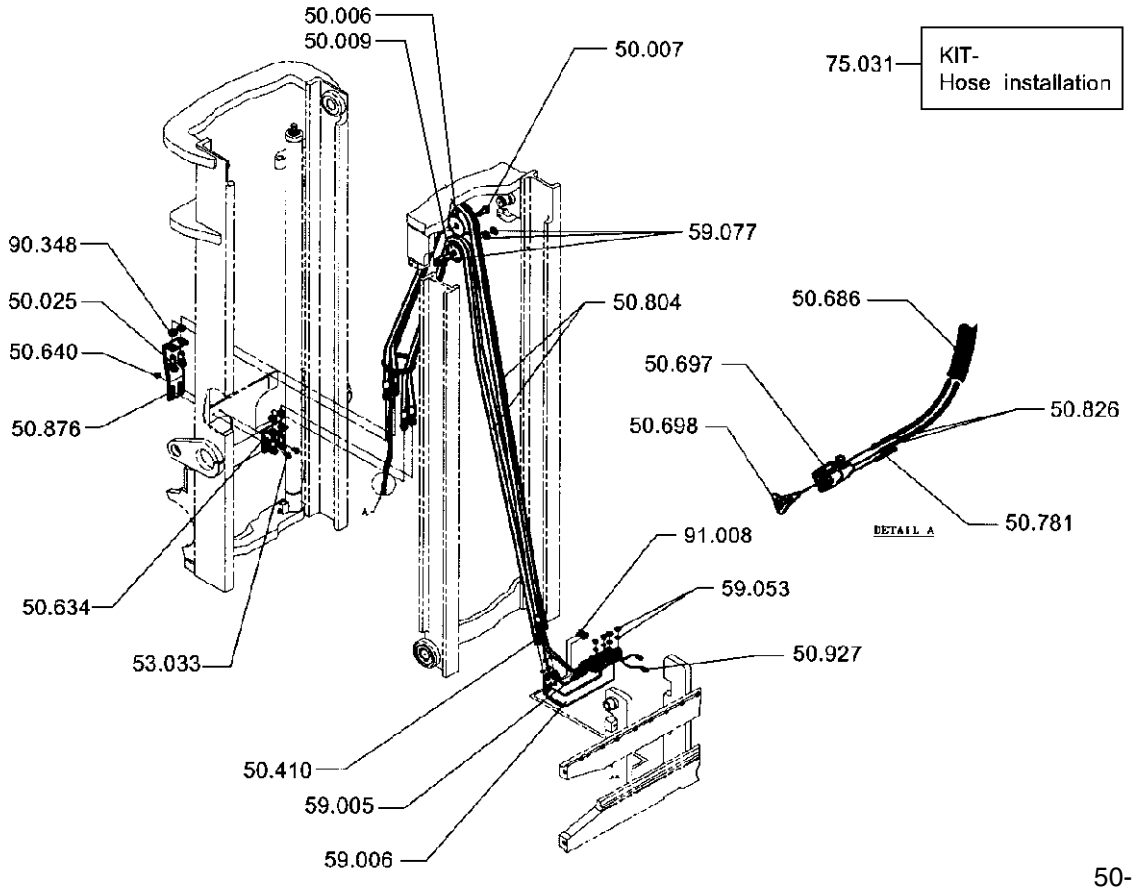

키이번호 key No.		부품명 Description
50.006	쉬브	Sheave, Device Hose Upper
50.007	리테이너	Retainer, Device Hose Sheave
50.009	쉬브	Sheave, Device Hose Lower
50.025	피팅	Fitting, Device Hose
50.410	커플링	Coupling, Device Hose
50.634	브래킷	Bracket, Device Hose Mounting
50.640	패스너	Fastener, Device Rh Hyd Hose Fitting
50.686	와이어	Wire, Device
50.697	커넥터	Connector, Device Cable (Pin End)
50.698	커넥터	Connector, Device Cable (Socket End)
50.781	터미널	Terminal, Device Cable
50.804	라인	Line, Device Hydraulic
50.826	터미널	Terminal, Device Cable
50.876	브래킷	Bracket, Device Cable Anchor
50.927	커넥터	Connector, Device Rh Cable Wire
53.033	패스너	Fastener, Hose Terminal Bracket
59.005	정션 블록	Junction Block, Device Line
59.006	정션 블록	Junction Block, Device Lh Line (At Carriage)
59.053	시일	Seal, Device Hose Connector Fitting
59.077	패스너	Fastener, Device Hose Guard
75.031	킷트	Kit, Hose Adaptation Installation
90.348	너트	Nut, Device Hose Bracket Fastener
91.008	패스너	Fastener, Device Junction Block


HOSE ADAPTATION (OPTION)

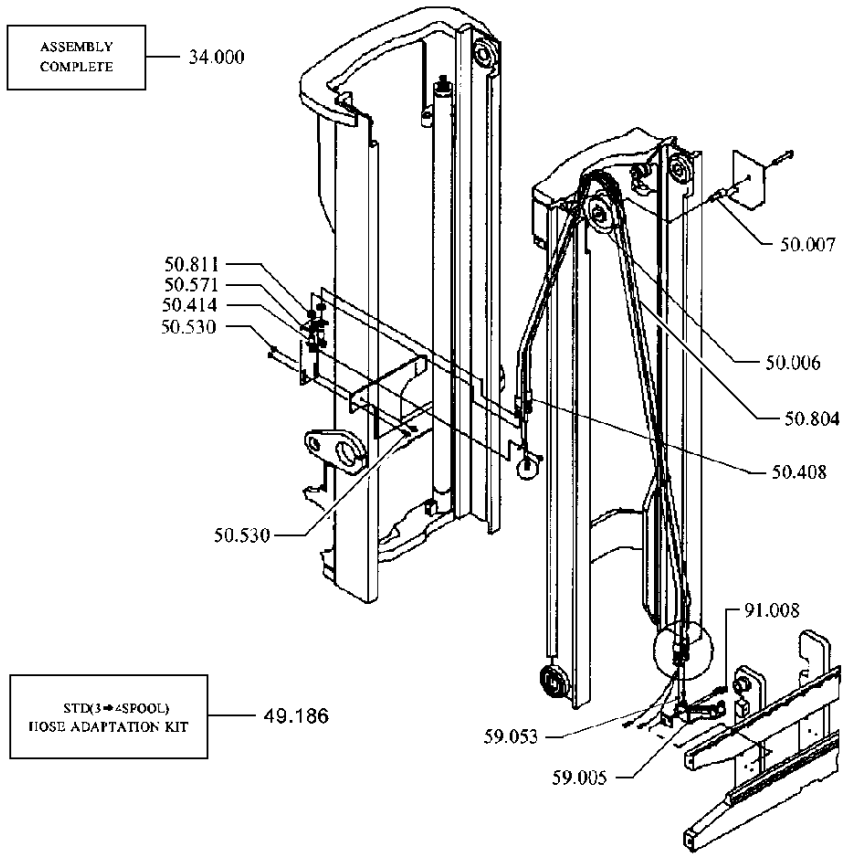

50-149

키이번호 key No.		부품명 Description
34.000	업라이트 & 실린더	Upright & Lift Cyl Assembly
49.186	연결호스 킷트	Hose Adaptation Kit, STD 4 Spool Conversion
50.006	쉬브	Sheave, Device Hose Upper
50.007	리테이너	Retainer, Device Hose Sheave
50.408	커플링	Coupling, Device Hose
50.414	피팅	Fitting, Device Hose Connector
50.530	패스너	Fastener, Device Hose Inner Guide
50.571	브래킷	Bracket, Device Hose
50.804	라인	Line, Device Hydraulic
50.811	너트	Nut, Device Hose Fitting
59.005	정션 블록	Junction Block, Device Line
59.053	시일	Seal, Device Hose Connector Fitting
91.008	패스너	Fastener, Device Junction Block


HOSE INTERNAL ADAPTATION (OPTION)

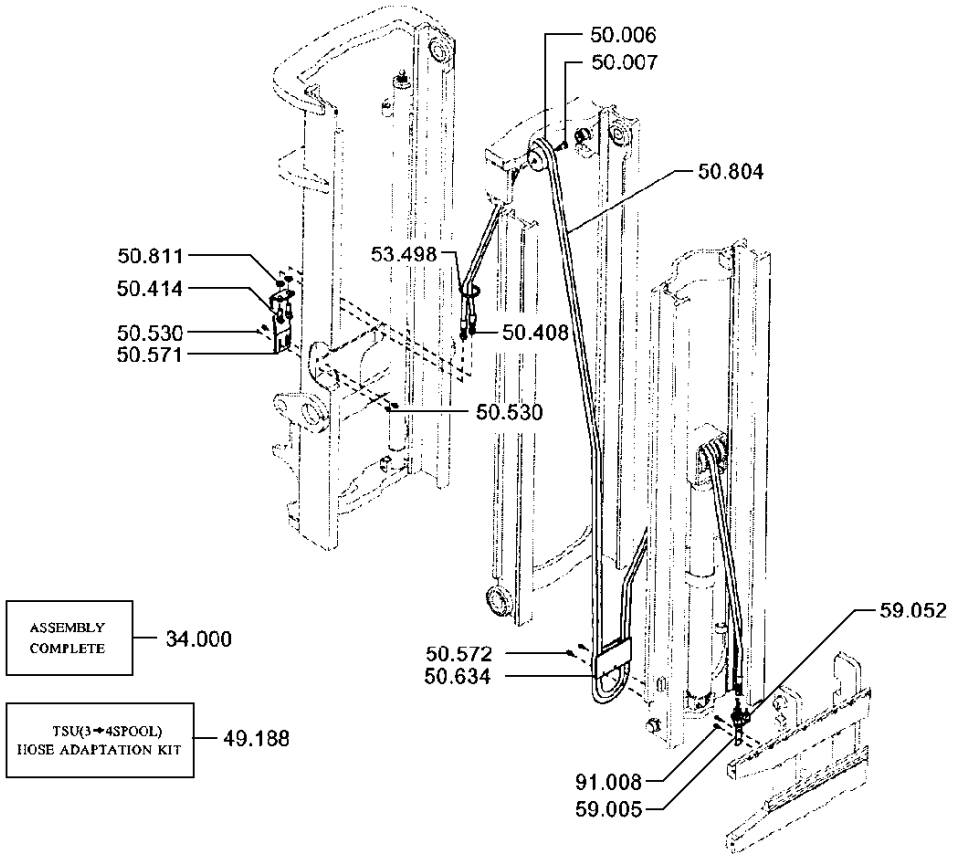

50-150

키이번호 key No.	부품명 Description	
34.000	업라이트 & 실린더	Upright & Lift Cyl Assembly
49.188	연결호스 킷트	Hose Adaptation Kit, TSU 4 Spool Conversion
50.006	쉬브	Sheave, Device Hose Upper
50.007	리테이너	Retainer, Device Hose Sheave
50.408	커플링	Coupling, Device Hose
50.414	피팅	Fitting, Device Hose Connector
50.530	패스너	Fastener, Device Hose Inner Guide
50.571	브래킷	Bracket, Device Hose
50.572	패스너	Fastener, Device Hose Bracket
50.634	브래킷	Bracket, Device Hose Mounting
50.804	라인	Line, Device Hydraulic
50.811	너트	Nut, Device Hose Fitting
53.498	클립	Clip, Device Hose
59.005	정션 블록	Junction Block, Device Line
59.052	시일	Seal, Device Hose Connector Fitting
91.008	패스너	Fastener, Device Junction Block


HIGH TERMINATION PLUMBING (OPTION)

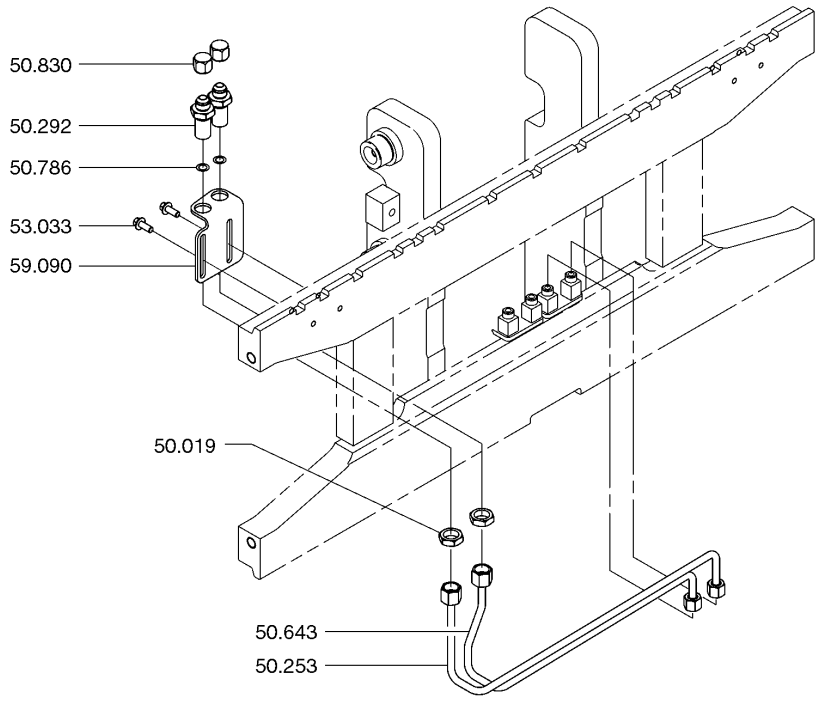

50-170

키이번호 key No.		부품명 Description
50.019	패스너	Fastener, Device Hose Disconnect
50.253	라인	Line, Device Lh Hydraulic (At Carriage)
50.292	피팅	Fitting, Device Rh Hydraulic Hose
50.643	라인	Line, Device Lh Upper (At Carriage)
50.786	시일	Seal, Device Rh Hose Terminal Block Port
50.830	캡	Cap, Device Hose Reel Fitting
53.033	패스너	Fastener, Hose Terminal Bracket
59.090	브래킷	Bracket, Device Hose Terminal


HOSE ADAPTATION (OPTION)

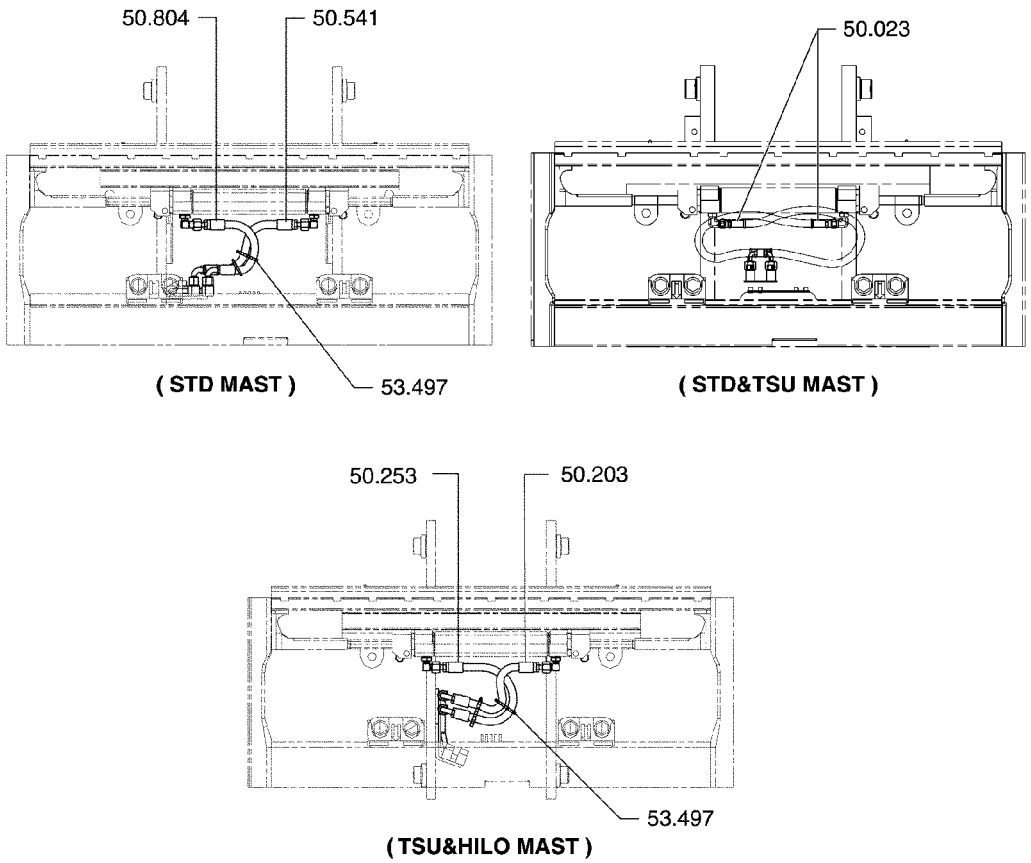

50-238

키이번호 key No.		부품명 Description
50.023	라인	Line, Device Hydraulic
50.203	라인	Line, Device Hydraulic
50.253	라인	Line, Device Lh Hydraulic (At Carriage)
50.541	가이드	Guide, Hose Rh
50.804	라인	Line, Device Hydraulic
53.207	라인	Line, Side Shifter Cylinder Anchor Port
53.497	스트랩	Strap, Device Hose
54.080	라인	Line, Side Shift Cylinder Anchor Port


QUICK DISCONNECT FOR DEVICE (OPTION)

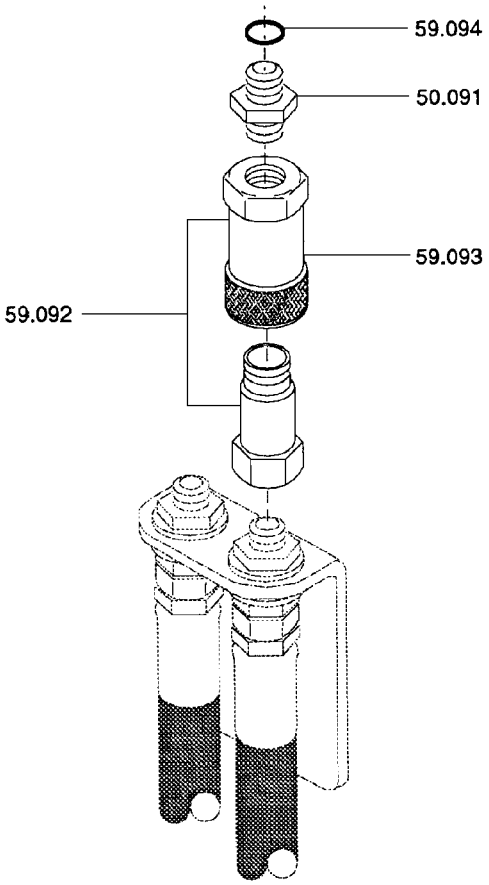

50-240

키이번호 key No.		부품명 Description
50.091	피팅	Fitting, Device Rh Hydraulic Hose
59.092	퀵 디스커넥트	Quick Disconnect, Hose Device
59.093	수리 킷트	Repair Kit, Hose Device Nipple
59.094	시일	Seal, Divice Hydraulic Hose Fitting


HOSE ADAPTATION (OPTION)

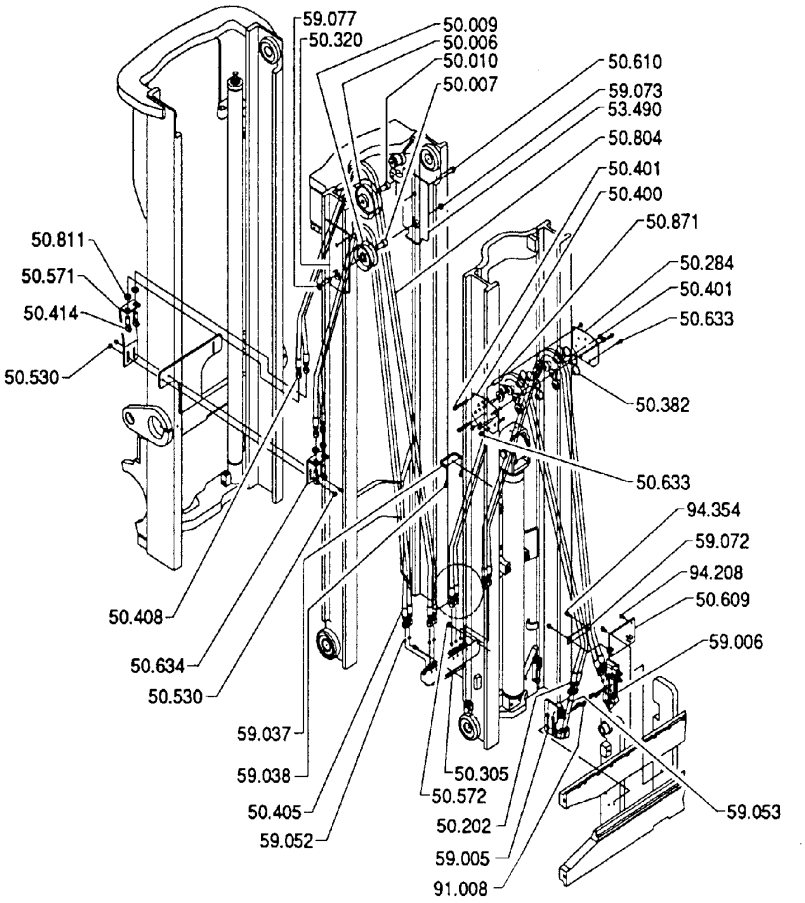

50-749

키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
50.006	쉬브	Sheave, Device Hose Upper	50.633	패스너	Fastener, Device Hose Roller Pivot
50.007	리테이너	Retainer, Device Hose Sheave	50.634	브래킷	Bracket, Device Hose Mounting
50.009	쉬브	Sheave, Device Hose Lower	50.804	라인	Line, Device Hydraulic
50.010	리테이너	Retainer, Device Hose Lower Sheave	50.811	너트	Nut, Device Hose Fitting
50.202	커플링	Coupling, Device Hose	50.871	스페이서	Spacer, Device Hose Roller
50.284	브래킷	Bracket, Device Hose Lower Rh Roller	53.490	가드	Guard, Device Hose
50.305	피팅	Fitting, Device Hose Terminal Block	59.005	정션 블록	Junction Block, Device Line
50.320	가드	Guard, Device Lh Hose	59.006	정션 블록	Junction Block, Device Lh Line (At Carriage)
50.382	롤러	Roller, Device Hose	59.037	가드	Guard, Hose Adaptation Hose
50.400	브래킷	Bracket, Device Hose Roller	59.038	패스너	Fastener, Hs Adapt Hose Guard
50.401	패스너	Fastener, Device Hose Roller Bracket	59.052	시일	Seal, Device Hose Connector Fitting
50.405	커플링	Coupling, Device Hose	59.053	시일	Seal, Device Hose Connector Fitting
50.408	커플링	Coupling, Device Hose	59.072	가드	Guard, Device Hose
50.414	피팅	Fitting, Device Hose Connector	59.073	너트	Nut, Device Hose Upper Lh Sheave Retainer
50.530	패스너	Fastener, Device Hose Inner Guide	59.077	패스너	Fastener, Device Hose Guard
50.571	브래킷	Bracket, Device Hose	91.008	패스너	Fastener, Device Junction Block
50.572	패스너	Fastener, Device Hose Bracket	94.208	패스너	Fastener, Device Hose Guard (At Carriage)
50.609	가드	Guard, Device Hose (At Carriage)	94.354	패스너	Fastener, Device Hose Guard
50.610	패스너	Fastener, Device Hose Guard			


HIGH TERMINATION PLUMBING (OPTION)

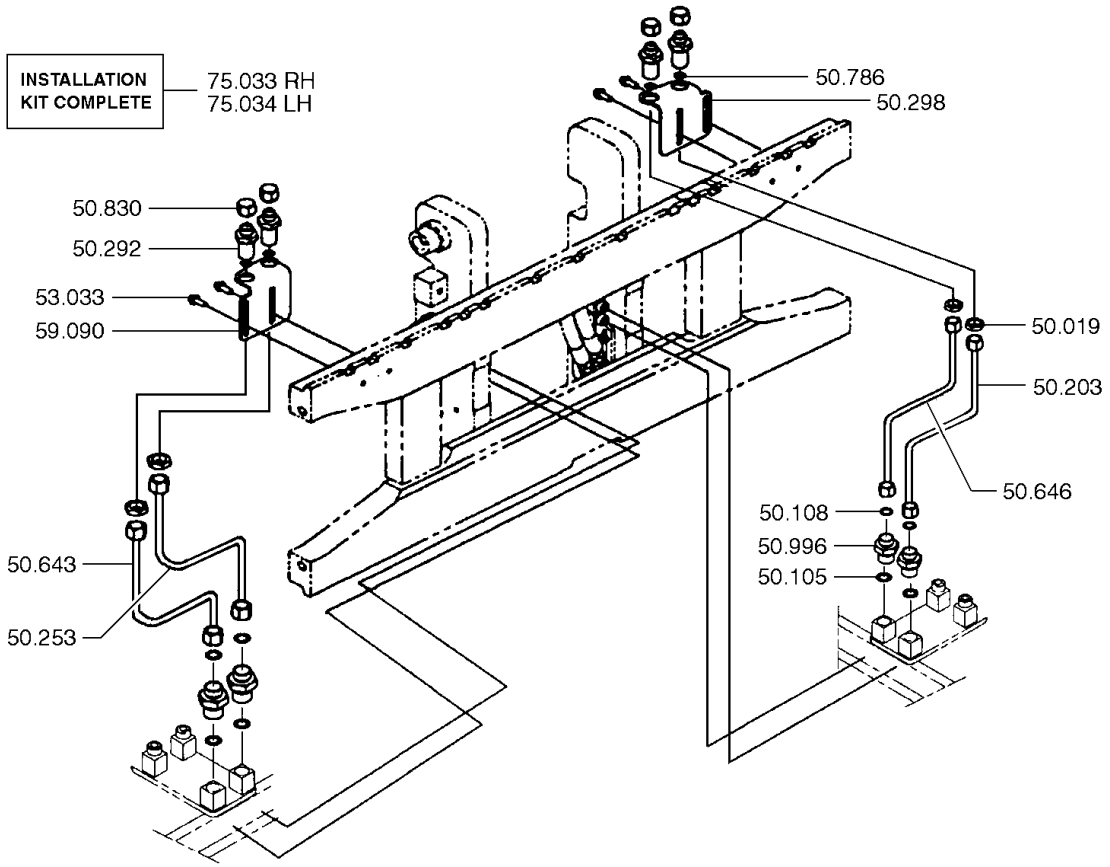

50-765

키이번호 key No.		부품명 Description
50.019	패스너	Fastener, Device Hose Disconnect
50.105	시일	Seal, Device Hose Swivel Coupling Plug
50.108	시일	Seal, Device Hose Swivel Coupling Inlet Port
50.203	라인	Line, Device Hydraulic
50.253	라인	Line, Device Lh Hydraulic (At Carriage)
50.292	피팅	Fitting, Device Rh Hydraulic Hose
50.298	브래킷	Bracket, Device Hose Terminal
50.643	라인	Line, Device Lh Upper (At Carriage)
50.646	라인	Line, Device Upper
50.786	시일	Seal, Device Rh Hose Terminal Block Port
50.830	캡	Cap, Device Hose Reel Fitting
50.996	커넥터	Connector, Device Cable Swivel Connector
53.033	패스너	Fastener, Hose Terminal Bracket
59.090	브래킷	Bracket, Device Hose Terminal
75.033	킷트	Kit, Carriage Termination Piping - Rh
75.034	킷트	Kit, Carriage Termination Piping - Lh


HOSE ADAPTATION (OPTION)

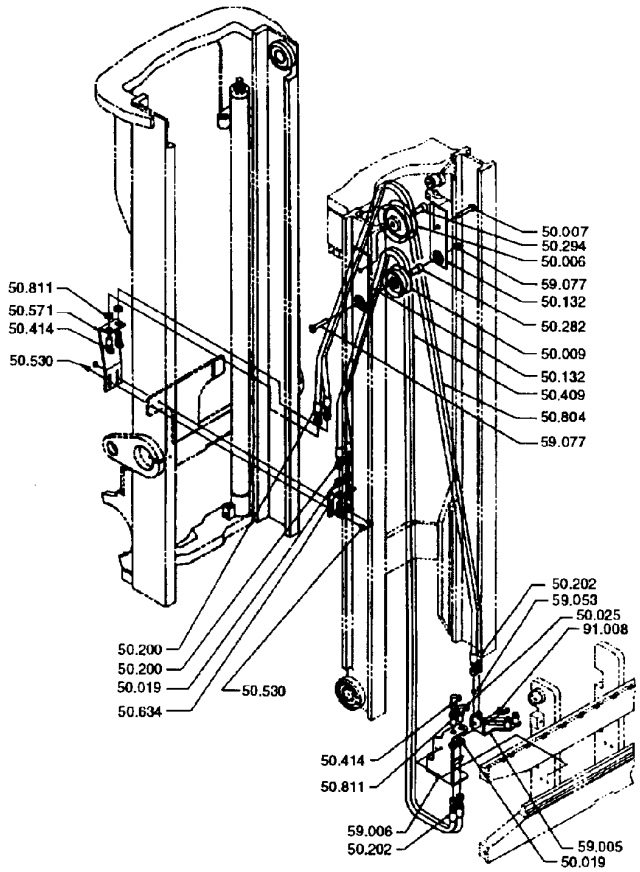

50-776

키이번호 key No.		부품명 Description
50.006	쉬브	Sheave, Device Hose Upper
50.007	리테이너	Retainer, Device Hose Sheave
50.009	쉬브	Sheave, Device Hose Lower
50.019	패스너	Fastener, Device Hose Disconnect
50.025	피팅	Fitting, Device Hose
50.132	브래킷	Bracket, Device Hose Reel
50.200	커플링	Coupling, Device Hose
50.202	커플링	Coupling, Device Hose
50.282	스페이서	Spacer, Device Hose Sheave Lh
50.294	피봇	Pivot, Device Hose Upper Sheave
50.409	호스	Hose, Device At Valve
50.414	피팅	Fitting, Device Hose Connector
50.530	패스너	Fastener, Device Hose Inner Guide
50.571	브래킷	Bracket, Device Hose
50.634	브래킷	Bracket, Device Hose Mounting
50.804	라인	Line, Device Hydraulic
50.811	너트	Nut, Device Hose Fitting
59.005	정션 블록	Junction Block, Device Line
59.006	정션 블록	Junction Block, Device Lh Line (At Carriage)
59.053	시일	Seal, Device Hose Connector Fitting
59.077	패스너	Fastener, Device Hose Guard
91.008	패스너	Fastener, Device Junction Block


HOSE AND CABLE ADAPTATION (OPTION)

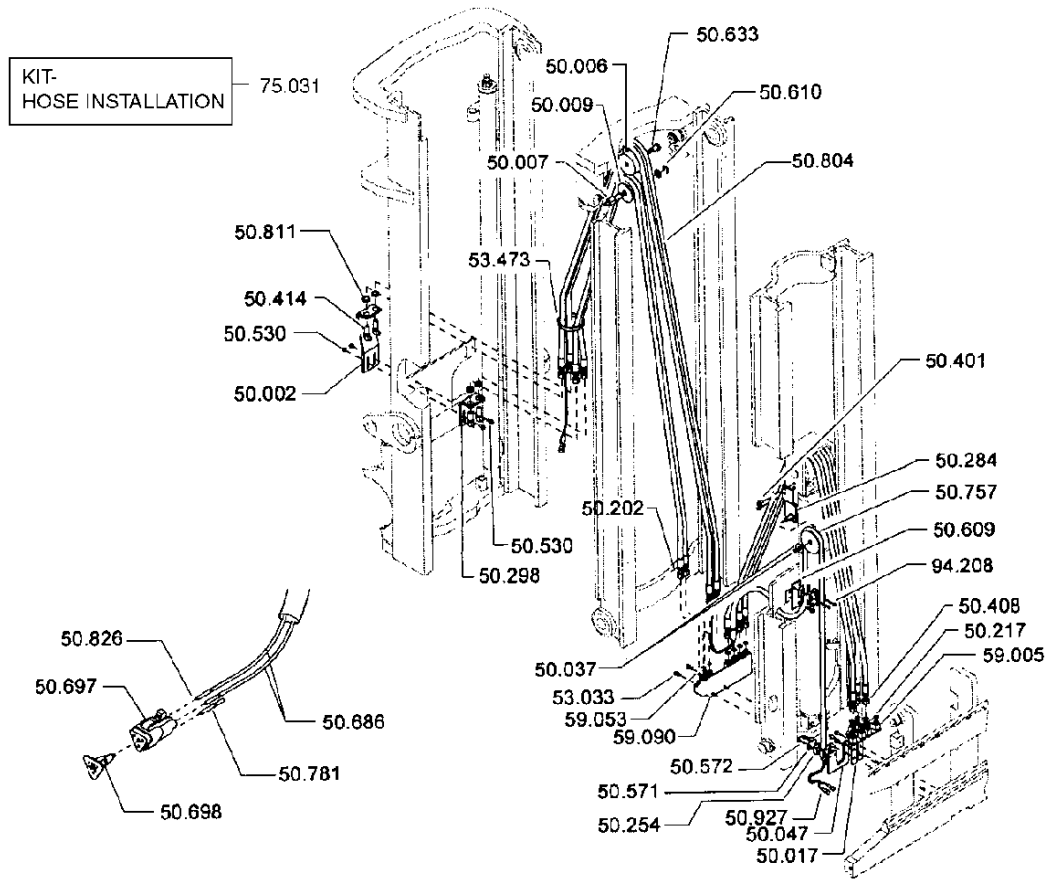

50-816


키이번호 key No.	부품명 Description		키이번호 key No.	부품명 Description	
50.002	브래킷	Bracket, Device Hose Upper Sheave Rh	50.610	패스너	Fastener, Device Hose Guard
50.006	쉬브	Sheave, Device Hose Upper	50.633	패스너	Fastener, Device Hose Roller Pivot
50.007	리테이너	Retainer, Device Hose Sheave	50.686	와이어	Wire, Device
50.009	쉬브	Sheave, Device Hose Lower	50.697	커넥터	Connector, Device Cable (Pin End)
50.017	터미널 브래킷	Terminal Bracket, Device Hose	50.698	커넥터	Connector, Device Cable (Socket End)
50.037	리테이너	Retainer, Device Hose Upper Sheave	50.757	쉬브	Sheave, Device Cable Upper Rh
50.047	터미널 브래킷	Terminal Bracket, Device Hose	50.781	터미널	Terminal, Device Cable
50.202	커플링	Coupling, Device Hose	50.804	라인	Line, Device Hydraulic
50.217	시일	Seal, Device Lh Hose Terminal Block Fitting	50.811	너트	Nut, Device Hose Fitting
50.254	클램프	Clamp, Device Line	50.826	터미널	Terminal, Device Cable
50.284	브래킷	Bracket, Device Hose Lower Rh Roller	50.927	커넥터	Connector, Device Rh Cable Wire
50.298	브래킷	Bracket, Device Hose Terminal	53.033	패스너	Fastener, Hose Terminal Bracket
50.401	패스너	Fastener, Device Hose Roller Bracket	53.473	스트랩	Strap, Device Hose To Device
50.408	커플링	Coupling, Device Hose	59.005	정션 블록	Junction Block, Device Line
50.414	피팅	Fitting, Device Hose Connector	59.053	시일	Seal, Device Hose Connector Fitting
50.530	패스너	Fastener, Device Hose Inner Guide	59.090	브래킷	Bracket, Device Hose Terminal
50.571	브래킷	Bracket, Device Hose	75.031	킷트	Kit, Hose Adaptation Installation
50.572	패스너	Fastener, Device Hose Bracket	94.208	패스너	Fastener, Device Hose Guard (At Carriage)
50.609	가드	Guard, Device Hose (At Carriage)			

HOSE ADAPTATION (OPTION)

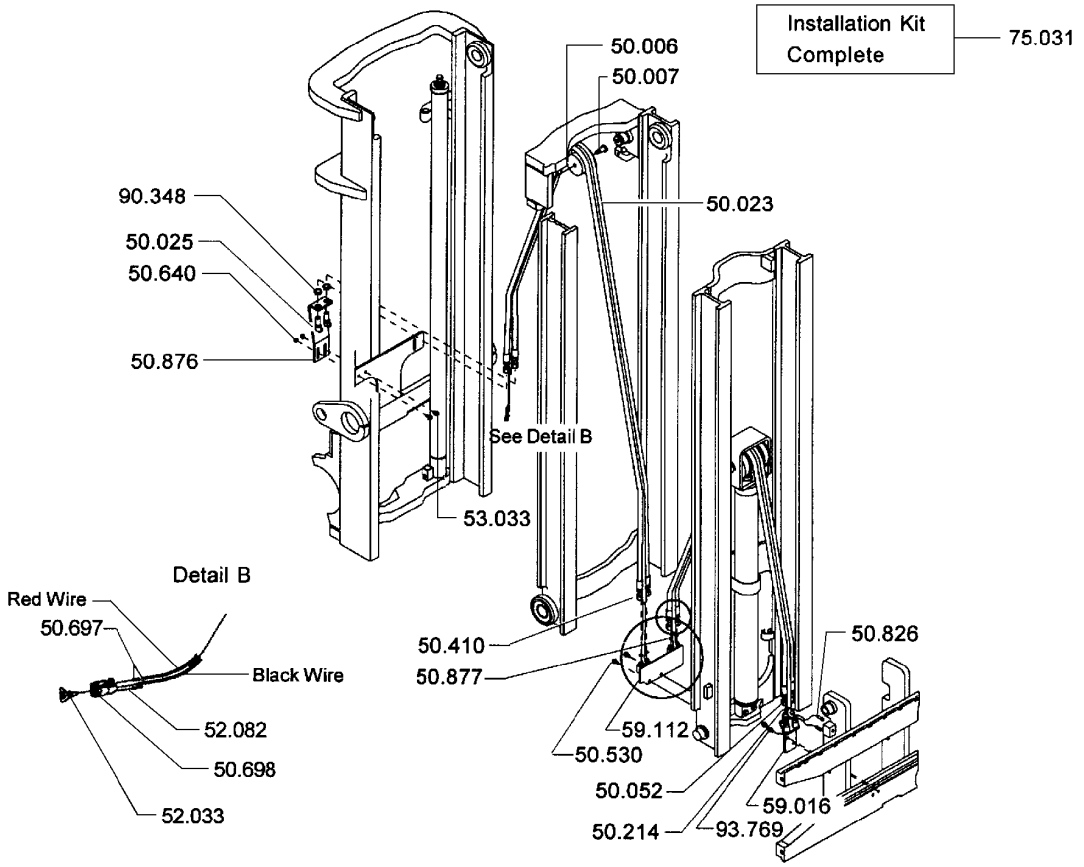

키이번호 key No.		부품명 Description
50.006	쉬브	Sheave, Device Hose Upper
50.007	리테이너	Retainer, Device Hose Sheave
50.023	라인	Line, Device Hydraulic
50.025	피팅	Fitting, Device Hose
50.052	커플링	Coupling, Device Lh Hose
50.214	시일	Seal, Device Rh Hose Terminal Block Fitting
50.410	커플링	Coupling, Device Hose
50.530	패스너	Fastener, Device Hose Inner Guide
50.640	패스너	Fastener, Device Rh Hyd Hose Fitting
50.697	커넥터	Connector, Device Cable (Pin End)
50.698	커넥터	Connector, Device Cable (Socket End)
50.826	터미널	Terminal, Device Cable
50.876	브래킷	Bracket, Device Cable Anchor
50.877	시일	Seal, Device Cable Anchor
52.033	로크	Lock, Device Connector
52.082	플러그	Plug, Device Cable Connector
53.033	패스너	Fastener, Hose Terminal Bracket
59.016	정션 블록	Junction Block, Device Hose
59.112	정션 블록	Junction Block, Device Hose
75.031	킷트	Kit, Hose Adaptation Installation
90.348	너트	Nut, Device Hose Bracket Fastener
93.769	패스너	Fastener, Device Line Junction Block


SIDE SHIFTER CYLINDER (OPTION)

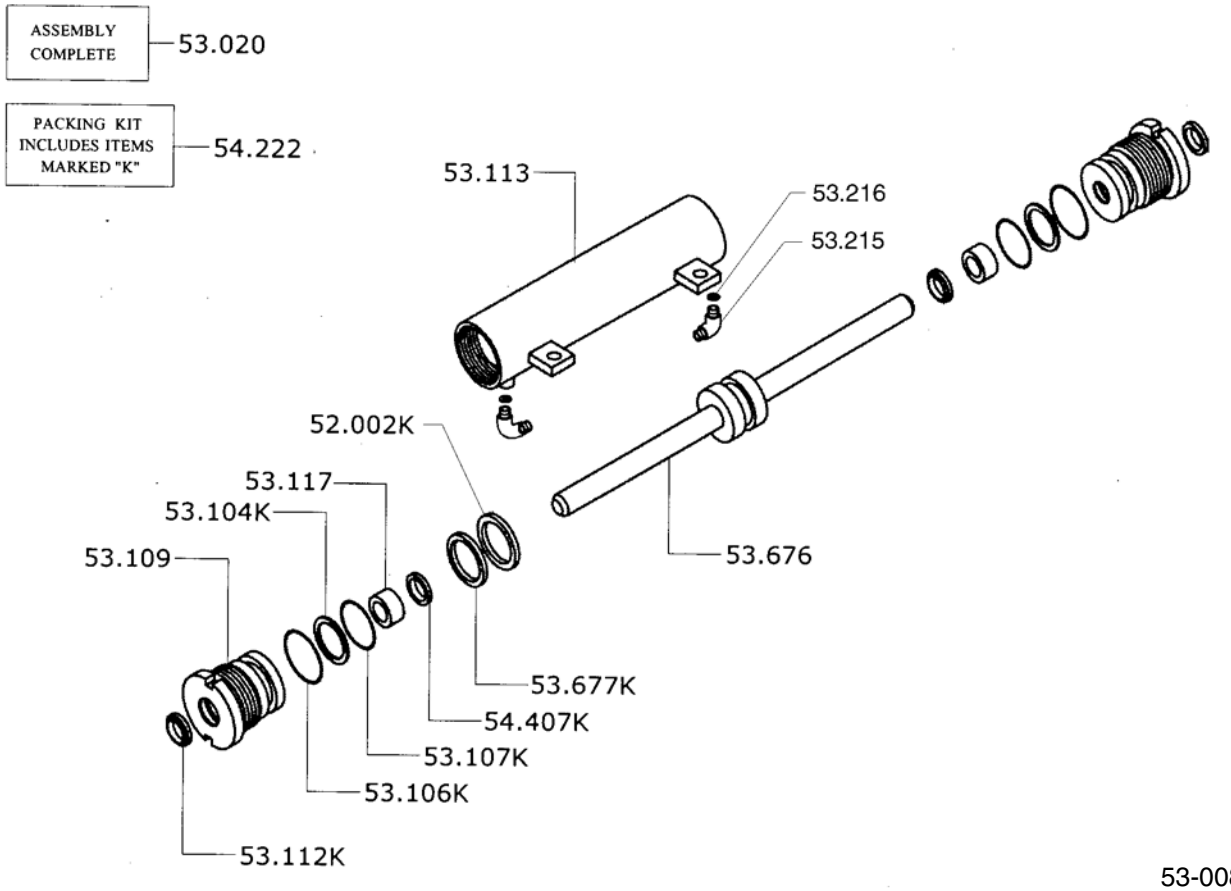

53-008

키이번호 key No.	부품명 Description	
52.002	링	Ring, Clamp Side Shift Limit Cyl Piston Wear
53.020	실린더 조립체	Cylinder Assembly, Side Shifter
53.104	링	Ring, Side Shifter Cyl Piston Packing Back-Up
53.106	시일	Seal, Side Shifter Cylinder Gland
53.107	링	Ring, Side Shift Cyl Gland Seal Back-Up
53.109	글랜드	Gland, Side Shifter Cylinder
53.112	와이퍼	Wiper, Side Shifter Cylinder Piston Rod
53.113	실린더 조립체	Cylinder Assembly, Welded Side Shifter
53.117	부싱	Bushing, Side Shifter Cylinder Gland
53.676	로드	Rod, Side Shifter Cylinder Piston
53.677	시일	Seal, Side Shifter Cylinder Piston
54.222	패킹 킷트	Packing Kit, Side Shifter Cylinder
54.407	시일	Seal, Side Shifter Cylinder Port Rod


SIDE SHIFTER (OPTION)

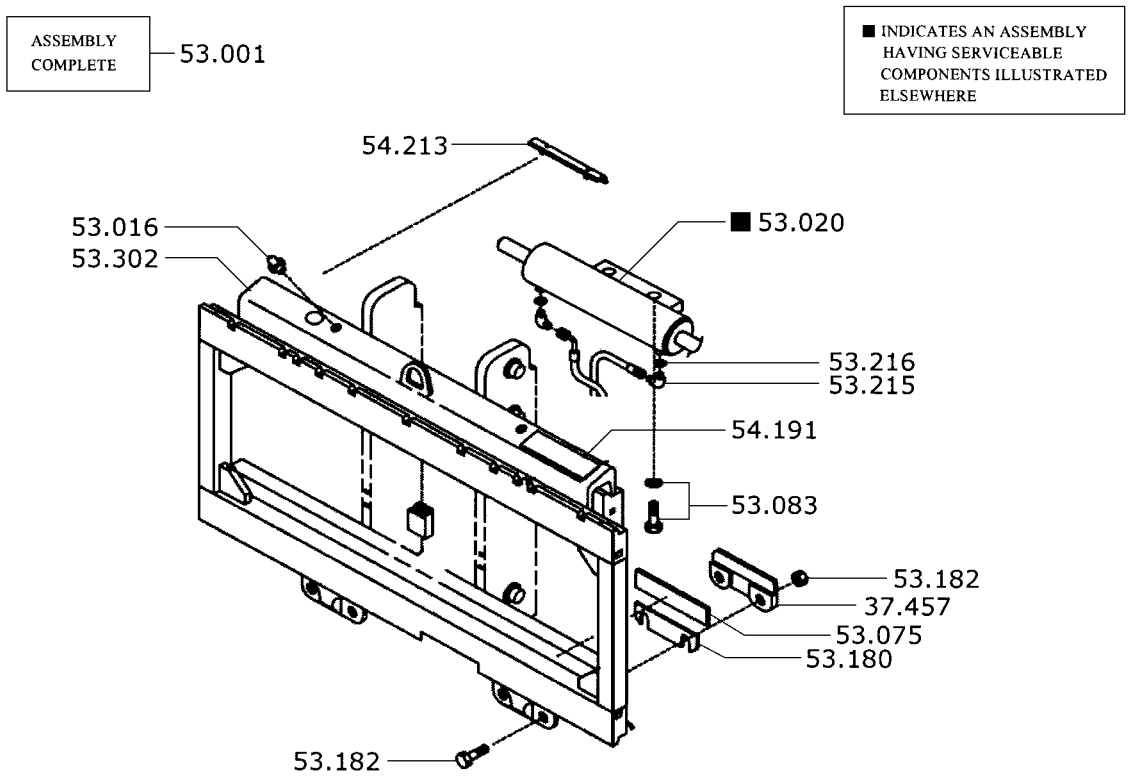

53-026

키이번호 key No.	부품명 Description	
37.457	후크	Hook, Cab Clothing Hanger
53.001	사이드시프트	Attachment, Side Shifter Complete
53.016	피팅	Fitting-Lub, Side Shifter Movable Frame Support Shaft
53.020	실린더 조립체	Cylinder Assembly, Side Shifter
53.075	베어링	Bearing, Side Shifter
53.083	패스너	Fastener, Side Shifter Cylinder Anchor
53.180	스페이서	Spacer, Side Shifter Bearing
53.182	패스너	Fastener, Side Shifter Hanger
53.215	피팅	Fitting, Side Shifter Cylinder Rod Port
53.216	시일	Seal, Side Shifter Cylinder Rod Port Fitting
53.302	프레임 조립체	Frame Assembly, Device Welded
54.191	플레이트	Plate, Side Shift Name
54.213	베어링	Bearing, Side Shifter (Upper)


FORK POSITIONER (BASIC) (OPTION)

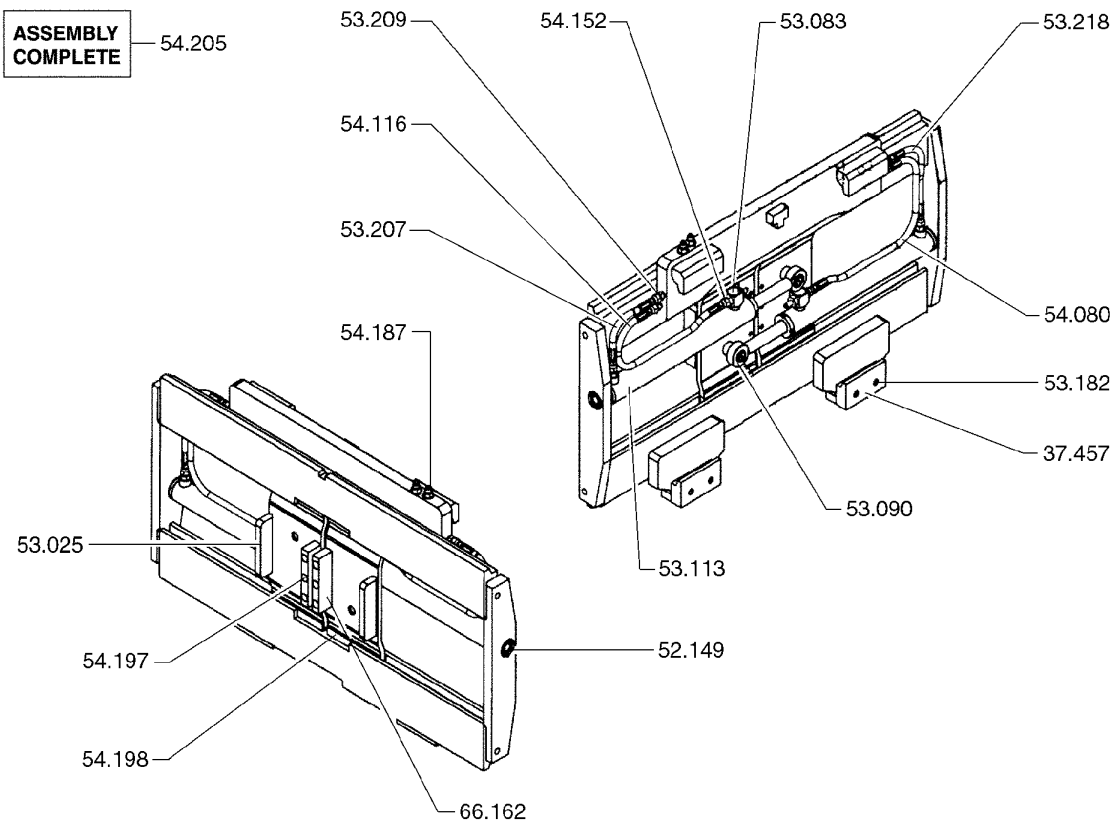

53-084

키이번호 key No.		부품명 Description
37.457	후크	Hook, Cab Clothing Hanger
52.149	너트	Nut, Side Shift Cylinder Anchor Port Line Fitting
53.025	가이드	Guide, Side Shifter Movable Frame Lower
53.083	패스너	Fastener, Side Shifter Cylinder Anchor
53.090	패스너	Fastener, Side Shifter Movable Frame
53.113	실린더 조립체	Cylinder Assembly, Welded Side Shifter
53.182	패스너	Fastener, Side Shifter Hanger
53.207	라인	Line, Side Shifter Cylinder Anchor Port
53.209	피팅	Fitting, Side Shifter Cylinder Anchor Port Line
53.218	라인	Line, Side Shifter Cylinder Rod Port
54.080	라인	Line, Side Shift Cylinder Anchor Port
54.116	라인	Line, Side Shift Cylinder Rod Port
54.152	피팅	Fitting, Side Shifter Cylinder Anchor Port Line
54.187	피팅	Fitting, Side Shifter Anchor Port Line
54.197	패스너	Fastener, Side Shifting Base Plate To Arm
54.198	베어링	Bearing, Side Shifter Base Plate Arm
54.205	어테치먼트	Attachment, Fork Positioner
66.162	스톱	Stop, Carriage Travel


LIFT CYLINDER PIPING (OPTION)

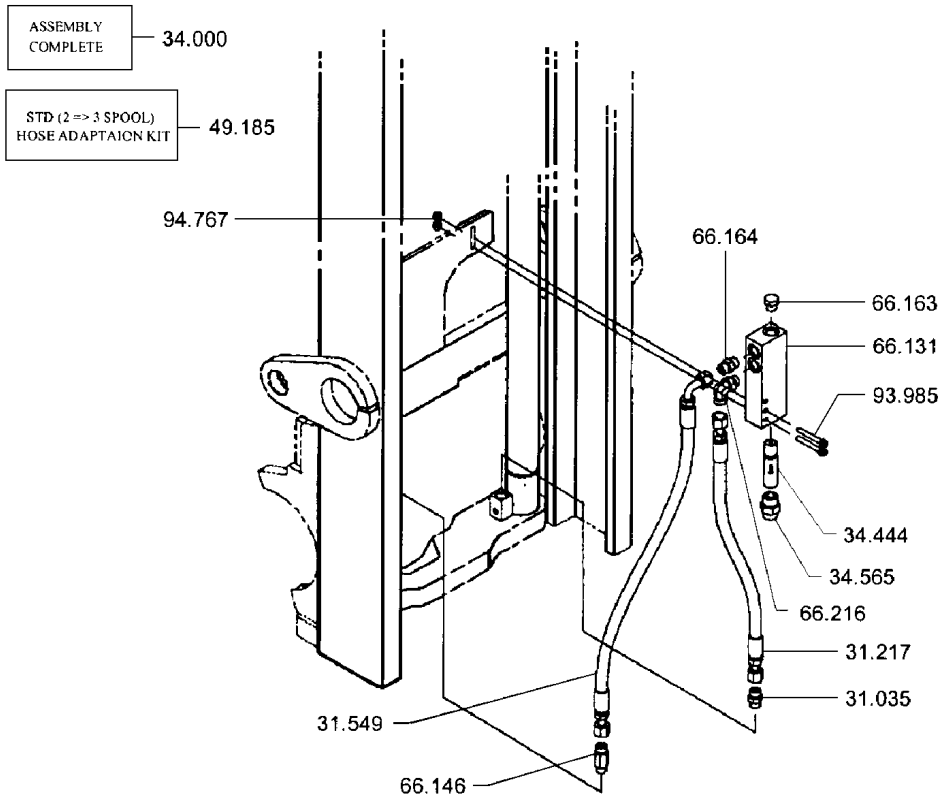

66-049


키이번호 key No.		부품명 Description
31.035	피팅	Fitting, Lift Cylinder Port
31.217	라인	Line, Lift Cylinder Inlet Fitting
31.549	라인	Line, Lift Cyl Flow Control Valve Inlet
34.000	업라이트 & 실린더	Upright & Lift Cyl Assembly
34.444	밸브 조립체	Valve Assembly, Lift Cylinder Flow Control
34.565	피팅	Fitting, Lift Cylinder Flow Control Valve Inlet Port
49.185	연결호스 킷트	Hose Adaptation Kit, STD 3 Spool Conversion
66.131	매니폴드	Manifold, Lift Cylinder Flow Control Valve
66.146	밸브	Valve, Lift Cylinder Port Flow Control
66.163	플러그	Plug, Lift Cylinder Flow Control Valve Manifold Port
66.164	피팅	Fitting, Lift Cylinder Flow Control Valve Manifold
66.216	피팅	Fitting, Flow Control Valve Manifold Port
93.985	패스너	Fastener, Lift Cylinder Flow Control Valve Manifold
94.767	너트	Nut, Lift Cylinder Flow Control Valve Manifold Fastener

UPRIGHT-STANDARD (OPTION)

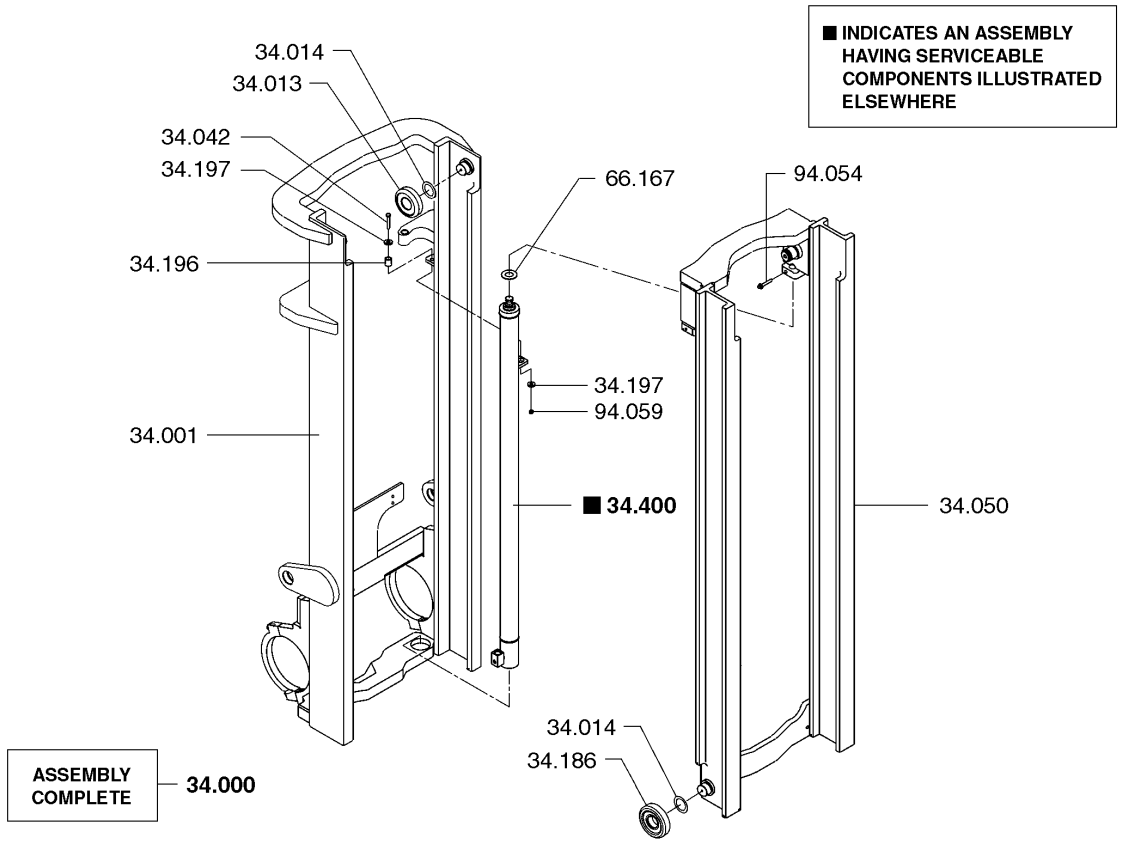


키이번호 key No.		부품명 Description
34.000	업라이트 & 실린더	Upright & Lift Cyl Assembly
34.001	아웃 레일 용접체	Outer Rail Welder Assembly, Upright
34.013	롤러	Roller, Upright
34.014	심	Shim, Upright Roller
34.042	패스너	Fastener, Lift Cylinder (Upper)
34.050	인너레일 용접체	Inner Rail Welded Assembly, Upright
34.186	롤러	Roller, Upright
34.196	리테이너	Retainer, Lift Cylinder Upper Ring Segment
34.197	패스너	Fastener, Lift Cylinder Upper Ring Segment Retainer
34.400	실린더 조립체	Cylinder Assembly, Lift
66.167	심	Shim, Lift Cylinder Upper
94.054	패스너	Fastener, Final Lift Cylinder (Upper)
94.059	너트	Nut, Lift Cylinder Fastener

LIFT CYLINDER PIPING (OPTION)

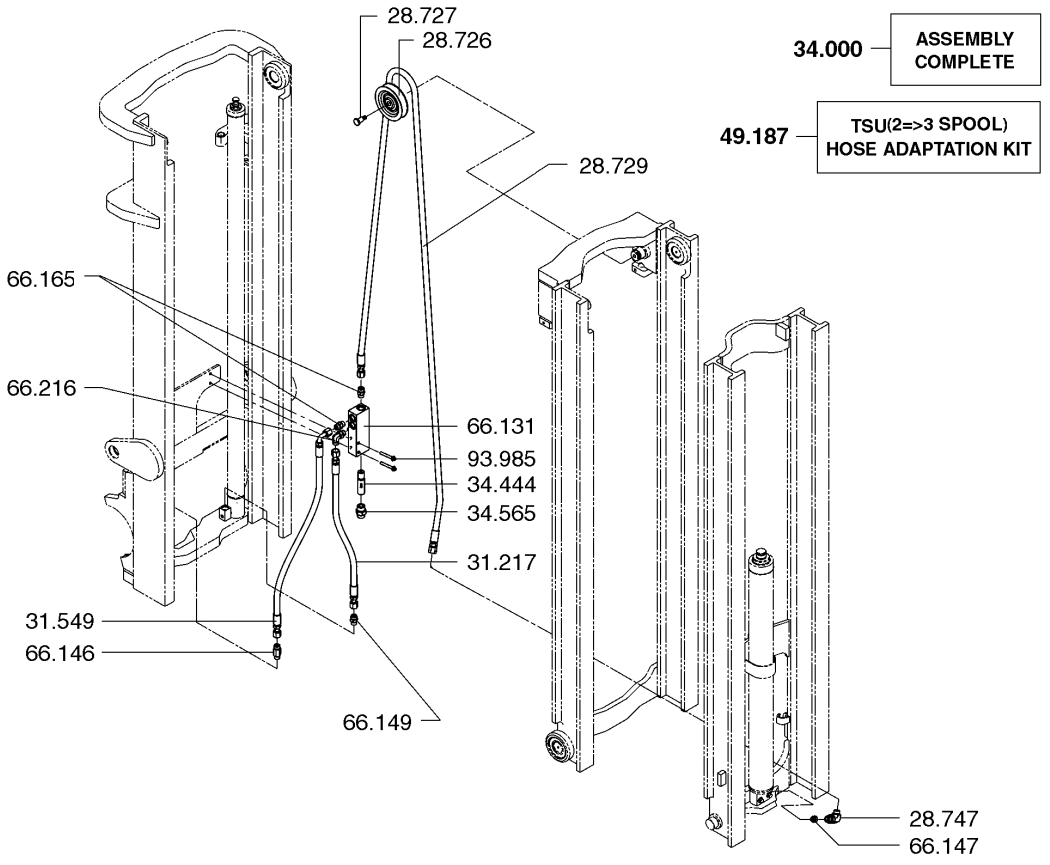

키이번호 key No.		부품명 Description
28.726	쉬브	Sheave, Lift Cylinder Hose
28.727	피봇	Pivot, Lift Cylinder Hose Sheave
28.729	라인	Line, Lift Cylinder
28.747	피팅	Fitting, Lift Cylinder Line
31.217	라인	Line, Lift Cylinder Inlet Fitting
31.549	라인	Line, Lift Cyl Flow Control Valve Inlet
34.000	업라이트 & 실린더	Upright & Lift Cyl Assembly
34.444	밸브 조립체	Valve Assembly, Lift Cylinder Flow Control
34.565	피팅	Fitting, Lift Cylinder Flow Control Valve Inlet Port
49.187	연결호스 킷트	Hose Adaptation Kit, TSU 3 Spool Conversion
66.131	매니폴드	Manifold, Lift Cylinder Flow Control Valve
66.146	밸브	Valve, Lift Cylinder Port Flow Control
66.147	밸브	Valve, Final Lift Cylinder Port Flow Control
66.149	시일	Seal, Lift Cylinder Line Fitting
66.165	시일	Seal, L/Cyl Flow Control Valve Manifold Port Fitting
66.216	피팅	Fitting, Flow Control Valve Manifold Port
93.985	패스너	Fastener, Lift Cylinder Flow Control Valve Manifold


Hi-Lo UPRIGHT (OPTION)

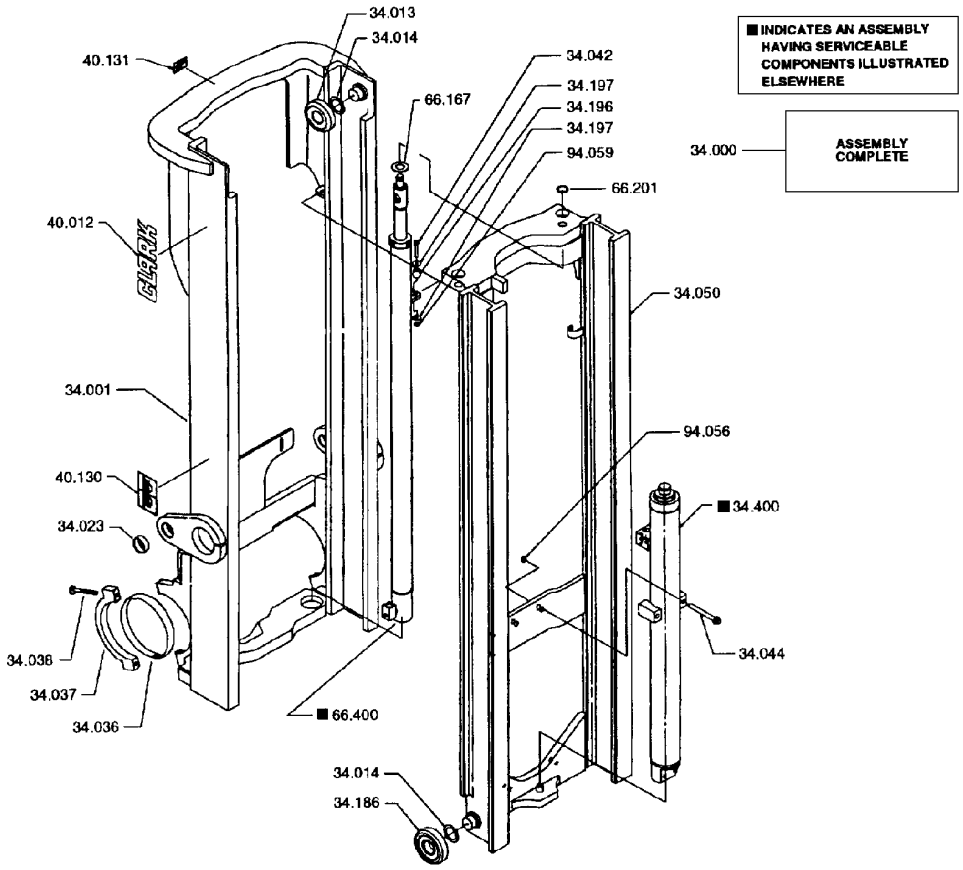

66-104E


키이번호 key No.		부품명 Description
34.000	업라이트 & 실린더	Upright & Lift Cyl Assembly
34.001	아웃 레일 용접체	Outer Rail Welder Assembly, Upright
34.013	롤러	Roller, Upright
34.014	심	Shim, Upright Roller
34.023	부싱	Bushing, Tilt Cylinder Anchor
34.036	부싱	Bushing, Upright Trunnion
34.037	캡	Cap, Upright Trunnion
34.038	패스너	Fastener, Upright Trunnion Cap
34.042	패스너	Fastener, Lift Cylinder (Upper)
34.044	패스너	Fastener, Lift Cylinder Upper Anchor
34.050	인너레일 용접체	Inner Rail Welded Assembly, Upright
34.186	롤러	Roller, Upright
34.196	리테이너	Retainer, Lift Cylinder Upper Ring Segment
34.197	패스너	Fastener, Lift Cylinder Upper Ring Segment Retainer
34.400	실린더 조립체	Cylinder Assembly, Lift
40.012	데칼	Decal, Clark Logo-Small
40.130	범례	Legend, Safety
40.131	범례	Legend, Safety
66.167	심	Shim, Lift Cylinder Upper
66.201	리테이너	Retainer, Lift Cylinder Mounting
66.400	실린더 조립체	Cylinder Assembly, Final Lift
94.056	너트	Nut, Final Lift Cylinder Fastener (Upper)
94.059	너트	Nut, Lift Cylinder Fastener

LIFT CYLINDER ASSEMBLY (OPTION)

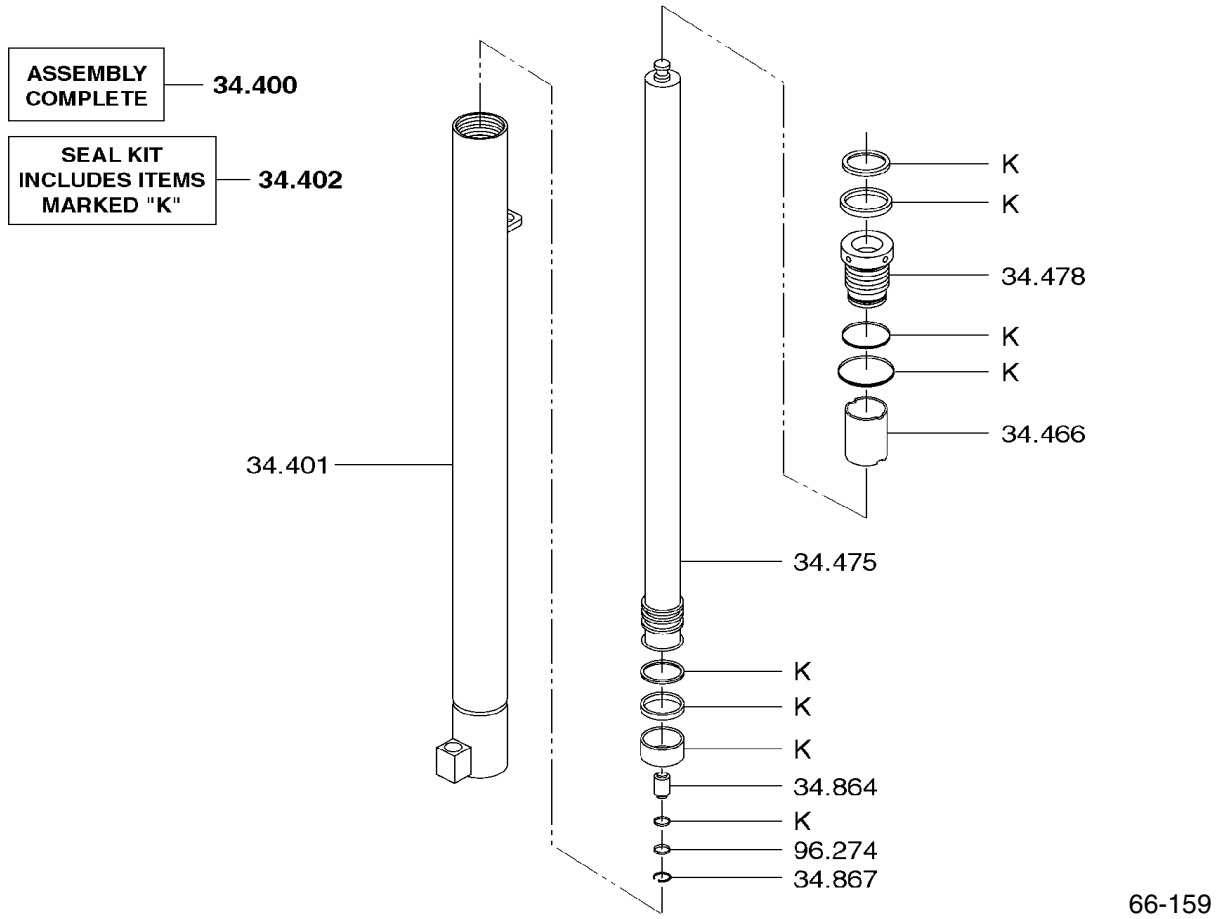


키이번호 key No.		부품명 Description
34.400	실린더 조립체	Cylinder Assembly, Lift
34.401	배럴	Barrel, Lift Cylinder
34.402	시일 & 팩킹 킷트	Seal & Packing Kit, Lift Cylinder
34.466	스페이서	Spacer, Lift Cylinder Feed Tube
34.475	로드	Rod, Lift Cylinder
34.478	글랜드	Gland, Lift Cylinder
34.864	체크 밸브	Check Valve, Lift Cylinder
34.867	리테이너	Retainer, Lift Cylinder Check Valve
96.274	와셔	Washer, Lift Cylinder Check Valve

SECONDARY CYLINDER ASSEMBLY (OPTION)

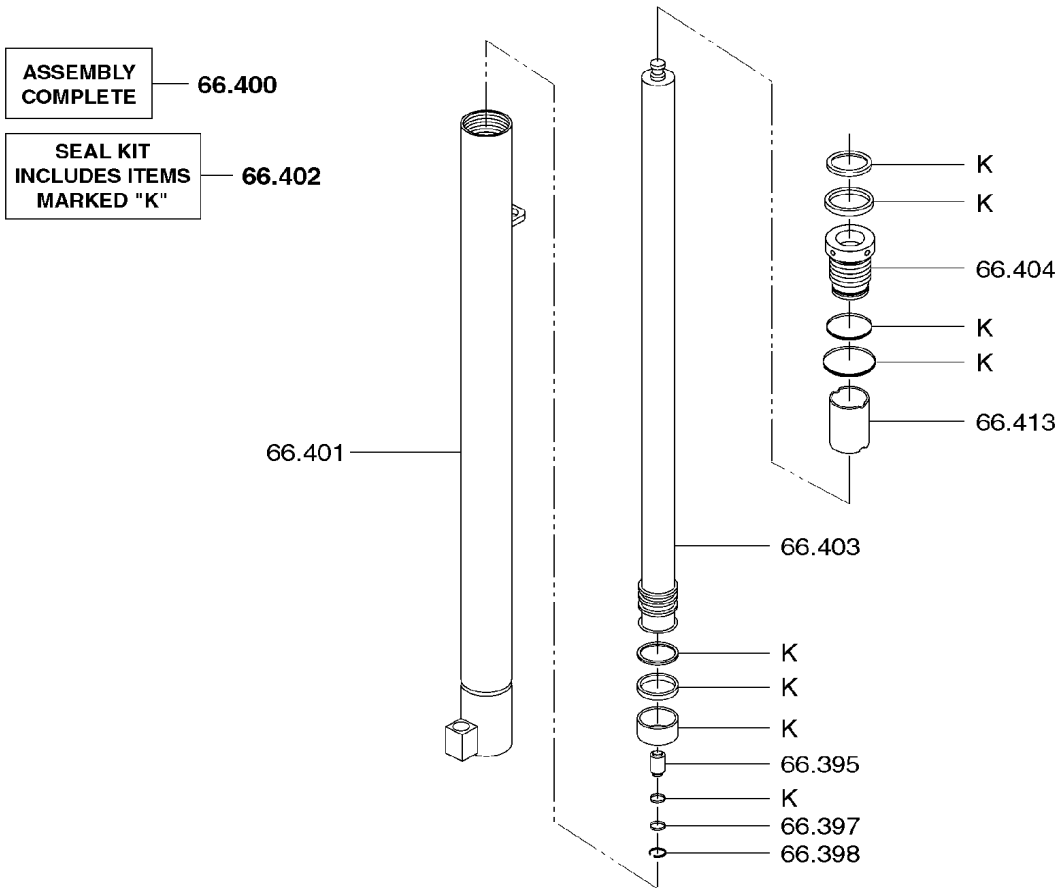

키이번호 key No.	부품명 Description	
66.395	체크 밸브	Check Valve, Final Lift Cylinder
66.397	와셔	Washer, Final Lift Cylinder Check Valve
66.398	스냅 링	Snap Ring, Final Lift Cylinder Check Valve
66.400	실린더 조립체	Cylinder Assembly, Final Lift
66.401	배럴	Barrel, Final Lift Cylinder
66.402	패킹 킷트	Packing Kit, Final Lift Cylinder
66.403	피스톤 로드	Piston Rod, Final Lift Cylinder
66.404	캡	Cap, Final Lift Cylinder Gland
66.413	스페이서	Spacer, Final Lift Cylinder Piston Rod


TRIPLE STAGE UPRIGHT (OPTION)

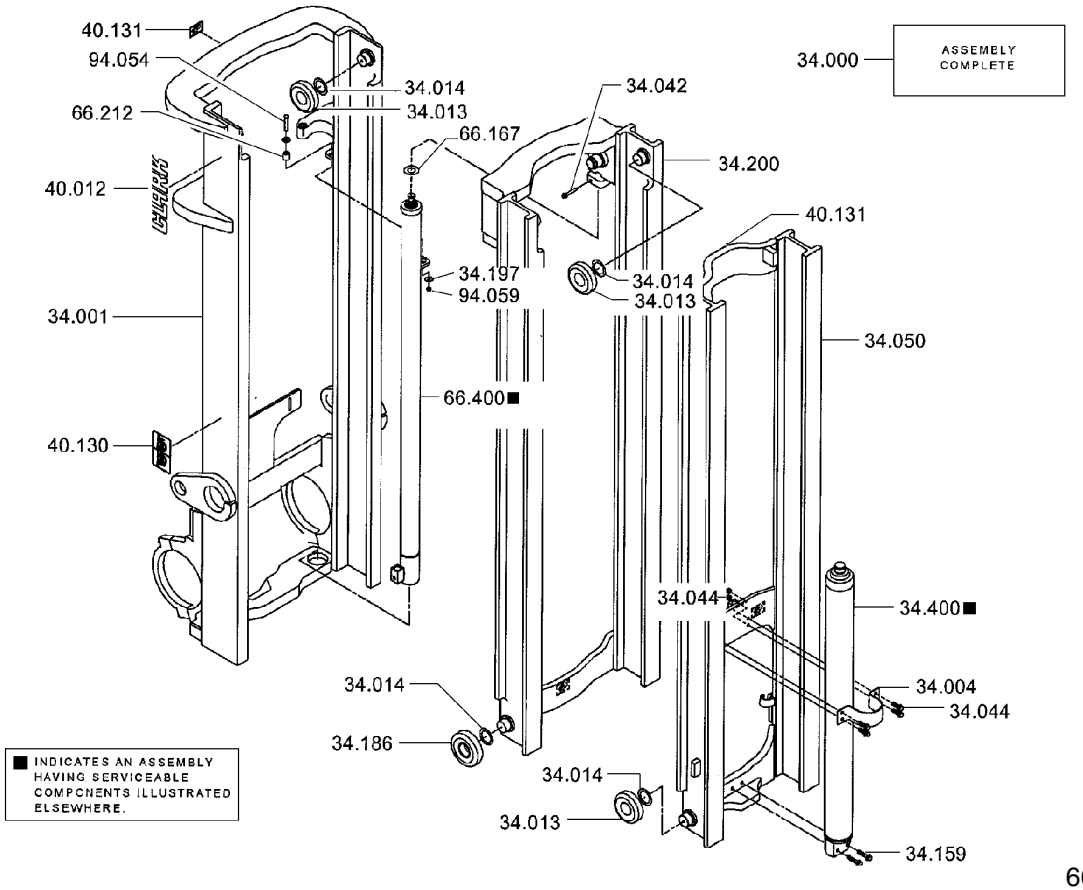

66-227

키이번호 key No.	부품명 Description	
34.000	업라이트 & 실린더	Upright & Lift Cyl Assembly
34.001	아웃 레일 용접체	Outer Rail Welder Assembly, Upright
34.004	브래킷	Bracket, Cylinder Retaining
34.013	롤러	Roller, Upright
34.014	심	Shim, Upright Roller
34.042	패스너	Fastener, Lift Cylinder (Upper)
34.044	패스너	Fastener, Lift Cylinder Upper Anchor
34.050	인너레일 용접체	Inner Rail Welded Assembly, Upright
34.159	패스너	Fastener, Lift Cylinder Retainer & Cap
34.186	롤러	Roller, Upright
34.197	패스너	Fastener, Lift Cylinder Upper Ring Segment Retainer
34.200	인터레일 용접체	Intermediate Rail Welded Assembly, Upright
34.400	실린더 조립체	Cylinder Assembly, Lift
40.012	데칼	Decal, Clark Logo-Small
40.130	범례	Legend, Safety
40.131	범례	Legend, Safety
66.167	심	Shim, Lift Cylinder Upper
66.212	스페이서	Spacer, Lift Cylinder Fastener
66.400	실린더 조립체	Cylinder Assembly, Final Lift
94.054	패스너	Fastener, Final Lift Cylinder (Upper)
94.059	너트	Nut, Lift Cylinder Fastener


LIFT CHAIN (OPTION)

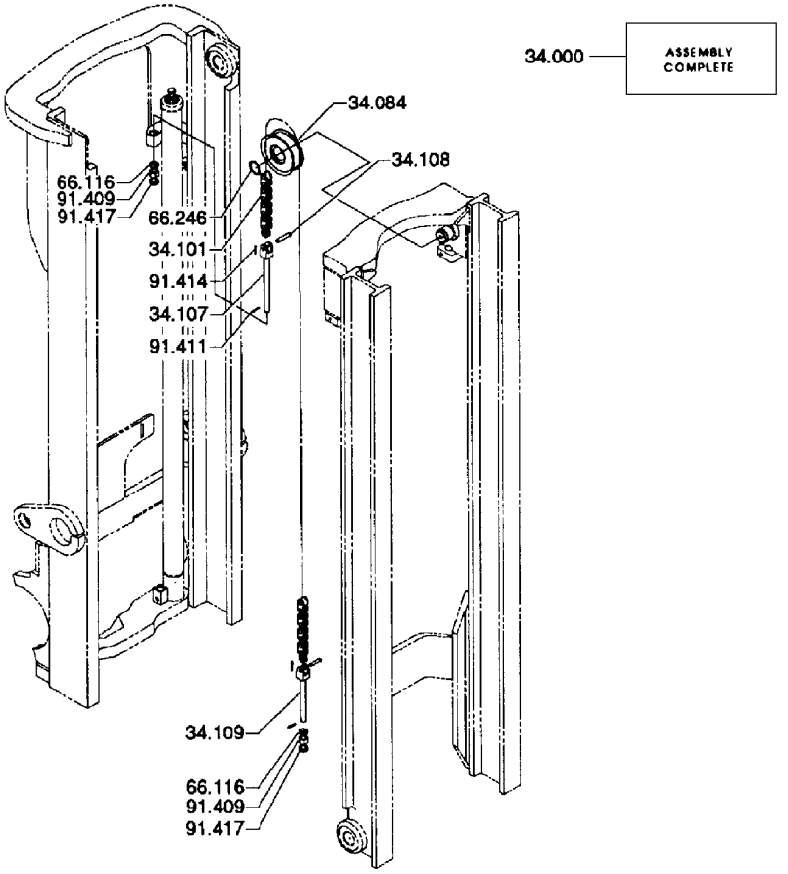

66-328

키이번호 key No.		부품명 Description
34.000	업라이트 & 실린더	Upright & Lift Cyl Assembly
34.084	쉬브	Sheave, Lift Chain
34.101	체인	Chain, Lift
34.107	앵커	Anchor, Lift Chain
34.108	패스너	Fastener, Lift Chain To Anchor
34.109	앵커	Anchor, Lift Chain Carriage End
66.116	스페이서	Spacer, Lift Chain Anchor
66.246	스페이서	Spacer, Lift Chain Sheave
91.409	너트	Nut, Lift Chain Fastener (Cylinder End)
91.411	리테이너	Retainer, Lift Chain To Anchor Fastener
91.414	리테이너	Retainer, Lift Chain To Anchor Fastener
91.417	너트	Nut, Rail Lift Chain Fast (Cyl End)


LIFT CHAIN (OPTION)

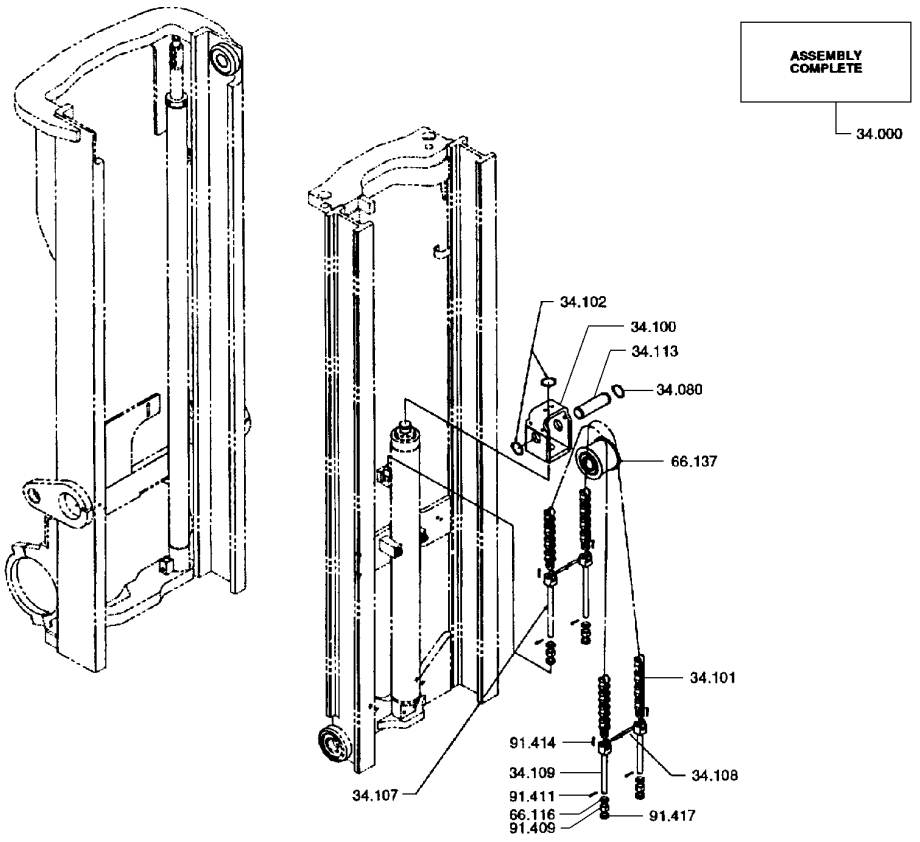

66-330E

키이번호 key No.		부품명 Description
34.000	업라이트 & 실린더	Upright & Lift Cyl Assembly
34.080	패스너	Fastener, Lift Chain Sheave
34.100	캐리어	Carrier, Lift Cylinder Chain Sheave
34.101	체인	Chain, Lift
34.102	패스너	Fastener, Sheave Carrier
34.107	앵커	Anchor, Lift Chain
34.108	패스너	Fastener, Lift Chain To Anchor
34.109	앵커	Anchor, Lift Chain Carriage End
34.113	축	Shaft, Lift Chain Sheave (Carrier)
66.116	스페이서	Spacer, Lift Chain Anchor
66.137	쉬브	Sheave, Rail Lift Chain (Carrier)
91.409	너트	Nut, Lift Chain Fastener (Cylinder End)
91.411	리테이너	Retainer, Lift Chain To Anchor Fastener
91.414	리테이너	Retainer, Lift Chain To Anchor Fastener
91.417	너트	Nut, Rail Lift Chain Fast (Cyl End)


LIFT CHAIN (OPTION)

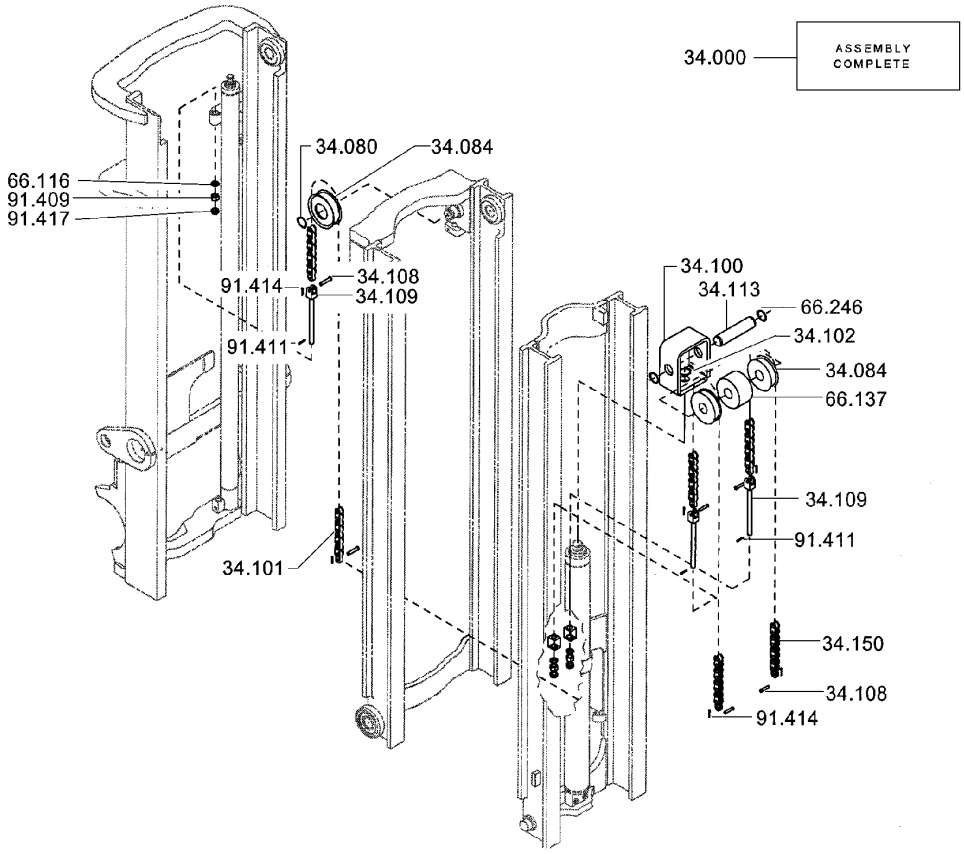

66-333

키이번호 key No.		부품명 Description
34.000	업라이트 & 실린더	Upright & Lift Cyl Assembly
34.080	패스너	Fastener, Lift Chain Sheave
34.084	쉬브	Sheave, Lift Chain
34.100	캐리어	Carrier, Lift Cylinder Chain Sheave
34.101	체인	Chain, Lift
34.102	패스너	Fastener, Sheave Carrier
34.108	패스너	Fastener, Lift Chain To Anchor
34.109	앵커	Anchor, Lift Chain Carriage End
34.113	축	Shaft, Lift Chain Sheave (Carrier)
34.150	체인	Chain, Upright Rail Lift
66.116	스페이서	Spacer, Lift Chain Anchor
66.137	쉬브	Sheave, Rail Lift Chain (Carrier)
66.246	스페이서	Spacer, Lift Chain Sheave
91.409	너트	Nut, Lift Chain Fastener (Cylinder End)
91.411	리테이너	Retainer, Lift Chain To Anchor Fastener
91.414	리테이너	Retainer, Lift Chain To Anchor Fastener
91.417	너트	Nut, Rail Lift Chain Fast (Cyl End)


LIFT CYLINDER PIPING (OPTION)

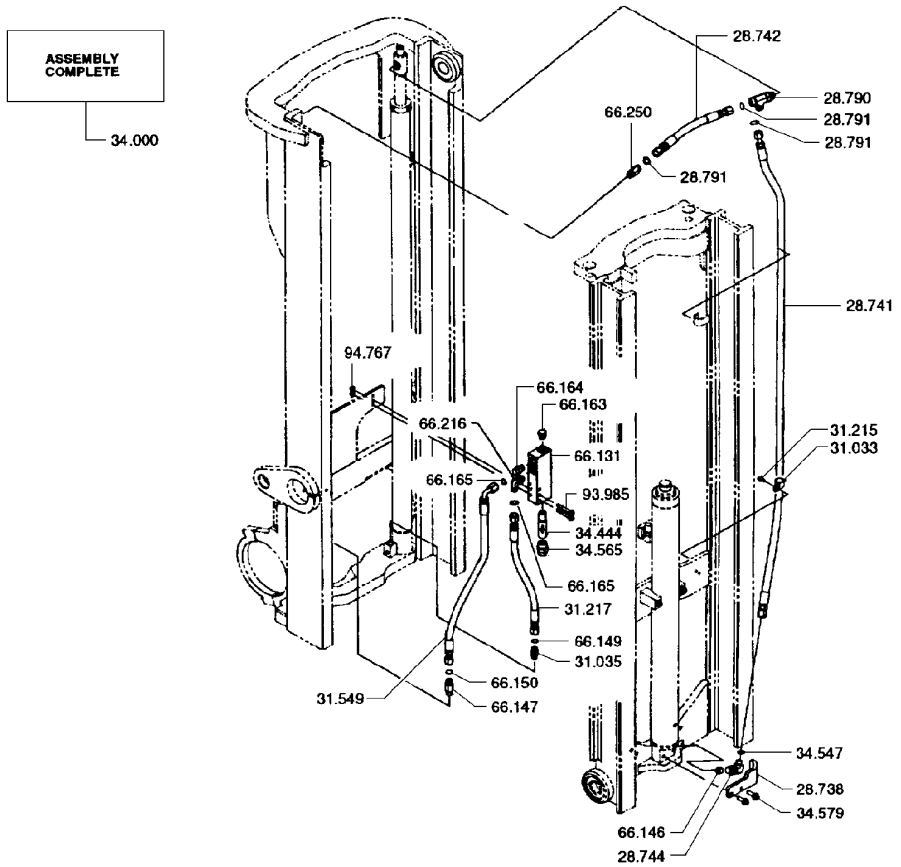

66-435E

키이번호 key No.	부품명 Description	
28.738	브래킷	Bracket, Lift Cylinder Hose
28.741	라인 조립체	Line Assy, Lift Cylinder
28.742	라인	Line, Lift Cylinder Left Hand
28.744	피팅	Fitting, Lift Cylinder Line
28.790	피팅	Fitting, Final Lift Cylinder Line
28.791	시일	Seal, Final Lift Cylinder Line Fitting
31.033	클램프	Clamp, Lift Cylinder Line To Support
31.035	피팅	Fitting, Lift Cylinder Port
31.215	패스너	Fastener, Lift Line Clamp
31.217	라인	Line, Lift Cylinder Inlet Fitting
31.549	라인	Line, Lift Cyl Flow Control Valve Inlet
34.000	업라이트 & 실린더	Upright & Lift Cyl Assembly
34.444	밸브 조립체	Valve Assembly, Lift Cylinder Flow Control
34.547	시일	Seal, Lift Cylinder Inlet Port
34.565	피팅	Fitting, Lift Cylinder Flow Control Valve Inlet Port
34.579	패스너	Fastener, Lift Cylinder Pressure Line Support
66.131	매니폴드	Manifold, Lift Cylinder Flow Control Valve
66.146	밸브	Valve, Lift Cylinder Port Flow Control
66.147	밸브	Valve, Final Lift Cylinder Port Flow Control
66.149	시일	Seal, Lift Cylinder Line Fitting
66.150	시일	Seal, Lift Cylinder Line Fitting
66.163	플러그	Plug, Lift Cylinder Flow Control Valve Manifold Port
66.164	피팅	Fitting, Lift Cylinder Flow Control Valve Manifold
66.165	시일	Seal, L/Cyl Flow Control Valve Manifold Port Fitting
66.216	피팅	Fitting, Flow Control Valve Manifold Port
66.250	밸브	Valve, Final Lift Cylinder Port Flow Control
93.985	패스너	Fastener, Lift Cylinder Flow Control Valve Manifold
94.767	너트	Nut, Lift Cylinder Flow Control Valve Manifold Fastener


LIFT CYLINDER ASSEMBLY (OPTION)

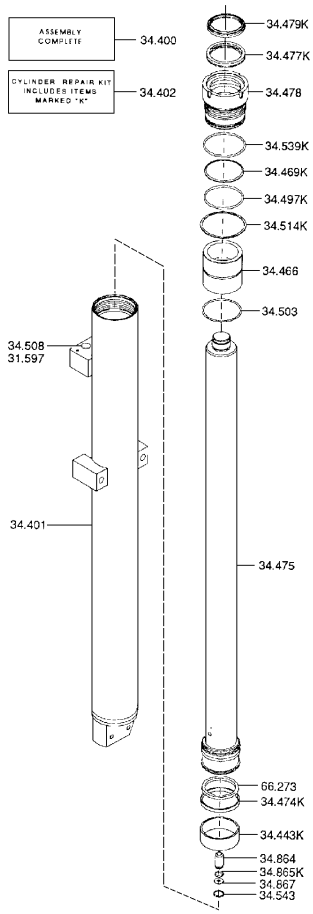

66-515

키이번호 key No.		부품명 Description
31.597	시일	Seal, Lift Cylinder Port
34.400	실린더 조립체	Cylinder Assembly, Lift
34.401	배럴	Barrel, Lift Cylinder
34.402	시일 & 팩킹 킷트	Seal & Packing Kit, Lift Cylinder
34.443	링	Ring, Lift Cylinder Piston Wear
34.466	스페이서	Spacer, Lift Cylinder Feed Tube
34.469	시일	Seal, Lift Cylinder Gland
34.474	시일	Seal, Lift Cylinder Piston
34.475	로드	Rod, Lift Cylinder
34.477	패킹	Packing, Lift Cylinder Feed Tube
34.478	글랜드	Gland, Lift Cylinder
34.479	와이퍼	Wiper, Lift Cylinder Feed Tube
34.497	시일	Seal, Lift Cylinder Gland
34.503	패킹	Packing, Lift Cylinder Piston Rod (Outer)
34.508	플러그	Plug, Lift Cylinder
34.514	백업 링	Back-Up Ring, Lift Cylinder Gland Seal
34.539	리테이너	Retainer, Lift Cylinder Gland Bushing
34.543	패스너	Fastener, Flow Control Valve
34.864	체크 밸브	Check Valve, Lift Cylinder
34.865	시일	Seal, Lift Cylinder Check Valve
34.867	리테이너	Retainer, Lift Cylinder Check Valve
66.273	시일	Seal, Lift Cylinder Piston Rod Adaptor


LIFT CYLINDER ASSEMBLY (OPTION)

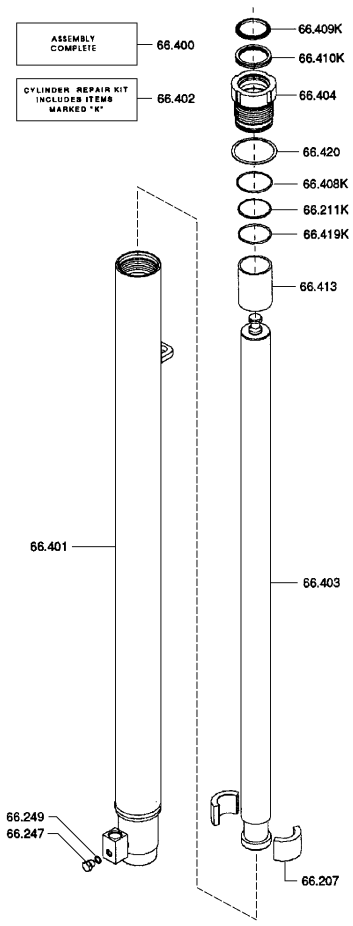


66-606

키이번호 key No.	부품명 Description	
66.207	피스톤	Piston, Final Lift Cylinder
66.211	백업 링	Back-Up Ring, Final Lift Cylinder Gland Seal
66.247	피팅	Fitting, Final Lift Cylinder
66.249	시일	Seal, Final Lift Cylinder Fitting
66.400	실린더 조립체	Cylinder Assembly, Final Lift
66.401	배럴	Barrel, Final Lift Cylinder
66.402	패킹 킷트	Packing Kit, Final Lift Cylinder
66.403	피스톤 로드	Piston Rod, Final Lift Cylinder
66.404	캡	Cap, Final Lift Cylinder Gland
66.408	시일	Seal, Final Lift Cylinder Gland Cap
66.409	와이퍼	Wiper, Final Lift Cylinder Piston Rod
66.410	시일	Seal, Final Lift Cylinder Piston Rod
66.413	스페이서	Spacer, Final Lift Cylinder Piston Rod
66.419	링	Ring, Lift Cylinder Gland
66.420	로크 링	Lock Ring, Lift Cylinder Gland

SEAT OPERATED BRAKE(WOOCHANG) - OPTION

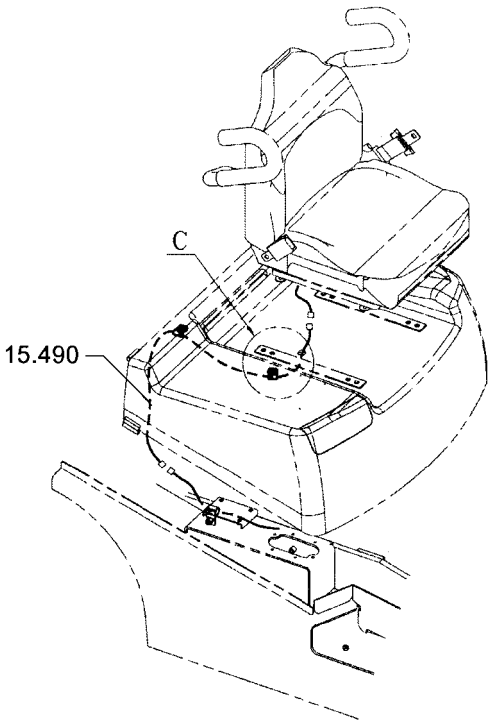

STANDARD SEAT

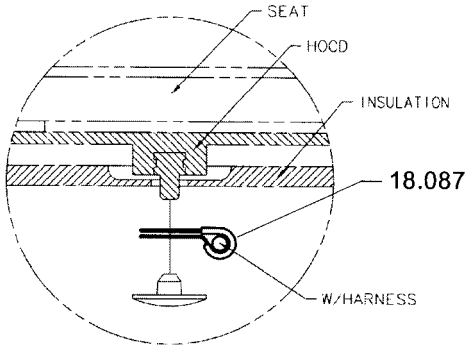


DETAIL C

75-004

키이번호 key No.	부품명 Description
15.490 배선	Harness, Seat Actuated Engine Shutdown Wiring
18.087 클립	Clip, Seat Safety Switch Wire


SEAT OPERATED BRAKE(GRAMMER) - OPTION

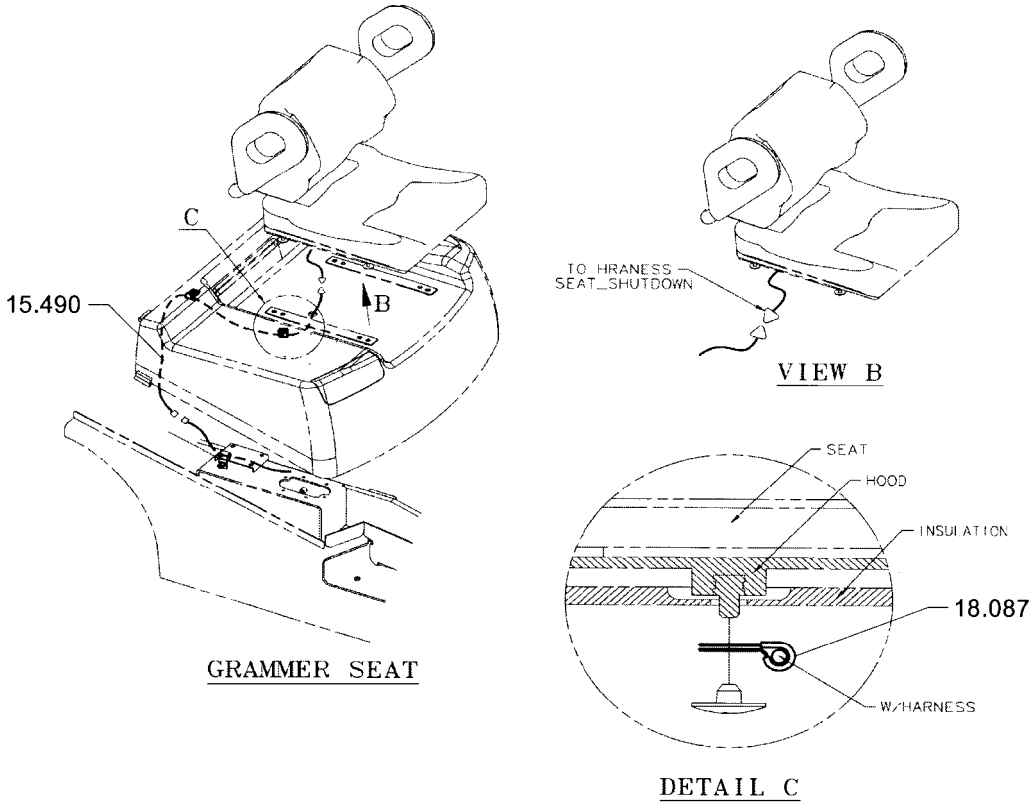

75-005

키이번호 key No.	부품명 Description
15.490 배선	Harness, Seat Actuated Engine Shutdown Wiring
18.087 클립	Clip, Seat Safety Switch Wire


SEAT OPERATED BRAKE SWITCH (OPTION)

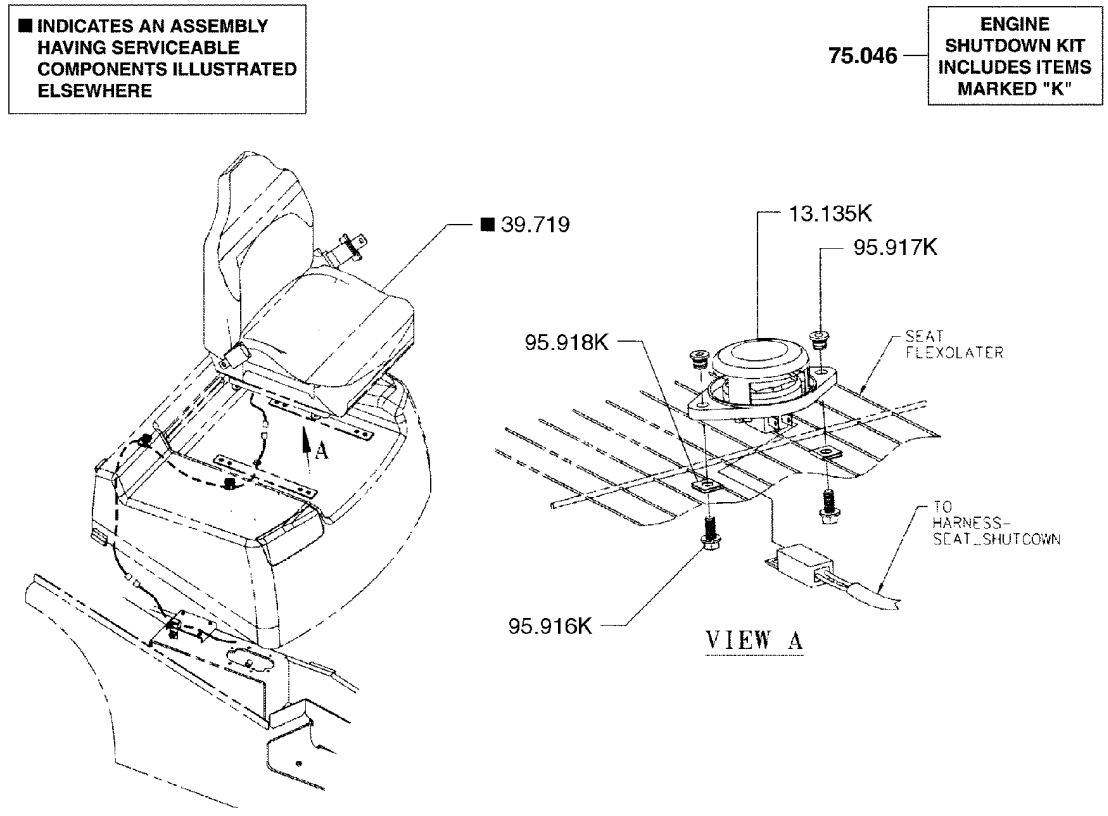

75-006

키이번호 key No.		부품명 Description
13.135	스위치	Switch, Seat Safety
39.719	시트 조립체	Seat Assembly
75.046	킷트	Kit, Seat Actuated Engine Shutdown
95.916	패스너	Fastener, Seat Switch
95.917	너트	Nut, Seat Switch Fastener
95.918	와셔	Washer, Seat Switch Fastener


VARIABLE RELIEF VALVE INSTALLATION (OPTION)

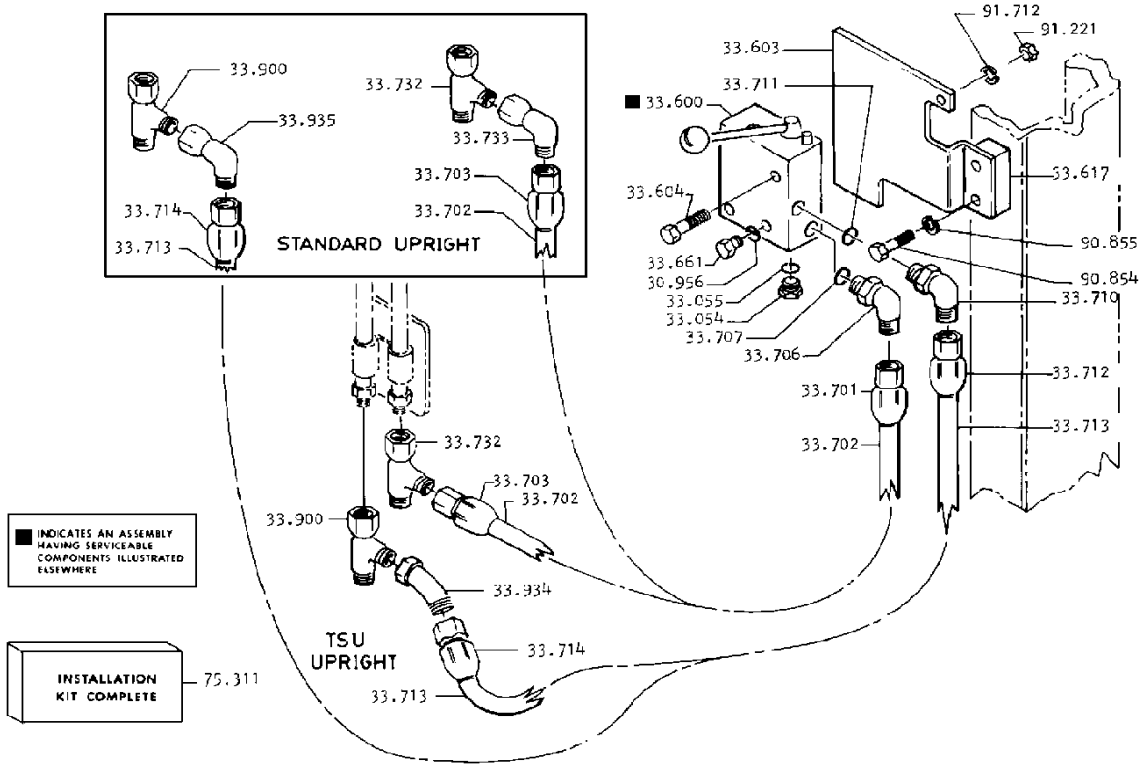

75-(33)014

키이번호 key No.		부품명 Description
30.956	시일	Seal, Relief Valve Plug
33.054	플러그	Plug, Relief Valve Port
33.055	시일	Seal, Relief Valve Port Plug
33.600	릴리프 밸브	Relief Valve, Device Variable Pressure
33.603	브래킷	Bracket, Device Cariable Relief Valve
33.604	패스너	Fastener, Device Variable Relief Valve
33.617	스페이서	Spacer, Dev Variable Relief Val Brkt
33.661	피팅	Fitting, Device Relief Valve Outlet Port
33.701	커플링	Coupling, Device Relief Valve Inlet Line
33.702	라인	Line, Device Relief Valve Inlet
33.703	커플링	Coupling, Device Relief Valve Inlet Line
33.706	피팅	Fitting, Device Relief Valve Inlet Port
33.707	시일	Seal, Device Relief Valve Inlet Port Fitting
33.710	피팅	Fitting, Device Relief Valve Discharge Port
33.711	시일	Seal, Device Relief Valve Discharge Port Ftg
33.712	커플링	Coupling, Device Relief Valve Discharge Hose
33.713	라인	Line, Device Relief Valve Discharge
33.714	커플링	Coupling, Device Relief Valve Discharge Line
33.732	피팅	Fitting, Device Relief Valve Inlet
33.733	피팅	Fitting, Device Relief Valve Inlet
33.900	피팅	Fitting, Device Relief Valve Discharge Line
33.934	피팅	Fitting, Device Relief Valve Discharge Line
33.935	피팅	Fitting, Device Relief Valve Discharge Line
75.311	킷트	Kit, Relief Valve Installation
90.854	볼트	Bolt, Device Mounting Bracket Fastener
90.855	로크와셔	Lockwasher, Device Mounting Bracket Fastener
91.221	너트	Nut, Dev Variable Relief Valve Fastener
91.712	로크와셔	Lockwasher, Device Relief Valve Fastener


DEVICE HYDRAULIC PRESSURE (OPTION)

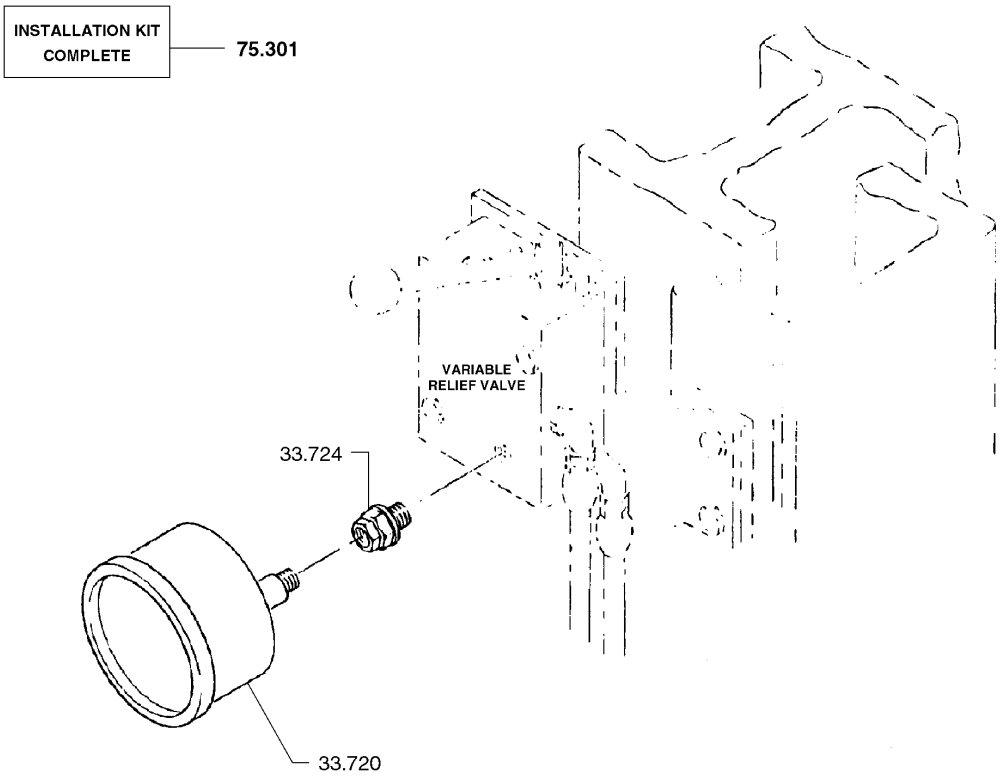

75-(33)045

키이번호 key No.		부품명 Description
33.720	유압 게이지	Gauge, Device Hydraulic Pressure
33.724	피팅	Fitting, Device Hyd Pressure Gauge
75.301	디바이스	Device, Hydraulic Pressure Gauge


SOLENOID VALVE (OPTION)

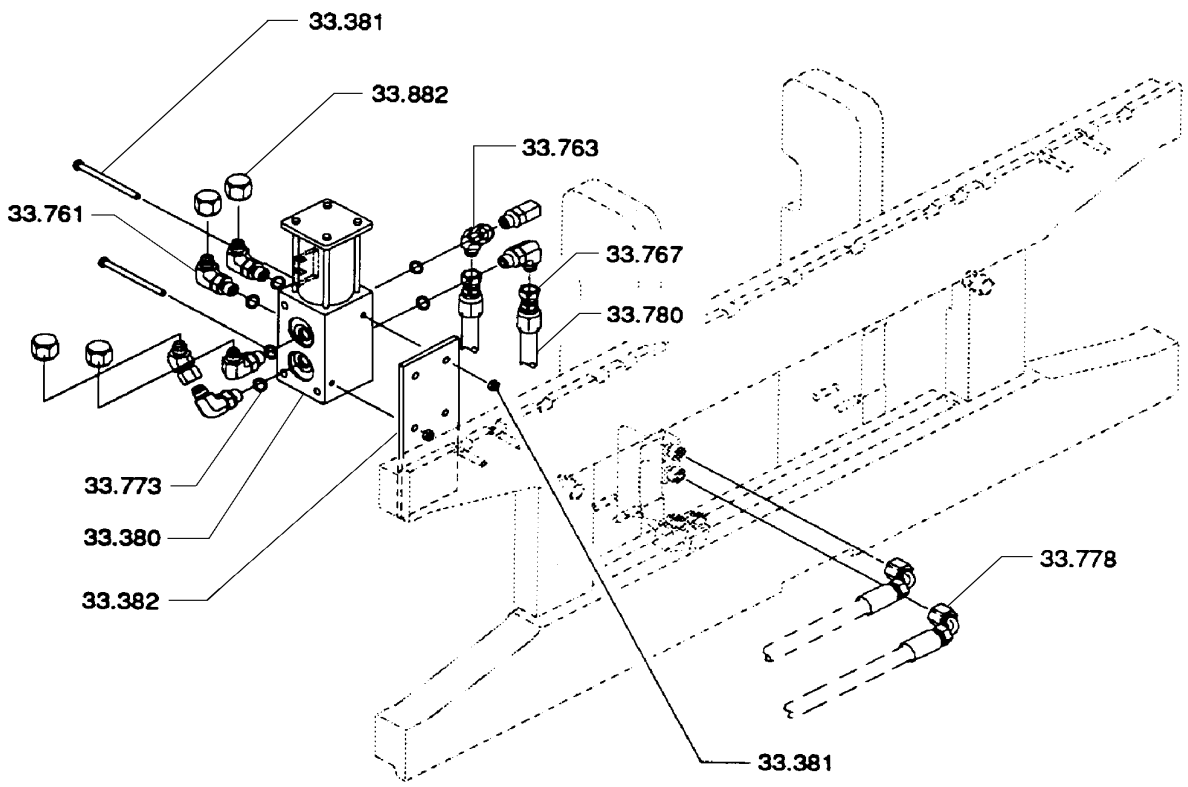

75-(33)130

키이번호 key No.	부품명 Description	
33.380	밸브 조립체	Valve Assembly, Device Selector Solenoid
33.381	패스너	Fastener, Device Selector Valve
33.382	브래킷	Bracket, Device Selector Valve
33.761	피팅	Fitting, Device Selector Valve C4 Port
33.763	피팅	Fitting, Device Selector Valve C4 Port
33.767	호스 커플링	Hose Coupling, Dev Sel Valve C1 Port
33.773	시일	Seal, Dev Selector Valve C2 Port
33.778	호스 커플링	Hose Coupling, Dev Sel Valve C3 Port
33.780	라인	Line, Device Selector Valve C2 Port Hydraulic
33.882	플러그	Plug, Device Sel Valve "P" Port

STATIC STRAP (OPTION)

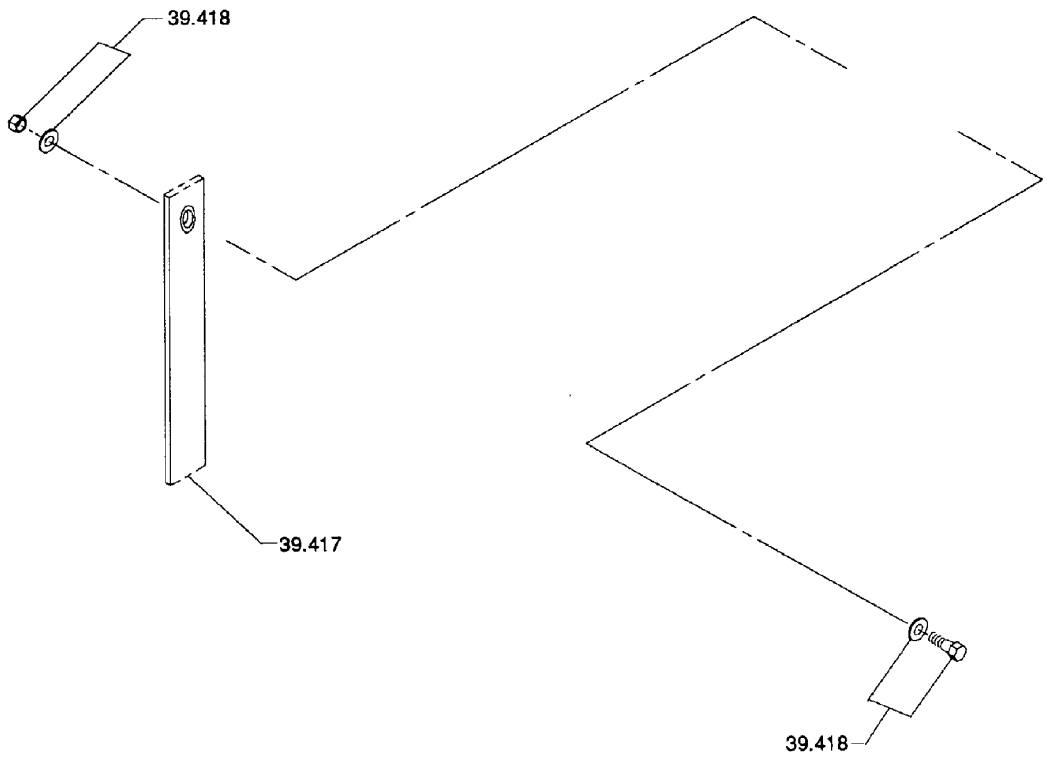

75-(39)650

키이번호 key No.	부품명 Description	
39.417	그라운드 스트랩	Ground Strap, Electric Truck
39.418	패스너	Fastener, Electric Truck Ground Strap