부품 매뉴얼
PARTS MANUAL

JANEIRO 2013

RUTHZIL TRATOR COMERCIAL DE PEÇAS LTDA 11 97083-6812 ROLANDO

CLARK


C 35/40/45/50 KD

(for 24V, Tier 3)

SERIAL NUMBER : P455D - XXXX - 9885 KF (Tier 3)

부품 청구시 항상 장비의 SERIAL NO. 도 함께 알려 주십시오.

ALWAYS GIVE TRUCK SERIAL NUMBER WHEN ORDERING PARTS.

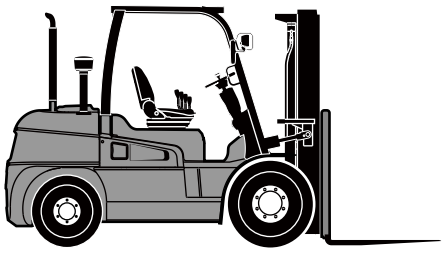

Part No. 8066403

Jan. 2013

CLARK THE FORKLIFT

(본사) 경기도 부천시 오정구 오정동 202-1
(Head office) 202-1 Ojung-Dong, Ojung-Gu, Bucheon-city, Kyunggi-do, Korea
(공장) 경남 창원시 웅남동 40-1
(Factory) 40-1 Ungnam-dong, Changwon-city, Kyungnam, Korea

00-702 CYLINDER HEAD
실린더 헤드

00-708 CRANKCASE
크랭크케이스

00-730 ENGINE MOUNTING
엔진 어셈블리

01-342 WATER PUMP MOUNTING AND THERMOSTAT
워터 펌프 마운팅 & 서모스태트

01-343 FRONT CASE & OIL LINES
프론트 케이스 & 오일라인

01-345 COOLING SYSTEM
냉각 장치

01-347 FAN MOUNTING
팬 마운팅

02-471 AIR CLEANER ASSEMBLY
에어 크리너 어셈블리

02-475 ACCELERATOR SYSTEM
악셀레이터 장치

03-546 LICENSE PLATE MOUNTING
번호판 마운팅

03-594 EXHAUST SYSTEM
배기 장치

03-595 FUEL LINE
연료 라인

03-612 FUEL INJECTION PUMP UNIT
연료 배출펌프

03-613 GOVERNOR SPEED LEVER
거버너 스피드 레버

03-614 GOVERNOR
가버너

03-618 INTAKE SYSTEM
흡기 시스템 (듀얼)

03-619 EXHAUST MANIFOLD
배기기관

03-620 EGR COOLER INSTALLATION
EGR 쿨러 조립그룹

03-623 INTAKE MANIFOLD
흡기 매니폴드

03-676 FUEL SYSTEM
연료 시스템

05-050 TRANSMISSION CASE & CONTROL VALVE
*

05-052 TORQUE CONVERTER HOUSING
토오크 컨버터 하우징

05-065 TRANSMISSION CLUTCH PACKS (FWD)
*

05-066 TRANSMISSION CLUTCH PACKS (REV)
*

06-079 TRANSMISSION CONTROL COVER
트랜스미션 컨트롤 커버

07-071 TRANSMISSION MOUNTING
트랜스미션 마운팅

10-123 TRANS COOLING LINES
트랜스미션 쿨링 라인

11-111 STARTER
스타터

11-302 ELECTRICAL CONTROL
전기장치 컨트롤

12-195 GENERATOR
발전기

12-205 BATTERY MOUNTING
베터리 어셈블리

12-220 GENERATOR MOUNTING
제너레이터 마운팅

13-162 STROBE LIGHT MOUNTING
경광등 어셈블리

13-182 STROBE LIGHT
경광등

13-228 BACK-UP ALARM INSTALLATION
백-업 알람 조립그룹

13-292 KEY SWITCH INSTALLATION
키스위치 조립그룹

13-294 HEAD LAMP INSTALLATION
헤드램프 조립그룹

13-296 SIGNAL LIGHT INSTALLATION
시그널 라이트 조립그룹

13-297 COMBINATION LAMP INSTALLATION
컴비네이션 램프 조립그룹

13-298 REAR WORK LIGHT INSTALLATION
후방등 조립그룹

14-043 ELECTRICAL WIRING
전기장치 와이어링

14-167 ELECTRICAL COMPONENTS
전기장치 구성품

20-142 DRIVE AXLE MOUNTING
드라이브 액슬 어셈블리

20-145 DRIVE AXLE HOUSING
드라이브 액슬 하우징

20-146 DIFFERENTIAL & CARRIER ASSY
차동장치 & 캐리어

20-147 DRIVE AXLE HUB ASSEMBLY
드라이브 액슬 허브 어셈블리

21-000 DRIVE SHAFT ASSEMBLY
*

22-013 DRIVE WHEEL & TIRE MOUNTING
드라이브휠 & 타이어 마운팅

22-014 STEER WHEEL & TIRE MOUNTING
스티어휠 & 타이어 마운팅

22-015 DUAL DRIVE WHEEL & TIRE MOUNTING
*

22-024 DRIVE WHEEL & TIRE (SOLID TYPE)
*

22-025 STEER WHEEL & TIRE (SOLID TYPE)
*

23-491 BRAKE & INCHING LINES
브레이크 및 인칭라인

23-510 PARKING BRAKE MOUNTING
파킹브레이크 마운팅

23-538 BRAKE LINES
브레이크 라인

24-007 BRAKE ENERGIZER ASSEMBLY
브레이크 에너자이어 어셈블리

25-058 STEERING GEAR MOUNTING
스티어링 기어 어셈블리

25-145 STEERING UNIT
스티어링 유니트

25-278 STEERING COLUMN ASSEMBLY
스티어 컬럼 어셈블리

25-291 STEERING COLUMN SHAFT ASSEMBLY
스티어링 컬럼 보조 어셈블리

25-292 STEERING WHEEL & COLUMN MOUNTING
스티어 컬럼 & 핸들 마운팅

26-253 STEERING CYLINDER
스티어링 실린더

26-284 STEER AXLE MOUNTING
스티어링 액슬 마운팅

26-290 STEER AXLE ASSEMBLY
스티어링 액슬 어셈블리

26-300 HYDRAULIC STEERING LINES
스티어링 라인

27-000 PRIORITY VALVE ASSEMBLY
메인 벨브 어셈블리

29-228 HYDRAULIC BRAKE PUMP ASSY
*

29-243 HYDRAULIC BRAKE PUMP ASSY
*

29-278 HYDRAULIC TANK & COMPONENTS MOUNTING
유압탱크 & 구성품 마운팅

29-293 HYDRAULIC PUMP MOUNTING
유압 펌프 마운팅

30-363 HYDRAULIC CONTROL VALVE-2 SPOOL
유압 컨트롤 밸브 - 2 스풀

30-364 HYDRAULIC CONTROL VALVE-3 SPOOL
유압 컨트롤 밸브 - 3 스풀

30-365 HYDRAULIC CONTROL VALVE-4 SPOOL
유압 컨트롤 밸브 - 4 스풀

30-517 MAIN CONTROL VALVE 2-SPOOL(PUSH BUTTON)
메인 컨트롤 벨브 2-스풀 (푸쉬버튼)

30-518 MAIN CONTROL VALVE 3-SPOOL(PUSH BUTTON)
메인 컨트롤 밸브 - 3 스풀 (푸시버턴)

30-519 MAIN CONTROL VALVE 4-SPOOL(PUSH BUTTON)
메인 컨트롤 밸브 - 4 스풀 (푸시버턴)

30-586 MAIN CONTROL VALVE 2-SPOOL
메인 컨트롤 밸브 - 2 스풀

30-587 HYDRAULIC VALVE MOUNTING (3SPOOL)
유압벨브 마운팅 (3스풀)

30-588 MAIN CONTROL VALVE 4-SPOOL
메인 컨트롤 밸브 - 4 스풀

31-207 AUX. VALVE PLUMBING
보조 밸브 라인

31-212 TILT LIMIT WITH OVERRIDE
틸트 제한해제

31-237 HYDRAULIC LIFT & TILT LINES
유압 리프트 & 틸트 라인

31-260 HYDRAULIC SUPPLY LINES
유압 공급 라인

31-324 HYDRAULIC RETURN LINES
유압 리턴 라인

32-158 TILT CYLINDER MOUNTING
틸트 실린더 어셈블리

32-161 TILT CYLINDER
틸트 실린더

32-167 TILT AMOUNT GROUP
틸트 어마운트 그룹

34-189 CARRIAGE ASSEMBLY
캐리지 어셈블리

34-190 LOAD BACK REST MOUNTING
*

37-009 SEAT ASSEMBLY
시트 어셈블리

37-018 REAR VIEW MIRROR MOUNTING
후방미러 마운팅

38-220 COUNTERWEIGHT MOUNTING
카운터웨이터 조립그룹

38-267 DUST SHIELD MOUNTING
더스트 쉴드 마운팅

38-270 FRAME TANK BOTTOM PLUG
프레임 탱크 하단 플러그

39-829 SEAT MOUNTING
시트 어셈블리

39-876 HOOD MOUNTING
후드 마운팅

39-887 OVERHEAD GUARD MOUNTING
오버헤드가드 마운팅

39-888 SHEET METAL
시트 메탈

39-889 FLOOR PLATE
플로어 플레이트

40-250 MODEL & SPECIFICATION DECALS
*

40-281 DECALS
데칼

50-245 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
작업장치 호스 적용 (업라이트)

66-058 FORK
포크

66-182 UPRIGHT MOUNTING
업라이트 마운팅

66-183 STANDARD UPRIGHT
표준 업라이트

66-184 TRIPLE STAGE UPRIGHT
3단 업라이트

66-185 HI-LO UPRIGHT
하이로 업라이트

66-186 LIFT CYLINDER
리프트 실린더


66-187 SECONDARY CYLINDER ASSEMBLY
2차 실린더 어셈블리

66-188 PRIMARY CYLINDER
1차 실린더

66-189 SECONDARY CYLINDER ASSEMBLY
2차 실린더 어셈블리

66-999 EXTENTION FORK
익스텐션 포크

75-004 SEAT OPERATED BRAKE
시트 조작 브레이크

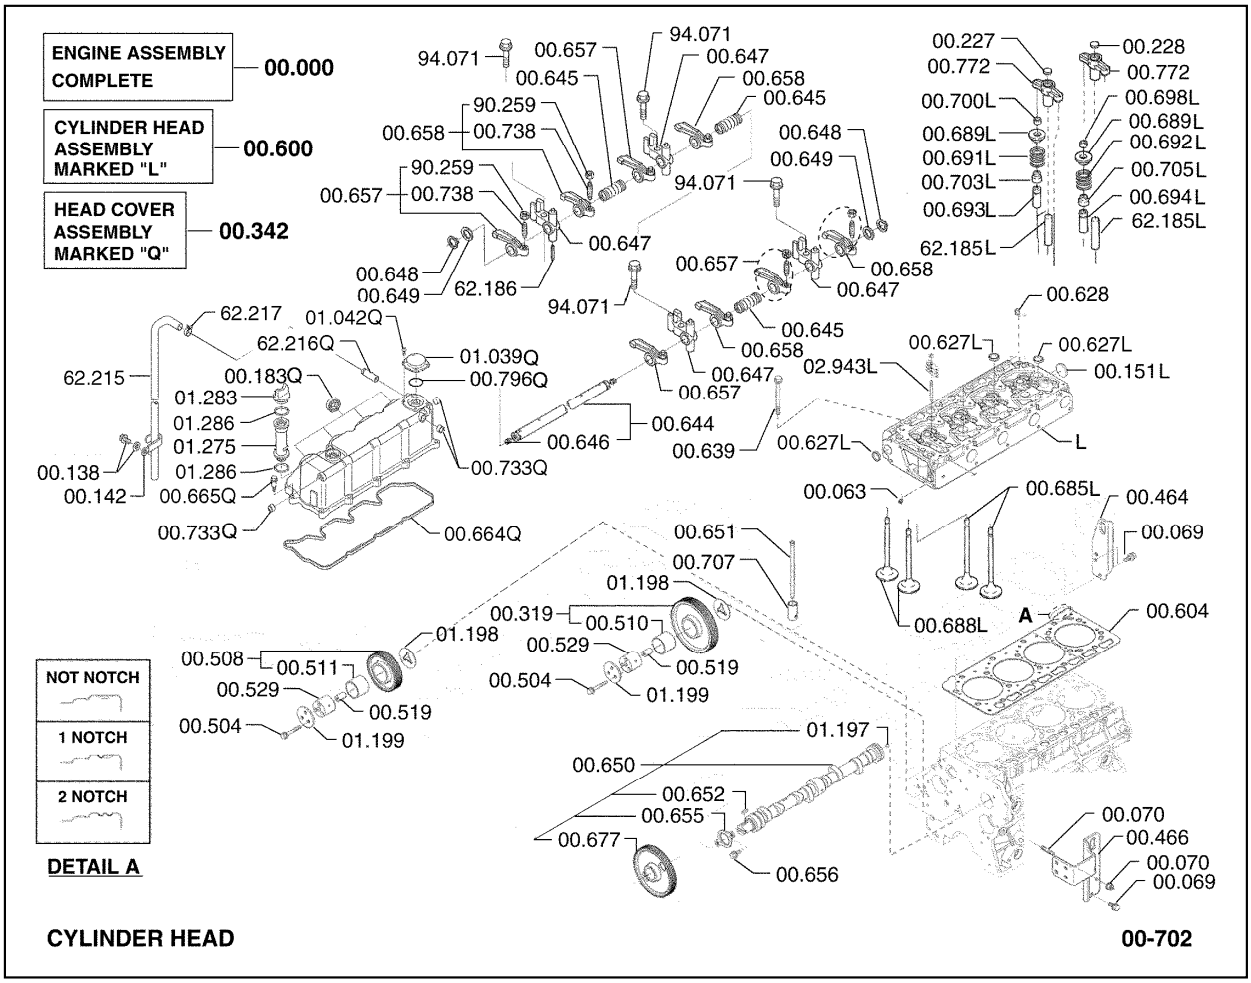

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.063	PLUG, CRANKCASE HEAD 플러그
00.069	FASTENER, ENGINE LIFTING BRACKET 패스너
00.070	FASTENER, ENGINE LIFTING BRACKET 패스너
00.138	FASTENER, CRANKCASE VENT TUBE CLIP 패스너
00.142	CLAMP, CRANKCASE VENT TUBE HOSE 클램프
00.151	PLUG, CRANKCASE HEAD REAR 플러그
00.183	SEAL, FUEL INJECTION PUMP ADAPTOR 시일
00.227	CAP, ENGINE INTAKE VALVE 캡
00.228	CAP, ENGINE EXHAUST VALVE 캡
00.319	GEAR, ENGINE BALANCER IDLER 기어
00.342	BONNET ASSY 보닛
00.464	BRACKET, ENGINE LIFTING 브라켓
00.466	BRACKET, ENGINE LIFTING 브라켓
00.504	FASTENER, UPPER IDLER GEAR SPINDLE 패스너
00.508	GEAR, ENGINE LOWER IDLER 기어
00.510	BEARING, ENGINE IDLER GEAR SHAFT 베어링
00.511	BEARING, IDLER GEAR SHAFT OUTER 베어링
00.519	PIN, IDLER GEAR THRUST PLUNGER 핀
00.529	SPINDLE, IDLER GEAR 스핀들
00.600	HEAD ASSEMBLY, CRANKCASE 헤드
00.604	GASKET, CRANKCASE HEAD 가스켓
00.627	PLUG, CRANKCASE HEAD 플러그
00.628	PLUG, CRANKCASE HEAD 플러그
00.639	FASTENER, CRANKCASE HEAD 패스너
00.644	PIVOT, ENGINE ROCKER ARM 피봇
00.645	SPRING, ENGINE ROCKER ARM 스프링
00.646	FASTENER, ENGINE ROCKER ARM PIVOT SUPPORT 패스너
00.647	SUPPORT, ENGINE ROCKER ARM PIVOT 서포트
00.648	LOCATOR, ENGINE ROCKER ARM 로케이터

00.649 WASHER, ENGINE ROCKER ARM PIVOT
와셔

00.650 CAMSHAFT
캠샤프트

00.651 PUSH ROD, ENGINE ROCKET ARM
푸시로드

00.652 KEY, CAMSHAFT TIMING GEAR WOODRUFF
키

00.655 PLATE, CAMSHAFT THRUST
플레이트

00.656 FASTENER, CAMSHAFT THRUST PLATE
패스너

00.657 ROCKER ARM ASSEMBLY, ENGINE VALVE
로커

00.658 ROCKER ARM ASSEMBLY, ENGINE VALVE
로커

00.664 GASKET, ROCKER ARM COVER
가스켓

00.665 FASTENER, ROCKER ARM COVER
패스너

00.677 GEAR, CAMSHAFT TIMING
기어

00.685 VALVE, EXHAUST
밸브

00.688 VALVE, INTAKE
밸브

00.689 RETAINER, ENGINE VALVE SEAL
리테이너

00.691 SPRING, ENGINE INTAKE VALVE
스프링

00.692 SPRING, ENGINE EXHAUST VALVE
스프링

00.693 GUIDE, INTAKE VALVE
가이드

00.694 GUIDE, EXHAUST VALVE
가이드

00.698 LOCK, EXHAUST VALVE SPRING SEAT
로크

00.700 LOCK, INTAKE VALVE SPRING SEAT
로크

00.703 SEAT, INTAKE VALVE SPRING
시트

00.705 SEAT, EXHAUST VALVE SPRING
시트

00.707 LIFTER, ENGINE VALVE
리프터

00.733 PLUG, CRANKCASE HEAD END COVER
플러그

00.738 STUD, ENGINE ROCKER ARM PIVOT SUPPORT
스터드

00.772 SUPPORT, ENGINE ROCKER ARM PIVOT
서포트

00.796 SEAL, CRANKCASE HEAD END COVER PLUG
시일

01.039 COVER, CRANKCASE VENT
커버

01.042 FASTENER, CRANKCASE VENT COVER
패스너

01.197 BALL, ENGINE CAMSHAFT PIVOT
볼

01.198 COLLAR, IDLE GEAR SHAFT
칼라

01.199 COLLAR, IDLE GEAR SHAFT
칼라

01.275 TUBE, OIL FILLER
튜브

01.283 CAP, CRANKCASE OIL FILLER
캡

01.286 GASKET, OIL FILLER CAP
가스켓

02.943 FASTENER, INJECTOR NOZZLE
패스너

62.185 SHAFT, ROCKER ARM PIVOT SUPPORT
샤프트

62.186 PIN, ROCKER ARM PIVOT SUPPORT
핀


62.215 LINE, ENGINE OIL VENTILATION
라인

62.216 FITTING, ENGINE OIL VENT LINE
피팅

62.217 CLAMP, ENGINE OIL VENT LINE
클램프

90.259 NUT, ENGINE ROCKER ARM PIVOT SUPPORT FASTENER
너트

94.071 FASTENER, ROCKER ARM PIVOT SUPPORT
패스너

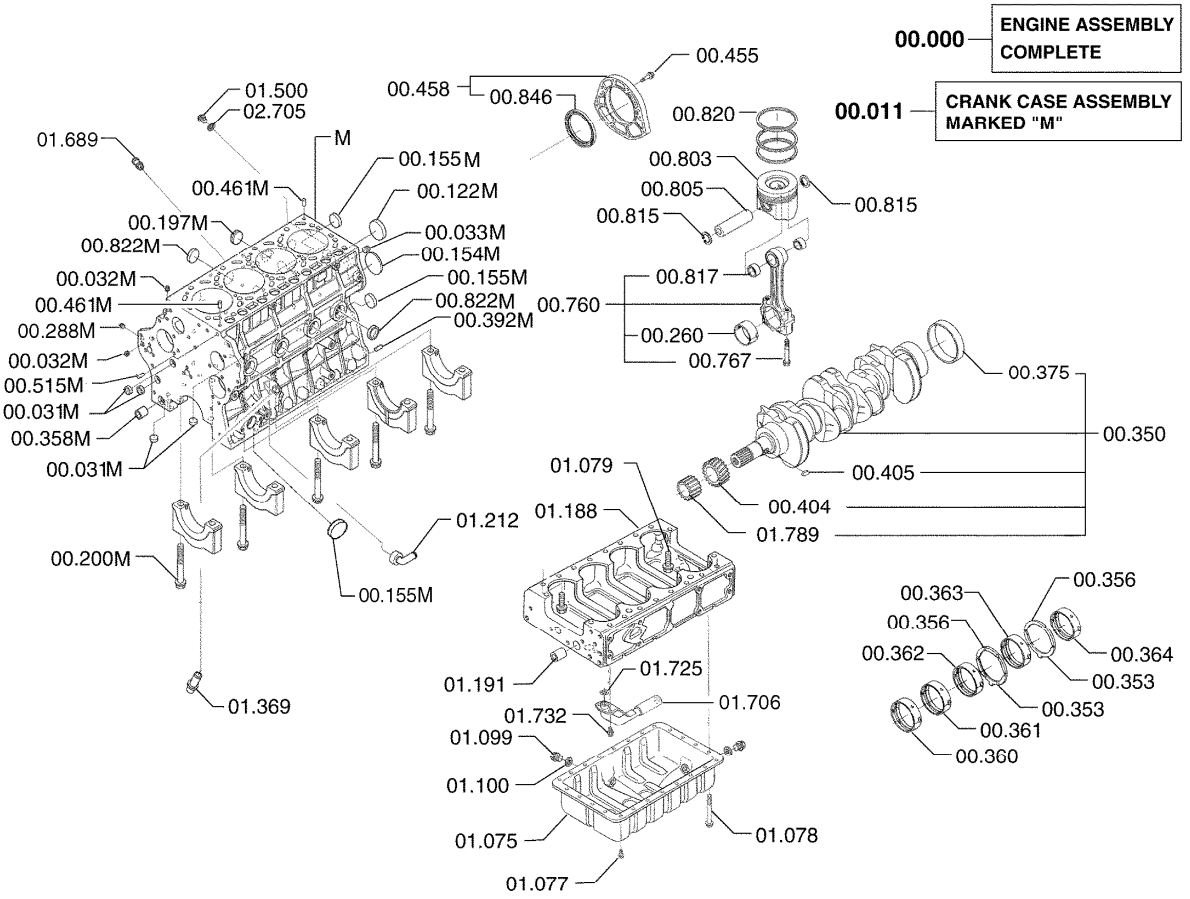

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.011	CRANKCASE 크랭크케이스
00.031	PLUG, CRANKCASE 플러그
00.032	PLUG, CRANKCASE 플러그
00.033	PLUG, CRANKCASE 플러그
00.122	PLUG, CRANKCASE 플러그
00.154	PLUG - EXPANSION, CRANKCASE END 플러그
00.155	PLUG - EXPANSION, CRANKCASE END 플러그
00.197	PLUG-EXPANSION, CRANKCASE SIDE 플러그
00.200	FASTENER, CRANKSHAFT BEARING NO. 1 CAP 패스너
00.260	BEARING, CONNECTING ROD (CYL. #1) 베어링
00.288	PLUG, CRANKCASE 플러그
00.350	CRANKSHAFT 크랭크샤프트
00.353	PLATE, CRANKSHAFT THRUST 플레이트
00.356	PLATE, CRANKSHAFT THRUST 플레이트
00.358	PIN, CRANKSHAFT THRUST WASHER TO BLOCK 핀
00.360	BEARING, NO. 1 MAIN JOURNAL 베어링
00.361	BEARING, NO. 2 MAIN JOURNAL 베어링
00.362	BEARING, NO. 3 MAIN JOURNAL 베어링
00.363	BEARING, NO. 4 MAIN JOURNAL 베어링
00.364	BEARING, NO. 5 MAIN JOURNAL 베어링
00.375	BEARING, CRANKSHAFT CLUTCH PILOT 베어링
00.392	PIN, ENGINE ASSEMBLY 핀
00.404	GEAR, CRANKSHAFT TIMING 기어
00.405	KEY, CRANKSHAFT TIMING GEAR 키
00.455	FASTENER, REAR OIL SEAL HOUSING 패스너
00.458	HOUSING, REAR OIL SEAL 하우징
00.461	DOWEL, CRANKCASE HEAD 다월
00.515	PIN, IDLER GEAR THRUST WASHER 핀
00.760	ROD ASSEMBLY, CONNECTING 로드

00.767 FASTENER, CONNECTING ROD BEARING CAP
패스너

00.803 PISTON (ONE CYLINDER)
피스톤과핀

00.805 PIN, PISTON
핀

00.815 RETAINER, PISTON PIN
리테이너

00.817 BUSHING, PISTON PIN (ENGINE SET)
부싱

00.820 PISTON RING
피스톤링

00.822 PLUG, CRANKCASE
플러그

00.846 SEAL, FLYWHEEL HOUSING
시일

01.075 PAN, CRANKCASE OIL
팬

01.077 FASTENER, OIL PAN TO CRANKCASE
패스너

01.078 FASTENER, CRANKCASE OIL PAN
패스너

01.079 FASTENER, CRANKCASE OIL PAN
패스너

01.099 PLUG, CRANKCASE OIL PAN DRAIN
플러그

01.100 GASKET, CRANKCASE OIL PAN DRAIN PLUG
가스켓

01.188 PAN, CRANKCASE OIL UPPER
팬

01.191 PIN, ENGINE OIL PAN
핀

01.212 FITTING, WATER INLET ELBOW OUTLET
피팅

01.369 FITTING, OIL MANIFOLD TO OIL FILTER
피팅

01.500 PLUG, WATER PUMP DISCHARGE FLANGE
플러그

01.689 FITTING, WATER PUMP OUTLET PORT
피팅


01.706 STRAINER, OIL PUMP OIL
스트레이너

01.725 GASKET, OIL STRAINER FRAME
가스켓

01.732 FASTENER, OIL PUMP STRAINER TUBE
패스너

01.789 GEAR, OIL PUMP DRIVE
기어

02.705 GASKET, WATER CORE PLUG
가스켓

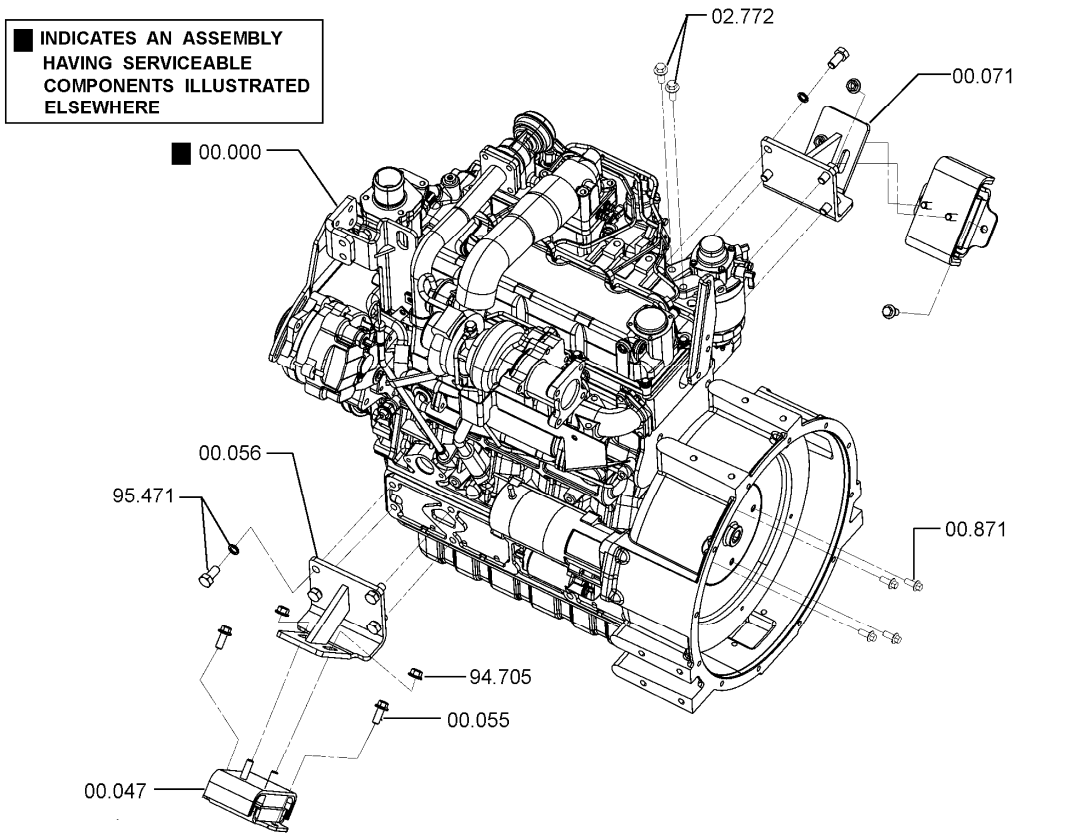

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.047 DAMPENER, ENGINE FRONT VIBRATION
댐프너

00.055 FASTENER, ENGINE FRONT VIBRATION DAMPENER
패스너

00.056 MOUNT, ENGINE RH
마운트


00.071 MOUNT, ENGINE LH
마운트

00.871 FASTENER, FLYWHEEL HOUSING
패스너

02.772 FASTENER, FUEL FILTER COVER
패스너

94.705 FASTENER, ENGINE MOUNTING BRACKET
패스너


95.471 FASTENER, ENGINE MOUNT
패스너

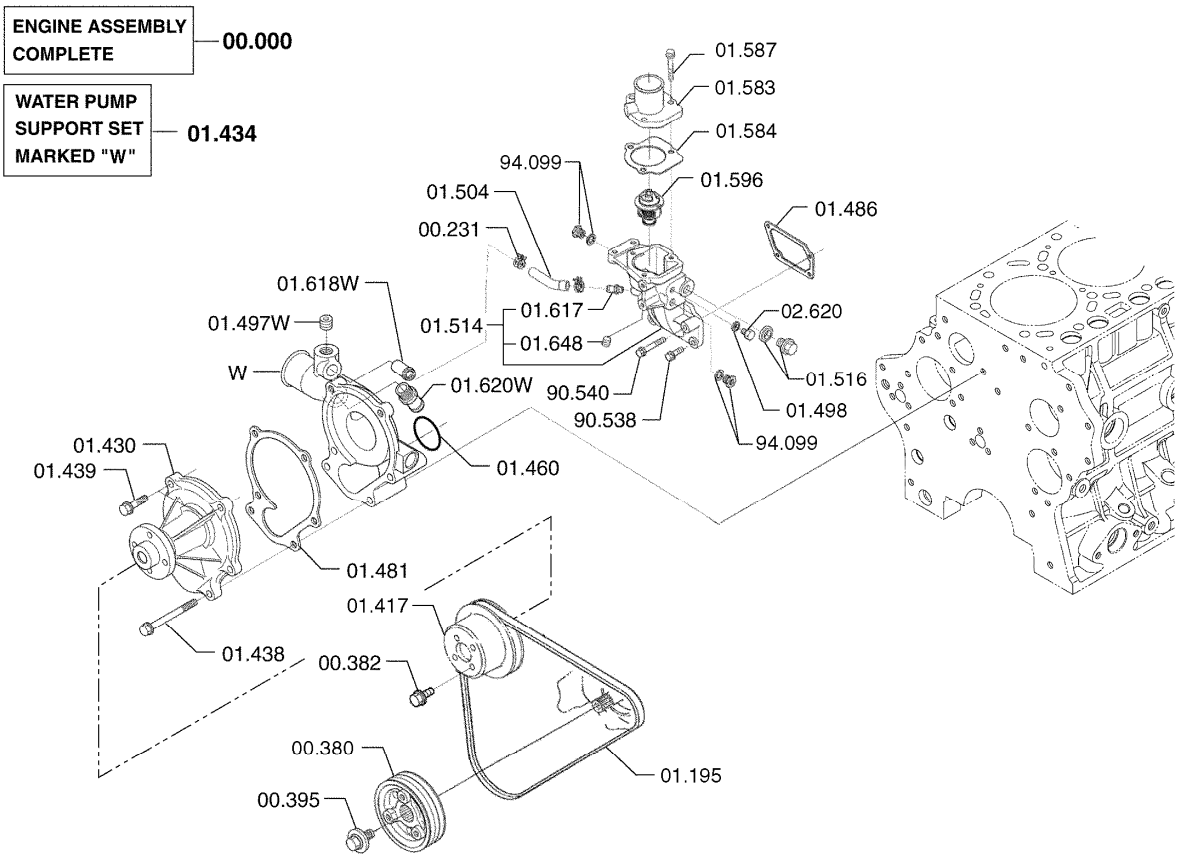

WATER PUMP MOUNTING AND THERMOSTAT **01-342**


00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.231	CLAMP, WATER PUMP BLEEDER HOSE 클램프
00.380	PULLEY, CRANKSHAFT 풀리
00.382	FASTENER, CRANKSHAFT ACCESS DR PULLEY 패스너
00.395	FASTENER, CRANKSHAFT PULLEY 패스너
01.195	BELT, FAN 벨트
01.417	PULLEY, FAN 풀리
01.430	PUMP ASSEMBLY, ENGINE WATER 펌프
01.434	COVER, WATER PUMP 커버
01.438	FASTENER, WATER PUMP 패스너
01.439	FASTENER, WATER PUMP 패스너
01.460	SEAL, WATER PUMP 시일
01.481	GASKET, ENGINE WATER PUMP BODY 가스켓
01.486	GASKET, WATER PUMP FRONT TO REAR BODY 가스켓
01.497	PLUG, WATER PUMP BODY 플러그
01.498	SEAL, WATER PUMP BODY PLUG 시일
01.504	PIPE, ENGINE WATER PUMP INLET 파이프
01.514	FLANGE, ENGINE WATER PUMP DISCHARGE 플랜지
01.516	FASTENER, ENGINE WATER PUMP DISCHARGE FLANGE 패스너
01.583	COVER, WATER INLET 커버
01.584	GASKET, WATER INLET COVER 가스켓
01.587	FASTENER, WATER INLET COVER 패스너
01.596	THERMOSTAT, ENGINE 써머스태트
01.617	FITTING, WATER PUMP BLEEDER LINE 피팅
01.618	FITTING, WATER PUMP BLEEDER LINE 피팅
01.620	FITTING, WATER PUMP BLEEDER LINE 피팅
01.648	PLUG, ENGINE THERMOSTAT HOUSING 플러그
02.620	PLUG, WATER JACKET DRAIN 플러그
90.538	BOLT, ENGINE THERMOSTAT HOUSING 볼트
90.540	BOLT, ENGINE THERMOSTAT HOUSING 볼트

94.099 FASTENER, WATER PUMP DISCHARGE FLANGE
패스너

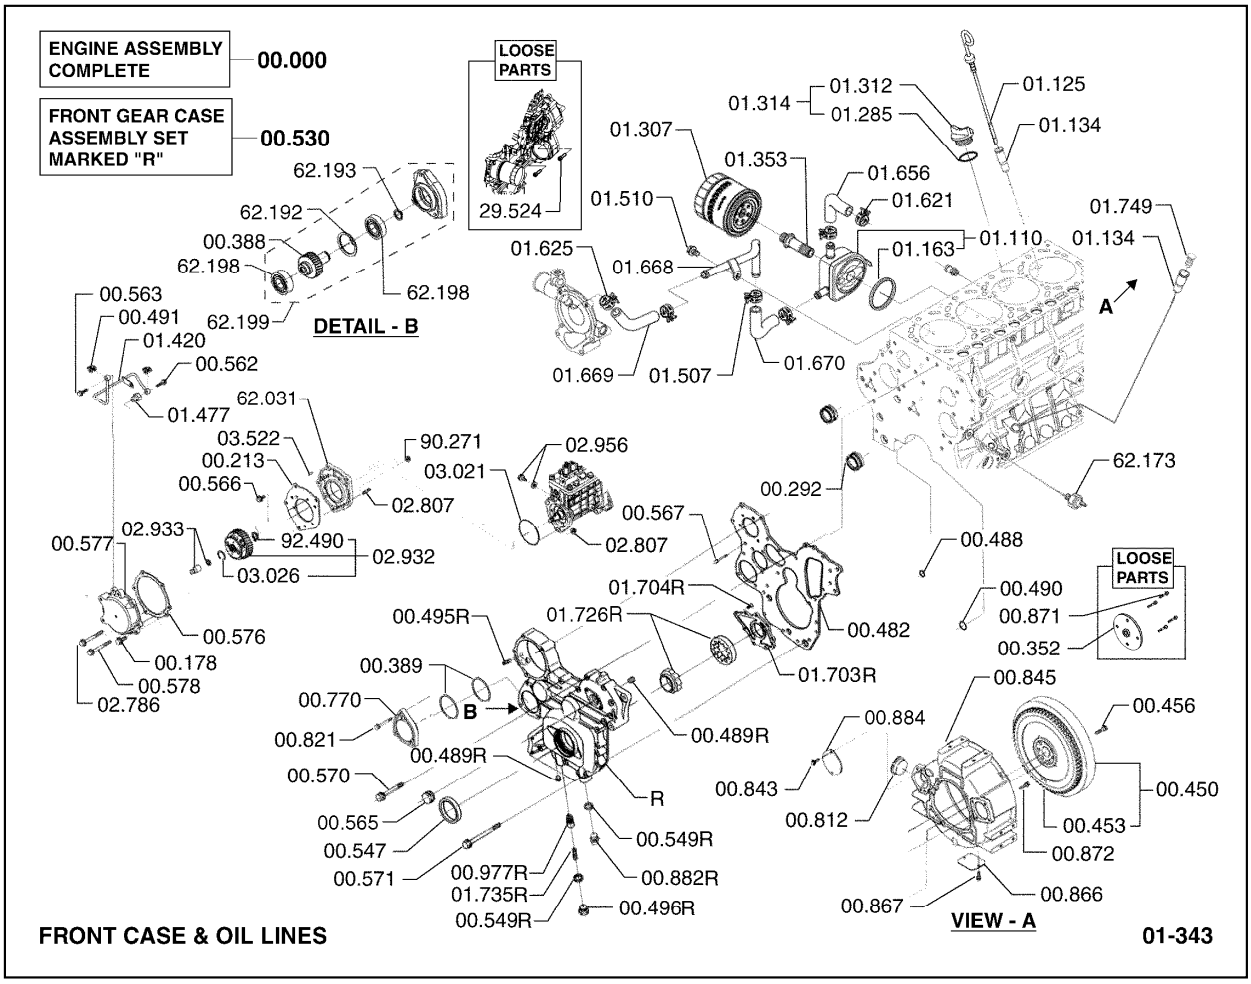

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	00.495	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.178	FASTENER, CRANKCASE FUEL PUMP HOLE COVER 패스너	00.496	PLUG, ENGINE FRONT GEAR COVER 플러그
00.213	GASKET, FUEL INJECTION PUMP ADAPTOR 가스켓	00.530	COVER, ENGINE FRONT GEAR 커버
00.292	PLUG, CRANKCASE 플러그	00.547	SEAL, ENGINE FRONT GEAR COVER 시일
00.352	ADAPTOR, FLYWHEEL MOUNTING 어댑터	00.549	GASKET, ENGINE FRONT GEAR COVER SEAL 가스켓
00.388	GEAR, CRANKSHAFT HYDRAULIC PUMP 기어	00.562	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.389	RING, LOCATING (CRANKSHAFT HYD PUMP GEAR) 링	00.563	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.450	FLYWHEEL 플라이휠	00.565	PLUG - EXPANSION, ENGINE FRONT GEAR COVER 플러그
00.453	GEAR, FLYWHEEL RING 기어	00.566	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.456	FASTENER, CRANKSHAFT TO FLYWHEEL 패스너	00.567	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.482	PLATE, GEAR COVER BACKING 플레이트	00.570	FASTENER, BACKING PLATE 패스너
00.488	SEAL, ENGINE FRONT GEAR COVER PLUG 시일	00.571	FASTENER, BACKING PLATE 패스너
00.489	PLUG, ENGINE FRONT GEAR COVER 플러그	00.576	GASKET, INJECTION PUMP GEAR ACCESS COVER 가스켓
00.490	SEAL, ENGINE FRONT GEAR COVER PLUG 시일	00.577	COVER, INJECTION PUMP GEAR ACCESS 커버
00.491	SEAL, ENGINE FRONT GEAR COVER PLUG 시일	00.578	FASTENER, INJECTION PUMP GEAR ACCESS COVER 패스너

00.770	COVER, HYDRAULIC PUMP MOUNTING HOLE 커버
00.812	PLUG, FLYWHEEL HOUSING 플러그
00.821	FASTENER, HYDRAULIC PUMP TO GEAR COVER PLATE 패스너
00.843	FASTENER, FLYWHEEL HOUSING DUST SHIELD 패스너
00.845	HOUSING, FLYWHEEL 하우징
00.866	COVER, FLYWHEEL HOUSING TIMING HOLE 커버
00.867	FASTENER, FLYWHEEL HOUSING TIMING HOLE COVER 패스너
00.871	FASTENER, FLYWHEEL HOUSING 패스너
00.872	FASTENER, FLYWHEEL HOUSING 패스너
00.882	PLUG, CRANKCASE DRAIN COCK HOLE 플러그
00.884	COVER, CAMSHAFT TIMING GEAR INSPECTION 커버
00.977	RELIEF VALVE,ENGINE BALANCER GEAR 릴리프밸브
01.110	OIL COOLER 오일쿨러
01.125	DIPSTICK, CRANKCASE OIL LEVEL 딥스틱
01.134	ADAPTOR, CRANKCASE OIL LEVEL DIPSTICK 어댑터
01.163	GASKET, ENGINE OIL COOLER 가스켓
01.285	GASKET, CRANKCASE OIL FILLER TUBE 가스켓
01.307	CARTRIDGE & GASKET, ENGINE OIL FILTER 카트리지와가스켓
01.312	CAP, OIL FILLER 캡
01.314	CAP ASSEMBLY, OIL FILLER 캡
01.353	FITTING, BLOCK TO OIL FILTER 피팅
01.420	LINE, IDLER GEAR LUBRICATING 라인
01.477	FITTING, PUMP DRIVE LUBRICATING LINE 피팅
01.507	CLAMP, WATER PUMP BODY OUTLET CAP 클램프
01.510	FASTENER, ENGINE WATER PUMP INLET PIPE 패스너
01.621	CLAMP, WATER PUMP BLEEDER LINE 클램프
01.625	CLAMP, WATER OUTLET HOUSING HOSE 클램프
01.656	LINE, ENGINE OIL COOLING HEAT EXCHANGER 라인
01.668	LINE, ENGINE WATER FLOW 라인
01.669	* *
01.670	LINE, ENGINE WATER FLOW 라인
01.703	COVER, OIL PUMP 커버
01.704	FASTENER, OIL PUMP COVER 패스너
01.726	ROTOR & SHAFT ASSEMBLY, OIL PUMP DRIVE 로터와샤프트
01.735	SPRING, OIL PUMP STRAINER 스프링
01.749	PLUG, OIL PAN DIPSTICK HOLE 플러그
02.786	FASTENER, FUEL PUMP COVER TO BODY 패스너
02.807	FASTENER, FUEL PUMP BODY BOTTOM COVER 패스너
02.932	GEAR, FUEL INJECTION PUMP DRIVE 기어
02.933	FASTENER, INJECTION PUMP DRIVE HUB 패스너
02.956	FASTENER, FUEL INJECTION PUMP 패스너
03.021	GASKET, FUEL INJECTION PUMP MOUNTING 가스켓
03.026	RETAINER, FUEL INJECTION PUMP DRIVER 리테이너
03.522	PIN, FUEL INJECTION PUMP ADAPTOR 핀
29.524	FASTENER, AUXILIARY HYD PUMP 패스너
62.031	SUPPORT, FUEL INFECTION PUMP DRIVE 서포트
62.173	SWITCH, ENGINE OIL PRESSURE 스위치
62.192	SNAP RING, HYDRAULIC PUMP SUPPORT 스냅링
62.193	SNAP RING, HYDRAULIC PUMP SUPPORT 스냅링
62.198	BEARING, HYDRAULIC PUMP GEAR 베어링
62.199	GEAR KIT, HYDRAULIC PUMP 기어킷
90.271	NUT, FUEL INJECTION PUMP FASTENER 너트
92.490	RETAINER, FUEL INJECTION PUMP DRIVE GEAR FASTENE 리테이너

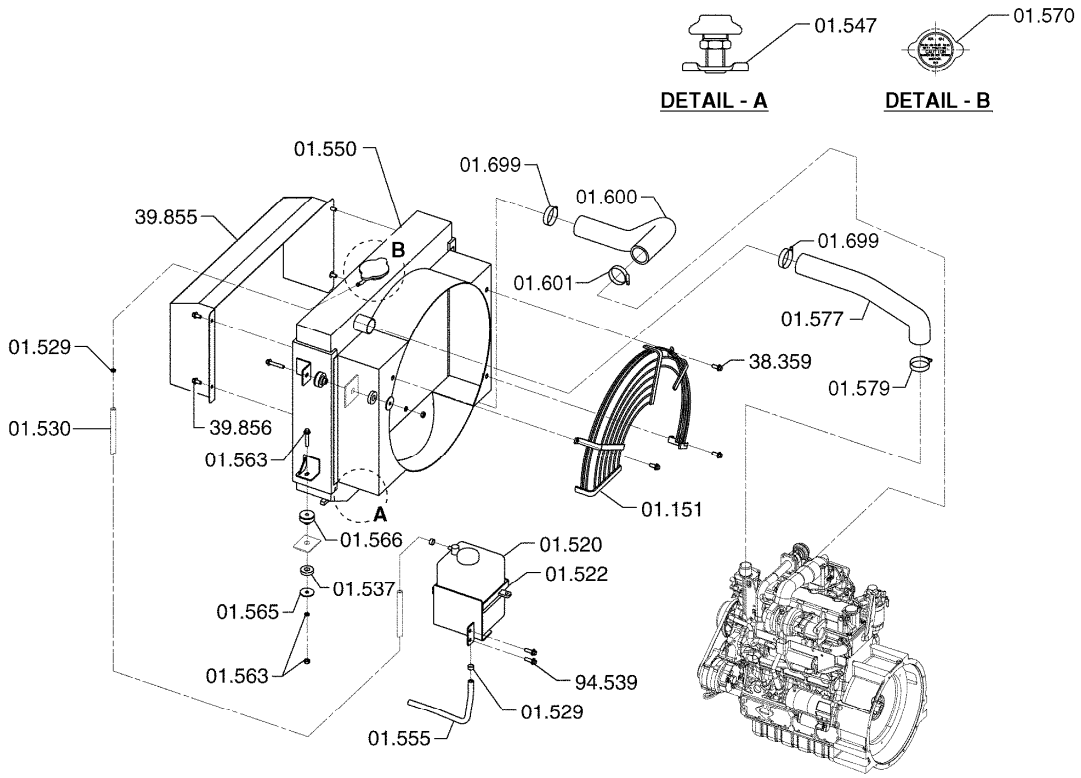

COOLING SYSTEM **01-345**

01.151 GUARD, RADIATOR FAN
가드

01.520 COMPENSATION TANK, COOLING SYSTEM
보상기

01.522 BRACKET, COMPENSATION TANK
브라켓

01.529 CLAMP, RADIATOR OVERFLOW LINE
클램프

01.530 LINE, RADIATOR FILLER
라인


01.537 PAD, RADIATOR MOUNTING LOWER
패드

01.547 DRAIN COCK, RADIATOR
드레인콕

01.550 RADIATOR
라디에터

01.555 LINE, RADIATOR OVERFLOW
라인

01.563	FASTENER, RADIATOR MOUNTING BRACKET 패스너
01.565	SPACER, RADIATOR MOUNTING 스페이서
01.566	PAD, RADIATOR MOUNTING 패드
01.570	CAP, RADIATOR 캡
01.577	HOSE, RADIATOR UPPER 호스
01.579	CLAMP, RADIATOR UPPER HOSE 클램프
01.600	HOSE, RADIATOR LOWER 호스
01.601	CLAMP, RADIATOR LOWER HOSE 클램프
01.699	CLAMP, RADIATOR HOSE FASTENER 클램프
38.359	FASTENER, RADIATOR GUARD 패스너
39.855	SHIELD, RADIATOR DUST 쉴드
39.856	FASTENER, RADIATOR DUST SHIELD 패스너
94.539	FASTENER, COMPENSATION TANK BRACKET 패스너

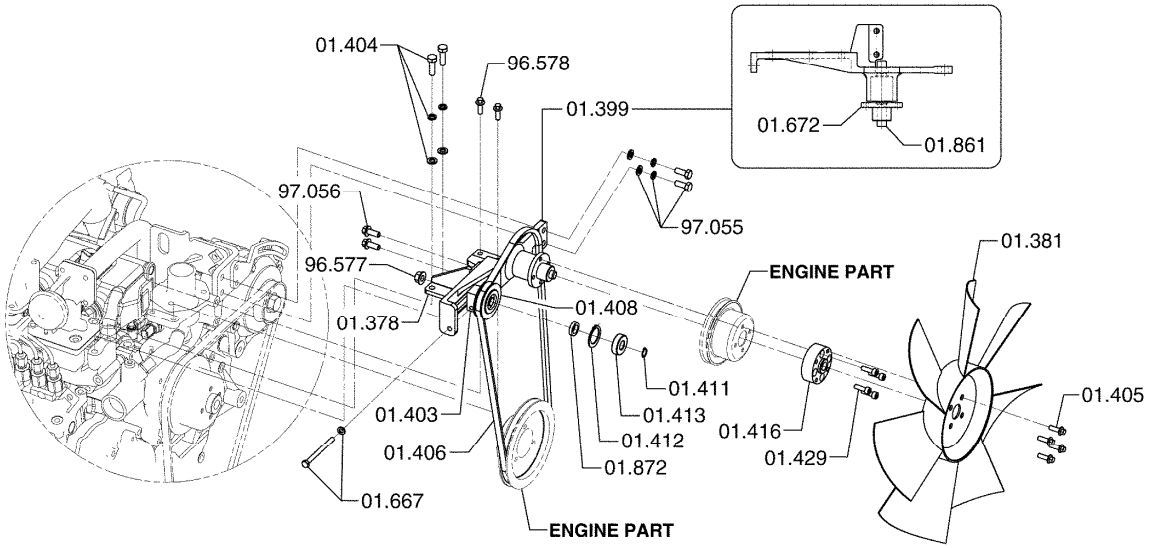

FAN MOUNTING **01-347**

01.378 BRACE, FAN BRACKET
브레이스

01.381 BLADE, FAN
블레이드

01.399 BRACKET, FAN MOUNTING
브라켓

01.403 ADJUSTOR, FAN
어드져스터

01.404 FASTENER, FAN BRACKET
패스너


01.405 FASTENER, FAN BLADE
패스너

01.406 BELT SET, FAN
벨트셋

01.408 SHEAVE ASSEMBLY, IDLER
쉬브


01.411 RETAINER, IDLER SHEAVE
리테이너

01.412	RETAINER, IDLER SHEAVE BEARING 리테이너
01.413	BEARING, BELT IDLER SHEAVE 베어링
01.416	SPACER, FAN BLADE 스페이서
01.429	FASTENER, FAN CONTROL 패스너
01.667	FASTENER, FAN PULLEY 패스너
01.672	HUB, FAN DRIVE 허브
01.861	BEARING, FAN DRIVE HUB 베어링
01.872	IDLER, V-BELT 아이들러
96.577	FASTENER, FAN MOUNTING BRACKET 패스너
96.578	FASTENER, FAN MOUNTING BRACKET 패스너
97.055	FASTENER, FAN BRACKET MOUNTING 패스너
97.056	FASTENER,FAN MOUNTING BRACKET 패스너

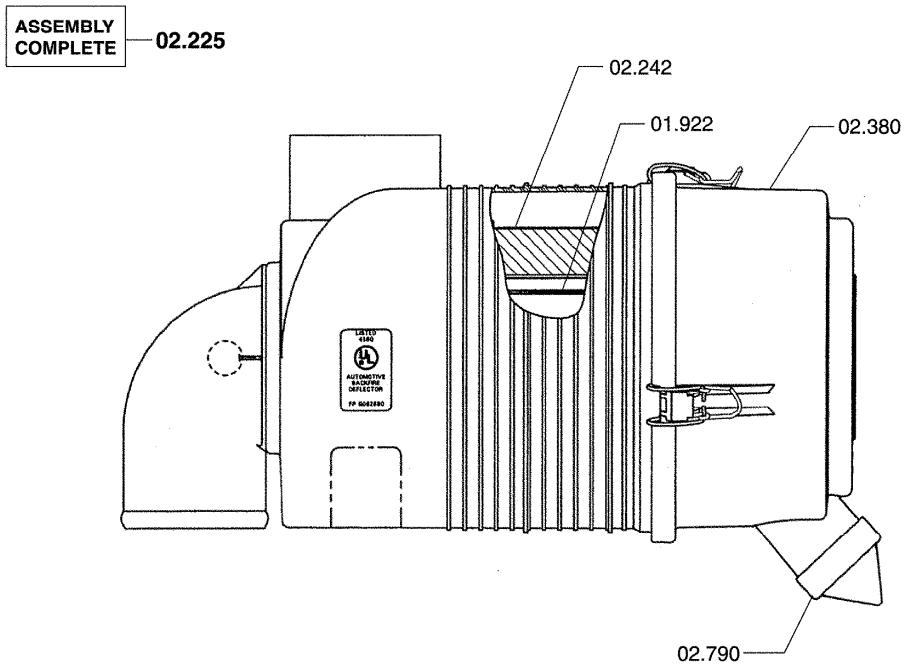

AIR CLEANER ASSEMBLY **02-471**

01.922	ELEMENT & GASKET, BLOWER AIR CLEANER 엘리먼트와가스켓
02.225	CLEANER ASSEMBLY, ENGINE INTAKE AIR 에어클리너
02.242	ELEMENT & GASKET, ENGINE INTAKE AIR CLEANER 엘리먼트와가스켓
02.380	CAP,FILTER 캡
02.790	VALVE, ENGINE INTAKE AIR CLEANER DUST UNLDR 밸브

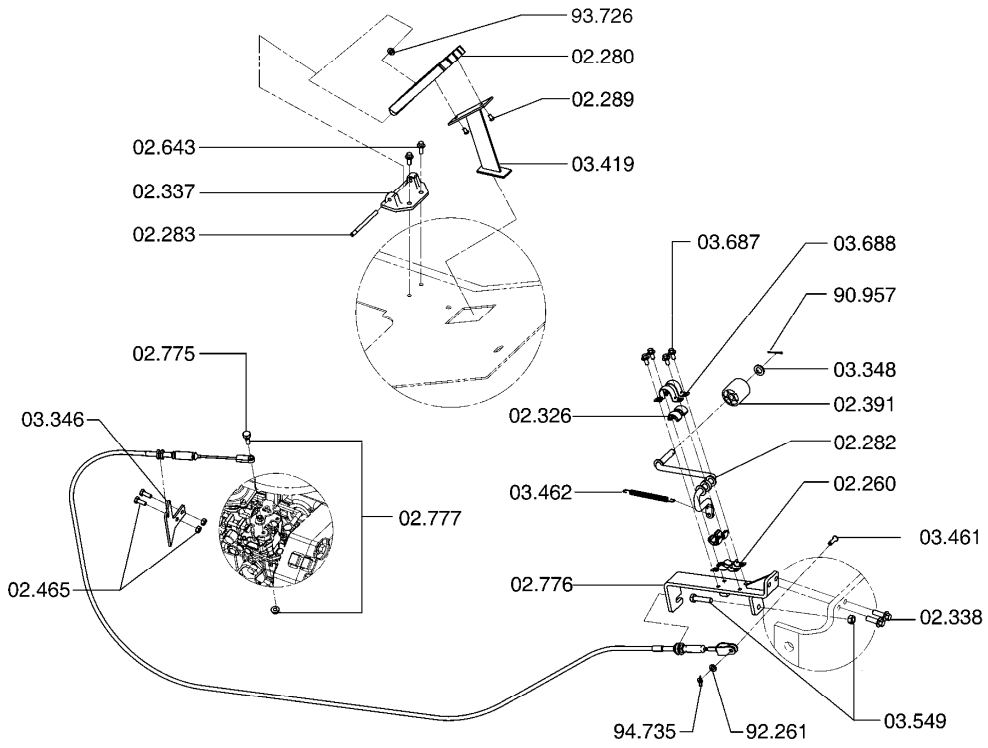

ACCELERATOR SYSTEM **02-475**

02.260 BRACKET, ACCELERATOR LINKAGE MOUNTING
브라켓

02.280 PEDAL, ACCELERATOR
페달

02.282 ROD, ACCELERATOR PUSH
로드

02.283 PIN, ACCELERATOR PEDAL TO BRACKET PIVOT
핀

02.289 FASTENER, ACCELERATOR PEDAL BRACKET ATTACHING
패스너


02.326 BEARING, ACCELERATOR LEVER
베어링

02.337 BRACKET, ACCELERATOR LEVER MOUNTING
브라켓

02.338 FASTENER, ACCELERATOR LEVER MOUNTING BRACKET
패스너


02.391 FITTING, REGULATOR OUTLET LINE
피팅

02.465	FASTENER, ACCELERATOR CONTROL LINKAGE 패스너
02.643	FASTENER, ACCELERATOR PEDAL HEEL SUPPORT 패스너
02.775	CABLE, ACCELERATOR CONTROL 케이블
02.776	BRACKET, ACCELERATOR CONTROL CABLE 브라켓
02.777	FASTENER, ACCELERATOR CONTROL CABLE 패스너
03.346	BRACKET, ACCELERATOR LINKAGE 브라켓
03.348	WASHER, ACCELERATOR LINKAGE RETURN LEVER FAST 와셔
03.419	WEAR PLATE, ACCELERATOR PEDAL ROLLER 웨어플레이트
03.461	PIN, ACCELERATOR CONTROL ROD END 핀
03.462	SPRING, ACCELERATOR PEDAL RETURN 스프링
03.549	FASTENER, ACCELERATOR LINKAGE MOUNTING BRACKET 패스너
03.687	FASTENER, ACC CONTROL CABLE BRACKET MTG 패스너
03.688	BRACKET, ACCELERATOR LEVER ATTACHING 브라켓
90.957	RETAINER, ACCELERATOR LINKAGE LEVER PIN 리테이너
92.261	WASHER, ACCELERATOR CONTROL ROD END FASTENER 와셔
93.726	WASHER, ACCELERATOR PEDAL PIVOT RETAINER 와셔
94.735	RETAINER, ACCELERATOR CONTROL ROD END PIN 리테이너

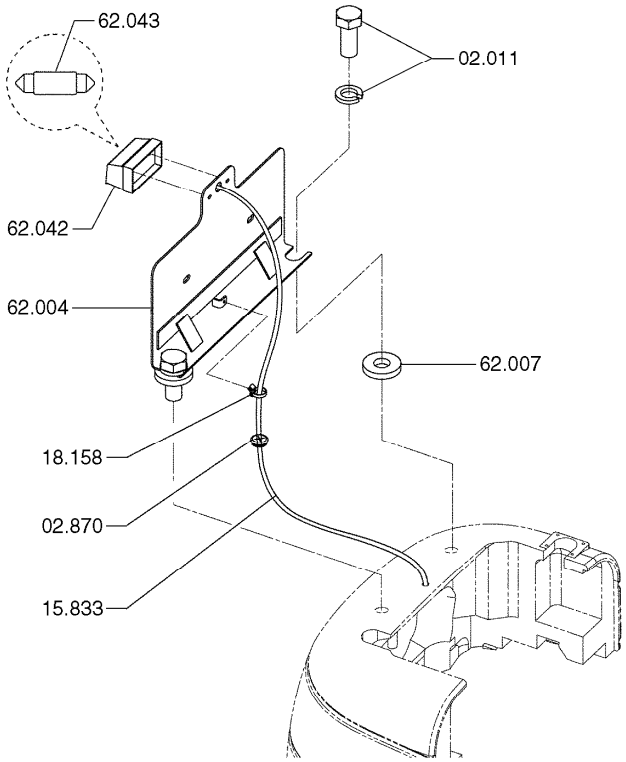

LICENCE PLATE MOUNTING **03-546**

02.011	FASTENER, TANK REAR MOUNTING BRACKET 패스너
02.870	GROMMET, LPG LINE 그로멧
15.833	WIRE HARNESS, LICENCE LAMP *
18.158	CLAMP,WIRE HARNESS 클램프
62.004	PLATE, LICENSE 플레이트
62.007	SHIM, TANK BRACKET 심
62.042	LAMP ASSEMBLY, LICENSE PLATE 램프
62.043	BULB, LICENSE PLATE LAMP 전구

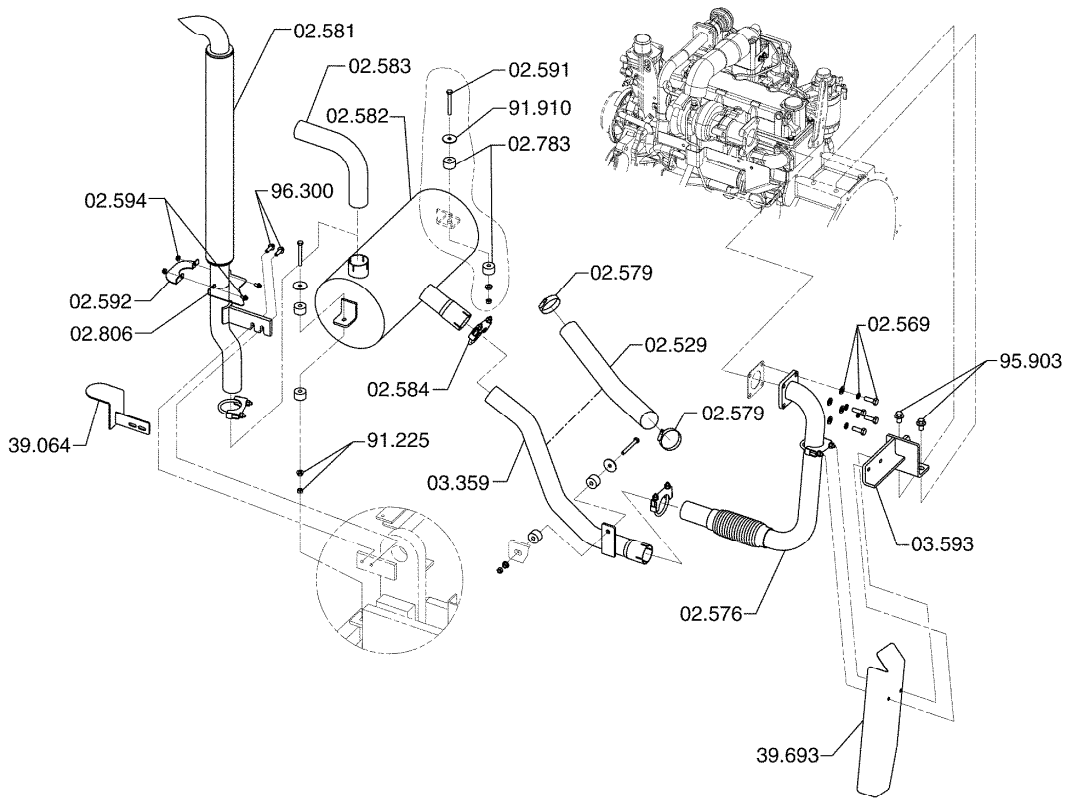

EXHAUST SYSTEM **03-594**

02.529 INSULATION, TAIL PIPE
절연체

02.569 FASTENER, EXHAUST PIPE FLANGE TO MANIFOLD
패스너

02.576 PIPE, EXHAUST
파이프

02.579 CLAMP, EXHAUST PIPE TO MUFFLER
클램프

02.581 EXTENSION, TAIL PIPE
익스텐션


02.582 MUFFLER
머플러

02.583 PIPE, TAIL
파이프

02.584 CLAMP, TAIL PIPE TO MUFFLER
클램프

02.591 FASTENER, MUFFLER MOUNTING
패스너


02.592	BRACKET, TAIL PIPE MOUNTING 브라켓
02.594	FASTENER, TAIL PIPE MOUNTING BRACKET 패스너
02.783	DAMPENER, MUFFLER MOUNTING VIBRATION 댐프너
02.806	BRACKET, TAIL PIPE MOUNTING 브라켓
03.359	PIPE, EXHAUST 파이프
03.593	BRACKET, EXHAUST PIPE 브라켓
39.064	COVER, COUNTERWEIGHT UPPER 커버
39.693	SHIELD, EXHAUST PIPE 쉴드
91.225	NUT, MUFFLER MTG BRACKET FASTENER 너트
91.910	WASHER, MUFFLER ATTACHING CLAMP FASTENER 와셔
95.903	FASTENER, EXHAUST PIPE BRACKET 패스너
96.300	FASTENER, COUNTERWEIGHT COVERING 패스너

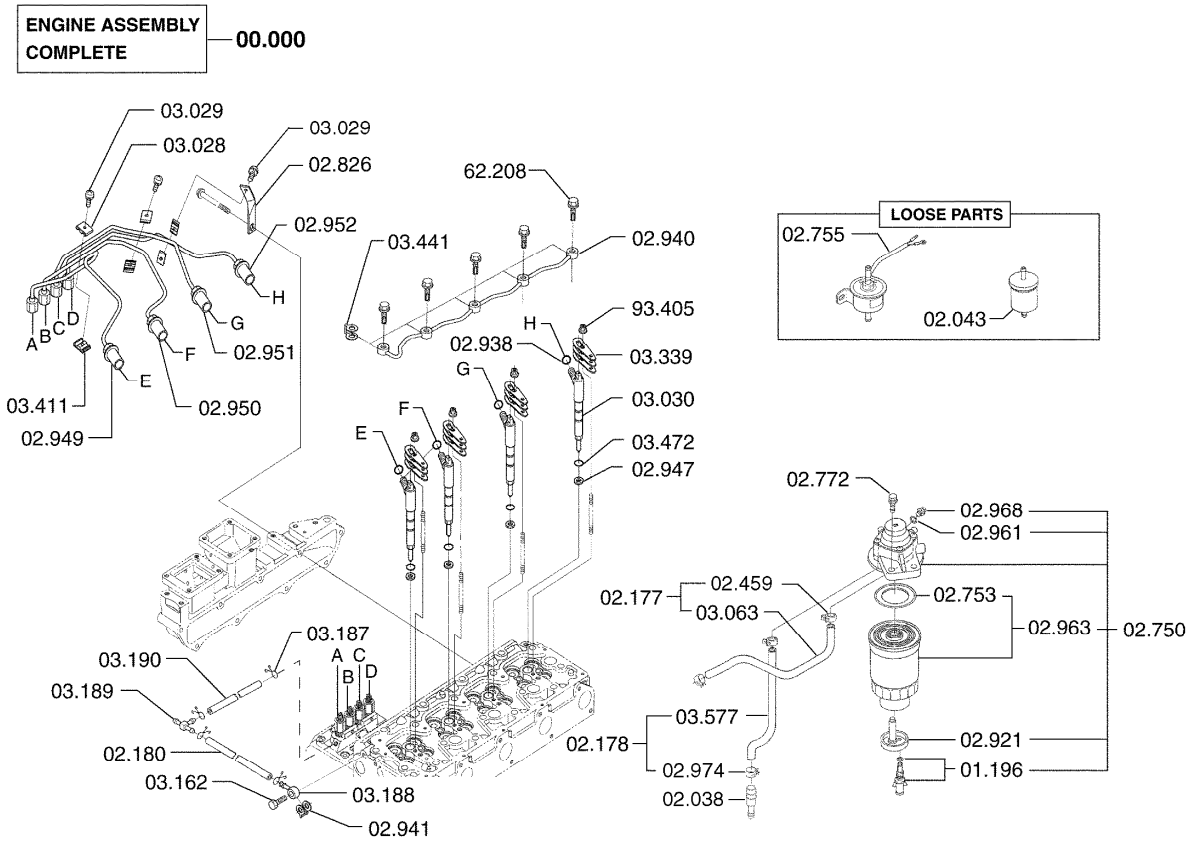

FUEL LINES **03-595**

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
01.196	DRAIN COCK, FUEL FILTER 드레인콕
02.038	FITTING, FUEL FILTER OUTLET 피팅
02.043	FILTER, FUEL 필터
02.177	LINE, FILTER INLET 라인
02.178	LINE, FILTER OUTLET 라인
02.180	LINE, FUEL RETURN 라인
02.459	CLAMP, FUEL FILTER 클램프
02.750	FILTER ASSEMBLY, FUEL 필터
02.753	GASKET, FUEL FILTER BODY 가스켓
02.755	PUMP, FUEL 펌프
02.772	FASTENER, FUEL FILTER COVER 패스너
02.826	BRACKET, FUEL LINE CLIP 브라켓
02.921	PLUG, FUEL FILTER DRAIN 플러그
02.938	SEAL, INJECTOR LEAK OFF LINE 시일
02.940	LINE, INJECTOR LEAK OFF 라인
02.941	SEAL, INJECTOR NOZZLE LEAK OFF FITTING 시일
02.947	SEAL, INJECTOR NOZZLE 시일
02.949	LINE, INJECTOR (NO 1 CYLINDER) 라인
02.950	LINE, INJECTOR (NO 2 CYLINDER) 라인
02.951	LINE, INJECTOR (NO 3 CYLINDER) 라인
02.952	LINE, INJECTOR (NO 4 CYLINDER) 라인
02.961	SEAL, FUEL FILTER BODY PLUG 시일
02.963	ELEMENT, FUEL FILTER 엘리먼트
02.968	PLUG, FUEL FILTER DRAIN 플러그
02.974	CLAMP, FUEL PUMP OUTLET LINE 클램프
03.028	CLIP, INJECTOR LINE 클립
03.029	FASTENER, INJECTION LINE CLIP 패스너
03.030	INJECTOR ASSEMBLY, FUEL 인젝터
03.063	LINE, FINAL FUEL FILTER INLET 라인

03.162	FASTENER, FUEL RETURN LINE CLIP 패스너
03.187	CLIP, FUEL LINE 클립
03.188	FITTING, FUEL RETURN LINE 피팅
03.189	FITTING, FUEL RETURN LINE 피팅
03.190	LINE, FUEL RETURN 라인
03.339	CLIP, FUEL INJECTOR LINE 클립
03.411	CLIP, INJECTOR LINE 클립
03.441	SEAL, INJECTOR LEAK-OFF LINE 시일
03.472	SEAL, INJECTOR LEAK OFF LINE 시일
03.577	LINE, ENGINE FUEL FILTER 라인
62.208	FASTENER, FUEL INJECTOR LINE 패스너
93.405	NUT, FUEL INJECTOR FASTENER 너트

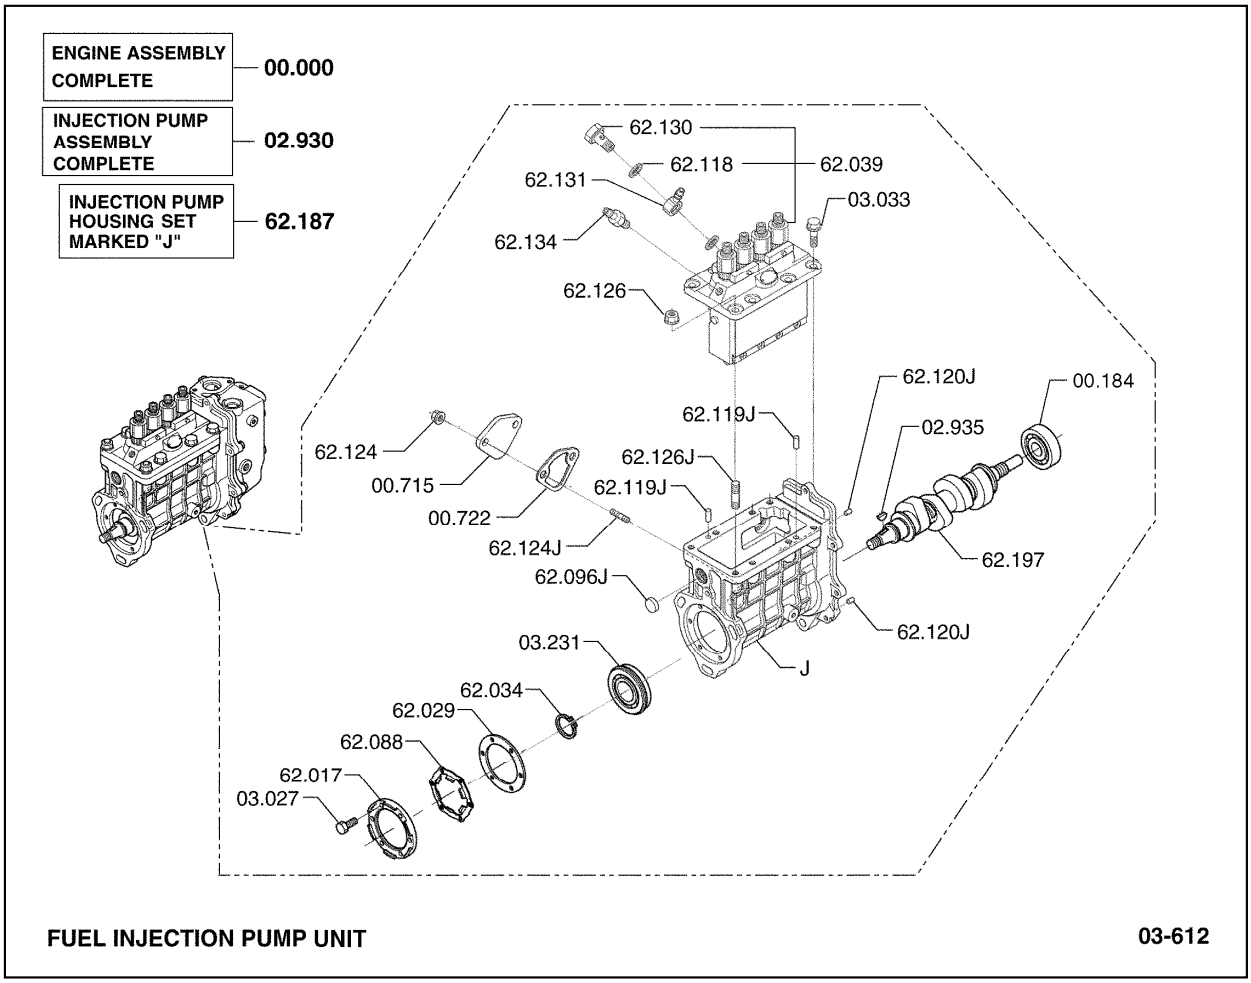

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.184 BEARING, FUEL INJECTION PUMP DRIVE SHAFT
베어링

00.715 COVER, VALVE TAPPET
커버

00.722 GASKET, VALVE TAPPET COVER
가스켓

02.930 PUMP ASSEMBLY, FUEL INJECTION
펌프


02.935 KEY, FUEL INJECTION PUMP SHAFT
키

03.027 FASTENER, FUEL INJECTION PUMP
패스너

03.033 FASTENER, FUEL INJECTOR
패스너

03.231 BEARING, FUEL INJ PUMP DRIVE HUB
베어링


62.017	STOPPER, FUEL INJECTION PUMP 스토퍼
62.029	SPACER, FUEL INJECTION PUMP DRIVE SHAFT 스페이서
62.034	CIRCLIP, FUEL INJECTION PUMP 서클립
62.039	PUMP, FUEL INJECTION FEED 펌프
62.088	STOPPER, FUEL INJECTION PUMP 스토퍼
62.096	PLUG, FUEL INJECTION PUMP BODY 플러그
62.118	SEAL, FUEL INJECTION PUMP JOINT 시일
62.119	PIN, FUEL INJECTION PUMP 핀
62.120	SPRING PIN, FUEL INJECTION PUMP 스프링핀
62.124	FASTENER, FUEL INJECTION PUMP LIFTER 패스너
62.126	FASTENER, FUEL INJECTION PUMP HEAD 패스너
62.130	JOINT, FUEL INJECTION PUMP 조인트
62.131	JOINT, FUEL INJECTION PUMP 조인트
62.134	JOINT, FUEL INJECTION PUMP HEAD 조인트
62.187	HOUSING, FUEL INJECTION PUMP 하우징
62.197	SHAFT, FUEL INJECTION PUMP 샤프트

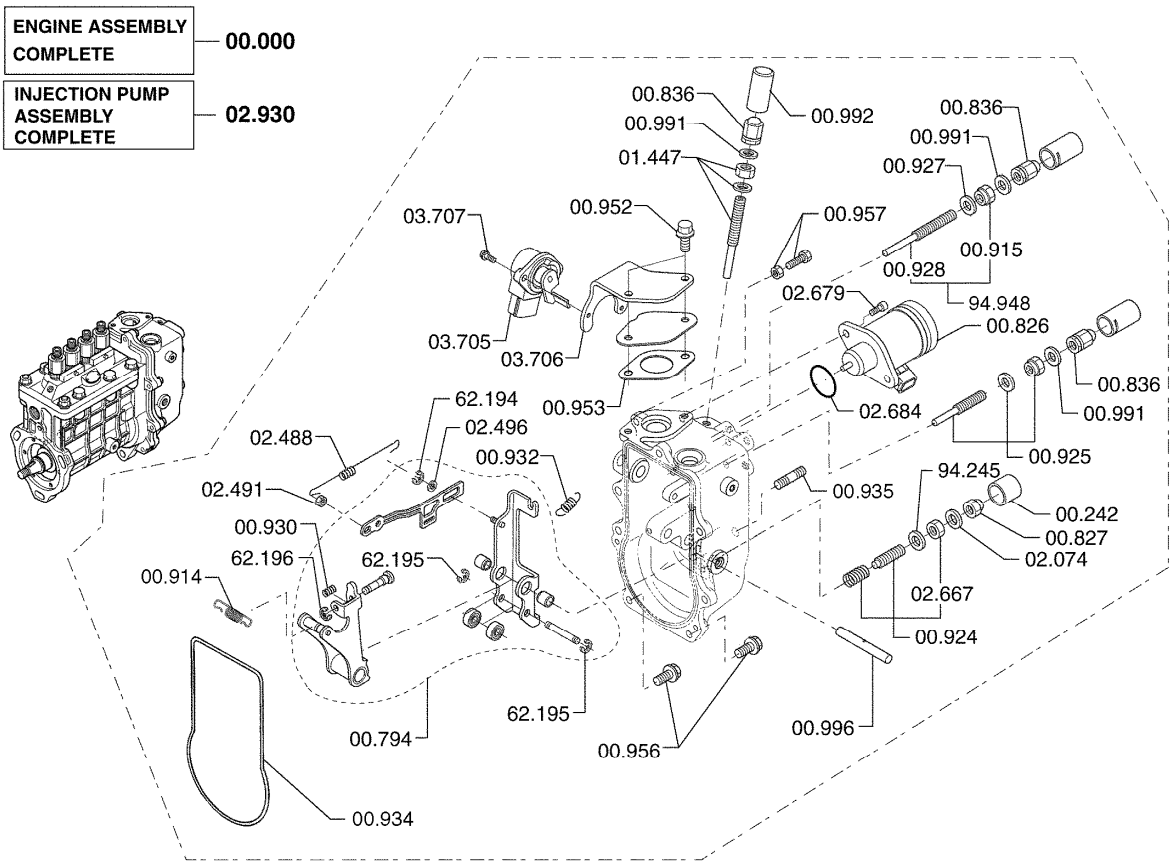


GOVERNOR SPEED LEVER **03-613**

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.242	CAP, ENGINE AIR GOVERNOR 캡
00.794	LEVER ASSY, GOVERNOR 레버
00.826	SOLENOID, GOVERNOR 솔레노이드
00.827	NUT, GOVERNOR BODY FASTENER 너트
00.836	NUT, GOVERNOR BODY FASTENER 너트
00.914	SPRING, GOVERNOR BUMPER 스프링
00.915	NUT, GOVERNOR BUMPER SCREW 너트
00.924	ADJUSTOR, GOVERNOR SPRING 어드져스터
00.925	ADJUSTOR, GOVERNOR ADJUSTING LEVER 어드져스터
00.927	GASKET, GOVERNOR BODY TO FLANGE 가스켓
00.928	FASTENER, GOVERNOR ADJUSTING LEVER 패스너
00.930	SPRING, GOVERNOR 스프링
00.932	SPRING, GOVERNOR AUXILIARY 스프링
00.934	GASKET, GOVERNOR ATTACHING 가스켓
00.935	FASTENER, GOVERNOR 패스너
00.952	FASTENER, GOVERNOR THROTTLE 패스너
00.953	GASKET, GOVERNOR THROTTLE MOUNTING 가스켓
00.956	FASTENER, GOVERNOR 패스너
00.957	FASTENER, GOVERNOR 패스너
00.991	SEAL, ENGINE GOVERNOR (SPEED ADJUSTMENT) 시일
00.992	CAP, ENGINE GOVERNOR SEAL (SPEED ADJUSTMENT) 캡
00.996	SHAFT, GOVERNOR STABILIZER PISTON 샤프트
01.447	FASTENER, ADJUSTING FLANGE 패스너
02.074	SEAL, PRESSURE ADJUSTING SCREW 시일
02.488	SPRING, GOVERNOR ROD RETURN 스프링
02.491	NUT, GOVERNOR ARM ROD 너트
02.496	WASHER, GOVERNOR ARM LINK 와셔
02.667	NUT, CARBURETOR TO GOVERNOR ROD 너트
02.679	FASTENER, SOLENOID 패스너

02.684	GASKET, SOLENOID 가스켓
02.930	PUMP ASSEMBLY, FUEL INJECTION 펌프
03.705	SENSOR, ACCELERATOR LINKAGE THROTTLE POSITION 센서
03.706	BRACKET, ACCELERATOR LINKAGE THROTTLE POSITION S 브라켓
03.707	FASTENER, ACCELERATOR LINKAGE THROTTLE POSITION 패스너
62.194	SNAP RING, ENGINE GOVERNOR INSIDE 스냅링
62.195	SNAP RING, ENGINE GOVERNOR INSIDE 스냅링
62.196	SNAP RING, ENGINE GOVERNOR INSIDE 스냅링
92.245	LOCKWASHER, PARKING BRAKE CABLE CLAMP FASTENER 로크와셔
94.948	FASTENER, ENGINE ADJUSTMENT OF INJECTION TIMER 패스너

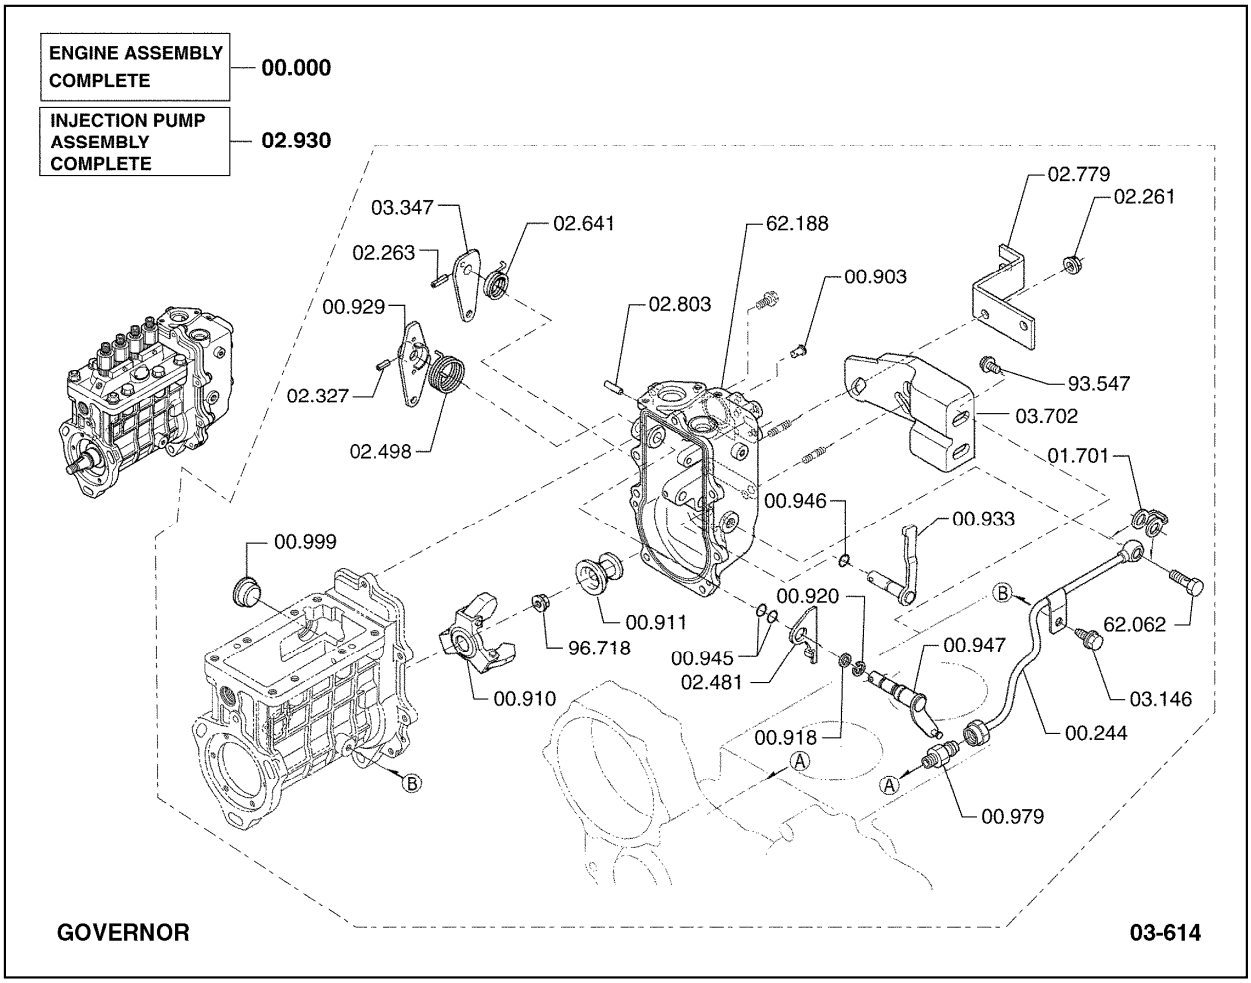

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.244	LINE, ENGINE AIR GOVERNOR VENTILATION 라인
00.903	PIN, GOVERNOR WEIGHT 핀
00.910	WEIGHT, GOVERNOR 웨이트
00.911	SLEEVE, GOVERNOR SHAFT THRUST 슬리브
00.918	WASHER, GOVERNOR ROCKET SHAFT BEARING 와셔
00.920	SNAP RING, GOVERNOR ROCKER SHAFT 스냅링
00.929	LEVER, GOVERNOR ADJUSTING 레버
00.933	LEVER, GOVERNOR AUXILIARY 레버
00.945	SEAL, GOVERNOR ROCKER SHAFT 시일
00.946	SEAL, GOVERNOR ROCKET SHAFT 시일
00.947	LEVER & SHAFT, GOVERNOR 레버와샤프트
00.979	FITTING, GOVERNOR LUBRICATION LINE 피팅
00.999	COVER, GOVERNOR ACCESS 커버
01.701	GASKET, OIL PUMP ATTACHING 가스켓
02.261	FASTENER, ACCELERATOR LINKAGE MOUNTING BRACKET 패스너
02.263	PIN, ACCELERATOR RETURN SPRING ATTACHING 핀
02.327	PIN, ACCELERATOR LEVER PIVOT 핀
02.481	LEVER, GOVERNOR LINKAGE 레버
02.498	SPRING, ACCELERATOR RETURN 스프링
02.641	SPRING, ACCELERATOR RETURN 스프링
02.779	BRACKET, ACCELERATOR CABLE 브라켓
02.803	PIN, ACCELERATOR RETURN SPRING ANCHOR 핀
02.930	PUMP ASSEMBLY, FUEL INJECTION 펌프
03.146	FASTENER, FUEL LINE CLIP BRACKET 패스너
03.347	LEVER, ACCELERATOR LINKAGE RETURN 레버
03.702	BRACKET, FUEL PUMP MOUNTING 브라켓
62.062	FASTENER, INJECTION LINE CLIP 패스너
62.188	HOUSING, GOVERNOR 하우징
93.547	FASTENER, FUEL PUMP MOUNTING SPACER 패스너

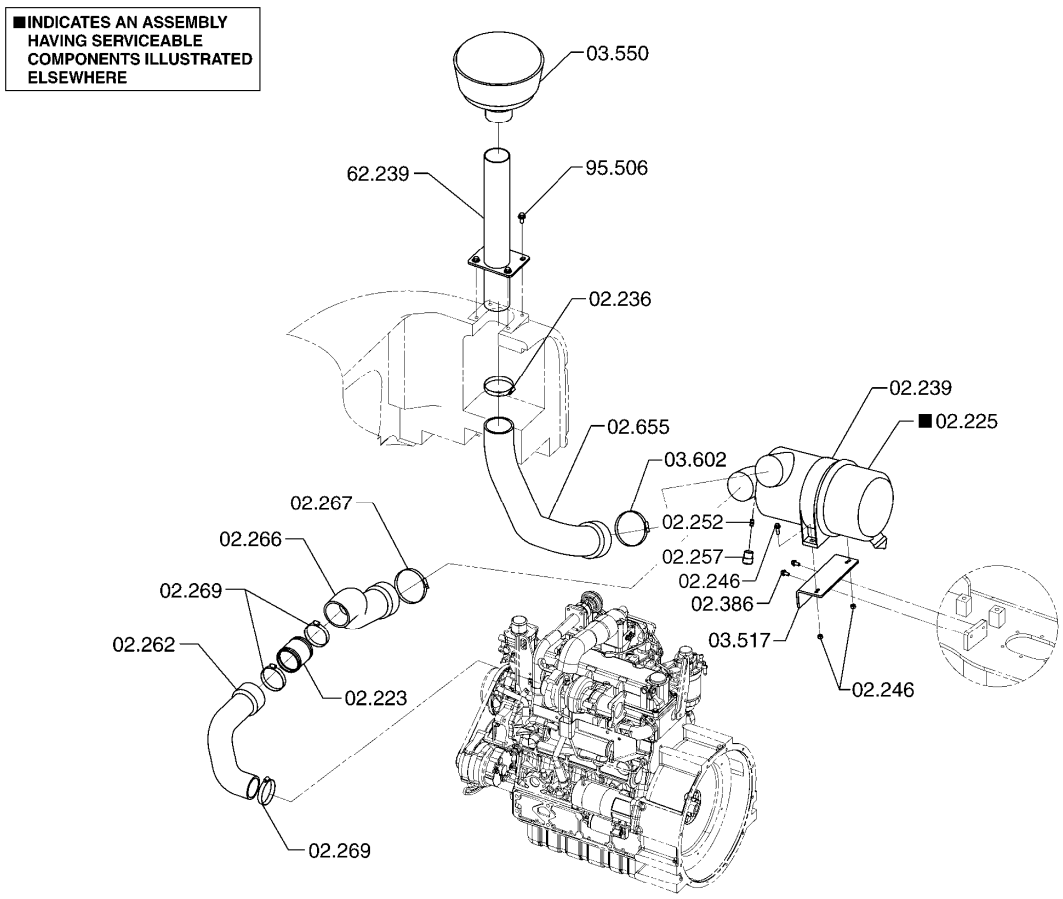

02.223 HOSE, MAIN AIR CLEANER OUTLET
호스

02.225 CLEANER ASSEMBLY, ENGINE INTAKE AIR
에어클리너

02.236 CLAMP, MAIN AIR CLEANER INLET HOSE
클램프

02.239 BAND, ENGINE INTAKE AIR CLEANER
밴드

02.246 FASTENER, ENGINE INTAKE AIR CLEANER ATTACHING
패스너

02.252 FITTING, MAIN AIR CLEANER OUTLET TUBE
피팅

02.257 INDICATOR, ENGINE INTAKE AIR CLEANER AIR RES
인디케이터

02.262 HOSE, MAIN AIR CLEANER OUTLET
호스

02.266 HOSE, MAIN AIR CLEANER OUTLET
호스

02.267 CLAMP, MAIN AIR CLEANER OUTLET HOSE
클램프

02.269 CLAMP, MAIN AIR CLEANER OUTLET HOSE
클램프

02.386 FASTENER, ENGINE INTAKE AIR CLEANER SUPPORT
패스너

02.655 LINE, ENGINE AIR PRE-CLEANER OUTLET
라인


03.517 BRACKET, AIR CLEANER MOUNTING
브라켓

03.550 PRE CLEANER ASSEMBLY, ENGINE AIR
프리크리너

03.602 CLAMP, AIR CLEANER TUBE
클램프

62.239 TUBE, PRE-AIR CLEANER LINE
튜브

95.506 FASTENER, PRE CLEANER MOUNTING BRACKET SUPPORT
패스너

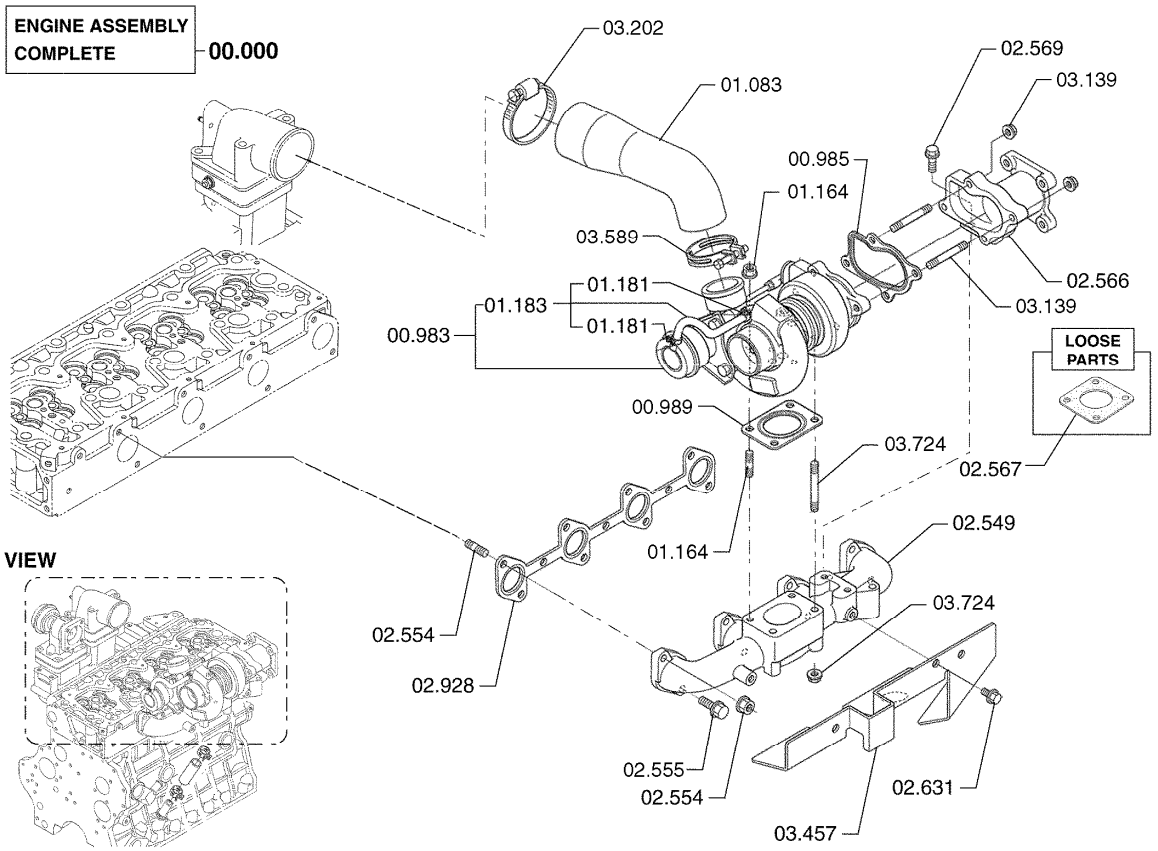

EXHAUST MANIFOLD **03-619**

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.983 TURBOCHARGER ASSEMBLY
터보챠저

00.985 GASKET, TURBOCHARGER
가스켓

00.989 GASKET, TURBOCHARGER PIPE TO MANIFOLD
가스켓

01.083 HOSE, TURBOCHARGER
호스


01.164 FASTENER, TURBOCHARGER MOUNTING
패스너

01.181 CLAMP, TURBOCHARGER LINE
클램프

01.183 HOSE, TURBOCHARGER
호스

02.549 MANIFOLD, EXHAUST
매니폴드

02.554	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.555	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.566	FLANGE, EXHAUST PIPE TO MANIFOLD 플랜지
02.567	GASKET, EXHAUST PIPE FLANGE TO MANIFOLD 가스켓
02.569	FASTENER, EXHAUST PIPE FLANGE TO MANIFOLD 패스너
02.631	FASTENER, HEAT SHIELD 패스너
02.928	GASKET, EXHAUST MANIFOLD 가스켓
03.139	FASTENER, EXHAUST PIPE FLANGE TO MANIFOLD 패스너
03.202	CLAMP, ENGINE AIR INTAKE ADAPTOR 클램프
03.457	SHIELD, MANIFOLD HEAT 쉴드
03.589	CLAMP, ADAPTOR AIR INTAKE HOSE 클램프
03.724	FASTENER, EXHAUST MANIFOLD 패스너

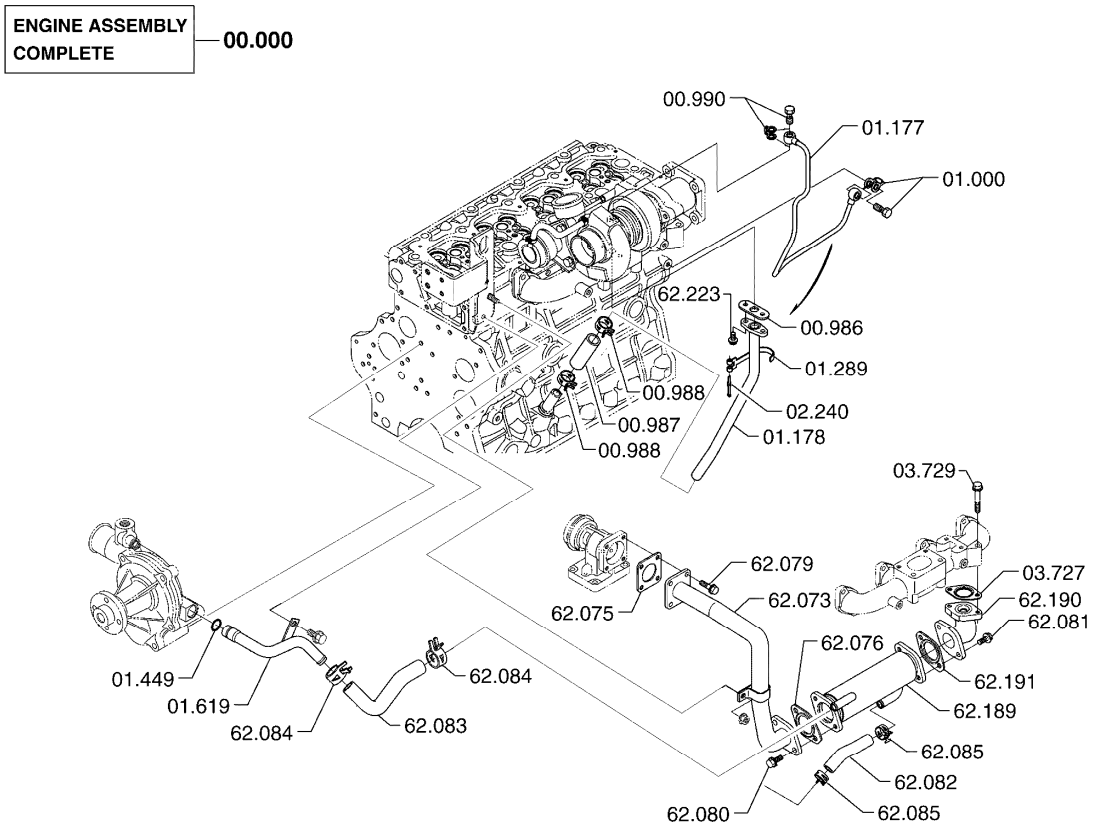

EGR COOLER INSTALLATION **03-620**

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.986 GASKET, TURBOCHARGER
가스켓

00.987 HOSE, TURBOCHARGER
호스

00.988 CLAMP, TURBOCHARGER LINE
클램프

00.990 FASTENER, TURBOCHARGER PIPE MOUNTING
패스너


01.000 FASTENER, TURBOCHARGER PIPE MOUNTING
패스너

01.177 PIPE, TURBOCHARGER OIL FEED
파이프

01.178 PIPE, TURBOCHARGER OIL DRAIN
파이프


01.289 BAND, ENGINE OIL FILTER MOUNTING
밴드

01.449	SEAL, ENGINE WATER PUMP 시일
01.619	LINE, WATER PUMP BLEEDER 라인
02.240	FASTENER, BAND CLAMPING 패스너
03.727	GASKET, EGR VALVE 가스켓
03.729	FASTENER, EGR VALVE 패스너
62.073	PIPE, EGR VALVE 파이프
62.075	GASKET, EGR VALVE INLET 가스켓
62.076	GASKET, EGR PIPE 가스켓
62.079	FASTENER, EGR VALVE TO PIPE 패스너
62.080	FASTENER, EGR PIPE TO MANIFOLD 패스너
62.081	FASTENER, EGR PIPE TO MANIFOLD 패스너
62.082	PIPE, EGR VALVE TO WATER PUMP 파이프
62.083	PIPE, EGR VALVE TO WATER PUMP 파이프
62.084	CLAMP, EGR VALVE TO WATER PUMP 클램프
62.085	CLAMP, EGR VALVE TO WATER PUMP 클램프
62.189	COOLER, EXHAUST GAS RECIRCULATION(EGR) 쿨러
62.190	PIPE, EGR COOLER 파이프
62.191	GASKET, EGR COOLER PIPE 가스켓
62.223	FASTENER, TURBOCHARGER OIL DRAIN PIPE 패스너

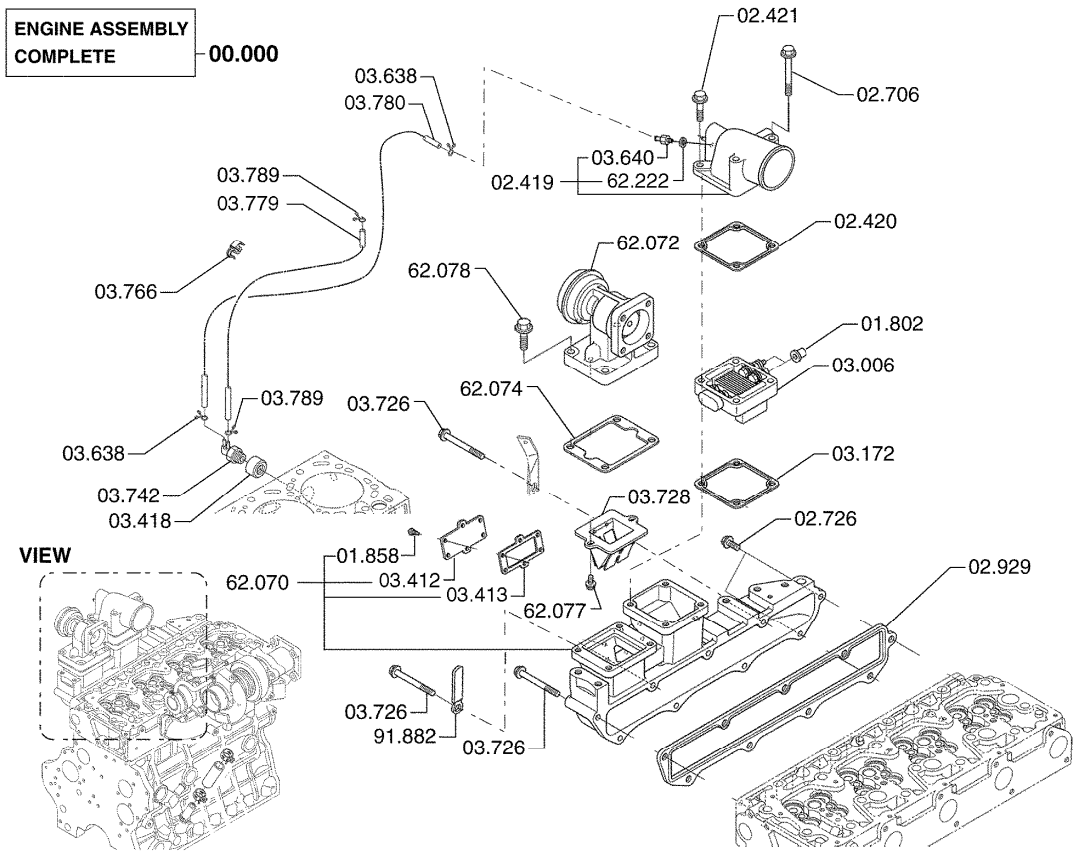

INTAKE MANIFOLD **03-623**

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
01.802	CAP, HEAT EXCHANGER 캡
01.858	FASTENER, INTAKE MANIFOLD 패스너
02.419	ADAPTOR, ENGINE AIR INTAKE 어댑터
02.420	GASKET, ENGINE AIR INTAKE ADAPTOR 가스켓
02.421	FASTENER, ENGINE AIR INTAKE ADAPTOR 패스너
02.706	FASTENER, AIR INTAKE ADAPTOR 패스너
02.726	FASTENER, MANIFOLD 패스너
02.929	GASKET, INTAKE MANIFOLD 가스켓
03.006	HEATER, COLD START 히터
03.172	GASKET, COLD START RESERVOIR COVER 가스켓
03.412	PLATE, INTAKE MANIFOLD BACKING 플레이트
03.413	GASKET, INTAKE MANIFOLD BACKING PLATE 가스켓
03.418	FITTING, INTAKE MANIFOLD VACUUM PORT 피팅
03.638	CLAMP, VACUUM LINE 클램프
03.640	FITTING, VACUUM LINE INTAKE MANIFOLD 피팅
03.726	FASTENER, INTAKE MANIFOLD 패스너
03.728	VALVE, EGR 밸브
03.742	VALVE, VACUUM SOLENOID 밸브
03.766	CLIP, VACUUM HOSE RETAINER 클립
03.779	HOSE, VACUUM-SHORT 호스
03.780	HOSE, VACUUM-LONG 호스
03.789	CLAMP, VACUUM LINE 클램프
62.070	MANIFOLD SET, INTAKE 매니폴드
62.072	VALVE, EXHAUST GAS RECIRCULATION(EGR) 밸브
62.074	GASKET, EGR VALVE OUTLET 가스켓
62.077	FASTENER, EGR VALVE MOUNTING 패스너
62.078	FASTENER, EGR VALVE MOUNTING 패스너
62.222	GASKET, INTAKE MANIFOLD FITTING 가스켓
91.882	CLAMP, INTAKE MANIFOLD FASTENER 클램프

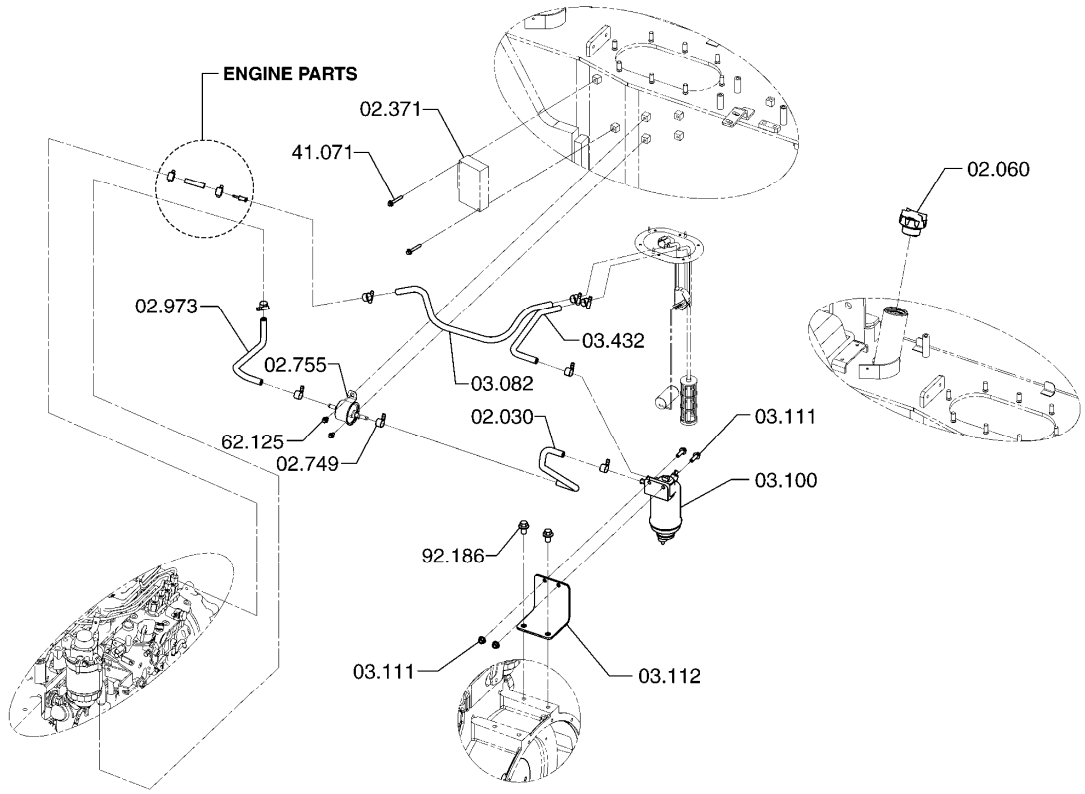

FUEL SYSTEM **03-676**

02.030 LINE, FUEL TANK TO FUEL PUMP
라인

02.060 CAP, FUEL TANK
캡

02.371 CONTROL UNIT, ELECTRONIC (ECU)
컨트롤유닛

02.749 CLAMP, TANK TO FUEL PUMP LINE
클램프

02.755 PUMP, FUEL
펌프


02.973 LINE, FUEL PUMP OUTLET
라인

03.082 LINE, FUEL TANK RETURN
라인

03.100 STRAINER ASSEMBLY, FUEL
스트레이너

03.111 FASTENER, FUEL STRAINER
패스너

03.112	BRACKET, FUEL STRAINER MOUNTING 브라켓
03.432	LINE, FUEL STRAINER INLET 라인
41.071	FASTENER, HEATER CONTROL 패스너
62.125	FASTENER, FUEL FEED PUMP 패스너
92.186	LOCKWASHER, FUEL STRAINER MOUNTING FASTENER 로크와셔

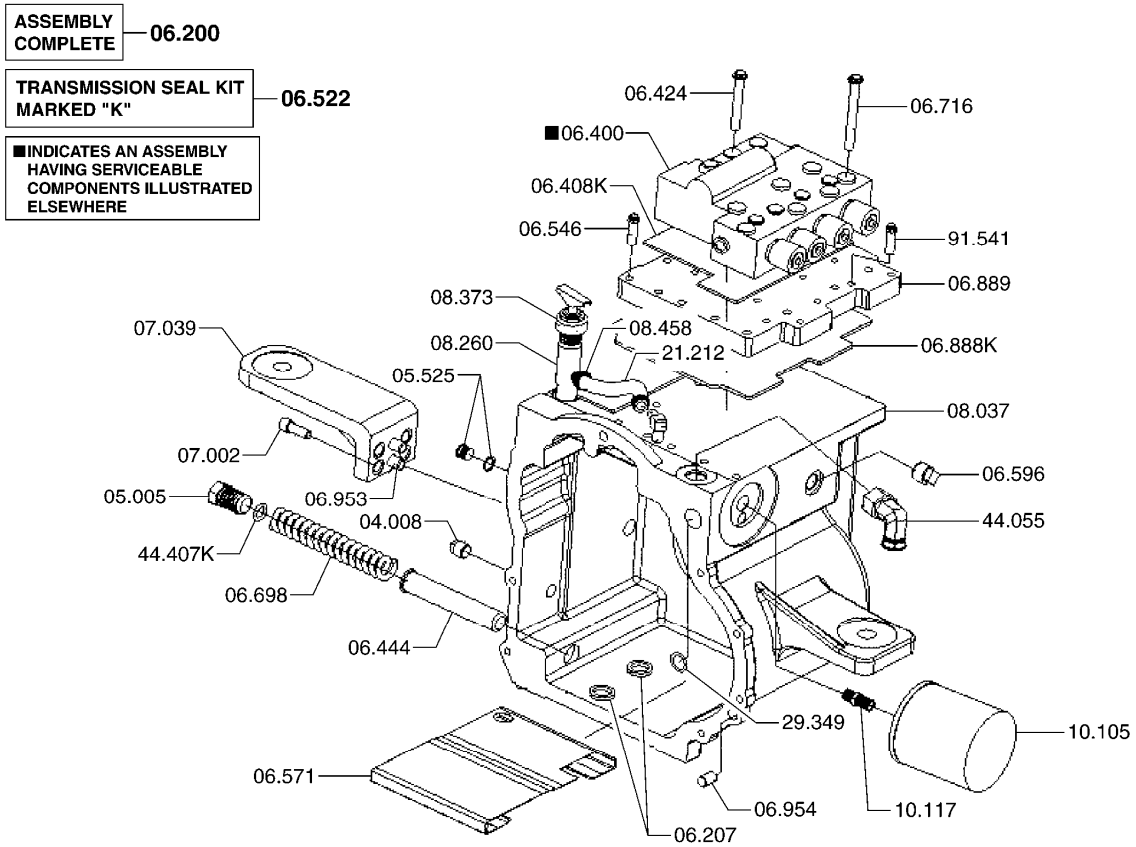


TRANSMISSION CASE & CONTROL VALVE MOUNTING **05-050**

04.008	SENSOR, TRANSMISSION FLUID TEMPERATURE 센서
05.005	PLUG, TORQUE CONVERTER DRAIN 플러그
05.525	PLUG, TRANSMISSION CASE 플러그
06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.207	MAGNET, OIL SUMP SCREEN 마그넷
06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버와밸브
06.408	GASKET, CONTROL COVER ATTACHING 가스켓
06.424	FASTENER, CONTROL COVER 패스너
06.444	STRAINER, TRANSMISSION SUMP OIL 스트레이너
06.522	SEAL AND GASKET KIT, TRANSMISSION 시일과가스켓킷
06.546	FASTENER, CONTROL COVER PLATE 패스너
06.571	BAFFLE, TRANSMISSION CASE OIL 배플
06.596	CAP, TRANSMISSION INTERMEDIATE SHAFT 캡
06.698	SPRING, TRANSMISSION REG CHECK VALVE POPPET 스프링
06.716	FASTENER, CONTROL COVER 패스너
06.888	GASKET, CONTROL COVER SEPARATOR PLATE 가스켓
06.889	PLATE, CONTROL COVER SEPARATOR 플레이트
06.953	DOWEL, TRANSMISSION REAR HOUSING 다월
06.954	DOWEL, TRANSMISSION CASE TO CONVERTER 다월
07.002	FASTENER, TRANSMISSION MOUNTING BRACKET RH 패스너
07.039	BRACKET, TRANSMISSION MOUNTING 브라켓
08.037	CASE, TRANSMISSION 케이스
08.260	TUBE, TRAN OIL LEVEL DIPSTICK SUPPORT 튜브
08.373	DIPSTICK, TRANSMISSION 딥스틱
08.458	CLIP, TRANSMISSION DIPSTICK TUBE 클립
10.105	ELEMENT & GASKET, OIL FILTER 엘리먼트와가스켓
10.117	FITTING, OIL FILTER TO BASE 피팅
21.212	TUBE, TRANSMISSION OIL LEVEL DIPSTICK 튜브
29.349	SEAL, PUMP COVER SEAL LOCATOR 시일
44.055	FITTING, TRANSMISSION CONTROL COVER RETURN LINE 피팅


44.407 SEAL, TRANSMISSION CASE PLUG
시일

91.541 FASTENER, CONTROL COVER SEPARATOR PLATE
패스너

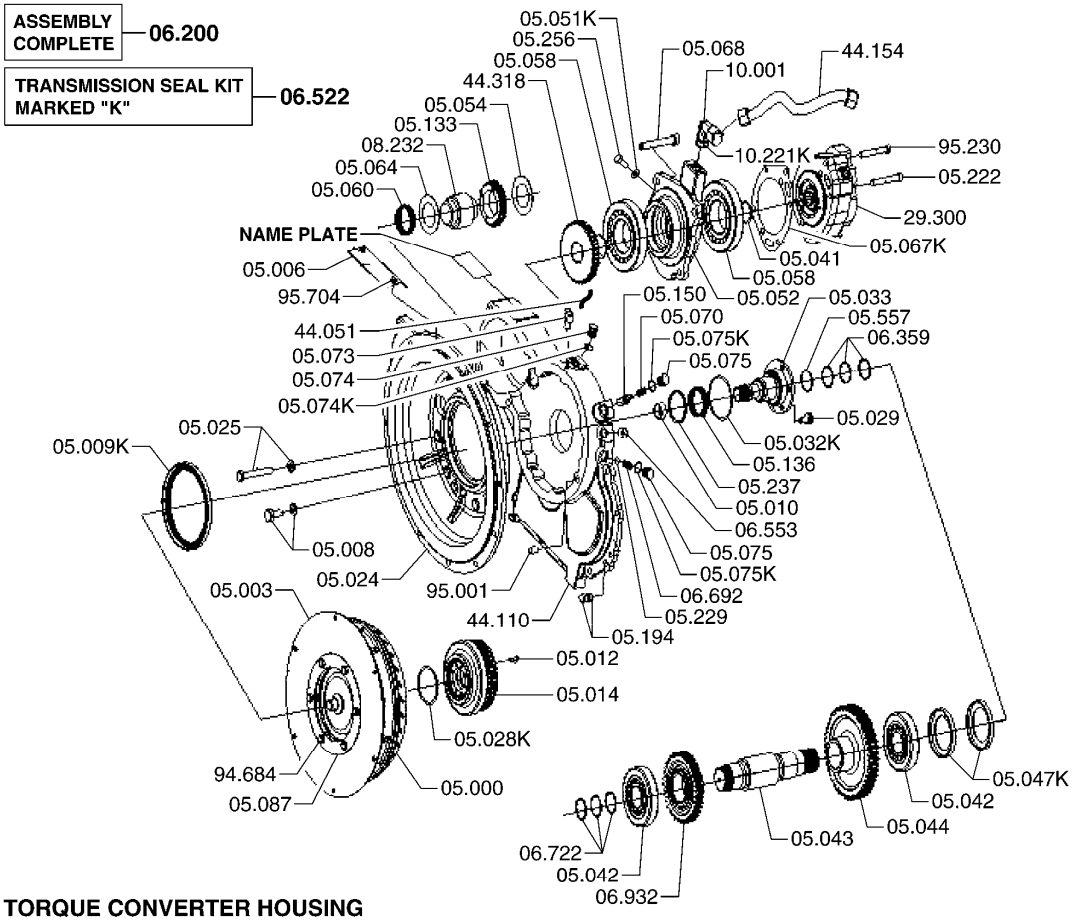


05.000	CONVERTER ASSEMBLY, TORQUE 컨버터
05.003	PLATE, CONVERTER DRIVE & REINFORCING 플레이트
05.006	COVER, CONVERTER IMPELLER 커버
05.008	FASTENER, IMPELLER COVER 패스너
05.009	SEAL, IMPELLER COVER 시일
05.010	BEARING, IMPELLER COVER 베어링
05.012	FASTENER, TURBINE TO HUB 패스너
05.014	TURBINE, TORQUE CONVERTER 터빈
05.024	IMPELLER, TORQUE CONVERTER 임펠러
05.025	FASTENER, IMPELLER TO HUB 패스너
05.028	SEAL, CONVERTER OIL BAFFLE 시일
05.029	FASTENER, OIL BAFFLE 패스너
05.032	SEAL, STATOR SUPPORT (PISTON RING) 시일
05.033	STATOR SUPPORT ASSEMBLY, CONVERTER 스테이터
05.041	RING-RETAINING, OUTPUT SHAFT BRG (FRONT) 링
05.042	BEARING, CONVERTER OUTPUT SHAFT (FRONT) 베어링
05.043	SHAFT, CONVERTER OUTPUT 샤프트
05.044	GEAR, CONVERTER OUTPUT SHAFT 기어
05.047	SEAL, OUTPUT SHAFT BEARING RETAINER 시일
05.051	SEAL, OUTPUT FLANGE 시일
05.052	FLANGE, OUTPUT SHAFT 플랜지
05.054	WASHER, OUTPUT FLANGE 와셔
05.058	BEARING, PUMP SHAFT (FRONT) 베어링
05.060	BEARING, PUMP SHAFT (REAR) 베어링
05.064	WASHER, PUMP SHAFT BEARING RETAINING 와셔
05.067	GASKET, CONVERTER PUMP 가스켓
05.068	FASTENER, CONVERTER CHARGING PUMP 패스너
05.070	SPRING, RELIEF VALVE 스프링
05.073	FASTENER, HOUSING HOLE COVER 패스너
05.074	PLUG, HOUSING DRAIN 플러그

05.075	PLUG, CONVERTER HOUSING DRAIN (FRONT) 플러그
05.087	PLATE, CONVERTER PUMP RETAINER 플레이트
05.133	GEAR, CONVERTOR PUMP IDLER 기어
05.136	BEARING, CONVERTER STATOR SUPPORT 베어링
05.150	VALVE, CONVERTER BREATHER CHECK 밸브
05.194	CAPSCREW, PUMP DRIVE BEARING SHAFT SPACER 캡스크류
05.222	CAPSCREW, CONVERTOR PUMP MOUNTING 캡스크류
05.229	BALL, CONVERTER PRESSURE REGULATING CHECK 볼
05.237	RING, HUB TO IMPELLER BACKING 링
05.256	PLUG, OUTPUT SHAFT FLANGE 플러그
05.557	RETAINER, CONVERTER TURBINE SHAFT BEARING LOCATO 리테이너
06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.359	SHIM, REVERSE CLUTCH BEARING CAP 심
06.522	SEAL AND GASKET KIT, TRANSMISSION 시일과가스켓킷
06.553	CAP, TRANSMISSION FILLER 캡
06.692	SPRING, TRANS REG CONVERTOR PRESS VALVE 스프링
06.722	SHIM, TRANSMISSION STATOR SUPPORT 심
06.932	GEAR, TRANSMISSION OUTPUT SHAFT RING 기어
08.232	PIN, TRANS CONTROL INTERLOCK 핀
10.001	FITTING, CONVERTOR CHARGING PUMP INLET 피팅
10.221	SEAL, CONVERTER SUMP INLET FITTING 시일
29.300	PUMP ASSEMBLY, CONVERTER CHARGING 펌프
44.051	HOSE, TRANSMISSION CONTROL COVER PRESSURE 호스
44.110	PLATE, CONVERTER DRIVE 플레이트
44.154	HOSE, TRANSMISSION SUMP TO CONVERTOR PUMP 호스
44.318	GEAR, TRANSMISSION OUTPUT SHAFT 기어
94.684	FASTENER, TORQUE CONVERTER OIL BAFFLE 패스너
95.001	FASTENER, CONVERTER HOUSING 패스너
95.230	FASTENER, CONVERTOR PUMP MOUNTING 패스너
95.704	FASTENER, CONVERTER HOUSING PLATE 패스너

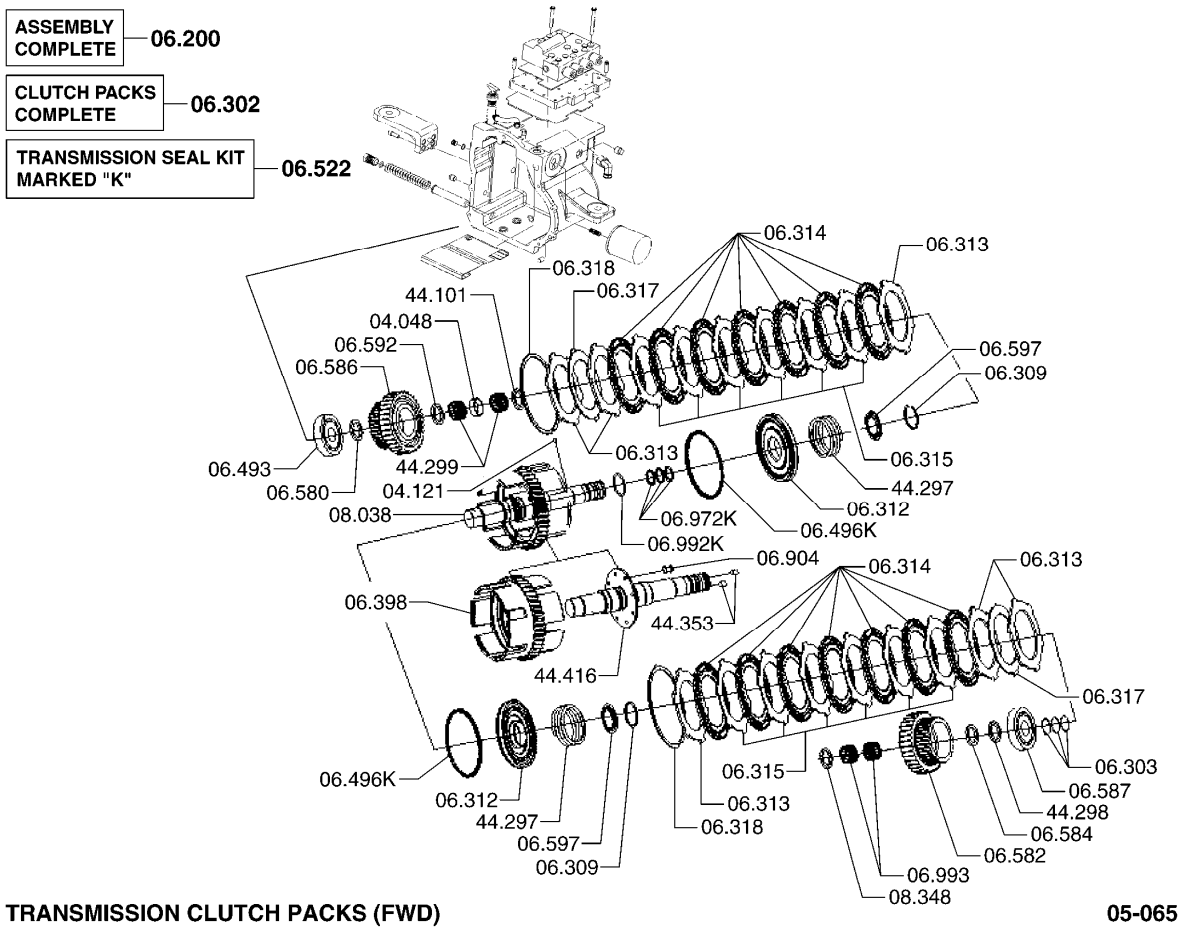

04.048	SPACER, CLUTCH PEDAL BEARING 스페이서
04.121	PIN, CLUTCH THROW OUT LEVER 핀
06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.302	CLUTCH PACK, FORWARD 클러치팩
06.303	SHIM, FORWARD CLUTCH BEARING CAP 싱
06.309	RETAINER, FORWARD HUB 리테이너
06.312	PISTON, FORWARD CLUTCH 피스톤
06.313	DISC, FORWARD CLUTCH END 디스크
06.314	DISC, FORWARD CLUTCH INNER 디스크
06.315	DISC, FORWARD CLUTCH OUTER 디스크
06.317	PLATE, FORWARD CLUTCH DISC END 플레이트
06.318	RING, FORWARD CLUTCH DISC END PLATE RET 링
06.398	CYLINDER, FORWARD CLUTCH 실린더
06.493	BEARING, FORWARD SHAFT INNER 베어링
06.496	SEAL, FORWARD CLUTCH SHAFT-OUTER 시일
06.522	SEAL AND GASKET KIT, TRANSMISSION 시일과가스켓킷
06.580	THRUST WASHER, REVERSE CLUTCH HUB & DRUM 트러스트와셔
06.582	GEAR & BEARING, REVERSE 기어묵붕어링
06.584	THRUST WASHER, 1ST CLUTCH HUB & DRUM 트러스트와셔
06.586	GEAR & BEARING, 1ST 기어와베어링
06.587	BEARING, 1ST GEAR 베어링
06.592	THRUST WASHER, 2ND CLUTCH HUB & DRUM 트러스트와셔
06.597	RETAINER, TRANSMISSION INT SHAFT OUTER BEARING 리테J犬
06.904	FASTENER, FORWARD CLUTCH CYLINDER 패스너
06.972	RING, CLUTCH RELEASE SPRING RETAINER 링
06.992	SEAL, CLUTCH SHAFT OIL 시일
06.993	BEARING, CLUTCH SHAFT PILOT 베어링
08.038	COUNTERSHAFT ASSEMBLY 카운터샤프트
08.348	WASHER, FORWARD GEAR THRUST 와셔
44.101	THRUST WASHER, CLUTCH SHAFT PILOT BEARING 트러스트와셔


44.297	SPRING-RETURN, INTERMEDIATE SHAFT PISTON 스프링
44.298	THRUST WASHER, BEARING LOCATOR 트러스트와셔
44.299	BEARING, TRANSMISSION INTERMEDIATE SHAFT 베어링
44.353	PLUG, CLUTCH DRIVE SHAFT AND GEAR 플러그
44.416	SHAFT, CLUTCH COUNTER *

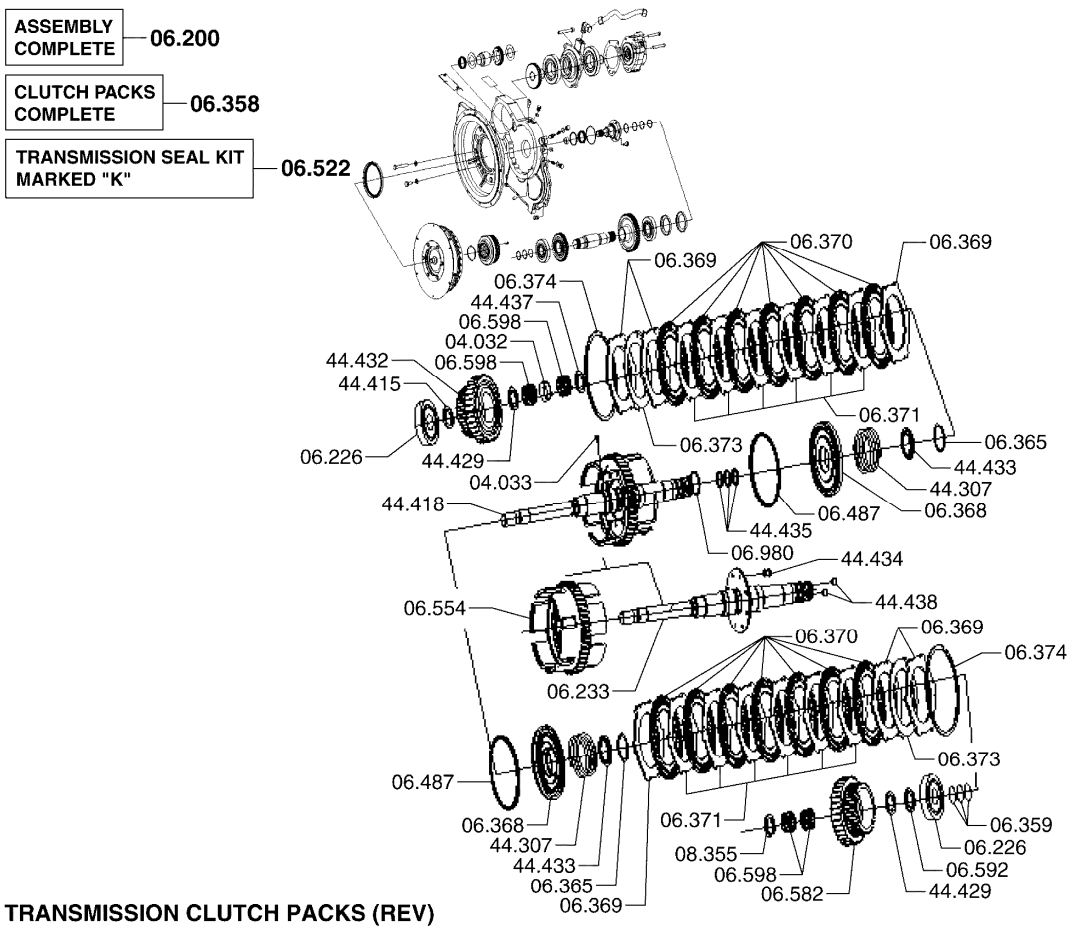

04.032	SPACER, CLUTCH PEDAL BEARING *
04.033	PIN, CLUTCH THROW OUT LEVER *
06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.226	BEARING, REVERSE SHAFT INNER 베어링
06.233	SHAFT, INPUT 샤프트
06.358	CLUTCH PACK, REVERSE 클러치팩
06.359	SHIM, REVERSE CLUTCH BEARING CAP 심
06.365	RETAINER, REVERSE HUB 리테이너
06.368	PISTON, REVERSE CLUTCH 피스톤
06.369	DISC, REVERSE CLUTCH END 디스크
06.370	DISC, REVERSE CLUTCH INNER 디스크
06.371	DISC, REVERSE CLUTCH OUTER 디스크
06.373	PLATE, REVERSE CLUTCH DISC END 플레이트
06.374	RING, REVERSE CLUTCH DISC END PLATE RET 링
06.487	SEAL, REVERSE CLUTCH SHAFT-OUTER 시일
06.522	SEAL AND GASKET KIT, TRANSMISSION 시일과가스켓킷
06.554	CLUTCH PACK, DIRECTION SELECTOR 클러치팩
06.582	GEAR & BEARING, REVERSE 기어묵빙어링
06.592	THRUST WASHER, 2ND CLUTCH HUB & DRUM 트러스트와셔
06.598	BEARING, TRANSMISSION INTERMEDIATE SHAFT OUTER 베어링
06.980	SEAL, CLUTCH SHAFT OIL 시일
08.355	WASHER, REVERSE GEAR THRUST 와셔
44.307	SPRING-RETURN, INPUT SHAFT PISTON 스프링
44.415	THRUST WASHER, BEARING LOCATOR *
44.418	TURBINE SHAFT, DRUM & CLUTCH ASSY *
44.429	THRUST WASHER, REVERSE CLUTCH HUB & DRUM *
44.432	GEAR & BEARING, REVERSE *
44.433	RETAINER, TRANSMISSION INT SHAFT OUTER BEARING *
44.434	FASTENER, REVERSE CLUTCH CYLINDER *
44.435	RING, CLUTCH RELEASE SPRING RETAINER *

44.437	*	
44.438	PLUG, CLUTCH DRIVE SHAFT AND GEAR *	


06.400 ASSEMBLY COMPLETE

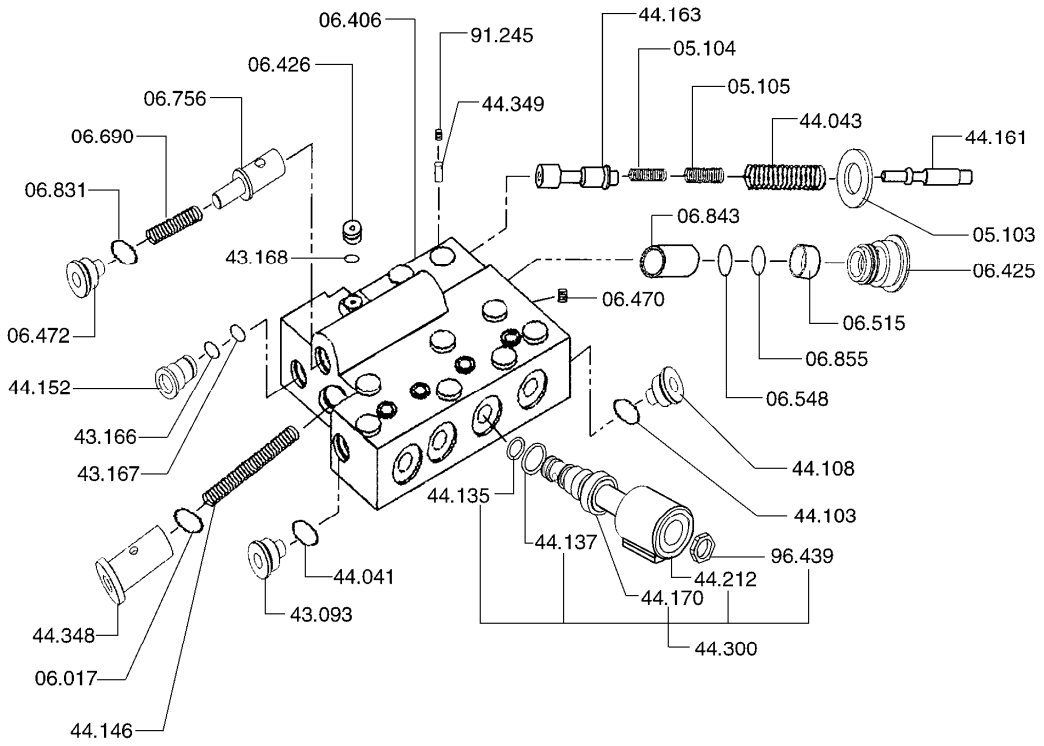

TRANSMISSION CONTROL COVER **06-079**

05.103	SEAL, VALVE STOP 시일
05.104	SPRING, INNER 스프링
05.105	SPRING, OUTER 스프링
06.017	O-RING, SPOOL CARTRIDGE 오링
06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버와밸브
06.406	COVER, CONTROL 커버
06.425	PLUG, CONTROL COVER OIL PASSAGE 플러그
06.426	PLUG, CONTROL COVER 플러그
06.470	PLUG, CONTROL VALVE HOUSING OIL PASSAGE 플러그
06.472	PLUG, CONTROL VALVE HOUSING OIL PASSAGE 플러그
06.515	BUSHING, CONTROL COVER 부싱
06.548	SEAL, CONTROL COVER OIL PASSAGE - LARGE 시일
06.690	SPRING, REGULATOR TRANS PRESS VALVE 스프링
06.756	PISTON, TRANSMISSION FRONT BRAKE ACTUATOR 피스톤
06.831	SEAL, PRESSURE REGULATING VALVE STOP 시일
06.843	STOP, ACCUMULATOR PISTON 스톱
06.855	SEAL, CONTROL COVER OIL PASSAGE (LARGE) 시일
43.093	PLUG, CONTROL VALVE HOUSING 플러그
43.166	SEAL, CONTROL MODULE 시일
43.167	SEAL, CONTROL MODULE 시일
43.168	SEAL, CONTROL MODULE COVER 시일
44.041	SEAL, TRANSMISSION CONTROL COVER PLUG OUTER 시일
44.043	SPRING, CONTROL VALVE SPEED SELECTOR SPOOL CENTE 스프링
44.103	PISTON RING, TRANSMISSION ACCUMULATOR 피스톤링
44.108	PLUG, TRANSMISSION ACCUMULATOR BORE 플러그
44.135	SEAL, SOLENOID VALVE 시일
44.137	SEAL, SOLENOID VALVE 시일
44.146	SPRING, MODULATOR SPOOL 스프링
44.152	PLUG, CONTROL VALVE SHUTTLE PISTON SPEED CONTROL 플러그
44.161	STOP, TRANSMISSION ACCUMULATOR SPOOL 스톱

44.163	STOP, TRANSMISSION SAFETY VALVE 스톱
44.170	COIL, TRANSMISSION CONTROL COVER SOLENOID 코일
44.212	CARTRIDGE, CONTROL VALVE SHIFT SOLENOID 카트리지
44.300	VALVE ASSEMBLY, SOLENOID 벨브
44.348	STOP, TRANS LUBE BY-PASS SPOOL SPRING 스톱
44.349	PIN, TRANS LUBE BY-PASS AND COOLER SEPARATOR 핀
91.245	BOLT, HOUSING COVER PLATE 볼트
94.439	LOCKWASHER, HOOD PROP BRACKET SUPPORT FASTENER 로크와셔

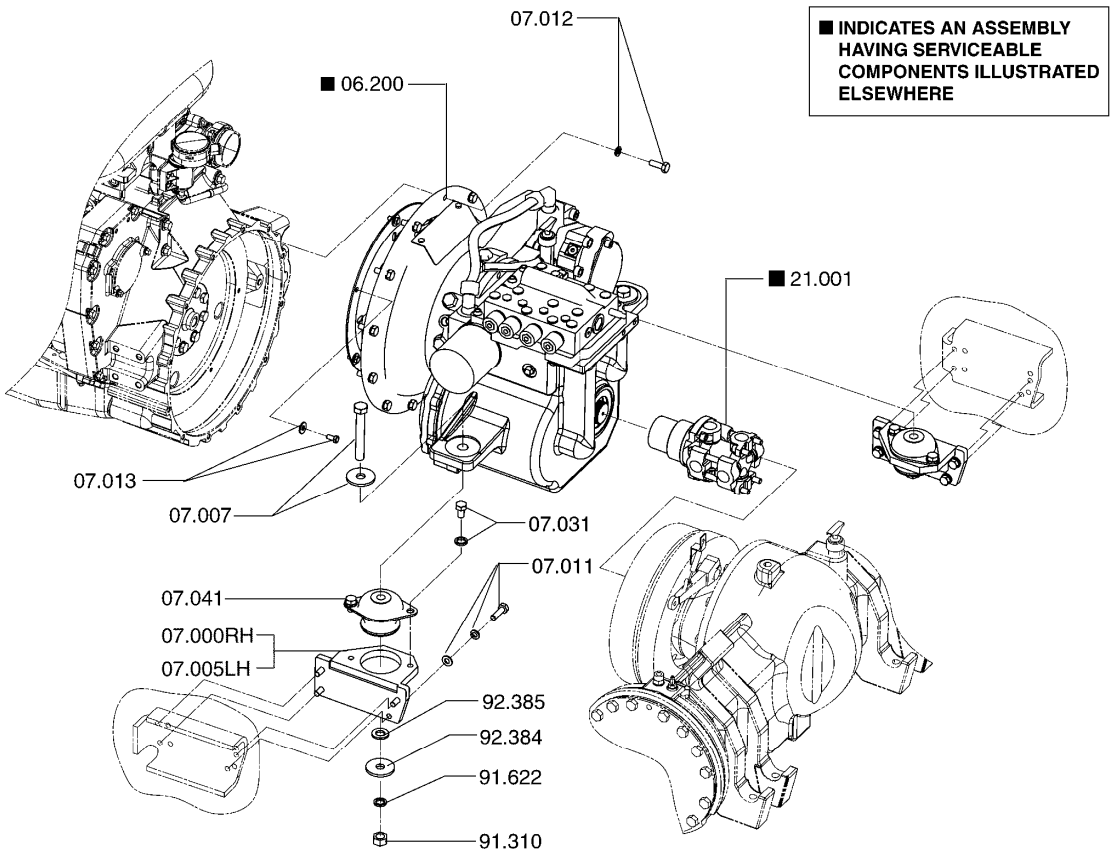

06.200 TRANSMISSION ASSEMBLY
트랜스미션

07.000 BRACKET, TRANSMISSION MOUNTING (RH)
브라켓

07.005 BRACKET, TRANSMISSION MOUNTING LH
브라켓

07.007 FASTENER, TRANSMISSION MOUNTING BRACKET LH
패스너

07.011 FASTENER, TRANSMISSION MOUNTING BRACKET LH
패스너


07.012 FASTENER, TRANSMISSION TO ENGINE
패스너

07.013 FASTENER, TRANSMISSION TO ENGINE
패스너

07.031 BOLT, TRANSMISSION MOUNTING BRACKET PAD
볼트

07.041 DAMPENER, TRANSMISSION MOUNTING VIBRATION
댐프너

21.001	SHAFT ASSEMBLY, TRANSMISSION TO AXLE PROPELLER 샤프트
91.310	NUT, TRANS MOUNTING BRACKET FASTENER (LH) 너트
91.622	LOCKWASHER, TRANSMISSION MOUNTING BRACKET FASTENER 로크와셔
92.384	WASHER, TRANSMISSION MOUNTING BRACKET TO FRAME FAS 와셔
92.385	WASHER, TRANSMISSION MOUNTING BRACKET TO FRAME FAS 와셔

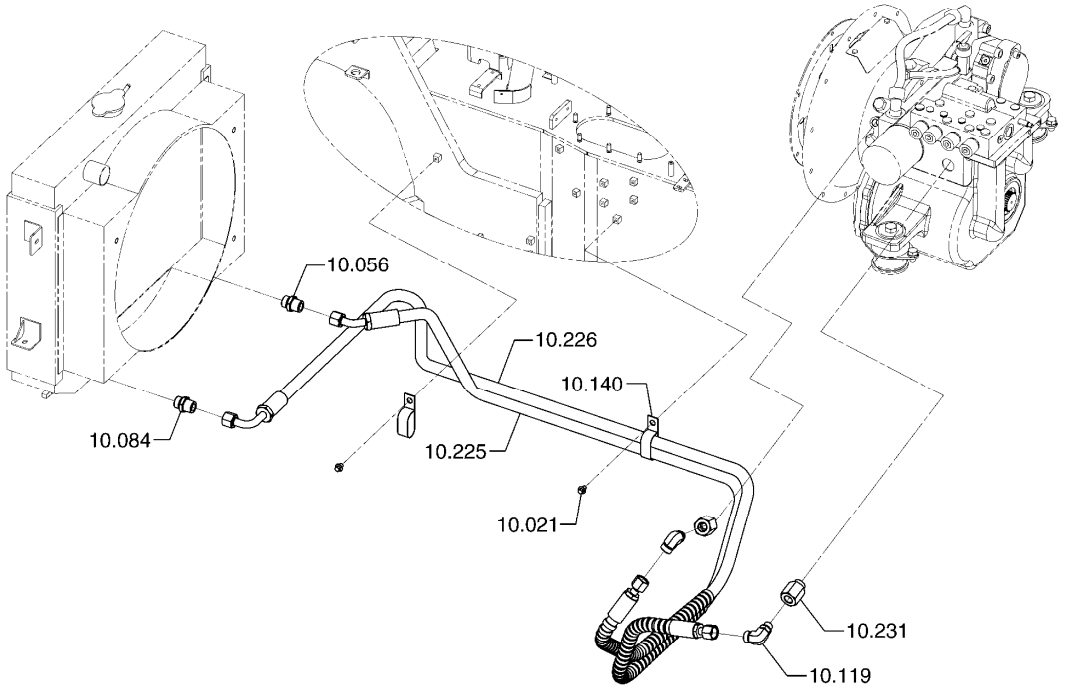

TRANS COOLING LINES **10-123**

10.021 FASTENER, COOLER OUTLET LINE CLAMP
패스너

10.056 FITTING, COOLER OUTLET
피팅

10.084 FITTING, COOLER INLET LINE
피팅


10.119 FITTING, TRANSMISSION COOLER INLET LINE
피팅

10.140 CLAMP, COOLER LINE
클램프

10.225 LINE, OIL COOLING
라인

10.226 LINE, OIL COOLING
라인

10.231 FITTING, OIL COOLING LINES
피팅

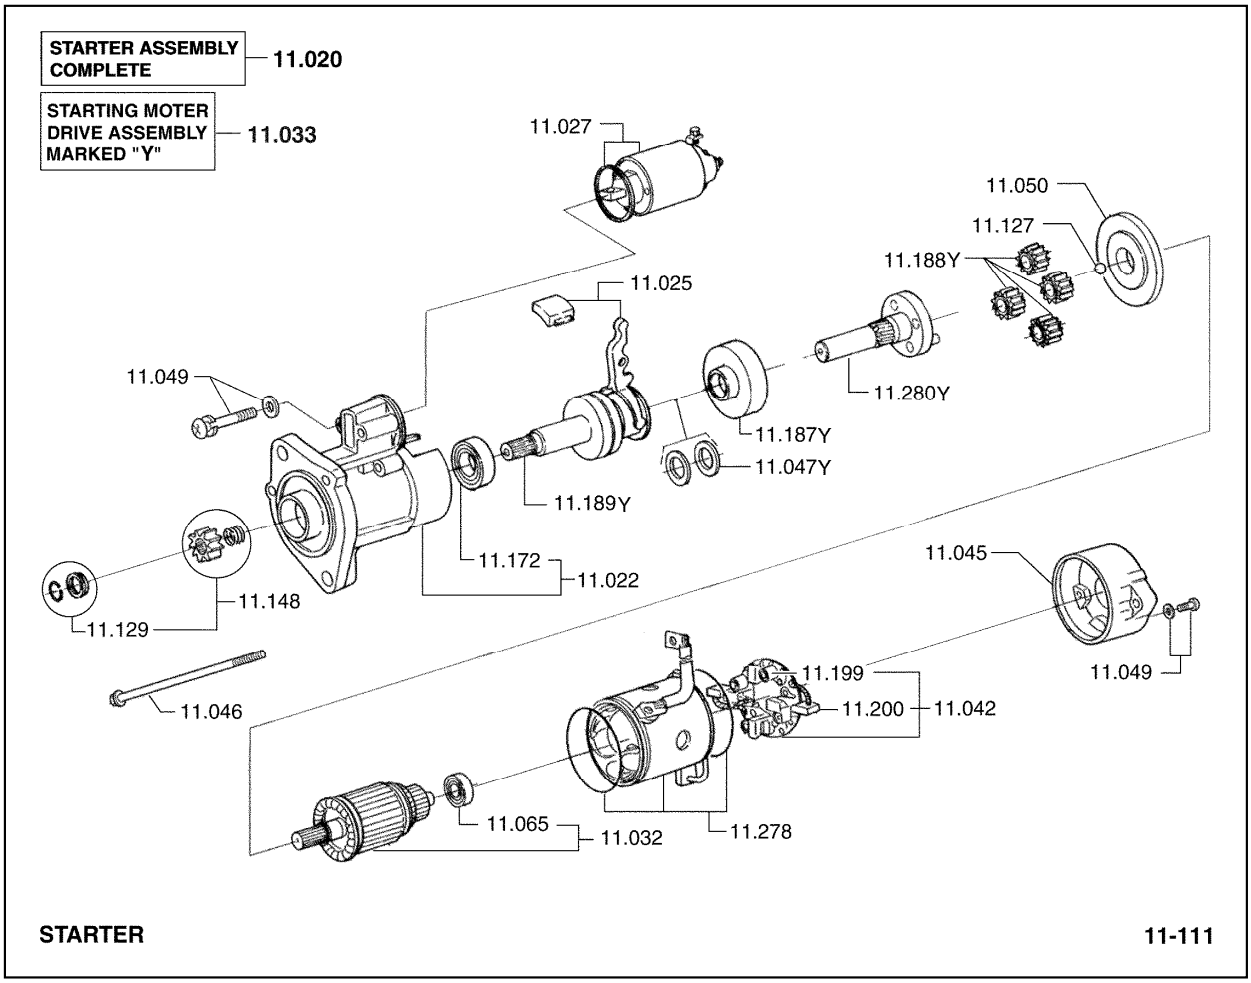

11.020 MOTOR ASSEMBLY, STARTING
모터

11.022 HOUSING & BUSHING, DRIVE END
하우징와부싱

11.025 LEVER, DRIVE SHIFT FORK
레버

11.027 SWITCH, SOLENOID
스위치

11.032 ARMATURE, STARTING MOTOR
아마츄어


11.033 DRIVE ASSEMBLY, STARTING MOTOR
드라이브

11.042 BRUSH HOLDER & BRUSH (KIT)
브러쉬홀더

11.045 FRAME, COMMUTATOR END
프레임

11.046 FASTENER, THRU
패스너

11.047	WASHER, COMMUTATOR END THRUST 와셔
11.049	FASTENER, STARTING MOTOR 패스너
11.050	PLATE, STARTING MOTOR CENTER BEARING 플레이트
11.065	BEARING, COMMUTATOR END FRAME 베어링
11.127	BALL, CRANKING MOTOR DRIVE 볼
11.129	STOP, CRANKING MOTOR DRIVE 스톱
11.148	PINION, CRANKING MOTOR DRIVE 피니언
11.172	BEARING, CRANKING MOTOR CENTER 베어링
11.187	GEAR, STARTER REDUCTION INTERNAL 기어
11.188	GEAR, STARTER REDUCTION PINION 기어
11.189	CLUTCH, STARTER OVERRUNNING 클러치
11.199	BRUSH, STARTING MOTOR 브러쉬
11.200	BRUSH, STARTING MOTOR 브러쉬
11.278	YOKE, STARTING MOTOR 요크
11.280	SHAFT, STARTER PINION 샤프트

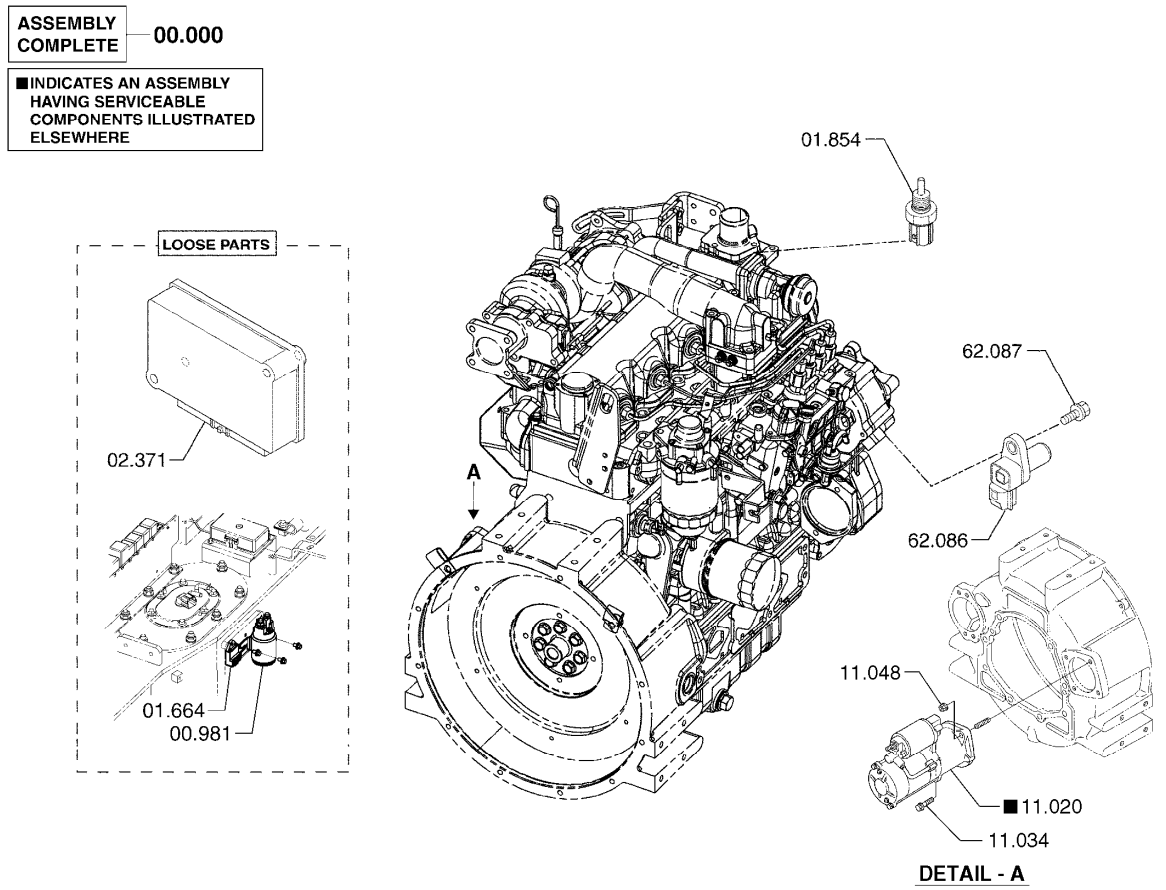

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.981 RELAY, ENGINE PRE-HEATER
릴레J

01.664 CONTROLLER, ENGINE PRE-HEATER
컨트롤러

01.854 SENSOR, ENGINE COOLANT TEMPERATURE
센서

02.371 CONTROL UNIT, ELECTRONIC (ECU)
컨트롤유닛


11.020 MOTOR ASSEMBLY, STARTING
모터

11.034 FASTENER, STARTING MOTOR
패스너

11.048 FASTENER, STARTING MOTOR
패스너

62.086 SENSOR, ENGINE SPEED
센서

62.087 FASTENER, ENGINE SPEED SENSOR
패스너

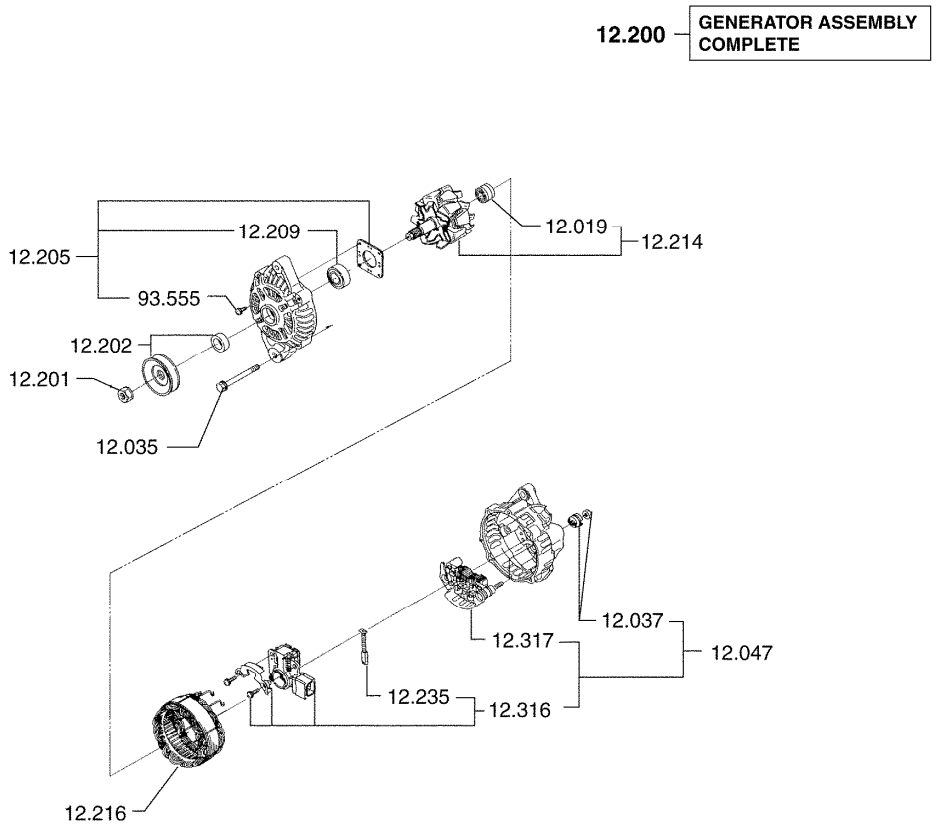

12.019 BEARING, GENERATOR DRIVE END
베어링

12.035 FASTENER, GENERATOR ARMATURE TERM WIRE
패스너

12.037 FASTENER, GENERATOR FIELD TERMINAL WIRE
패스너

12.047 FRAME, GENERATOR COMMUTATOR END
프레임

12.200 ALTERNATOR ASSEMBLY
알터네이터


12.201 FASTENER, ALTERNATOR PULLEY TO SHAFT
패스너

12.202 PULLEY, ALTERNATOR
풀리

12.205 FRAME, ALTERNATOR DRIVE END
프레임

12.209 BEARING, ALTERNATOR DRIVE END
베어링

12.214	ROTOR ASSEMBLY, ALTERNATOR 로터
12.216	STATOR ASSEMBLY, ALTERNATOR 스테이터
12.235	BRUSH KIT, ALTERNATOR 브러쉬킷
12.316	REGULATOR, ALTERNATOR VOLTAGE OUTPUT 레귤레이터
12.317	RECTIFIER ASSEMBLY, ALTERNATOR 정류기
93.555	FASTENER, ALTERNATOR RECTIFIER HOUSING COVER 패스너

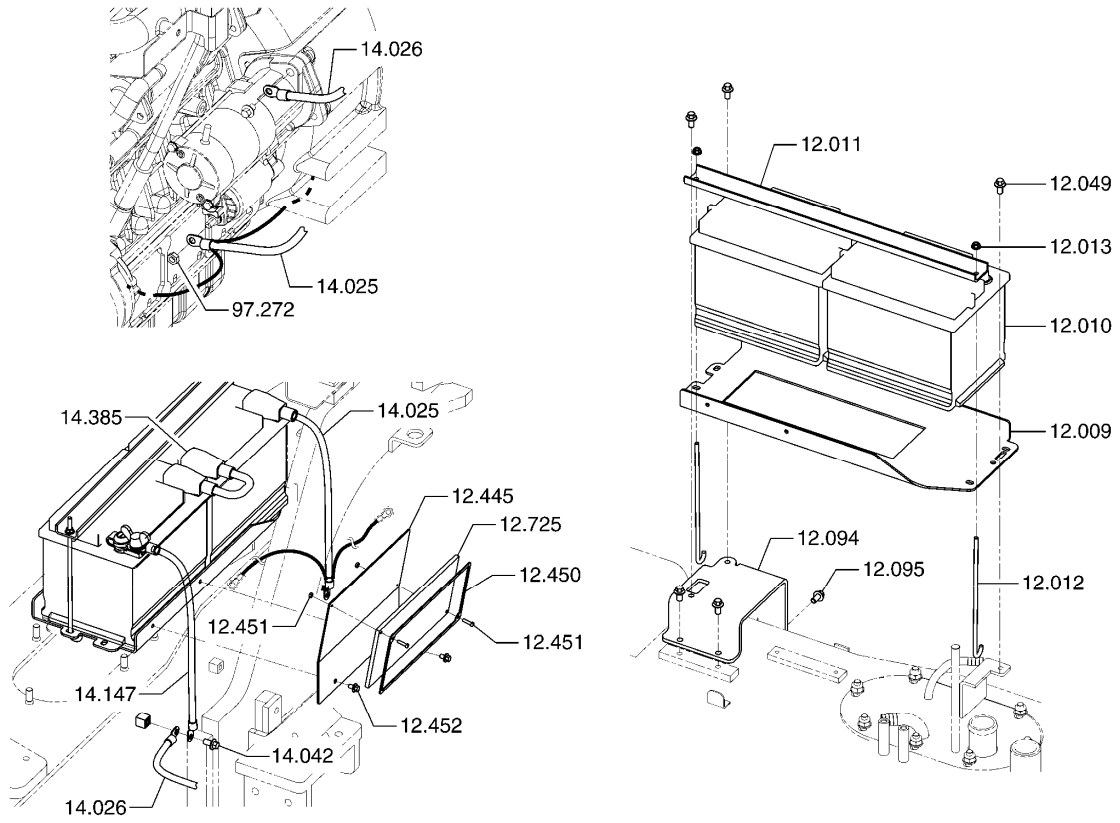

BATTERY MOUNTING **12-205**

12.009 SUPPORT, BATTERY
서포트

12.010 BATTERY
배터리

12.011 CLAMP, BATTERY HOLD DOWN
클램프

12.012 STUD, BATTERY HOLD DOWN
스터드

12.013 FASTENER, BATTERY HOLD DOWN (AT CLAMP)
패스너

12.049 FASTENER, BATTERY SUPPORT
패스너

12.094 BRACKET, BATTERY SUPPORT
브라켓


12.095 FASTENER, BATTERY SUPPORT BRACKET
패스너

12.445 BRACKET, BATTERY INSULATOR SUPPORT
브라켓

12.450	COVER, BATTERY HEAT SHIELD INSULATOR *
12.451	FASTENER, BATTERY INSULATOR COVER *
12.452	FASTENER, BATTERY INSULATOR SUPPORT BRACKET *
12.725	INSULATOR, BATTERY HEAT SHIELD J抵떱톮謙
14.025	CABLE, BATTERY TO STARTER 케이블
14.026	CABLE, BATTERY GROUND 케이블
14.042	FASTENER, BATTERY GROUND CABLE 패스너
14.147	CABLE, BATTERY NEGATIVE 케이블
14.385	CABLE, BATTERY TO BATTERY 케이블
97.272	FASTENER, CABLE & WIRE TO STARTER *

ENGINE ASSEMBLY COMPLETE — 00.000

■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

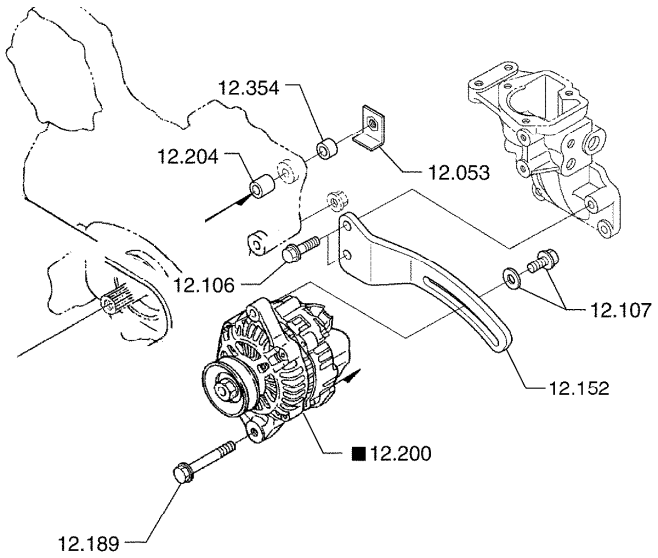

GENERATOR MOUNTING **12-220**

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

12.053 SUPPORT, GENERATOR MOUNTING BRACKET
서포트

12.106 FASTENER, ADJUSTING STRAP MOUNTING
패스너

12.107 FASTENER, ADJUSTING STRAP TO ALTERNATOR
패스너


12.152 BRACKET, ALTERNATOR ADJUSTING STRAP
브라켓

12.189 FASTENER, ALTERNATOR MOUNTING
패스너

12.200 ALTERNATOR ASSEMBLY
알터네이터

12.204 COLLAR, ALTERNATOR DRIVE END
칼라

12.354 COLLAR, ALTERNATOR DRIVE END
칼라

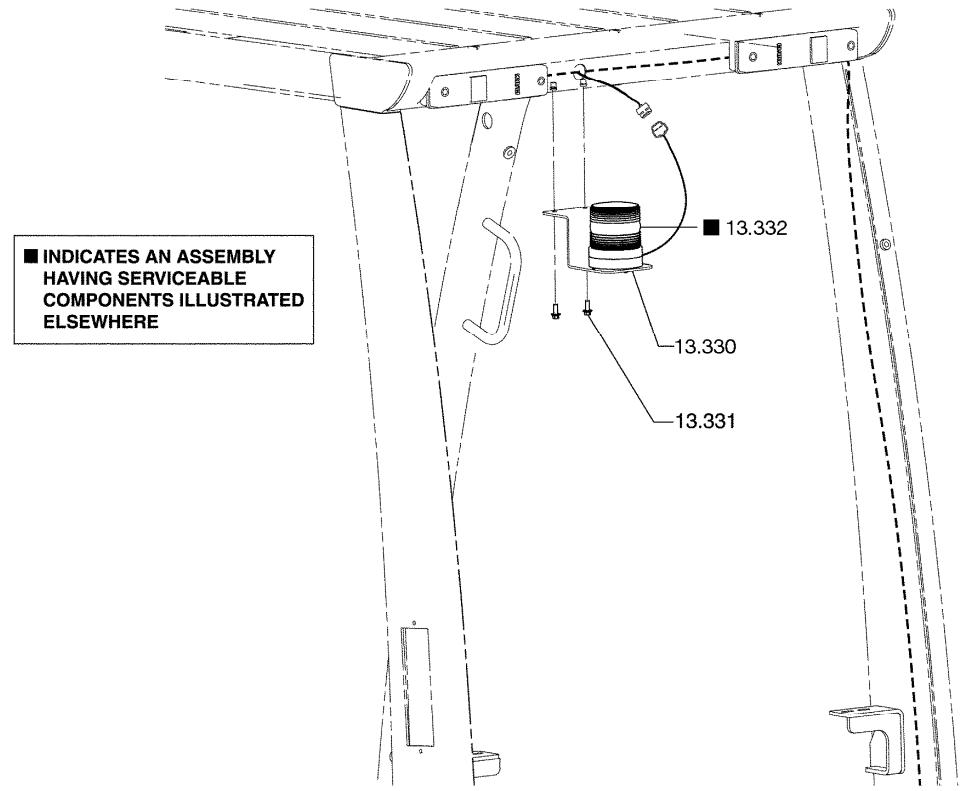


STROBE LIGHT MOUNTING **13-162**

13.330 BRACKET, WARNING LIGHT
브라켓

13.331 FASTENER, WARNING LIGHT BRACKET
패스너

13.332 ASSEMBLY, WARNING LIGHT
경고등

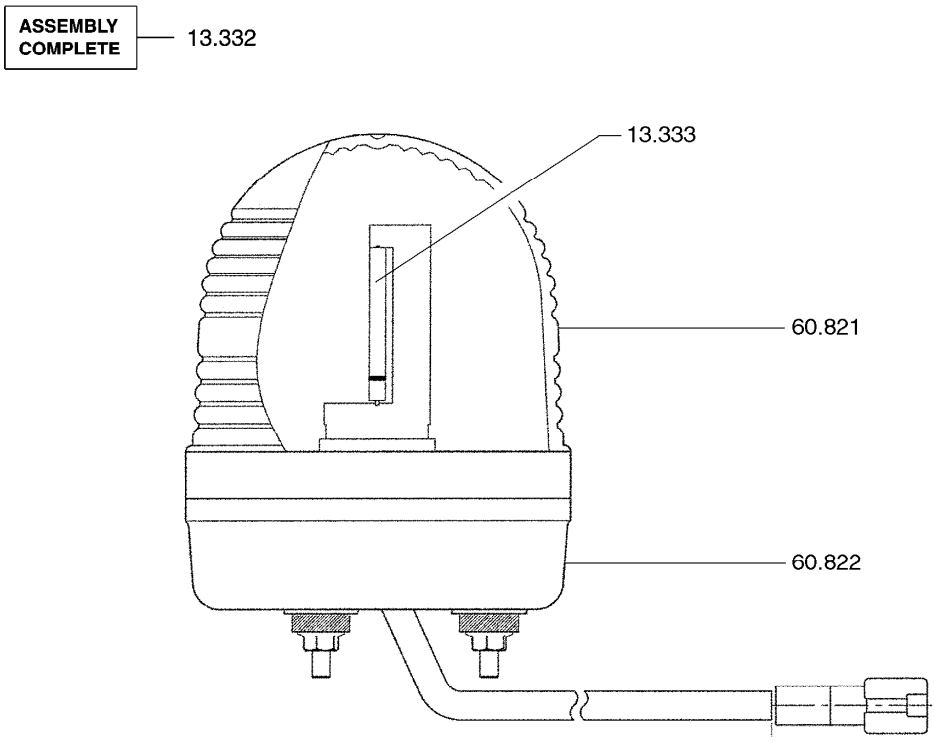


STROBE LIGHT **13-182**

13.332 ASSEMBLY, WARNING LIGHT
경고등

13.333 BULB, WARNING LIGHT
전구

60.821 GLOBE, STROBE LIGHT
글로브

60.822 BASE, STROBE LIGHT
베이스

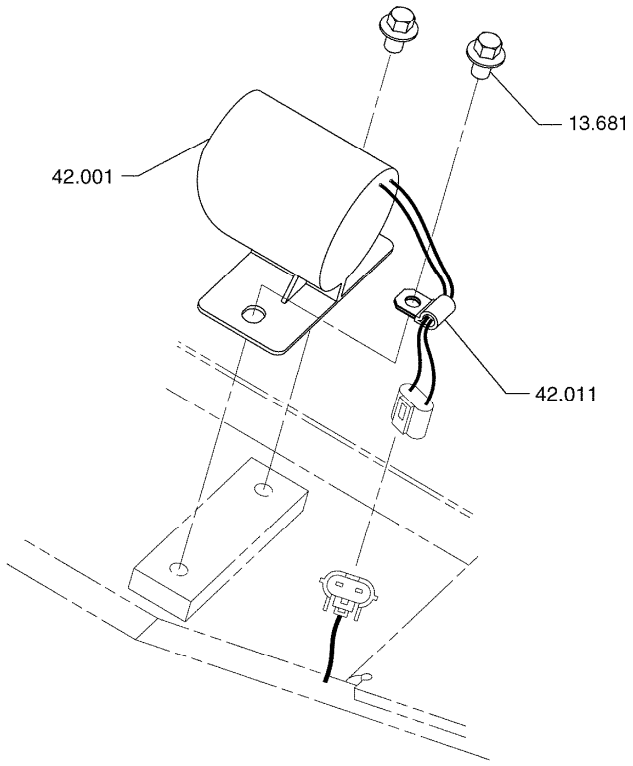


BACK-UP ALARM INSTALLATION **13-228**

13.681 FASTENER, WARNING DEVICE
패스너

42.001 WARNING DEVICE, AUDIBLE (AIR OPER)
경보장치


42.011 CLIP, AUDIBLE WARNING DEVICE CABLE
클립

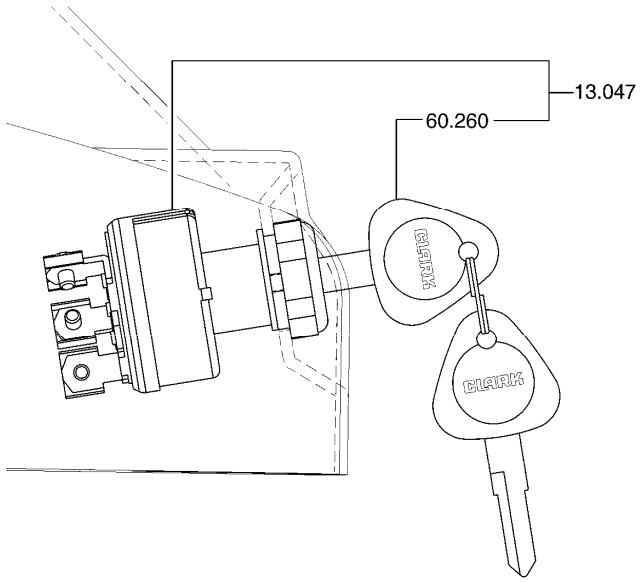

KEY SWITCH INSTALLATION **13-292**

13.047 SWITCH, CIRCUIT LOCKING
스위치

60.260 KEY, CIRCUIT LOCKING SWITCH
키

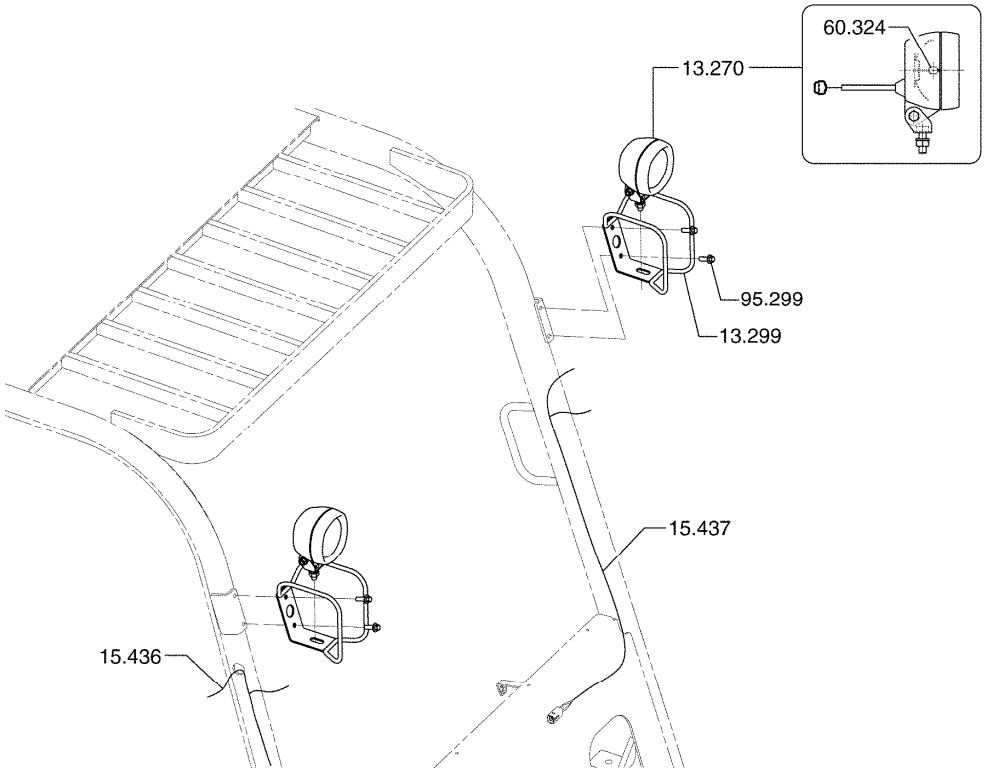

HEAD LAMP INSTALLATION **13-294**

13.270 HEADLAMP, ADJUSTABLE
헤드램프


13.299 GUARD, HEADLIGHT
가드

15.436 HARNESS, RH HEADLAMP WIRING
하네스

15.437 HARNESS, HEADLAMP WIRING
하네스

60.324 BULB, HEADLAMP
전구

95.299 FASTENER, HEADLAMP GUARD
패스너

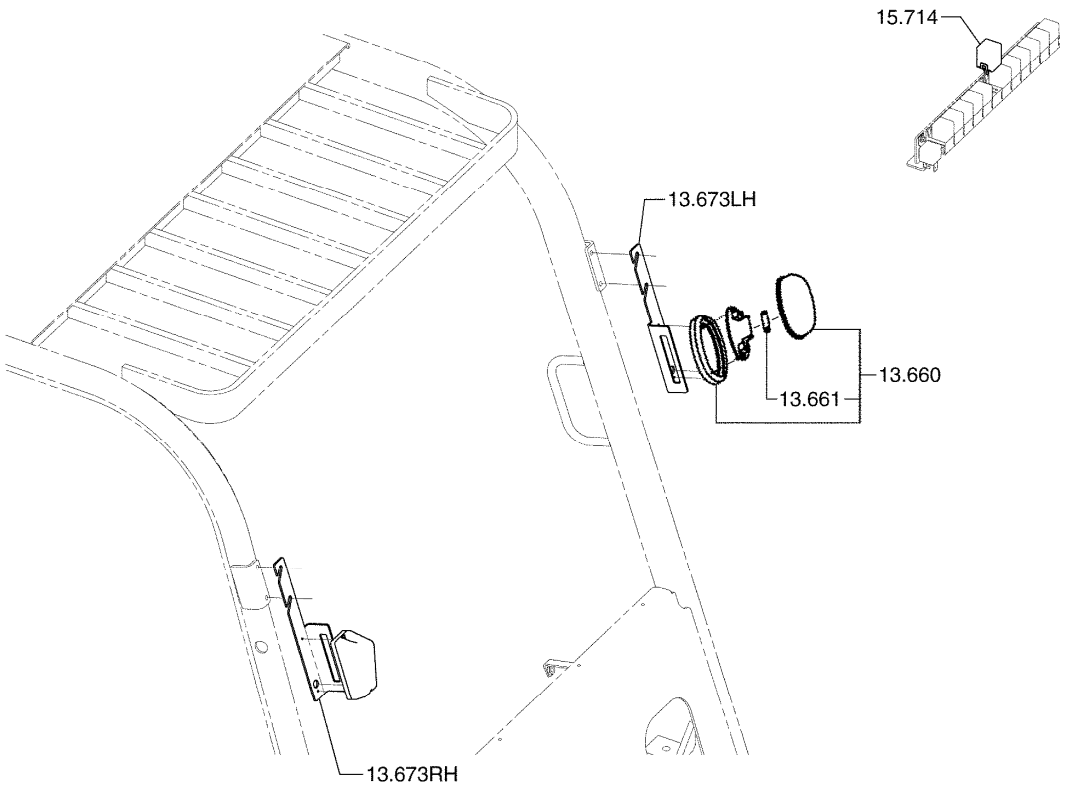


SIGNAL LIGHT INSTALLATION **13-296**

13.660 LIGHT, TURN SIGNAL
라이트

13.661 BULB, TURN SIGNAL LIGHT
전구

13.673 BRACKET, TURN LIGHT
브라켓

15.714 FLASHER, UNIT
플래셔

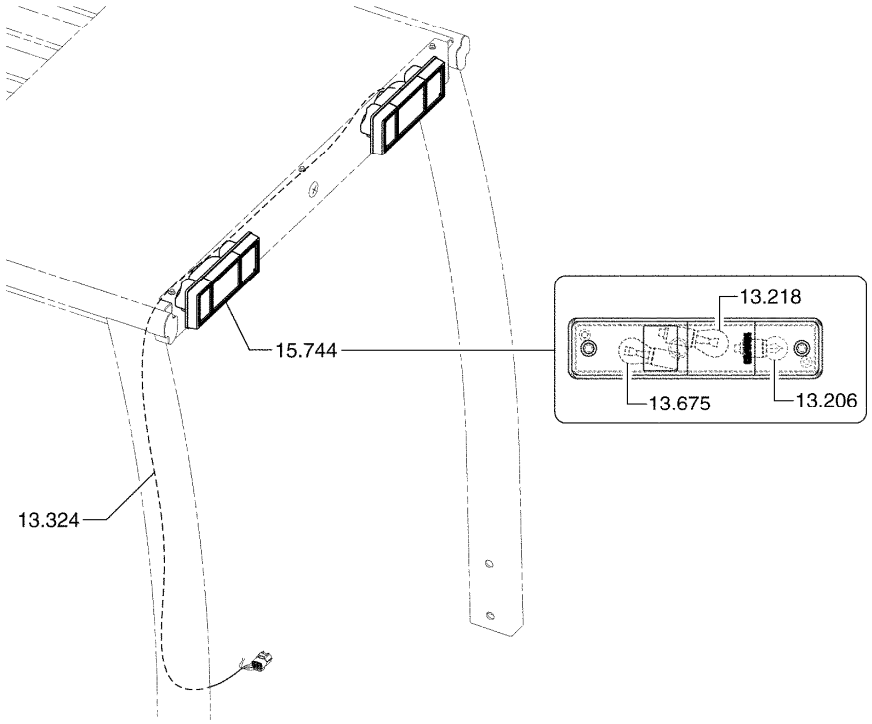

COMBINATION LAMP INSTALLATION **13-297**


13.206 BULB, BACK-UP LAMP
전구

13.218 BULB, STOP & TAIL LAMP
전구

13.324 HARNESS, REAR WORK LAMP
하네스

13.675 BULB, TURN LIGHT
전구

15.744 LAMP ASSEMBLY, COMBINATION STOP & TAIL
램프

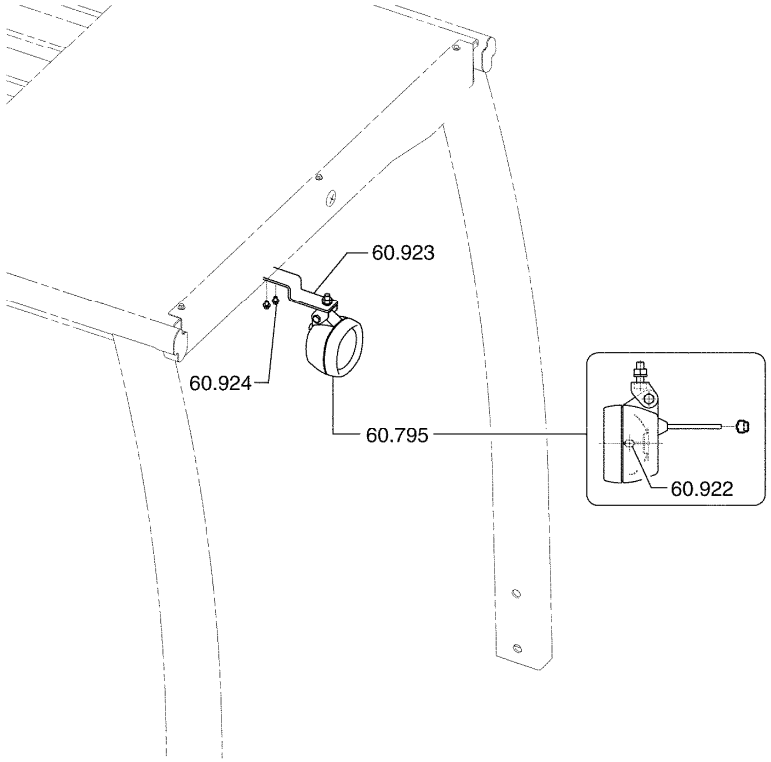


REAR WORK LIGHT INSTALLATION **13-298**

60.795 LIGHT, REAR WORK
라이트

60.922 BULB, REAR WORK LAMP
전구

60.923 BRACKET, REAR WORK LAMP MOUNTING
브라켓

60.924 FASTENER, REAR WORK LAMP MOUNTING
패스너

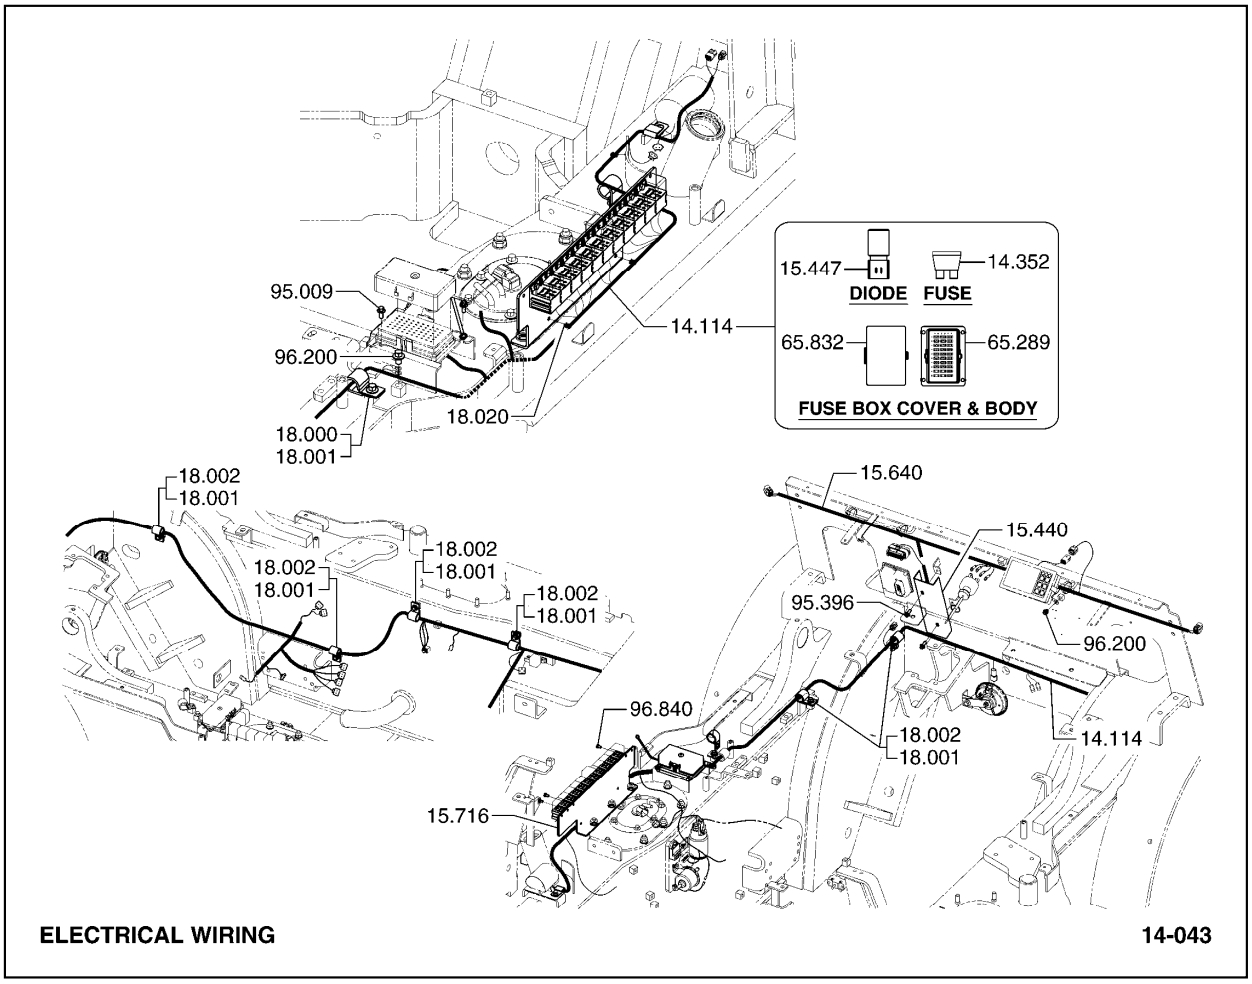

14.114 HARNESS, MACHINE WIRING
하네스

14.352 FUSE, CONTROL CIRCUIT
퓨즈

15.440 SHIELD, WIRING HARNESS PROTECTION
쉴드

15.447 DIODE, HARNESS
다이오드

15.640 WIRING HARNESS, MACHINE COWL
와이어하네스


15.716 BRACKET, RELAY MOUNTING
브라켓

18.000 CLIP, WIRING HARNESS
클립

18.001 FASTENER, WIRING HARNESS CLIP
패스너

18.002 CLIP, WIRING HARNESS
클립

18.020	CLIP, HARNESS 클립
65.289	BODY, FUSE BOX *
65.832	COVER, FUSE BOX 커버
95.009	FASTENER, FUSE BOX MOUNTING 패스너
95.396	FASTENER, WIRING HARNESS PROTECTION SHIELD 패스너
96.200	FASTENER, WIRING HARNESS GROUND 패스너
96.840	FASTENER, RELAY MOUNTING TO BRACKET 패스너

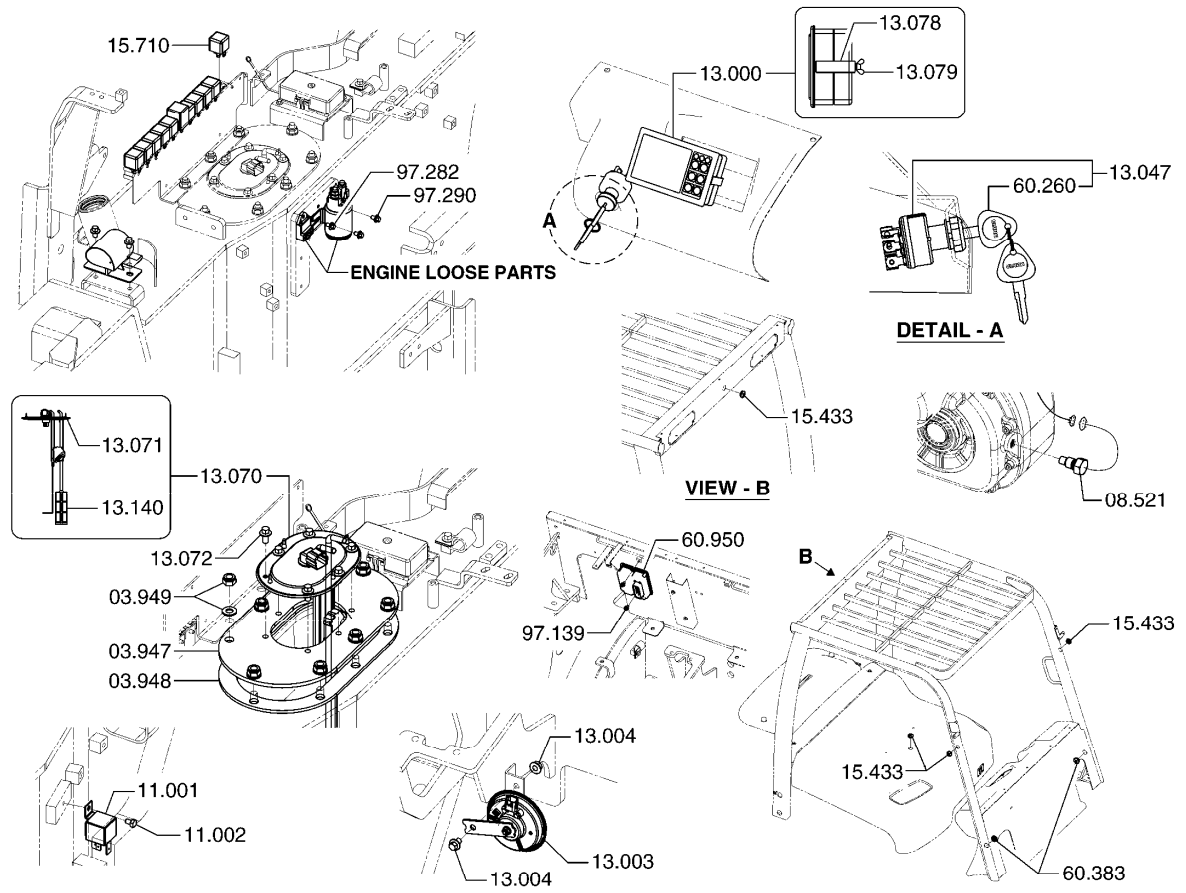

03.947 COVER, FUEL TANK
커버

03.948 GASKET, FUEL TANK COVER
가스켓

03.949 FASTENER, FUEL TANK COVER
*

08.521 SENSOR, TRANSMISSION SPEED TURBINE
센서

11.001 RELAY, STARTER
릴레이


11.002 FASTENER, STARTER RELAY
패스너

13.000 PANEL, INSTRUMENT CLUSTER
판넬

13.003 HORN
혼

13.004 FASTENER, HORN MOUNTING BRACKET
패스너

13.047	SWITCH, CIRCUIT LOCKING 스위치
13.070	SENDER, FUEL GAUGE 센더
13.071	GASKET, FUEL GAUGE SENDER 가스켓
13.072	FASTENER, FUEL GAUGE SENDER 패스너
13.078	CLAMP, INSTRUMENT CLUSTER TO INST PANEL 클램프
13.079	FASTENER, INSTRUMENT CLUSTER TO INST PANEL 패스너
13.140	STRAINER, FUEL GAGE SENDER *
15.433	GROMMET, CONTROL CIRCUIT WIRING HARNESS 그로멧
15.710	RELAY, ELECTRICAL 릴레이
60.260	KEY, CIRCUIT LOCKING SWITCH 키
60.383	GROMMET, CONTROL CIRCUIT WIRING HARNESS 그로멧
60.950	CONTROLLER, ELECTRIC SIGNAL 컨트롤러
97.139	FASTENER, ELECTRIC SIGNAL CONTROLLER 패스너
97.282	FASTENER, ENGINE PRE-HEATER CONTROLLER *
97.290	FASTENER, ENGINE PRE-HEATER RELAY *

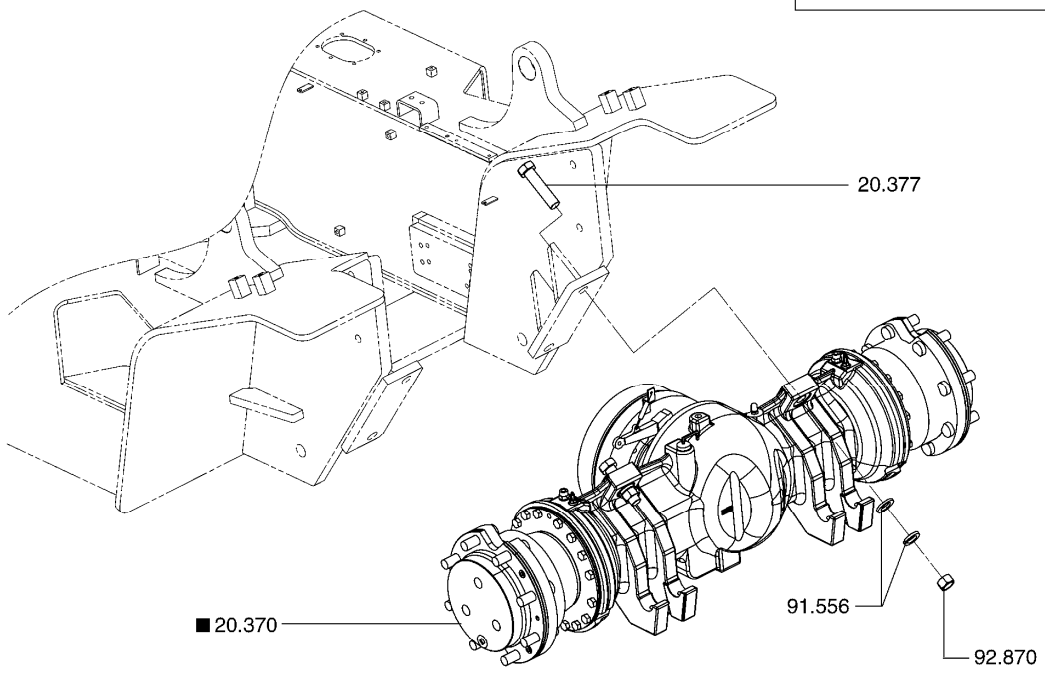


DRIVE AXLE MOUNTING **20-142**

20.370 AXLE ASSEMBLY, DRIVE
드라J遣袁謬


20.377 FASTENER, DRIVE AXLE TO FRAME
패스너

91.556 LOCKWASHER, DRIVE AXLE END
로크와셔

92.870 NUT, DRIVE AXLE MOUNTING FASTENER
너트

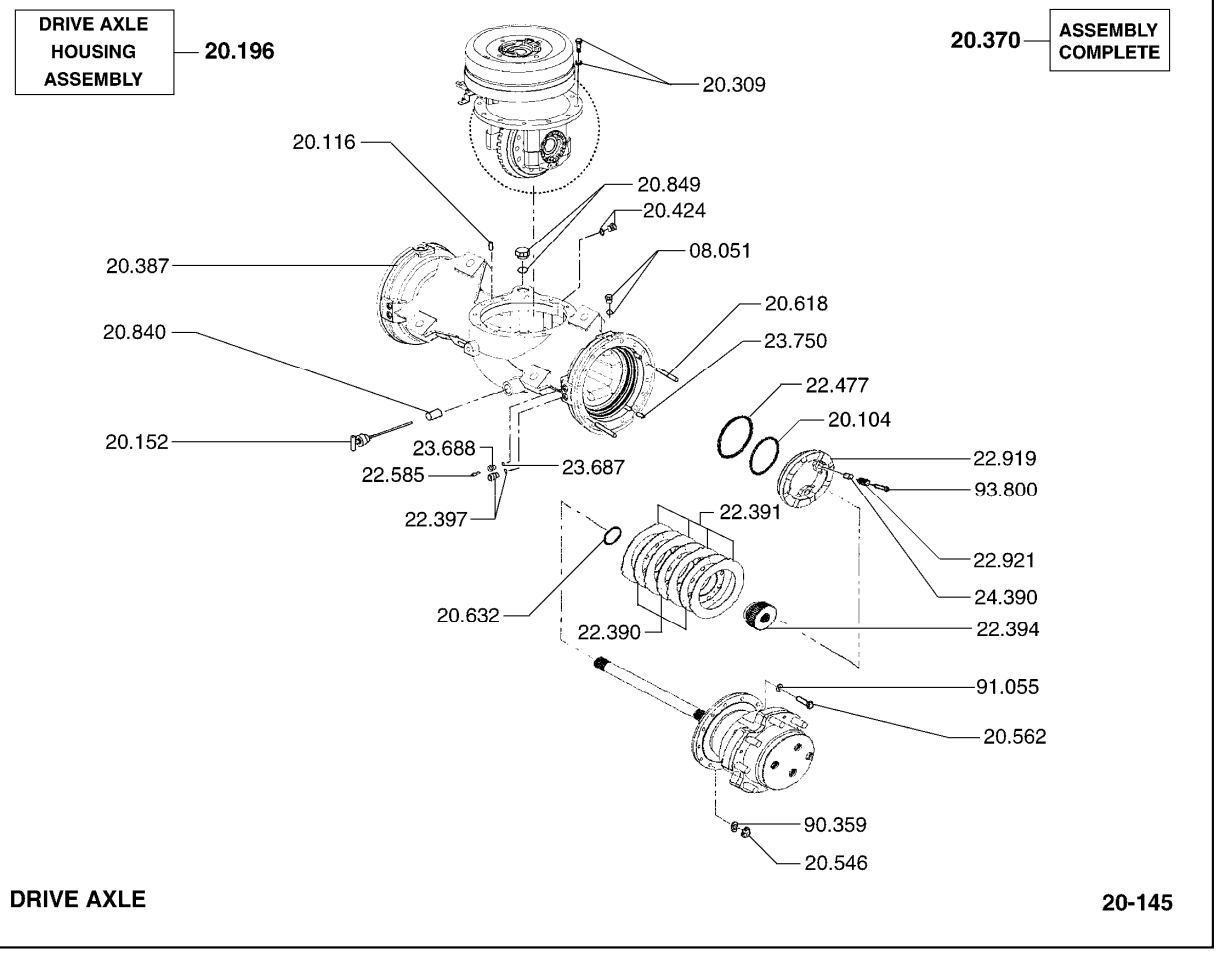

08.051	PLUG, BRAKE HOLE 플러그
20.104	RING, RETAINER AXLE END 링
20.116	PIN, DRIVE AXLE HOUSING & DIFF ALIGNMENT 핀
20.152	GAUGE, LEVEL GAUGE 게이지
20.196	HOUSING ASSEMBLY,DRIVE AXLE 하우징
20.309	FASTENER, DIFFERENTIAL HOUSING 패스너
20.370	AXLE ASSEMBLY, DRIVE 드라J遣裹膠
20.387	HOUSING, DIFFERENTIAL & AXLE 헬우징
20.424	PLUG, DIFFERENTIAL & AXLE HOUSING FILLER 플러그
20.546	FASTENER, DRIVE AXLE END 패스너
20.562	FASTENER, DRIVE AXLE END 패스너
20.618	FASTENER, DRIVE AXLE SPINDLE 패스너
20.632	RETAINER, DRIVE AXLE INTERNAL GEAR HUB 리테이너
20.840	LINE, DRIVE AXLE HOUSING LUB 라인
20.849	PLUG, DRIVE AXLE HOUSING 플러그
22.390	DISC, BRAKE - INNER 디스크
22.391	DISC, BRAKE - OUTER 디스크
22.394	FASTENER, BRAKE DISC HUB 패스너
22.397	PLUG, BRAKE DISC HOUSING 플러그
22.477	RING, BRAKE DRUM MOUNTING SPACER 링
22.585	ADAPTOR, BRAKE LINE BLEEDER 어댑터
22.919	PLATE, BRAKE DISC PISTON 플레이트
22.921	SPRING, BRAKE DISC PISTON 스프링
23.687	SEAL, AXLE ADAPTOR BLEEDER OPENING COVER 시일
23.688	FASTENER, BRAKE BLEEDER HOLE COVER 패스너
23.750	PIN, BRAKE ACTUATING LEVER PIVOT 핀
24.390	BUSHING, BRAKE DISC PISTON 부싱
90.359	LOCKWASHER, DRIVE AXLE END FASTENER 로크와셔
91.055	LOCKWASHER, DRIVE AXLE END FAST 로크와셔
93.800	FASTENER, BRAKE DISC HOUSING 패스너

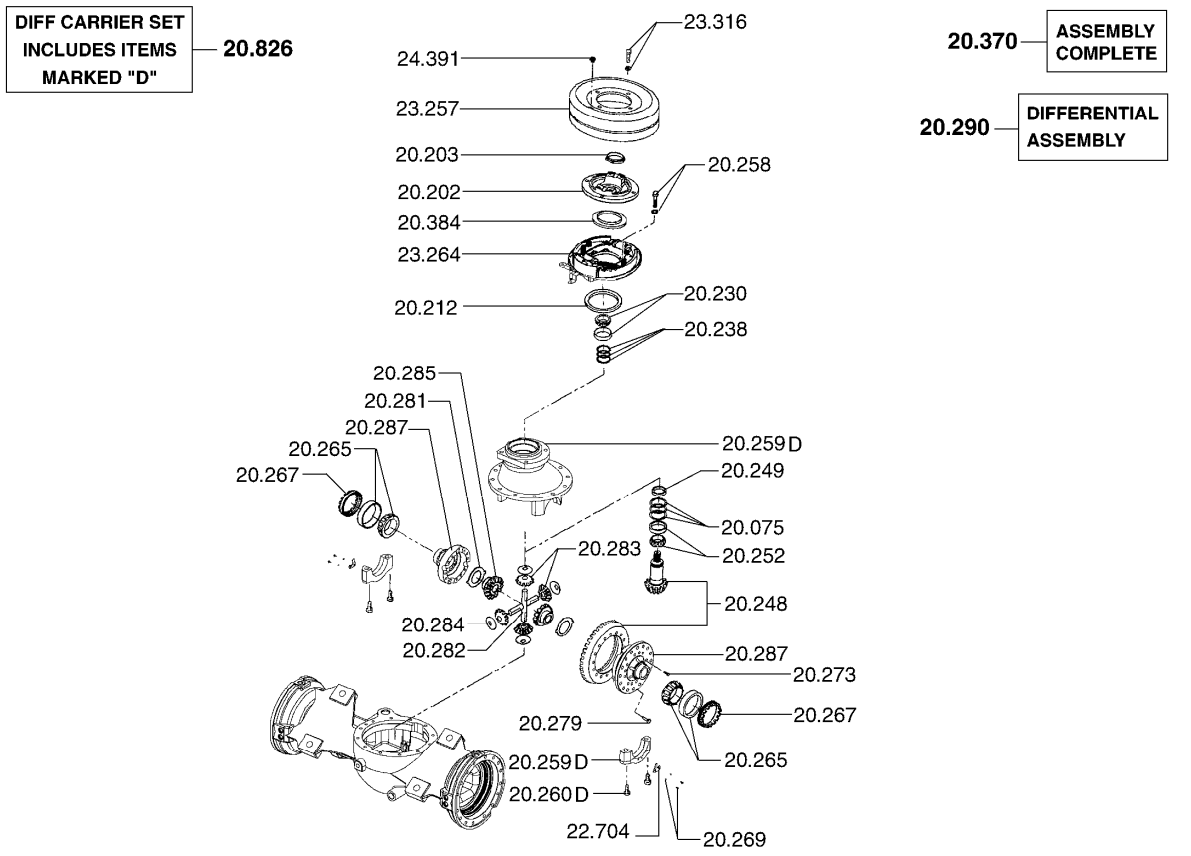

20.075 SHIM, DRIVE UNIT PINION BEARING
심

20.202 FLANGE, DIFFERENTIAL PINION COMPANION
플랜지

20.203 NUT, DIFFERENTIAL PINION COMPANION FLANGE
너트

20.212 SEAL, DIFFERENTIAL PINION OIL
시일

20.230 BEARING ASSEMBLY, DIFF PINION OUTER
베어링

20.238 SHIM KIT, DIFFERENTIAL PINION BEARING CAGE
심

20.248 RING GEAR & PINION SET, DIFFERENTIAL
링

20.249 RING, DIFFERENTIAL PINION INNER BRG LOC
링

20.252 BEARING, DIFFERENTIAL PINION INNER
베어링

20.258 FASTENER, DIFFERENTIAL BRG CARRIER HSG
패스너

20.259 CARRIER & CAP ASSEMBLY, DIFFERENTIAL
캐리어와캡

20.260 FASTENER, DIFFERENTIAL CARRIER CAP
패스너

20.265 CUP, DIFFERENTIAL BEARING
컵

20.267 NUT, DIFFERENTIAL BEARING ADJUSTING
너트

20.269 FASTENER, DIFF BEARING ADJUSTING NUT LOCK
패스너

20.273 FASTENER, DIFFERENTIAL CASE
패스너

20.279 FASTENER, DIFFERENTIAL CASE TO RING GEAR
패스너

20.281 FASTENER, DIFF SIDE PINION PIN
패스너

20.282 SPIDER, DIFFERENTIAL PINION
스파이더

20.283 GEAR, DIFFERENTIAL SIDE PINION
기어

20.284 WASHER, DIFF SIDE PINION GEAR THRUST
와셔

20.285 GEAR, DIFFERENTIAL SIDE
기어

20.287 CASE & GEAR ASSEMBLY, DIFFERENTIAL
케이스와기어

20.290 DIFFERENTIAL, CARRIER AND GEAR CASE ASSEMBLY
디퍼렌셜

20.370 AXLE ASSEMBLY, DRIVE
드라J遮哀謬

20.384 PLUG, DRIVE AXLE HOUSING
플러그

20.826 CARRIER, DRIVE AXLE HOUSING
캐리어


22.704 PLATE, DRIVE AXLE END HOUSING
플레이트

23.257 DRUM, PARKING BRAKE
드럼

23.264 BRAKE ASSEMBLY, PARKING
브레이크

23.316 FASTENER, BRAKE DRUM
패스너


24.391 PLUG, BRAKE DRUM
플러그

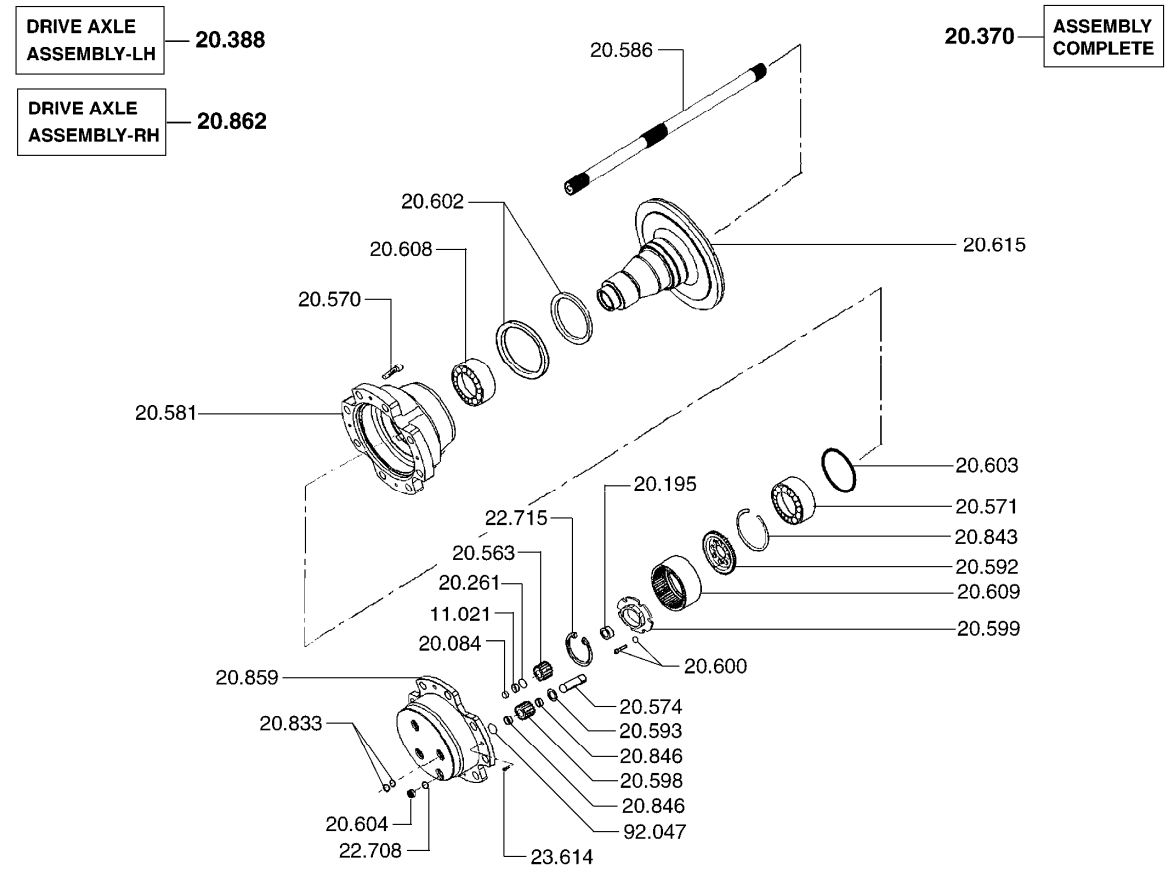

11.021	BUSHING, DRIVE END HOUSING 부싱
20.084	STOP, DRIVE AXLE 스톱
20.195	BUSHING, DRIVE END HOUSING 부싱
20.261	RETAINER, DIFF PINION OUTER BEARING 리테이너
20.370	AXLE ASSEMBLY, DRIVE 드라J遣衷謬
20.388	HOUSING, DRIVE AXLE (LH) 하우징
20.563	GEAR, DRIVE AXLE SUN 기어
20.570	FASTENER, DRIVE WHEEL MOUNTING 패스너
20.571	CONE, DRIVE AXLE HUB OUTER BEARING 콘
20.574	SHAFT, DRIVE AXLE PLANET PINION 샤프트
20.581	HUB ASSEMBLY, DRIVE AXLE 허브
20.586	SHAFT, DRIVE AXLE 샤프트
20.592	PLANET, DRIVE AXLE 플래닛
20.593	WASHER, PLANET PINION GEAR THRUST 와셔
20.598	GEAR, DRIVE AXLE PLANET PINION 기어
20.599	NUT, DRIVE AXLE HUB BEARING OUTER RETAINING 너트
20.600	LOCK, DRIVE AXLE HUB BEARING RETAINING NUT 로크
20.602	SEAL, DRIVE AXLE HUB INNER OIL 시일
20.603	SEAL, DRIVE AXLE HUB OUTER OIL 시일
20.604	PLUG, DRIVE AXLE HUB DRAIN 플러그
20.608	CONE, DRIVE AXLE HUB INNER BEARING 콘
20.609	HUB, DRIVE AXLE INTERNAL GEAR 허브
20.615	SPINDLE, DRIVE AXLE END 스핀들
20.833	SEAL, DRIVE AXLE RING GEAR SHAFT BEARING HOUSING 시일
20.843	LOCATOR, DRIVE AXLE OUTPUT GEAR BEARING 로케이터
20.846	BEARING, DRIVE AXLE PLANET PINION GEAR 베어링
20.859	HOUSING, DRIVE AXLE 하우징
20.862	HOUSING, DRIVE AXLE (RH) 하우징
22.708	SEAL, DRIVE AXLE HOUSING 시일
22.715	RETAINER, DRIVE AXLE ROTOR HOUSING 리테이너

23.614 FASTENER, DRIVE WHEEL BRK DRUM TO HUB (RH)
패스너

92.047 LOCKWASHER, CLUTCH PEDAL RETURN SPRING ANCHOR FA
로크와셔

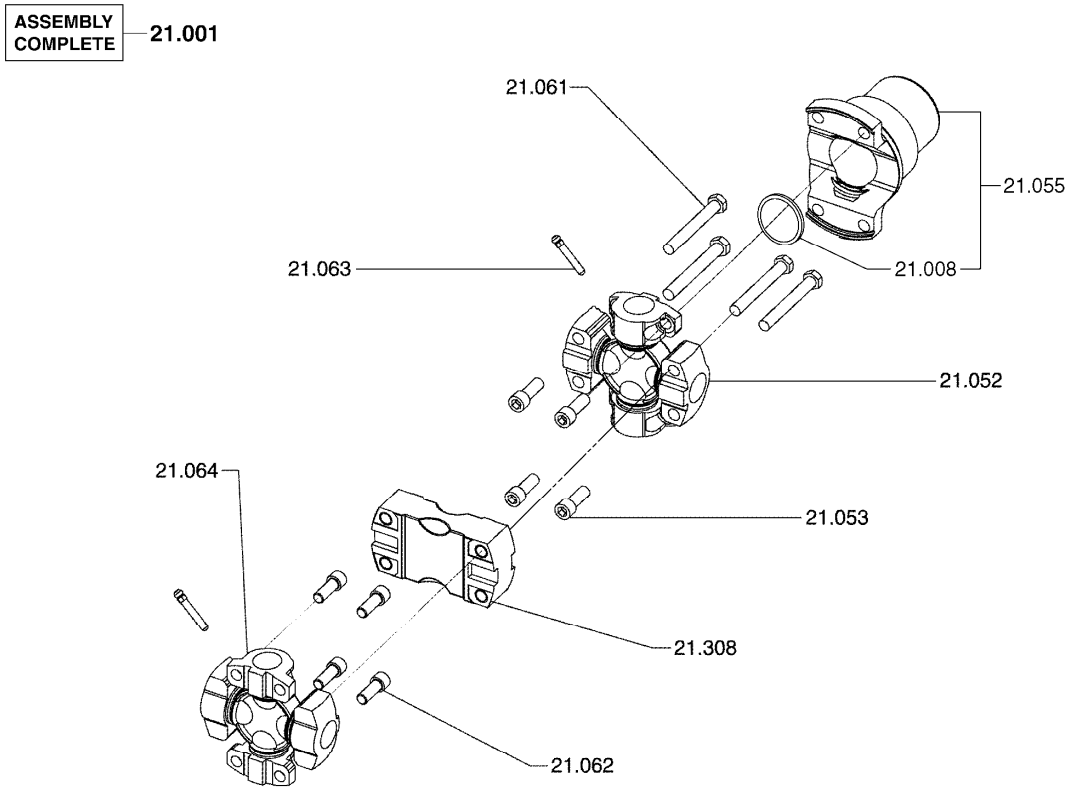

DRIVE SHAFT ASSY **21-000**

21.001 SHAFT ASSEMBLY, TRANSMISSION TO AXLE PROPELLER
샤프트

21.008 SEAL, PROPELLER SHAFT SLIP YOKE FELT
시일

21.052 REPAIR KIT, PROPELLER SHAFT CENTER CROSS
리페어킷

21.053 FASTENER, CROSS ASSEMBLY TO SLIP YOKE
패스너

21.055 YOKE CAP & WASHER ASSEMBLY, PROP SHAFT SLIP
요크캡와와셔


21.061 FASTENER, PROPELLER SHAFT
패스너

21.062 FASTENER, CROSS ASSEMBLY TO STUB SHAFT
패스너

21.063 FITTING-LUB, CROSS ASSEMBLY
피팅


21.064 REPAIR KIT, PROPELLER SHAFT CENTER CROSS
리페어킷

21.308 RETAINER, PROPELLER SHAFT CENTER CROSS
리테이너

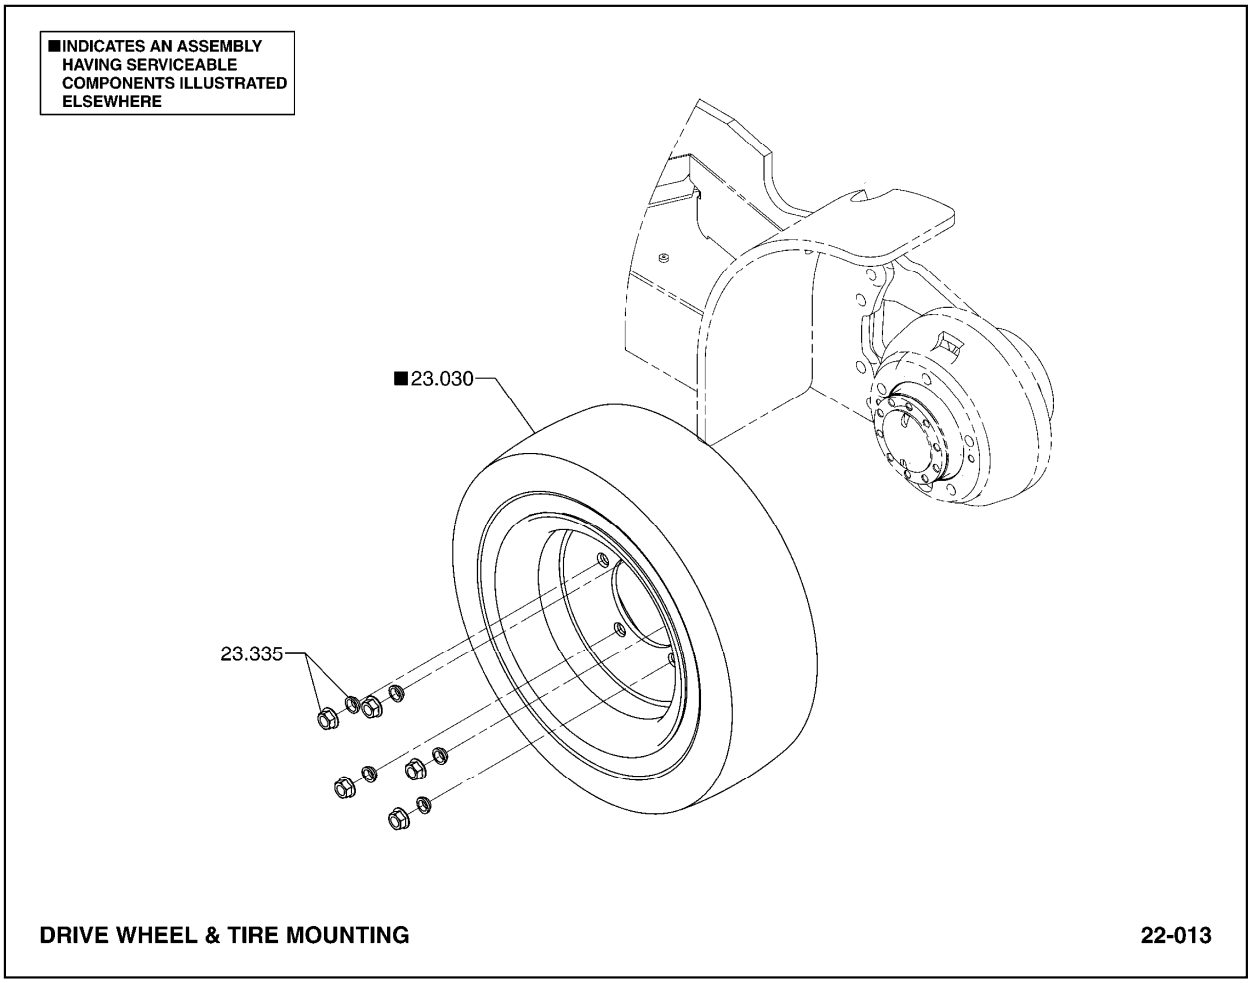


23.030 DRIVE WHEEL AND TIRE ASSEMBLY
드라이브휠타이어

23.335 FASTENER, DRIVE WHEEL
패스너

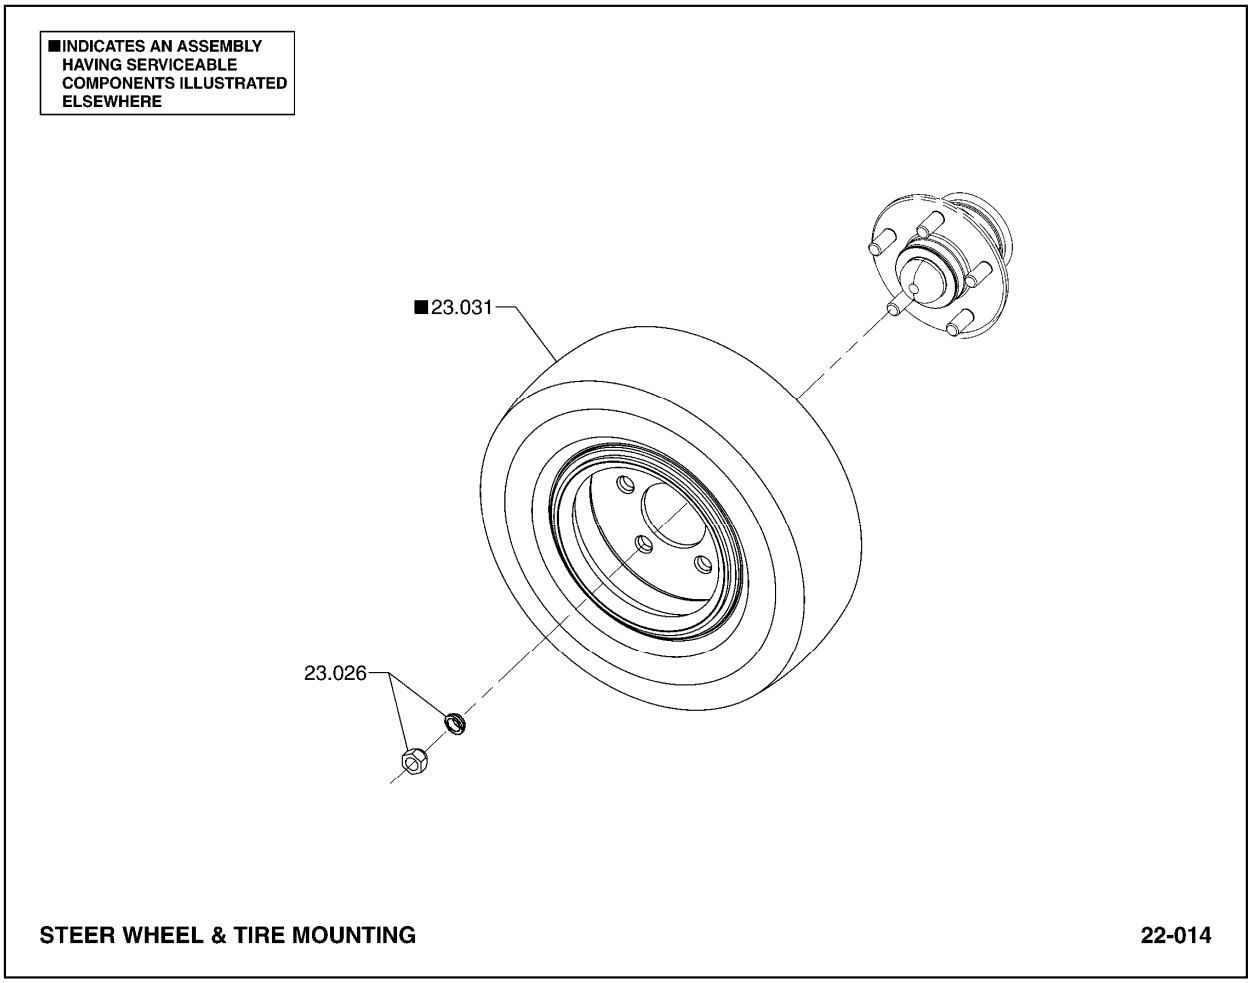


23.026 FASTENER, STEER WHEEL
패스너

23.031 STEER WHEEL AND TIRE ASSEMBLY
휠

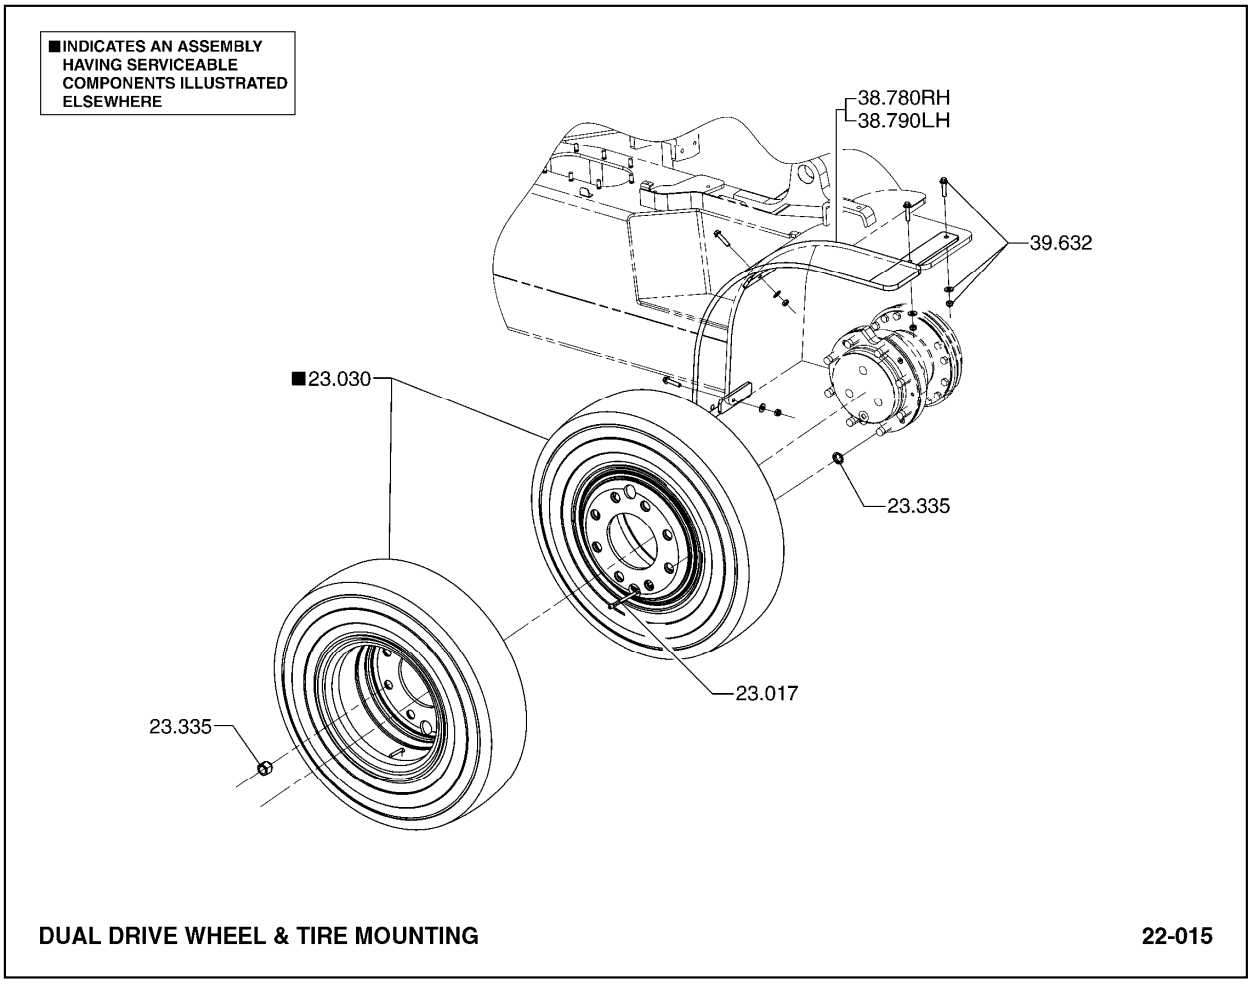


DUAL DRIVE WHEEL & TIRE MOUNTING **22-015**

23.017	EXTENSION, DRIVE WHEEL VALVE 익스텐션
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠타이어
23.335	FASTENER, DRIVE WHEEL 패스너
38.780	FENDER, RIGHT HAND FRONT 펜더
38.790	FENDER, LEFT HAND FRONT 펜더
39.632	FASTENER, FENDER SUPPORT 패스너

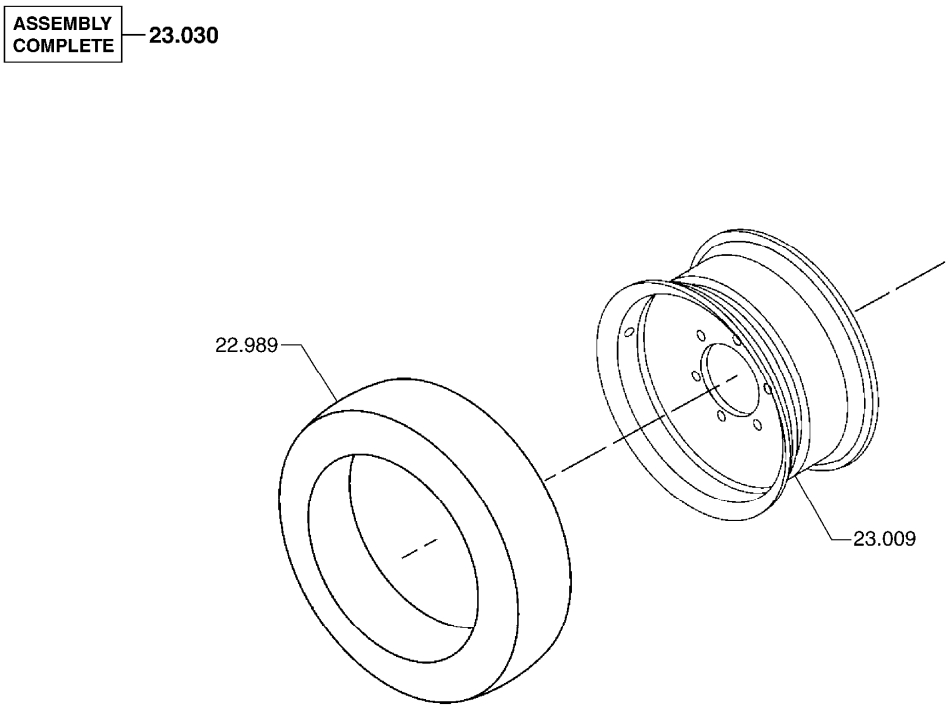

DRIVE WHEEL & TIRE (SOLID TYPE) **22-024**


22.989	TIRE ASSEMBLY, DRIVE *
23.009	RIM ASSEMBLY, DRIVE WHEEL 림
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠타이어

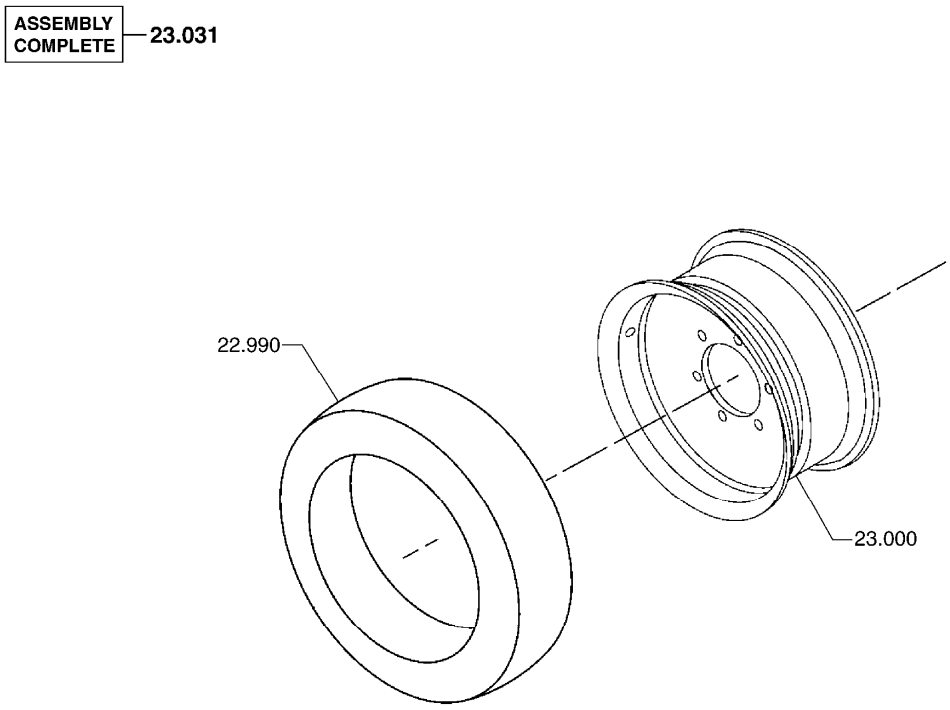

STEER WHEEL & TIRE (SOLID TYPE) **22-025**

22.990	TIRE ASSEMBLY, STEER *
23.000	RIM ASSEMBLY, STEER WHEEL 림
23.031	STEER WHEEL AND TIRE ASSEMBLY 휠

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

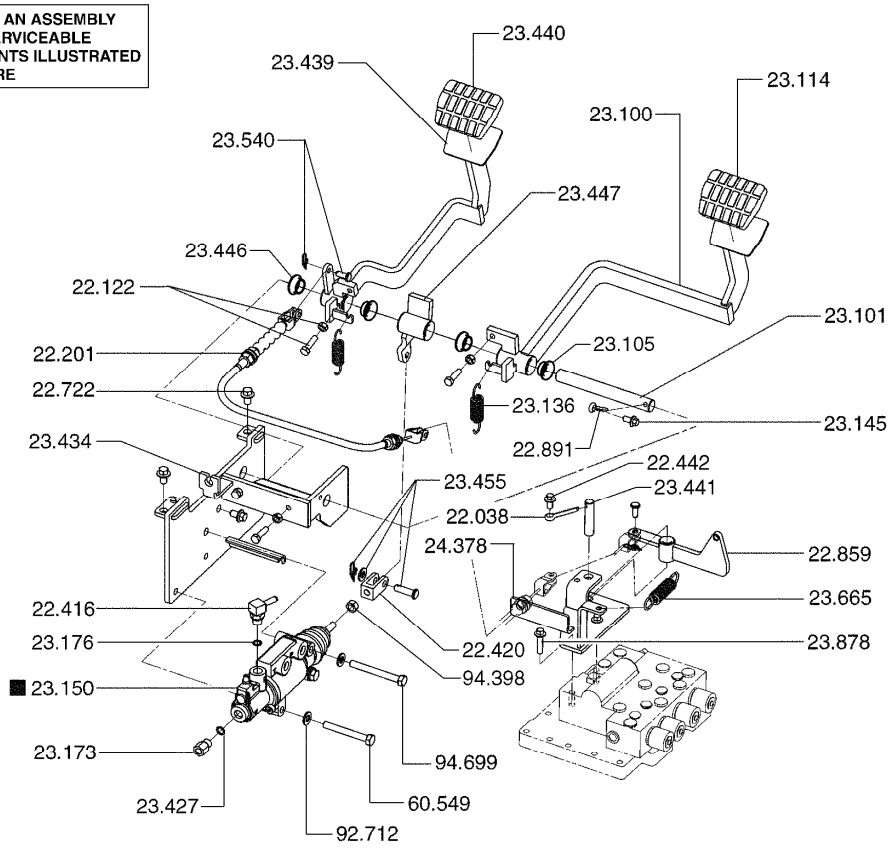

BRAKE & INCHING LINES **23-491**


22.038	PIN, INCHING PEDAL LINKAGE 핀
22.122	FASTENER, BRAKE PEDAL PIVOT RETAINER 패스너
22.201	CABLE, INCHING 케이블
22.416	FITTING, BRAKE MASTER CYLINDER INLET LINE 피팅
22.420	CLEVIS, MASTER CYLINDER PUSH ROD 클레비스
22.442	PAD, PARKING BRAKE PEDAL 패드
22.722	FASTENER, BRAKE MOUNTING PLATE 패스너
22.859	ARM, BRAKE MASTER CYLINDER ACTUATING ROD 암
22.891	PIN, BRAKE PEDAL ROD 핀
23.100	PEDAL, BRAKE 페달
23.101	SHAFT, BRAKE PEDAL 샤프트
23.105	BEARING, BRAKE PEDAL 베어링
23.114	PAD & FASTENER, BRAKE PEDAL 패드와패스너
23.136	SPRING, BRAKE PEDAL RETURN CONTINUED 스프링
23.145	FASTENER, BRAKE PEDAL SHAFT 패스너
23.150	CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE 실린더
23.173	FITTING, BRAKE MASTER CYLINDER OUTLET 피팅
23.176	GASKET, BRAKE MASTER CYLINDER OUTLET FTG BOLT 가스켓
23.427	SEAL, MASTER CYLINDER OUTLET HOUSING 시일
23.434	BRACKET, BRAKE PEDAL PIVOT 브라켓
23.439	PEDAL, INCHING 페달
23.440	PAD & FASTENER, INCHING PEDAL 패드와패스너
23.441	SHAFT, INCHING PEDAL 샤프트
23.446	BUSHING, INCHING PEDAL 부싱
23.447	LEVER, OUTBOARD INCHING 레버
23.455	FASTENER, INCHING LEVER ROD CLEVIS 패스너
23.540	FASTENER, BRAKE LINKAGE PIVOT ARM 패스너
23.665	SPRING, INCHING PEDAL RETURN 스프링
23.878	FASTENER, INCHING PEDAL PIVOT BRACKET 패스너
24.378	BRACKET, INCHING 브라켓

60.549 FASTENER, BRAKE VALVE
패스너

92.712 WASHER, BRAKE MASTER CYLINDER MOUNTING BRACKET F
와셔

94.398 NUT, BRAKE MASTER CYLINDER ACTUATING ROD FASTENE
너트

94.699 FASTENER, BRAKE MASTER CYLINDER SUPPORT BRACKET
패스너

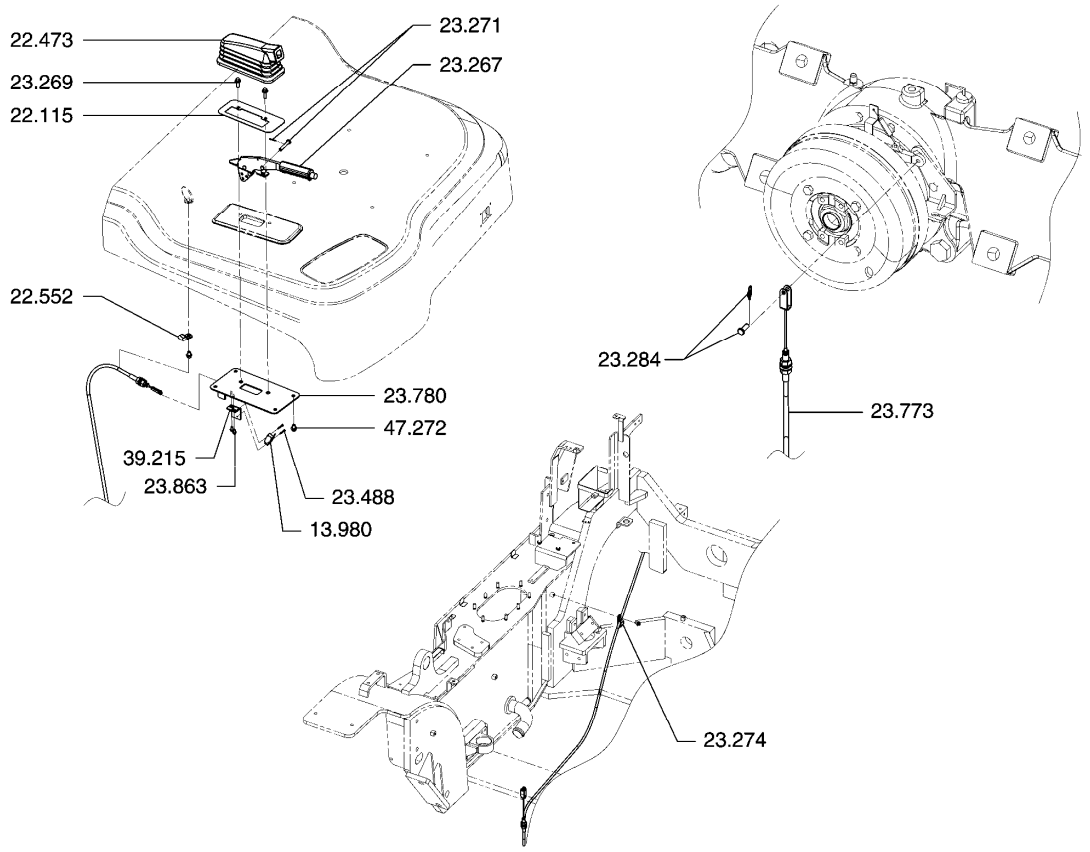

13.980 SWITCH, PARK/SAFETY INTERLOCK
스위치

22.115 SUPPORT, PARKING BRAKE LEVER MOUNTING BRACKET
서포트

22.473 COVER, HAND BRAKE LEVER
커버

22.552 CLAMP, PARKING BRAKE CABLE
클램프

23.267 LEVER, PARKING BRAKE
레버


23.269 FASTENER, PARKING BRAKE LEVER
패스너

23.271 FASTENER, PARKING BRAKE LEVER
패스너

23.274 CLAMP, PARKING BRAKE CABLE
클램프

23.284 FASTENER, PARKING BRAKE CABLE BRACKET
패스너

23.488	FASTENER, PARKING BRAKE SIDE PLATE 패스너
23.773	CABLE, PARKING BRAKE WHEEL END 케이블
23.780	SUPPORT, PARKING BRAKE LINKAGE 서포트
23.863	FASTENER, PARKING BRAKE LEVER BRACKET 패스너
39.215	FASTENER, GAS SPRING 패스너
47.272	BRACKET, CAB REAR GLASS GAS SPRING MOUNTING 브라켓

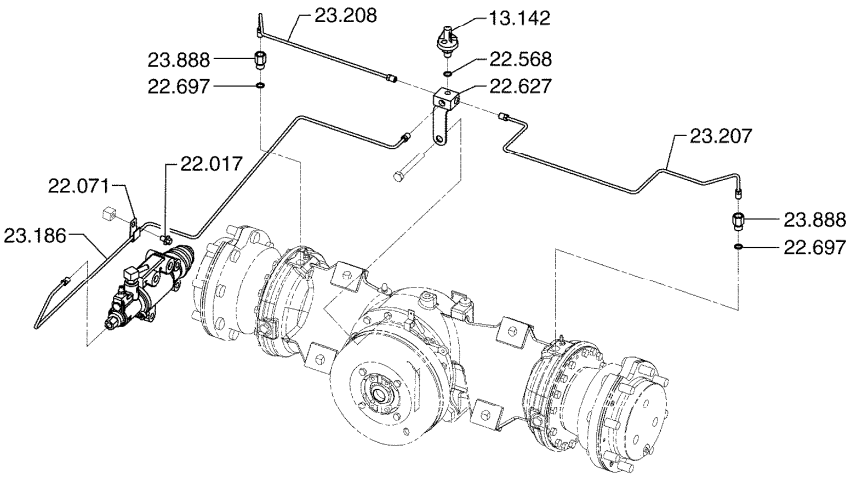

BRAKE LINES **23-538**

13.142 SWITCH, BRAKE INTERLOCK
스위치

22.017 FASTENER, BRAKE HOSE GUIDE
패스너

22.071 CLIP, BRAKE HOSE
클립

22.568 SEAL, BRAKE LINE TEE PLUG
시일

22.627 TEE, BRAKE LINE
티


22.697 SEAL, BRAKE LINE FITTING
시일

23.186 LINE, BRAKE MASTER CYLINDER OUTLET
라인

23.207 LINE, LH DRIVE WHEEL BRAKE CYLINDER TO TEE
라인

23.208 LINE, RH DRIVE WHEEL BRAKE CYLINDER TO TEE
라인

23.888 FITTING, BRAKE LINE
피팅

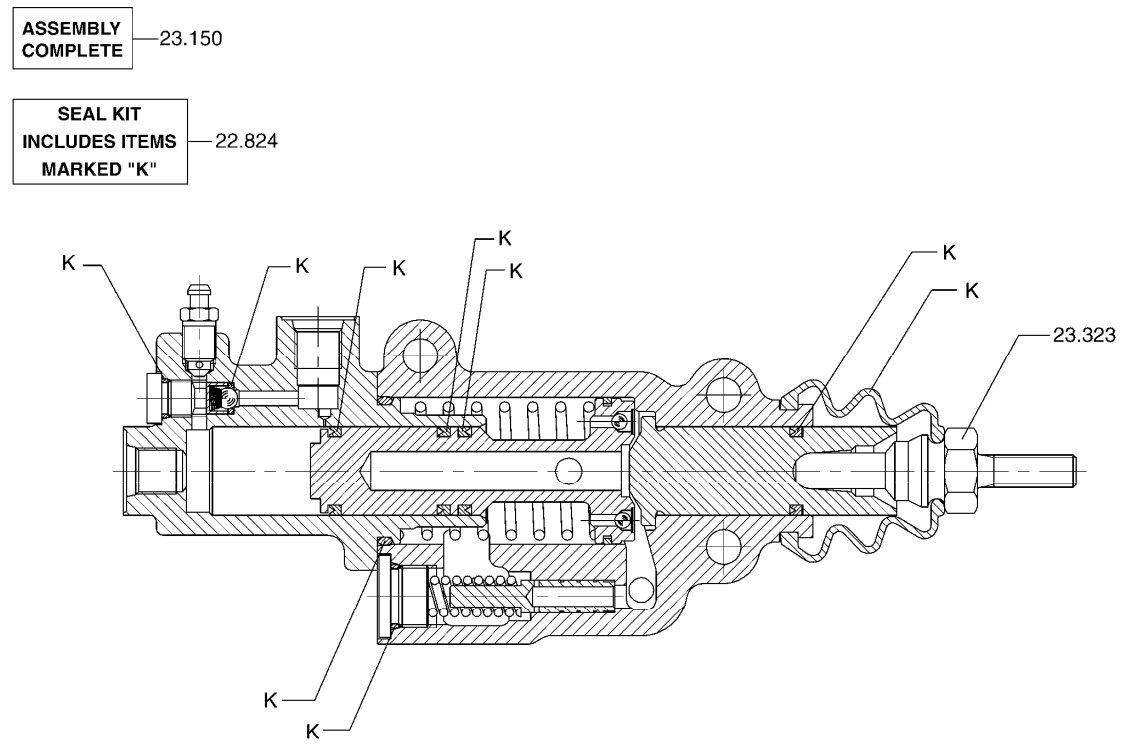


22.824 SEAL KIT, BRAKE ENERGIZER/MASTER CYL
시일킷

23.150 CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE
실린더

23.323 ROD, BRAKE ADJUSTING
로드


■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

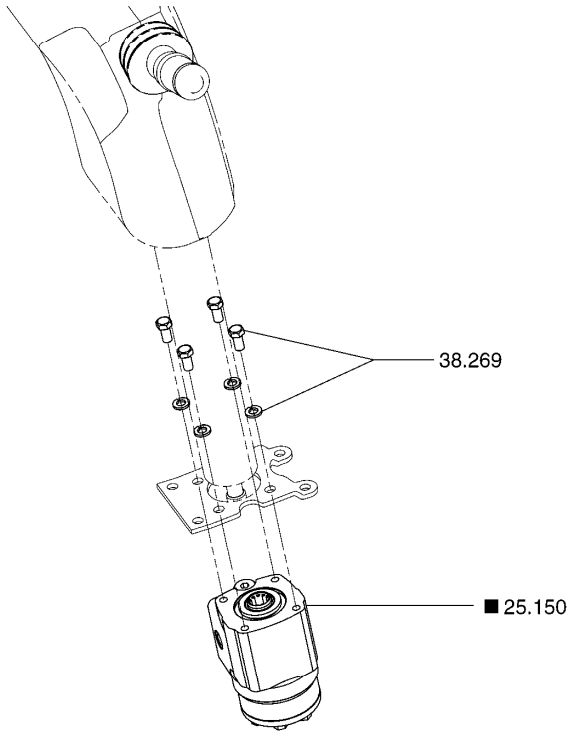

STEERING GEAR MOUNTING **25-058**

25.150 GEAR BOX ASSEMBLY, STEERING
기어박스


38.269 FASTENER, STEERING COLUMN SUPPORT
패스너

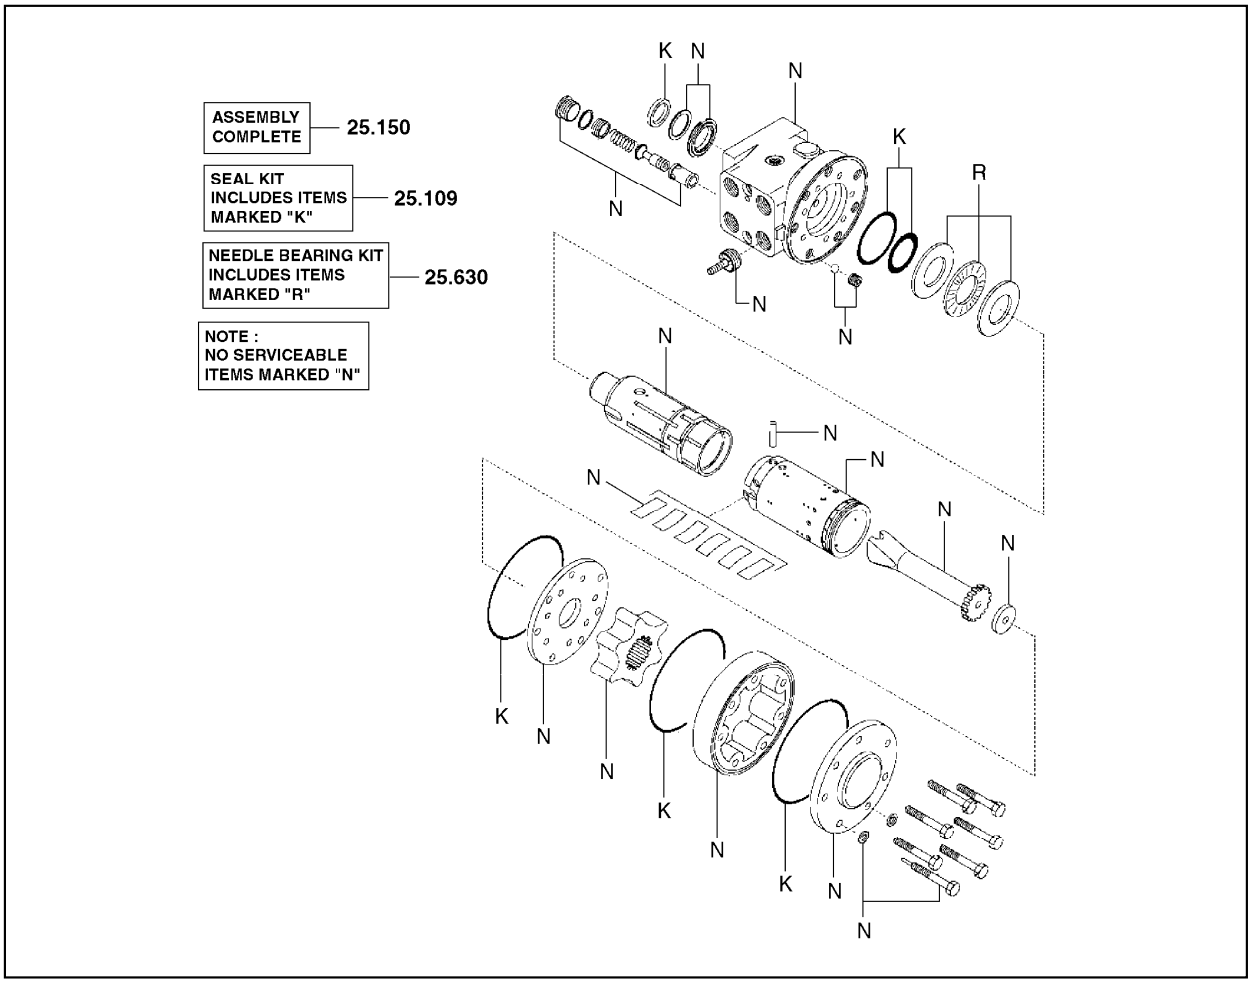

25.109 KIT, STEER GEAR SEAL
킷


25.150 GEAR BOX ASSEMBLY, STEERING
기어박스

25.630 REPAIR KIT, STEERING COLUMN
리페어킷

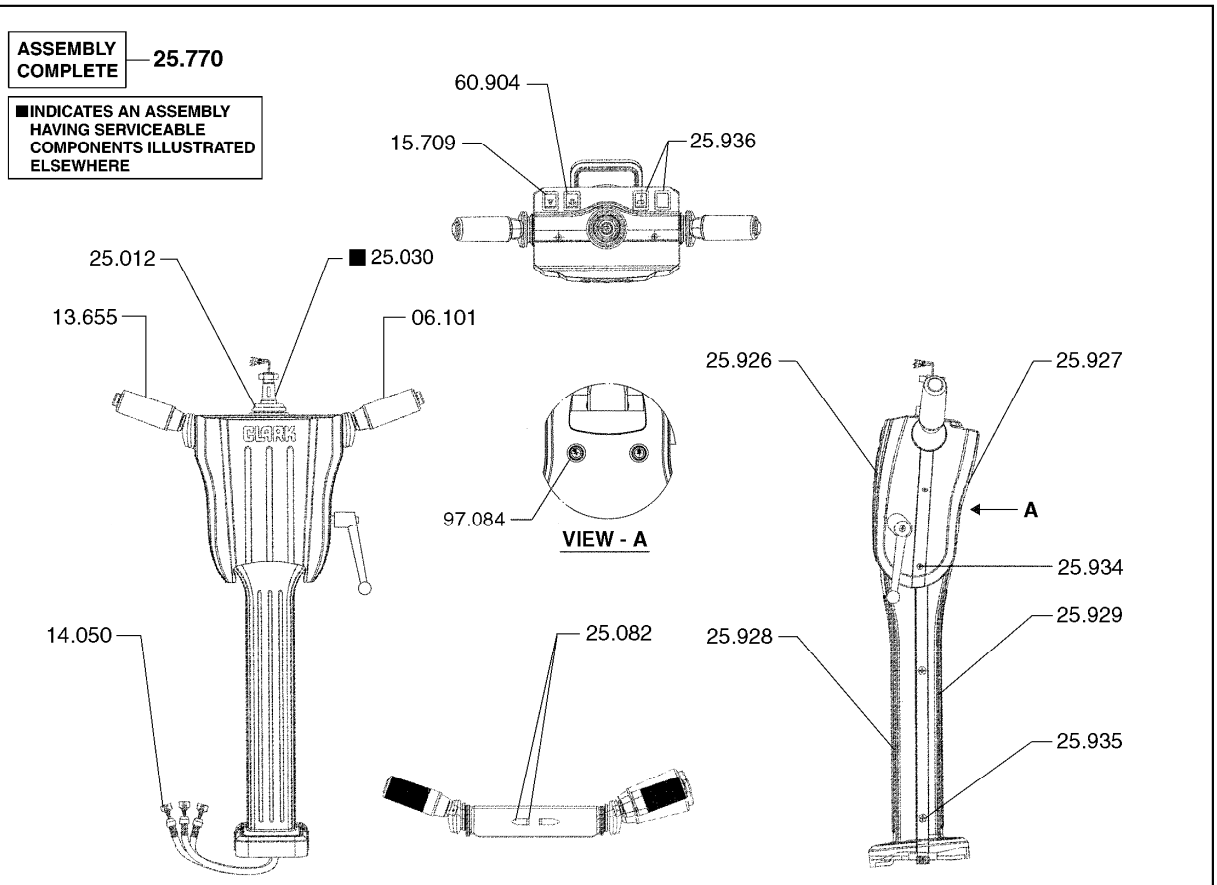

06.101	LEVER ASSEMBLY, FORWARD & REVERSE 레버
13.655	SWITCH, TURN INDICATOR 스위치
14.050	HARNESS, CONTROL CIRCUIT WIRING 하네스
15.709	SWITCH, EMERGENCY 스위치
25.012	CUSHION, STEERING COLUMN 쿠션
25.030	SHAFT ASSEMBLY, STEERING COLUMN 샤프트
25.082	FASTENER, LEVER MOUNTING BRACKET 패스너
25.770	SHAFT & COLUMN ASSY, POWER STEERING (TILT) 샤프트와컬럼
25.926	COVER, STEER COLUMN FRONT UPPER 커버

25.927	COVER, STEER COLUMN REAR UPPER 커버
25.928	COVER, STEER COLUMN FRONT LOWER 커버
25.929	COVER, STEER COLUMN REAR LOWER 커버
25.934	FASTENER, STEER COLUMN COVER 패스너
25.935	FASTENER, STEER COLUMN COVER 패스너
25.936	PLUG, STEER COLUMN SWITCH 플러그
60.904	SWITCH, STROBE LIGHT 스J穎
97.084	FASTENER, STEER COLUMN COVER 패스너

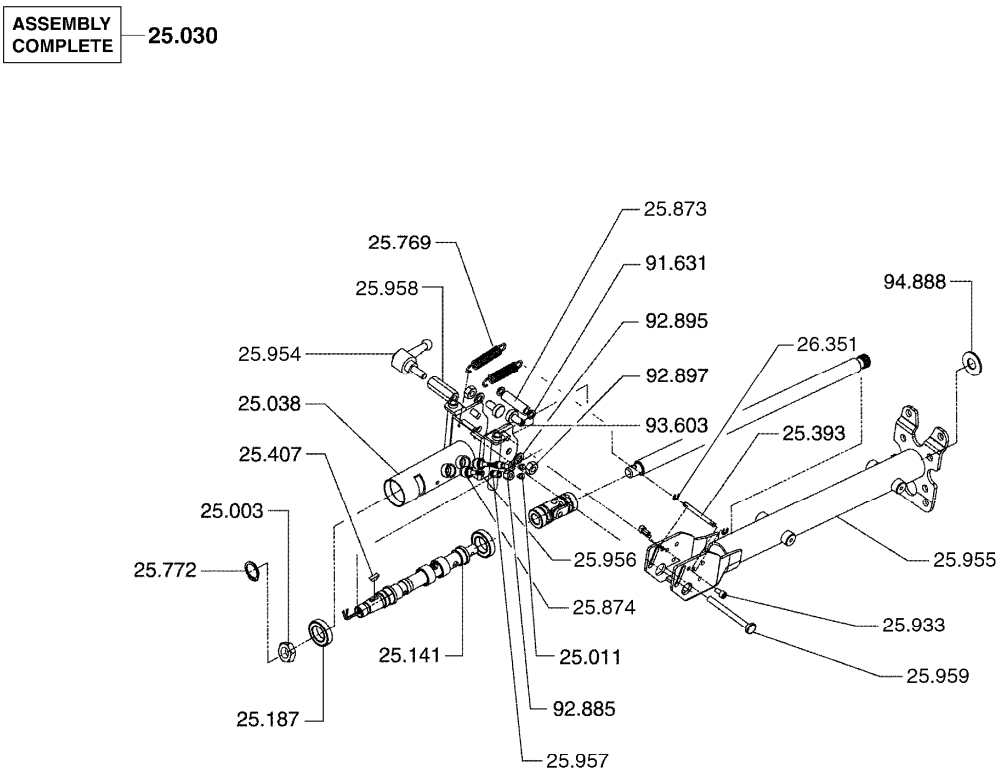

STEERING COLUMN SHAFT ASSEMBLY **25-291**

25.003 NUT, HANDWHEEL
너트

25.011 FASTENER, STEERING COLUMN
패스너

25.030 SHAFT ASSEMBLY, STEERING COLUMN
샤프트

25.038 HOUSING ASSEMBLY-CUP & BUSHING, STEERING
하우징

25.141 SHAFT, STEERING GEAR
샤프트

25.187 BEARING, STEER SHAFT
베어링


25.393 PIN, STEERING LINK (STEERING ARM)
핀

25.407 KEY, STEER COLUMN SHAFT COUPLING
키

25.769 SPRING, STEERING COLUMN TILTING (LOWER)
스프링


25.772	RETAINER, STEERING COLUMN SHAFT 리테이너
25.873	BUSHING, STEER COLUMN AXIAL 부싱
25.874	BUSHING, STEER COLUMN TELESCOPING 부싱
25.933	FASTENER, STEERING COLUMN 패스너
25.954	ARM, TILT STEERING COLUMN ADJUSTOR *
25.955	SUPPORT, STEERING COLUMN SHAFT *
25.956	BRUSH, STEERING COLUMN SHAFT *
25.957	BRUSH HOLDER, STEERING COLUMN SHAFT *
25.958	PIVOT, TILT STEERING COLUMN ADJUSTOR ARM *
25.959	PIN, TILT STEERING COLUMN ADJUSTOR ARM *
26.351	WASHER, STEERING ARM PIN 와셔
91.631	WASHER, STEERING COLUMN UPPER BRACKET FASTENER 와셔
92.885	NUT, STEERING COLUMN UPPER BRACKET FASTENER 너트
92.895	WASHER, STEERING COLUMN SUPPORT FASTENER 와셔
92.897	NUT, STEERING COLUMN SUPPORT FASTENER 너트
93.603	FASTENER, STEERING COLUMN TILTING SPRING BALL STUD 패스너
94.888	RETAINER, STEERING COLUMN ADJUSTOR 리테이너

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

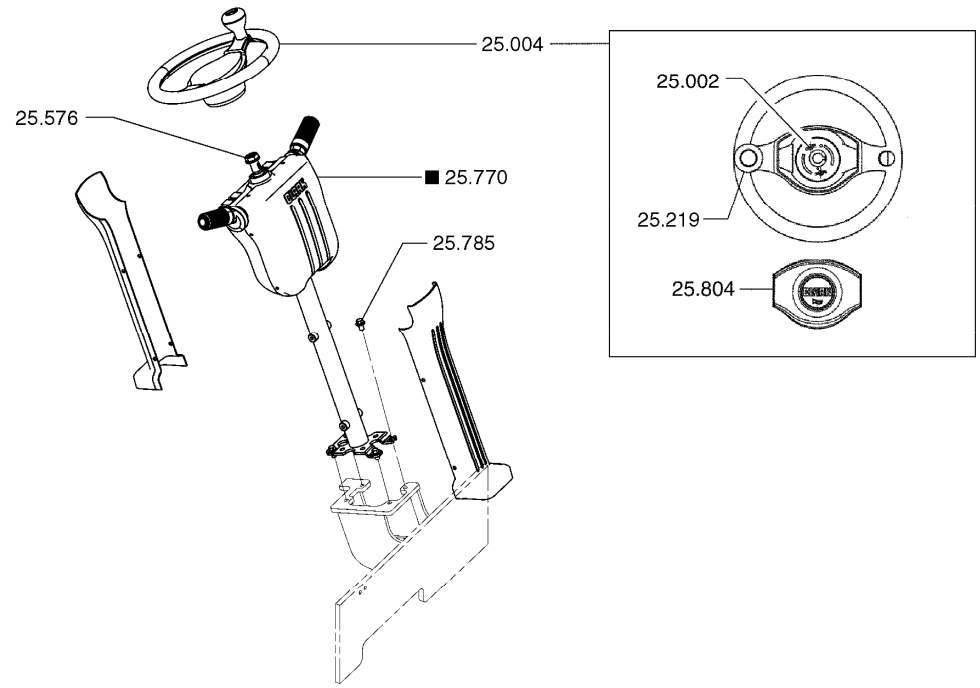

STEERING WHEEL & COLUMN MOUNTING **25-292**

25.002	HORN BUTTON KIT 혼버튼킷
25.004	HAND WHEEL, STEERING GEAR 핸드휠
25.219	KNOB, STEERING HAND WHEEL SPINNER 노브
25.576	SPACER, STEERING HAND WHEEL 스페이서
25.770	SHAFT & COLUMN ASSY, POWER STEERING (TILT) 샤프트와컬럼
25.785	FASTENER, TILT STEERING SHAFT & COLUMN ASSEMBLY 패스너
25.804	COVER, HANDLE CONTROL ASSEMBLY 커버

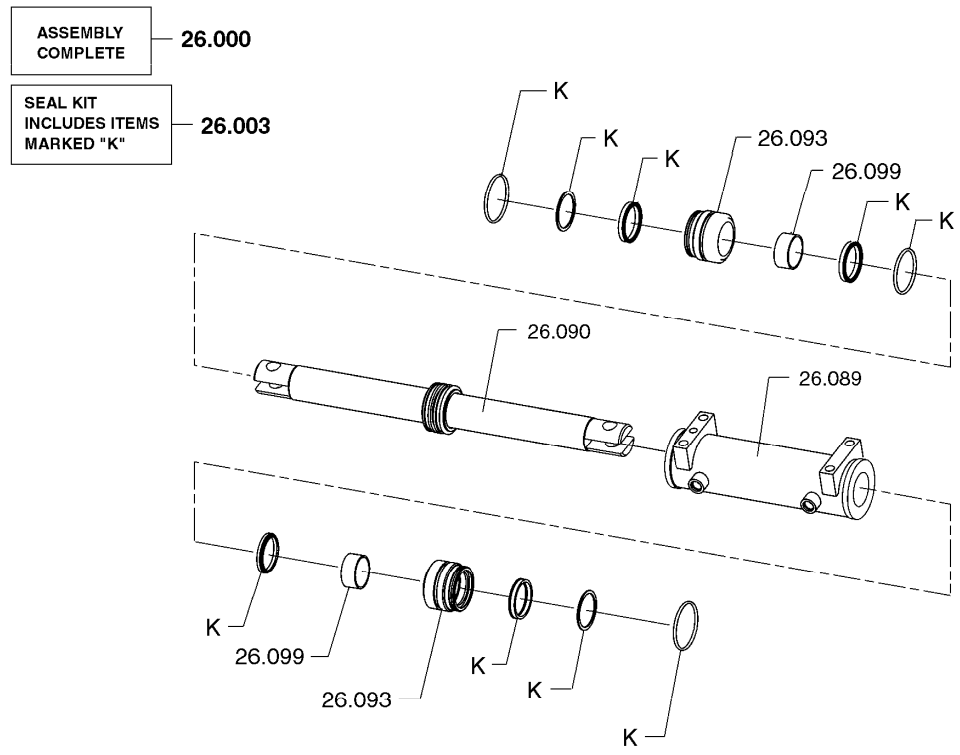

STEERING CYLINDER 26-253

26.000 CYLINDER ASSEMBLY, STEERING
실린더


26.003 SEAL KIT, PISTON ROD
시일킷

26.089 BARREL, STEERING CYLINDER
배럴

26.090 ROD & PISTON ASSEMBLY, STEERING CYLINDER
로드와피스톤

26.093 GLAND, STEERING CYLINDER
그랜드

26.099 BUSHING, STEERING CYLINDER GLAND
부싱

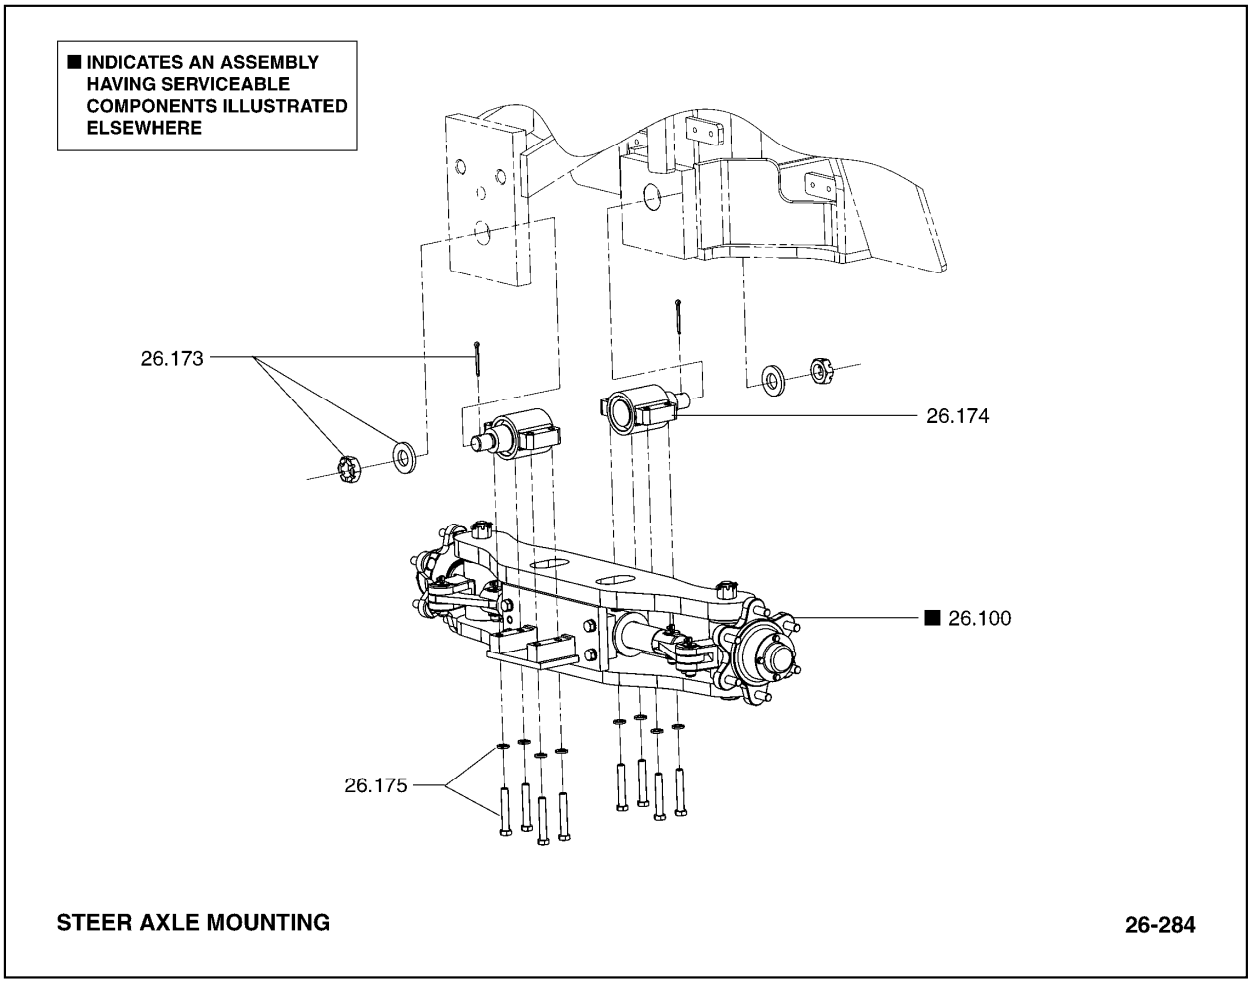


26.100 AXLE ASSEMBLY, STEERING
스티어액슬

26.173 FASTENER, SILENT BLOCK TO FRAME (FRONT)
패스너


26.174 SILENT BLOCK, AXLE MOUNTING (REAR)
사일런트블록

26.175 FASTENER, SILENT BLOCK TO FRAME (REAR)
패스너

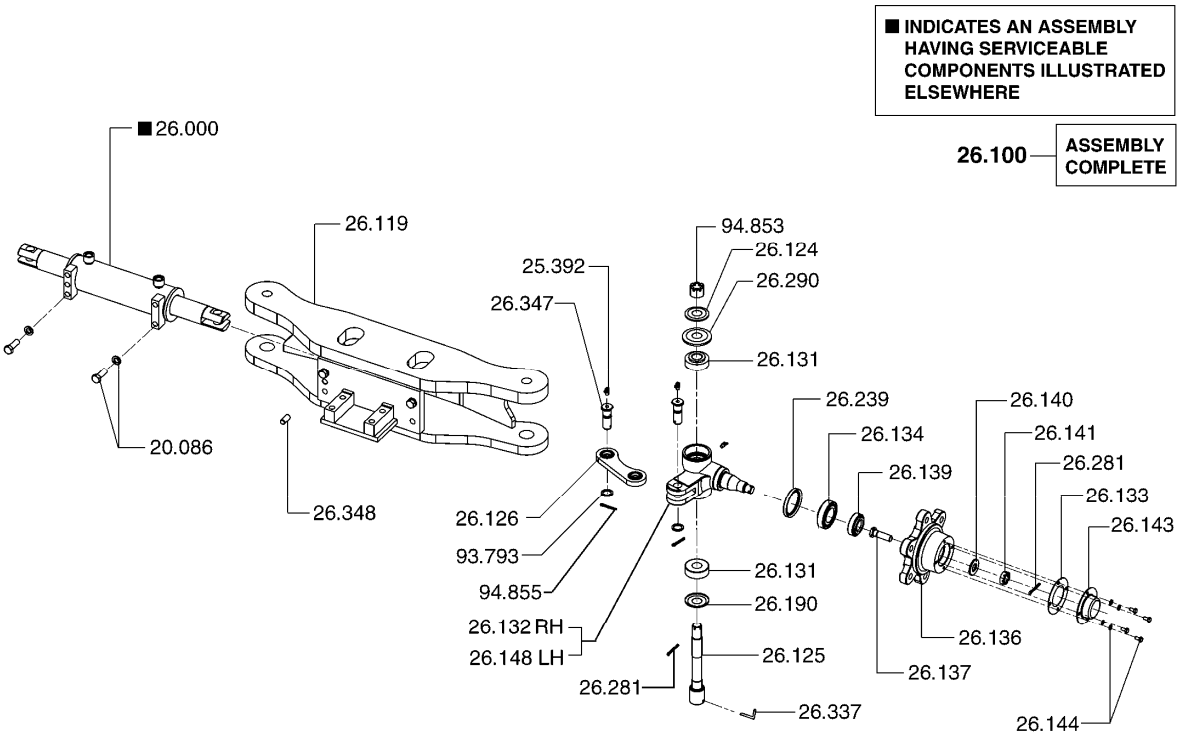

STEER AXLE ASSEMBLY **26-290**

20.086	SPACER, DRIVE AXLE SILENT BLOCK 스페이서
25.392	FITTING-LUB, STEERING ARM 피팅
26.000	CYLINDER ASSEMBLY, STEERING 실린더
26.100	AXLE ASSEMBLY, STEERING 스티어액슬
26.119	AXLE, STEER 액슬
26.124	SHIM, STEER AXLE KNUCKLE 심
26.125	PIN, STEER AXLE KNUCKLE 핀
26.126	ARM, RH STEERING 암
26.131	BEARING, STEER AXLE KNUCKLE PIN LOWER 베어링
26.132	KNUCKLE, STEER AXLE (RH) 너트
26.133	SEAL, STEER WHEEL HUB 시일
26.134	CONE, STEER WHEEL HUB BEARING (INNER) 콘
26.136	HUB & CUP, STEER WHEEL 허브와컵
26.137	FASTENER, STEER WHEEL 패스너
26.139	CONE, STEER WHEEL HUB BEARING (OUTER) 콘
26.140	WASHER, STEER WHEEL HUB BEARING THRUST 와셔
26.141	FASTENER, STEER WHEEL HUB 패스너
26.143	CAP, STEER WHEEL HUB 캡
26.144	FASTENER, STEER AXLE HUB CAP 패스너
26.148	KNUCKLE, STEER AXLE (LH) 너트
26.190	SEAL, STEER AXLE KNUCKLE OIL 시일
26.239	SEAL, STEER AXLE FORK COVER 시일
26.281	RETAINER, STEER AXLE HUB BRG KNUCKLE NUT 리테이너
26.290	RETAINER, STEER AXLE KNUCKLE PIN LOWER BEARING 리테이너
26.337	LOCATOR, STEER AXLE KNUCKLE PIN 로케이터
26.347	PIN, STEER ARM 핀
26.348	LOCATOR, STEER CYLINDER 로케이터
93.793	WASHER, STEERING ARM PIVOT FASTENER 와셔
94.853	FASTENER, STEER AXLE KNUCKLE PIN 패스너
94.855	RETAINER, STEERING ARM PIN 리테이너

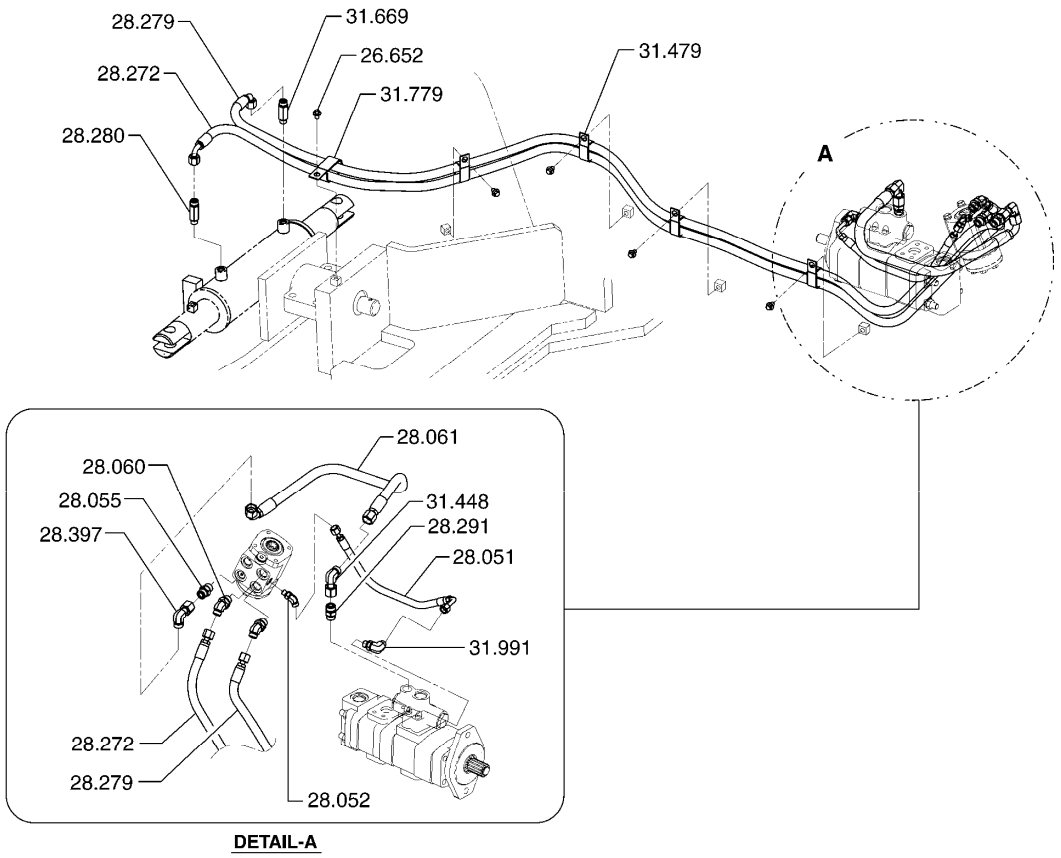

STEERING HYDRAULIC LINE **26-300**

26.652 FASTENER, POWER STEERING LINES CLAMP
패스너

28.051 LINE, STEERING GEAR
라인

28.052 FITTING, STEERING GEAR
피팅

28.055 FITTING, STEERING GEAR
피팅

28.060 FITTING, STEER VALVE CONTROL PORT
피팅


28.061 LINE, STEER VALVE CONTROL
라인

28.272 LINE, STEER CYLINDER INLET
라인

28.279 LINE, STEER CYLINDER INLET
라인

28.280 FITTING, STEER CYLINDER
피팅

28.291	FITTING, PUMP OUTLET 피팅
28.397	FITTING, STEERING GEAR LINE 피팅
31.448	FITTING, PUMP OUTLET LINE 피팅
31.479	CLAMP, STEERING LINES 클램프
31.669	FITTING, STEERING CYLINDER ROD PORT 피팅
31.779	CLAMP, POWER STEERING LINES 클램프
31.991	FITTING, PUMP INLET LINE 피팅

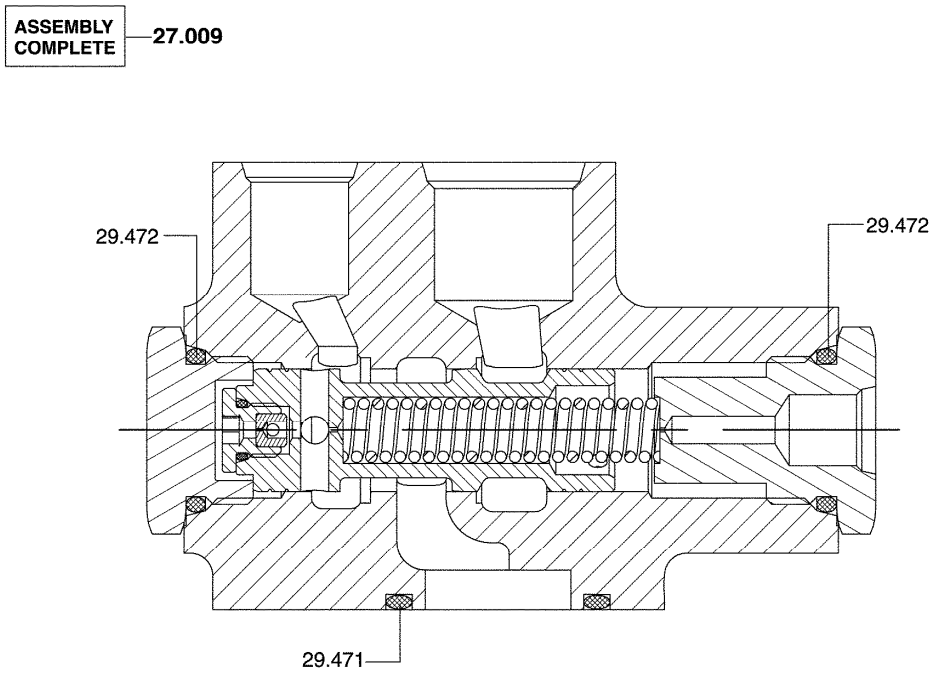


PRIORITY VALVE ASSEMBLY **27-000**

27.009 VALVE ASSEMBLY, HYDRAULIC PRIORITY
벨브


29.471 SEAL, PRIORITY VALVE FITTING
시일

29.472 SEAL, PRIORITY VALVE FITTING
시일

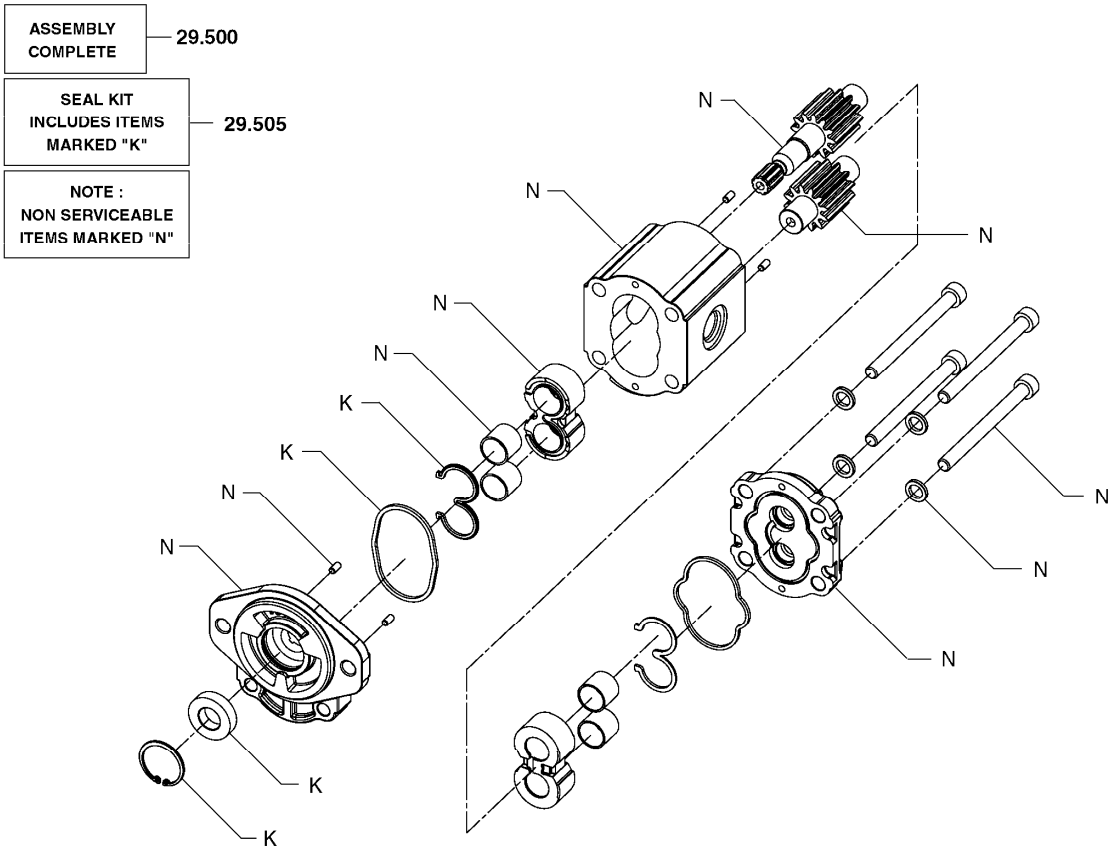

29.500 PUMP ASSEMBLY, AUXILIARY HYDRAULIC
펌프

29.505 GASKET & SEAL KIT, AUXILIARY PUMP
가스켓과시일

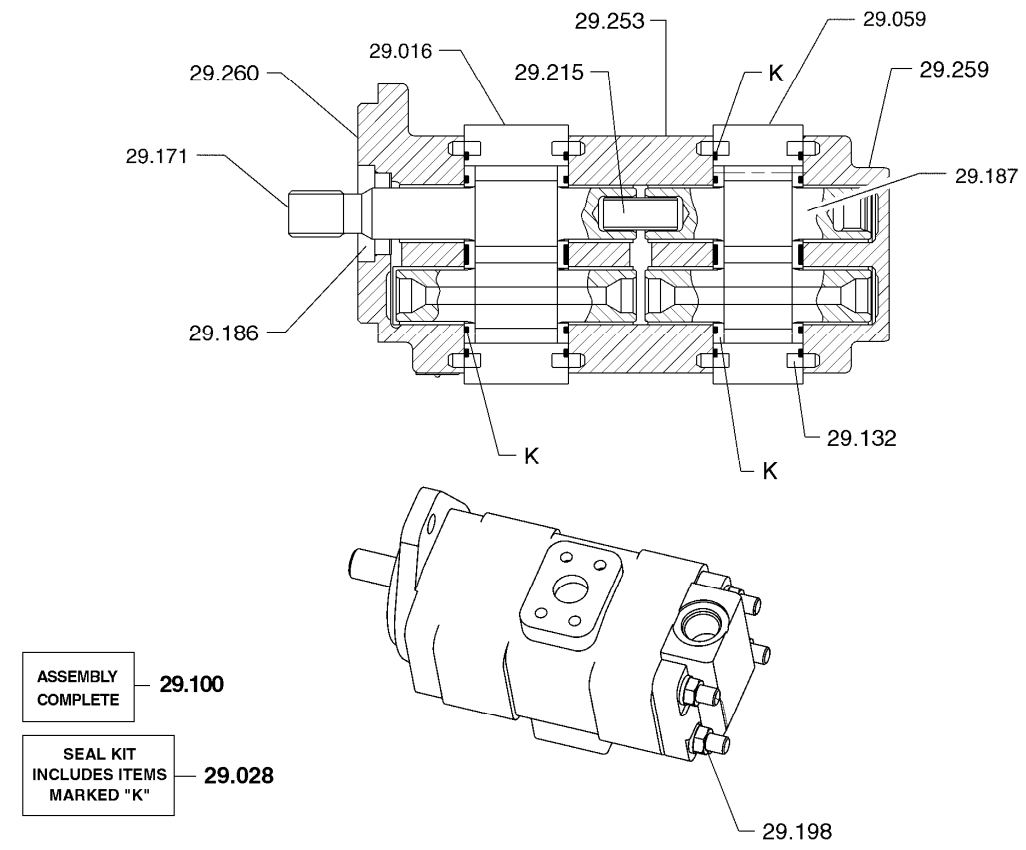

HYDRAULIC PUMP 29-243

29.016 VALVE, OIL FILTER CHECK
밸브

29.028 SEAL KIT, HYDRAULIC UNIT PUMP
시일킷

29.059 COVER, HYDRAULIC PUMP END
커버

29.100 PUMP ASSEMBLY, HYDRAULIC
펌프

29.132 PIN, PUMP RING LOCATING
핀

29.171 GEAR, PUMP DRIVE
기어

29.186 SEAL, PUMP SHAFT
시일

29.187 GEAR, PUMP IDLER
기어


29.198 FASTENER, PUMP HOUSING
패스너

29.215 SHAFT, PUMP
샤프트

29.253 RING, PUMP GEAR (SHAFT END)
링

29.259 COVER ASSEMBLY, PUMP (OUTLET)
커버

29.260 COVER ASSEMBLY, PUMP (SHAFT END)
커버

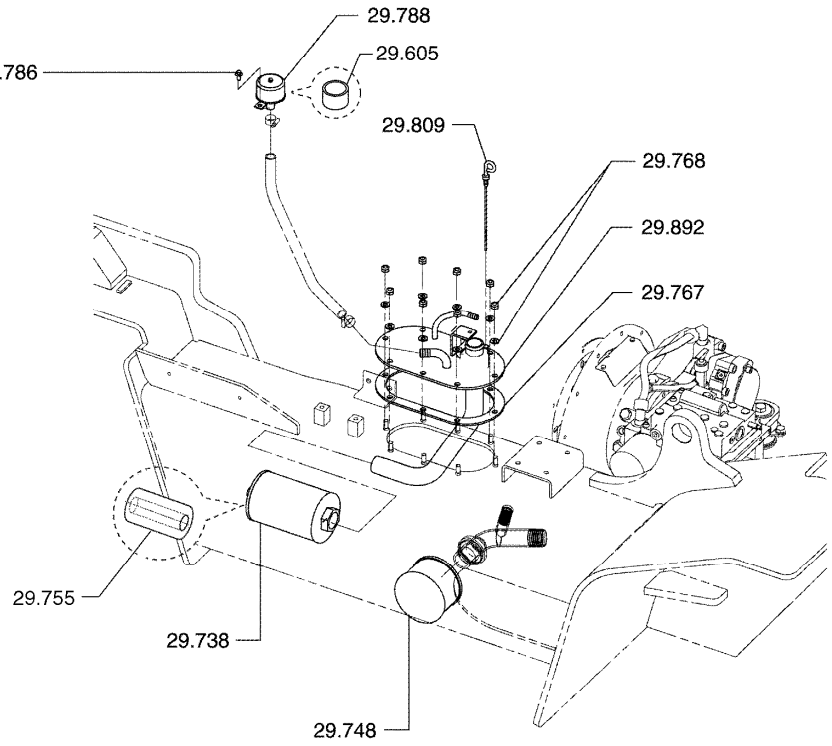

HYD TANK & COMPONENTS MOUNTING **29-278**

29.605 FILTER, AIR BREATHER
필터

29.738 FILTER ASSEMBLY, HYDRAULIC SUMP
필터

29.748 STRAINER, HYDRAULIC
스트레이너

29.755 SCREEN, HYDRAULIC SUMP FILTER
스크린

29.767 SEAL, SUMP TANK COVER
시일


29.768 FASTENER, SUMP TANK COVER
패스너

29.786 FASTENER, SUMP BREATHER
패스너

29.788 BREATHER, SUMP
브리더


29.809 DIPSTICK, SUMP LEVEL
딥스틱

29.892 COVER, HYDRAULIC SUMP
커버

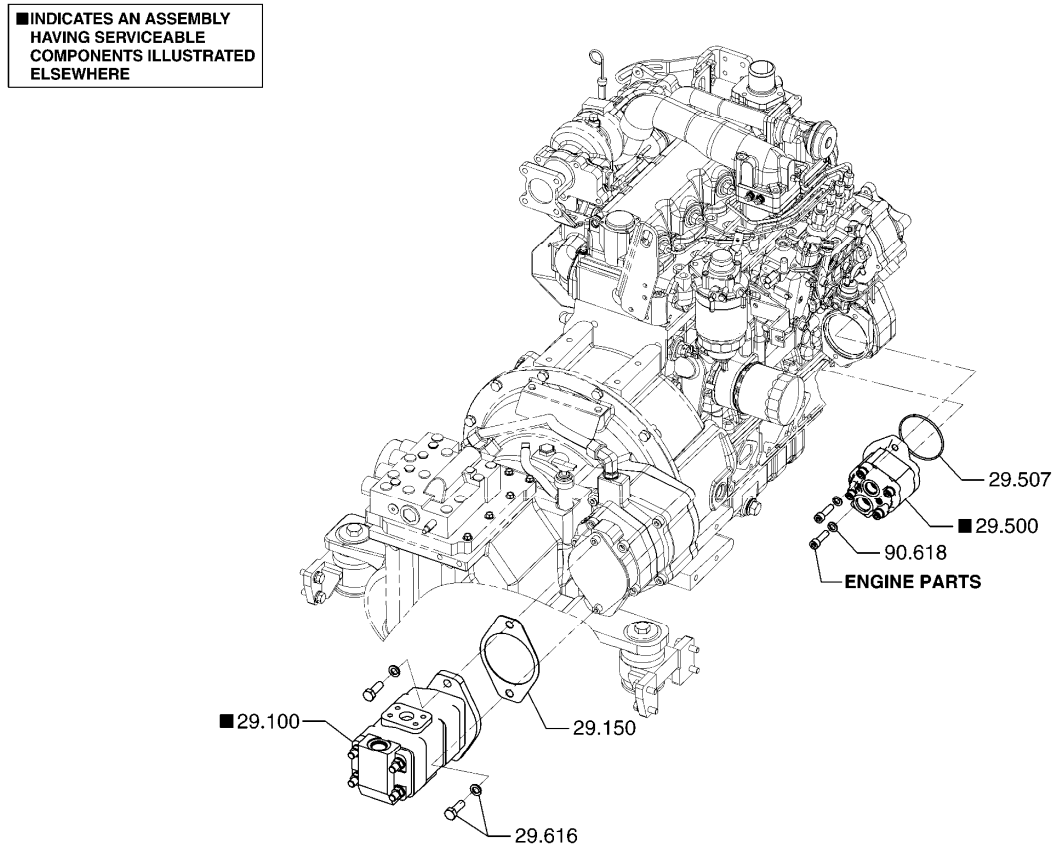

HYDRAULIC PUMP MOUNTING **29-293**

29.100	PUMP ASSEMBLY, HYDRAULIC 펌프
29.150	GASKET, HYDRAULIC PUMP MOUNTING 가스켓
29.500	PUMP ASSEMBLY, AUXILIARY HYDRAULIC 펌프
29.507	GASKET, AUXILIARY PUMP MOUNTING 가스켓
29.616	FASTENER, HYDRAULIC PUMP MOUNTING *
90.618	LOCKWASHER, AUXILIARY PUMP FASTENER 로크와셔

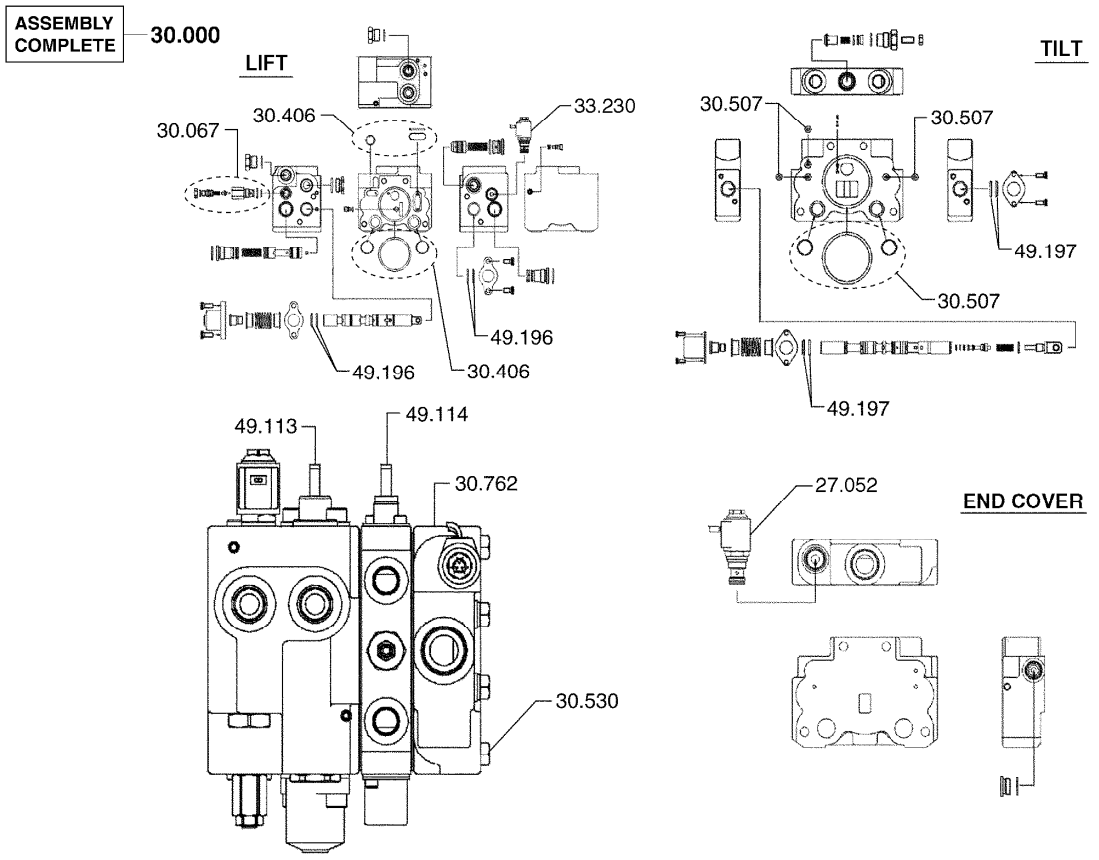

HYDRAULIC CONTROL VALVE - 2 SPOOL **30-363**

27.052 VALVE ASSEMBLY, AUXILIARY SOLENOID
벨브

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.067 RELIEF VALVE KIT, VALVE INLET SECTION
릴리프밸브

30.406 SEAL KIT, HYDRAULIC VALVE (LIFT)
시일킷

30.507 SEAL KIT, HYDRAULIC VALVE (TILT)
시일킷

30.530 FASTENER, VALVE THRU
패스너

30.762 END COVER, HYDRAULIC VALVE
엔드커버


33.230 VALVE ASSEMBLY, LIFT SOLENOID
벨브

49.113 LIFT SECTION, HYDRAULIC VALVE
리프트섹션

49.114 TILT SECTION, HYDRAULIC VALVE
틸트섹션

49.196 SPOOL SEAL KIT, LIFT SECTION
스풀실킷

49.197 SPOOL SEAL KIT, TILT SECTION
스풀실킷

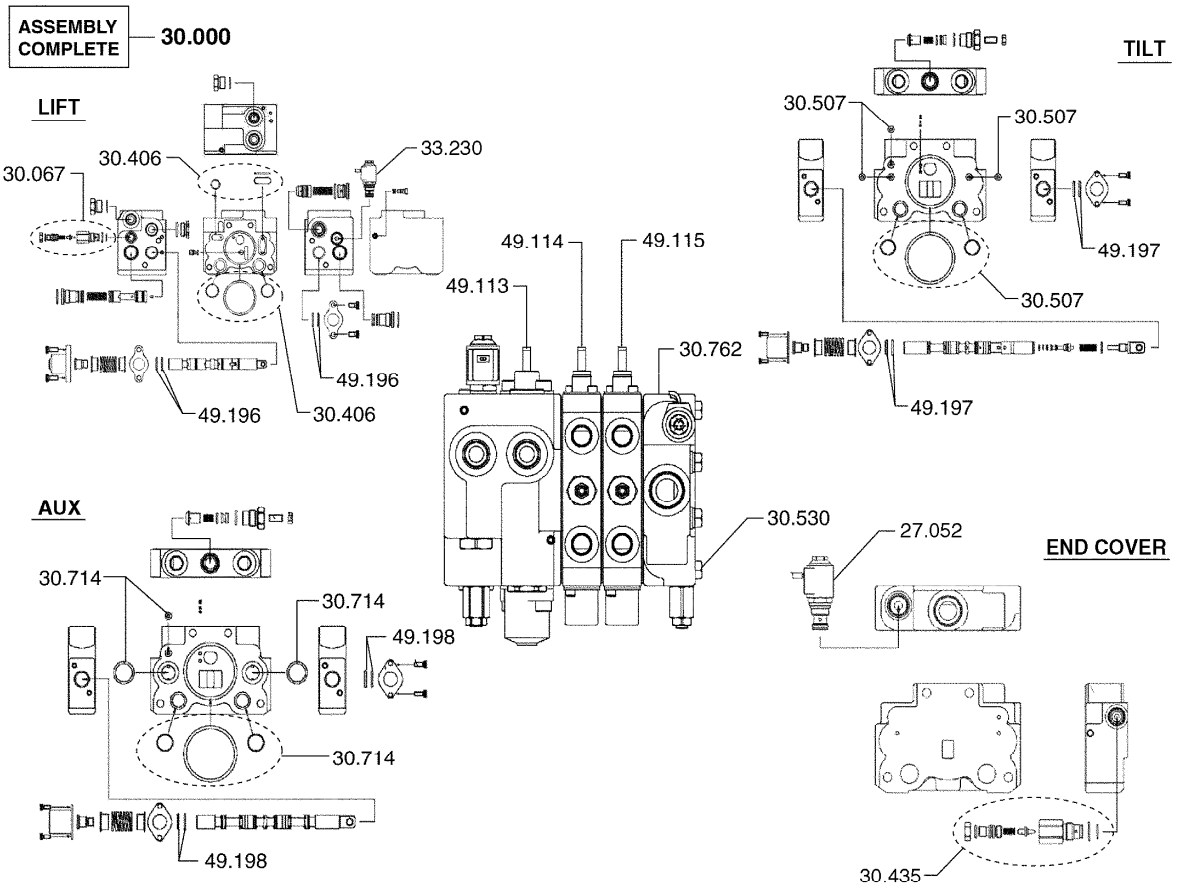

HYDRAULIC CONTROL VALVE - 3 SPOOL **30-364**

27.052 VALVE ASSEMBLY, AUXILIARY SOLENOID
벨브

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.067 RELIEF VALVE KIT, VALVE INLET SECTION
릴리프밸브

30.406 SEAL KIT, HYDRAULIC VALVE (LIFT)
시일킷

30.435 RELIEF VALVE ASSEMBLY, AUXILIARY VALVE
릴리프밸브


30.507 SEAL KIT, HYDRAULIC VALVE (TILT)
시일킷

30.530 FASTENER, VALVE THRU
패스너

30.714 SEAL KIT, HYDRAULIC VALVE SECTION (AUX)
시일킷

30.762 END COVER, HYDRAULIC VALVE
엔드커버

33.230	VALVE ASSEMBLY, LIFT SOLENOID 벨브
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀실킷
49.197	SPOOL SEAL KIT, TILT SECTION 스풀실킷
49.198	SPOOL SEAL KIT, AUX SECTION 스풀실킷

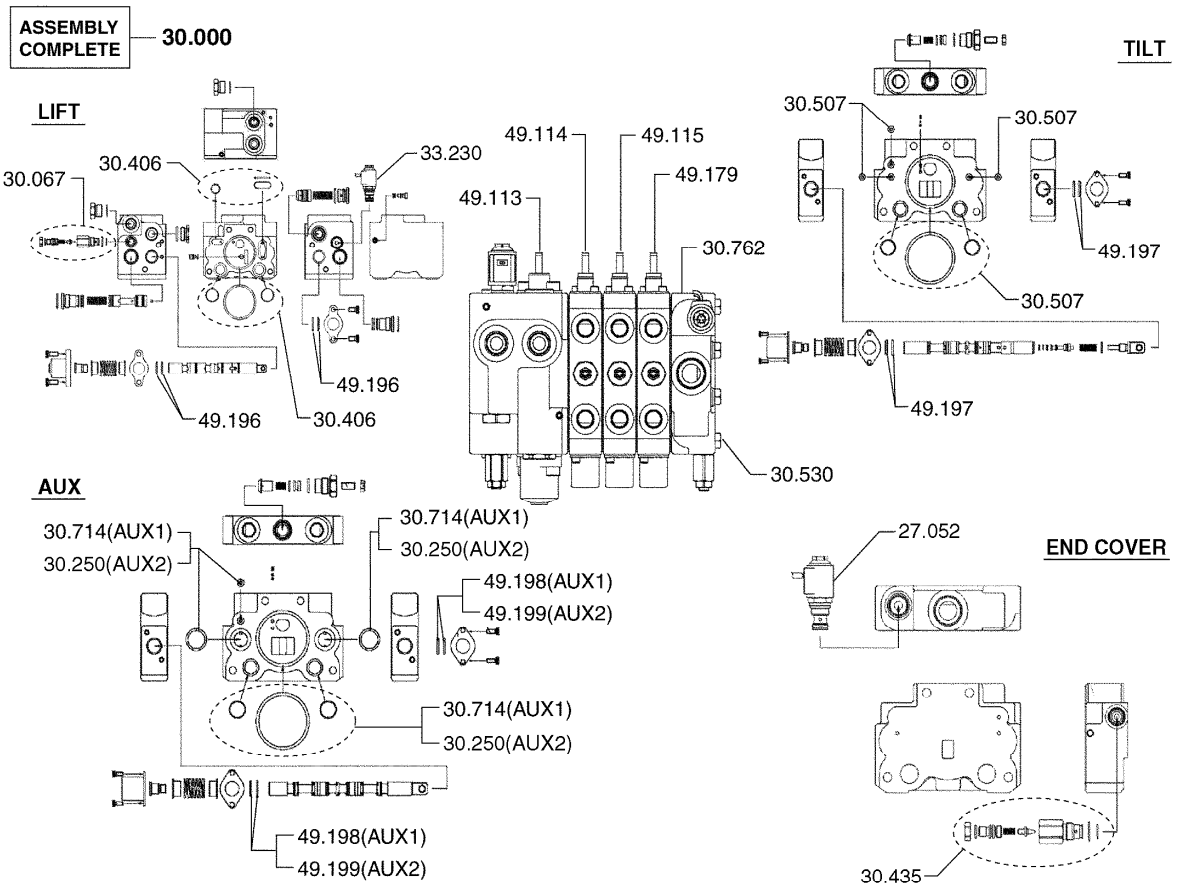

27.052 VALVE ASSEMBLY, AUXILIARY SOLENOID
벨브

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.067 RELIEF VALVE KIT, VALVE INLET SECTION
릴리프밸브

30.250 SEAL KIT, HYDRAULIC VALVE SECTION (AUX)
시일킷

30.406 SEAL KIT, HYDRAULIC VALVE (LIFT)
시일킷

30.435 RELIEF VALVE ASSEMBLY, AUXILIARY VALVE
릴리프밸브

30.507 SEAL KIT, HYDRAULIC VALVE (TILT)
시일킷

30.530 FASTENER, VALVE THRU
패스너

30.714 SEAL KIT, HYDRAULIC VALVE SECTION (AUX)
시일킷

30.762 END COVER, HYDRAULIC VALVE
엔드커버

33.230 VALVE ASSEMBLY, LIFT SOLENOID
벨브

49.113 LIFT SECTION, HYDRAULIC VALVE
리프트섹션

49.114 TILT SECTION, HYDRAULIC VALVE
틸트섹션

49.115 AUX SECTION, HYDRAULIC VALVE
보조섹션


49.179 AUX SECTION, HYDRAULIC VALVE
보조섹션

49.196 SPOOL SEAL KIT, LIFT SECTION
스풀실킷

49.197 SPOOL SEAL KIT, TILT SECTION
스풀실킷

49.198 SPOOL SEAL KIT, AUX SECTION
스풀실킷

49.199 SPOOL SEAL KIT, AUX SECTION
스풀실킷

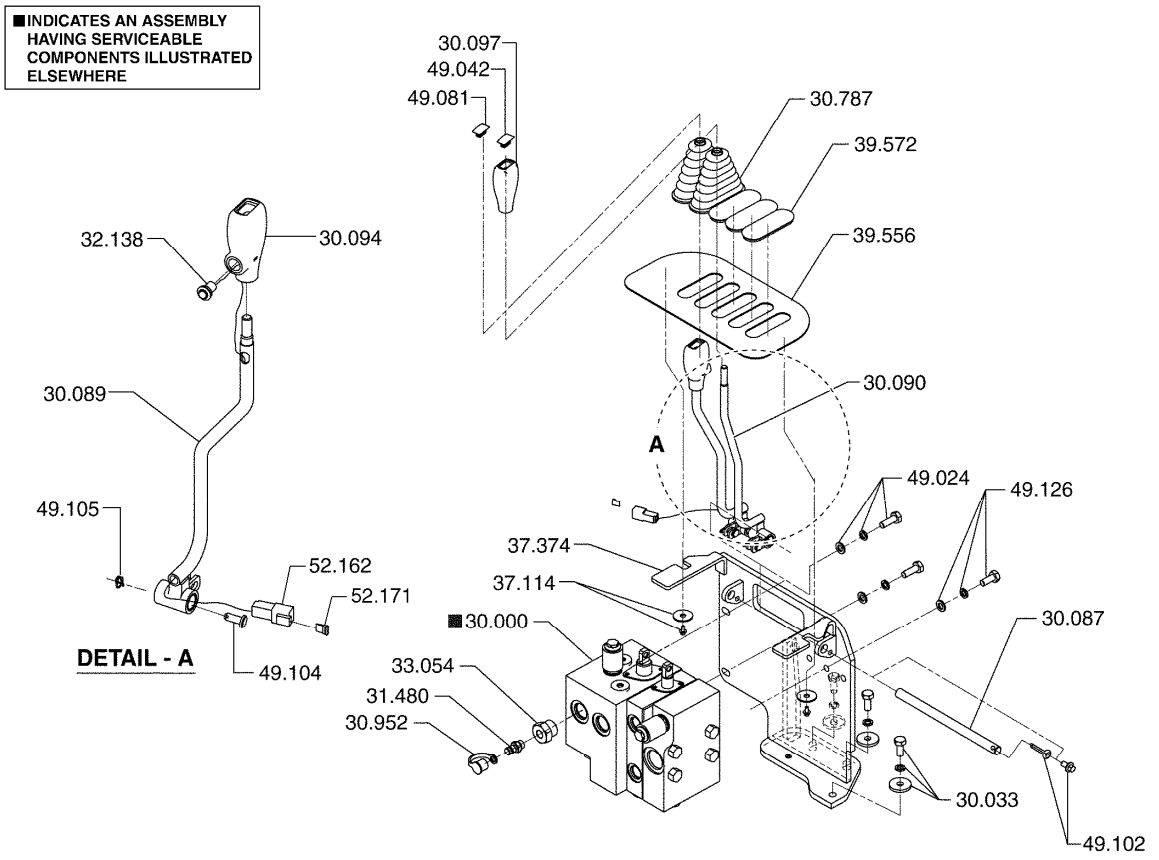

MAIN CONTROL VALVE 2-SPOOL (PUSH BUTTON) **30-517**

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너

30.087 PIN, VALVE CONTROL LEVER PIVOT
핀

30.089 LEVER, LIFT CONTROL
레버

30.090 LEVER, TILT CONTROL
레버


30.094 KNOB, LIFT CONTROL LEVER
노브

30.097 KNOB, TILT CONTROL LEVER
노브

30.787 BOOT, VALVE CONTROL LEVER
부트

30.952 DUST CAP, PRESSURE GAUGE PORT FITTING
더스트캡

31.480	PLUG, PRESSURE GAUGE PORT 플러그
32.138	SWITCH, PUSH BUTTON 스위치
33.054	PLUG, RELIEF VALVE PORT 플러그
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.126	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터
52.171	LOCK, AUXILIARY VALVE LEVER WIRE *

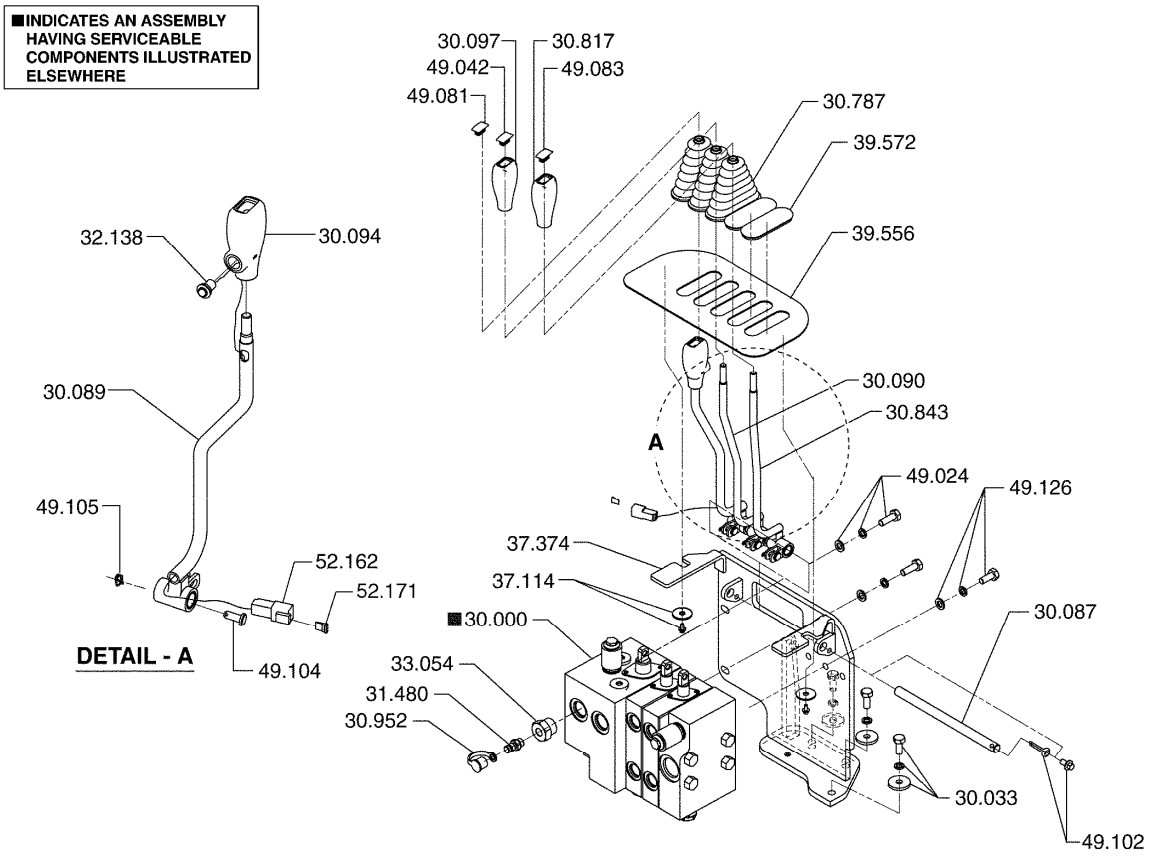

HYDRAULIC CONTROL 3-SPOOL VALVE MOUNTING (PUSH BUTTON) **30-518**

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너

30.087 PIN, VALVE CONTROL LEVER PIVOT
핀

30.089 LEVER, LIFT CONTROL
레버

30.090 LEVER, TILT CONTROL
레버


30.094 KNOB, LIFT CONTROL LEVER
노브

30.097 KNOB, TILT CONTROL LEVER
노브

30.787 BOOT, VALVE CONTROL LEVER
부트

30.817 KNOB, AUXILIARY VALVE CONTROL LEVER
노브


30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.952	DUST CAP, PRESSURE GAUGE PORT FITTING 더스트캡
31.480	PLUG, PRESSURE GAUGE PORT 플러그
32.138	SWITCH, PUSH BUTTON 스위치
33.054	PLUG, RELIEF VALVE PORT 플러그
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.126	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터
52.171	LOCK, AUXILIARY VALVE LEVER WIRE *

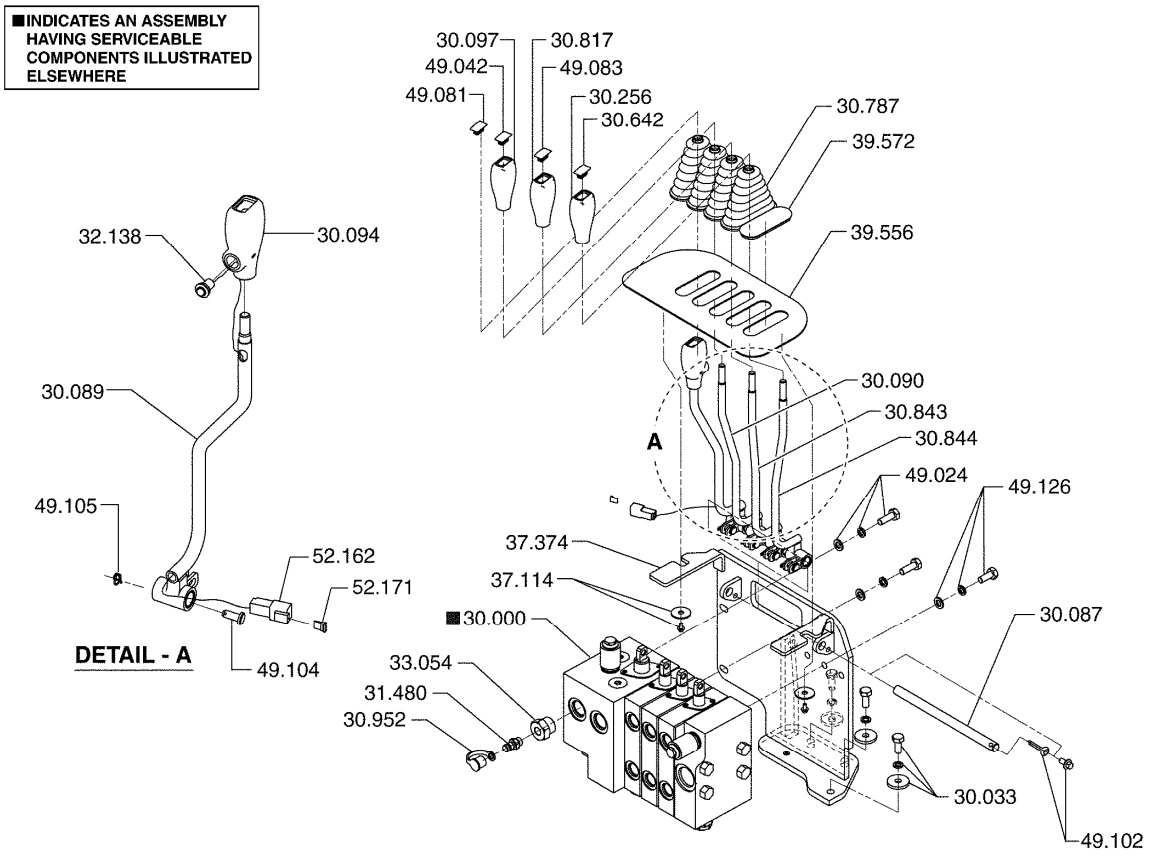

HYDRAULIC CONTROL 4-SPOOL VALVE MOUNTING (PUSH BUTTON) **30-519**

30.000	VALVE ASSEMBLY, HYDRAULIC 벨브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.256	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.642	CAP, AUXILIARY VALVE SPOOL 캡
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
30.952	DUST CAP, PRESSURE GAUGE PORT FITTING 더스트캡
31.480	PLUG, PRESSURE GAUGE PORT 플러그
32.138	SWITCH, PUSH BUTTON 스위치
33.054	PLUG, RELIEF VALVE PORT 플러그
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.126	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터

52.171 LOCK, AUXILIARY VALVE LEVER WIRE
*

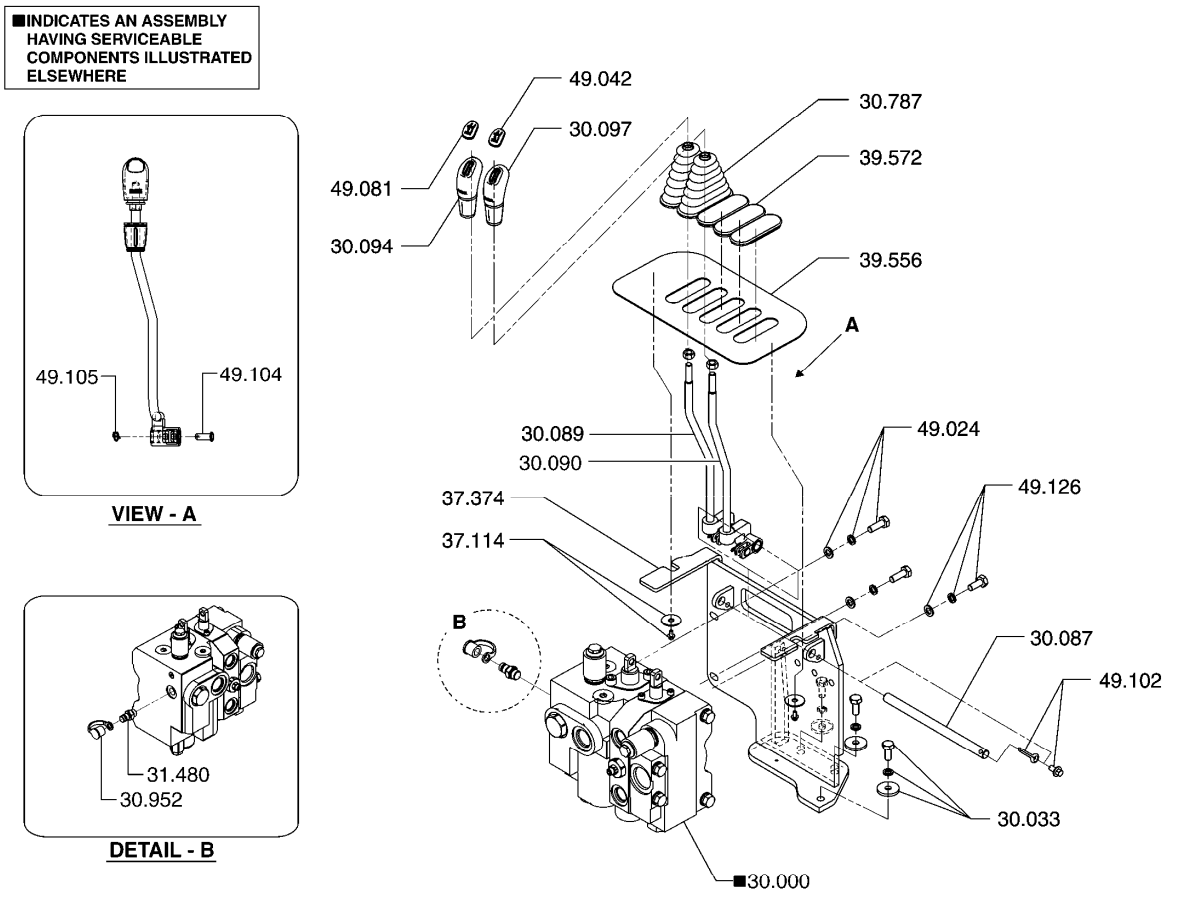

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너

30.087 PIN, VALVE CONTROL LEVER PIVOT
핀

30.089 LEVER, LIFT CONTROL
레버

30.090 LEVER, TILT CONTROL
레버


30.094 KNOB, LIFT CONTROL LEVER
노브

30.097 KNOB, TILT CONTROL LEVER
노브

30.787 BOOT, VALVE CONTROL LEVER
부트

30.952 DUST CAP, PRESSURE GAUGE PORT FITTING
더스트캡

31.480	PLUG, PRESSURE GAUGE PORT 플러그
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.126	FASTENER, HYDRAULIC VALVE MOUNTING 패스너

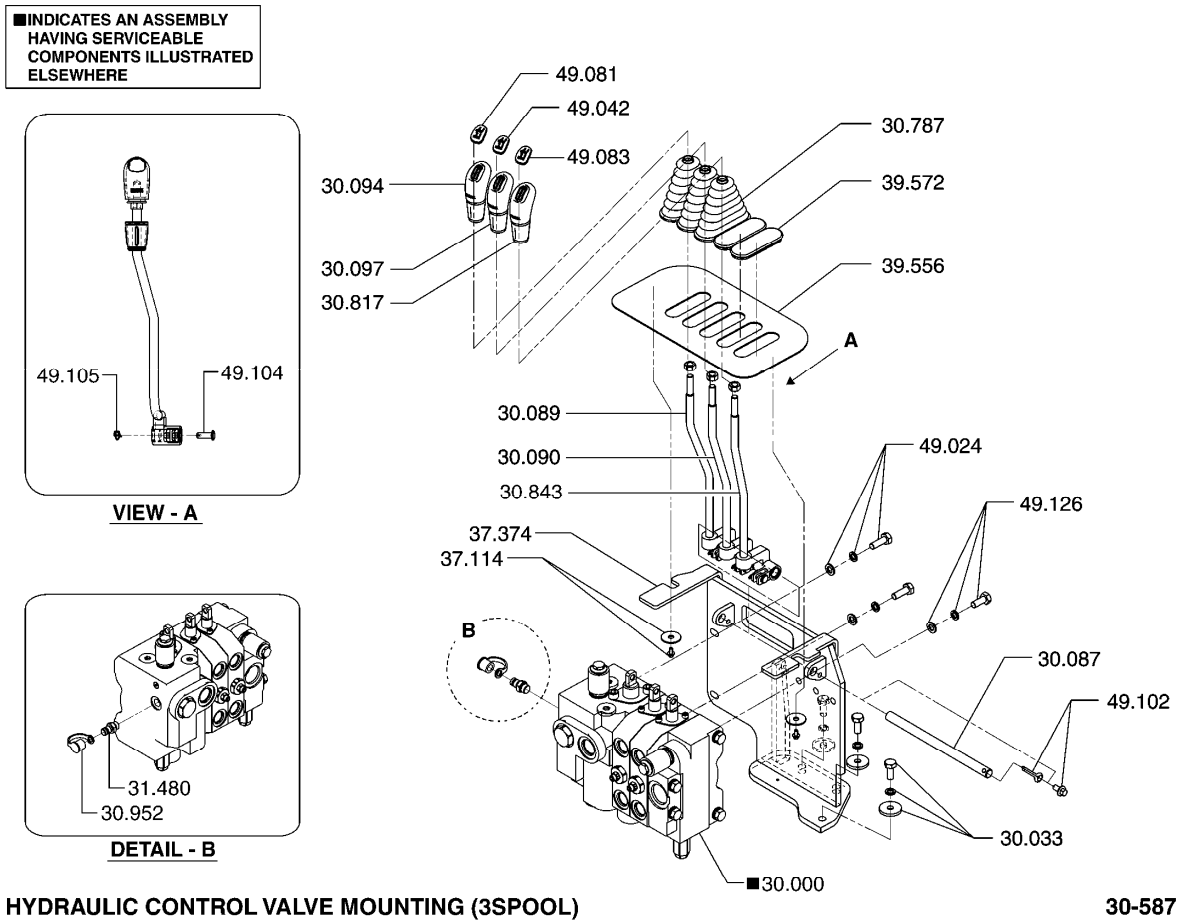

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너

30.087 PIN, VALVE CONTROL LEVER PIVOT
핀

30.089 LEVER, LIFT CONTROL
레버

30.090 LEVER, TILT CONTROL
레버


30.094 KNOB, LIFT CONTROL LEVER
노브

30.097 KNOB, TILT CONTROL LEVER
노브

30.787 BOOT, VALVE CONTROL LEVER
부트

30.817 KNOB, AUXILIARY VALVE CONTROL LEVER
노브

30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.952	DUST CAP, PRESSURE GAUGE PORT FITTING 더스트캡
31.480	PLUG, PRESSURE GAUGE PORT 플러그
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.126	FASTENER, HYDRAULIC VALVE MOUNTING 패스너

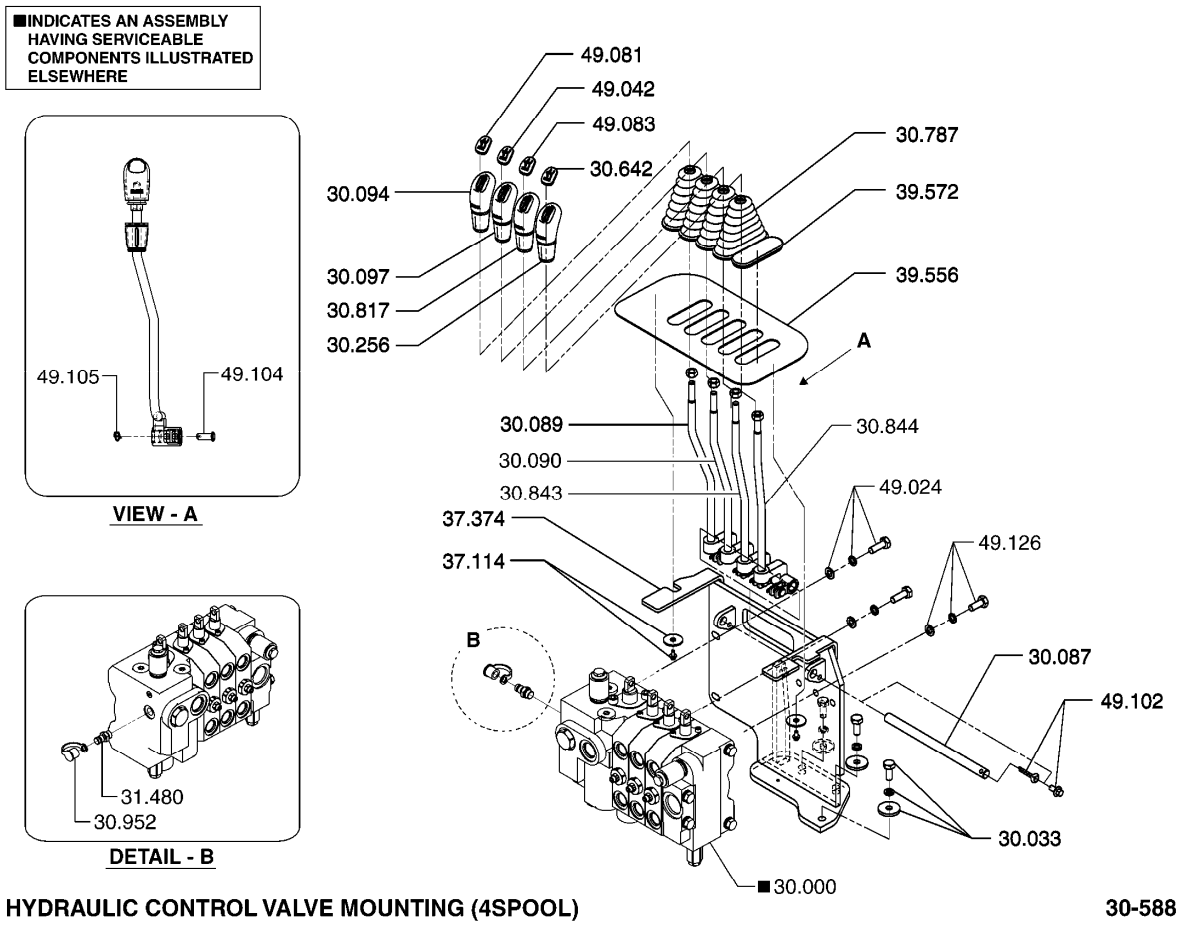

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너

30.087 PIN, VALVE CONTROL LEVER PIVOT
핀

30.089 LEVER, LIFT CONTROL
레버

30.090 LEVER, TILT CONTROL
레버


30.094 KNOB, LIFT CONTROL LEVER
노브

30.097 KNOB, TILT CONTROL LEVER
노브

30.256 KNOB, AUXILIARY VALVE CONTROL LEVER
노브

30.642 CAP, AUXILIARY VALVE SPOOL
캡

30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
30.952	DUST CAP, PRESSURE GAUGE PORT FITTING 더스트캡
31.480	PLUG, PRESSURE GAUGE PORT 플러그
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.126	FASTENER, HYDRAULIC VALVE MOUNTING 패스너

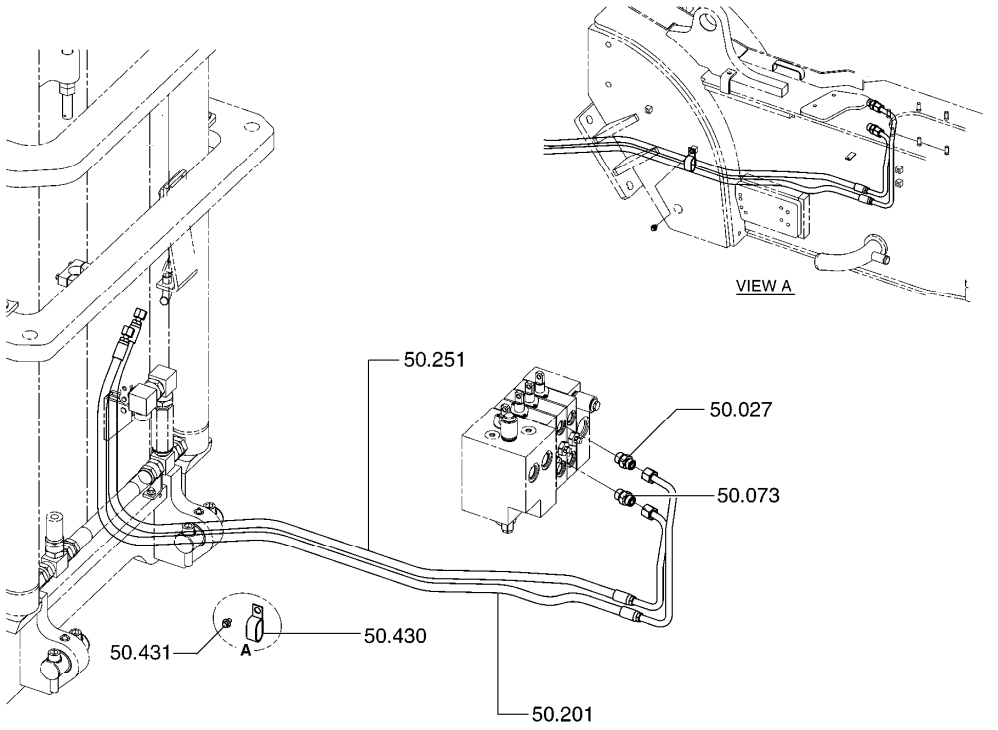

AUX. VALVE PLUMBING (SINGLE) **31-207**

50.027 FITTING, 1ST AUXILIARY VALVE A PORT
피팅


50.073 FITTING, 2ND AUXILIARY VALVE "B" PORT
피팅

50.201 LINE, DEVICE
라인

50.251 LINE, DEVICE
라인


50.430 CLAMP, AUXILIARY VALVE LINES
클램프

50.431 FASTENER, AUX VALVE LINES CLAMP
패스너

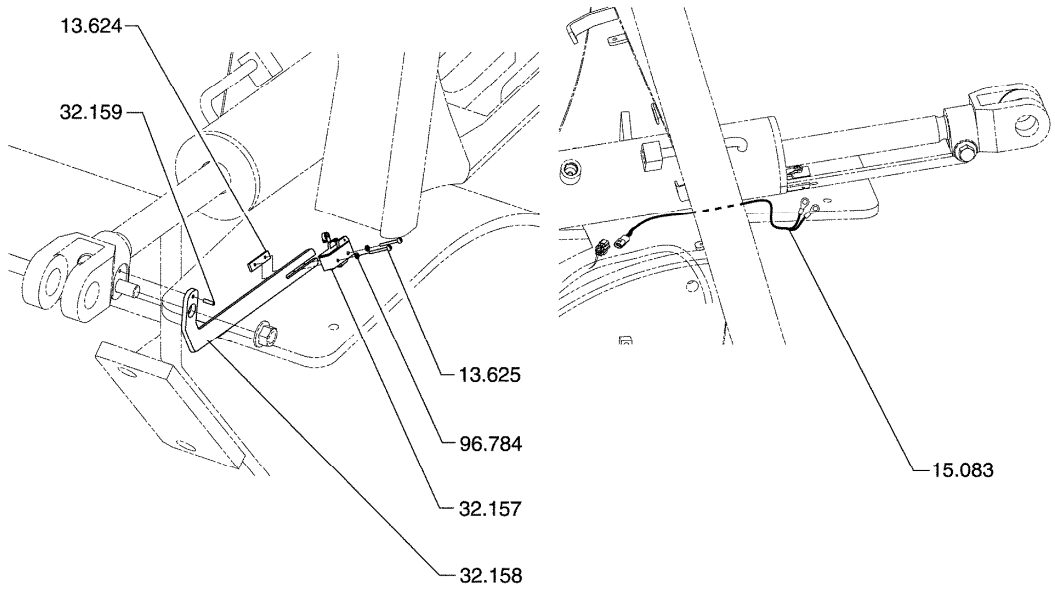

TILT LIMIT WITH OVERRIDE **31-212**

13.624	BRACKET, TILT LIMIT SWITCH 브라켓
13.625	FASTENER, TILT LIMIT SWITCH 패스너
15.083	CONDUCTOR, TILT LIMIT DEVICE FEED 컨덕터
32.157	SWITCH, TILT LIMIT 스위치
32.158	BRACKET, TILT LIMIT SWITCH 브라켓
32.159	RETAINER, TILT LIMIT SWITCH BRACKET 리테이너
96.784	WASHER, TILT LIMIT SWITCH FASTENER 와셔

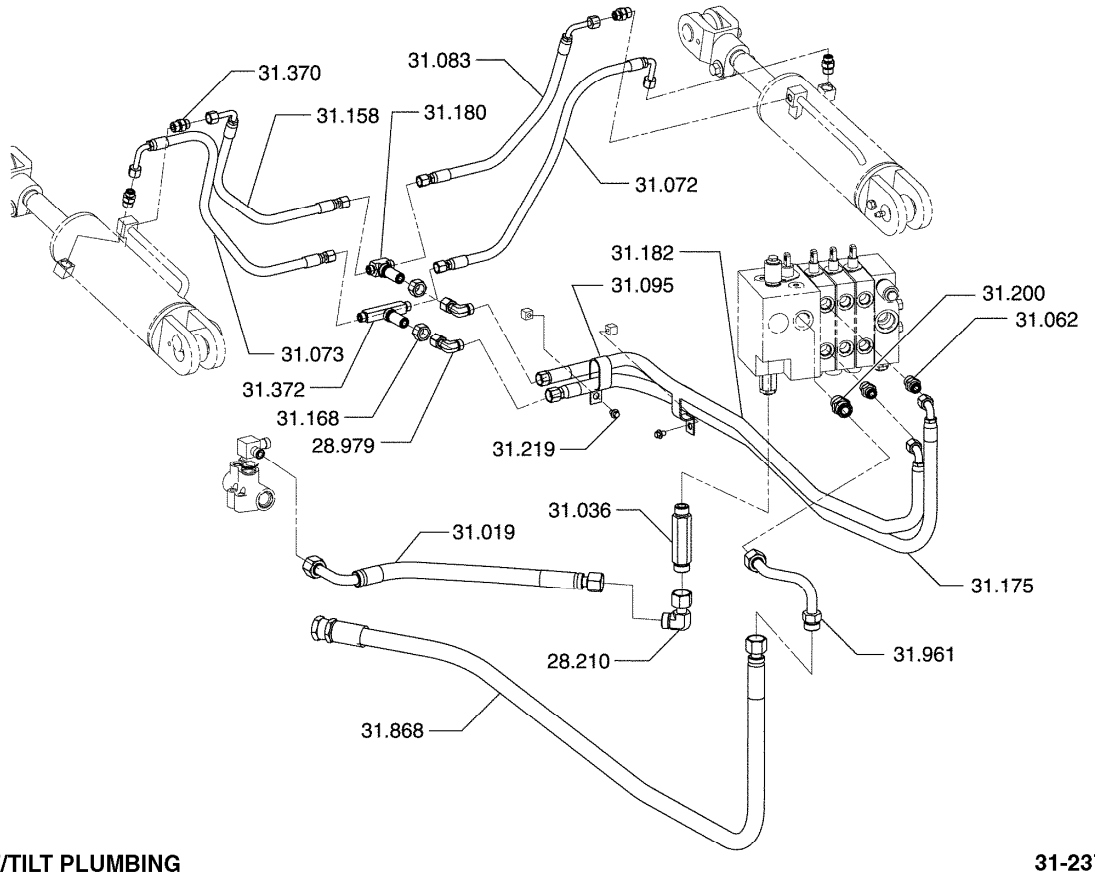

LIFT/TILT PLUMBING **31-237**

28.210 FITTING, MAIN VALVE INLET LINE
피팅

28.979 FITTING, HYDRAULIC LINES
피팅

31.019 LINE, VALVE INLET
라인

31.036 FITTING, MAIN VALVE INLET PORT
피팅

31.062 FITTING, VALVE TILT PORT "B"
피팅


31.072 LINE, RH TILT CYLINDER ROD PORT
라인

31.073 LINE, LH TILT CYLINDER ROD PORT
라인

31.083 LINE, RH TILT CYLINDER ANCHOR PORT
라인

31.095 CLIP, TILT LINES RETAINER
클립

31.158	LINE, LH TILT CYLINDER ANCHOR PORT 라인
31.168	FASTENER, TILT LINE CLAMP 패스너
31.175	LINE, VALVE TILT PORT "B" 라인
31.180	FITTING, LH TILT CYLINDER ROD PORT LINE 피팅
31.182	LINE, VALVE TILT PORT "A" 라인
31.200	FITTING, MAIN VALVE LIFT PORT 피팅
31.219	FASTENER, TILT LINE RETAINER MOUNTING BRACKET 패스너
31.370	FITTING, TILT CYLINDER ROD PORT LINE 피팅
31.372	FITTING, TILT CYLINDER ANCHOR PORT LINE 피팅
31.868	LINE, MAIN VALVE LIFT 라인
31.961	LINE, MAIN VALVE LIFT PORT "B" 라인

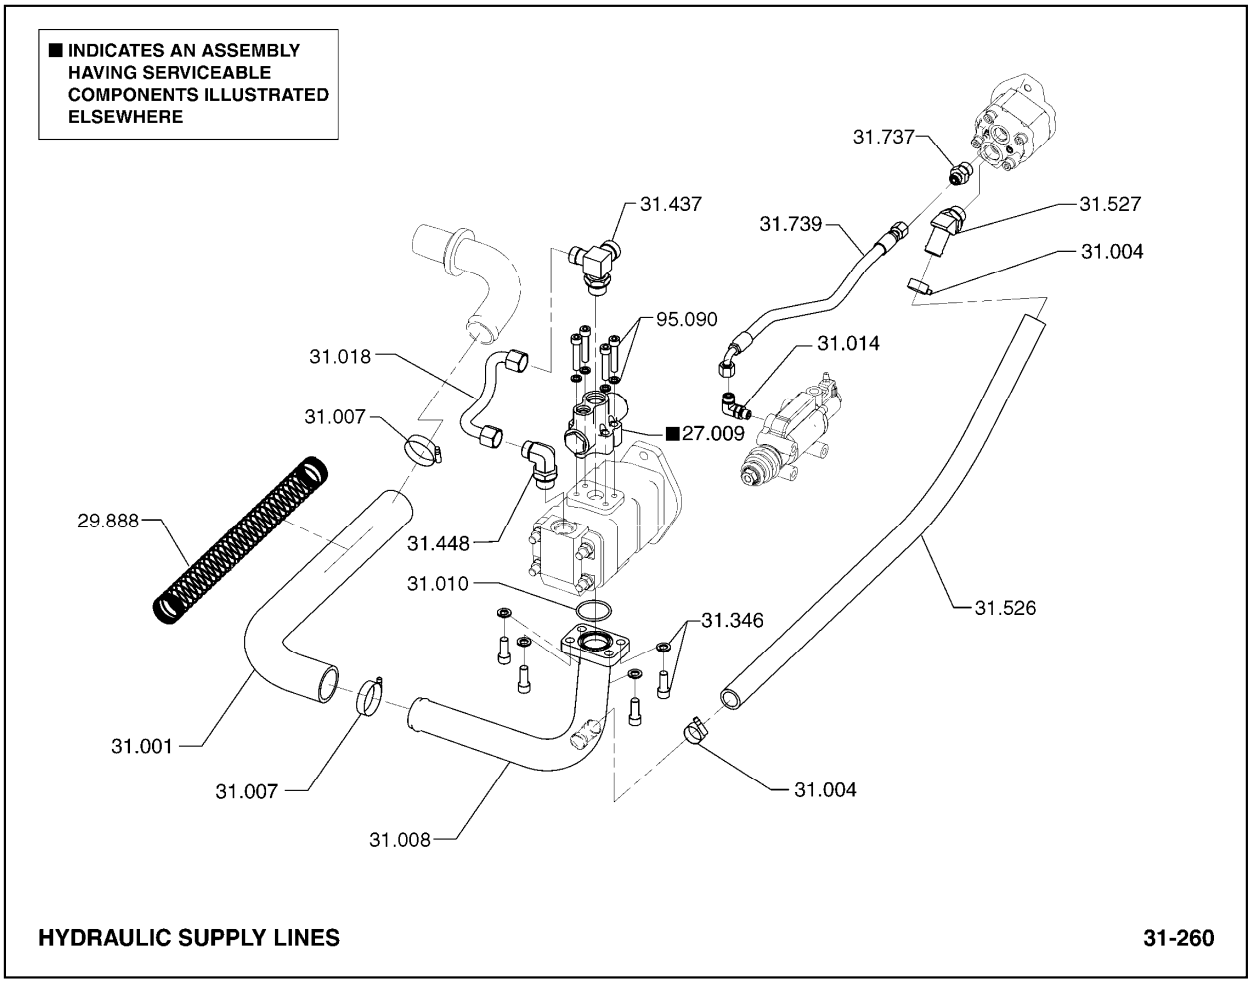

27.009 VALVE ASSEMBLY, HYDRAULIC PRIORITY
벨브

29.888 SPRING, HYDRAULIC SUMP
스프링

31.001 LINE, SUMP OUTLET
라인

31.004 CLAMP, PUMP INLET LINE
클램프

31.007 CLAMP, PUMP INLET LINE
클램프


31.008 FITTING, PUMP INLET
피팅

31.010 SEAL, PUMP INLET PORT
시일

31.014 FITTING, PUMP OUTLET
피팅

31.018 LINE, PUMP OUTLET
라인

31.346	FASTENER, PUMP INLET PORT FITTING 패스너
31.437	FITTING, VALVE INLET LINE 피팅
31.448	FITTING, PUMP OUTLET LINE 피팅
31.526	LINE, AUXILIARY PUMP INLET 라인
31.527	FITTING, AUXILIARY PUMP INLET 피팅
31.737	FITTING, AUXILIARY SUMP OUTLET 피팅
31.739	LINE, AUXILIARY PUMP OUTLET 라인
95.090	FASTENER, HYDRAULIC PRIORITY VALVE 패스너

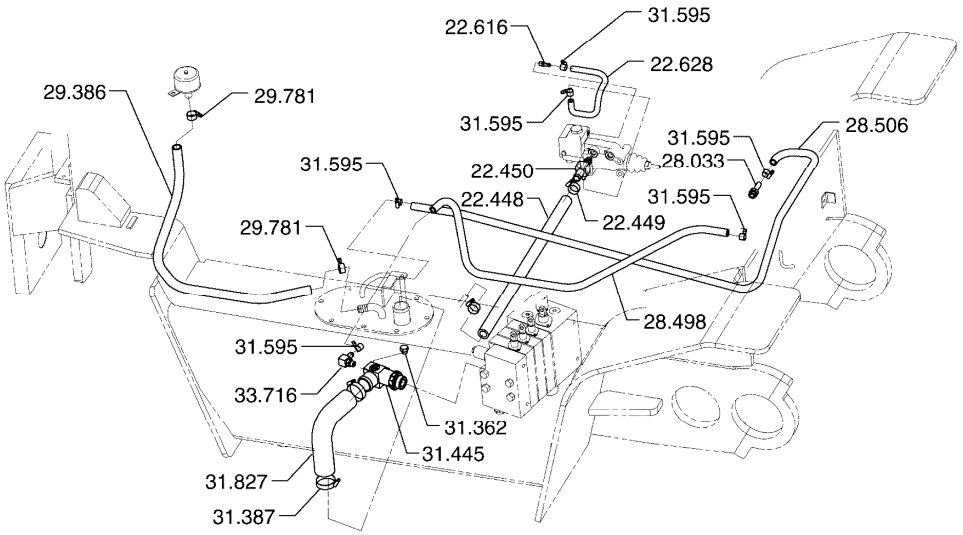

HYDRAULIC RETURN LINE **31-324**

22.448 LINE, BRAKE MASTER CYLINDER FILLER RETURN
라인

22.449 CLAMP, BRAKE MASTER CYLINDER FILLER RETURN LINE
클램프

22.450 FITTING, BRAKE MASTER CYLINDER FILLER RETURN LINE
피팅

22.616 FITTING, BRAKE ENERGIZER SUMP RETURN LINE
피팅

22.628 LINE, BRAKE LINE RETURN TO SUMP
라인


28.033 FITTING, SUMP RETURN
피팅

28.498 LINE, SUMP RETURN
라인

28.506 LINE, SUMP RETURN
라인

29.386 LINE, SUMP BREATHER
라인

29.781	CLAMP, SUMP BREATHER LINE 클램프
31.362	PLUG, SUMP RETURN LINE FITTING 플러그
31.387	CLAMP, MAIN VALVE TO SUMP LINE 클램프
31.445	FITTING, MAIN VALVE TO FILTER LINE 피팅
31.595	CLAMP, SUMP RETURN LINE FITTING 클램프
31.827	LINE, FILTER INLET 라인
33.716	FITTING, SUMP RETURN LINE 피팅

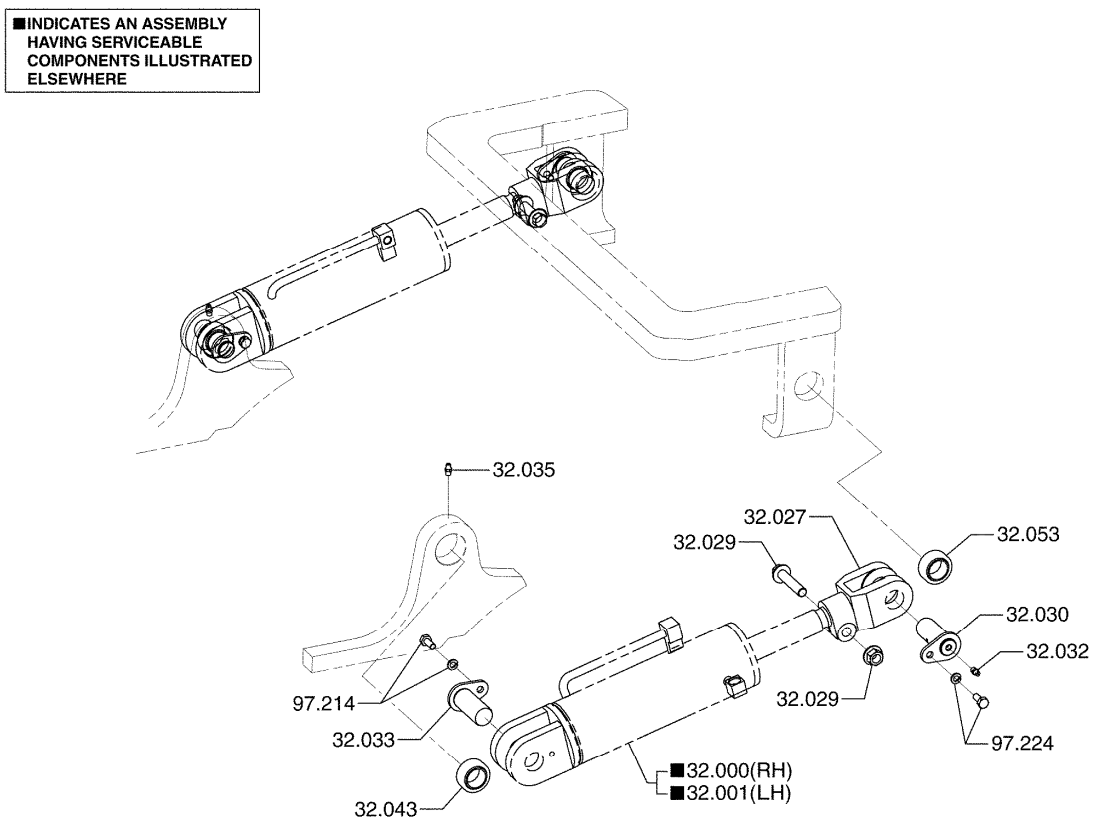

TILT CYLINDER MOUNTING **32-158**

32.000 CYLINDER ASSEMBLY, TILT
실린더

32.001 TILT CYLINDER ASSEMBLY (LH)
틸트실린더

32.027 END, RH TILT CYLINDER ROD
엔드

32.029 FASTENER, TILT CYLINDER ROD END
패스너

32.030 PIN, TILT CYLINDER TO UPRIGHT
핀


32.032 FITTING, TILT CYLINDER TO UPRIGHT PIN LUB
피팅

32.033 PIN, TILT CYLINDER REAR MOUNTING RH
핀

32.035 FITTING, TILT CYLINDER TO FRAME PIN LUB
피팅

32.043 BEARING, TILT CYLINDER FRAME MOUNTING
베어링


32.053	BEARING, TILT CYLINDER ROD END 베어링
97.214	FASTENER, TILT CYLINDER TO FRAME PIN *
97.224	FASTENER, TILT CYLINDER TO UPRIGHT PIN *

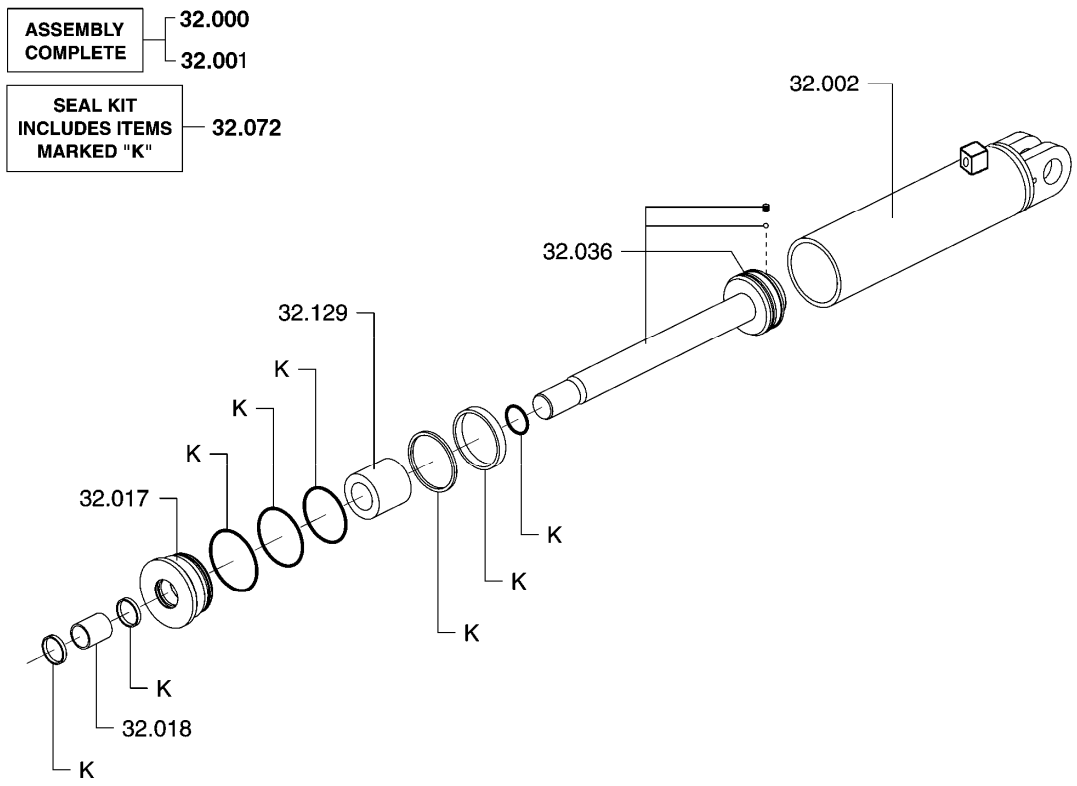

TILT CYLINDER **32-161**


32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.017	GLAND, TILT CYLINDER 그랜드
32.018	BUSHING, TILT CYLINDER GLAND 부싱
32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드와피스톤
32.072	PACKING KIT, TILT CYLINDER 패킹킷
32.129	SPACER, TILT CYLINDER BARREL END 스페이서

■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

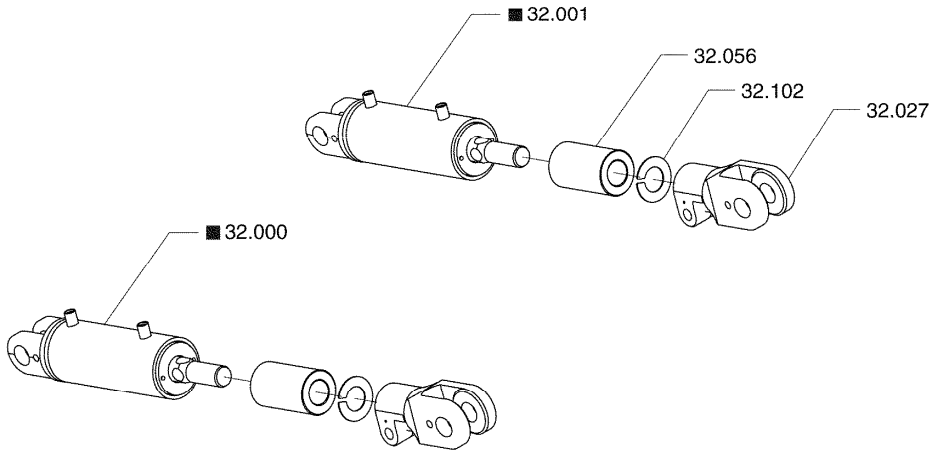

TILT AMOUNT GP **32-167**

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심

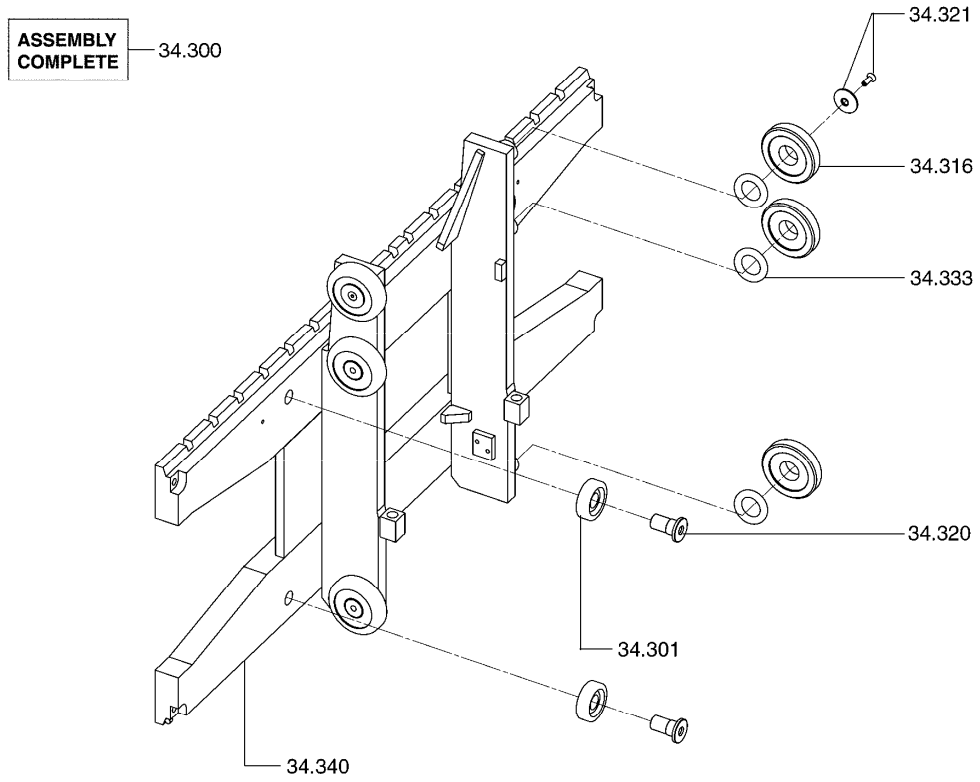

CARRIAGE ASSEMBLY **34-189**

34.300 ASSEMBLY, FORK BARS & CARRIAGE
캐리지

34.301 ROLLER, CARRIAGE OUTER THRUST
롤러


34.316 ROLLER, CARRIAGE
롤러

34.320 SHAFT, CARRIAGE OUTER THRUST ROLLER
샤프트

34.321 FASTENER, CARRIAGE ROLLER SHAFT
패스너


34.333 SHIM, CARRIAGE ROLLER
심

34.340 CARRIAGE WELDED ASSEMBLY
캐리지용접물

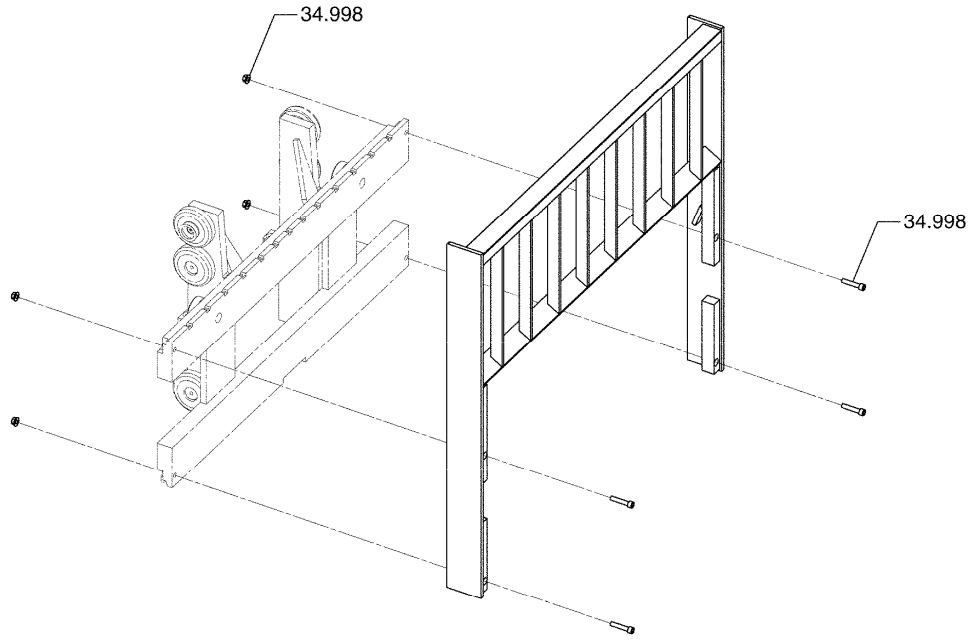

LOAD BACK REST MOUNTING **34-190**

34.998 FASTENER, LOAD SAFETY BACK REST
패스너

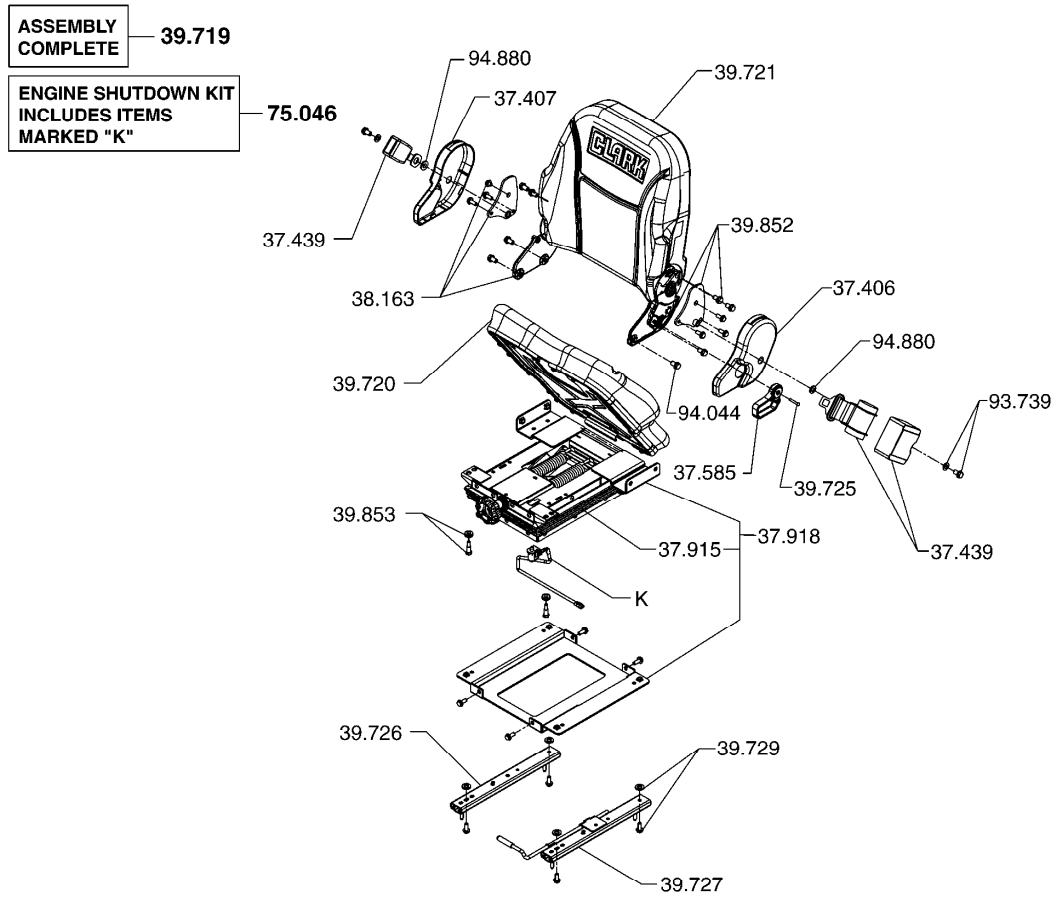

37.406 BRACKET, SEAT BACK REST COVER LH
브라켓

37.407 BRACKET, SEAT BACK REST COVER RH
브라켓

37.439 SAFETY BELT, SEAT
세이프티벨트

37.585 KNOB, SEAT BACK REST CUSHION ADJUSTOR
노브

37.915 SUSPENSION COVER, SEAT SUSPENSION
서스펜션


37.918 SUSPENSION ASSEMBLY, SEAT
서스펜션

38.163 BRACKET, SEAT SUPPORT RH
브라켓

39.720 CUSHION, SEAT
쿠션

39.721 CUSHION, SEAT BACK REST
쿠션

39.725	FASTENER, SEAT BACK REST CLIP TO FRAME 패스너
39.726	ADJUSTOR, SEAT 어드져스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드져스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
75.046	KIT, SEAT ACTUATED ENGINE SHUTDOWN 킷
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
94.880	FASTENER, SEAT SUPPORT CATCH BRACKET 패스너

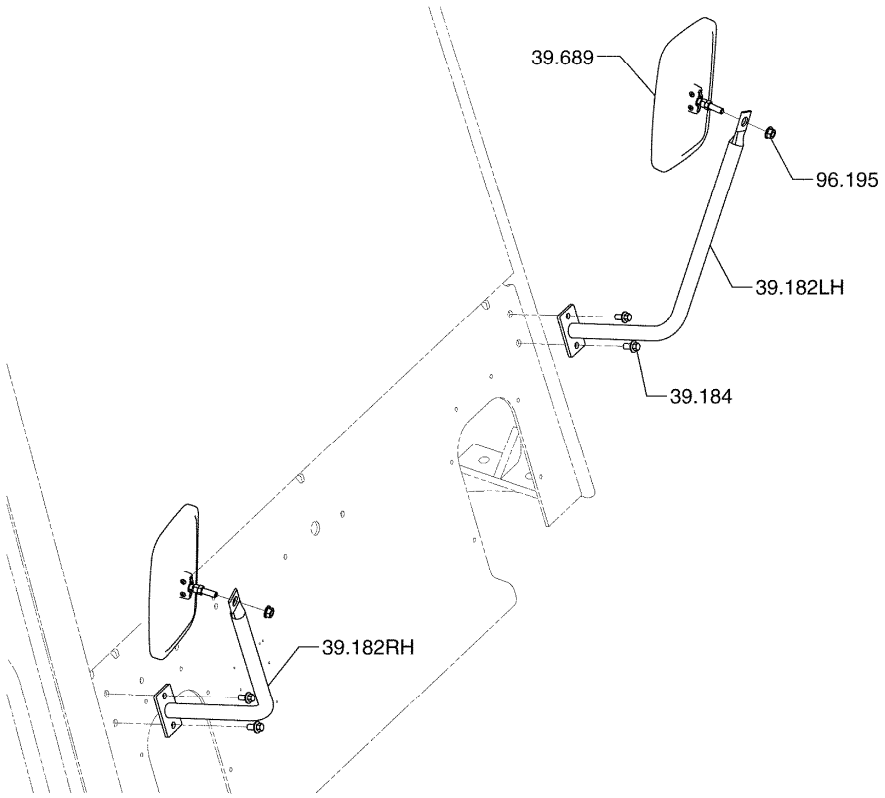


REAR VIEW MIRROR MOUNTING **37-018**

39.182 BRACKET, REAR VIEW MIRROR MOUNTING
브라켓

39.184 FASTENER, REAR VIEW MIRROR
패스너

39.689 MIRROR, REAR VIEW
미러

96.195 NUT, REAR VIEW MIRROR MOUNTING
너트

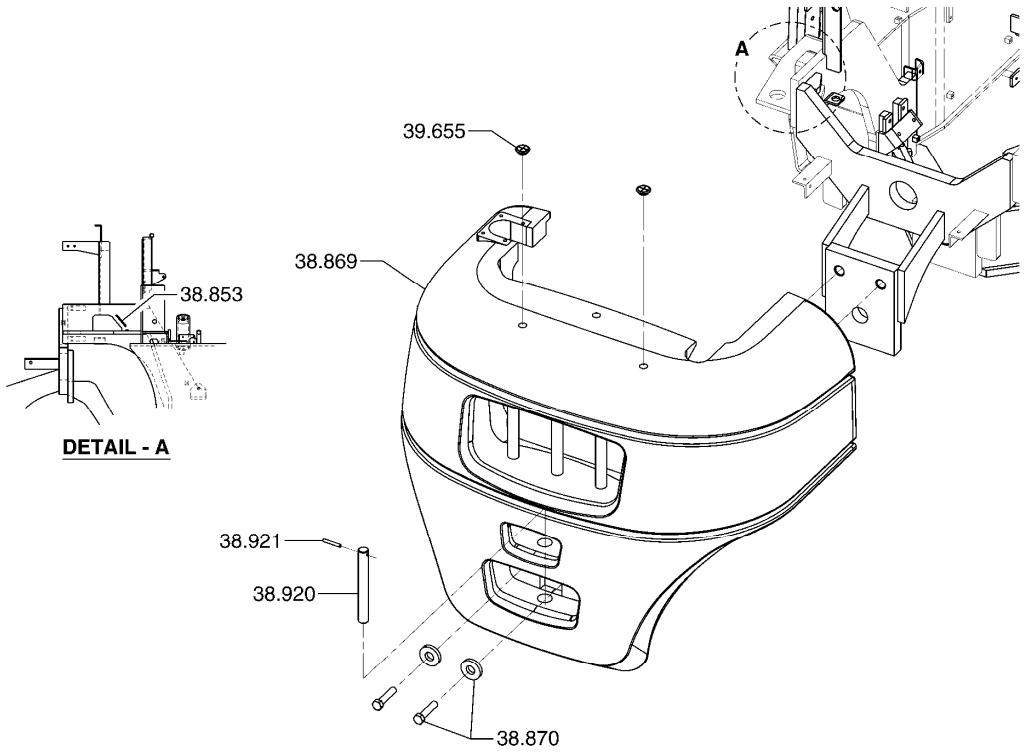

COUNTER WEIGHT MOUNTING **38-220**

38.853 SHIM, COUNTERWEIGHT
심


38.869 COUNTERWEIGHT
카운터웨이트

38.870 FASTENER, COUNTERWEIGHT (LOWER)
패스너

38.920 PIN, COUPLER
핀

38.921 PIN, COUPLER PIN CROSS
핀

39.655 PLUG, FUEL TANK FILLER HOLE
플러그

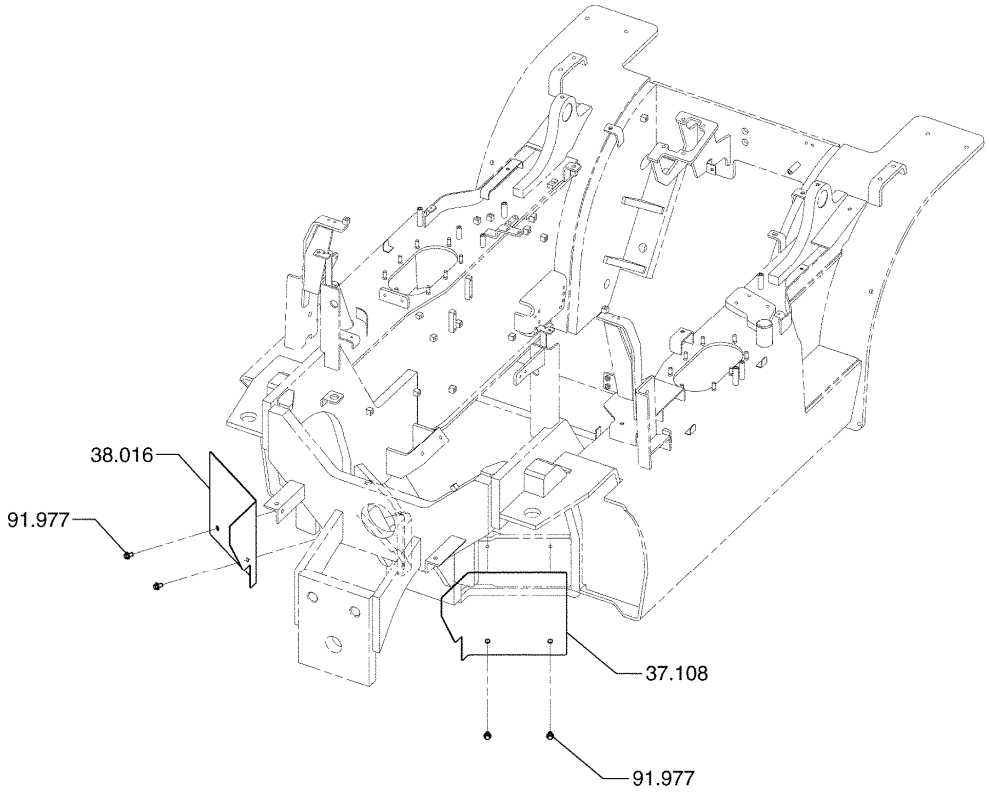


DUST SHIELD MOUNTING **38-267**

37.108 SHIELD, RH REAR
쉴드

38.016 SHIELD. LH REAR
쉴드

91.977 FASTENER, REAR SHIELD
패스너

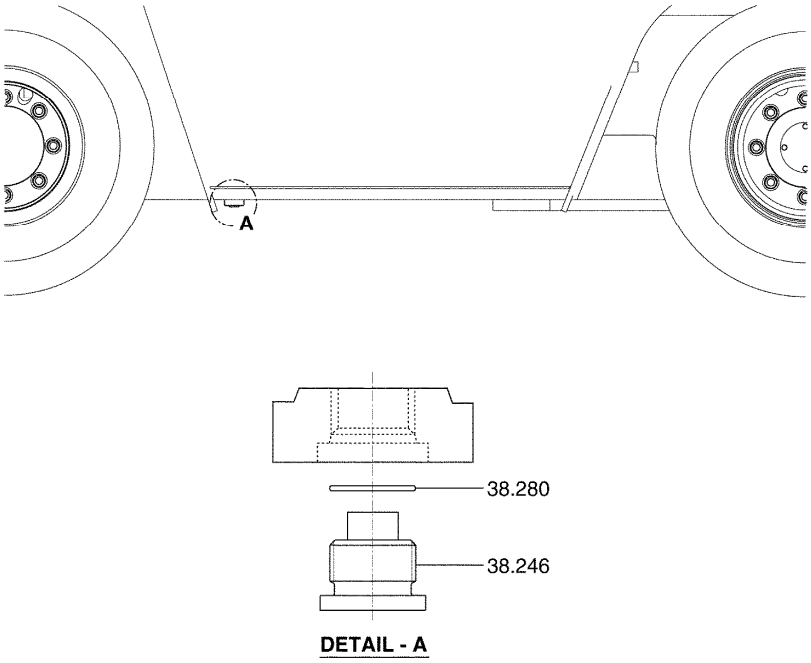


FRAME TANK BOTTOM PLUG **38-270**

38.246 PLUG, FRAME BOTTOM MAGNETIC
플러그


38.280 SEAL, FRAME BOTTOM MAGNETIC PLUG
실

■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

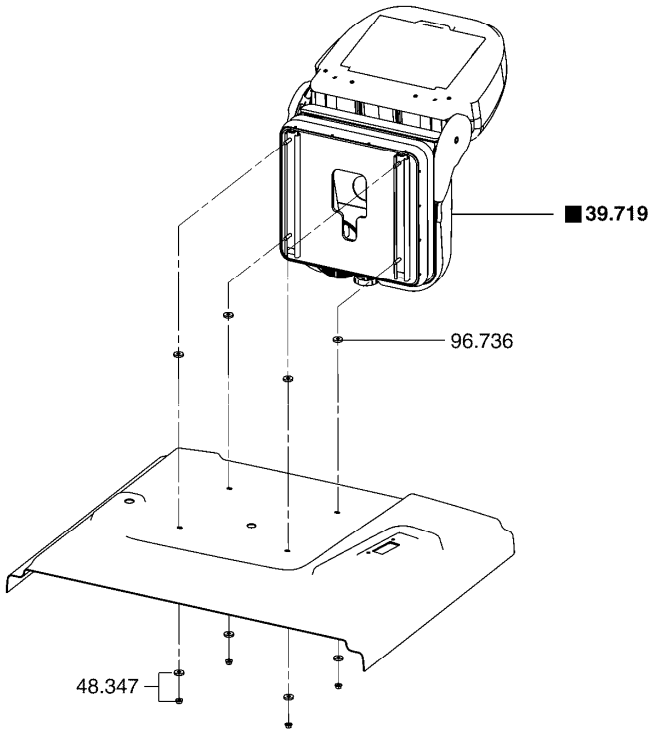

SEAT MOUNTING **39-829**

39.719	SEAT ASSEMBLY 시트
48.347	FASTENER, SEAT ASSEMBLY 패스너
96.736	WASHER, SEAT ASSEMBLY FASTENER 와셔

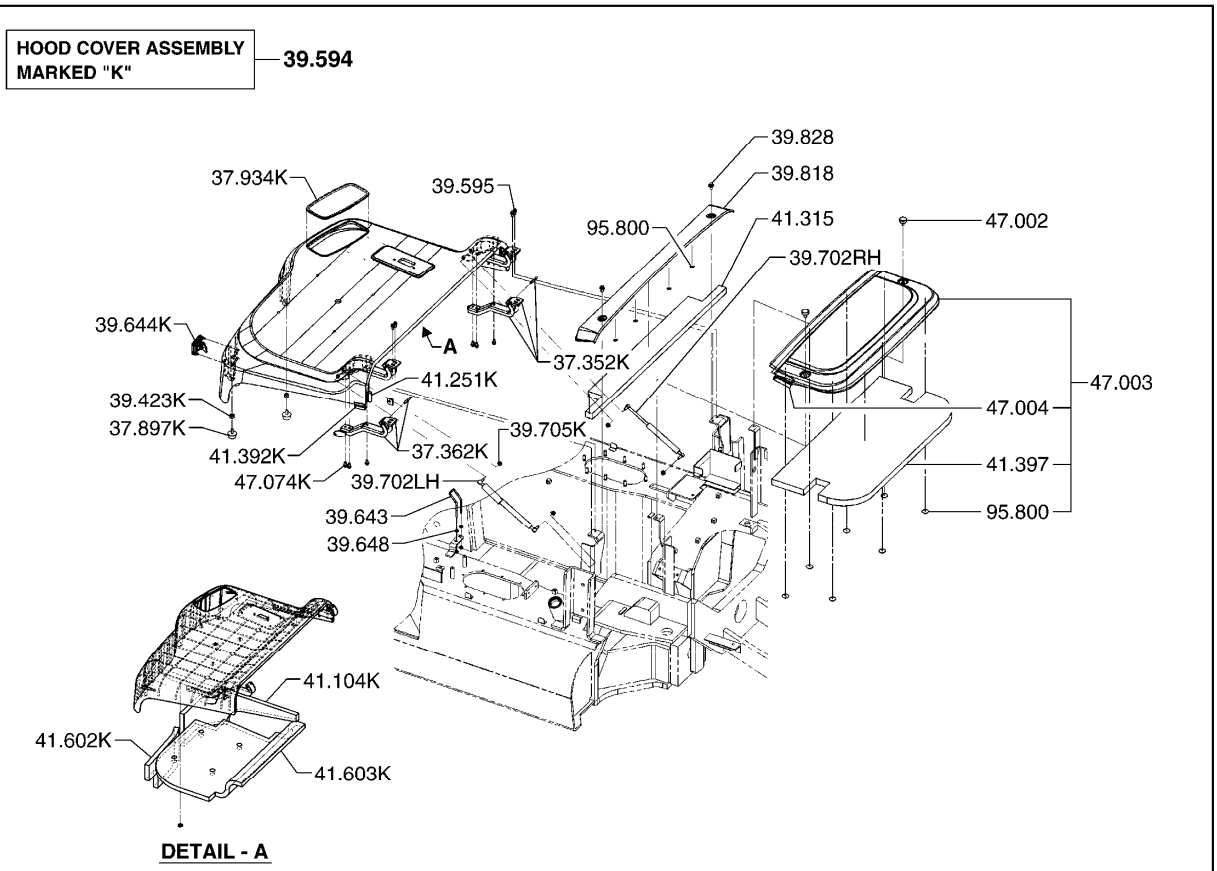

HOOD & REAR COVER MOUNTING **39-876**

37.352 BRACKET, TOP HOOD SPRING (RH)
브라켓

37.362 BRACKET, TOP HOOD SPRING (LH)
브라켓

37.897 BUMPER, TOP HOOD
범퍼

37.934 SEAL, HOOD ACCESS COVER
시일

39.423 FASTENER, TOP HOOD
패스너


39.594 HOOD, TOP
후드

39.595 FASTENER, TOP HOOD
패스너

39.643 CATCH, TOP HOOD LATCH
캐치

39.644 LATCH, TOP HOOD
래치

39.648	FASTENER, TOP HOOD LATCH CATCH 패스너
39.702	PROP, HOOD 프롭
39.705	FASTENER, HOOD PROP 패스너
39.818	PLATE, REAR HOOD 플레이트
39.828	FASTENER, REAR HOOD PLATE 패스너
41.104	SOUND SEAL, RH SIDE HOOD 사운드시일
41.251	SOUND SEAL, TOP HOOD 사운드시일
41.315	SOUND SEAL, TOP HOOD REAR 사운드시일
41.392	SOUND SEAL, TOP HOOD 사운드시일
41.397	SOUND ABSORBER, RADIATOR COVER 흡음재
41.602	SOUND SEAL, ENGINE HOOD 사운드시일
41.603	SOUND SEAL, ENGINE HOOD 사운드시일
47.002	KNOB, RADIATOR COVER 노브
47.003	COVER, RADIATOR 커버
47.004	SEAL, RADIATOR COVER 시일
47.074	FASTENER, TOP HOOD SPRING BRACKET 패스너
95.800	FASTENER, SOUND SEAL 패스너

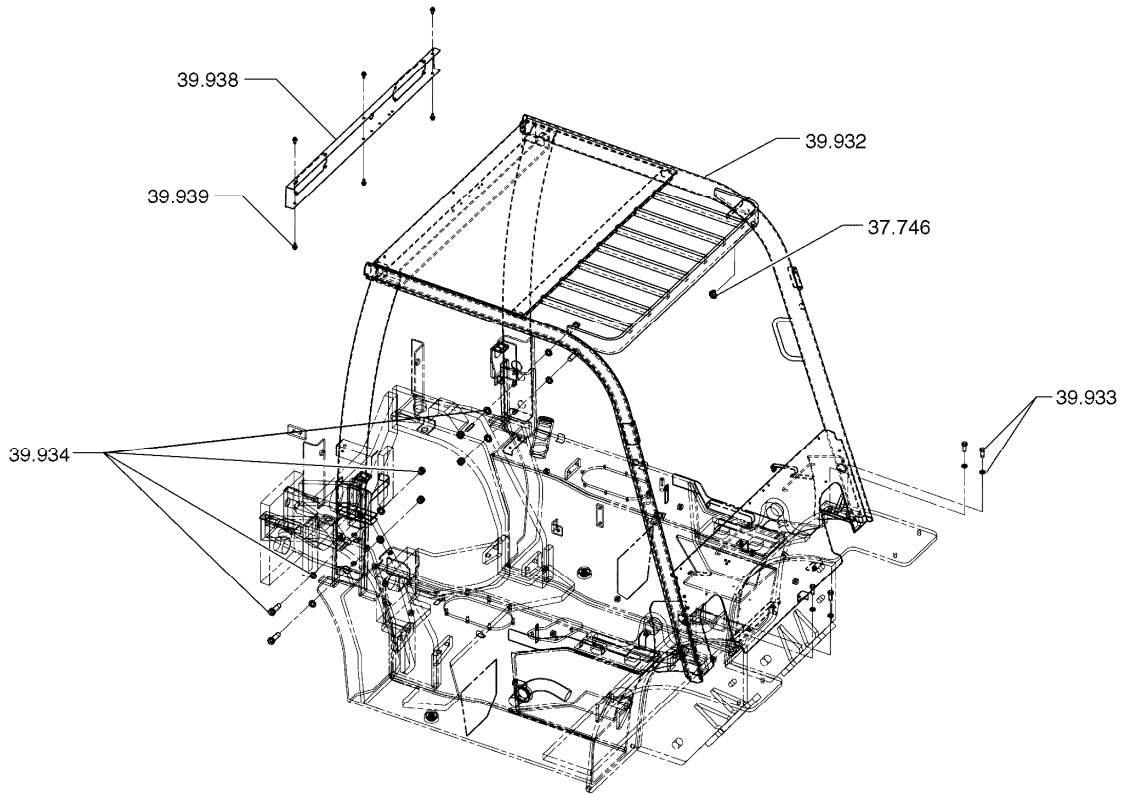

OVERHEAD GUARD MOUNTING **39-887**

37.746 PLUG, DRIVER OVERHEAD GUARD
플러그


39.932 GUARD, OVERHEAD
가드

39.933 FASTENER, OVERHEAD GUARD
패스너

39.934 FASTENER, OVERHEAD GUARD
패스너

39.938 BRACKET, OVERHEAD GUARD REAR SUPPORT
브라켓

39.939 FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET
패스너

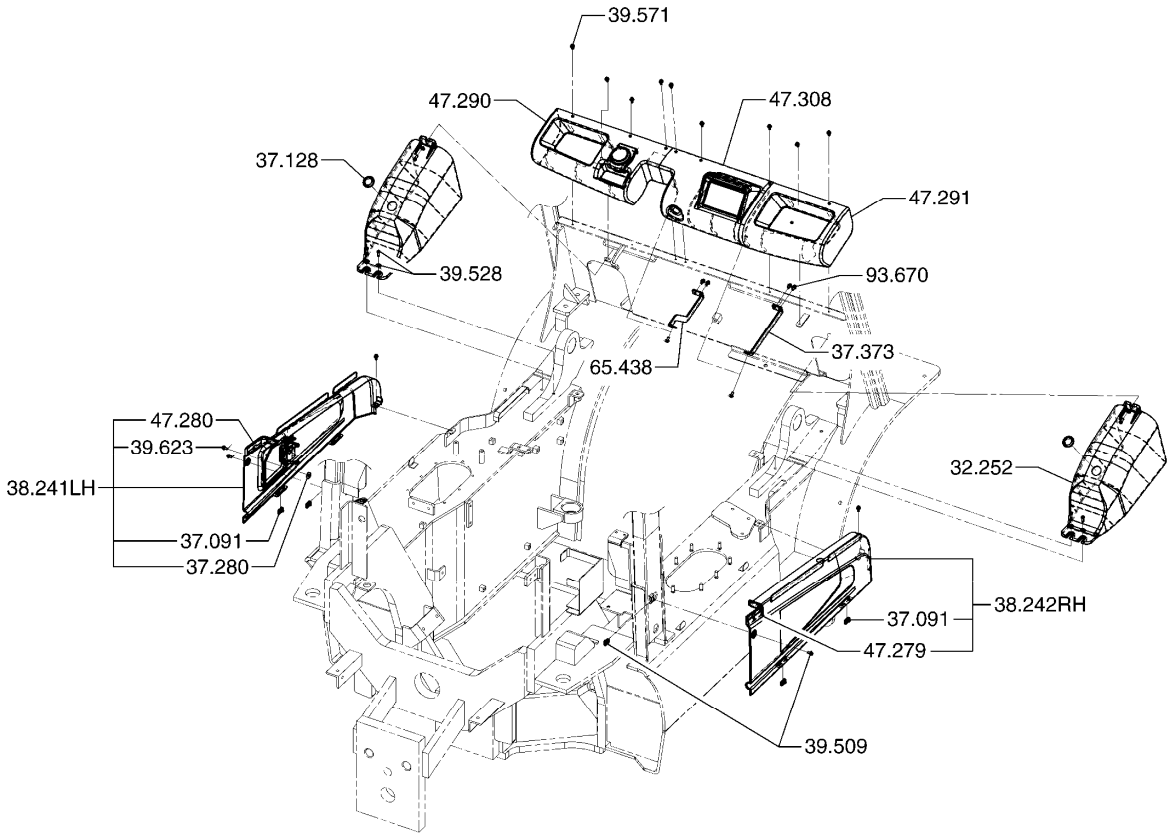

SHEET METAL **39-888**

32.252 COVER, TILT CYLINDER PISTON ROD BOOT
커버

37.091 DAMPENER, SIDE MEMBER VIBRATION
댐프너

37.128 PLUG, TILT CYLINDER COVER ACCESS HOLE
플러그

37.280 CAPSCREW, FRAME SIDE PLATE
캡스크류

37.373 BRACKET, CONTROL PANEL COVER MOUNTING
브라켓


38.241 COVER ASSEMBLY, SIDE LH
커버

38.242 COVER ASSEMBLY, SIDE RH
커버

39.509 FASTENER, SIDE HOOD
패스너

39.528 FASTENER, TILT CYLINDER COVER
패스너

39.571	FASTENER, DASH COVER 패스너
39.623	DAMPENER, FRAME SIDE PLATE *
47.279	RUBBER, SIDE COVER RH 러버
47.280	RUBBER, SIDE COVER LH 러버
47.290	COVER ASSEMBLY, DASH LH 커버
47.291	COVER ASSEMBLY, DASH RH 커버
47.308	COVER ASSEMBLY, DASH CENTER 커버
65.438	BRACKET, CONTROL PANEL MOUNTING 브라켓
93.670	FASTENER, CONTROL PANEL COVER MOUNTING BRACKET 패스너

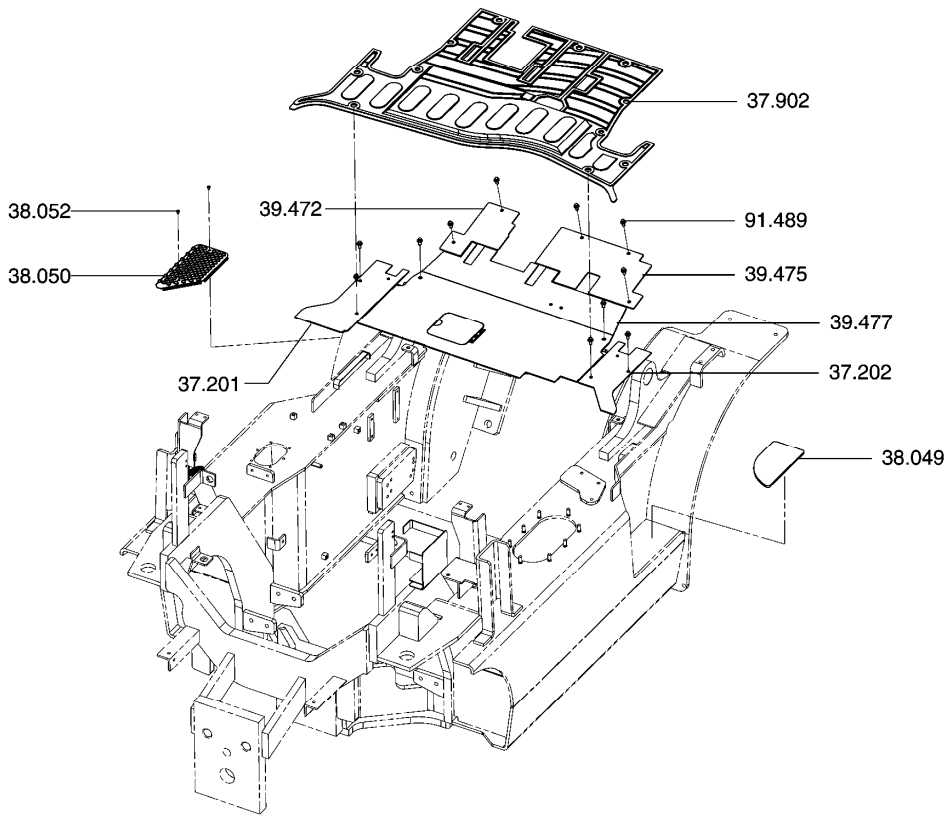

FLOOR PLATE **39-889**

37.201 PANEL, LH SIDE
판넬

37.202 PANEL, RH SIDE
판넬

37.902 MAT, FLOORPLATE
매트

38.049 STEP ASSEMBLY, RH
스텝

38.050 STEP ASSEMBLY, LH
스텝


38.052 FASTENER, STEP FRONT
패스너

39.472 PLATE, FRONT FLOOR LH
플레이트


39.475 PLATE, FRONT FLOOR
플레이트

39.477 PLATE, CENTER FLOOR
플레이트


91.489 FASTENER, FLOOR PLATE
패스너

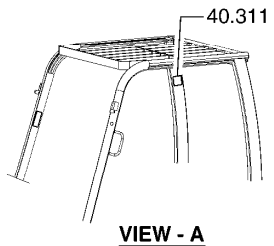


VIEW - A

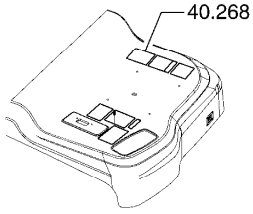


DETAIL - B

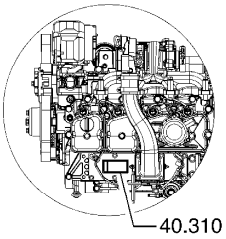

DETAIL - C
(ENGINE UPPER)

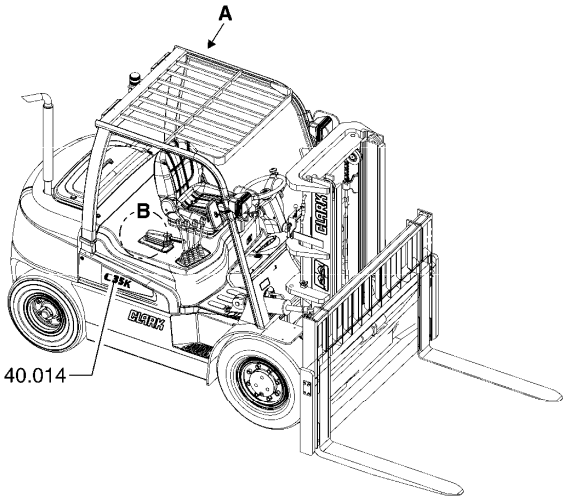

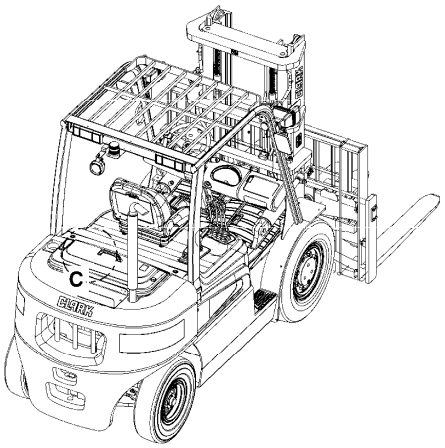


MODEL & SPECIFICATION DECALS **40-250**

40.014 DECAL, MODEL NAME
데칼

40.268 DECAL, SPEC
데칼

40.310 DECAL, EXHAUST GAS
데칼

40.311 DECAL, SOUND POWER LEVEL
데칼

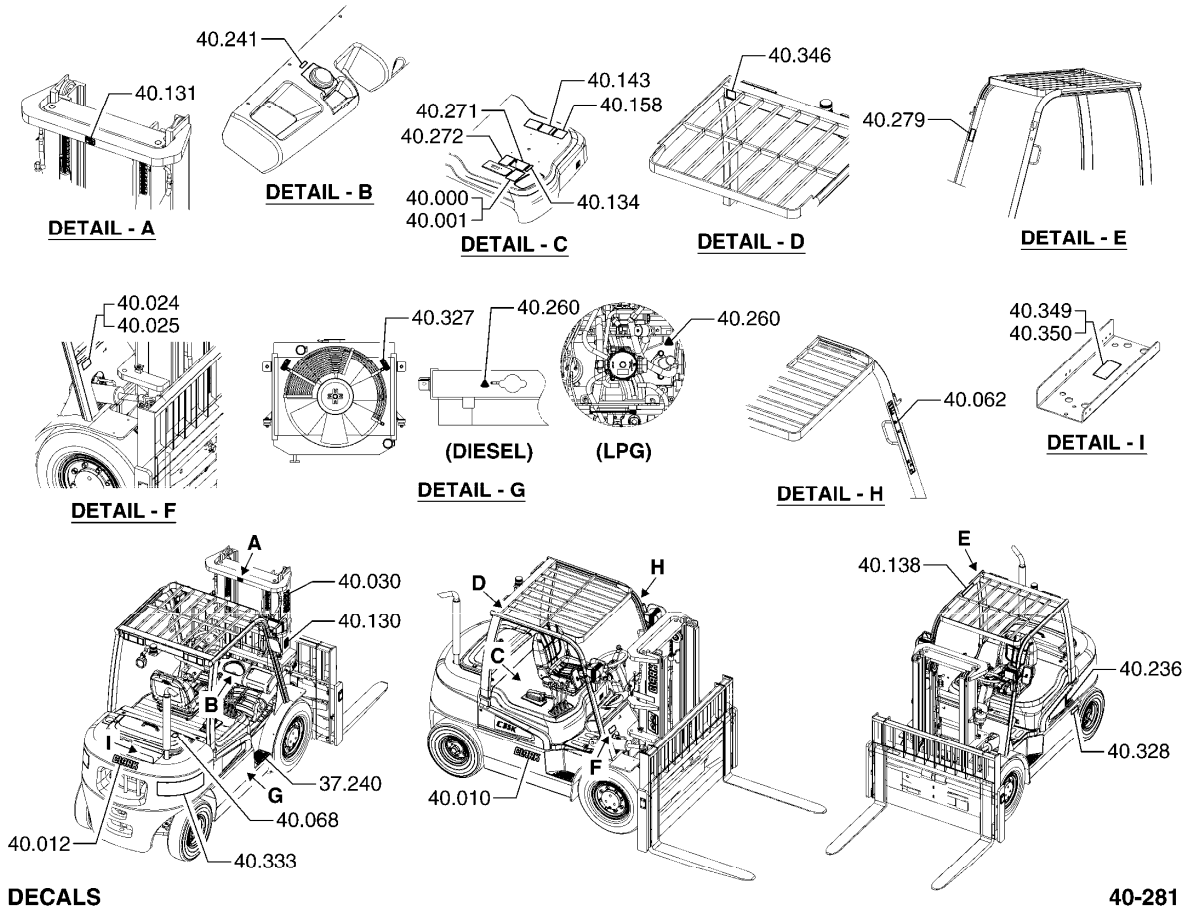

37.240 PAD, STEP WELL NON SLIP
패드

40.000 PLATE, CAPACITY & SERIAL NUMBER
플레이트

40.001 FASTENER, CAPACITY & SERIAL PLATE
패스너

40.010 DECAL, CLARK
데칼

40.012 DECAL, CLARK LOGO-SMALL
데칼


40.024 PLATE, UNDERWRITERS LABEL
플레이트

40.025 FASTENER, UNDERWRITERS LABEL PLATE
패스너

40.030 DECAL, CLARK VERTICAL
데칼

40.062 DECAL, DRIVERS CAUTION
플레J鉗

40.068	DECAL, HYD-SYSTEM OIL 데칼
40.130	LEGEND, SAFETY 범례
40.131	LEGEND, SAFETY 범례
40.134	DECAL, OPERATORS MANUAL LOCATION 데칼
40.138	DECAL, SAFETY 데칼
40.143	DECAL, OPERATORS INSTRUCTIONS 데칼
40.158	DECAL, WARNING INDICATOR 데칼
40.236	DECAL, FUEL 데칼
40.241	DECAL, BRAKE OIL SPEC 데칼
40.260	DECAL, HOT SURFACE WARNING 데칼
40.271	DECAL, LP GAS 데칼
40.272	DECAL, LP TANK 데칼
40.279	DECAL, STARTING PROCEDURE 데칼
40.327	DECAL, FAN WARNING 데칼
40.328	DECAL, WHEEL NUT WARNING 데칼
40.333	REFLECTOR, COUNTERWEIGHT *
40.346	DECAL, OVERHEAD GUARD DROP TEST *
40.349	PLATE, LESS LP TANK *
40.350	FASTENER, PLATE LESS LP TANK *

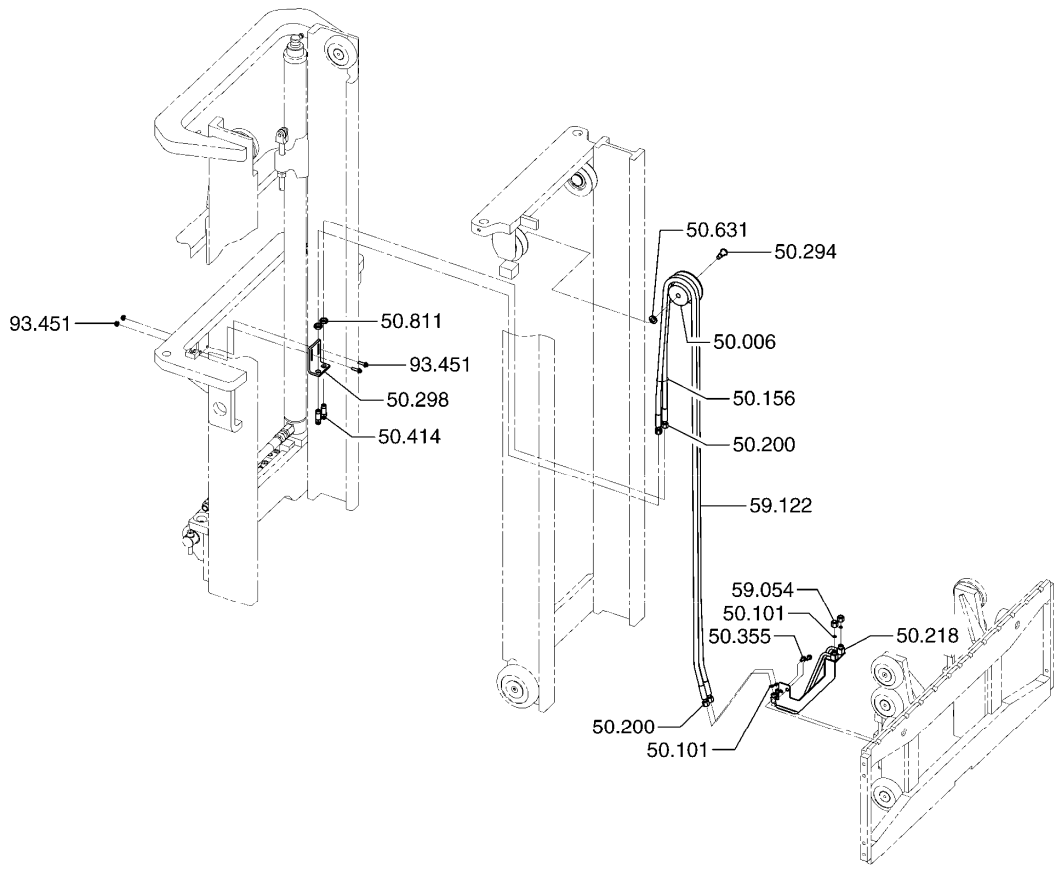

ATTACHMENT HOSE ADAPTATION (UPRIGHT) **50-245**

50.006 SHEAVE, DEVICE HOSE UPPER
쉬브

50.101 SEAL, DEVICE HOSE SWIVEL COUPLING
시일

50.156 CLIP, DEVICE HOSE
클립

50.200 COUPLING, DEVICE HOSE
커플링

50.218 TERMINAL BLOCK, DEVICE LH HOSE
터미널블록


50.294 PIVOT, DEVICE HOSE UPPER SHEAVE
피봇

50.298 BRACKET, DEVICE HOSE TERMINAL
브라켓

50.355 FASTENER, DEVICE HOSE TERMINAL BLOCK
패스너


50.414 FITTING, DEVICE HOSE CONNECTOR
피팅

50.631	SPACER, DEVICE HOSE SHEAVE 스페이서
50.811	NUT, DEVICE HOSE FITTING 너트
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

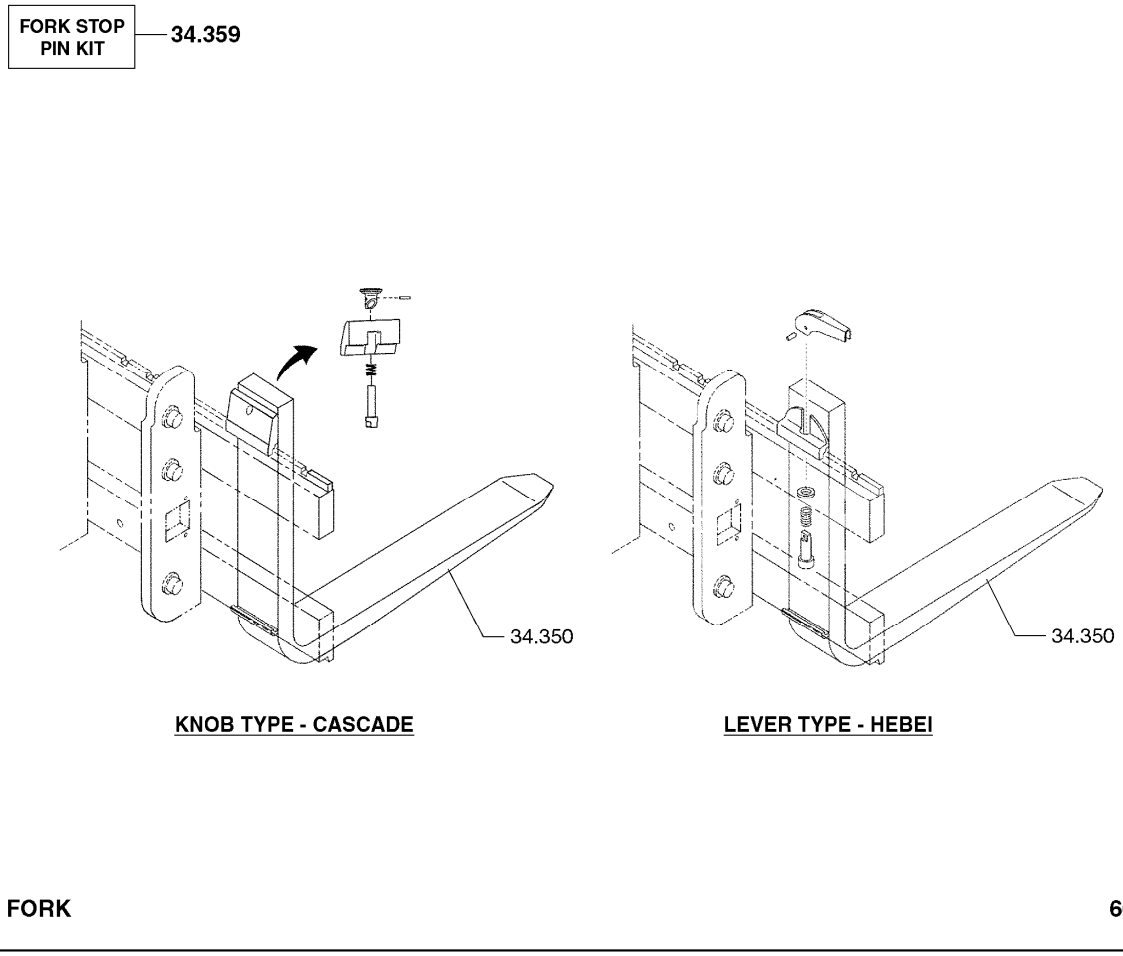

34.350 FORK ASSEMBLY
포크

34.359 KIT, FORK STOP PIN (CAPTIVE)
킷

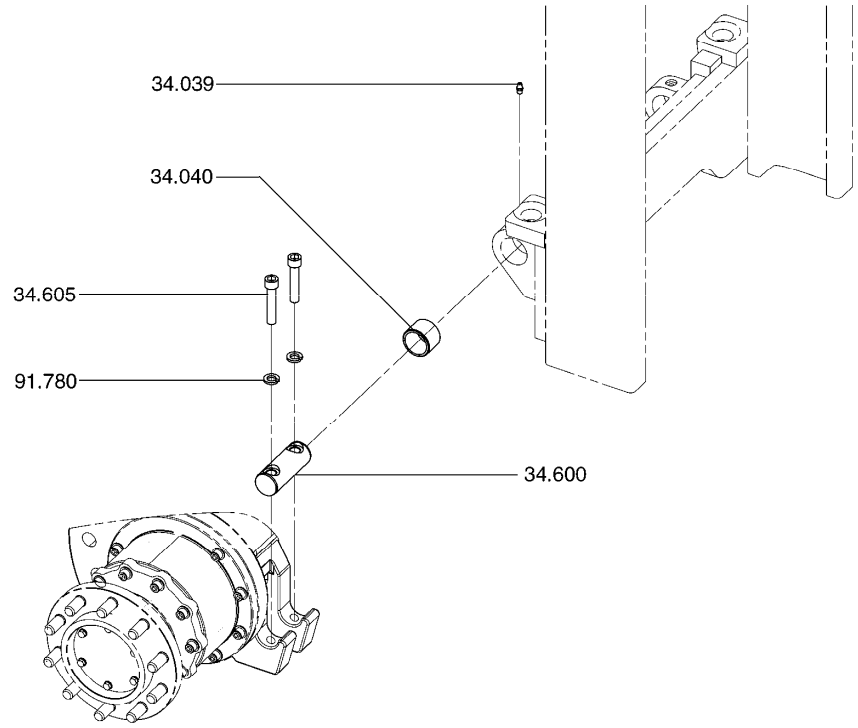

UPRIGHT MOUNTING **66-182**


34.039 FITTING-LUB, UPRIGHT TRUNNION
피팅

34.040 BUSHING, UPRIGHT SUPPORT PIN
부싱

34.600 SUPPORT, UPRIGHT
서포트

34.605 FASTENER, UPRIGHT SUPPORT PIN LOCK PLATE
패스너

91.780 LOCKWASHER, UPRIGHT SUPPORT PIN LOCK PLATE FASTENE
로크와셔

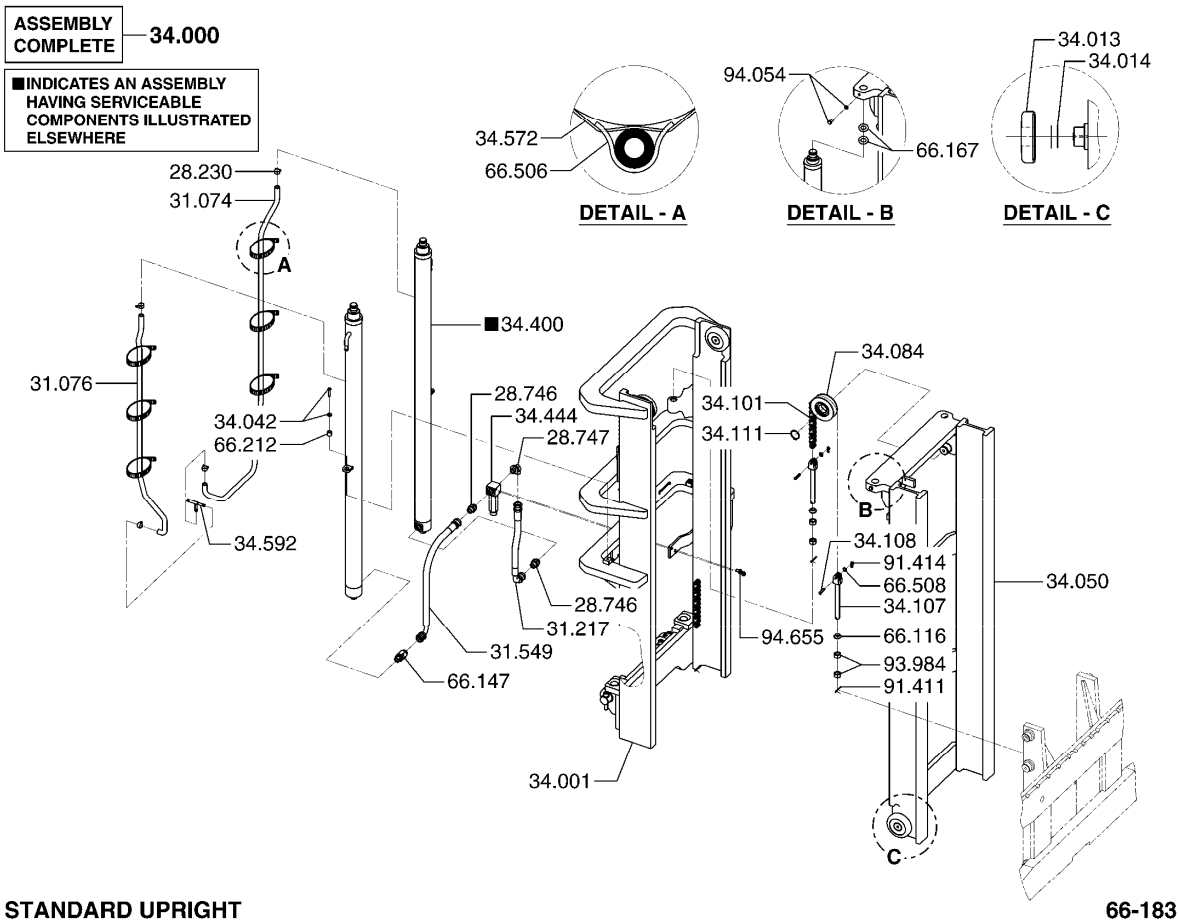


28.230	CLAMP, LIFT CYLINDER VENT LINE 클램프
28.746	FITTING, LIFT CYLINDER LINE 피팅
28.747	FITTING, LIFT CYLINDER LINE 피팅
31.074	LINE, LIFT CYLINDER VENT 라인
31.076	LINE, LIFT CYLINDER VENT 라인
31.217	LINE, LIFT CYLINDER INLET FITTING 라인
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인
34.000	UPRIGHT & LIFT CYL ASSEMBLY 업라이트와실린더
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아웃레일
34.013	ROLLER, UPRIGHT 롤러
34.014	SHIM, UPRIGHT ROLLER 심
34.042	FASTENER, LIFT CYLINDER (UPPER) 패스너
34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일
34.084	SHEAVE, LIFT CHAIN 쉬브
34.101	CHAIN, LIFT 체인
34.107	ANCHOR, LIFT CHAIN 앵커
34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
34.111	FASTENER, CHAIN SHEAVE SHAFT (CARRIER) 패스너
34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 벨브
34.572	STRAP, VENT LINE TO LIFT CYLINDER 스트랩
34.592	FITTING, LIFT CYLINDER VENT LINE 피팅
66.116	SPACER, LIFT CHAIN ANCHOR 스페이서
66.147	VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL 밸브
66.167	SHIM, LIFT CYLINDER UPPER 심
66.212	SPACER, LIFT CYLINDER FASTENER 스페이서
66.506	CLAMP, LIFT CYLINDER *
66.508	SPACER, LIFT CHAIN ANCHOR FASTENER *
91.411	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
91.414	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너

93.984 FASTENER, LIFT CHAIN ANCHOR
패스너


94.054 FASTENER, LIFT CYLINDER (UPPER)
패스너

94.655 FASTENER, LIFT CYLINDER LINE JUNCTION BLOCK
패스너

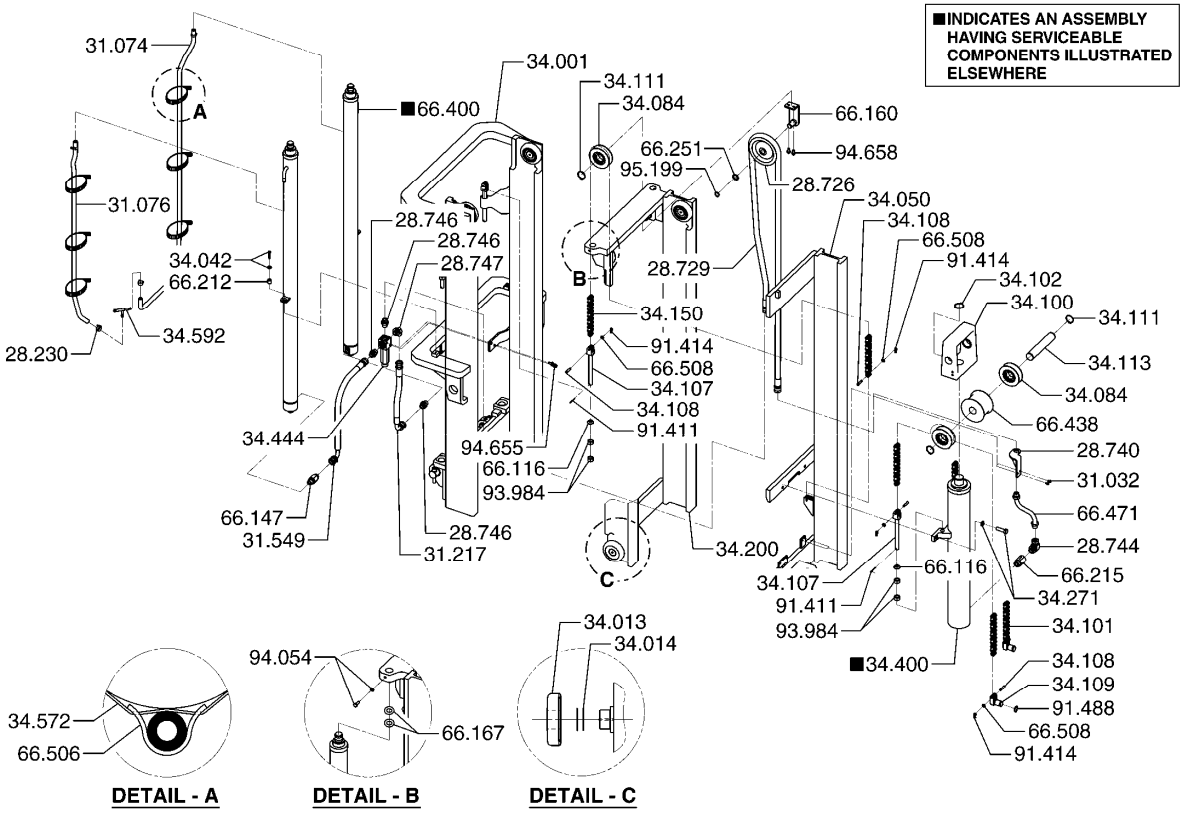

28.230	CLAMP, LIFT CYLINDER VENT LINE 클램프
28.726	SHEAVE, LIFT CYLINDER HOSE 쉬브
28.729	LINE, LIFT CYLINDER 라인
28.740	BRACKET, LIFT CYLINDER HOSE MOUNTING 브라켓
28.744	FITTING, LIFT CYLINDER LINE 피팅
28.746	FITTING, LIFT CYLINDER LINE 피팅
28.747	FITTING, LIFT CYLINDER LINE 피팅
31.032	FASTENER, LIFT CYLINDER LINE SUPPORT BRACKET 패스너
31.074	LINE, LIFT CYLINDER VENT 라인
31.076	LINE, LIFT CYLINDER VENT 라인
31.217	LINE, LIFT CYLINDER INLET FITTING 라인
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인
34.000	UPRIGHT & LIFT CYL ASSEMBLY 업라이트와실린더
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아웃레일
34.013	ROLLER, UPRIGHT 롤러
34.014	SHIM, UPRIGHT ROLLER 심
34.042	FASTENER, LIFT CYLINDER (UPPER) 패스너
34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일
34.084	SHEAVE, LIFT CHAIN 쉬브
34.100	CARRIER, LIFT CYLINDER CHAIN SHEAVE 캐리어
34.101	CHAIN, LIFT 체인
34.102	FASTENER, SHEAVE CARRIER 패스너
34.107	ANCHOR, LIFT CHAIN 앵커
34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
34.109	ANCHOR, LIFT CHAIN CARRIAGE END 앵커
34.111	FASTENER, CHAIN SHEAVE SHAFT (CARRIER) 패스너
34.113	SHAFT, LIFT CHAIN SHEAVE (CARRIER) 샤프트
34.150	CHAIN, UPRIGHT RAIL LIFT 체인
34.200	INTERMEDIATE RAIL WELDED ASSEMBLY, UPRIGHT 인터레일
34.271	FASTENER, LIFT CYLINDER LOWER 패스너

34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 밸브
34.572	STRAP, VENT LINE TO LIFT CYLINDER 스트랩
34.592	FITTING, LIFT CYLINDER VENT LINE 피팅
66.116	SPACER, LIFT CHAIN ANCHOR 스페이서
66.147	VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL 밸브
66.160	BRACKET, LIFT CYLINDER HOSE SHEAVE 브라켓
66.167	SHIM, LIFT CYLINDER UPPER 심
66.212	SPACER, LIFT CYLINDER FASTENER 스페이서
66.215	VALVE, LIFT CYLINDER PORT FLOW CONTROL 밸브
66.251	SPACER, LIFT CYLINDER LINE SHEAVE 스페이서
66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
66.438	SHEAVE, HOSE 쉬브
66.471	LINE, LIFT CYLINDER FEED 라인
66.506	CLAMP, LIFT CYLINDER *
66.508	SPACER, LIFT CHAIN ANCHOR FASTENER *
91.411	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
91.414	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
91.488	FASTENER, LIFT CHAIN ANCHOR 패스너
93.984	FASTENER, LIFT CHAIN ANCHOR 패스너
94.054	FASTENER, LIFT CYLINDER (UPPER) 패스너
94.655	FASTENER, LIFT CYLINDER LINE JUNCTION BLOCK 패스너
94.658	FASTENER, LIFT CYLINDER HOSE SHEAVE BRACKET 패스너
95.199	FASTENER, LIFT LINE SHEAVE 패스너

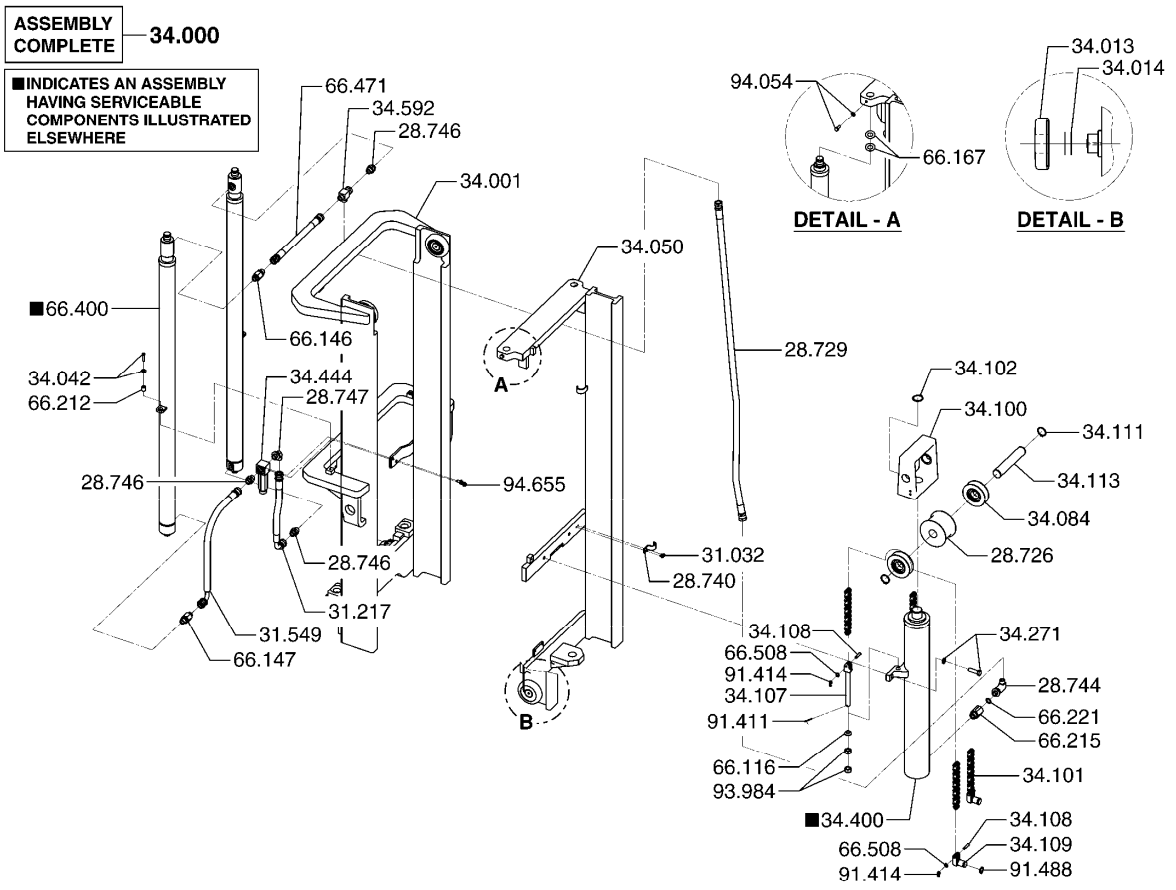

28.726	SHEAVE, LIFT CYLINDER HOSE 쉬브	34.084	SHEAVE, LIFT CHAIN 쉬브
28.729	LINE, LIFT CYLINDER 라인	34.100	CARRIER, LIFT CYLINDER CHAIN SHEAVE 캐리어
28.740	BRACKET, LIFT CYLINDER HOSE MOUNTING 브라켓	34.101	CHAIN, LIFT 체인
28.744	FITTING, LIFT CYLINDER LINE 피팅	34.102	FASTENER, SHEAVE CARRIER 패스너
28.746	FITTING, LIFT CYLINDER LINE 피팅	34.107	ANCHOR, LIFT CHAIN 앵커
28.747	FITTING, LIFT CYLINDER LINE 피팅	34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
31.032	FASTENER, LIFT CYLINDER LINE SUPPORT BRACKET 패스너	34.109	ANCHOR, LIFT CHAIN CARRIAGE END 앵커
31.217	LINE, LIFT CYLINDER INLET FITTING 라인	34.111	FASTENER, CHAIN SHEAVE SHAFT (CARRIER) 패스너
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인	34.113	SHAFT, LIFT CHAIN SHEAVE (CARRIER) 샤프트
34.000	UPRIGHT & LIFT CYL ASSEMBLY 업라이트와실린더	34.271	FASTENER, LIFT CYLINDER LOWER 패스너
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아웃레일	34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.013	ROLLER, UPRIGHT 롤러	34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 벨브
34.014	SHIM, UPRIGHT ROLLER 심	34.592	FITTING, LIFT CYLINDER VENT LINE 피팅
34.042	FASTENER, LIFT CYLINDER (UPPER) 패스너	66.116	SPACER, LIFT CHAIN ANCHOR 스페이서
34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일	66.146	VALVE, LIFT CYLINDER PORT FLOW CONTROL 밸브

66.147 VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL
밸브

66.167 SHIM, LIFT CYLINDER UPPER
심

66.212 SPACER, LIFT CYLINDER FASTENER
스페이서

66.215 VALVE, LIFT CYLINDER PORT FLOW CONTROL
밸브

66.221 SEAL, LIFT CYLINDER LINE FITTING
시일

66.400 CYLINDER ASSEMBLY, FINAL LIFT
실린더

66.471 LINE, LIFT CYLINDER FEED
라인

66.508 SPACER, LIFT CHAIN ANCHOR FASTENER
*

91.411 RETAINER, LIFT CHAIN TO ANCHOR FASTENER
리테이너


91.414 RETAINER, LIFT CHAIN TO ANCHOR FASTENER
리테이너

91.488 FASTENER, LIFT CHAIN ANCHOR
패스너

93.984 FASTENER, LIFT CHAIN ANCHOR
패스너

94.054 FASTENER, LIFT CYLINDER (UPPER)
패스너

94.655 FASTENER, LIFT CYLINDER LINE JUNCTION BLOCK
패스너

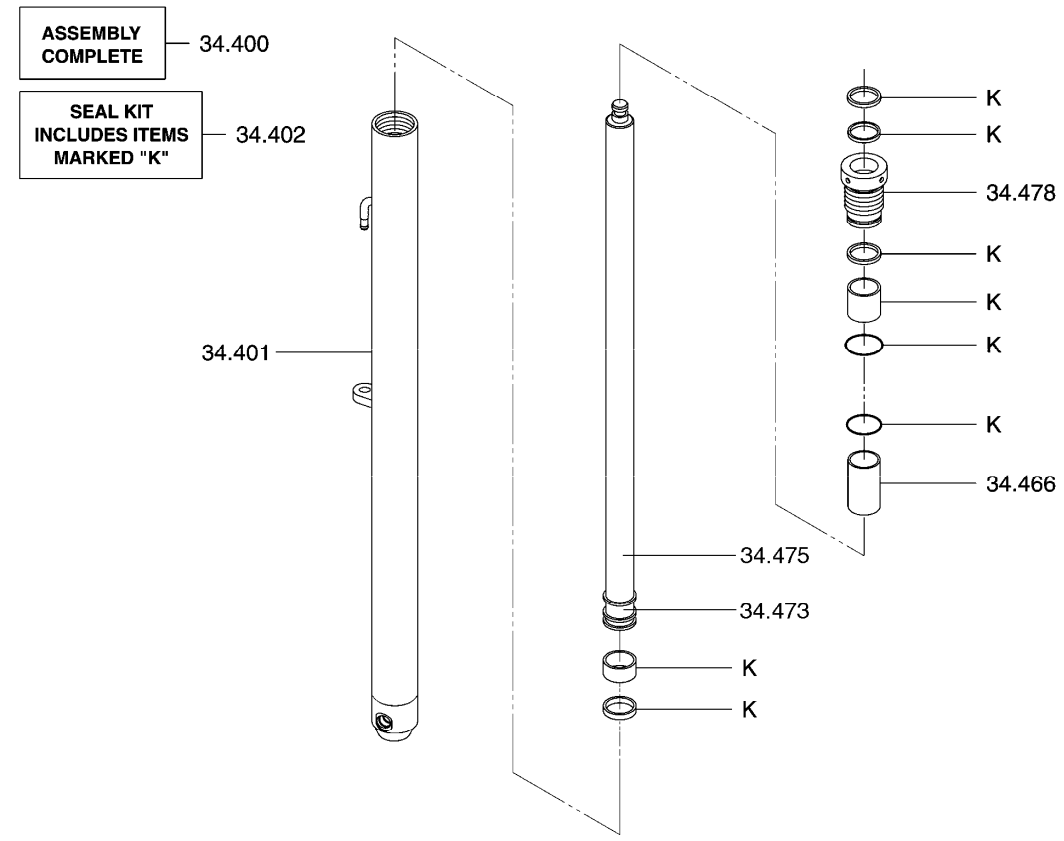

34.400 CYLINDER ASSEMBLY, LIFT
실린더

34.401 BARREL, LIFT CYLINDER
배럴


34.402 SEAL & PACKING KIT, LIFT CYLINDER
시일과팩킹킷

34.466 SPACER, LIFT CYLINDER FEED TUBE
스페이서

34.473 PISTON, LIFT CYLINDER
피스톤

34.475 ROD, LIFT CYLINDER
로드

34.478 GLAND, LIFT CYLINDER
그랜드

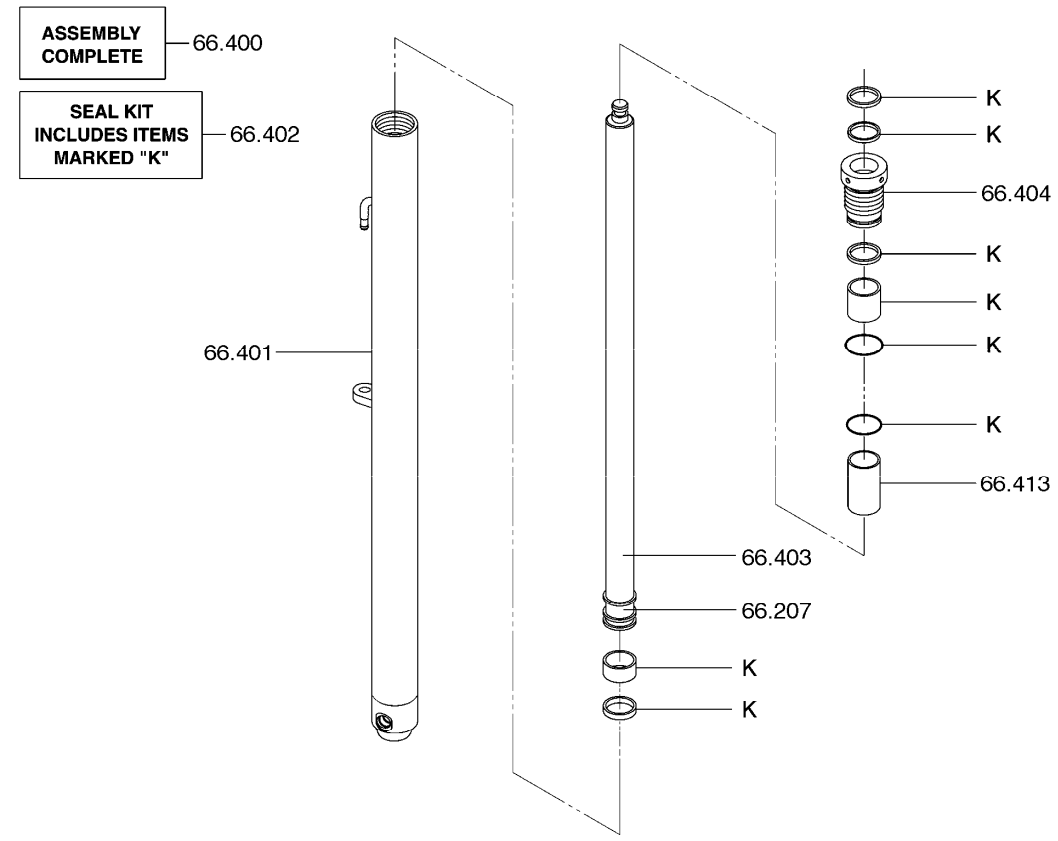

SECONDARY CYLINDER ASSEMBLY **66-187**

66.207 PISTON, FINAL LIFT CYLINDER
피스톤

66.400 CYLINDER ASSEMBLY, FINAL LIFT
실린더


66.401 BARREL, FINAL LIFT CYLINDER
배럴

66.402 PACKING KIT, FINAL LIFT CYLINDER
패킹킷

66.403 PISTON ROD, FINAL LIFT CYLINDER
피스톤로드

66.404 CAP, FINAL LIFT CYLINDER GLAND
캡

66.413 SPACER, FINAL LIFT CYLINDER PISTON ROD
스페이서

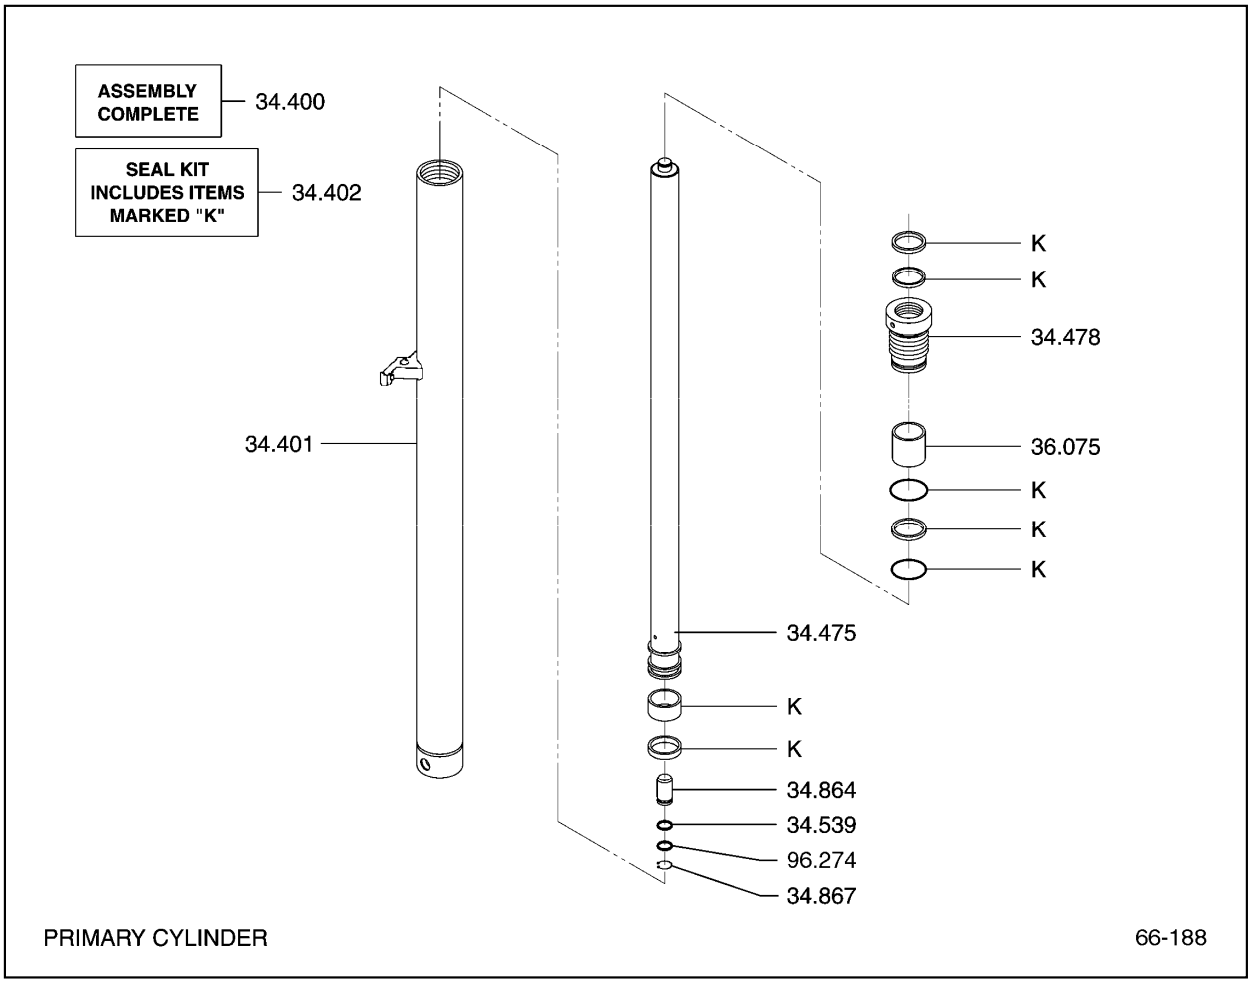

34.400 CYLINDER ASSEMBLY, LIFT
실린더

34.401 BARREL, LIFT CYLINDER
배럴

34.402 SEAL & PACKING KIT, LIFT CYLINDER
시일과팩킹킷

34.475 ROD, LIFT CYLINDER
로드

34.478 GLAND, LIFT CYLINDER
그랜드


34.539 RETAINER, LIFT CYLINDER GLAND BUSHING
리테이너

34.864 CHECK VALVE, LIFT CYLINDER
체크밸브

34.867 RETAINER, LIFT CYLINDER CHECK VALVE
리테이너

36.075 BUSHING, CYLINDER PIVOT
부싱

96.274 WASHER, LIFT CYLINDER CHECK VALVE
옥셔

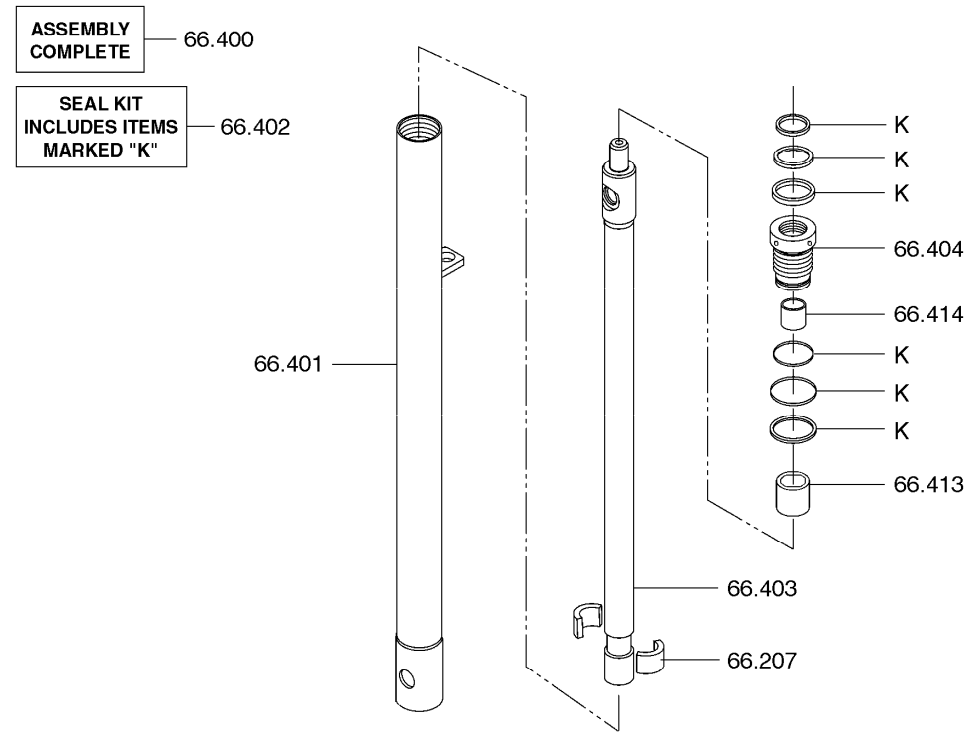

SECONDARY CYLINDER ASSEMBLY 66-189

66.207 PISTON, FINAL LIFT CYLINDER
피스톤

66.400 CYLINDER ASSEMBLY, FINAL LIFT
실린더

66.401 BARREL, FINAL LIFT CYLINDER
배럴


66.402 PACKING KIT, FINAL LIFT CYLINDER
패킹킷

66.403 PISTON ROD, FINAL LIFT CYLINDER
피스톤로드

66.404 CAP, FINAL LIFT CYLINDER GLAND
캡

66.413 SPACER, FINAL LIFT CYLINDER PISTON ROD
스페이서


66.414 BEARING, FINAL LIFT CYLINDER GLAND CAP
베어링

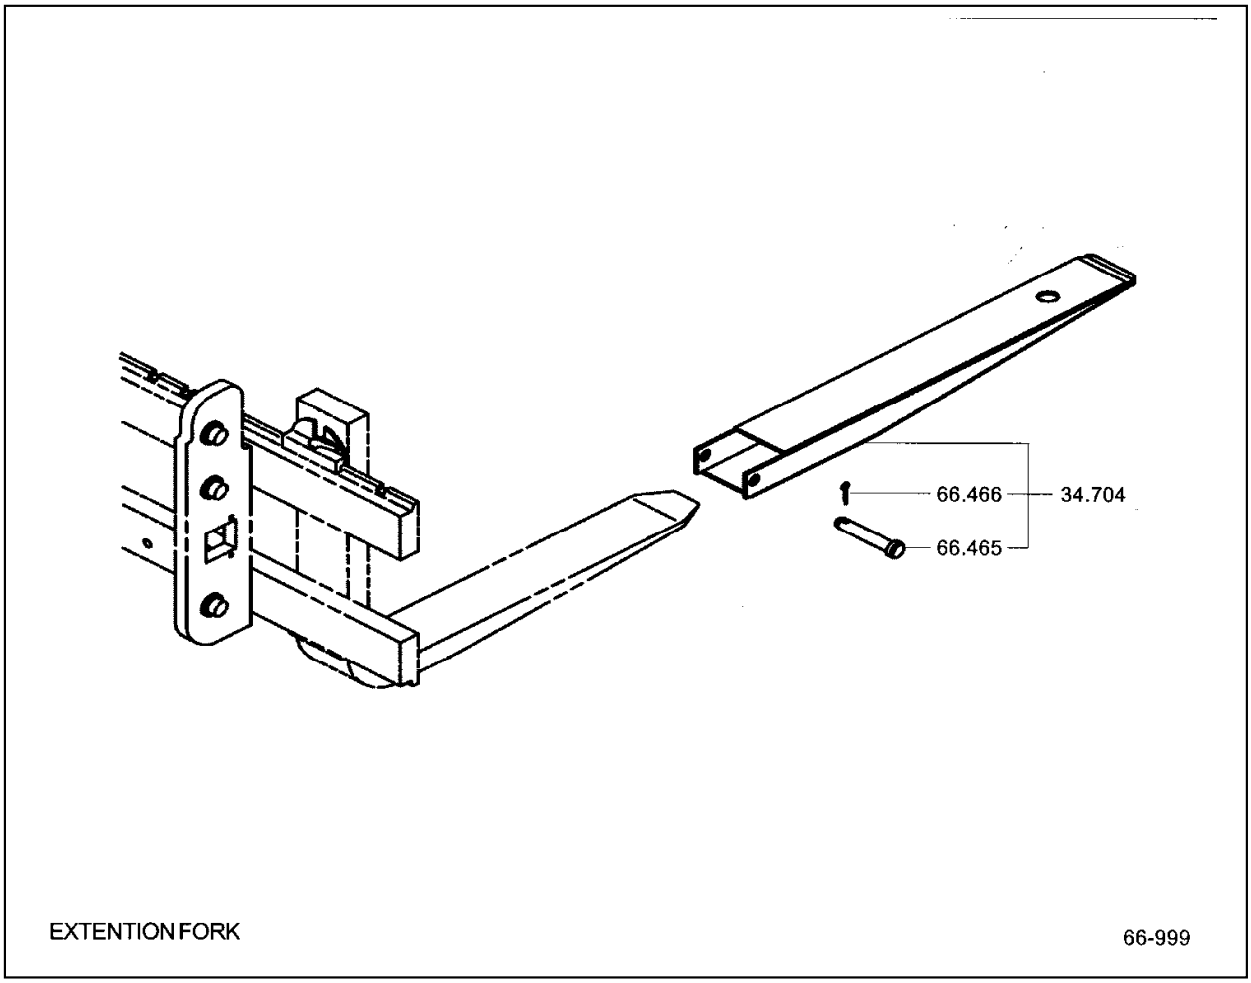

34.704 EXTENSION, FORK ASSEMBLY COMPLETE
익스텐션

66.465 PIN, EXTENTION FORK
핀

66.466 PIN, EXTENTION FORK
핀

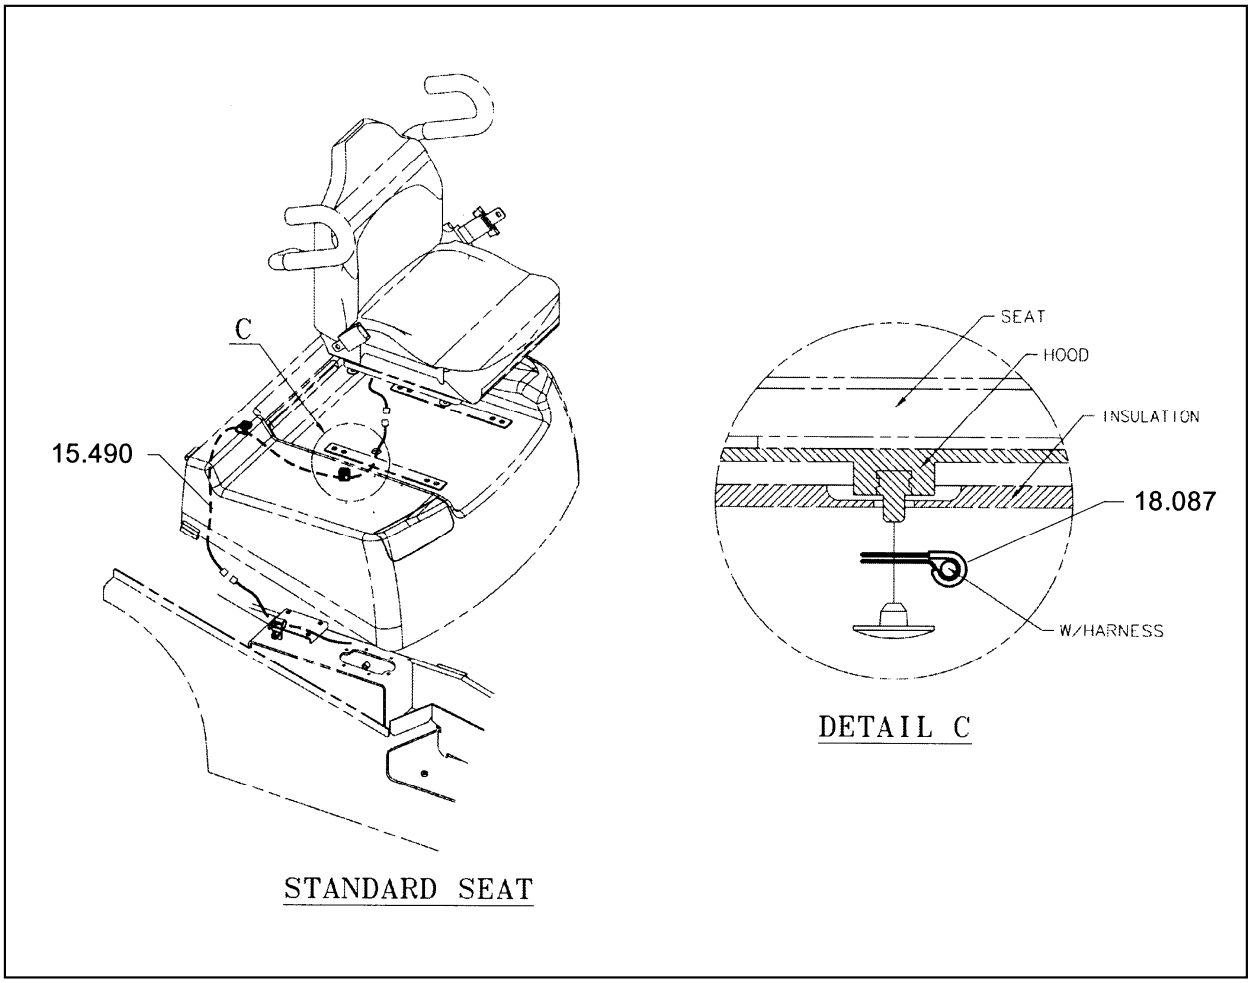

15.490 HARNESS, SEAT ACTUATED ENGINE SHUTDOWN WIRING
하네스

18.087 CLIP, SEAT SAFETY SWITCH WIRE
클립