부품 매뉴얼
PARTS MANUAL

JANEIRO 2013

RUTHZIL TRATOR COMERCIAL DE PEÇAS LTDA 11 97083-6812 ROLANDO


CLARK

C 60/70/75 L

SERIAL NUMBER : P680L - XXXX - 9826 KF (Tier 0)

부품 청구시 항상 장비의 SERIAL NO. 도 함께 알려 주십시오.

ALWAYS GIVE TRUCK SERIAL NUMBER WHEN ORDERING PARTS.

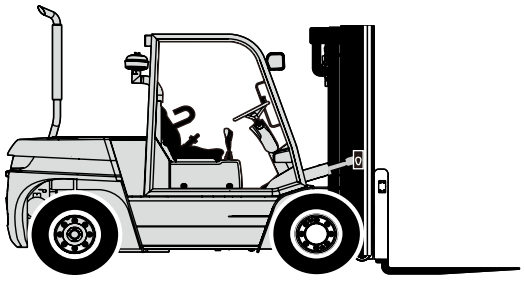

Part No. 8064549

Jan. 2013

CLARK THE FORKLIFT

(본사) 경기도 부천시 오정구 오정동 202-1
(Head office) 202-1 Ojung-Dong, Ojung-Gu, Bucheon-city, Kyunggi-do, Korea
(공장) 경남 창원시 웅남동 40-1
(Factory) 40-1 Ungnam-dong, Changwon-city, Kyungnam, Korea

00-540 ENGINE MOUNTING
엔진 어셈블리

00-684 CRANKCASE/CAMSHAFT
크랭크케이스 / 캠 축

00-685 CRANKCASE HEAD
크랭크케이스 헤드

00-745 ENGINE FRONT & REAR MOUNTING
엔진 전후방 마운팅

01-272 HYDRAULIC OIL COOLER MOUNTING
*

01-337 ENGINE DRESSING PARTS
엔진 드레싱 부품군

01-357 COOLING SYSTEM
냉각 장치

02-474 AIR CLEANER ASSEMBLY
에어 크리너 어셈블리

02-478 INDICATOR LIGHT INSTALLATION
지시등 조립그룹

02-491 ACCELERATOR SYSTEM
악셀레이터 장치

03-279 LPG TANK MOUNTING
LPG 탱크 마운팅

03-382 LICENSE PLATE MOUNTING
번호판 마운팅

03-398 SWING DOWN LPG TANK MTG
스윙 다운 LPG 탱크 조립그룹

03-520 FUEL SYSTEM
연료 시스템

03-524 EXHAUST SYSTEM
배기 장치

03-579 INTAKE SYSTEM
흡기 시스템 (듀얼)

03-581 SWITCH INSTALLATION
스위치 조립그룹

03-655 FUEL LINE
연료 라인

03-659 FUEL SYSTEM
연료 시스템

05-033 CONVERTER PUMP
컨버터 펌프

05-034 CONVERTER PUMP DRIVE
컨버터 펌프 드라이브

05-045 TORQUE CONVERTER HOUSING
토오크 컨버터 하우징

05-046 TORQUE CONVERTER
토오크 컨버터

06-102 CLUTCH PACK
클러치 팩

06-105 CLUTCH ASSEMBLY
클러치 어셈블리

06-106 CLUTCH ASSEMBLY
클러치 어셈블리

06-107 REVERSE UNIT
후진 유니트

06-632 HYDRATORK TRANSMISSION
하이드로토크 트랜스미션

07-080 TRANSMISSION MOUNTING
트랜스미션 마운팅

08-038 TRANSMISSION CONTROL COVER
트랜스미션 컨트롤 커버

09-004 TRANSMISSION CASE
트랜스미션 케이스

10-104 TRANS COOLING LINES
트랜스미션 쿨링 라인

11-112 ELECTRICAL COMPONENTS
전기장치 구성품

11-113 DISTRIBUTOR ASSEMBLY
디스트리뷰터

12-020 ALTERNATOR ASSEMBLY
알터네이터 어셈블리

12-041 BATTERY MOUNTING
베터리 어셈블리

13-162 STROBE LIGHT MOUNTING
경광등 어셈블리

13-163 COMBINATION LAMP INSTALLATION
컴비네이션 램프 조립그룹

13-182 STROBE LIGHT
경광등

13-183 STROBE LIGHT MOUNTING
경광등 어셈블리

13-228 BACK-UP ALARM INSTALLATION
백-업 알람 조립그룹

13-292 KEY SWITCH INSTALLATION
키스위치 조립그룹

13-298 REAR WORK LIGHT INSTALLATION
후방등 조립그룹

13-300 HEAD LAMP INSTALLATION
헤드램프 조립그룹

13-302 SIGNAL LIGHT INSTALLATION
시그널 라이트 조립그룹

13-304 COMBINATION LAMP INSTALLATION
컴비네이션 램프 조립그룹

13-305 REAR WORK LIGHT INSTALLATION
후방등 조립그룹

13-317 HORN SWITCH INSTALLATION
혼 스위치 조립그룹

14-151 REAR DETECTOR INSTALLATION
리어 디텍터 조립그룹

14-493 ELECTRICAL WIRING
전기장치 와이어링

14-519 ELECTRICAL COMPONENTS
전기장치 구성품

15-016 PUSH BUTTON WIRING
푸시버턴 와이어링

20-192 DIFFERENTIAL & CARRIER ASSY
차동장치 & 캐리어

20-193 DRIVE AXLE HOUSING
드라이브 액슬 하우징

20-194 DRIVE AXLE HUB ASSEMBLY
드라이브 액슬 허브 어셈블리

20-195 DRIVE AXLE MOUNTING
드라이브 액슬 어셈블리

20-198 DRIVE AXLE OIL COOLER MOUNTING
드라이브액슬 오일쿨러 마운팅

21-015 PROP SHAFT
프로펠라 축

22-014 STEER WHEEL & TIRE MOUNTING
스티어휠 & 타이어 마운팅

22-016 DUAL DRIVE WHEEL & TIRE MOUNTING
*

22-024 DRIVE WHEEL & TIRE (SOLID TYPE)
*

22-025 STEER WHEEL & TIRE (SOLID TYPE)
*

22-041 DRIVE WHEEL AND TIRE
드라이브 휠 및 타이어

22-042 STEER WHEEL & TIRE
스티어링 휠 & 타이어

23-228 PARKING BRAKE MOUNTING
파킹브레이크 마운팅

23-230 PARKING BRAKE ASSEMBLY
주차 브레이크 어셈블리

23-539 PARKING BRAKE SYSTEM
주차 브레이크 시스템

23-540 BRAKE & INCHING LINES
브레이크 및 인칭라인

23-542 BRAKE LINES
브레이크 라인

24-007 BRAKE ENERGIZER ASSEMBLY
브레이크 에너자이어 어셈블리

25-133 STEERING WHEEL & COLUMN & GEAR MOUNTING
*

25-145 STEERING UNIT
스티어링 유니트

25-291 STEERING COLUMN SHAFT ASSEMBLY
스티어링 컬럼 보조 어셈블리

25-374 STEERING COLUMN ASSEMBLY
스티어 컬럼 어셈블리

26-262 STEER AXLE MOUNTING
스티어링 액슬 마운팅

26-267 STEER CYLINDER
스티어링 실린더

26-268 STEER AXLE ASSEMBLY
스티어링 액슬 어셈블리

26-319 HYDRAULIC STEERING SYSTEM
유압 스티어링 시스템

27-000 PRIORITY VALVE ASSEMBLY
메인 밸브 어셈블리

27-001 FLOW CONTROL VALVE
플루우 컨트롤 밸브

29-283 HYDRAULIC PUMP ASSEMBLY
유압 펌프 어셈블리

29-306 HYDRAULIC PUMP MOUNTING
유압 펌프 마운팅

29-320 HYDRAULIC TANK & COMPONENTS MOUNTING
유압탱크 & 구성품 마운팅

30-339 HYDRAULIC VALVE MOUNTING
유압 밸브 마운팅

30-363 HYDRAULIC CONTROL VALVE-2 SPOOL
유압 컨트롤 밸브 - 2 스풀

30-364 HYDRAULIC CONTROL VALVE-3 SPOOL
유압 컨트롤 밸브 - 3 스풀

30-365 HYDRAULIC CONTROL VALVE-4 SPOOL
유압 컨트롤 밸브 - 4 스풀

30-397 MAIN CONTROL VALVE 2-SPOOL
메인 컨트롤 밸브 - 2 스풀

30-398 HYDRAULIC VALVE MOUNTING (3SPOOL)
유압벨브 마운팅 (3스풀)

30-399 MAIN CONTROL VALVE 4-SPOOL
메인 컨트롤 밸브 - 4 스풀

30-579 MAIN CONTROL VALVE 2-SPOOL(PUSH BUTTON)
메인 컨트롤 벨브 2-스풀 (푸쉬버튼)

30-580 MAIN CONTROL VALVE 3-SPOOL(PUSH BUTTON)
메인 컨트롤 밸브 - 3 스풀 (푸시버턴)

30-581 MAIN CONTROL VALVE 4-SPOOL(PUSH BUTTON)
메인 컨트롤 밸브 - 4 스풀 (푸시버턴)

30-582 MAIN CONTROL VALVE 3-SPOOL(PUSH BUTTON)
메인 컨트롤 밸브 - 3 스풀 (푸시버턴)

30-583 MAIN CONTROL VALVE 4-SPOOL(PUSH BUTTON)
메인 컨트롤 밸브 - 4 스풀 (푸시버턴)

31-082 HYDRAULIC LIFT & TILT LINES
유압 리프트 & 틸트 라인

31-100 HYDRAULIC RETURN LINES
유압 리턴 라인

31-181 TILT LIMIT WITH OVERRIDE
틸트 제한해제

31-242 AUX. VALVE PLUMBING
보조 밸브 라인

31-243 AUX. VALVE PLUMBING
보조 밸브 라인

31-315 HYDRAULIC LIFT & TILT LINES
유압 리프트 & 틸트 라인

31-316 HYDRAULIC SUPPLY LINES
유압 공급 라인

31-317 HYDRAULIC RETURN LINES
유압 리턴 라인

31-318 HYDRAULIC SUPPLY LINES
유압 공급 라인

31-321 HYDRAULIC RETURN LINES
유압 리턴 라인

32-146 TILT CYLINDER MOUNTING
틸트 실린더 어셈블리

32-154 HYDRAULIC ACCUMULATOR INSTALLATION
유압 어큐물레이터 조립그룹

32-163 TILT CYLINDER
틸트 실린더

32-167 TILT AMOUNT GROUP
틸트 어마운트 그룹

33-130 SELECTOR SOLENOID VALVE
셀렉터 솔레노이드 밸브

34-185 CARRIAGE ASSEMBLY (HOOK TYPE)
캐리지 어셈블리 (후크 타입)

34-192 CARRIAGE ASSEMBLY
캐리지 어셈블리

34-193 CARRIAGE ASSEMBLY
캐리지 어셈블리

37-023 REAR VIEW MIRROR MOUNTING
후방미러 마운팅

37-060 REAR WINDOW ASSEMBLY
*

37-068 ENCLOSED CAB
캡 (박스형)

37-071 ENCLOSED CAB
캡 (박스형)

37-074 ELECTRICAL COMPONENTS (CAB)
*

37-075 CAB MOUNTING
캐빈 마운팅

37-086 SHEET METAL
시트 메탈

37-092 REAR ACCESSORY MOUNTING
리어 악세서리 마운팅

37-124 SEAT ARMREST ASSEMBLY
아암레스트 어셈블리

38-269 COUNTERWEIGHT MOUNTING
카운터웨이터 조립그룹

38-270 FRAME TANK BOTTOM PLUG
프레임 탱크 하단 플러그

38-277 BATTERY & TOOL COVER MOUNTING
베터리 & 툴커버 마운팅

39-661 SEAT ASSEMBLY
시트 어셈블리

39-797 SPONGE MOUNTING
스폰지 마운팅

39-829 SEAT MOUNTING
시트 어셈블리

39-834 SEAT ASSEMBLY (SUSPENSION)
시트 어셈블리

39-847 HOOD MOUNTING
후드 마운팅

39-848 OVERHEAD GUARD MOUNTING
오버헤드가드 마운팅

39-956 ELECTRICAL COMPONENTS (CAB)
*

39-957 ENCLOSED CAB
캡 (박스형)

39-958 CAB MOUNTING
캐빈 마운팅

39-961 AUDIO INSTALLATION
오디오 조립그룹

39-964 FLOOR PLATE MOUNTING
플로어 플레이트 마운팅

40-265 DECALS
데칼

40-266 ATTACHMENT NAME PLATE
작업장치 명판

40-282 MODEL & SPECIFICATION DECALS
*

41-018 HEATER INSTALLATION
히터 조립그룹

41-023 HEATER INSTALLATION
히터 조립그룹

41-089 AIR CONDITIONER CONDENSER MOUNTING
*

41-116 AUDIO INSTALLATION
오디오 조립그룹

47-000 SEAT WING KIT
시트윙 키트

50-118 4 HOSE ADAPT-2 STAGE UPRIGHT
4호스 어댑터 - 2단 업라이트

50-146 AUXILIARY VALVE LINES
보조 밸브 라인

50-186 AUX. VALVE PLUMBING
보조 밸브 라인

50-196 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
작업장치 호스 적용 (업라이트)

50-262 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
작업장치 호스 적용 (업라이트)

50-271 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
작업장치 호스 적용 (업라이트)

50-276 ATTACHMENT HOSE SETTINGS (UPRIGHT)
*

50-280 QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION
퀵 차단 (호스 어댑션 장치용)

50-281 QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION
퀵 차단 (호스 어댑션 장치용)

50-294 HOSE ADAPTATION
호스 어댑션

50-791 ATTACHMENT HOSE ADAPTATION (CARRIAGE)
작업장치 호스 적용 (캐리지)

50-807 SOLENOID VALVE FOR DEVICE HOSE ADAPTATION
*

53-016 SIDE SHIFT CARRIAGE (HOOK TYPE)
사이드 쉬프트 캐리지 (후크 타입)

53-018 SIDESHIFT CYLINDER
사이드 쉬프트 실린더

66-013 LIFT CYLINDER PIPING
리프트 실린더 파이핑

66-022 UPRIGHT MOUNTING
업라이트 마운팅

66-058 FORK
포크

66-099 LIFT CYLINDER
리프트 실린더

66-173 PRIMARY CYLINDER
1차 실린더

66-175 SECONDARY CYLINDER ASSEMBLY
2차 실린더 어셈블리


66-237 STANDARD UPRIGHT
표준 업라이트

66-239 TRIPLE STAGE UPRIGHT
3단 업라이트

66-999 EXTENTION FORK
익스텐션 포크

75-004 SEAT OPERATED BRAKE
시트 조작 브레이크

75-012 SEAT OPERATED BRAKE SWITCH
시트 조작 브레이크 스위치

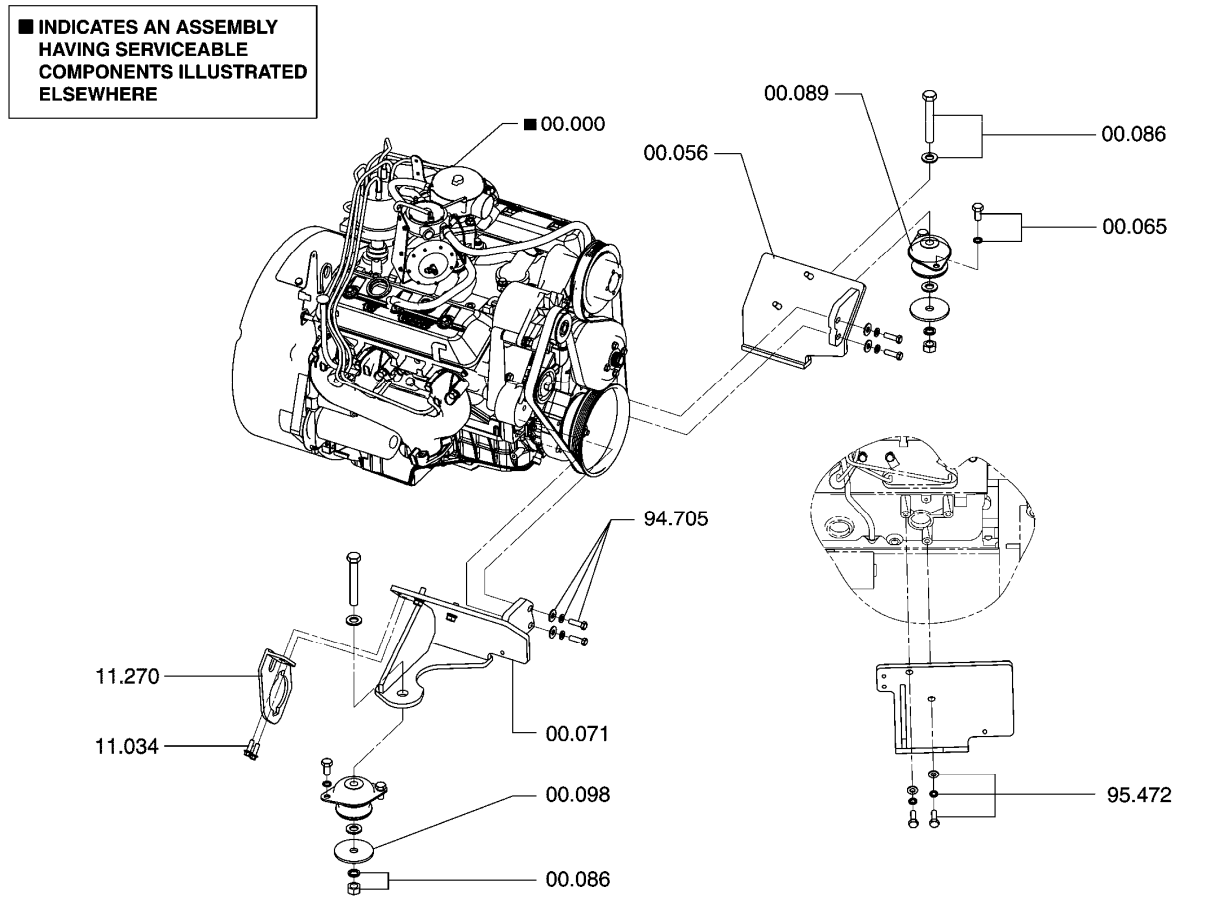

00.000 PRODUCTION ENGINE ASSEMBLY
엔진

00.056 MOUNT, ENGINE RH
마운트

00.065 FASTENER, ENGINE MOUNT
패스너

00.071 MOUNT, ENGINE LH
마운트

00.086 FASTENER, RH ENGINE MOUNT
패스너

00.089 DAMPENER, LH ENGINE MOUNT VIBRATION
댐프너


00.098 WASHER, ENGINE MOUNTING TO FRAME RH
와셔

11.034 FASTENER, STARTING MOTOR
패스너

11.270 BRACKET, STARTER MOTOR SUPPORT
브라켓

94.705 FASTENER, ENGINE MOUNTING BRACKET
패스너

95.472 FASTENER, ENGINE MOUNT
패스너

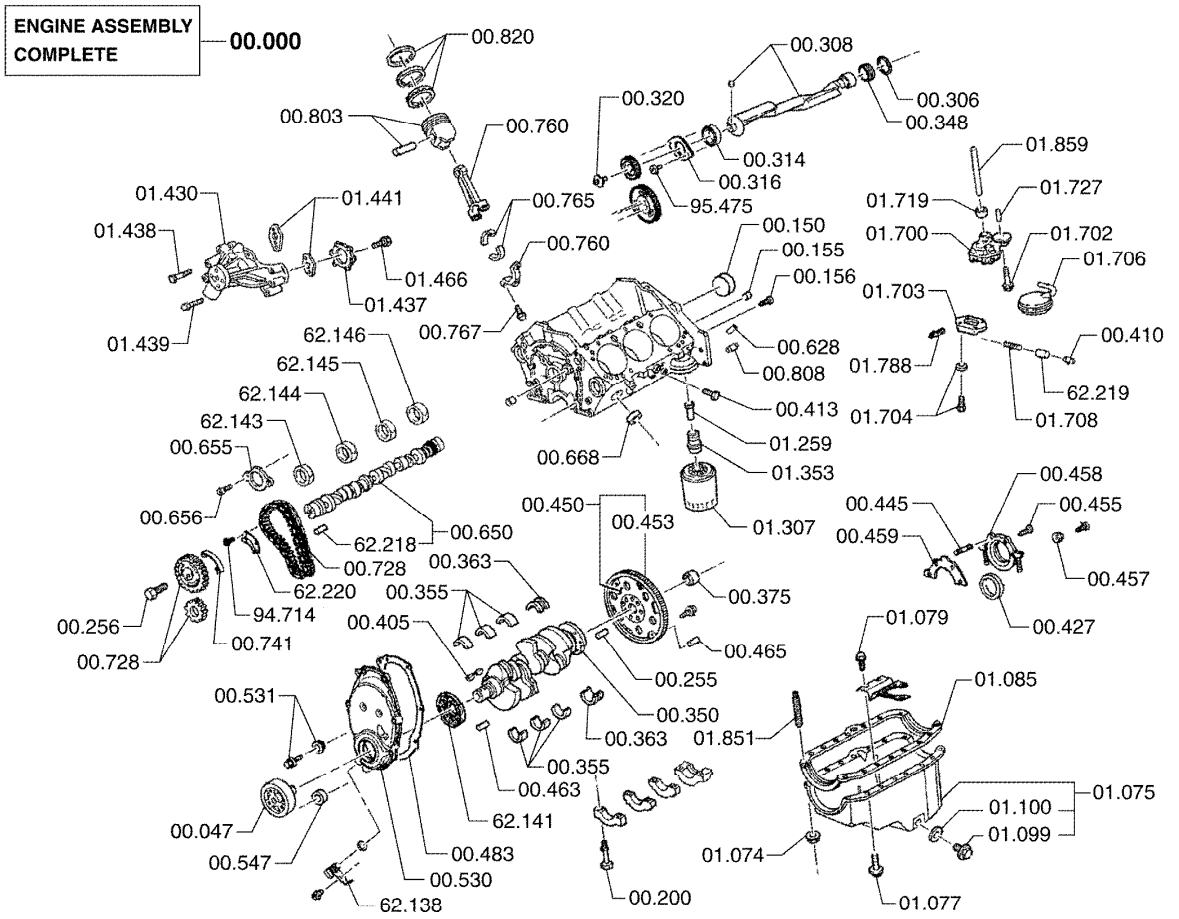

CRANKCASE / CAMSHAFT **00-684**

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	00.355	BEARING, MAIN JOURNAL (ENGINE SET) 베어링
00.047	DAMPENER, ENGINE FRONT VIBRATION 댐프너	00.363	BEARING, NO. 4 MAIN JOURNAL 베어링
00.150	PLUG - EXPANSION, CRANKCASE CORE 플러그	00.375	BEARING, CRANKSHAFT CLUTCH PILOT 베어링
00.155	PLUG - EXPANSION, CRANKCASE END 플러그	00.405	KEY, CRANKSHAFT TIMING GEAR 키
00.156	PLUG, CRANKCASE OIL GALLEY 플러그	00.410	PLUG, OIL PRESSURE 플러그
00.200	FASTENER, CRANKSHAFT BEARING NO. 1 CAP 패스너	00.413	PLUG & WASHER, CRANKCASE 플러그와와셔
00.255	KEY, CRANKSHAFT TO FLYWHEEL 키	00.427	SEAL, CRANKCASE REAR OIL 시일
00.256	FASTENER, CAMSHAFT TIMING GEAR 패스너	00.445	FASTENER, REAR OIL SEAL HOUSING 패스너
00.306	PLUG, BALANCER IDLER GEAR SPINDLE 플러그	00.450	FLYWHEEL 플라이휠
00.308	WEIGHT, ENGINE BALANCER 발란서웨이트	00.453	GEAR, FLYWHEEL RING 기어
00.314	BEARING, BALANCER WEIGHT (OUTBOARD) 베어링	00.455	FASTENER, REAR OIL SEAL HOUSING 패스너
00.316	RETAINER, BALANCER WEIGHT GEARS 리테이너	00.457	FASTENER, REAR OIL SEAL HOUSING CLAMPING 패스너
00.320	FASTENER, ENGINE BALANCER DRIVE GEAR 패스너	00.458	HOUSING, REAR OIL SEAL 하우징
00.348	BEARING, ENGINE BALANCER SHAFT REAR 베어링	00.459	GASKET, REAR OIL SEAL HOUSING 가스켓
00.350	CRANKSHAFT 크랭크샤프트	00.463	DOWEL, CRANKSHAFT 다월

00.465 DOWEL, FLYWHEEL
다월

00.483 GASKET, GEAR COVER BACKING PLATE ATTACHING
가스켓

00.530 COVER, ENGINE FRONT GEAR
커버

00.531 FASTENER, ENGINE FRONT GEAR COVER
패스너

00.547 SEAL, ENGINE FRONT GEAR COVER
시일

00.628 PLUG, CRANKCASE HEAD
플러그

00.650 CAMSHAFT
캠샤프트

00.655 PLATE, CAMSHAFT THRUST
플레이트

00.656 FASTENER, CAMSHAFT THRUST PLATE
패스너

00.668 PLUG, CRANKCASE WATER
플러그

00.728 CHAIN, CAMSHAFT TIMING
체인

00.741 TENSIONER, CAMSHAFT DRIVE CHAIN
텐셔너

00.760 ROD ASSEMBLY, CONNECTING
로드

00.765 BEARING, CONNECTING ROD
베어링

00.767 FASTENER, CONNECTING ROD BEARING CAP
패스너

00.803 PISTON (ONE CYLINDER)
피스톤과핀

00.808 DOWEL RING, CRANKCASE REAR ADAPTOR PLATE
다월링

00.820 PISTON RING
피스톤링

01.074 FASTENER, CRANKCASE OIL PAN
패스너

01.075 PAN, CRANKCASE OIL
팬

01.077 FASTENER, OIL PAN TO CRANKCASE
패스너

01.079 FASTENER, CRANKCASE OIL PAN
패스너

01.085 GASKET, CRANKCASE OIL PAN (ENGINE SET)
가스켓

01.099 PLUG, CRANKCASE OIL PAN DRAIN
플러그

01.100 GASKET, CRANKCASE OIL PAN DRAIN PLUG
가스켓

01.259 VALVE, ENGINE OIL FILTER BY-PASS
밸브

01.307 CARTRIDGE & GASKET, ENGINE OIL FILTER
카트리지와가스켓

01.353 FITTING, BLOCK TO OIL FILTER
피팅

01.430 PUMP ASSEMBLY, ENGINE WATER
펌프

01.437 GASKET, PUMP TO CRANKCASE
가스켓

01.438 FASTENER, WATER PUMP
패스너

01.439 FASTENER, WATER PUMP
패스너

01.441 GASKET, ENGINE WATER PUMP ATTACHING
가스켓

01.466 FASTENER, WATER PUMP COVER
패스너

01.700 OIL PUMP ASSEMBLY
오일펌프

01.702 FASTENER, OIL PUMP
패스너

01.703 COVER, OIL PUMP
커버

01.704 FASTENER, OIL PUMP COVER
패스너

01.706 STRAINER, OIL PUMP OIL
스트레이너

01.708 SPRING, OIL PRESSURE REGULATING
스프링

01.719 RETAINER, OIL PUMP DRIVE SHAFT
리테이너

01.727 DOWEL, OIL PUMP BODY
다월

01.788 PIN, OIL PUMP BODY
핀

01.851 STUD, OIL PAN
스터드

01.859 SHAFT, OIL PUMP EXTENSION
샤프트

62.138 SENSOR, ENGINE CRANKSHAFT POSITION
센서

62.141 RING, ENGINE CRANKSHAFT POSITION SENSOR EXCITOR
링

62.143 BEARING, CAMSHAFT (NO.1)
베어링

62.144 BEARING, CAMSHAFT (NO.2)
베어링

62.145 BEARING, CAMSHAFT (NO.3)
베어링

62.146 BEARING, CAMSHAFT (NO.4)
베어링


62.218 DOWEL, CAMSHAFT
다웰

62.219 VALVE, OIL PRESSURE RELIEF
밸브

62.220 BRACKET, CAMSHAFT TIMING CHAIN TENSIONER
브라켓

94.714 FASTENER, CAMSHAFT TIMING CHAIN GUIDE
패스너

95.475 FASTENER, ENGINE BALANCER WEIGHT RETAINER
패스너

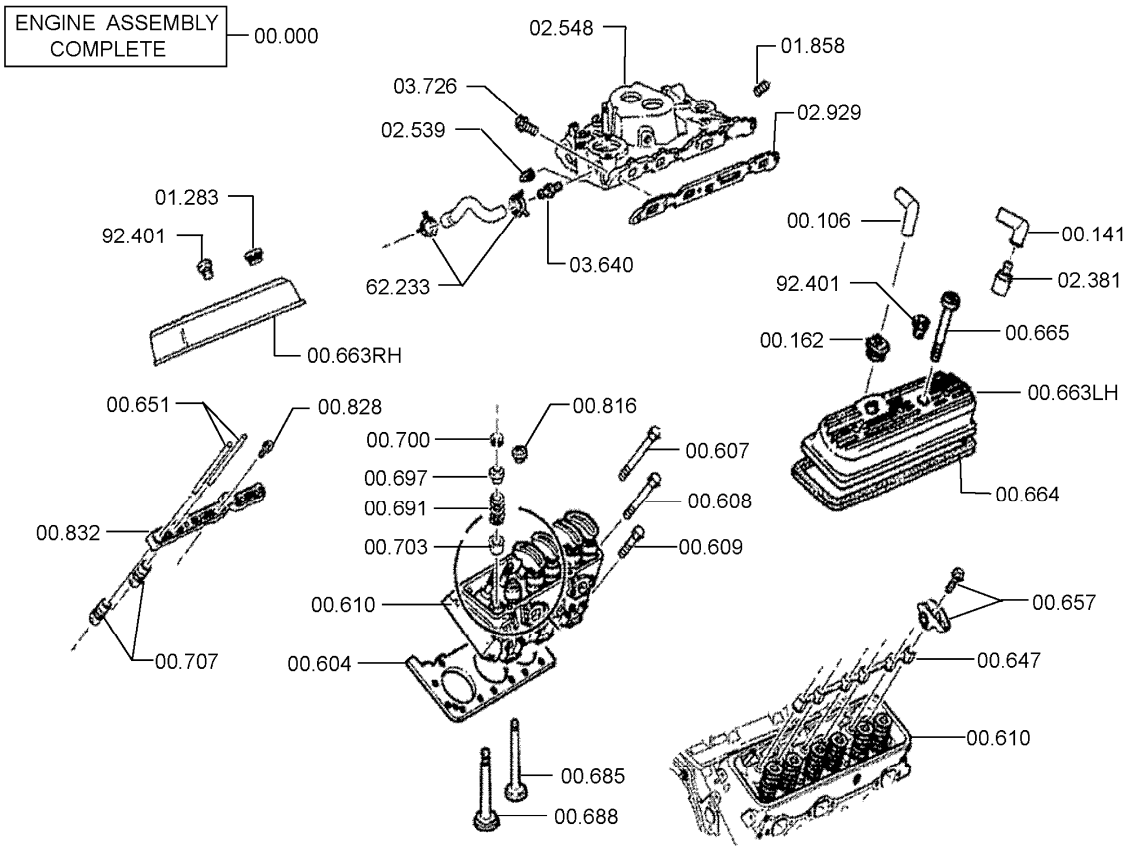

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.106	FITTING, CRANKCASE VENT TUBE 피팅
00.141	CONNECTOR, CRANKCASE VENT TUBE 커넥터
00.162	SEAL, CRANKCASE VENTILATION VALVE 시일
00.604	GASKET, CRANKCASE HEAD 가스켓
00.607	FASTENER, CRANKCASE HEAD 패스너
00.608	FASTENER, CRANKCASE HEAD 패스너
00.609	FASTENER, CRANKCASE HEAD 패스너
00.610	HEAD, CRANKCASE 헤드
00.647	SUPPORT, ENGINE ROCKER ARM PIVOT 서포트
00.651	PUSH ROD, ENGINE ROCKET ARM 푸시로드
00.657	ROCKER ARM ASSEMBLY, ENGINE VALVE 로커
00.663	COVER, ROCKER ARM 커버
00.664	GASKET, ROCKER ARM COVER 가스켓
00.665	FASTENER, ROCKER ARM COVER 패스너
00.685	VALVE, EXHAUST 밸브
00.688	VALVE, INTAKE 밸브
00.691	SPRING, ENGINE INTAKE VALVE 스프링
00.697	SEAL, ENGINE VALVE 시일
00.700	LOCK, INTAKE VALVE SPRING SEAT 로크
00.703	SEAT, INTAKE VALVE SPRING 시트
00.707	LIFTER, ENGINE VALVE 리프터
00.816	CAP, INLET VALVE SPRING 캡
00.828	FASTENER, LIFTER RESTRICTOR RETAINER 패스너
00.832	GUIDE, VALVE LIFTER RESTRICTOR 가이드
01.283	CAP, CRANKCASE OIL FILLER 캡
01.858	FASTENER, INTAKE MANIFOLD 패스너
02.381	VALVE, PCV 밸브
02.539	PLUG - PIPE, MANIFOLD 플러그
02.548	MANIFOLD, INTAKE 매니폴드

02.929 GASKET, INTAKE MANIFOLD
가스켓


03.640 FITTING, VACUUM LINE INTAKE MANIFOLD
피팅

03.726 FASTENER, INTAKE MANIFOLD
패스너

62.233 CLAMP, VACUUM LINE INTAKE MANIFOLD
클램프

92.401 SEAL, ROCKER ARM COVER FASTENER
시일

■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

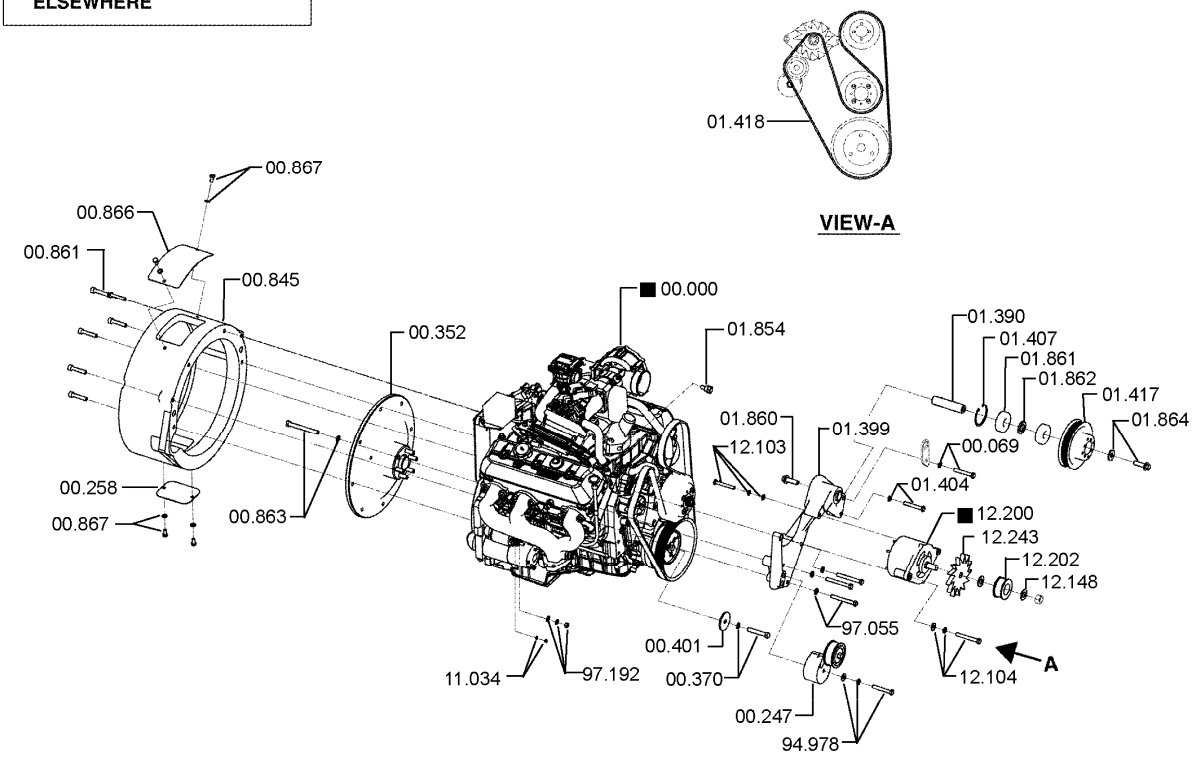


ENGINE FRONT & REAR MOUNTING 00-745

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	01.407	RING - RETAINING, FAN HUB 링
00.069	FASTENER, ENGINE LIFTING BRACKET 패스너	01.417	PULLEY, FAN 풀리
00.247	TENSIONER, CAMSHAFT TIMING BELT 텐셔너	01.418	BELT, WATER PUMP 벨트
00.258	PLATE, FLYWHEEL COVER 플레이트	01.854	SENSOR, ENGINE COOLANT TEMPERATURE 센서
00.352	ADAPTOR, FLYWHEEL MOUNTING 어댑터	01.860	FASTENER, FAN DRIVE HUB MOUNTING SHAFT 패스너
00.370	FASTENER, CRANKSHAFT PULLEY 패스너	01.861	BEARING, FAN DRIVE HUB 베어링
00.401	SPACER, CRANKSHAFT PULLEY 스페이서	01.862	SPACER, FAN DRIVE HUB BEARING 스페이서
00.845	HOUSING, FLYWHEEL 하우징	01.864	FASTENER, FAN DRIVE HUB 패스너
00.861	FASTENER, FLYWHEEL HOUSING TO CRANKCASE 패스너	11.034	FASTENER, STARTING MOTOR 패스너
00.863	FASTENER, FLYWHEEL HOUSING TO CRANKCASE 패스너	12.103	FASTENER, ALTERNATOR TO BRACKET 패스너
00.866	COVER, FLYWHEEL HOUSING TIMING HOLE 커버	12.104	FASTENER, ALTERNATOR TO BRACKET 패스너
00.867	FASTENER, FLYWHEEL HOUSING TIMING HOLE COVER 패스너	12.148	SPACER, ALTERNATOR MOUNTING 스페이서
01.390	SPINDLE, FAN 스핀들	12.200	ALTERNATOR ASSEMBLY 알터네이터
01.399	BRACKET, FAN MOUNTING 브라켓	12.202	PULLEY, ALTERNATOR 풀리
01.404	FASTENER, FAN BRACKET 패스너	12.243	FAN, ALTERNATOR 팬

94.978 FASTENER, CAMSHAFT TIMING BELT TENSIONER
패스너


97.055 FASTENER, FAN BRACKET MOUNTING
패스너

97.192 FASTENER, STARTER MOTOR
패스너

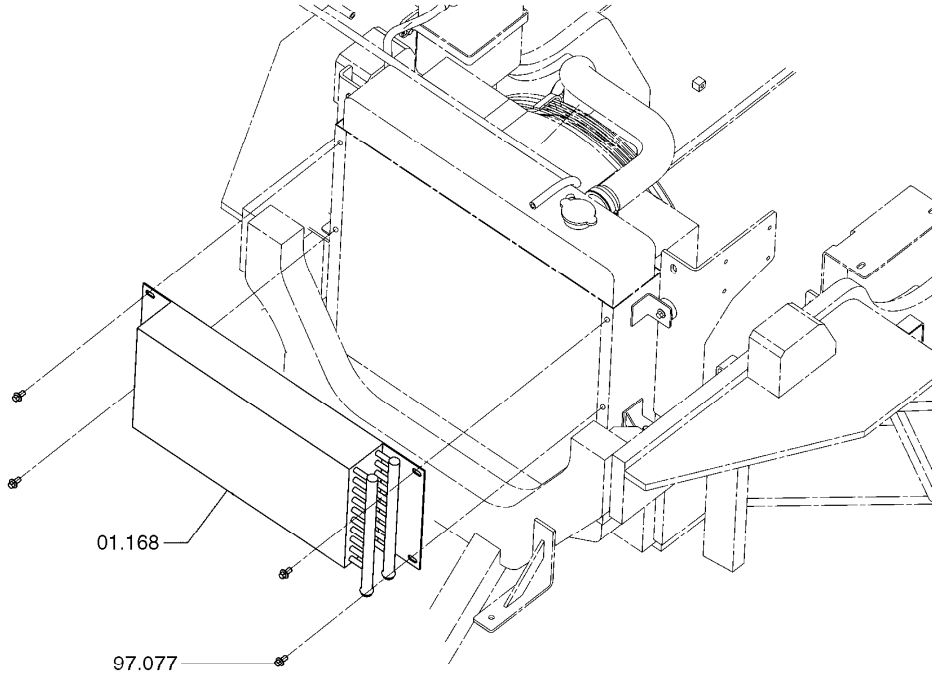

HYDRAULIC OIL COOLER MOUNTING **01-272**


01.168	COOLER, HYDRAULIC 쿨러
97.077	FASTENER, OIL COOLER 패스너

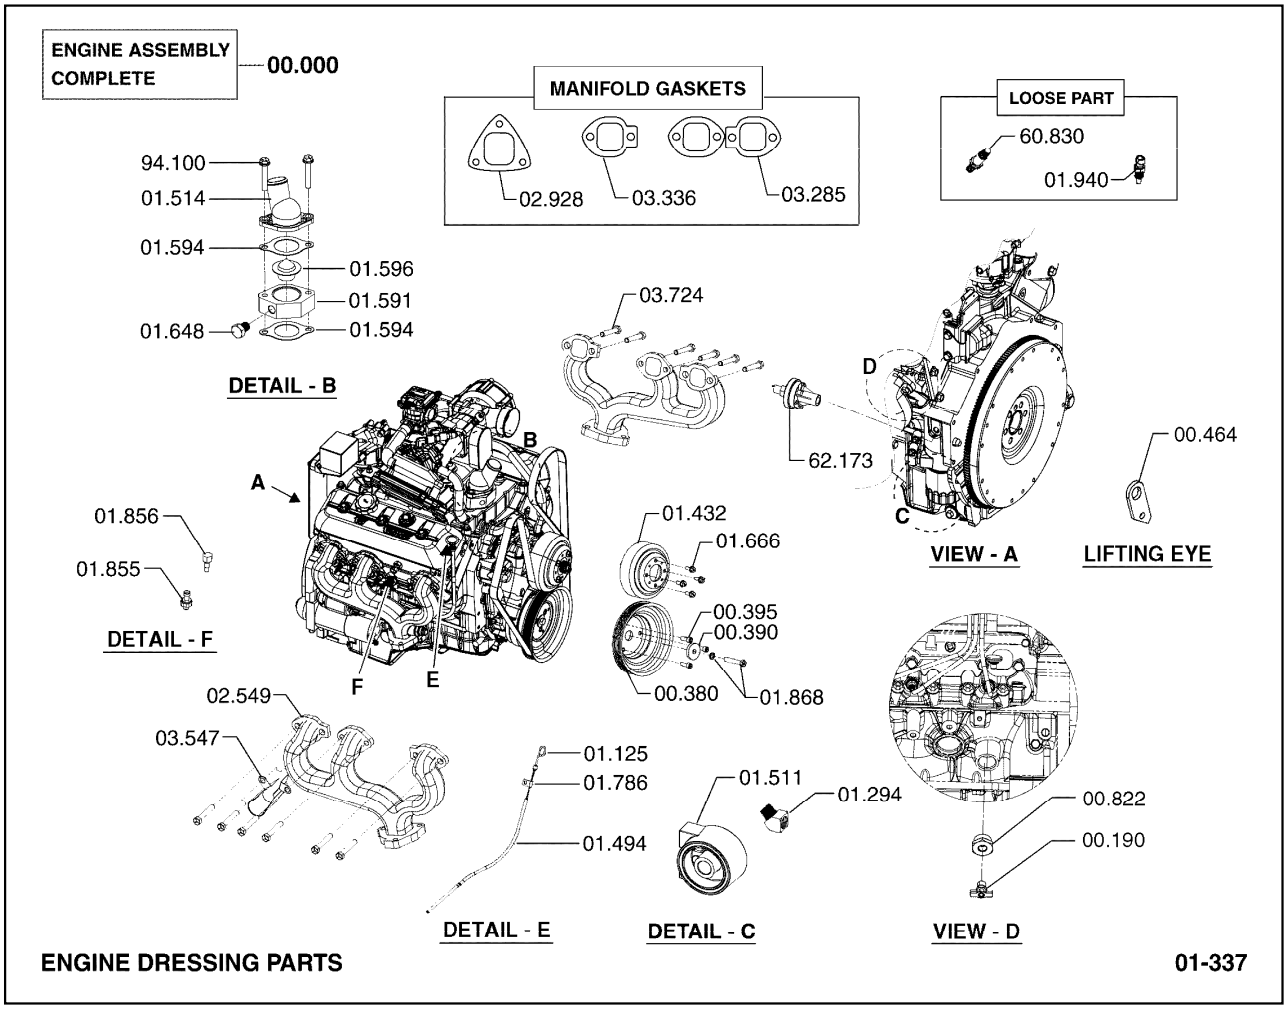

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.190	DRAIN COCK, CRANKCASE 드레인콕
00.380	PULLEY, CRANKSHAFT 풀리
00.390	WASHER, CRANKSHAFT PULLEY 와셔
00.395	FASTENER, CRANKSHAFT PULLEY 패스너
00.464	BRACKET, ENGINE LIFTING 브라켓
00.822	PLUG, CRANKCASE 플러그
01.125	DIPSTICK, CRANKCASE OIL LEVEL 딥스틱
01.294	FITTING, ENGINE OIL FILTER OUTLET 피팅
01.432	PULLEY, WATER PUMP 풀리
01.494	TUBE, OIL LEVEL DIPSTICK ADAPTOR 튜브
01.511	ADAPTOR, ENGINE OIL FILTER 어댑터
01.514	FLANGE, ENGINE WATER PUMP DISCHARGE 플랜지
01.591	HOUSING, ENGINE THERMOSTAT 하우징
01.594	GASKET, ENGINE THERMOSTAT HOUSING ATT 가스켓
01.596	THERMOSTAT, ENGINE 써머스태트
01.648	PLUG, ENGINE THERMOSTAT HOUSING 플러그
01.666	FASTENER, WATER PUMP PULLEY 패스너
01.786	CLIP, CRANKCASE OIL LEVEL DIPSTICK ADAPTOR 클립
01.855	SENSOR, OIL PRESSURE 센서
01.856	FITTING, OIL PRESSURE 피팅
01.868	FASTENER, CRANKSHAFT PULLEY 패스너
01.940	SENSOR, COOLANT TEMPERATURE 센서
02.549	MANIFOLD, EXHAUST 매니폴드
02.928	GASKET, EXHAUST MANIFOLD 가스켓
03.285	GASKET, EXHAUST MANIFOLD EXTENSION 가스켓
03.336	GASKET, EXHAUST MANIFOLD 가스켓
03.457	SHIELD, MANIFOLD HEAT 쉴드
03.724	FASTENER, EXHAUST MANIFOLD 패스너
60.830	SENSOR, ENG CONTROL OXYGEN 센서

62.173 SWITCH, ENGINE OIL PRESSURE
스위치

94.100 FASTENER, WATER PUMP DISCHARGE FLANGE
패스너

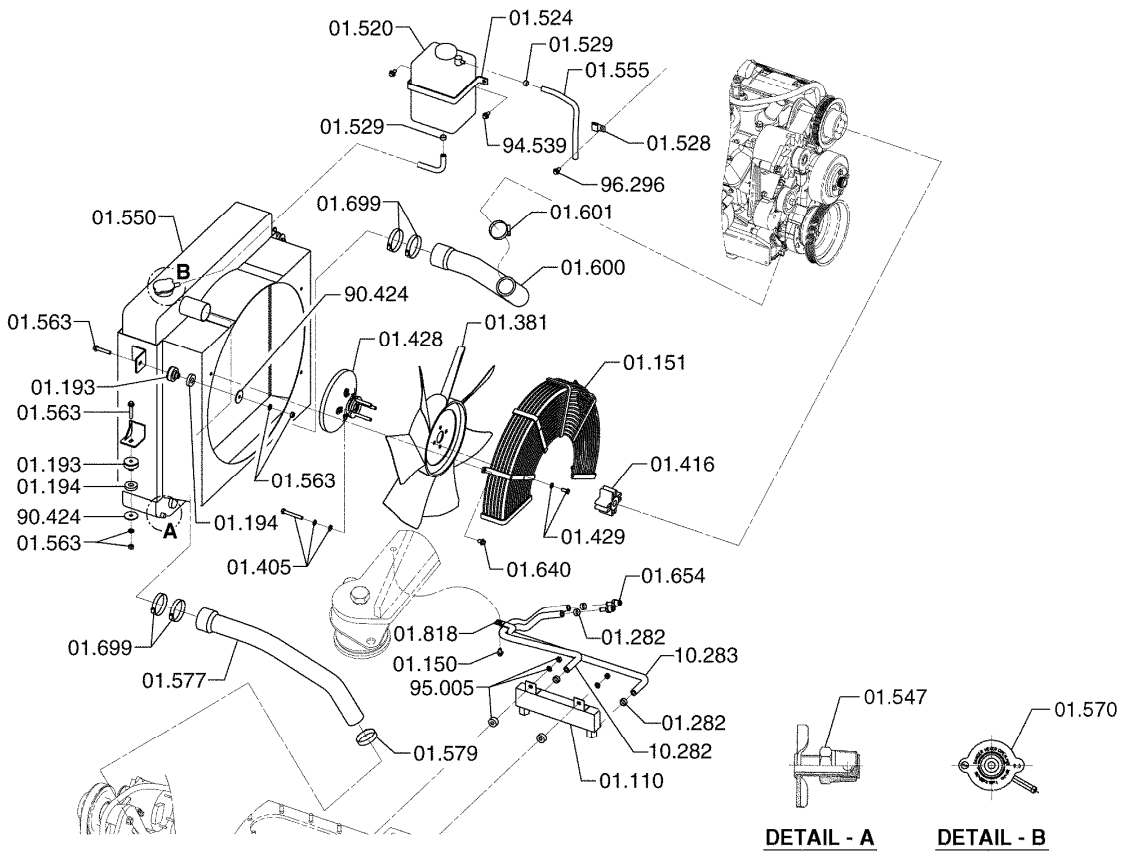

COOLING SYSTEM **01-357**


01.110	OIL COOLER 오일쿨러
01.150	FASTENER, ENGINE OIL COOLER LINE 패스너
01.151	GUARD, RADIATOR FAN 가드
01.193	ISOLATOR, RADIATOR MOUNTING 절연재
01.194	ISOLATOR, RADIATOR MOUNTING 절연재
01.282	CLAMP, OIL FILLER HOSE 클램프
01.381	BLADE, FAN 블레이드
01.405	FASTENER, FAN BLADE 패스너
01.416	SPACER, FAN BLADE 스페이서
01.428	FAN CONTROL, SELF COUPLING 팬컨트롤
01.429	FASTENER, FAN CONTROL 패스너
01.520	COMPENSATION TANK, COOLING SYSTEM 보상기
01.524	CLAMP, COOLING SYSTEM COMPENSATION TANK LINE 클램프
01.528	CLIP, RADIATOR OVERFLOW LINE 클립
01.529	CLAMP, RADIATOR OVERFLOW LINE 클램프
01.547	DRAIN COCK, RADIATOR 드레인콕
01.550	RADIATOR 라디에터
01.555	LINE, RADIATOR OVERFLOW 라인
01.563	FASTENER, RADIATOR MOUNTING BRACKET 패스너
01.570	CAP, RADIATOR 캡
01.577	HOSE, RADIATOR UPPER 호스
01.579	CLAMP, RADIATOR UPPER HOSE 클램프
01.600	HOSE, RADIATOR LOWER 호스
01.601	CLAMP, RADIATOR LOWER HOSE 클램프
01.640	FASTENER, RADIATOR SHROUD EXTENTION 패스너
01.654	FITTING, ENGINE OIL COOLING HEAT EXCH PORT 피팅
01.699	CLAMP, RADIATOR HOSE FASTENER 클램프
01.818	CLIP, HEAT EXCHANGER OUTLET LINE 클립
10.282	LINE, ENGINE OIL COOLER 라인
10.283	LINE, ENGINE OIL COOLER 라인

90.424 WASHER, RADIATOR MOUNTING FASTENER
와셔


94.539 FASTENER, COMPENSATION TANK BRACKET
패스너

95.005 FASTENER, OIL COOLER
패스너

96.296 FASTENER, RADIATOR OVERFLOW LINE CLIP
패스너

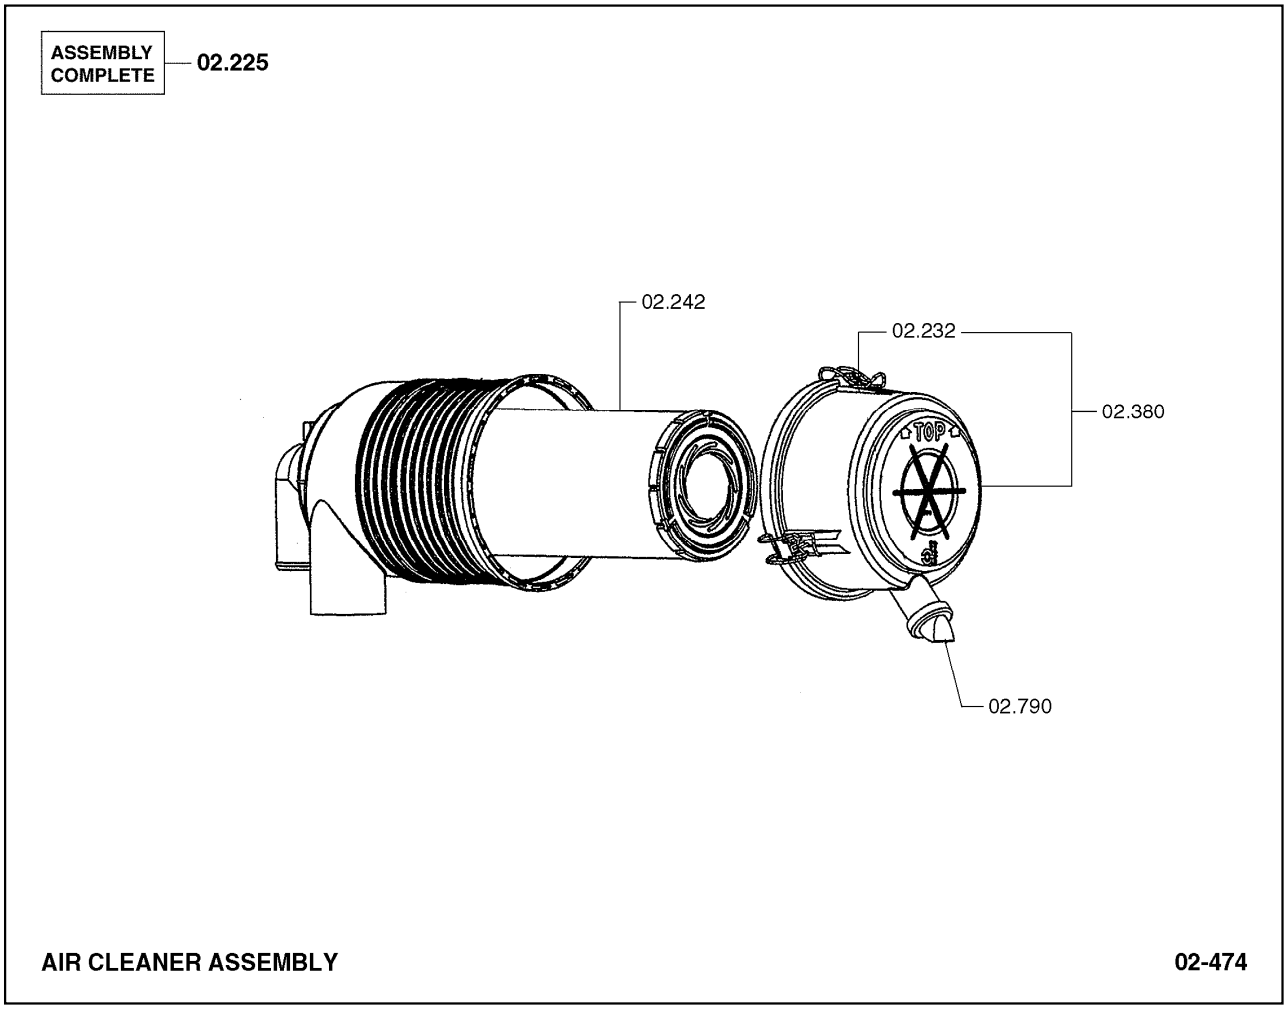

02.225	CLEANER ASSEMBLY, ENGINE INTAKE AIR 에어클리너
02.232	CLAMP, INTAKE AIR CLEANER 클램프
02.242	ELEMENT & GASKET, ENGINE INTAKE AIR CLEANER 엘리먼트와가스켓
02.380	CAP,FILTER 캡
02.790	VALVE, ENGINE INTAKE AIR CLEANER DUST UNLDR 밸브

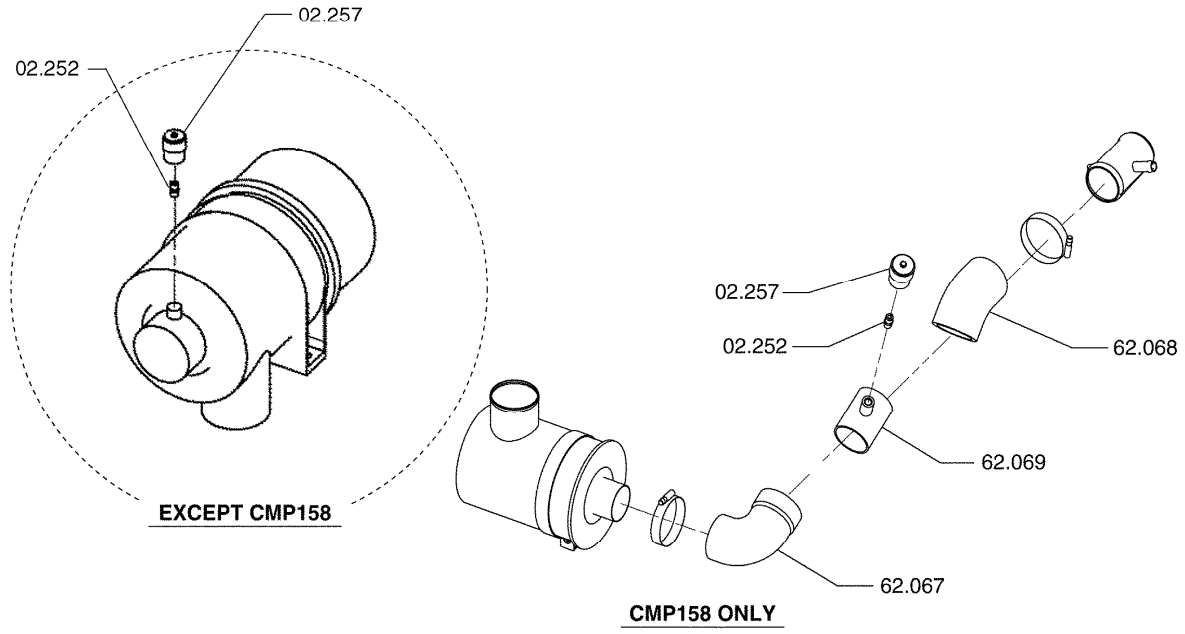

INDICATOR LIGHT INSTALLATION **02-478**


02.252 FITTING, MAIN AIR CLEANER OUTLET TUBE
피팅

02.257 INDICATOR, ENGINE INTAKE AIR CLEANER AIR RES
인디케이터


62.067 HOSE, AIR CLEANER INTAKE
호스

62.068 HOSE, AIR CLEANER INTAKE
호스

62.069 TUBE, AIR CLEANER INTAKE
튜브

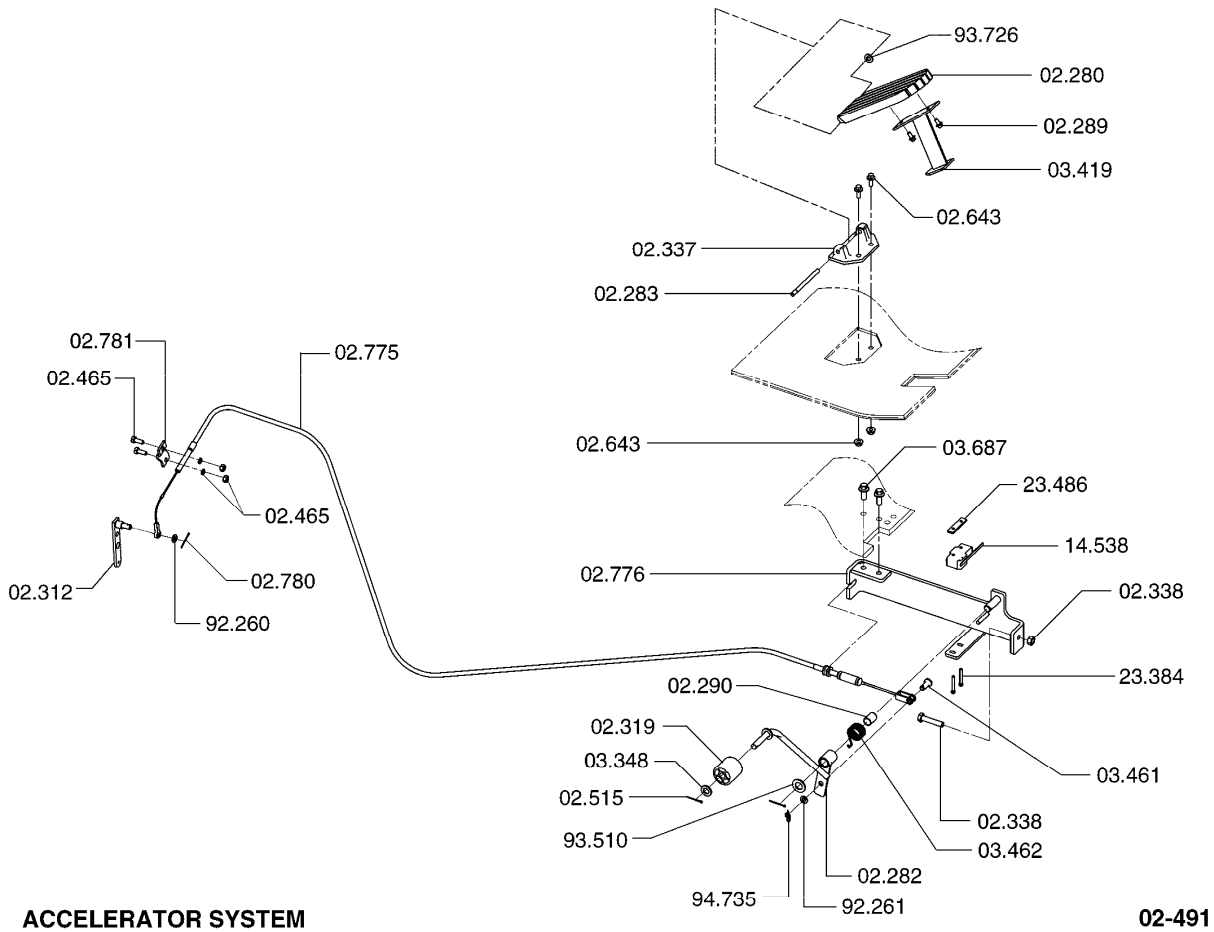

02.280	PEDAL, ACCELERATOR 페달
02.282	ROD, ACCELERATOR PUSH 로드
02.283	PIN, ACCELERATOR PEDAL TO BRACKET PIVOT 핀
02.289	FASTENER, ACCELERATOR PEDAL BRACKET ATTACHING 패스너
02.290	BUSHING, ACCELERATOR BELLCRANK 부싱
02.312	LEVER, ACCELERATOR LINKAGE 레버
02.319	BUSHING, ACCELERATOR LINKAGE LEVER 부싱
02.337	BRACKET, ACCELERATOR LEVER MOUNTING 브라켓
02.338	FASTENER, ACCELERATOR LEVER MOUNTING BRACKET 패스너
02.465	FASTENER, ACCELERATOR CONTROL LINKAGE 패스너
02.515	PIN, ACCELERATOR PUSH ROD 핀
02.643	FASTENER, ACCELERATOR PEDAL HEEL SUPPORT 패스너
02.775	CABLE, ACCELERATOR CONTROL 케이블
02.776	BRACKET, ACCELERATOR CONTROL CABLE 브라켓
02.780	FASTENER, ACCELERATOR CABLE 패스너
02.781	CLIP, ACCELERATOR CABLE TO BRACKET 클립
03.348	WASHER, ACCELERATOR LINKAGE RETURN LEVER FAST 와셔
03.419	WEAR PLATE, ACCELERATOR PEDAL ROLLER 웨어플레이트
03.461	PIN, ACCELERATOR CONTROL ROD END 핀
03.462	SPRING, ACCELERATOR PEDAL RETURN 스프링
03.687	FASTENER, ACC CONTROL CABLE BRACKET MTG 패스너
14.538	SWITCH, PARK BRAKE 스위치
23.384	FASTENER, PARKING BRAKE LINK 패스너
23.486	SIDE PLATE, PARKING BRAKE 사이드플레이트
92.260	WASHER, ACCELERATOR CONTROL CABLE FASTENER 와셔
92.261	WASHER, ACCELERATOR CONTROL ROD END FASTENER 와셔
93.510	WASHER, ACCELERATOR CONTROL ROD CLEVIS PIN 와셔
93.726	WASHER, ACCELERATOR PEDAL PIVOT RETAINER 와셔
94.735	RETAINER, ACCELERATOR CONTROL ROD END PIN 리테이너

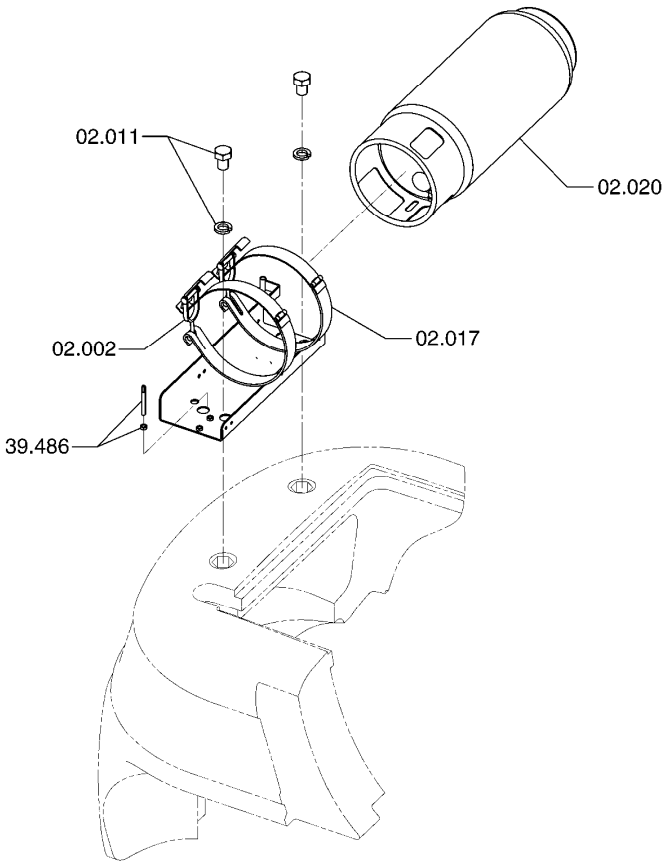

LPG TANK MOUNTING **03-279**


02.002 CLAMP ARM, LPG TANK GUARD
클램프암

02.011 FASTENER, TANK REAR MOUNTING BRACKET
패스너

02.017 SUPPORT, GAS TANK MOUNTING
서포트

02.020 TANK, FUEL
탱크

39.486 FASTENER, GAS TANK SHIELD
패스너

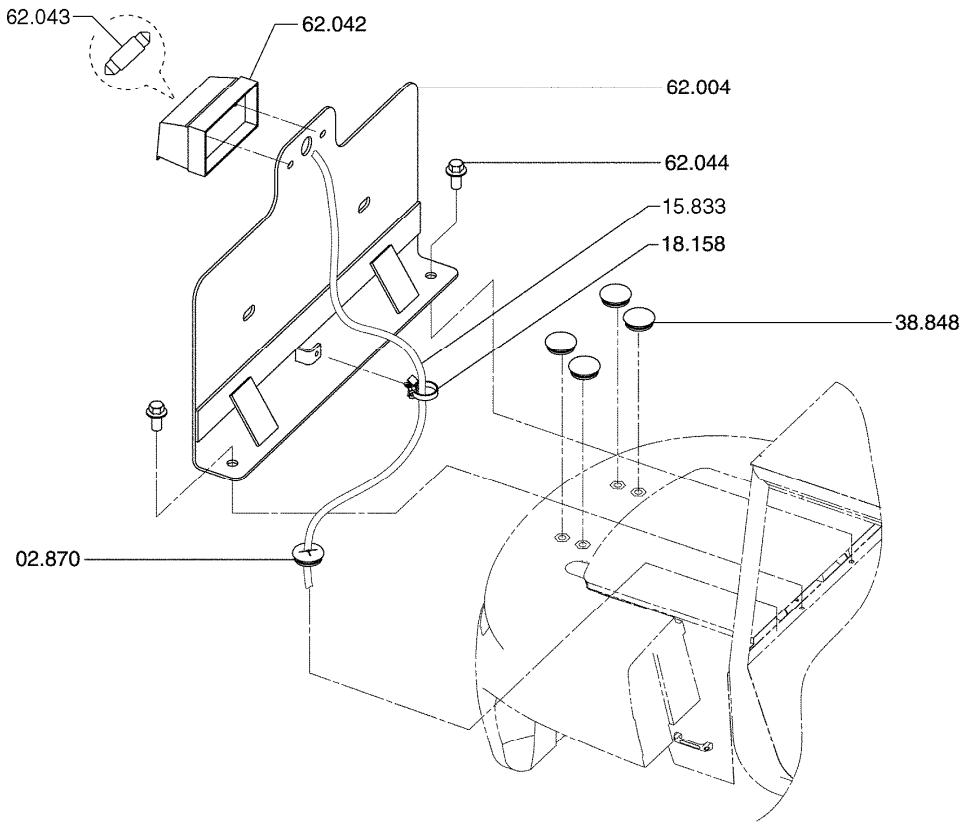

LICENCE PLATE MOUNTING **03-382**

02.870 GROMMET, LPG LINE
그로멧

15.833 WIRE HARNESS, LICENCE LAMP
*

18.158 CLAMP,WIRE HARNESS
클램프


38.848 PLUG - BUTTON, REAR FENDER CTWT BOLT HOLE
플러그

62.004 PLATE, LICENSE
플레이트

62.042 LAMP ASSEMBLY, LICENSE PLATE
램프

62.043 BULB, LICENSE PLATE LAMP
전구

62.044 FASTENER, LICENSE PLATE MOUNTING
패스너

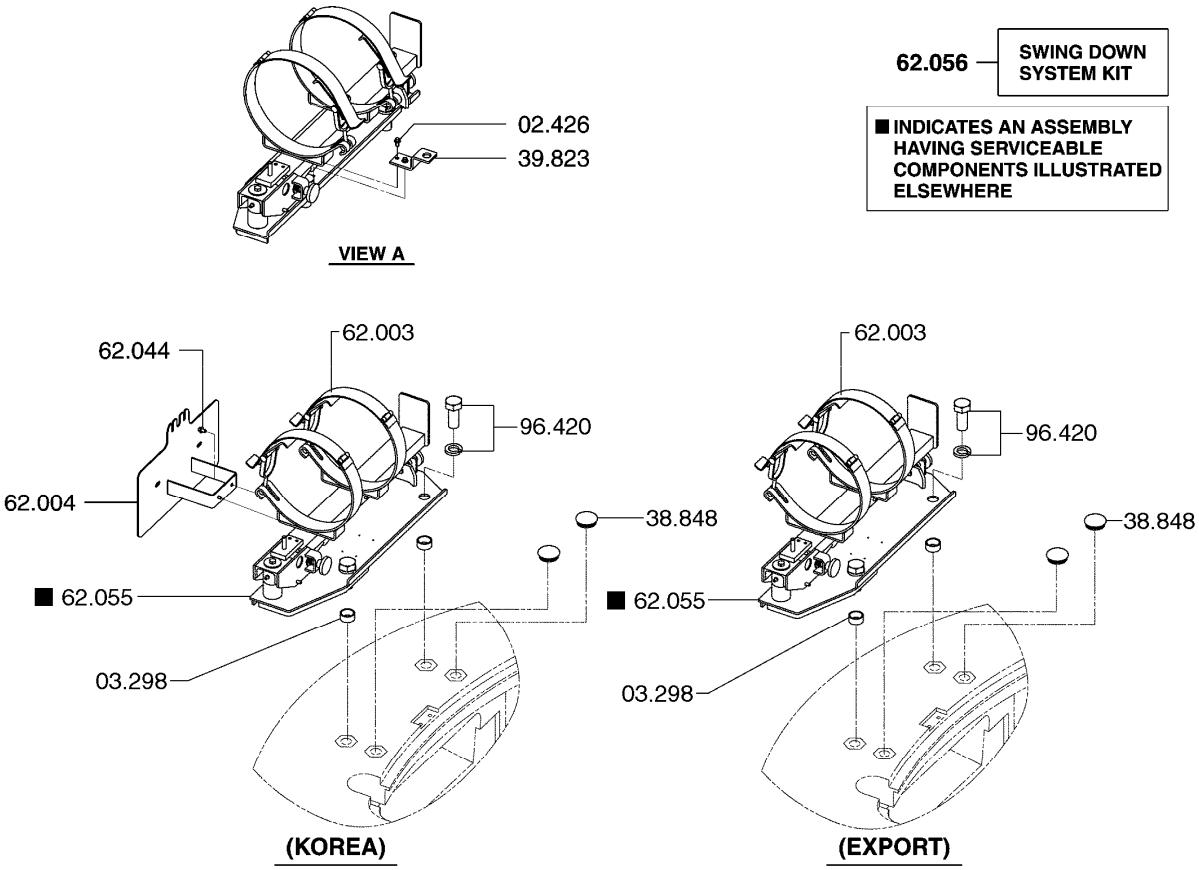

02.426 FASTENER, FUEL FILTER BRACKET
패스너

03.298 SPACER, LPG TANK GUARD
스페이서

38.848 PLUG - BUTTON, REAR FENDER CTWT BOLT HOLE
플러그

39.823 BRACKET, FUEL FILTER
브라켓

62.003 CLAMP, LPG TANK
클램프


62.004 PLATE, LICENSE
플레이트

62.044 FASTENER, LICENSE PLATE MOUNTING
패스너

62.055 BRACKET, SWING DOWN LPG TANK MTG
브라켓

62.056 KIT, SWING DOWN SYSTEM
킷

96.420 FASTENER, LPG TANK MOUNTING BRACKET
패스너

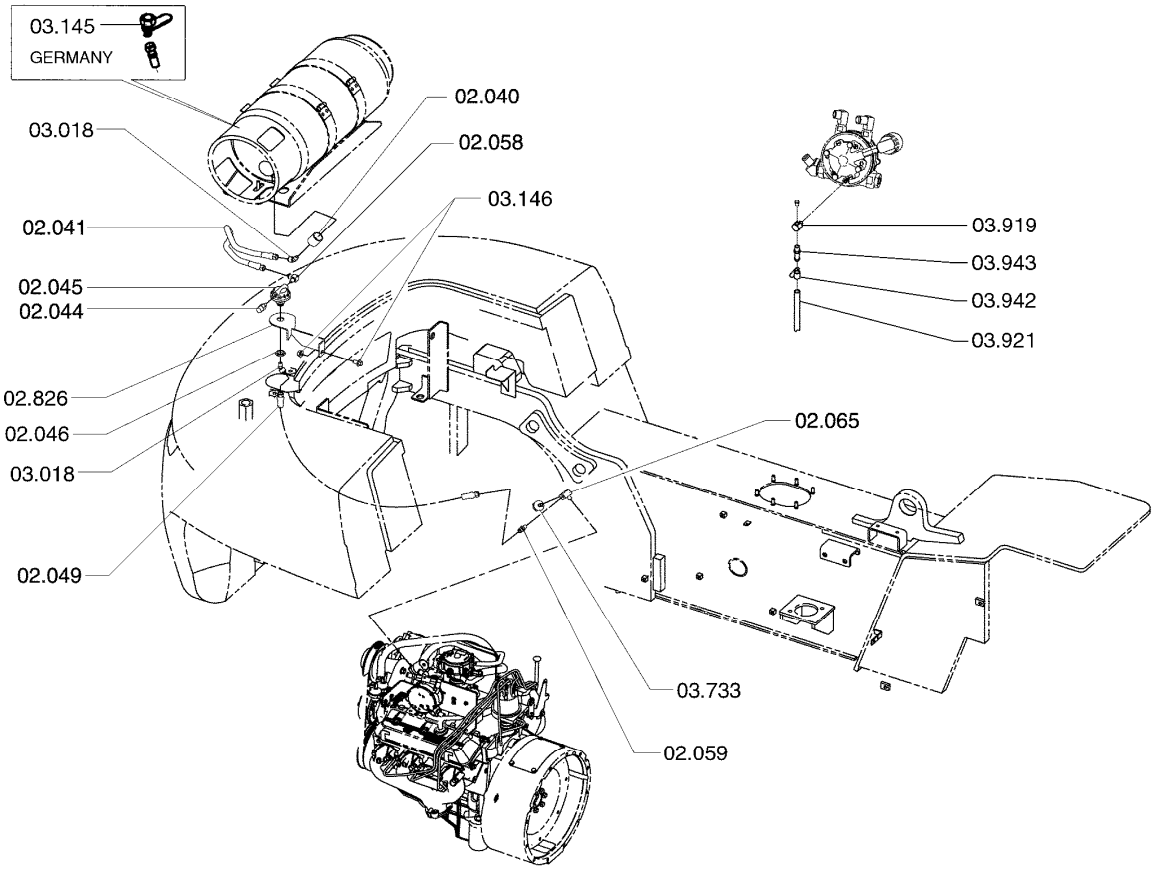

02.040 COUPLER, LPG QUICK DISCONNECT
커플러

02.041 LINE, LP GAS TANK OUTLET
라인

02.044 VALVE, HYDROSTATIC RELIEF
밸브

02.045 ADAPTOR, THREE WAY THRU HOOD
어댑터

02.046 FASTENER, ADAPTOR
패스너

02.049 LINE, ADAPTOR OUTLET
라인

02.058 FITTING, TANK OUTLET LINE
피팅

02.059 FITTING, LPG VAPORIZER INLET
피팅

02.065 FITTING, LOCK OFF VALVE INLET
피팅

02.826 BRACKET, FUEL LINE CLIP
브라켓

03.018 FITTING, THREE WAY VALVE OUTLET LINE
피팅

03.145 COUPLER, LPG QUICK DISCONNECT
커플러

03.146 FASTENER, FUEL LINE CLIP BRACKET
패스너


03.733 SWITCH,LPG PRESSURE
스위치

03.919 FITTING, RELIEF VALVE
피팅

03.921 HOSE, RELIEF VALVE
호스

03.942 CLAMP, RELIEF VALVE HOSE
클램프

03.943 VALVE, HYDROSTATIC RELIEF
밸브

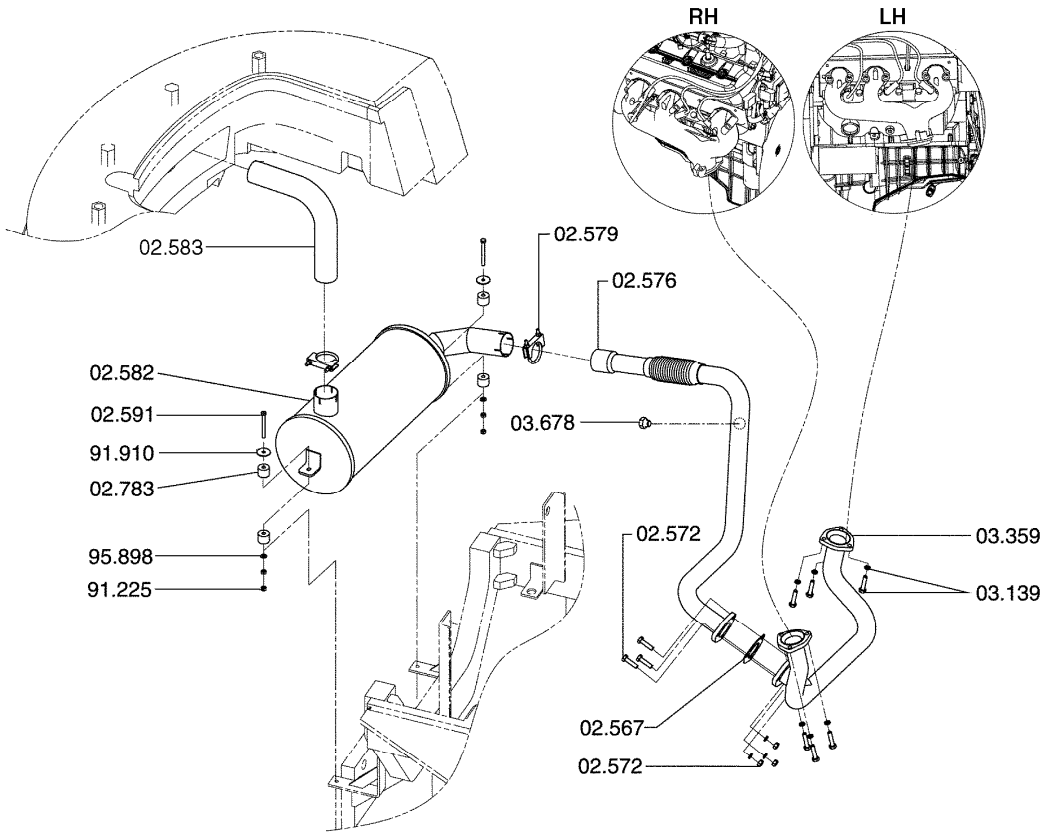

EXHAUST SYSTEM **03-524**

02.567 GASKET, EXHAUST PIPE FLANGE TO MANIFOLD
가스켓

02.572 FASTENER, EXHAUST PIPE STRAP
패스너

02.576 PIPE, EXHAUST
파이프

02.579 CLAMP, EXHAUST PIPE TO MUFFLER
클램프

02.582 MUFFLER
머플러


02.583 PIPE, TAIL
파이프

02.591 FASTENER, MUFFLER MOUNTING
패스너

02.783 DAMPENER, MUFFLER MOUNTING VIBRATION
댐프너

03.139 FASTENER, EXHAUST PIPE FLANGE TO MANIFOLD
패스너

03.359	PIPE, EXHAUST 파이프
03.678	PLUG, OXYGEN SENSOR 플러그
91.225	NUT, MUFFLER MTG BRACKET FASTENER 너트
91.910	WASHER, MUFFLER ATTACHING CLAMP FASTENER 와셔
95.898	WASHER, MUFFLER ATTACHING FASTENER 와셔

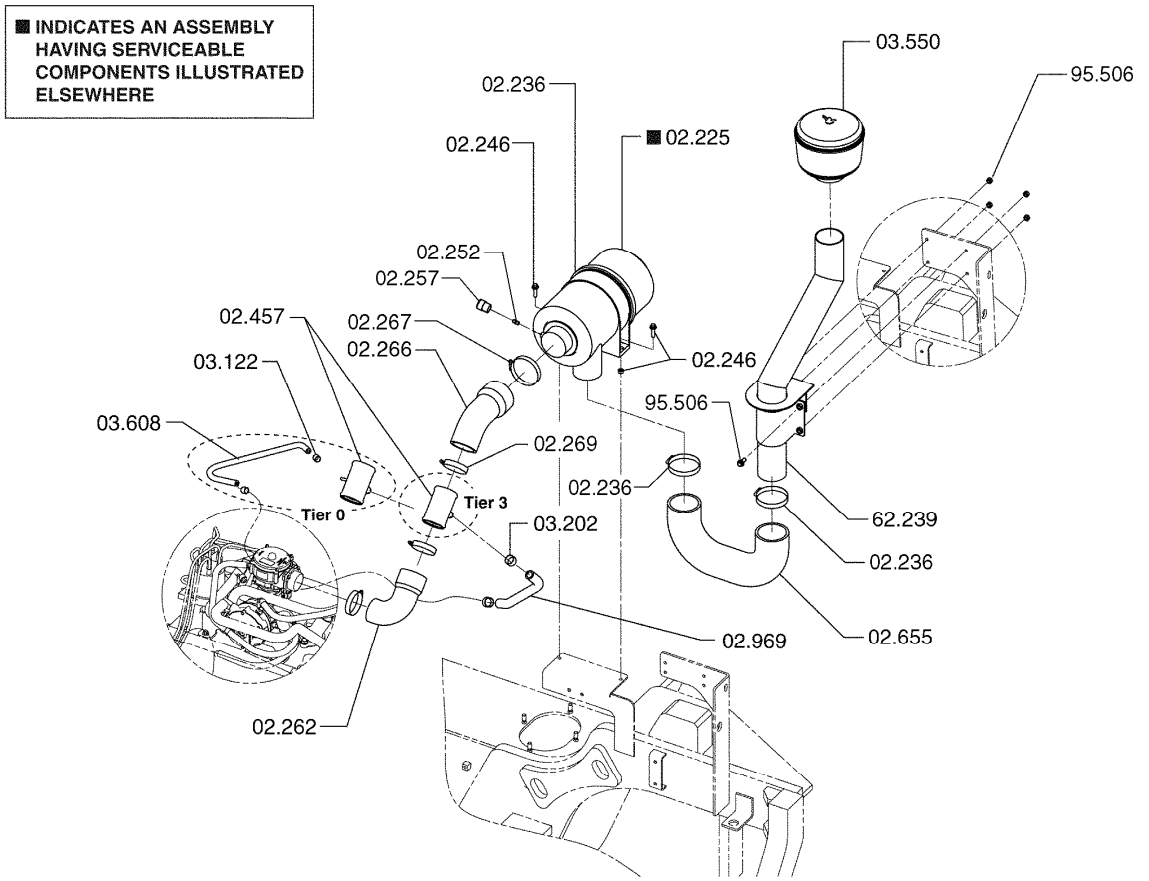

02.225 CLEANER ASSEMBLY, ENGINE INTAKE AIR
에어클리너

02.236 CLAMP, MAIN AIR CLEANER INLET HOSE
클램프

02.246 FASTENER, ENGINE INTAKE AIR CLEANER ATTACHING
패스너

02.252 FITTING, MAIN AIR CLEANER OUTLET TUBE
피팅

02.257 INDICATOR, ENGINE INTAKE AIR CLEANER AIR RES
인디케이터


02.262 HOSE, MAIN AIR CLEANER OUTLET
호스

02.266 HOSE, MAIN AIR CLEANER OUTLET
호스

02.267 CLAMP, MAIN AIR CLEANER OUTLET HOSE
클램프


02.269 CLAMP, MAIN AIR CLEANER OUTLET HOSE
클램프

02.457	FITTING, MAIN AIR CLEANER OUTLET TUBE 피팅
02.655	LINE, ENGINE AIR PRE-CLEANER OUTLET 라인
02.969	HOSE, MAIN AIR CLEANER INLET 호스
03.122	CLAMP, AIR CLEANER DRAIN LINE 클램프
03.202	CLAMP, ENGINE AIR INTAKE ADAPTOR 클램프
03.550	PRE CLEANER ASSEMBLY, ENGINE AIR 프리크리너
03.608	HOSE, AIR CLEANER OUTLET 호스
62.239	TUBE, PRE-AIR CLEANER LINE 튜브
95.506	FASTENER, PRE CLEANER MOUNTING BRACKET SUPPORT 패스너

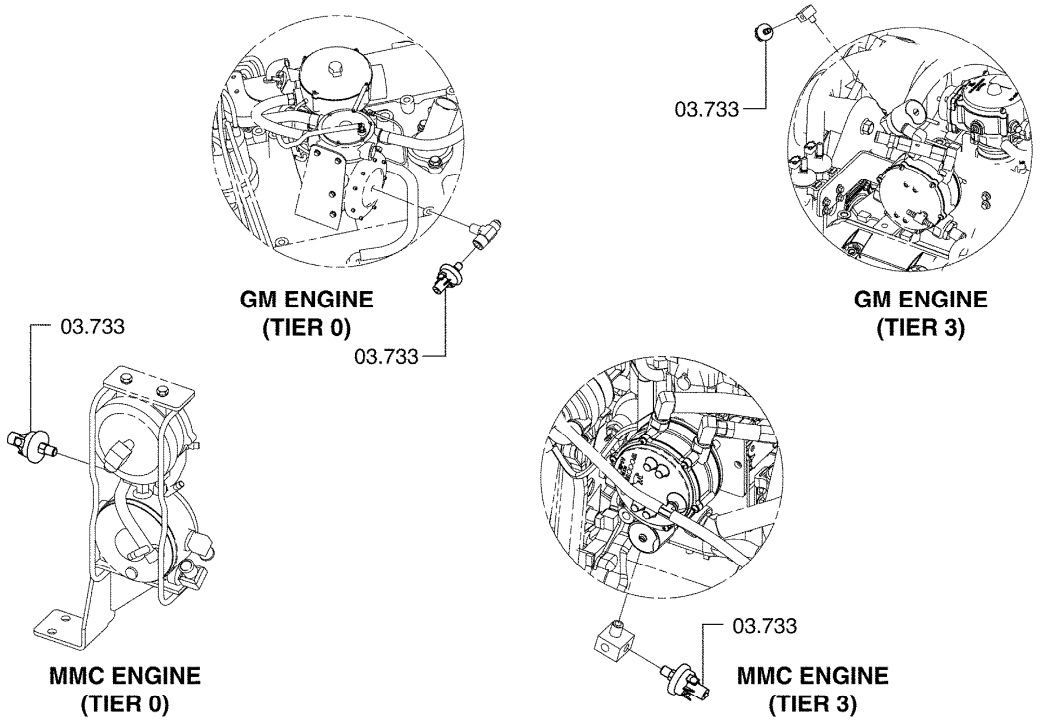

SWITCH INSTALLATION **03-581**

03.733 SWITCH,LPG PRESSURE
스위치

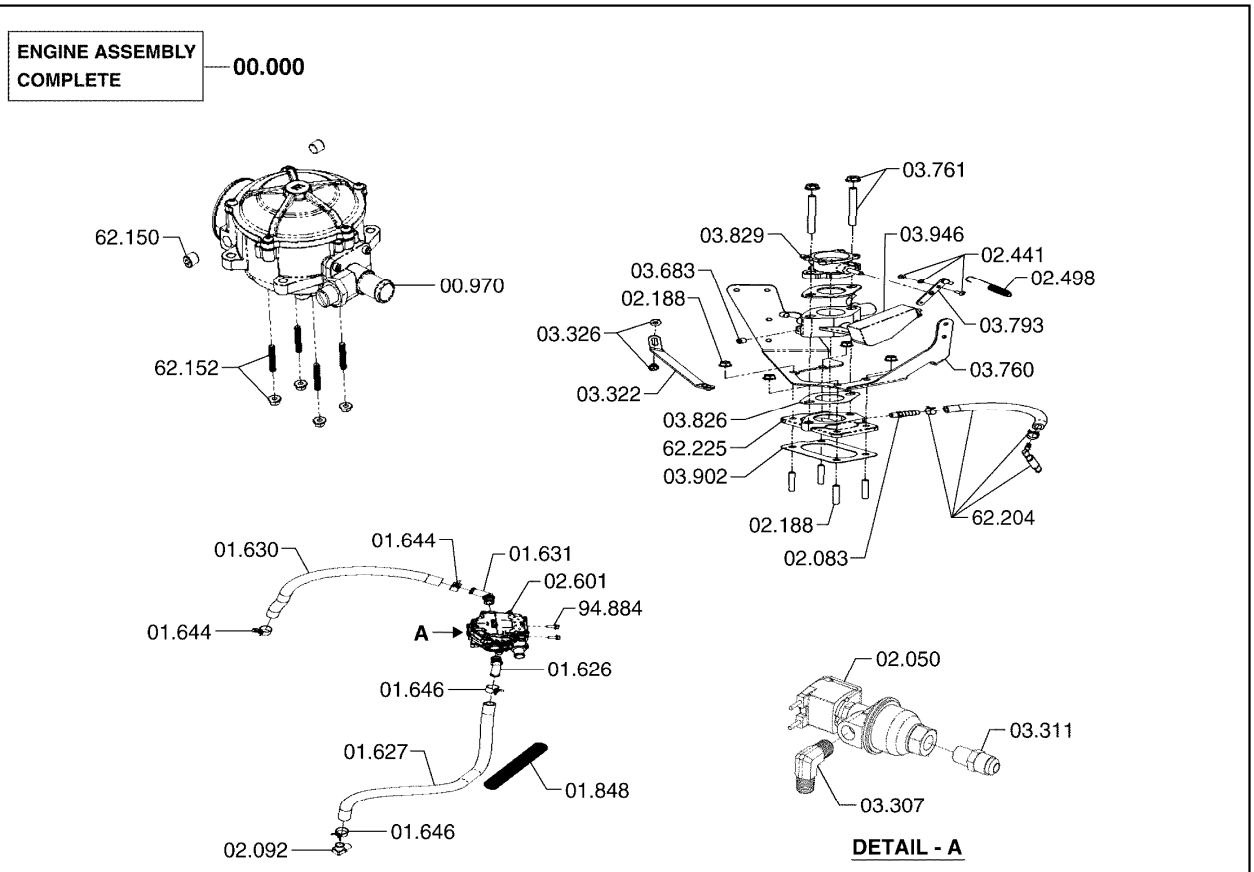


FUEL LINES **03-655**

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.970	MIXER, CARB FUEL 믹서
01.626	FITTING, VAPORIZER WATER OUTLET 피팅
01.627	LINE, VAPORIZER WATER OUTLET 라인
01.630	LINE, VAPORIZER WATER INLET 라인
01.631	FITTING, VAPORIZER WATER INLET LINE 피팅
01.644	CLAMP, VAPORIZER WATER INLET LINE 클램프
01.646	CLAMP, VAPORIZER WATER OUTLET LINE 클램프
01.848	PROTECTION, VAPORIZER WATER LINE 보호장치
02.050	VALVE, LPG LOCK OFF 밸브
02.083	FITTING, ADAPTOR OUTLET LINE 피팅
02.092	FITTING, LPG VAPORIZER OUTLET 피팅
02.188	FASTENER, THROTTLE PLATE 패스너
02.441	FASTENER, THROTTLE LEVER 패스너
02.498	SPRING, ACCELERATOR RETURN 스프링
02.601	REGULATOR,VAPORIZER ASSY 레귤레이터
03.307	FITTING, FUEL LOCK-OFF VALVE INLET 피팅
03.311	FITTING, FUEL LOCK-OFF VALVE INLET 피팅
03.322	BRACKET, LPG REGULATOR MOUNTING 브라켓
03.326	FASTENER, LPG REGULATOR MOUNTING BRACKET 패스너
03.683	PLUG, THROTTLE BODY 플러그
03.760	BRACKET, THROTTLE POSITIONER 브라켓
03.761	FASTENER, THROTTLE POSITIONER BRACKET 패스너
03.793	ARM, THROTTLE 암
03.826	GASKET, THROTTLE BODY 가스켓
03.829	THROTTLE BODY AND SHAFT 트로틀
03.902	GASKET, GOVERNOR TO MANIFOLD ADAPTER 가스켓
03.946	GOVERNOR 거버너
62.150	PLUG, MIXER 플러그
62.152	FASTENER, MIXER 패스너

62.204 LINE, PCV
라인

62.225 ADAPTER, THROTTLE BODY
어댑터

94.884 FASTENER, LPG VAPORIZER MOUNTING
패스너

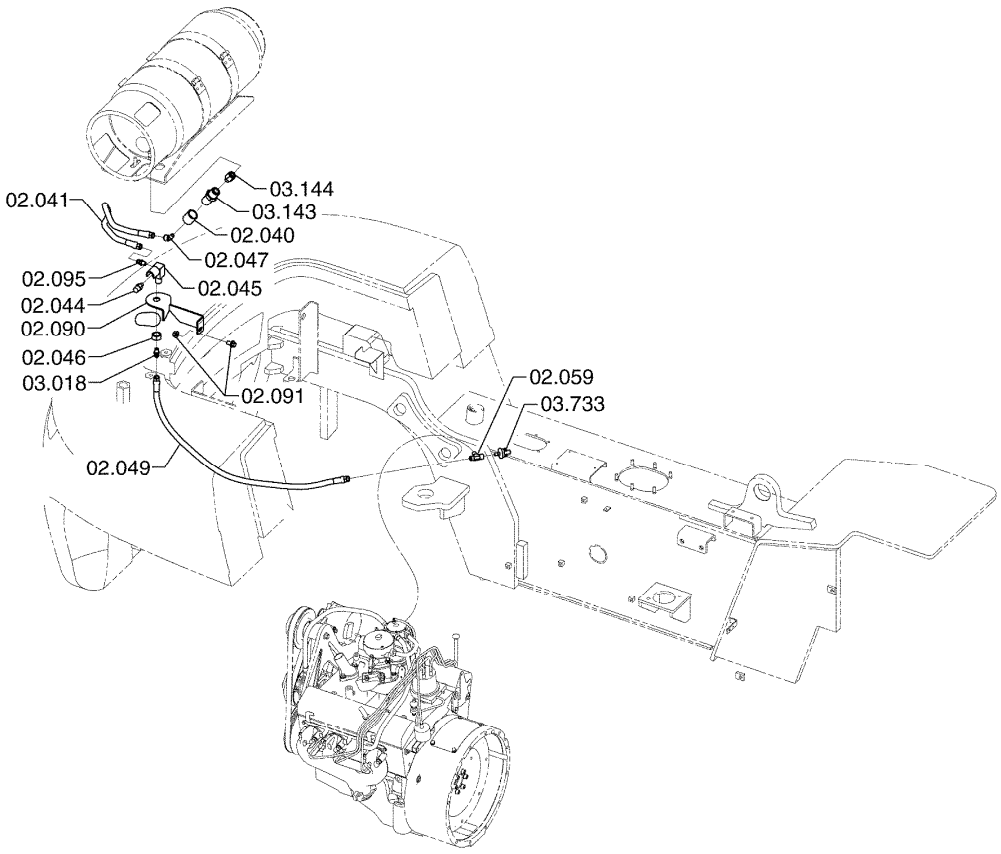

FUEL SYSTEM **03-659**

02.040 COUPLER, LPG QUICK DISCONNECT
커플러

02.041 LINE, LP GAS TANK OUTLET
라인

02.044 VALVE, HYDROSTATIC RELIEF
밸브

02.045 ADAPTOR, THREE WAY THRU HOOD
어댑터

02.046 FASTENER, ADAPTOR
패스너


02.047 FITTING, LPG ADAPTOR OUTLET
피팅

02.049 LINE, ADAPTOR OUTLET
라인

02.059 FITTING, LPG VAPORIZER INLET
피팅

02.090 BRACKET, LPG THREE WAY ADAPTOR MOUNTING
브라켓

02.091	FASTENER, LPG ADAPTOR MOUNTING BRACKET 패스너
02.095	FITTING, LPG THREE WAY ADAPTOR 피팅
03.018	FITTING, THREE WAY VALVE OUTLET LINE 피팅
03.143	COUPLER, LPG QUICK DISCONNECT 커플러
03.144	COUPLER, LPG QUICK DISCONNECT 커플러
03.733	SWITCH,LPG PRESSURE 스위치

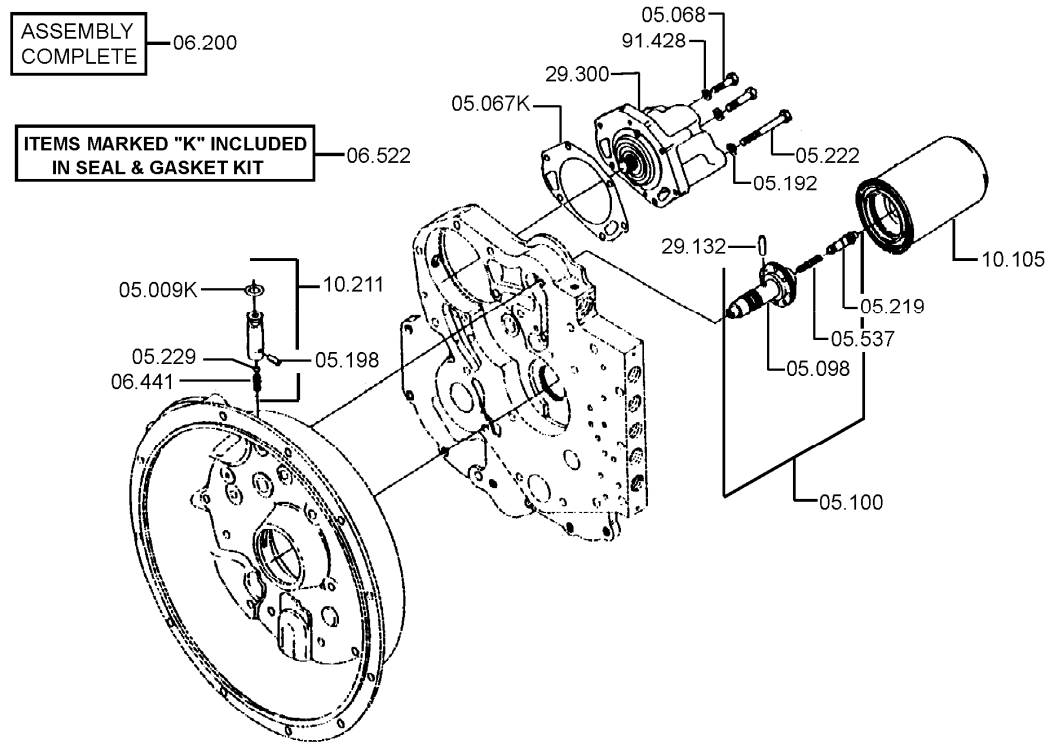

05.009 SEAL, IMPELLER COVER
시일

05.067 GASKET, CONVERTER PUMP
가스켓

05.068 FASTENER, CONVERTER CHARGING PUMP
패스너

05.098 SLEEVE, IMPELLER COVER
슬리브

05.100 REGULATOR ASSEMBLY, CLUTCH PRESSURE
레귤레이터


05.192 LOCKWASHER, CONVERTER PUMP FASTENER
로크와셔

05.198 LOCK, IMPELLER TO HUB CAPSCREW
로크

05.219 PISTON, PRESSURE REGULATING VALVE
피스톤

05.222 CAPSCREW, CONVERTOR PUMP MOUNTING
캡스크류

05.229	BALL, CONVERTER PRESSURE REGULATING CHECK 볼
05.537	SPRING, CONVERTER PRESSURE REGULATING VALVE RETURN 스프링
06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.441	SPRING, CONVERTER OIL PRESSURE VALVE 스프링
06.522	SEAL AND GASKET KIT, TRANSMISSION 시일과가스켓킷
10.105	ELEMENT & GASKET, OIL FILTER 엘리먼트와가스켓
10.211	VALVE ASSEMBLY, CONVERTOR BY-PASS 벨브
29.132	PIN, PUMP RING LOCATING 핀
29.300	PUMP ASSEMBLY, CONVERTER CHARGING 펌프
91.428	LOCKWASHER, CONVERTER CHARGING PUMP FAST 로크와셔

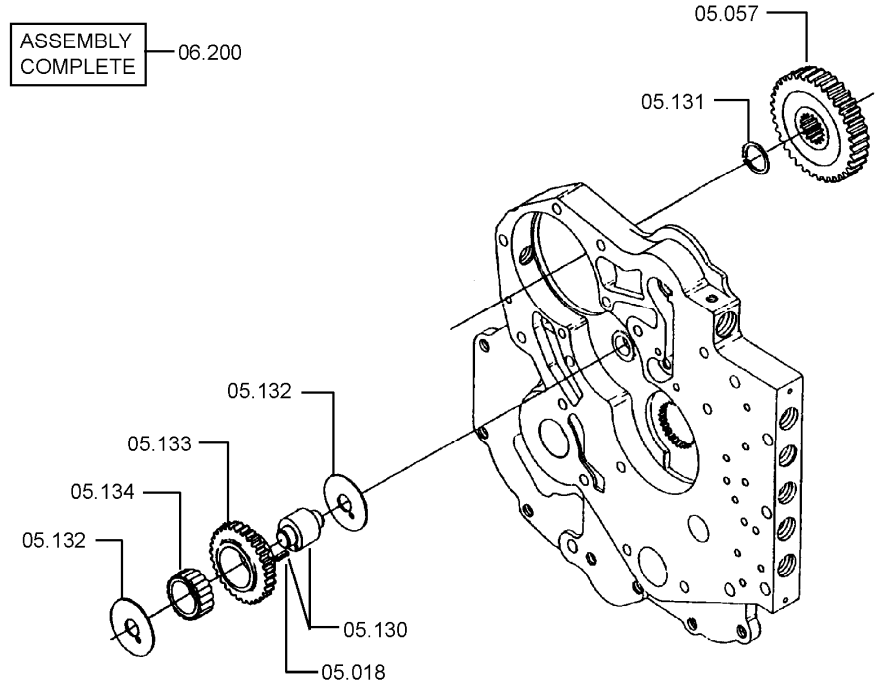

CONVERTOR PUMP DRIVE 05-034

05.018 PIN, REACTION MEMBER
핀

05.057 GEAR, PUMP DRIVE
기어

05.130 SHAFT, CONVERTER PUMP IDLER GEAR
샤프트


05.131 SEAL, CONVERTOR PUMP IDLER GEAR SHAFT
시일

05.132 THRUST WASHER, CONVERTOR PUMP IDLER GEAR
트러스트와셔

05.133 GEAR, CONVERTOR PUMP IDLER
기어

05.134 BEARING, CONVERTOR PUMP IDLER GEAR
베어링

06.200 TRANSMISSION ASSEMBLY
트랜스미션

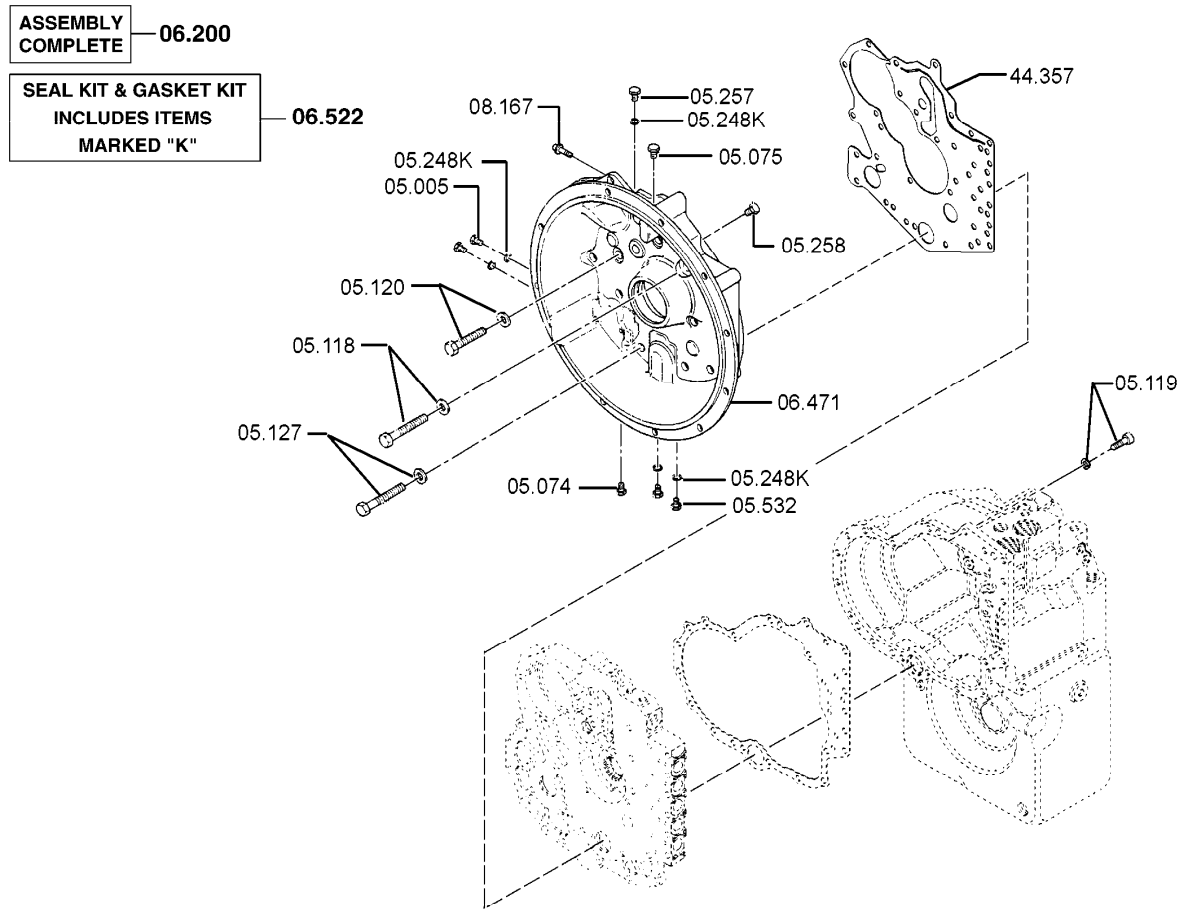

05.005 PLUG, TORQUE CONVERTER DRAIN
플러그

05.074 PLUG, HOUSING DRAIN
플러그

05.075 PLUG, CONVERTER HOUSING DRAIN (FRONT)
플러그

05.118 FASTENER, CONVERTER TO CASE
패스너

05.119 FASTENER, CONVERTER CASE
패스너


05.120 FASTENER, CONVERTER TO CASE
패스너

05.127 FASTENER, CONVERTER TO CASE
패스너

05.248 SEAL, TORQUE CONVETER PRESSURE CHECK
시일

05.257 PLUG, TORQUE CONVERTER HOUSING
플러그

05.258	PLUG, TORQUE CONVERTER HOUSING 플러그
05.532	PLUG, TORQUE CONVERTER INLET FITTING 플러그
06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.471	HOUSING, CONVERTER 하우징
06.522	SEAL AND GASKET KIT, TRANSMISSION 시일과가스켓킷
08.167	SWITCH, TRANSMISSION OIL PRESSURE 스위치
44.357	GASKET, CONVERTER HOUSING COVER 가스켓

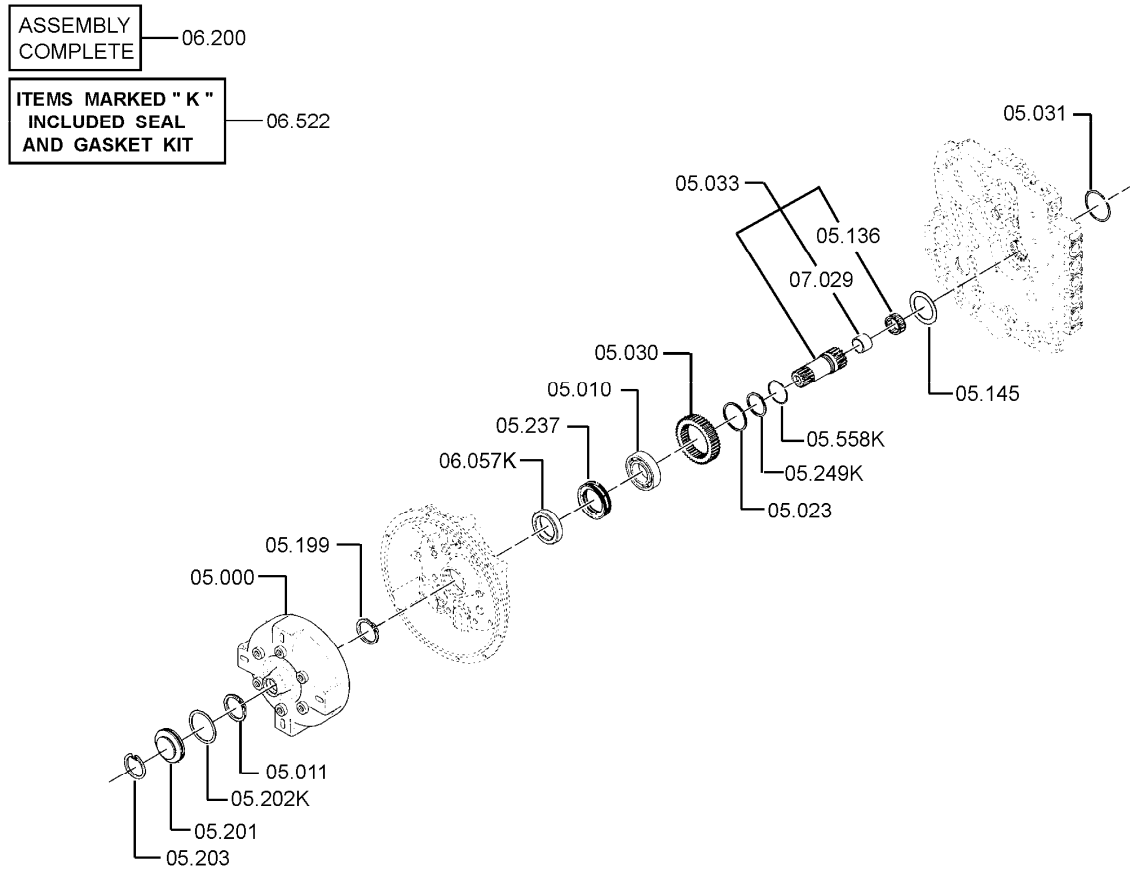

TORQUE CONVERTER **05-046**

05.000	CONVERTER ASSEMBLY, TORQUE 컨버터
05.010	BEARING, IMPELLER COVER 베어링
05.011	RING-RETAINING, COVER BEARING 링
05.023	SEAL, CONVERTER IMPELLER HUB 시일
05.030	GEAR, IMPELLER HUB 기어
05.031	RING-RETAINING, IMPELLER HUB GEAR 링
05.033	STATOR SUPPORT ASSEMBLY, CONVERTER 스테이터
05.136	BEARING, CONVERTER STATOR SUPPORT 베어링
05.145	WASHER, CONVERTER STATOR SUPPORT 와셔

05.199 RETAINER, IMPELLER COVER BEARING LOCATING
리테이너

05.201 PLUG, CONVERTER IMPELLER COVER
플러그

05.202 SEAL, CONVERTER IMPELLER COVER PLUG
시일

05.203 RETAINER, CONVERTER IMPELLER COVER PLUG
리테이너

05.237 RING, HUB TO IMPELLER BACKING
링

05.249 RING-PISTON, STATOR SUPPORT
링


05.558 RING, CONVERTER TURBINE SHAFT BEARING LOCATOR
링

06.057 BRACKET, SHIFT CONTROL RETURN SPRING
브라켓

06.200 TRANSMISSION ASSEMBLY
트랜스미션

06.522 SEAL AND GASKET KIT, TRANSMISSION
시일과가스켓킷

07.029 BUSHING, TRANSMISSION MOUNTING BRACKET
부싱

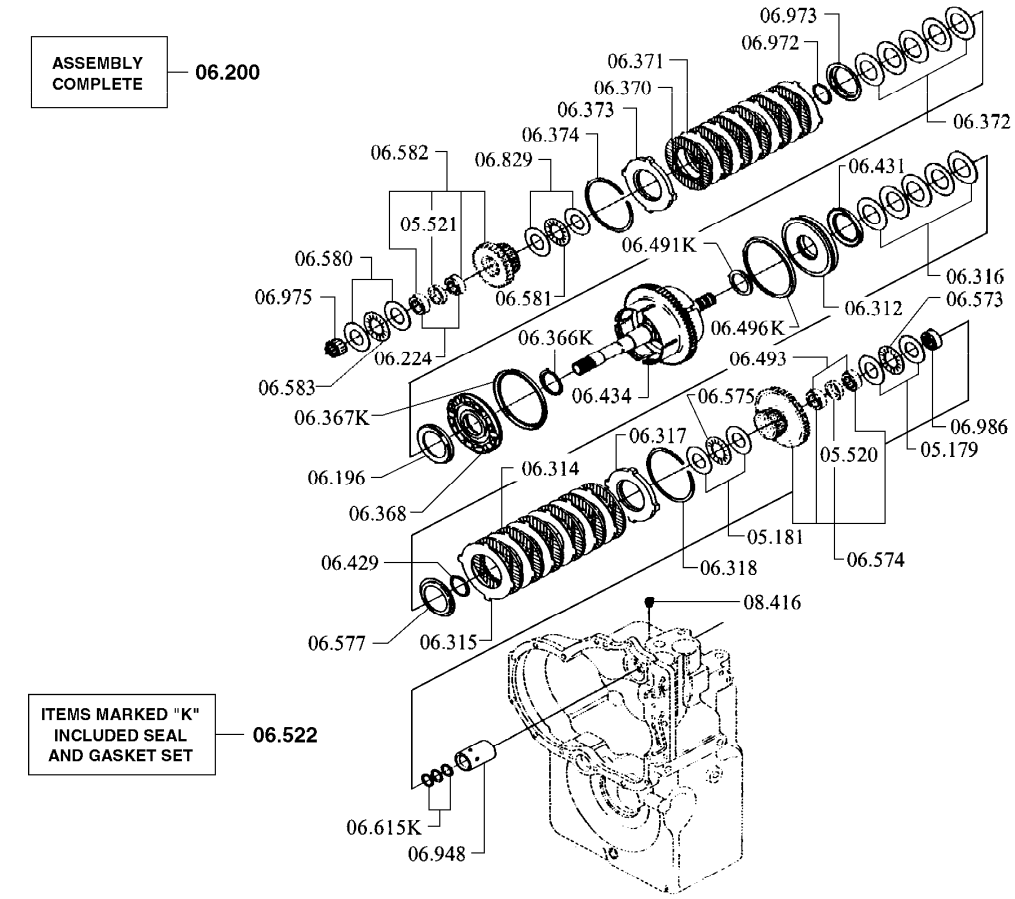

CLUTCH PACK 06-102

05.179	THRUST WASHER, FWD & REV LINKAGE LEVER 트러스트와셔	06.368	PISTON, REVERSE CLUTCH 피스톤
05.181	THRUST WASHER, FWD & REV LINKAGE LEVER 트러스트와셔	06.370	DISC, REVERSE CLUTCH INNER 디스크
05.520	SPACER, FORWARD GEAR BEARING 스페이서	06.371	DISC, REVERSE CLUTCH OUTER 디스크
05.521	SPACER, REVERSE GEAR BEARING 스페이서	06.372	SPRING, REVERSE CLUTCH DISC RELEASE 스프링
06.196	PLATE, FORWARD & REVERSE LEVER DETENT 플레이트	06.373	PLATE, REVERSE CLUTCH DISC END 플레이트
06.200	TRANSMISSION ASSEMBLY 트랜스미션	06.374	RING, REVERSE CLUTCH DISC END PLATE RET 링
06.224	BEARING, REVERSE QUILL SHAFT INNER 베어링	06.429	RING - RETAINING, FWD CLUTCH PISTON SPRING 링
06.312	PISTON, FORWARD CLUTCH 피스톤	06.431	PLATE, FORWARD CLUTCH PRESSURE (FRONT) 플레이트
06.314	DISC, FORWARD CLUTCH INNER 디스크	06.434	SHAFT & GEAR, CLUTCH DRIVE 샤프트와기어
06.315	DISC, FORWARD CLUTCH OUTER 디스크	06.491	SEAL, FORWARD CLUTCH SHAFT-INNER 시일
06.316	SPRING, FORWARD CLUTCH DISC RELEASE 스프링	06.493	BEARING, FORWARD SHAFT INNER 베어링
06.317	PLATE, FORWARD CLUTCH DISC END 플레이트	06.496	SEAL, FORWARD CLUTCH SHAFT-OUTER 시일
06.318	RING, FORWARD CLUTCH DISC END PLATE RET 링	06.522	SEAL AND GASKET KIT, TRANSMISSION 시일과가스켓킷
06.366	SEAL, REVERSE CLUTCH PISTON INNER 시일	06.573	BEARING, FORWARD GEAR 베어링
06.367	SEAL, REVERSE CLUTCH PISTON OUTER 시일	06.574	GEAR & BEARING FORWARD 기어와베어링

06.575 BEARING, FORWARD GEAR
베어링

06.577 RETAINER, FORWARD CLUTCH SPRING
리테이너

06.580 THRUST WASHER, REVERSE CLUTCH HUB & DRUM
트러스트와셔

06.581 BEARING, REVERSE GEAR
베어링

06.582 GEAR & BEARING, REVERSE
기어묵붕어링

06.583 BEARING, REVERSE GEAR
베어링

06.615 SEAL, TRANSMISSION SPEED SEL OIL DISTR SLEEVE
시일

06.829 THRUST WASHER, REVERSE CLUTCH HUB & DRUM (THICK)
트러스트와셔

06.948 SLEEVE, CLUTCH OIL DISTRIBUTION
슬리브


06.972 RING, CLUTCH RELEASE SPRING RETAINER
링

06.973 RETAINER, CLUTCH RELEASE SPRING
리테이너

06.975 BEARING, REVERSE CLUTCH HUB (AXLE END)
베어링

06.986 BEARING, FORWARD CLUTCH HUB (AXLE END)
베어링

08.416 PLUG, CLUTCH HOUSING COVER INSPECTION
플러그

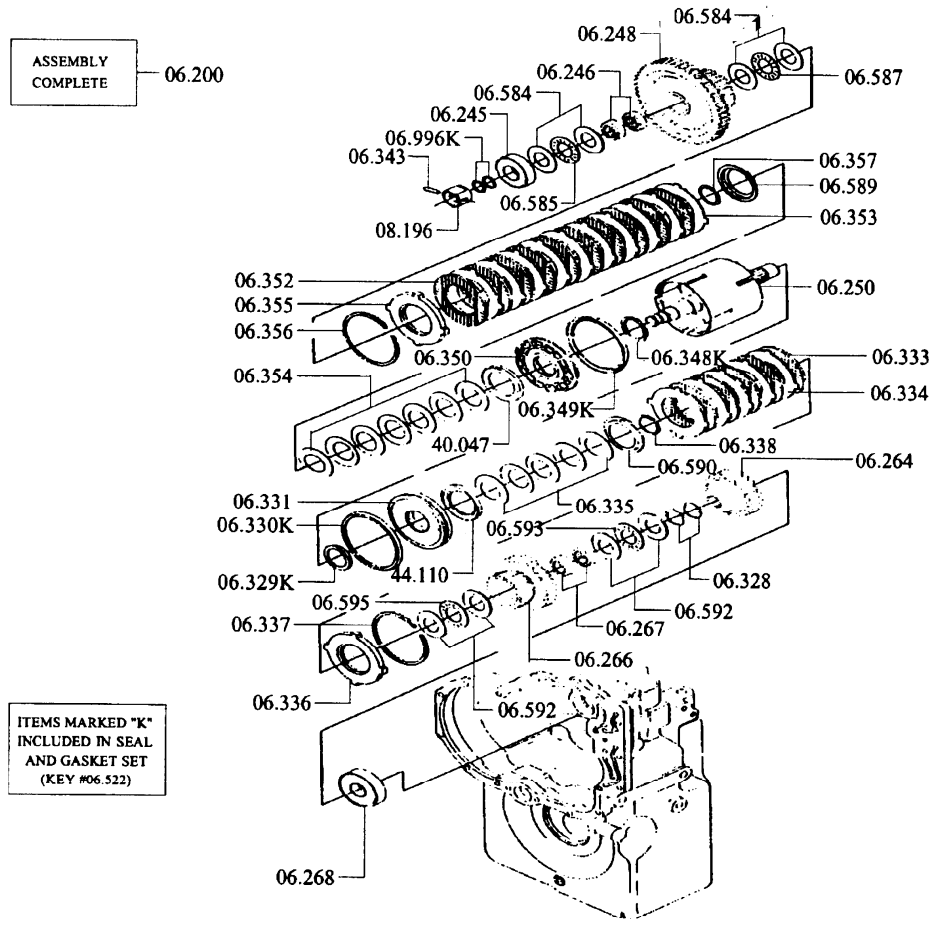

06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.245	BEARING, 1ST & 3RD QUILL SHAFT OUTER 베어링
06.246	BEARING, 1ST & 3RD QUILL SHAFT INNER 베어링
06.248	GEAR, 1ST & 3RD DRIVE 기어
06.250	SHAFT, 1ST & 3RD DRIVE 샤프트
06.264	GEAR, 2ND & 4TH DRIVE SHAFT HIGH 기어
06.266	GEAR, 2ND & 4TH DRIVE SHAFT LOW 기어
06.267	BEARING, 2ND &4TH QUILL SHAFT INNER 베어링
06.268	BEARING, 2ND & 4TH QUILL SHAFT OUTER 베어링
06.328	RETAINER, 2ND & 4TH HUB 리테이너
06.329	SEAL, 2ND & 4TH CLUTCH PISTON INNER 시일
06.330	SEAL, 2ND & 4TH CLUTCH PISTON OUTER 시일
06.331	PISTON, 2ND & 4TH CLUTCH 피스톤
06.333	DISC, 2ND & 4TH CLUTCH INNER 디스크
06.334	DISC,CLUTCH OUTER 디스크
06.335	SPRING, 2ND & 4TH CLUTCH DISC RELEASE 스프링
06.336	PLATE, 2ND & 4TH CLUTCH DISC END 플레이트
06.337	RING, 2ND & 4TH CLUTCH DISC END PLATE RET 링
06.338	RING, 2ND & 4TH CLUTCH DISC HUB RETAINER 링
06.343	FASTENER, 1ST & 3RD CLUTCH BEARING CAP 패스너
06.348	SEAL, 1ST & 3RD CLUTCH PISTON INNER 시일
06.349	SEAL, 1ST & 3RD CLUTCH PISTON OUTER 시일
06.350	PISTON, 1ST & 3RD CLUTCH 피스톤
06.352	DISC, 1ST & 3RD CLUTCH INNER 디스크
06.353	DISC, 1ST & 3RD CLUTCH OUTER 디스크
06.354	SPRING, 1ST & 3RD CLUTCH DISC RELEASE 스프링
06.355	PLATE, 1ST & 3RD CLUTCH DISC END 플레이트
06.356	RING, 1ST & 3RD CLUTCH DISC END PLATE RET 링
06.357	RING, 1ST & 3RD CLUTCH DISC HUB RETAINER 링
06.584	THRUST WASHER, 1ST CLUTCH HUB & DRUM 트러스트와셔

06.585 BEARING, 1ST GEAR
베어링

06.587 BEARING, 1ST GEAR
베어링

06.589 RETAINER, 1ST CLUTCH SPRING
리테이너

06.590 RETAINER, 2ND CLUTCH SPRING
리테이너

06.592 THRUST WASHER, 2ND CLUTCH HUB & DRUM
트러스트와셔

06.593 BEARING, 2ND GEAR
베어링


06.595 BEARING, 2ND GEAR
베어링

06.996 RING, 1ST CLUTCH HUB BEARING LOCATING
링

08.196 SLEEVE, 1ST GEAR HUB
슬리브

40.047 PLATE, CLUTCH INSTRUCTION
플레이트

44.110 PLATE, CONVERTER DRIVE
플레이트

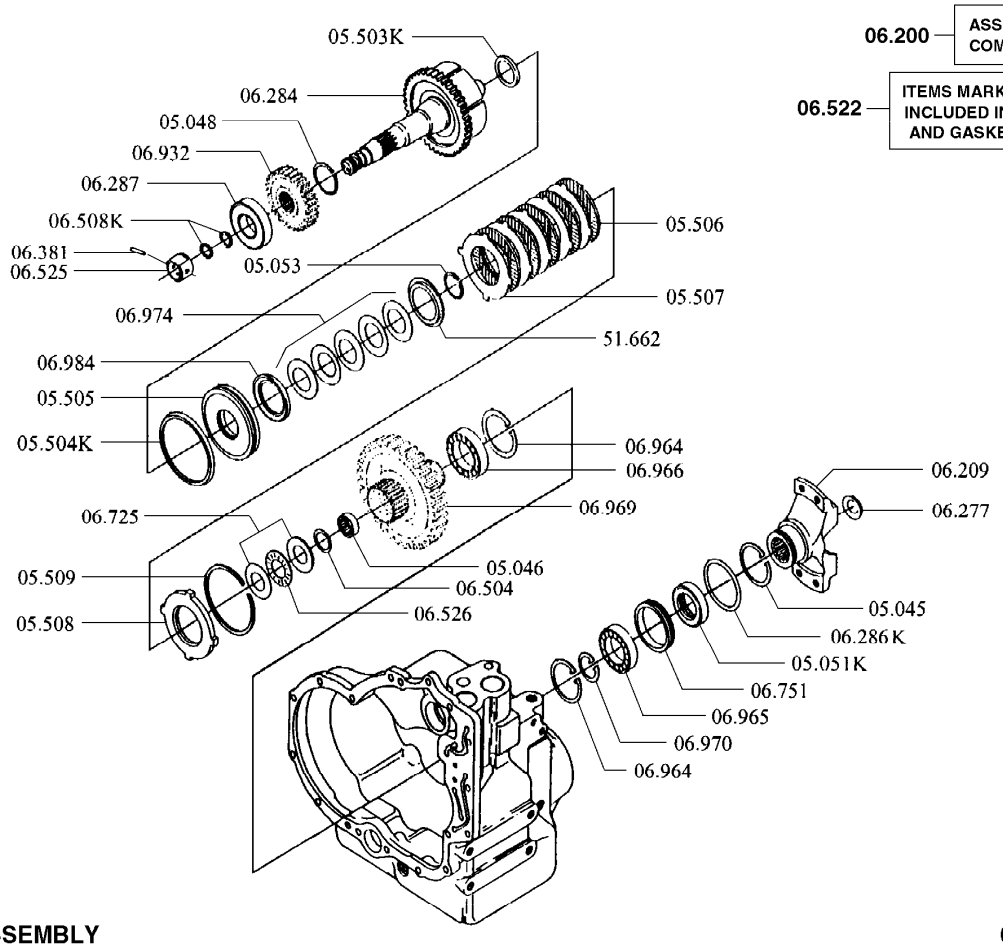

CLUTCH ASSEMBLY **06-106**

05.045	RING-RETAINING, OUTPUT SHAFT BRG (REAR) 링	06.284	SHAFT, OUTPUT 샤프트
05.046	BEARING, CONVERTER OUTPUT SHAFT (REAR) 베어링	06.286	RING, OUTPUT SHAFT OIL 링
05.048	RETAINER, OUTPUT SHAFT REAR BEARING 리테이너	06.287	BEARING, OUTPUT SHAFT FRONT 베어링
05.051	SEAL, OUTPUT FLANGE 시일	06.381	FASTENER, OUTPUT SHAFT BEARING SPACER 패스너
05.053	SEAL, OUTPUT SHAFT (REAR) 시일	06.504	RING, OUTPUT SHAFT REAR BEARING LOCATING 링
05.503	SEAL, 3RD CLUTCH PISTON-INNER 시일	06.508	RING, OUTPUT SHAFT FRONT BEARING LOCATING 링
05.504	SEAL, 3RD CLUTCH PISTON-OUTER 시일	06.522	SEAL AND GASKET KIT, TRANSMISSION 시일과가스켓킷
05.505	PISTON, 3RD CLUTCH 피스톤	06.525	SLEEVE, OUTPUT SHAFT SHIFT HUB 슬리브
05.506	DISC, 3RD CLUTCH-INNER 디스크	06.526	BEARING, OUTPUT SHAFT LOW GEAR 베어링
05.507	DISC, 3RD CLUTCH-OUTER 디스크	06.725	WASHER, OUTPUT SHAFT GEAR THRUST 와셔
05.508	PLATE, 3RD CLUTCH DISC END 플레이트	06.751	SLEEVE, OUTPUT SHAFT OIL 슬리브
05.509	RING, 3RD CLUTCH DISC END PLATE RET 링	06.932	GEAR, TRANSMISSION OUTPUT SHAFT RING 기어
06.200	TRANSMISSION ASSEMBLY 트랜스미션	06.964	RING, OUTPUT SHAFT GEAR LOCATING 링
06.209	FLANGE & DEFLECTOR, OUTPUT 플랜지와디플렉터	06.965	BEARING, UPPER CLUTCH SHAFT (AXLE END) 베어링
06.277	CAP, OUTPUT SHAFT REAR OIL 캡	06.966	BEARING, THIRD GEAR (AXLE END) 베어링


06.969 GEAR, UPPER CLUTCH SHAFT THIRD
기어

06.970 RING, CLUTCH HUB OIL BAFFLE
링

06.974 SPRING, CLUTCH RELEASE
스프링

06.984 RETAINER, CLUTCH RELEASE SPRING
리테이너

51.662 RETAINER, GEAR BOX OUTPUT SHAFT SEAL
리테이너

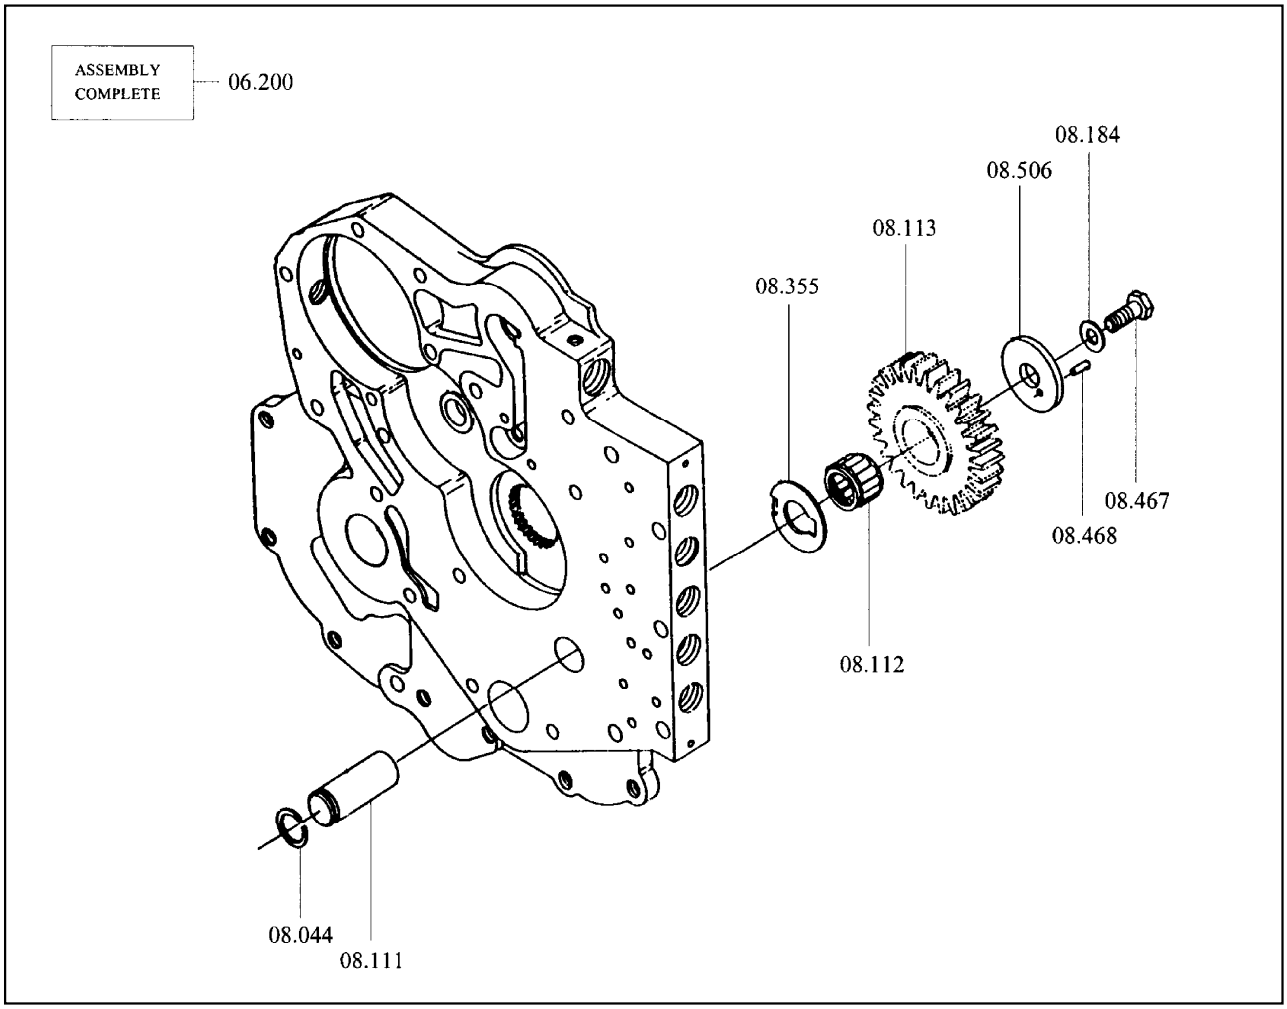

06.200 TRANSMISSION ASSEMBLY
트랜스미션

08.044 SNAP RING, COUNTERSHAFT GEAR
스냅링

08.111 SHAFT, REVERSE IDLER
샤프트

08.112 BEARING, TRANSMISSION REVERSE IDLER GEAR
베어링

08.113 GEAR, REVERSE IDLER
기어


08.184 WASHER, REVERSE IDLER GEAR THRUST
와셔

08.355 WASHER, REVERSE GEAR THRUST
와셔

08.467 FASTENER, REVERSE IDLER BEARING RETAINER
패스너

08.468 PIN, REVERSE IDLER BEARING RETAINER
핀

08.506 PLATE, TRANSMISSION SYNCHRONIZER SHIFTING
플레이트

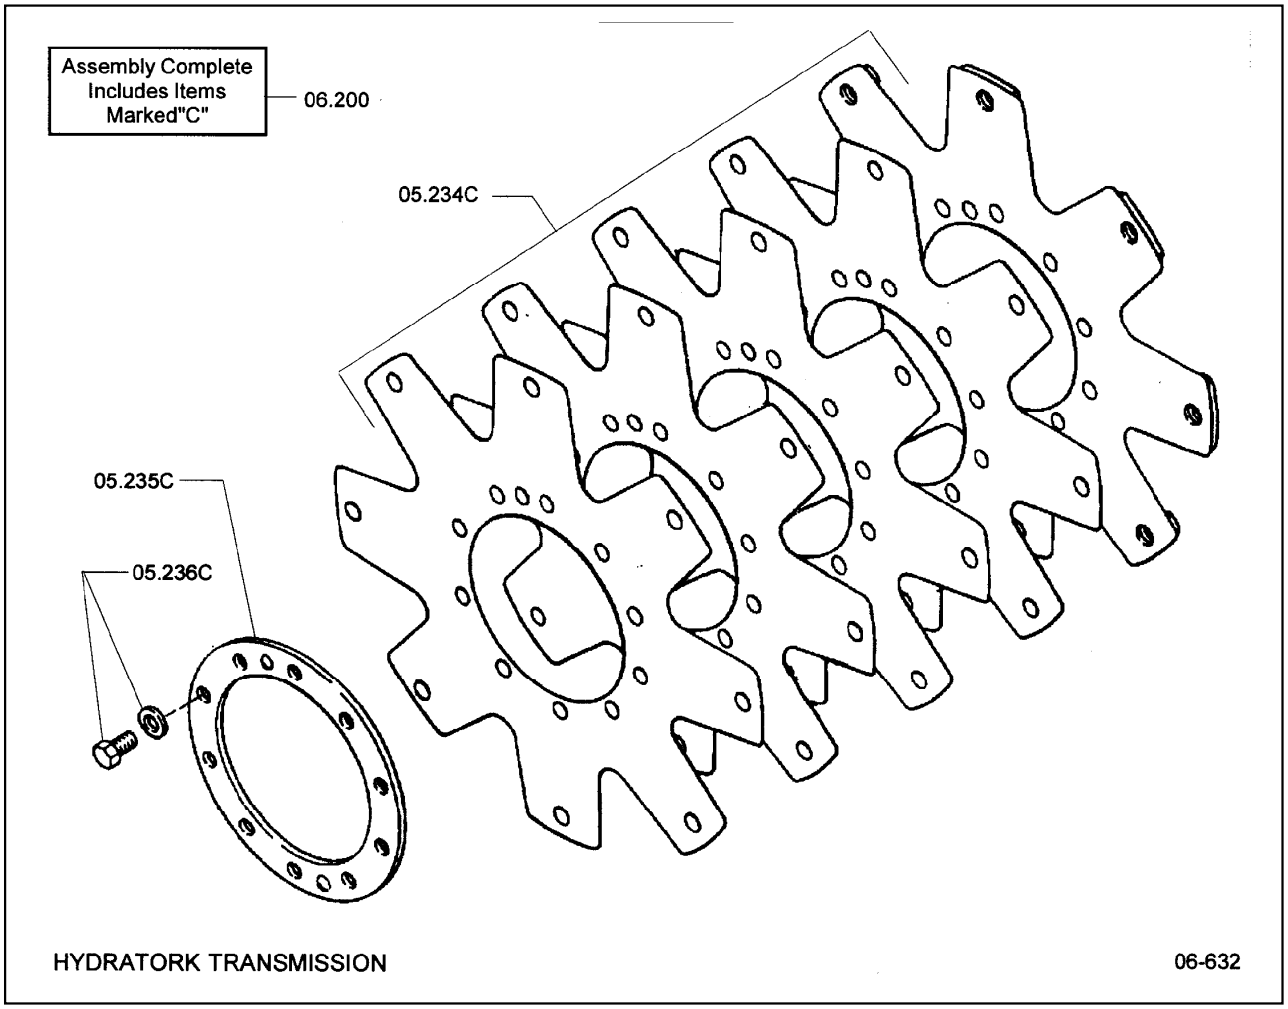


05.234 PLATES, FLEX DRIVE ASSEMBLY
플레이트

05.235 RING, FLEX DRIVE PLATE BACKING
링

05.236 FASTENER, FLEX DRIVE PLATE MOUNTING
패스너

06.200 TRANSMISSION ASSEMBLY
트랜스미션

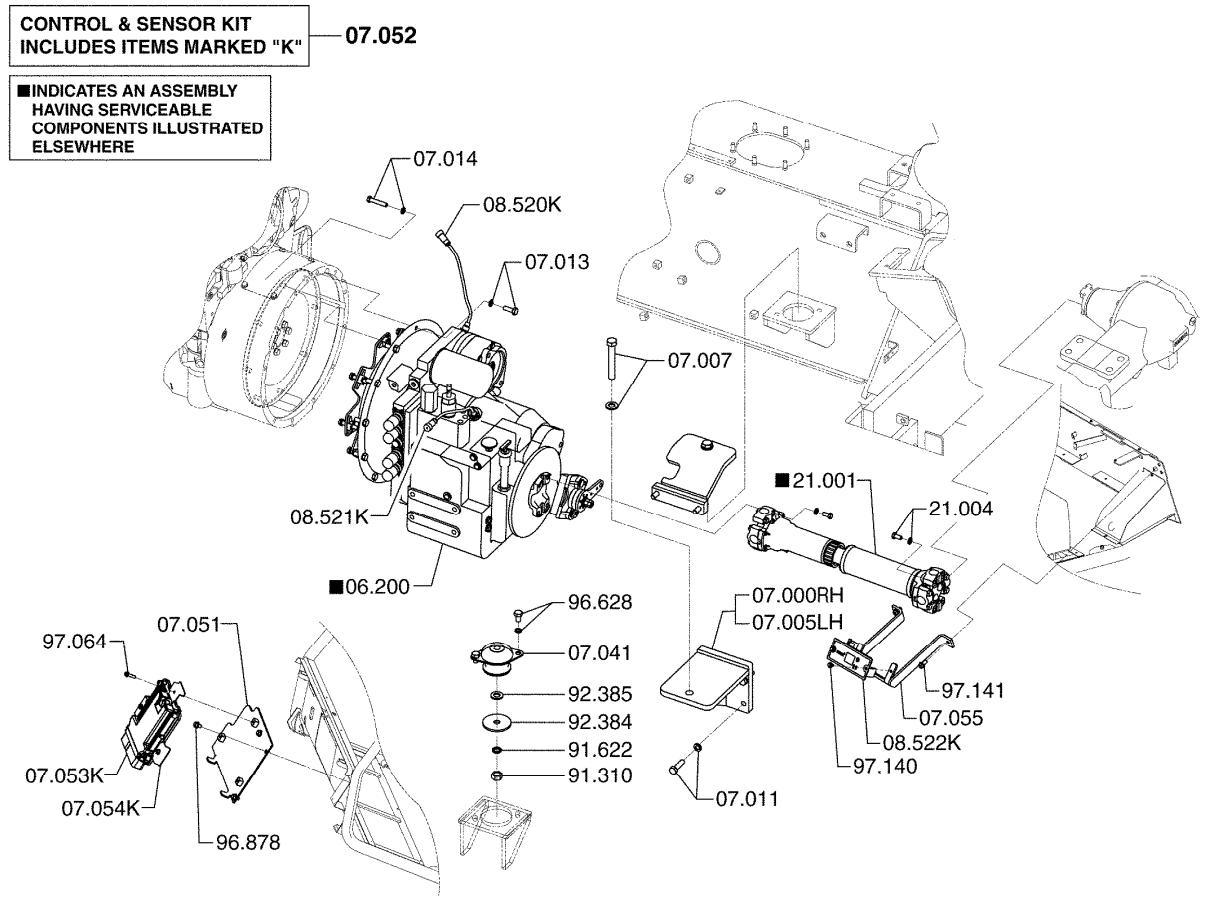

06.200 TRANSMISSION ASSEMBLY
트랜스미션

07.000 BRACKET, TRANSMISSION MOUNTING (RH)
브라켓

07.005 BRACKET, TRANSMISSION MOUNTING LH
브라켓

07.007 FASTENER, TRANSMISSION MOUNTING BRACKET LH
패스너

07.011 FASTENER, TRANSMISSION MOUNTING BRACKET LH
패스너


07.013 FASTENER, TRANSMISSION TO ENGINE
패스너

07.014 FASTENER, TRANSMISSION TO ENGINE
패스너

07.041 DAMPENER, TRANSMISSION MOUNTING VIBRATION
댐프너

07.051 BRACKET, TRANSMISSION CONTROLLER
브라켓

07.052	KIT, TRANSMISSION CONTROLLER & SENSORS 킷
07.053	TRANSMISSION CONTROL UNIT 트랜스미션컨트롤
07.054	BRACKET, TRANSMISSION CONTROLLER 브라켓
07.055	BRACKET, TRANSMISSION REMOTE DISPLAY 브라켓
08.520	SENSOR, TRANSMISSION SPEED TO ENGINE 센서
08.521	SENSOR, TRANSMISSION SPEED TURBINE 센서
08.522	DISPLAY, TRANSMISSION REMOTE 디스플레이
21.001	SHAFT ASSEMBLY, TRANSMISSION TO AXLE PROPELLER 샤프트
21.004	FASTENER, PROPELLER SHAFT 패스너
91.310	NUT, TRANS MOUNTING BRACKET FASTENER (LH) 너트
91.622	LOCKWASHER, TRANSMISSION MOUNTING BRACKET FASTENER 로크와셔
92.384	WASHER, TRANSMISSION MOUNTING BRACKET TO FRAME FAS 와셔
92.385	WASHER, TRANSMISSION MOUNTING BRACKET TO FRAME FAS 와셔
96.628	FASTENER, VIBRATION DAMPENER MOUNT 패스너
96.878	FASTENER, CONTROLLER BRACKET 패스너
97.064	FASTENER, CONTROLLER BRACKET MOUNTING 패스너
97.140	FASTENER, TRANSMISSION REMOTE DISPLAY 패스너
97.141	FASTENER, TRANSMISSION REMOTE DISPLAY BRACKET 패스너

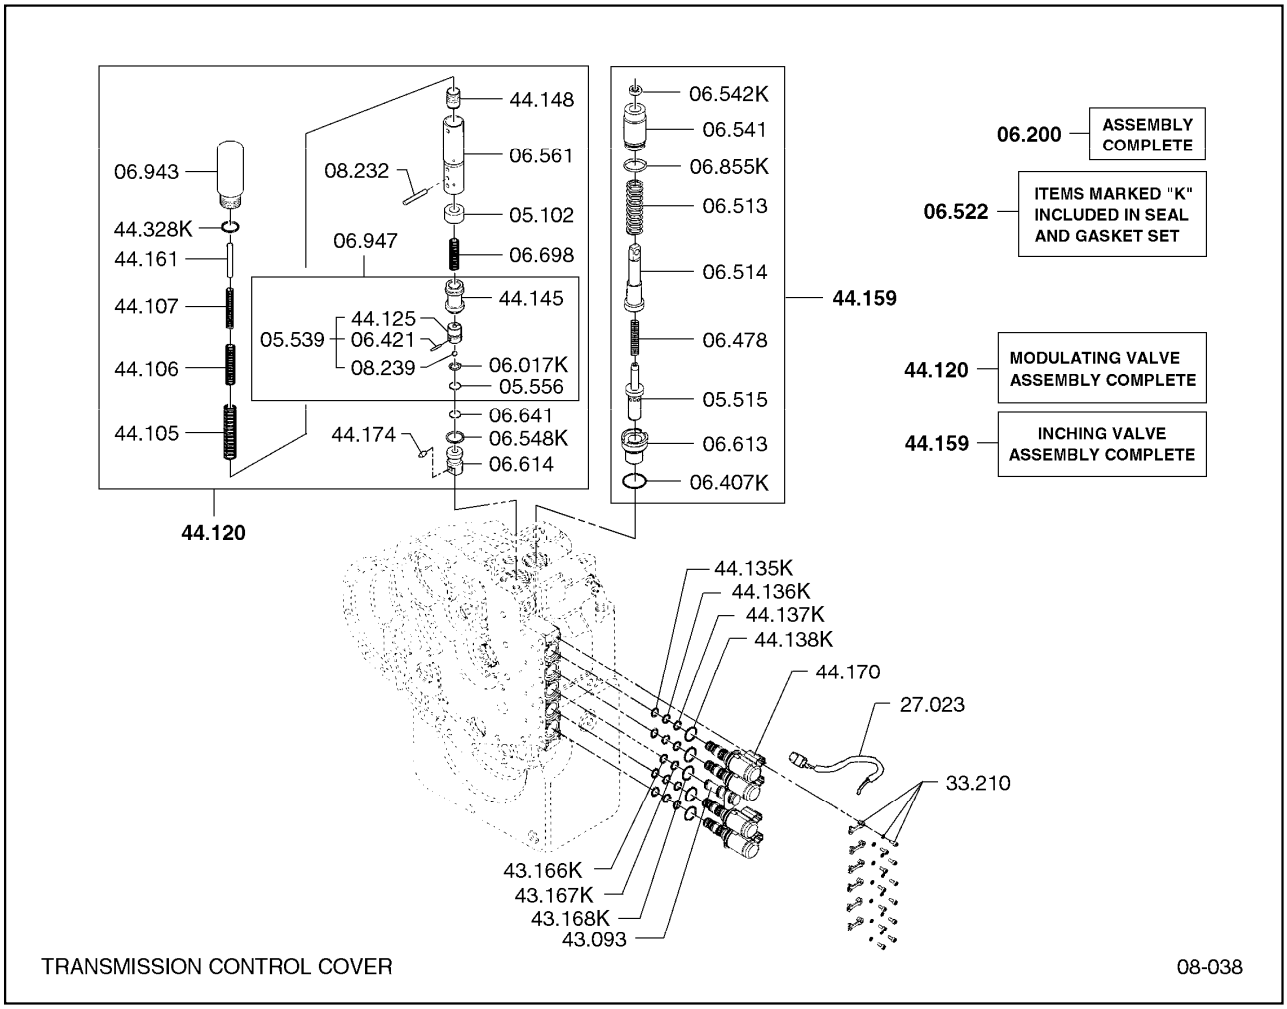

05.102	STOP, VALVE 스톱
05.515	SPOOL, INCHING 스풀
05.539	SLEEVE, TRANSMISSION LUBRICATION LINE 슬리브
05.556	RETAINER, TRANSMISSION CONTROL PRESSURE LINE 리테이너
06.017	O-RING, SPOOL CARTRIDGE 오링
06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.407	SEAL, CONTROL COVER OIL PASSAGE (SMALL) 시일
06.421	PIN, VALVE LINK 핀
06.478	SPRING, INCHING PISTON RETURN 스프링
06.513	SPRING, INCHING VALVE 스프링
06.514	ROD, INCHING VALVE 로드
06.522	SEAL AND GASKET KIT, TRANSMISSION 시일과가스켓킷
06.541	HOUSING, INCHING PISTON SEAL 하우징
06.542	SEAL, INCHING PISTON ROD 시일
06.548	SEAL, CONTROL COVER OIL PASSAGE - LARGE 시일
06.561	SLEEVE, TRANSMISSION DIRECTION SEL OIL TUBE 슬리브
06.613	SLEEVE, TRANSMISSION SPEED SEL OIL TUBE 슬리브
06.614	SLEEVE, TRANSMISSION SPEED SELECTOR OIL DISTR 슬리브
06.641	RETAINER, TRANSMISSION GOVERNOR 리테이너
06.698	SPRING, TRANSMISSION REG CHECK VALVE POPPET 스프링
06.855	SEAL, CONTROL COVER OIL PASSAGE (LARGE) 시일
06.943	HOUSING, CONTROL COVER ADAPTOR 하우징
06.947	SLEEVE, CONTROL VALVE LINE 슬리브
08.232	PIN, TRANS CONTROL INTERLOCK 핀
08.239	BALL, TRANSMISSION CONTROL INTERLOCK 볼
27.023	CABLE, SOLENOID SELECTOR VALVE 케이블
33.210	FASTENER, SOLENOID VALVE MOUNTING 패스너
43.093	PLUG, CONTROL VALVE HOUSING 플러그
43.166	SEAL, CONTROL MODULE 시일
43.167	SEAL, CONTROL MODULE 시일

43.168 SEAL, CONTROL MODULE COVER
시일

44.105 SPRING, TRANSMISSION ACCUMULATOR OUTER
스프링

44.106 SPRING, TRANSMISSION ACCUMULATOR MIDDLE
스프링

44.107 SPRING, TRANSMISSION ACCUMULATOR INNER
스프링

44.120 VALVE ASSEMBLY, MODULATION & REGULATION
밸브

44.125 SLEEVE, TRANSMISSION SAFETY VALVE
슬리브

44.135 SEAL, SOLENOID VALVE
시일

44.136 SEAL, SOLENOID VALVE
시일

44.137 SEAL, SOLENOID VALVE
시일

44.138 SEAL, SOLENOID VALVE
시일

44.145 SPOOL, MODULATOR
스풀

44.148 SPOOL, ACCUMULATOR
스풀


44.159 VALVE, INCHING
밸브

44.161 STOP, TRANSMISSION ACCUMULATOR SPOOL
스톱

44.170 COIL, TRANSMISSION CONTROL COVER SOLENOID
코일


44.174 SPOOL, SHIFT MODULATOR
스풀

44.328 SEAL, CONTROL VALVE ADAPTOR
시일

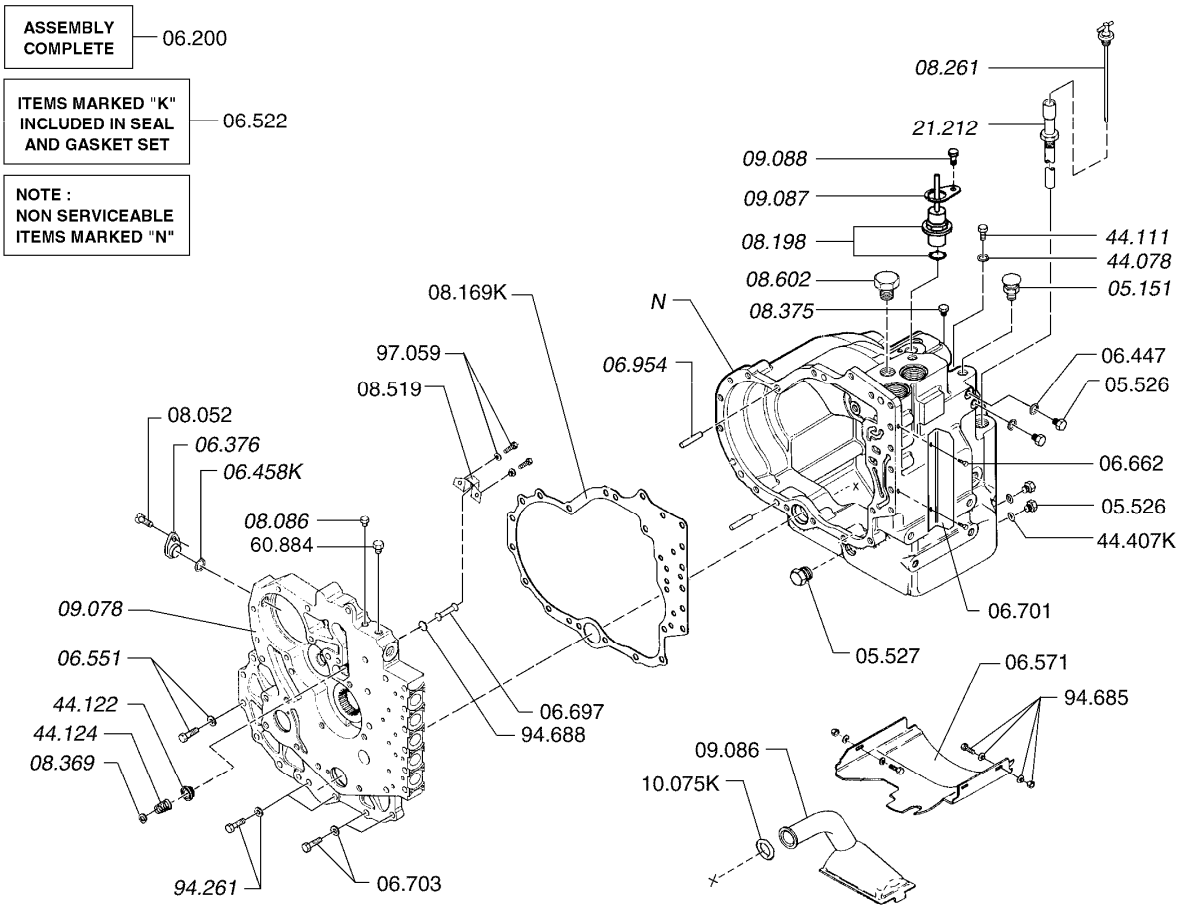


05.151	BREATHER, CONVERTER AIR 브리더
05.526	PLUG, TRANSMISSION CASE 플러그
05.527	PLUG, TRANSMISSION CASE 플러그
06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.376	PLUG, TRANSMISSION CASE FILLER 플러그
06.447	PLUG, TRANSMISSION CASE 플러그
06.458	SEAL, TRANSMISSION ADAPTOR 시일
06.522	SEAL AND GASKET KIT, TRANSMISSION 시일과가스켓킷
06.551	FASTENER, TRANSMISSION CASE TOP COVER 패스너
06.571	BAFFLE, TRANSMISSION CASE OIL 배플
06.662	FASTENER, TRANSMISSION SOLENOID 패스너
06.697	POPPET, TRANSMISSION REG CHECK VALVE 포펫
06.701	COVER, TRANSMISSION CASE - SIDE 커버
06.703	FASTENER, TRANSMISSION CASE SIDE COVER 패스너
06.954	DOWEL, TRANSMISSION CASE TO CONVERTER 다월
08.052	FASTENER, TRANSMISSION SIDE COVER 패스너
08.086	PLUG, TRANSMISSION CASE LEVEL 플러그
08.169	GASKET, TRANSMISSION CASE TO ADAPTOR PLATE 가스켓
08.198	SPEED SENSOR, ELECTRONIC GEAR SELECTOR 스피드센서
08.261	DIPSTICK, TRANSMISSION OIL LEVEL 딥스틱
08.369	WASHER, TRANSMISSION DRAIN PLUG 와셔
08.375	PLUG, TRANSMISSION MAGNETIC DRAIN 플러그
08.519	BAFFLE, TRANSMISSION SAFETY VALVE 배플
08.602	PLUG, TRANSMISSION VENT HOLE 플러그
09.078	PLATE, TRANSMISSION CASE 플레이트
09.086	SCREEN, TRANSMISSION CASE 스크린
09.087	SUPPORT, SPEED SENSOR 서포트
09.088	BOLT, SPEED SENSOR MOUNTING 볼트
10.075	SEAL, TRANSMISSION OIL FILTER 시일
21.212	TUBE, TRANSMISSION OIL LEVEL DIPSTICK 튜브

44.078	SEAL, TRANSMISSION MAIN LINE PRESSURE PORT PLUG 시일
44.111	PLUG, TRANSMISSION ACCUMULATOR HOUSING 플러그
44.122	SEAT, TRANSMISSION SAFETY VALVE 시트
44.124	SPRING, TRANSMISSION SAFETY VALVE 스프링
44.407	SEAL, TRANSMISSION CASE PLUG 시일
60.884	SWITCH, TRANSMISSION OIL TEMPERATURE 스J穎
94.261	FASTENER, TRANSMISSION CASE FRONT COVER 패스너
94.685	FASTENER, TRANSMISSION CASE OIL BAFFLE 패스너
94.688	RETAINER, TRANSMISSION ACCUMULATOR BORE PLUG 리테이너
97.059	FASTENER, TRANSMISSION BAFFLE SAFETY VALVE 패스너

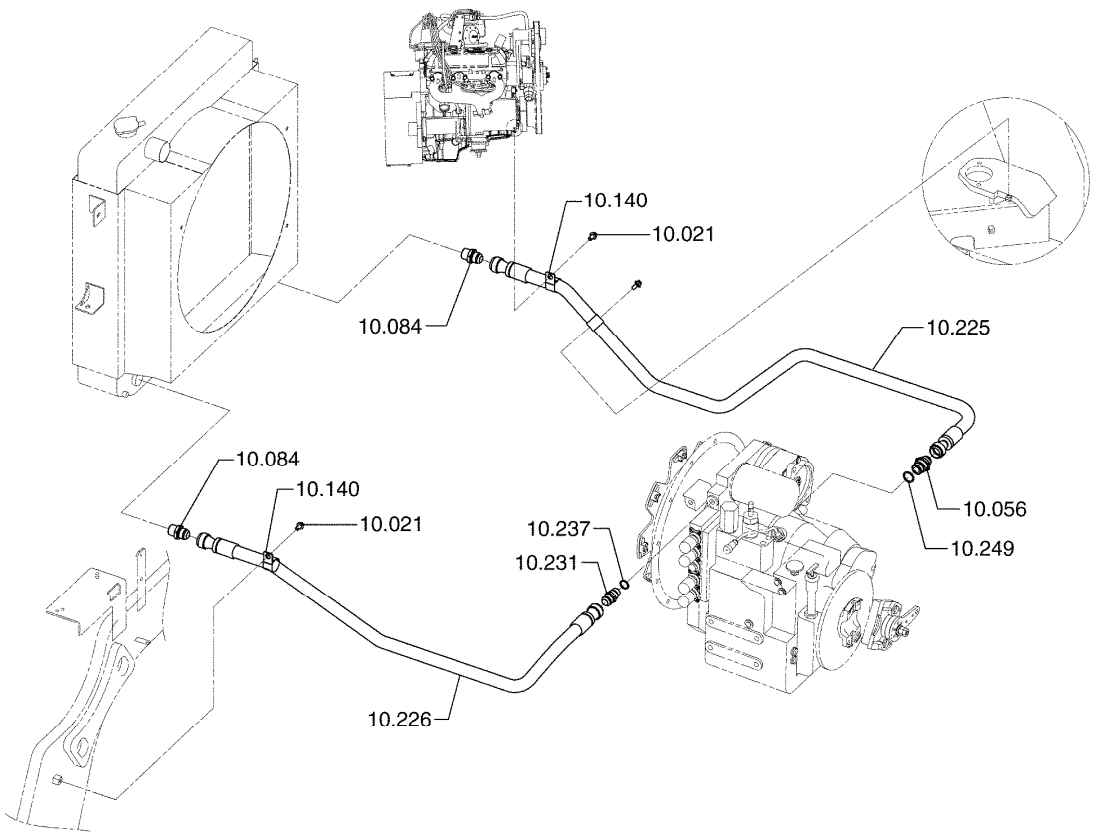


TRANS COOLING LINES **10-104**

10.021	FASTENER, COOLER OUTLET LINE CLAMP 패스너
10.056	FITTING, COOLER OUTLET 피팅
10.084	FITTING, COOLER INLET LINE 피팅
10.140	CLAMP, COOLER LINE 클램프
10.225	LINE, OIL COOLING 라인
10.226	LINE, OIL COOLING 라인
10.231	FITTING, OIL COOLING LINES 피팅
10.237	SEAL, OIL COOLER LINE FITTING 시일
10.249	SEAL, COOLER OUTLET LINE FITTING 시일

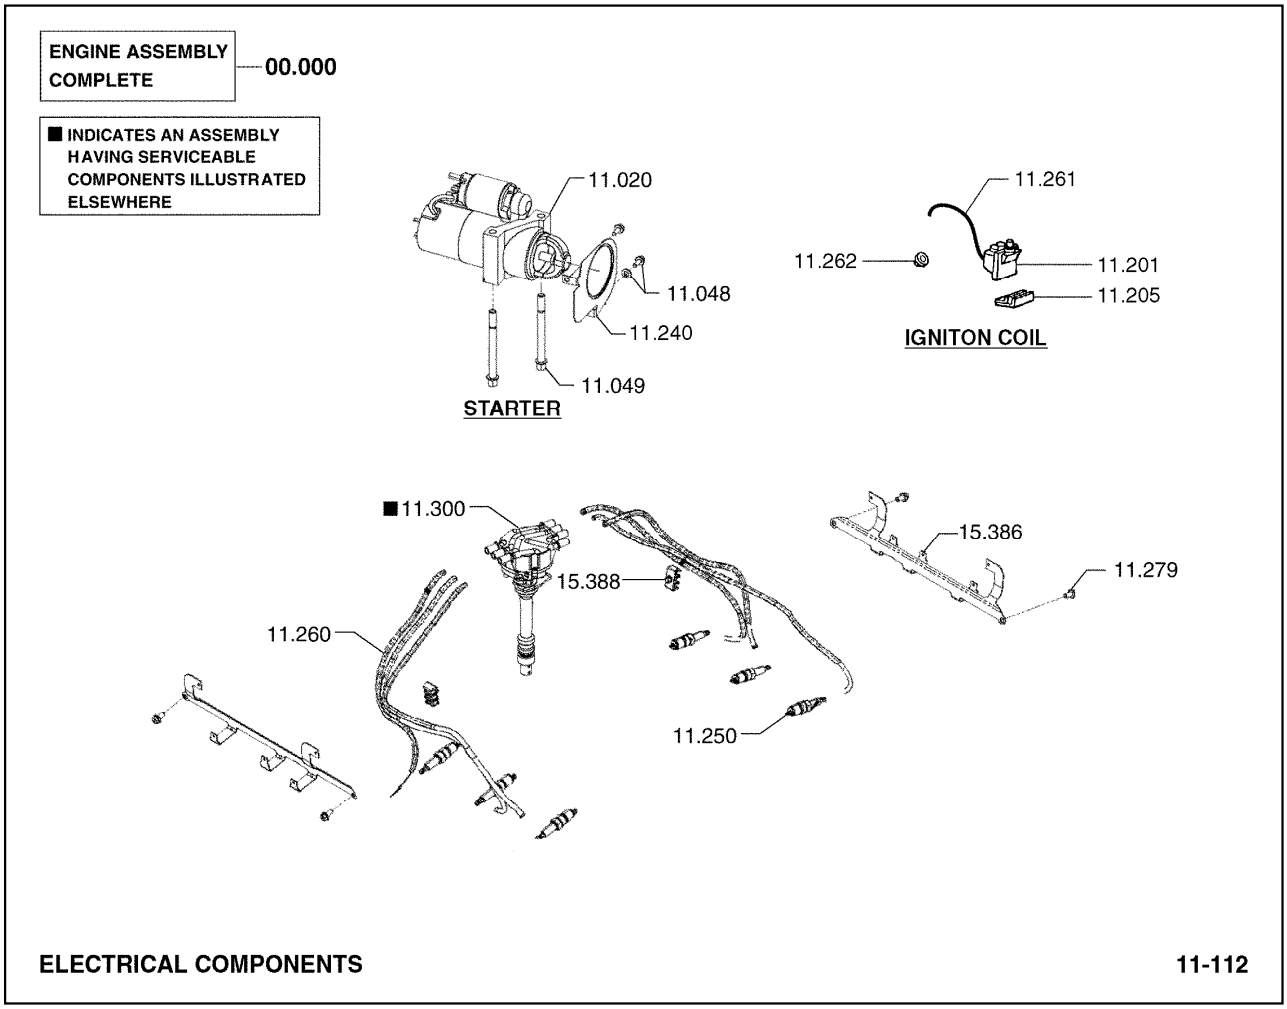

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
11.020	MOTOR ASSEMBLY, STARTING 모터
11.048	FASTENER, STARTING MOTOR 패스너
11.049	FASTENER, STARTING MOTOR 패스너
11.201	COIL, IGNITION 코일
11.205	BRACKET, COIL MOUNTING 브라켓
11.240	SHIELD, STARTER OIL DRIP 쉴드
11.250	SPARK PLUG 스파크
11.260	WIRE, SPARK PLUG 와이어

11.261	WIRE, IGNITION COIL 와이어
11.262	FASTENER, IGNITION COIL 패스너
11.279	FASTENER, SPARK PLUG WIRE BRACKET 패스너
11.300	DISTRIBUTOR ASSEMBLY 디스트리뷰터
15.386	BRACKET, SPARK PLUG WIRES 브라켓
15.388	CLIP, SPARK PLUG WIRES 클립

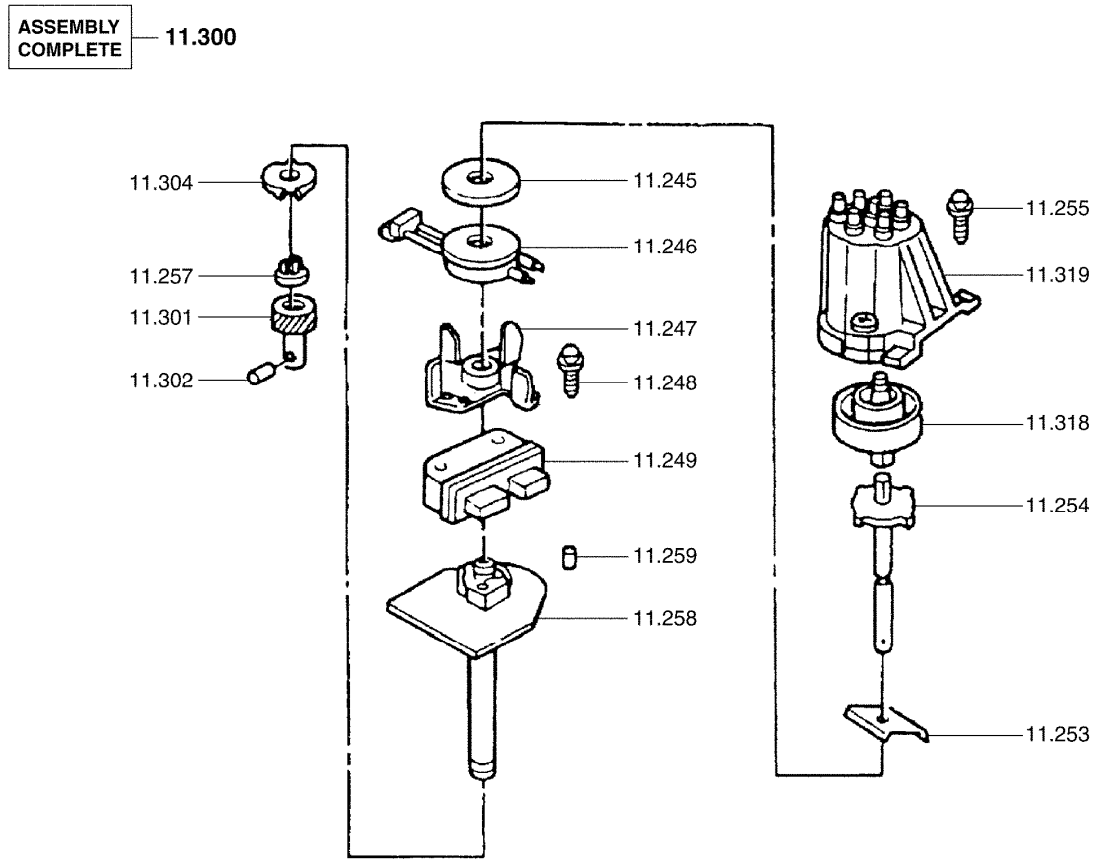

DISTRIBUTOR ASSEMBLY **11-113**

11.245 SHIELD, IGNITION PICK UP COIL
쉴드

11.246 COIL, IGNITION PICK UP
코일

11.247 POLE PIECE AND PLATE, DISTRIBUTOR
폴피스와플레이트

11.248 FASTENER, DISTRIBUTOR IGNITION CONTROL MODULE
패스너

11.249 MODULE, DISTRIBUTOR IGNITION CONTROL
모듈


11.253 RETAINER, IGNITION PICK UP COIL
리테이너

11.254 SHAFT, DISTRIBUTOR
샤프트

11.255 FASTENER, DISTRIBUTOR CAP
패스너

11.257 WASHER, DISTRIBUTOR SHAFT
와셔


11.258	HOUSING, DISTRIBUTOR 하우징
11.259	PIN, DISTRIBUTOR IGNITION PICK UP POLE PIECE 핀
11.300	DISTRIBUTOR ASSEMBLY 디스트리뷰터
11.301	GEAR, DISTRIBUTOR 기어
11.302	PIN, DISTRIBUTOR GEAR 핀
11.304	WASHER, DISTRIBUTOR GEAR 와셔
11.318	ROTOR, DISTRIBUTOR 로터
11.319	CAP, DISTRIBUTOR 캡

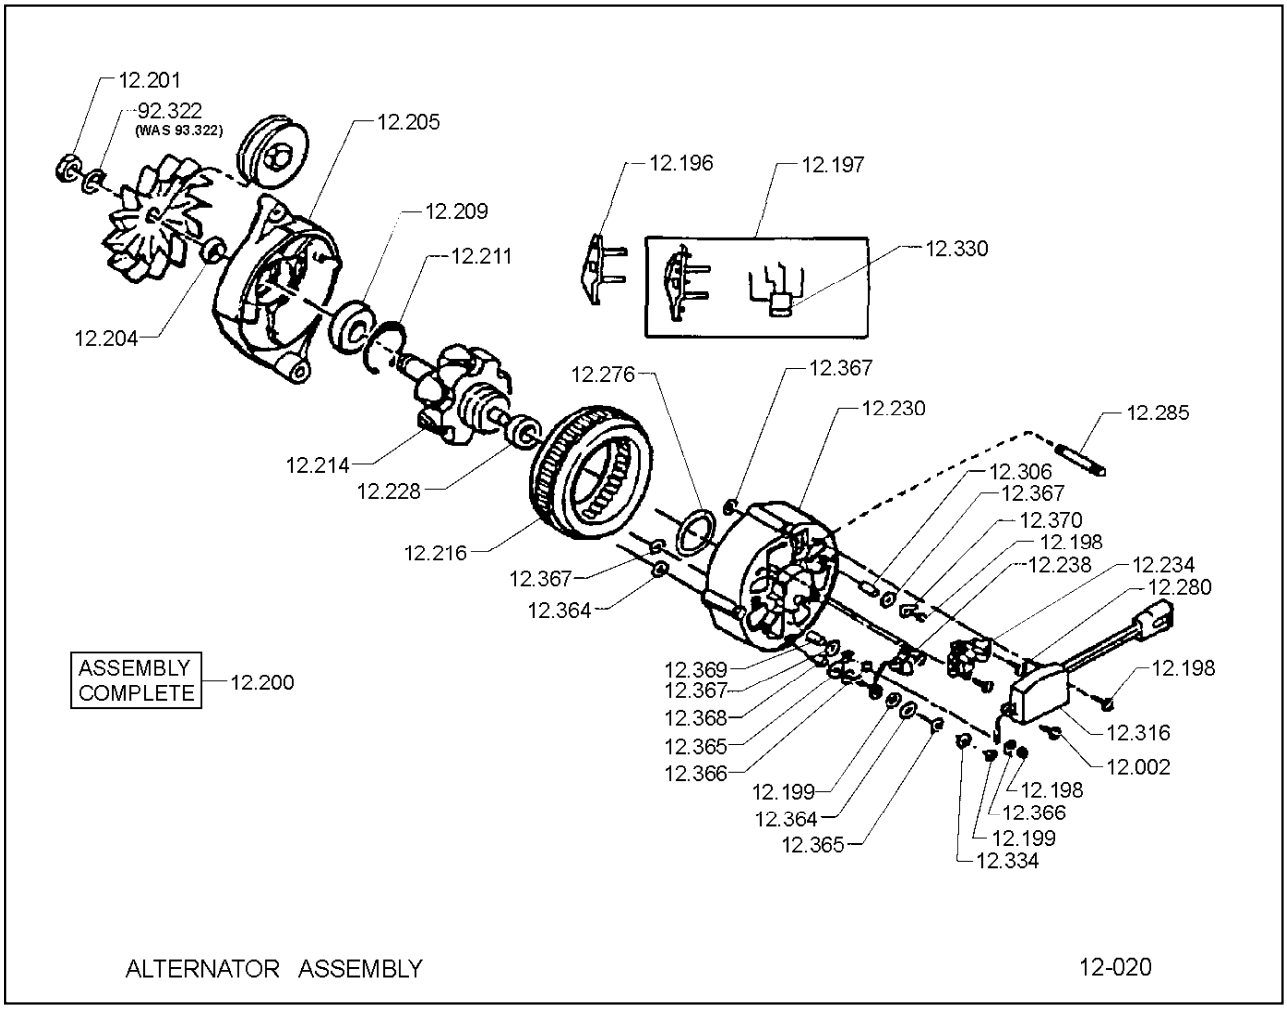

12.002	FASTENER, VOLTAGE REGULATOR 패스너	12.234	BRUSH HOLDER, ALTERNATOR 브러쉬홀더
12.196	DIODE REC NEGATIVE 다이오드	12.238	CAPACITOR, ALTERNATOR 캐페시터
12.197	DIODE REC POSITIVE 다이오드	12.276	RETAINER, SLIP RING FRAME END BEARING 리테이너
12.198	FASTENER, REGULATOR 패스너	12.280	FASTENER, ALTERNATOR BRUSH KIT 패스너
12.199	FASTENER, CAPACITOR 패스너	12.285	FASTENER, THROUGH 패스너
12.200	ALTERNATOR ASSEMBLY 알터네이터	12.306	INSULATOR, ALTERNATOR FIELD TERMINAL 절연체
12.201	FASTENER, ALTERNATOR PULLEY TO SHAFT 패스너	12.316	REGULATOR, ALTERNATOR VOLTAGE OUTPUT 레귤레이터
12.204	COLLAR, ALTERNATOR DRIVE END 칼라	12.330	DIODE, ALTERNATOR FIELD CURRENT 다이오드
12.205	FRAME, ALTERNATOR DRIVE END 프레임	12.334	LOCKWASHER, ALTERNATOR BATTERY TERMINAL 로크와셔
12.209	BEARING, ALTERNATOR DRIVE END 베어링	12.364	INSULATOR, CAPACITOR 절연체
12.211	RETAINER, ALTERNATOR DRIVE END BEARING 리테이너	12.365	WASHER, CAPACITOR 와셔
12.214	ROTOR ASSEMBLY, ALTERNATOR 로터	12.366	WASHER, REGULATOR 와셔
12.216	STATOR ASSEMBLY, ALTERNATOR 스테이터	12.367	INSULATOR, REGULATOR 절연체
12.228	BEARING, ALTERNATOR SLIP RING FRAME END 베어링	12.368	INSULATOR, TERMINAL 절연체
12.230	FRAME, ALTERNATOR SLIP RING END 프레임	12.369	INSULATOR, REGULATOR TERMINAL 절연체

12.370 TERMINAL, REGULATOR TERMINAL
터미널

92.322 LOCKWASHER, ALTERNATOR PULLEY FASTENER
로크와셔

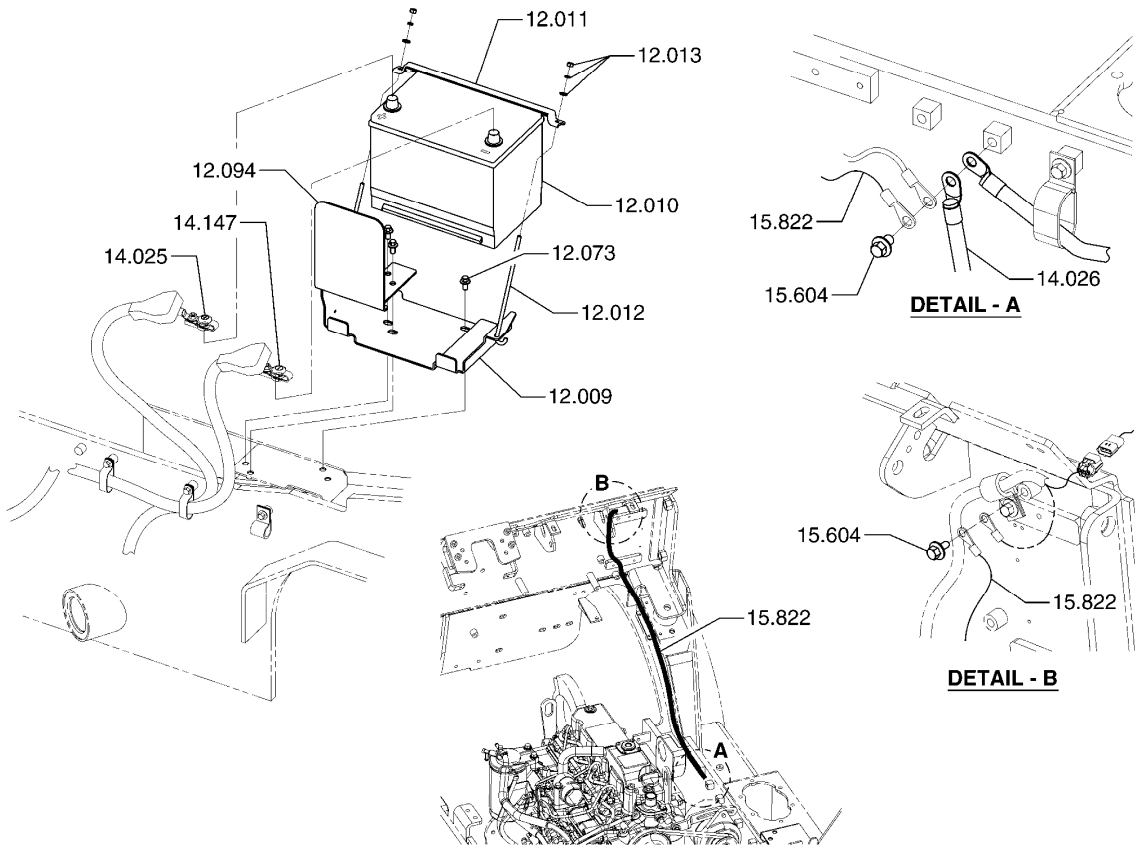

BATTERY MOUNTING **12-041**

12.009 SUPPORT, BATTERY
서포트

12.010 BATTERY
배터리

12.011 CLAMP, BATTERY HOLD DOWN
클램프

12.012 STUD, BATTERY HOLD DOWN
스터드

12.013 FASTENER, BATTERY HOLD DOWN (AT CLAMP)
패스너

12.073 FASTENER, BATTERY SUPPORT ATTACHING
패스너

12.094 BRACKET, BATTERY SUPPORT
브라켓


14.025 CABLE, BATTERY TO STARTER
케이블

14.026 CABLE, BATTERY GROUND
케이블

14.147 CABLE, BATTERY NEGATIVE
케이블

15.604 FASTENER, BATTERY NEGATIVE CABLE
패스너

15.822 WIRE, MACHINE GROUND EXTENSION
욱J潔紂電謬

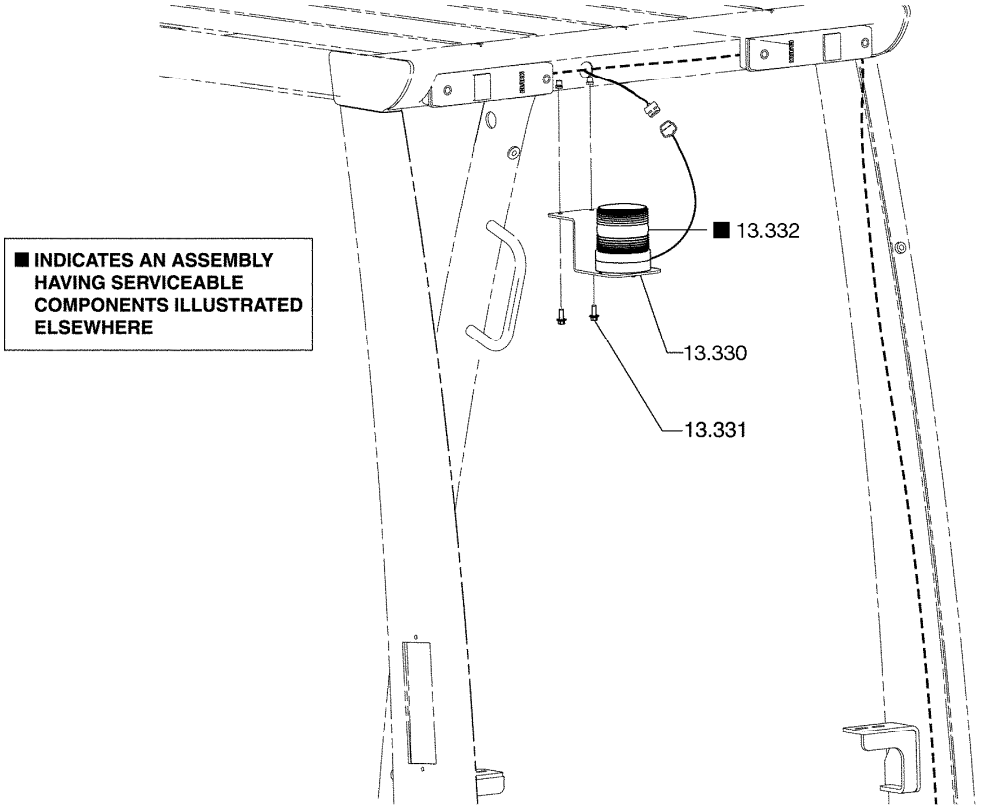


STROBE LIGHT MOUNTING **13-162**

13.330 BRACKET, WARNING LIGHT
브라켓

13.331 FASTENER, WARNING LIGHT BRACKET
패스너

13.332 ASSEMBLY, WARNING LIGHT
경고등

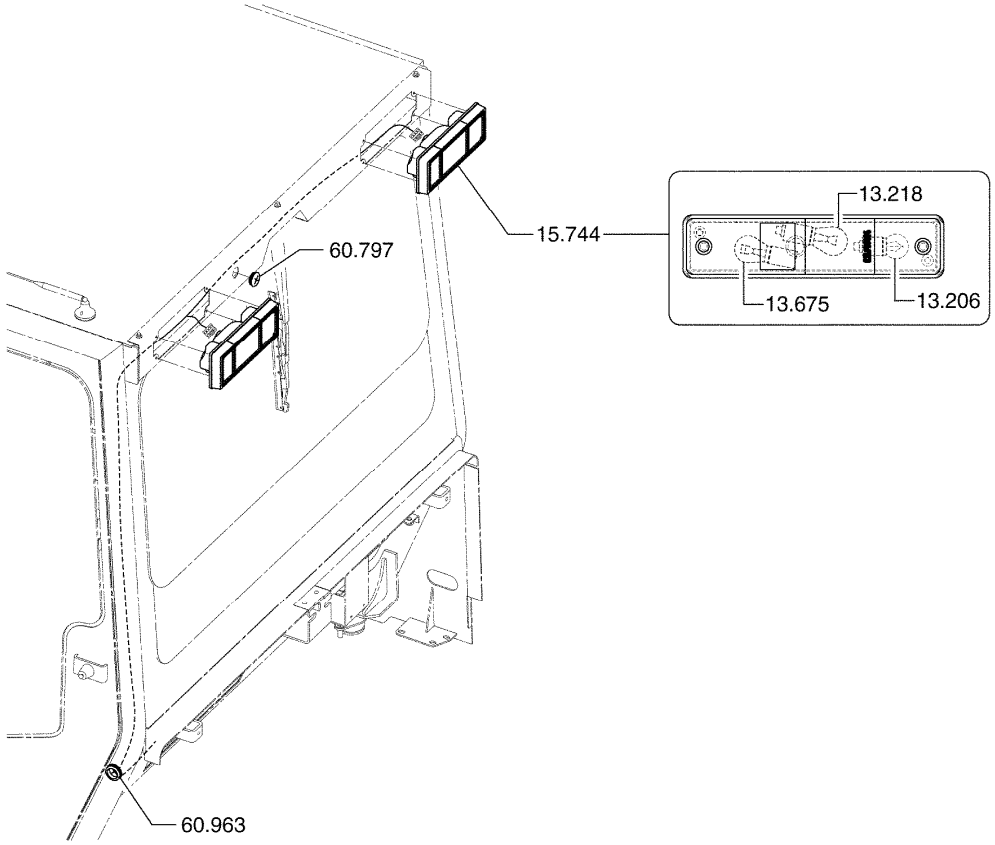

COMBINATION LAMP INSTALLATION **13-163**

13.206 BULB, BACK-UP LAMP
전구


13.218 BULB, STOP & TAIL LAMP
전구

13.675 BULB, TURN LIGHT
전구

15.744 LAMP ASSEMBLY, COMBINATION STOP & TAIL
램프

60.797 GROMMET, REAR ACCESSORY WIRE
그룽멧

60.963 GROMMET, REAR ACCESSORY WIRING
*

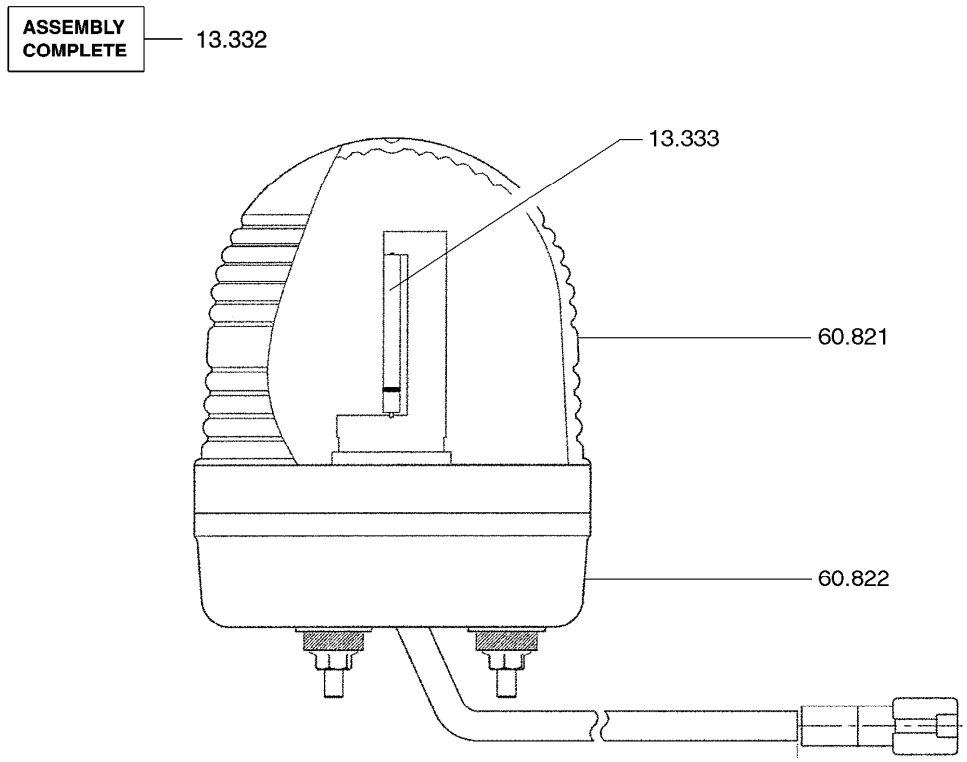

STROBE LIGHT **13-182**


13.332 ASSEMBLY, WARNING LIGHT
경고등

13.333 BULB, WARNING LIGHT
전구

60.821 GLOBE, STROBE LIGHT
글로브


60.822 BASE, STROBE LIGHT
베이스

■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

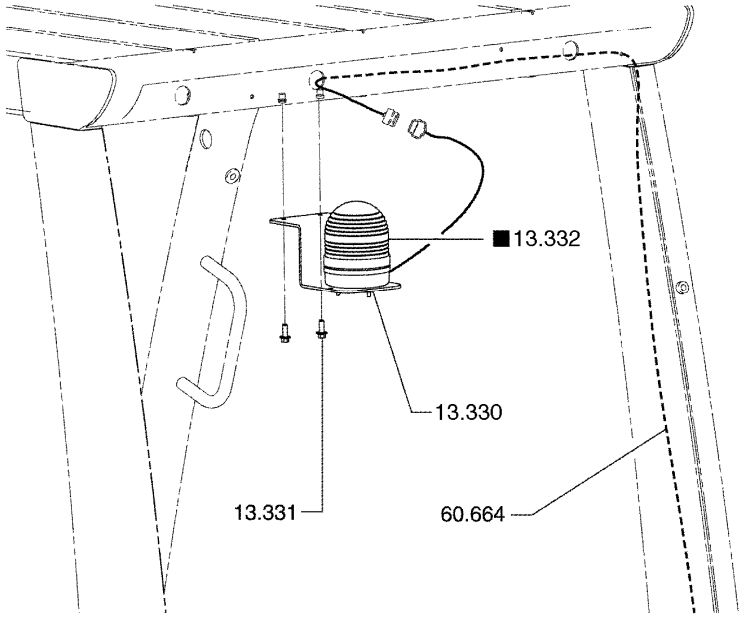

STROBE LIGHT MOUNTING **13-183**

13.330	BRACKET, WARNING LIGHT 브라켓
13.331	FASTENER, WARNING LIGHT BRACKET 패스너
13.332	ASSEMBLY, WARNING LIGHT 경고등
60.664	HARNESS, WARNING DEVICE 하네스

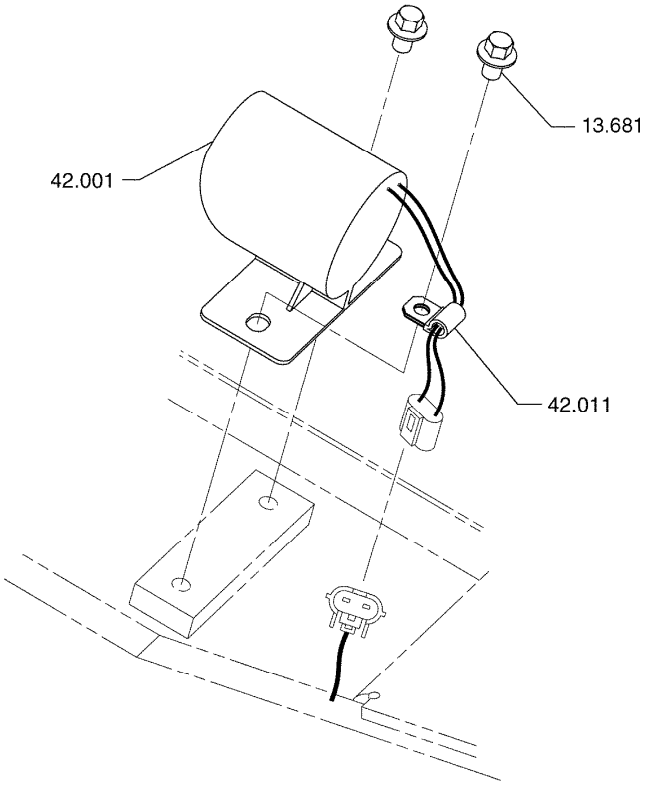


BACK-UP ALARM INSTALLATION **13-228**

13.681 FASTENER, WARNING DEVICE
패스너

42.001 WARNING DEVICE, AUDIBLE (AIR OPER)
경보장치


42.011 CLIP, AUDIBLE WARNING DEVICE CABLE
클립

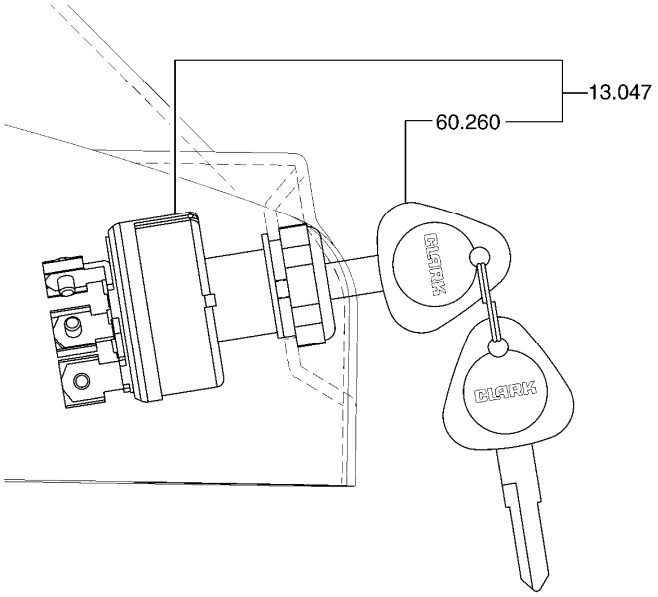

KEY SWITCH INSTALLATION **13-292**

13.047 SWITCH, CIRCUIT LOCKING
스위치

60.260 KEY, CIRCUIT LOCKING SWITCH
키

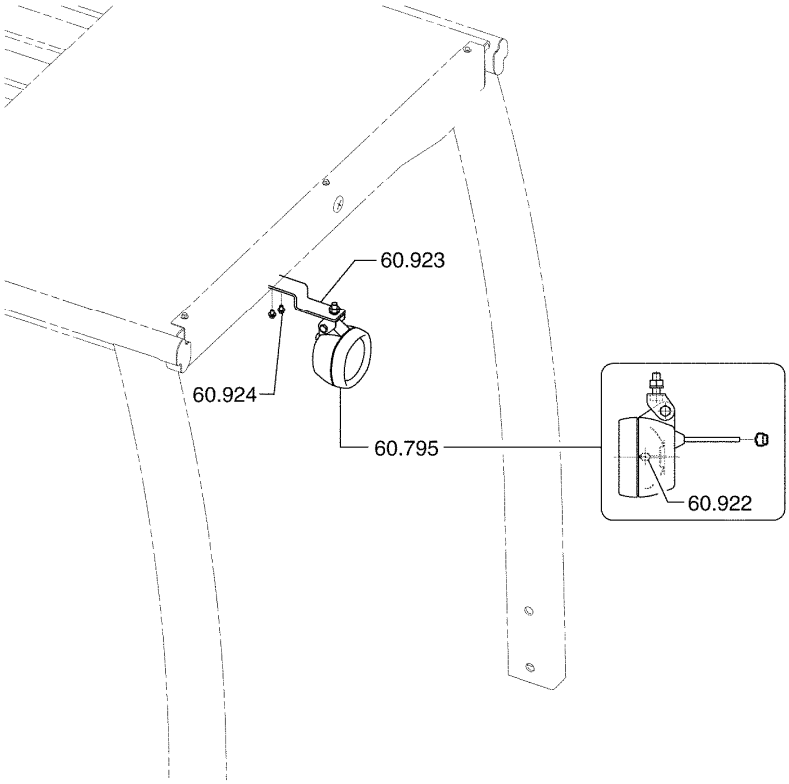


REAR WORK LIGHT INSTALLATION **13-298**

60.795 LIGHT, REAR WORK
라이트

60.922 BULB, REAR WORK LAMP
전구

60.923 BRACKET, REAR WORK LAMP MOUNTING
브라켓

60.924 FASTENER, REAR WORK LAMP MOUNTING
패스너

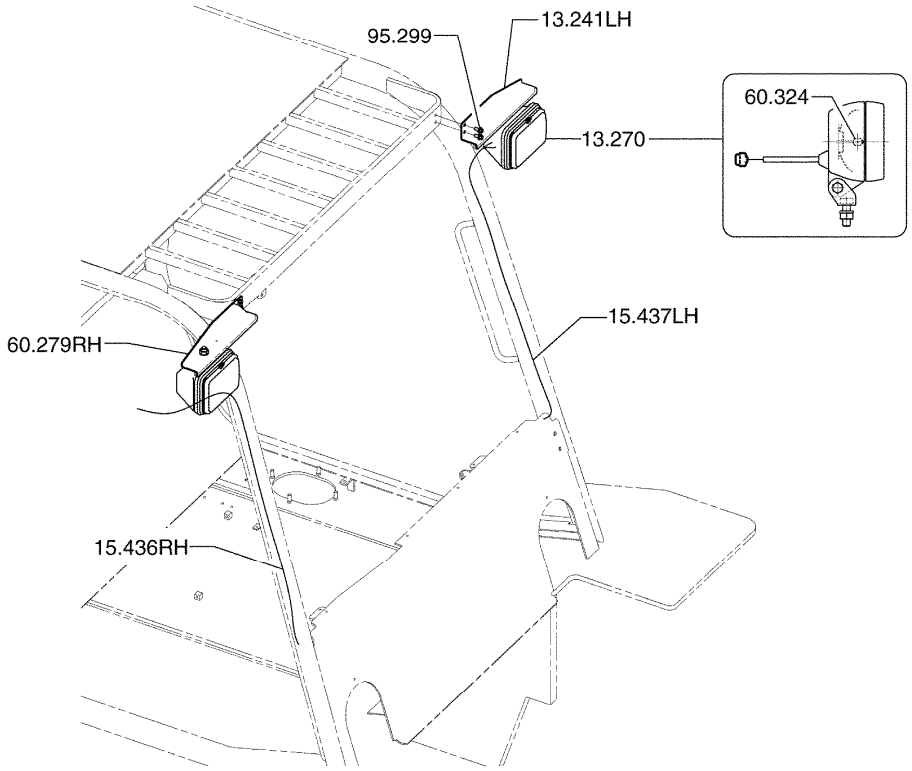

HEAD LAMP INSTALLATION **13-300**

13.241 BRACKET, HEAD LAMP
브라켓

13.270 HEADLAMP, ADJUSTABLE
헤드램프


15.436 HARNESS, RH HEADLAMP WIRING
하네스

15.437 HARNESS, HEADLAMP WIRING
하네스

60.279 BRACKET, HEADLAMP
브라켓

60.324 BULB, HEADLAMP
전구

95.299 FASTENER, HEADLAMP GUARD
패스너

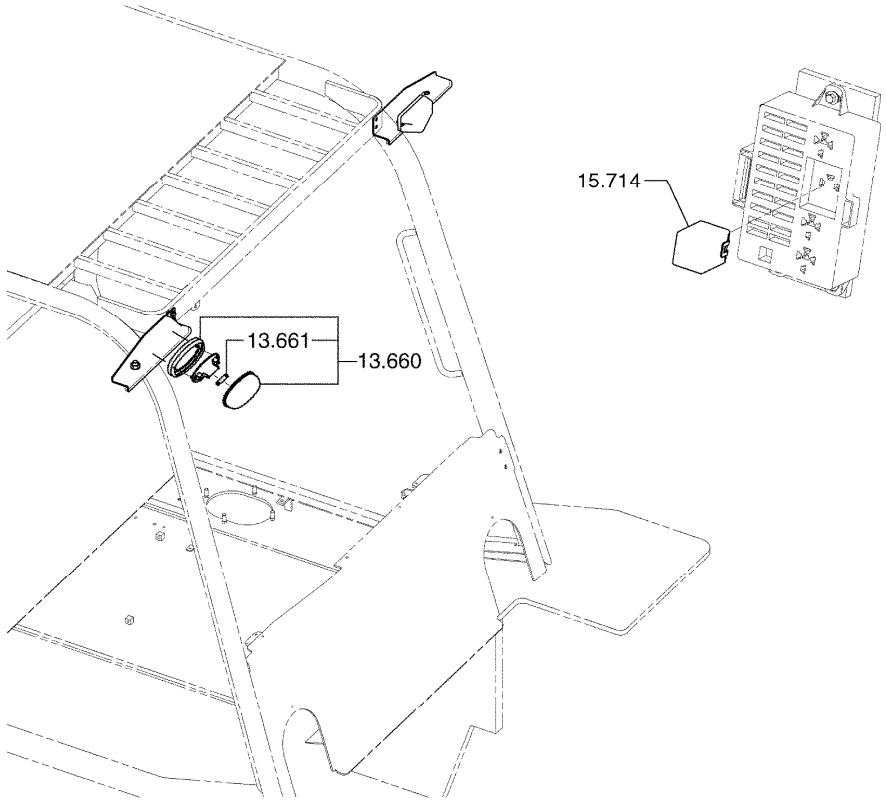


SIGNAL LIGHT INSTALLATION **13-302**

13.660 LIGHT, TURN SIGNAL
라이트

13.661 BULB, TURN SIGNAL LIGHT
전구

15.714 FLASHER, UNIT
플래셔

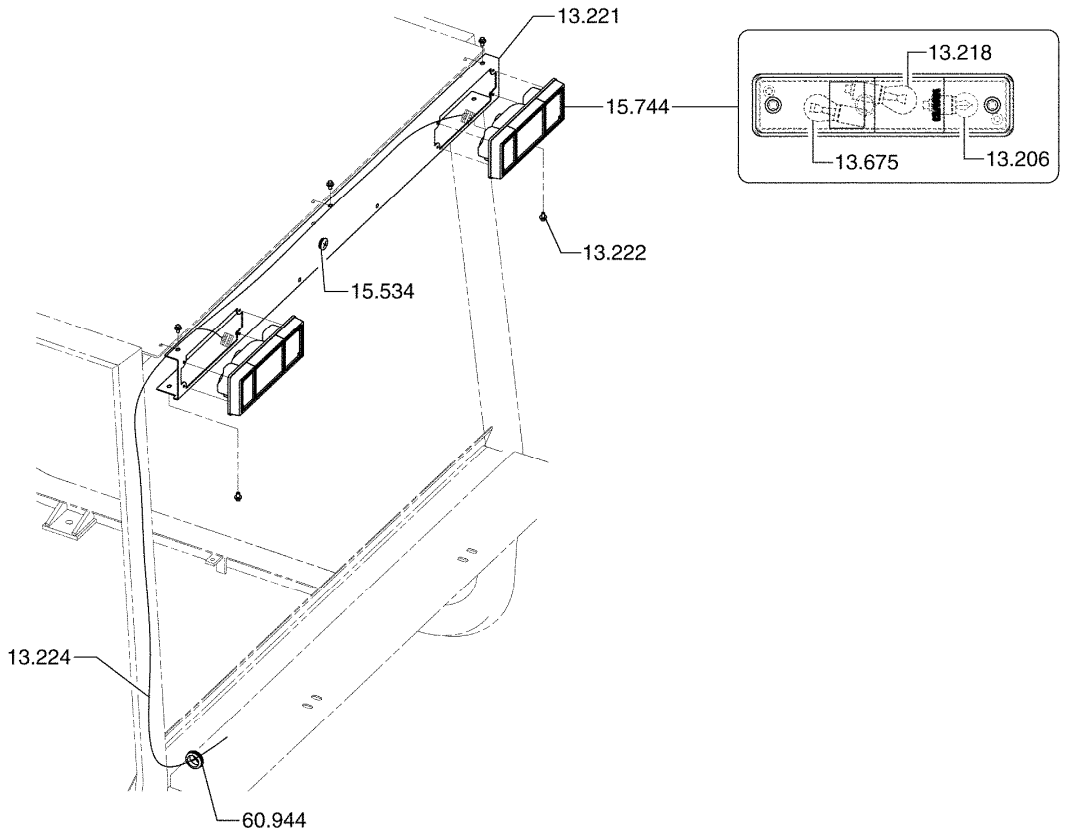

COMBINATION LAMP INSTALLATION **13-304**

13.206 BULB, BACK-UP LAMP
전구

13.218 BULB, STOP & TAIL LAMP
전구

13.221 BRACKET, COMB STOP & TAIL LAMP ASSY MTG
브라켓

13.222 FASTENER, STOP & TAIL LAMP BRACKET
패스너


13.224 WIRE ASSEMBLY, STOP & TAIL LAMP
와이어

13.675 BULB, TURN LIGHT
전구

15.534 GROMMET, STOP/TAIL LAMP WIRE
그로멧

15.744 LAMP ASSEMBLY, COMBINATION STOP & TAIL
램프


60.944 GROMMET, ACCESSORY HARNESS
그로멧

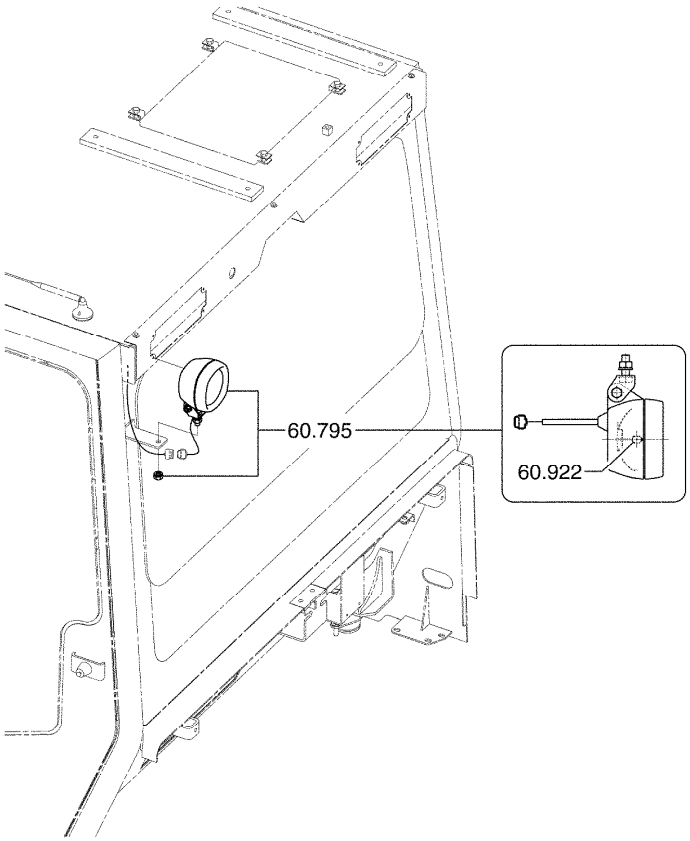

REAR WORK LIGHT INSTALLATION **13-305**


60.795 LIGHT, REAR WORK
라이트

60.922 BULB, REAR WORK LAMP
전구

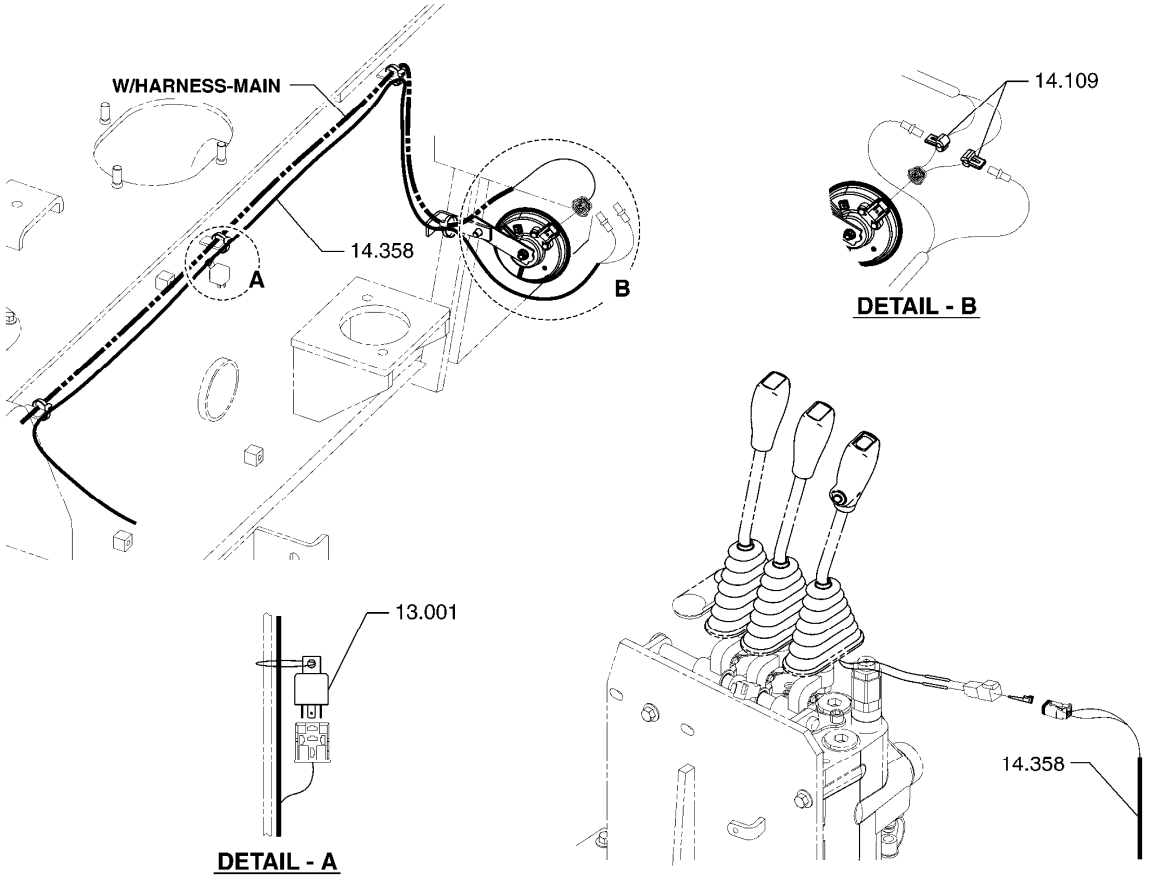

HORN SWITCH INSTALLATION 13-317

13.001	RELAY, HORN 릴레이
14.109	CONNECTOR, HORN WIRE 커넥터
14.358	WIRE ASSEMBLY, HORN 와이어

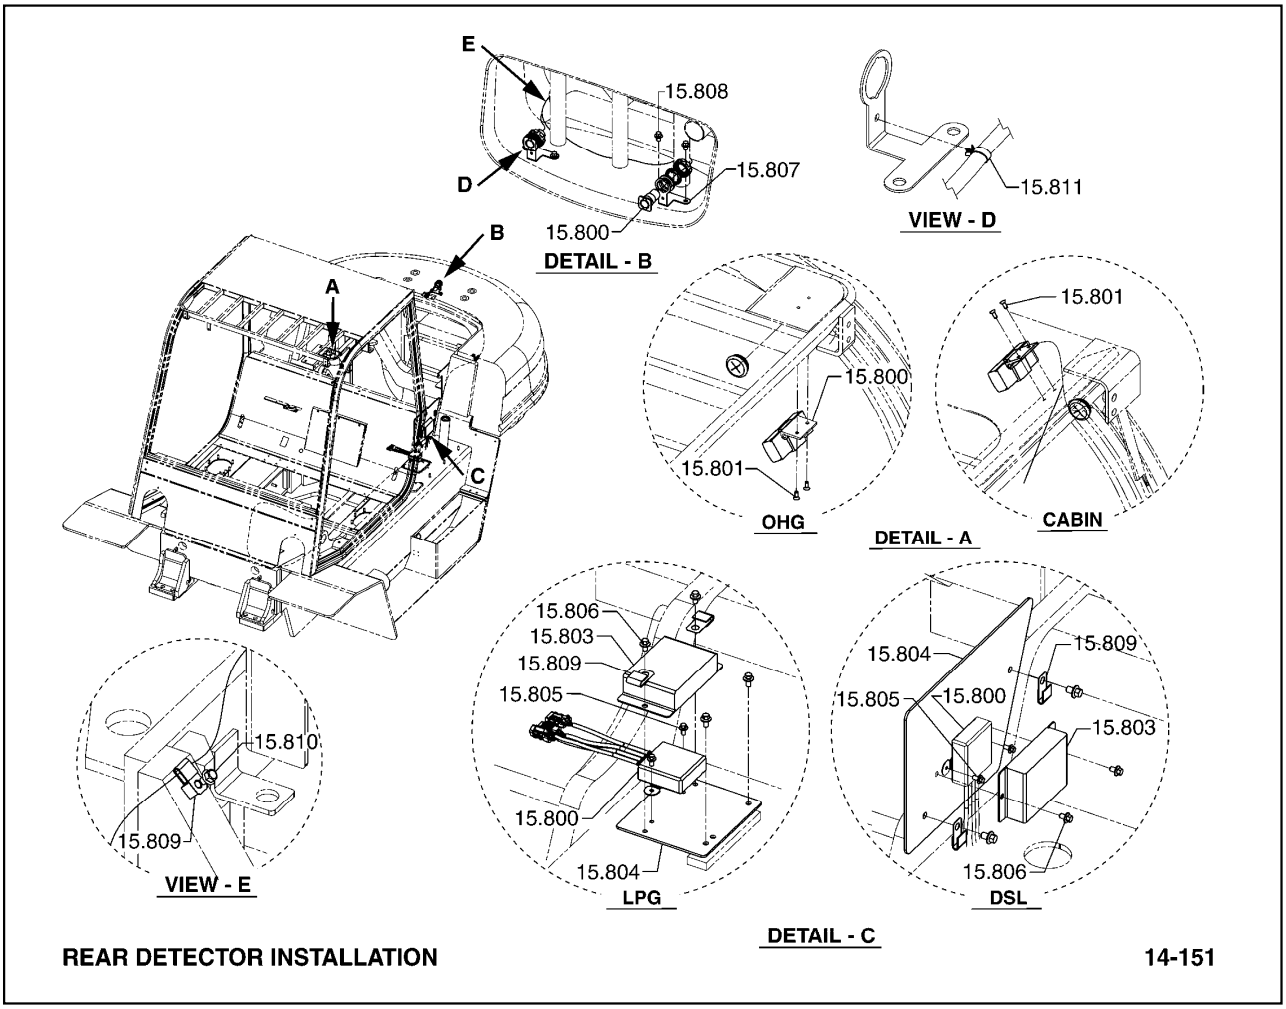

15.800 DETECTOR, REAR
디텍터

15.801 FASTENER, REAR DETECTOR DISPLAY MOUNTING
패스너

15.803 COVER, REAR DETECTOR CONTROLLER
커버

15.804 BRACKET, REAR DETECTOR
브라켓

15.805 FASTENER, REAR DETECTOR CONTROLLER MOUNTING
패스너

15.806 FASTENER, REAR DETECTOR CONTROLLER MOUNTING COVER
패스너


15.807 BRACKET, REAR DETECTOR SENSOR MOUNTING
브라켓

15.808 FASTENER, REAR DETECTOR SENSOR MOUNTING
패스너

15.809 CLIP, REAR DETECTOR HARNESS
클립


15.810 FASTENER, REAR DETECTOR HARNESS CLIP
패스너

15.811 TIE STRAP, REAR DETECTOR HARNESS
타이스트랩

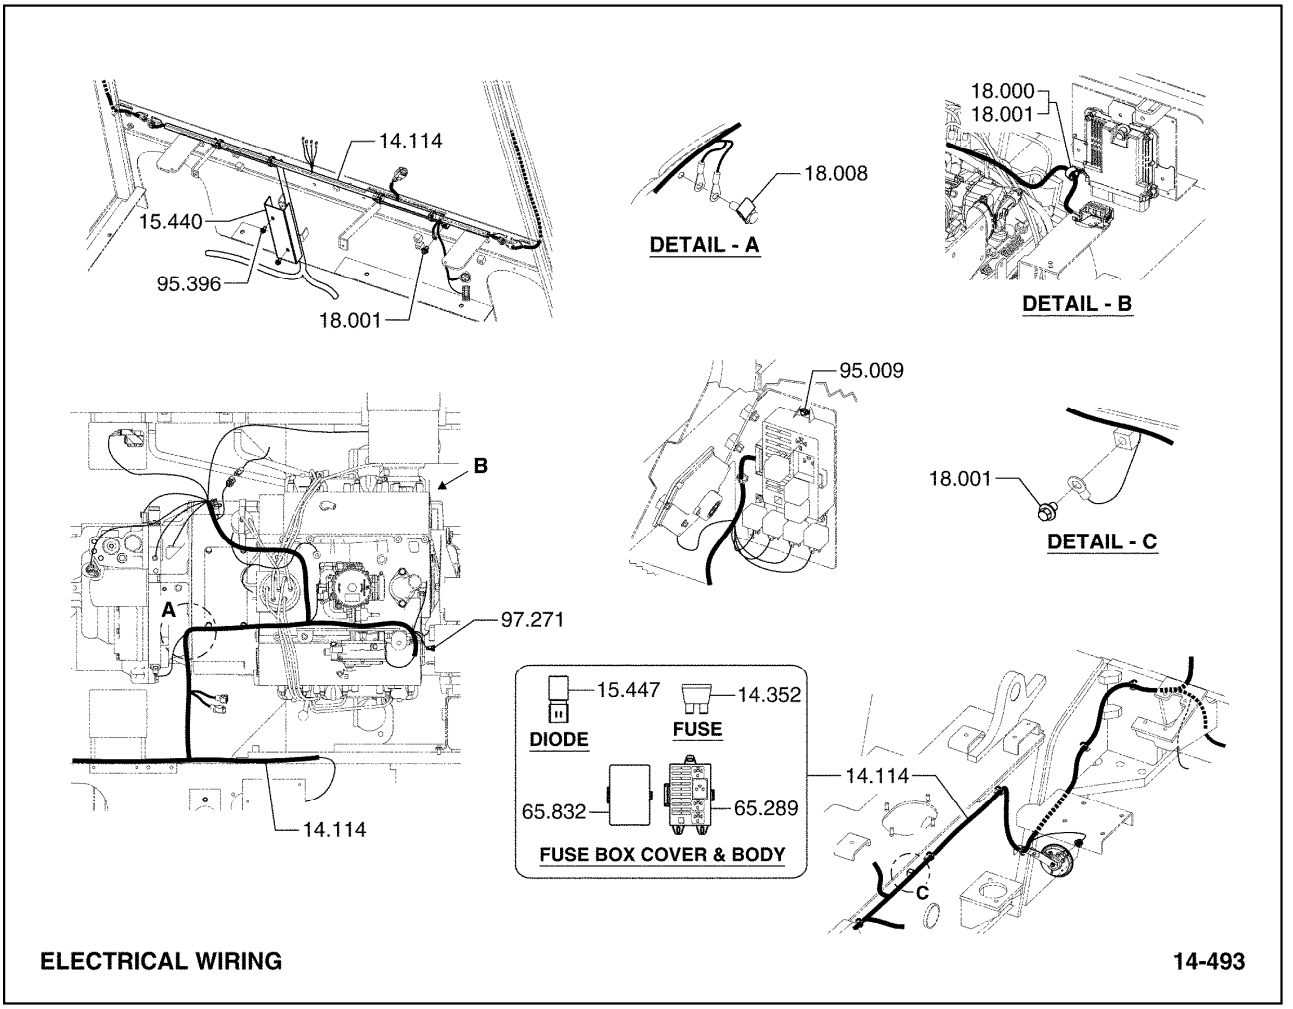

14.114	HARNESS, MACHINE WIRING 하네스
14.352	FUSE, CONTROL CIRCUIT 퓨즈
15.440	SHIELD, WIRING HARNESS PROTECTION 쉴드
15.447	DIODE, HARNESS 다이오드
18.000	CLIP, WIRING HARNESS 클립
18.001	FASTENER, WIRING HARNESS CLIP 패스너
18.008	CLIP, WIRING HARNESS 클립
65.289	BODY, FUSE BOX *
65.832	COVER, FUSE BOX 커버

95.009	FASTENER, FUSE BOX MOUNTING 패스너
95.396	FASTENER, WIRING HARNESS PROTECTION SHIELD 패스너
97.271	FASTENER, CABLE & WIRE TO ALTERNATOR *

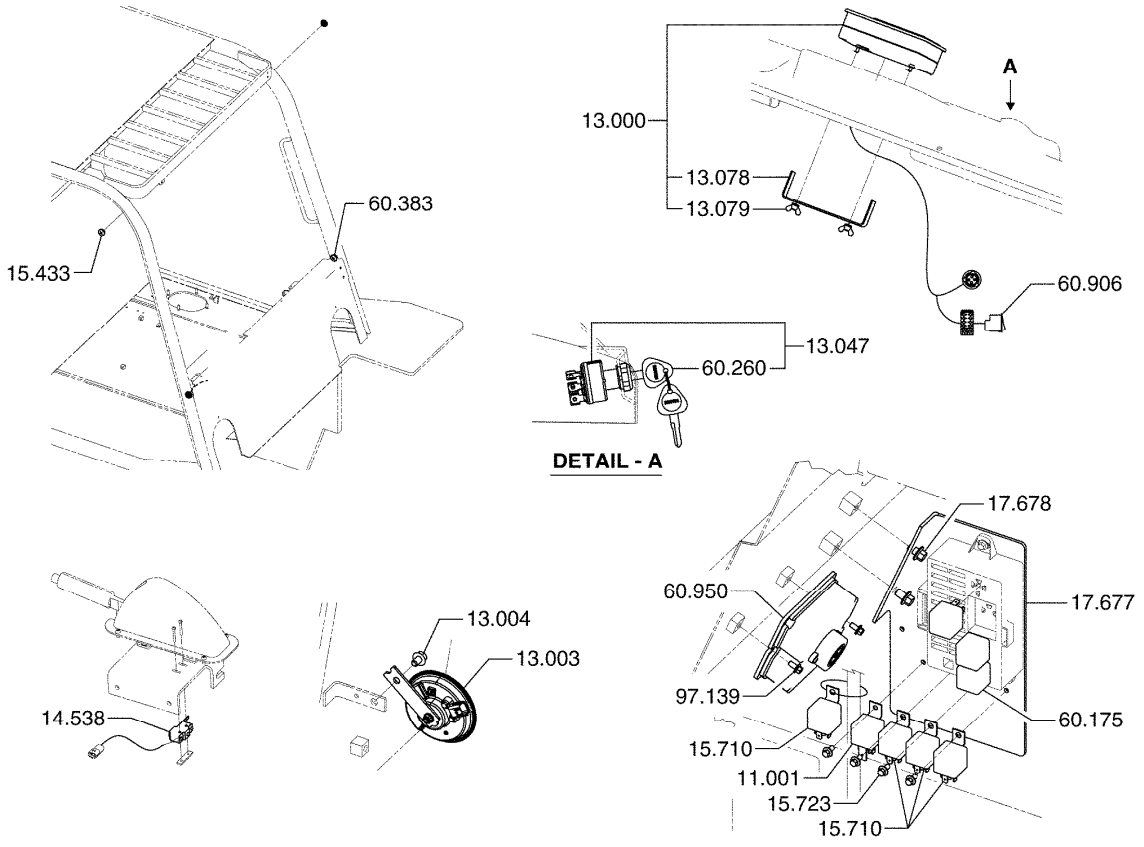

11.001 RELAY, STARTER
릴레이

13.000 PANEL, INSTRUMENT CLUSTER
판넬

13.003 HORN
혼

13.004 FASTENER, HORN MOUNTING BRACKET
패스너

13.047 SWITCH, CIRCUIT LOCKING
스위치


13.078 CLAMP, INSTRUMENT CLUSTER TO INST PANEL
클램프

13.079 FASTENER, INSTRUMENT CLUSTER TO INST PANEL
패스너

14.538 SWITCH, PARK BRAKE
스위치

15.433 GROMMET, CONTROL CIRCUIT WIRING HARNESS
그로멧


15.710	RELAY, ELECTRICAL 릴레이
15.723	FASTENER, ELECTRICAL RELAY 패스너
17.677	BRACKET, FUSE BOX MOUNTING 브라켓
17.678	FASTENER, FUSE BOX MOUNTING BRACKET 패스너
60.175	RELAY, CIRCUIT SWITCH 릴레이
60.260	KEY, CIRCUIT LOCKING SWITCH 키
60.383	GROMMET, CONTROL CIRCUIT WIRING HARNESS 그로멧
60.906	SWITCH, AUTO MANUAL 스위치
60.950	CONTROLLER, ELECTRIC SIGNAL 컨트롤러
97.139	FASTENER, ELECTRIC SIGNAL CONTROLLER 패스너

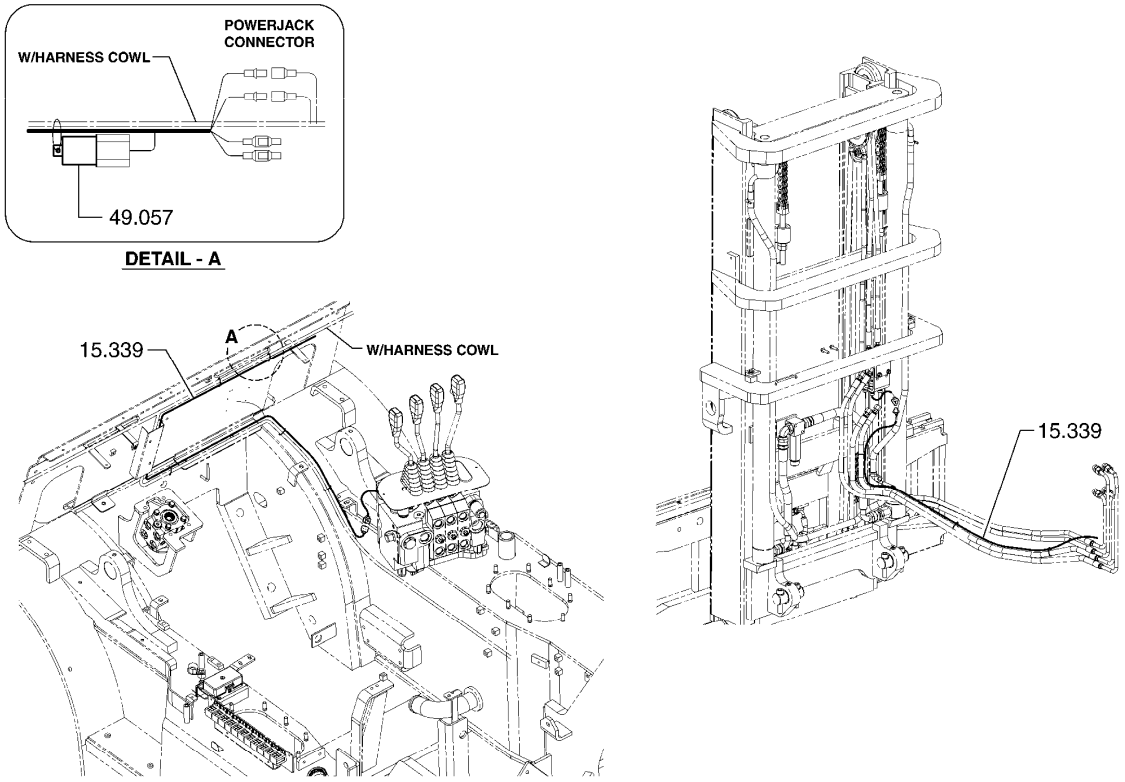

MAIN VALVE ELECTRICAL COMPONENTS (PUSH BUTTON) **15-016**

15.339 HARNESS, AUXILIARY VALVE SWITCH WIRING
하네스

49.057 RELAY, AUXILIARY VALVE CONROL
릴레이

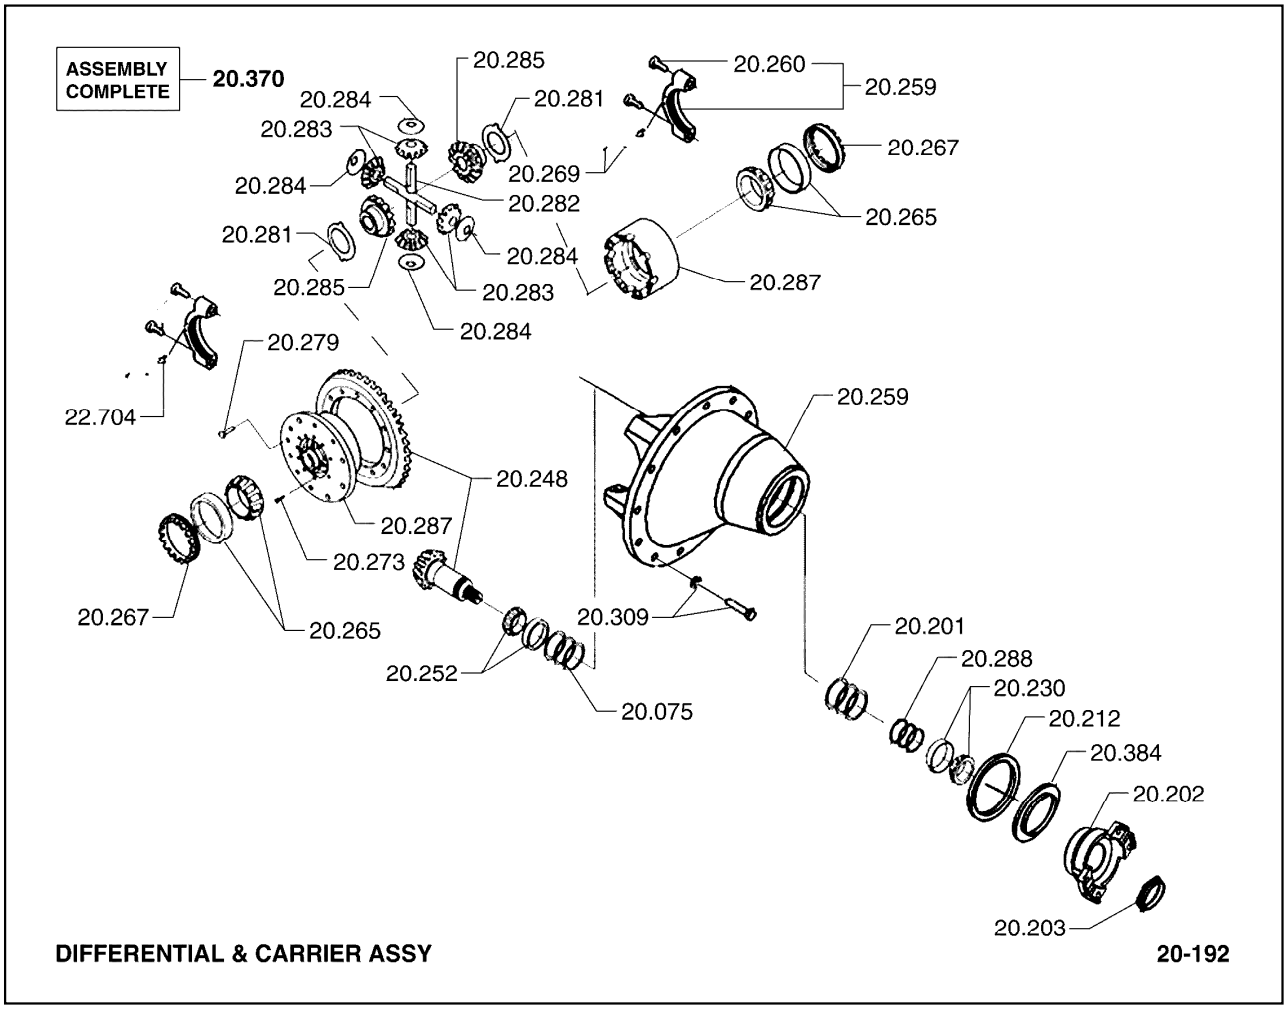

20.075 SHIM, DRIVE UNIT PINION BEARING
심

20.201 SHIM, DIFF BRG CARRIER TO AXLE HOUSING
심

20.202 FLANGE, DIFFERENTIAL PINION COMPANION
플랜지

20.203 NUT, DIFFERENTIAL PINION COMPANION FLANGE
너트

20.212 SEAL, DIFFERENTIAL PINION OIL
시일


20.230 BEARING ASSEMBLY, DIFF PINION OUTER
베어링

20.248 RING GEAR & PINION SET, DIFFERENTIAL
링


20.252 BEARING, DIFFERENTIAL PINION INNER
베어링

20.259 CARRIER & CAP ASSEMBLY, DIFFERENTIAL
캐리어와캡

20.260	FASTENER, DIFFERENTIAL CARRIER CAP 패스너
20.265	CUP, DIFFERENTIAL BEARING 컵
20.267	NUT, DIFFERENTIAL BEARING ADJUSTING 너트
20.269	FASTENER, DIFF BEARING ADJUSTING NUT LOCK 패스너
20.273	FASTENER, DIFFERENTIAL CASE 패스너
20.279	FASTENER, DIFFERENTIAL CASE TO RING GEAR 패스너
20.281	FASTENER, DIFF SIDE PINION PIN 패스너
20.282	SPIDER, DIFFERENTIAL PINION 스파이더
20.283	GEAR, DIFFERENTIAL SIDE PINION 기어
20.284	WASHER, DIFF SIDE PINION GEAR THRUST 와셔
20.285	GEAR, DIFFERENTIAL SIDE 기어
20.287	CASE & GEAR ASSEMBLY, DIFFERENTIAL 케이스와기어
20.288	SPACER, PINION BEARING CONE 스페이서
20.309	FASTENER, DIFFERENTIAL HOUSING 패스너
20.370	AXLE ASSEMBLY, DRIVE 드라J遣袁謬
20.384	PLUG, DRIVE AXLE HOUSING 플러그
22.704	PLATE, DRIVE AXLE END HOUSING 플레이트

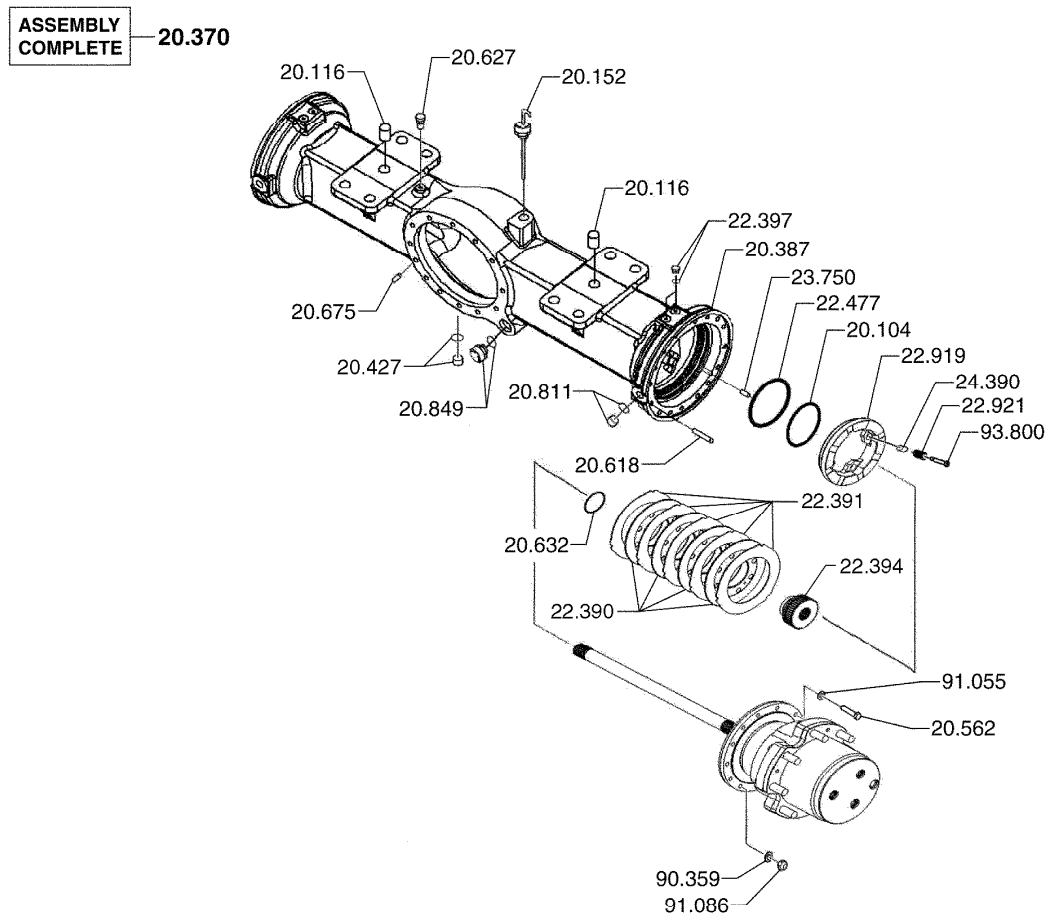

20.104	RING, RETAINER AXLE END 링	20.849	PLUG, DRIVE AXLE HOUSING 플러그
20.116	PIN, DRIVE AXLE HOUSING & DIFF ALIGNMENT 핀	22.390	DISC, BRAKE - INNER 디스크
20.152	GAUGE, LEVEL GAUGE 게이지	22.391	DISC, BRAKE - OUTER 디스크
20.207	SEAL, DIFFERENTIAL & AXLE HOUSING DRAIN PLUG 시일	22.397	PLUG, BRAKE DISC HOUSING 플러그
20.370	AXLE ASSEMBLY, DRIVE 드라J遣表謬	22.398	SEAL, BRAKE DISC HOUSING PLUG 시일
20.387	HOUSING, DIFFERENTIAL & AXLE 헬우징	22.477	RING, BRAKE DRUM MOUNTING SPACER 링
20.427	PLUG, DIFFERENTIAL & AXLE HOUSING DRAIN 플러그	22.919	PLATE, BRAKE DISC PISTON 플레이트
20.516	SEAL, DRIVE AXLE HUB DRAIN PLUG 시일	22.921	SPRING, BRAKE DISC PISTON 스프링
20.562	FASTENER, DRIVE AXLE END 패스너	23.749	BUSHING, BRAKE ACTUATING LEVER 부싱
20.618	FASTENER, DRIVE AXLE SPINDLE 패스너	23.750	PIN, BRAKE ACTUATING LEVER PIVOT 핀
20.627	VENT, DIFFERENTIAL & AXLE 벤트	90.359	LOCKWASHER, DRIVE AXLE END FASTENER 로크와셔
20.632	RETAINER, DRIVE AXLE INTERNAL GEAR HUB 리테이너	91.055	LOCKWASHER, DRIVE AXLE END FAST 로크와셔
20.655	SEAL, DRIVE UNIT HOUSING DRAIN PLUG 시일	91.086	NUT, DRIVE AXLE SPINDLE FASTENER 너트
20.675	DOWEL PIN, DRIVE AXLE END HOUSING 다웰핀	93.800	FASTENER, BRAKE DISC HOUSING 패스너
20.811	PLUG, DRIVE AXLE HOUSING 플러그		

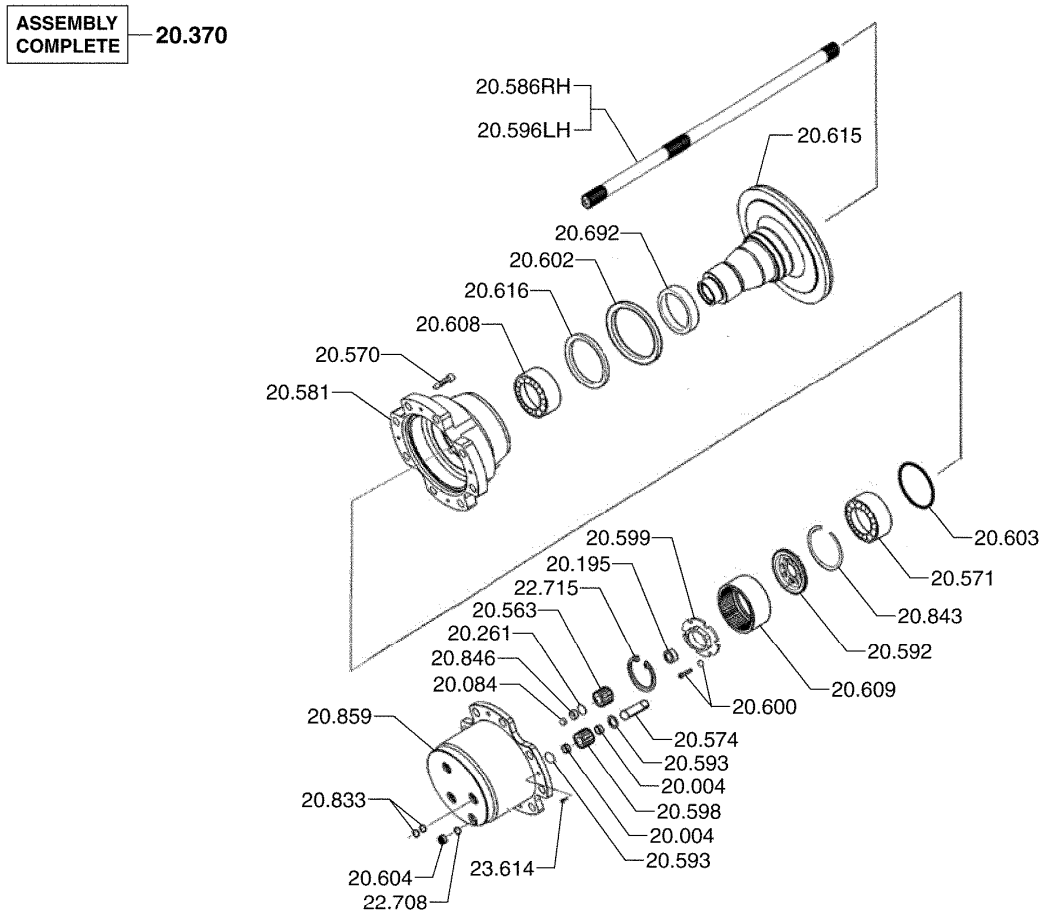


DRIVE AXLE HUB ASSEMBLY **20-194**

20.004	BEARING, DRIVE HOUSING SPINDLE 베어링	20.599	NUT, DRIVE AXLE HUB BEARING OUTER RETAINING 너트
20.084	STOP, DRIVE AXLE 스톱	20.600	LOCK, DRIVE AXLE HUB BEARING RETAINING NUT 로크
20.195	BUSHING, DRIVE END HOUSING 부싱	20.602	SEAL, DRIVE AXLE HUB INNER OIL 시일
20.261	RETAINER, DIFF PINION OUTER BEARING 리테이너	20.603	SEAL, DRIVE AXLE HUB OUTER OIL 시일
20.370	AXLE ASSEMBLY, DRIVE 드라J遣衷謬	20.604	PLUG, DRIVE AXLE HUB DRAIN 플러그
20.563	GEAR, DRIVE AXLE SUN 기어	20.608	CONE, DRIVE AXLE HUB INNER BEARING 콘
20.570	FASTENER, DRIVE WHEEL MOUNTING 패스너	20.609	HUB, DRIVE AXLE INTERNAL GEAR 허브
20.571	CONE, DRIVE AXLE HUB OUTER BEARING 콘	20.615	SPINDLE, DRIVE AXLE END 스핀들
20.574	SHAFT, DRIVE AXLE PLANET PINION 샤프트	20.616	SEAL, DRIVE AXLE HUB 시일
20.581	HUB ASSEMBLY, DRIVE AXLE 허브	20.692	SHIELD, DRIVE AXLE HUB INNER OIL SEAL 쉴드
20.586	SHAFT, DRIVE AXLE 샤프트	20.833	SEAL, DRIVE AXLE RING GEAR SHAFT BEARING HOUSING 시일
20.592	PLANET, DRIVE AXLE 플래닛	20.843	LOCATOR, DRIVE AXLE OUTPUT GEAR BEARING 로케이터
20.593	WASHER, PLANET PINION GEAR THRUST 와셔	20.846	BEARING, DRIVE AXLE PLANET PINION GEAR 베어링
20.596	SHAFT, DRIVE AXLE (LH) 샤프트	20.859	HOUSING, DRIVE AXLE 하우징
20.598	GEAR, DRIVE AXLE PLANET PINION 기어	22.708	SEAL, DRIVE AXLE HOUSING 시일


22.715 RETAINER, DRIVE AXLE ROTOR HOUSING
리테이너

23.614 FASTENER, DRIVE WHEEL BRK DRUM TO HUB (RH)
패스너

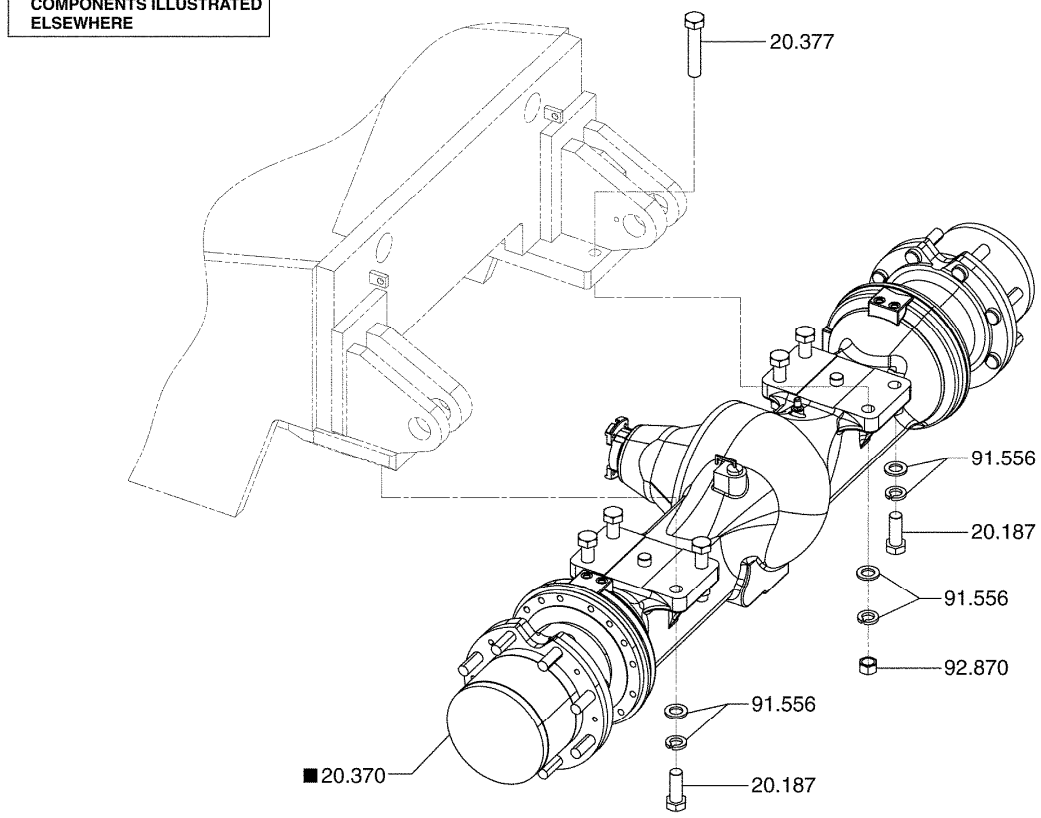

DRIVE AXLE MOUNTING **20-195**


20.187	FASTENER, DRIVE AXLE TO FRAME 패스너
20.370	AXLE ASSEMBLY, DRIVE 드라J遣袁謬
20.377	FASTENER, DRIVE AXLE TO FRAME 패스너
91.556	LOCKWASHER, DRIVE AXLE END 로크와셔
92.870	NUT, DRIVE AXLE MOUNTING FASTENER 너트

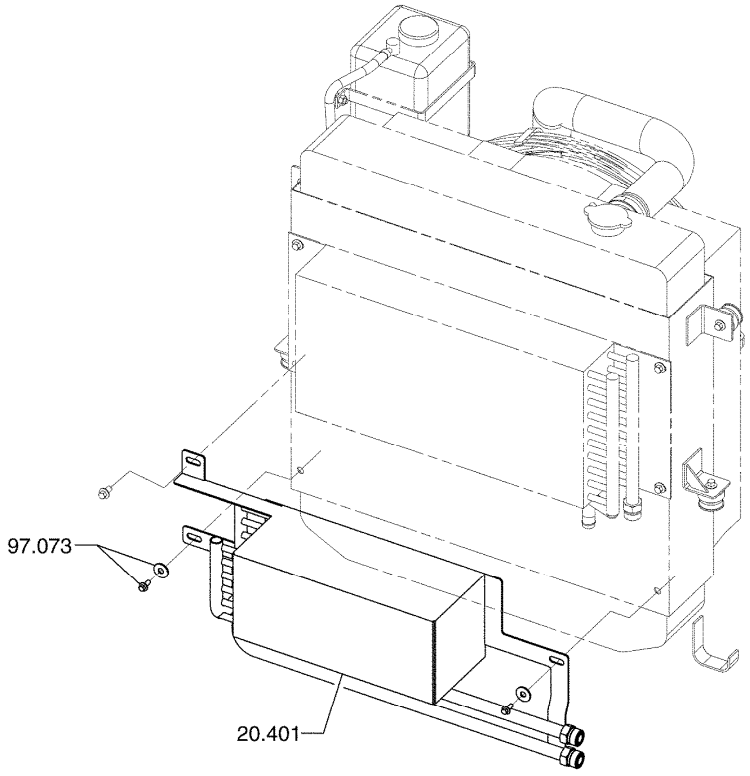

DRIVE AXLE OIL COOLER MOUNTING **20-198**

20.401 COOLER, DRIVE AXLE OIL
쿨러

97.073 FASTENER, DRIVE AXLE COOLER MOUNTING
패스너

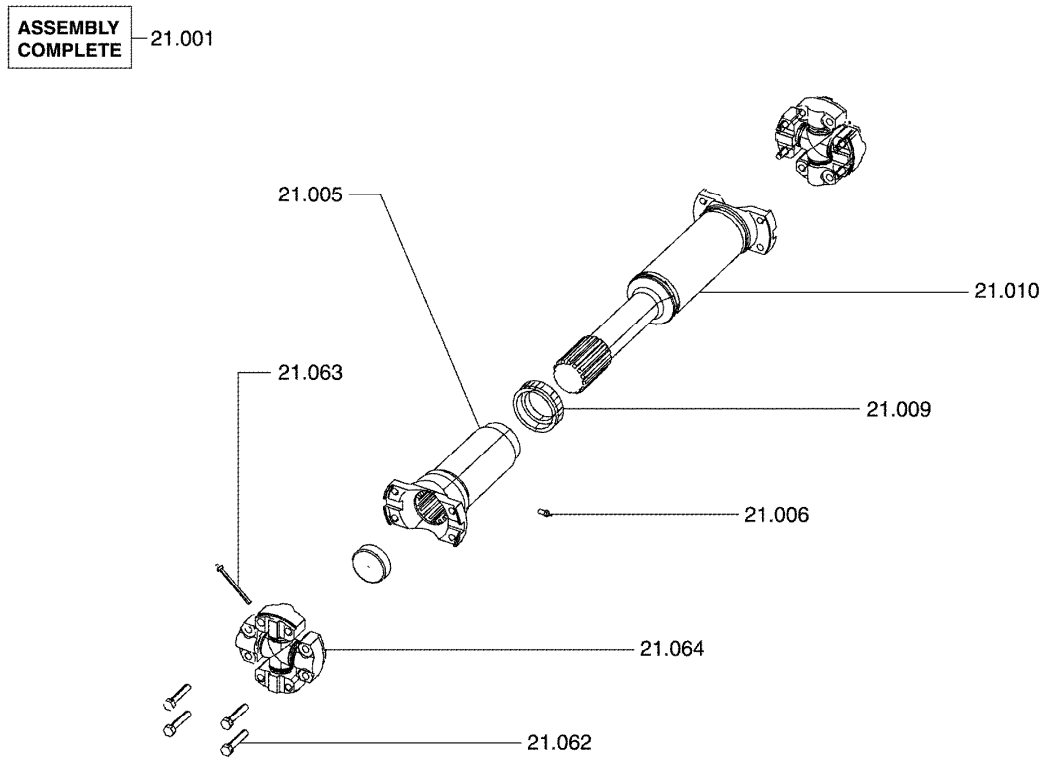

21.001 SHAFT ASSEMBLY, TRANSMISSION TO AXLE PROPELLER
샤프트

21.005 YOKE CAP & WASHER ASSY, PROP SHAFT CLIP
요크캡와와셔

21.006 FITTING-LUB, PROPELLER SHAFT SLIP YOKE
피팅

21.009 CAP, PROPELLER SHAFT SLIP YOKE DUST
캡


21.010 YOKE & SPLINE ASSEMBLY, PROPELLER SHAFT
요크와스플라인

21.062 FASTENER, CROSS ASSEMBLY TO STUB SHAFT
패스너

21.063 FITTING-LUB, CROSS ASSEMBLY
피팅

21.064 REPAIR KIT, PROPELLER SHAFT CENTER CROSS
리페어킷

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

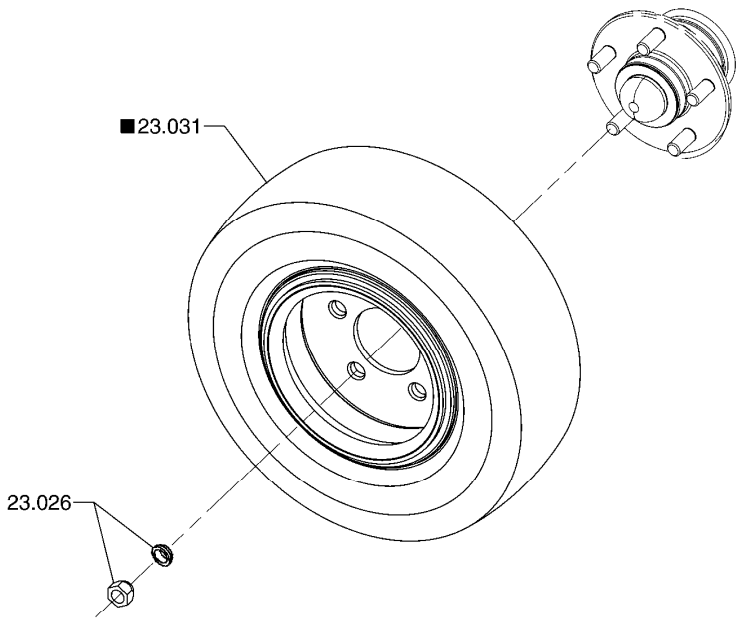


STEER WHEEL & TIRE MOUNTING **22-014**

23.026 FASTENER, STEER WHEEL
패스너

23.031 STEER WHEEL AND TIRE ASSEMBLY
휠

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

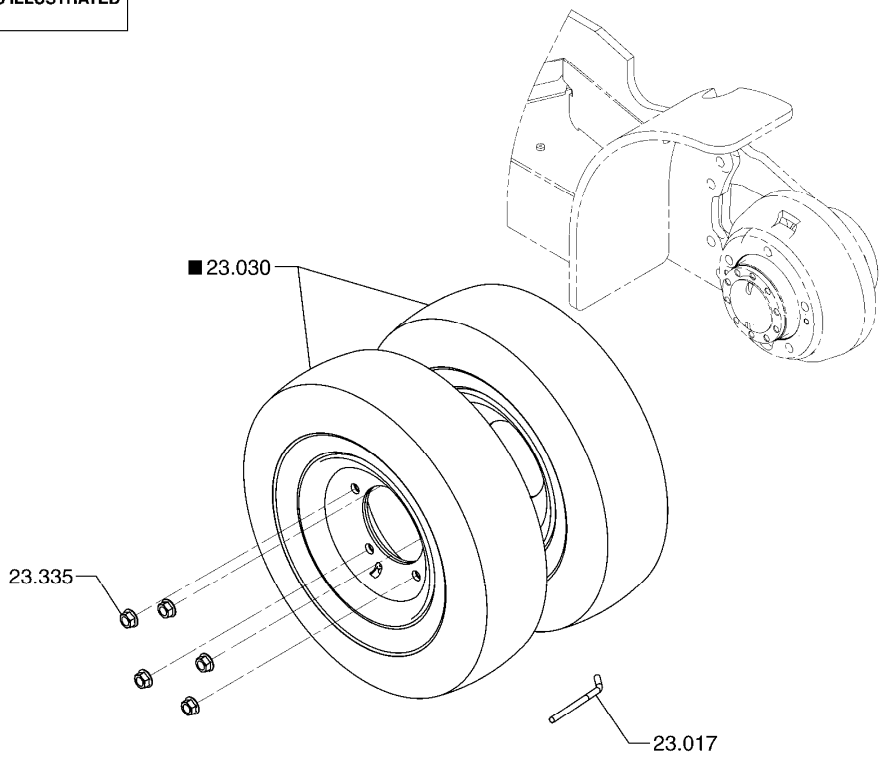


DUAL DRIVE WHEEL & TIRE MOUNTING **22-016**


23.017 EXTENSION, DRIVE WHEEL VALVE
익스텐션

23.030 DRIVE WHEEL AND TIRE ASSEMBLY
드라이브휠타이어

23.335 FASTENER, DRIVE WHEEL
패스너

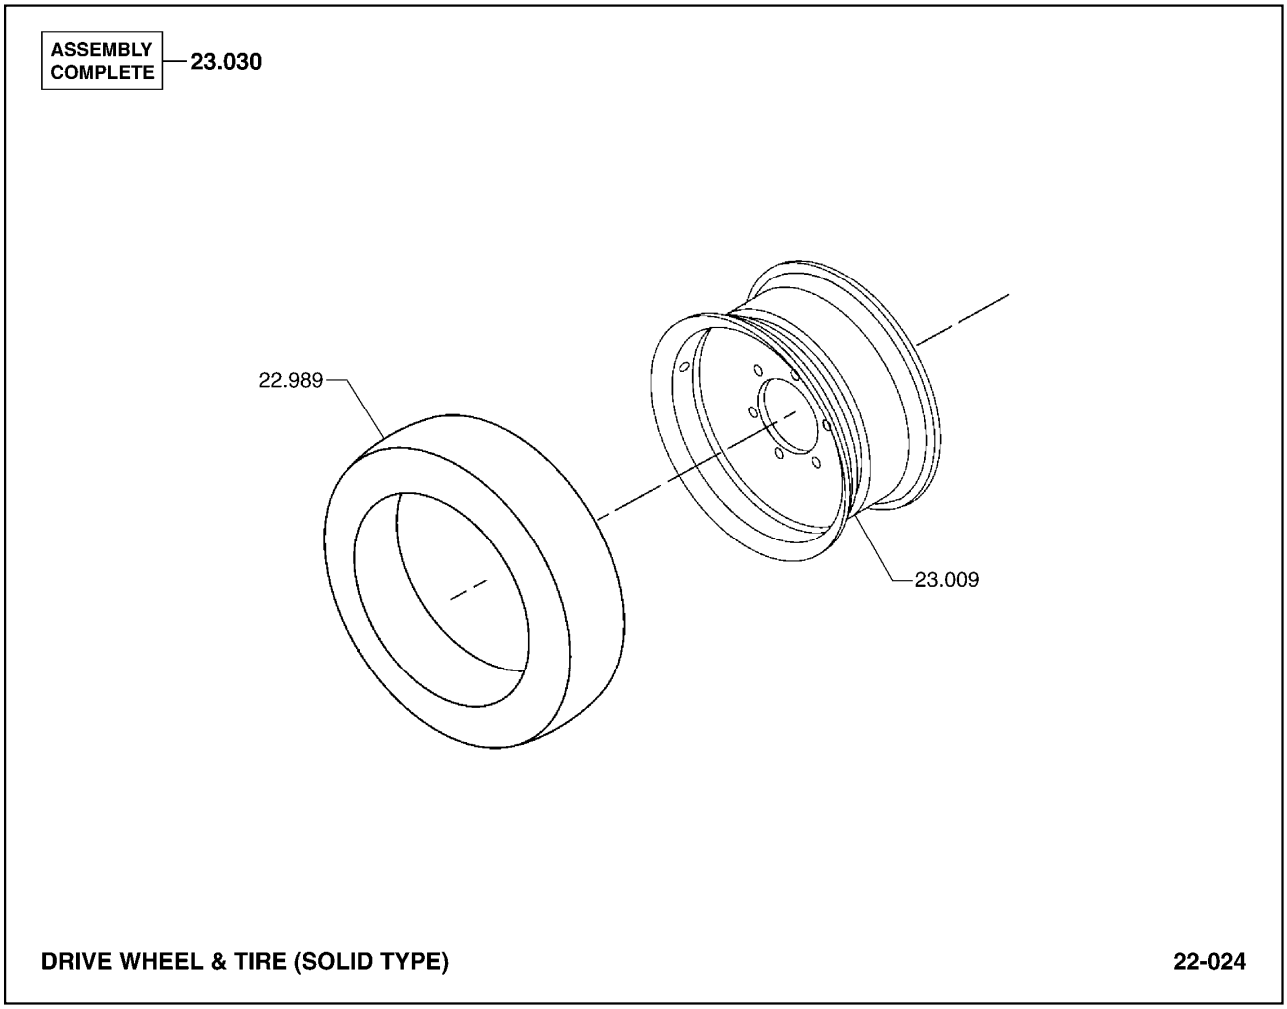


22.989	TIRE ASSEMBLY, DRIVE *
23.009	RIM ASSEMBLY, DRIVE WHEEL 림
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠타이어

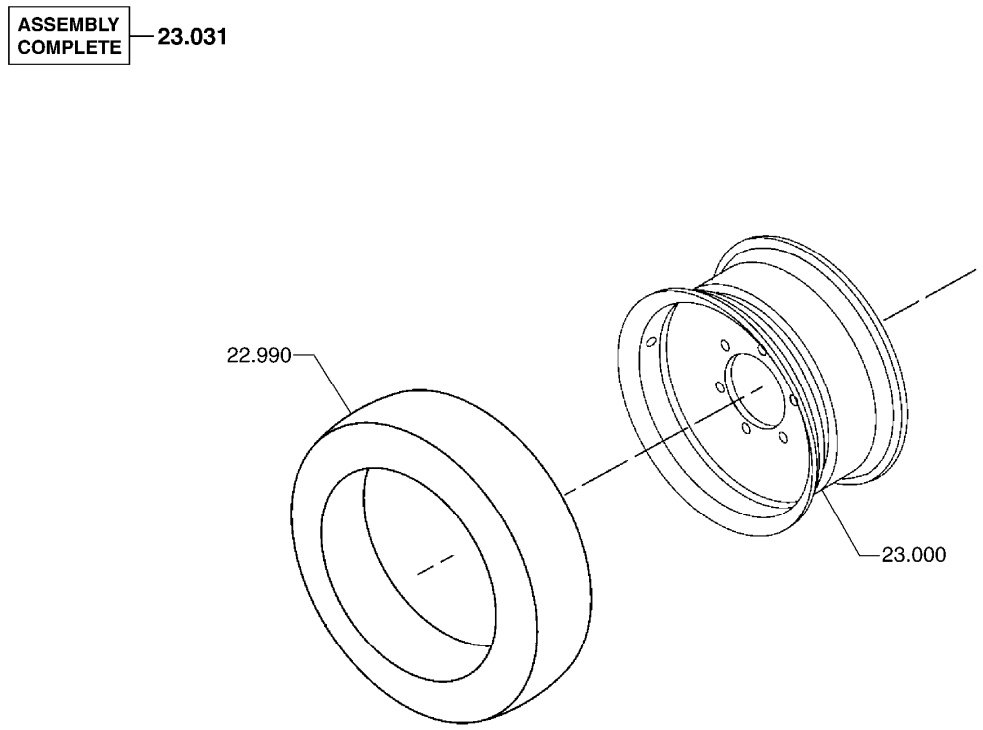


STEER WHEEL & TIRE (SOLID TYPE) **22-025**


22.990	TIRE ASSEMBLY, STEER *
23.000	RIM ASSEMBLY, STEER WHEEL 림
23.031	STEER WHEEL AND TIRE ASSEMBLY 휠

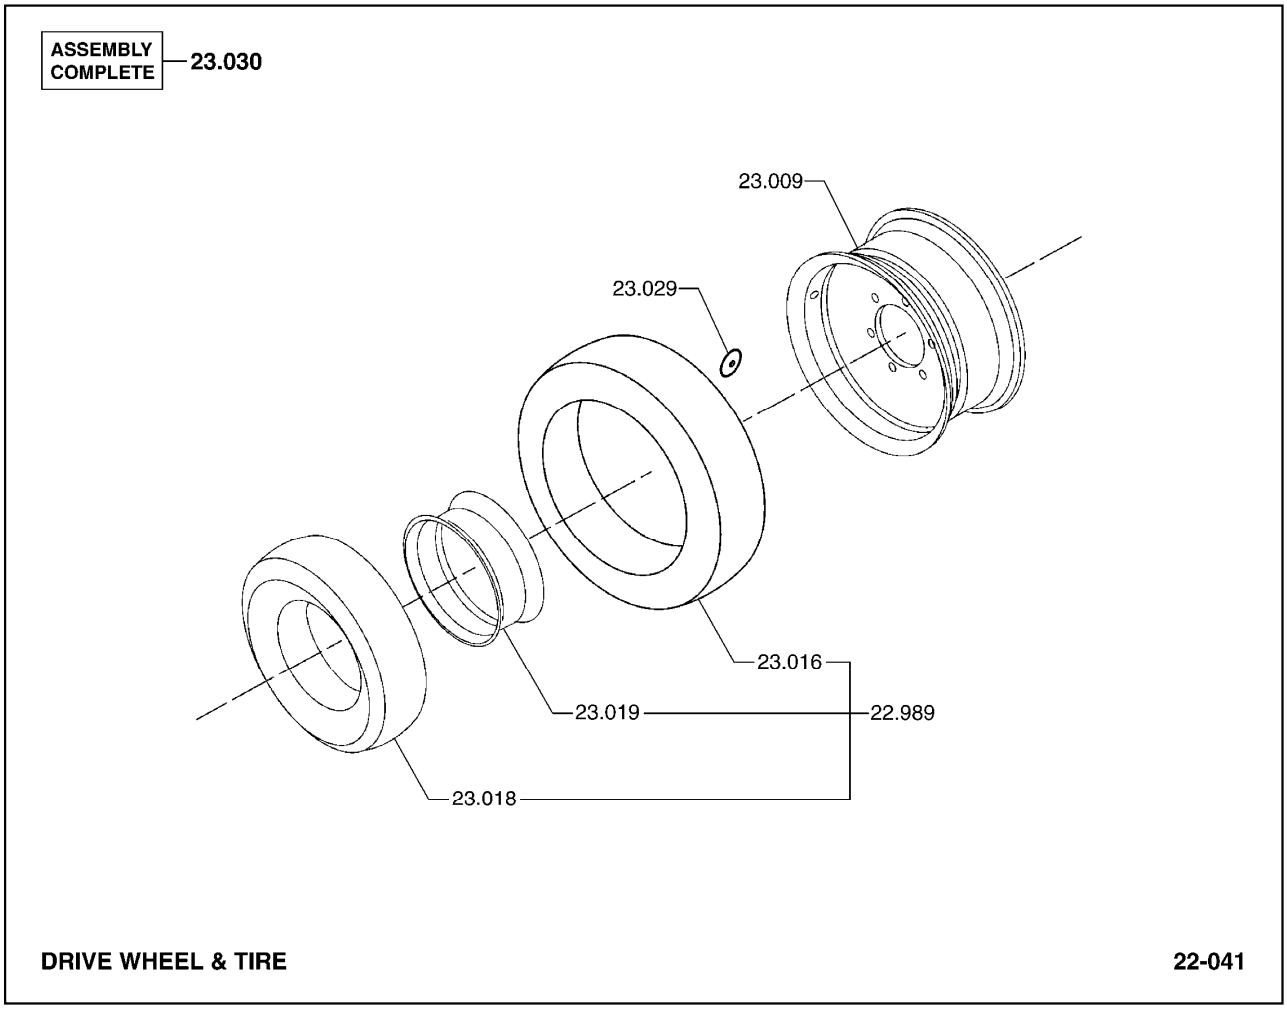

22.989	TIRE ASSEMBLY, DRIVE *
23.009	RIM ASSEMBLY, DRIVE WHEEL 림
23.016	TIRE, DRIVE WHEEL 타이어
23.018	TUBE, DRIVE WHEEL 튜브
23.019	FLAP, DRIVE WHEEL TUBE 플랩
23.029	FASTENER, DRIVE WHEEL ASSEMBLY 패스너
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠타이어

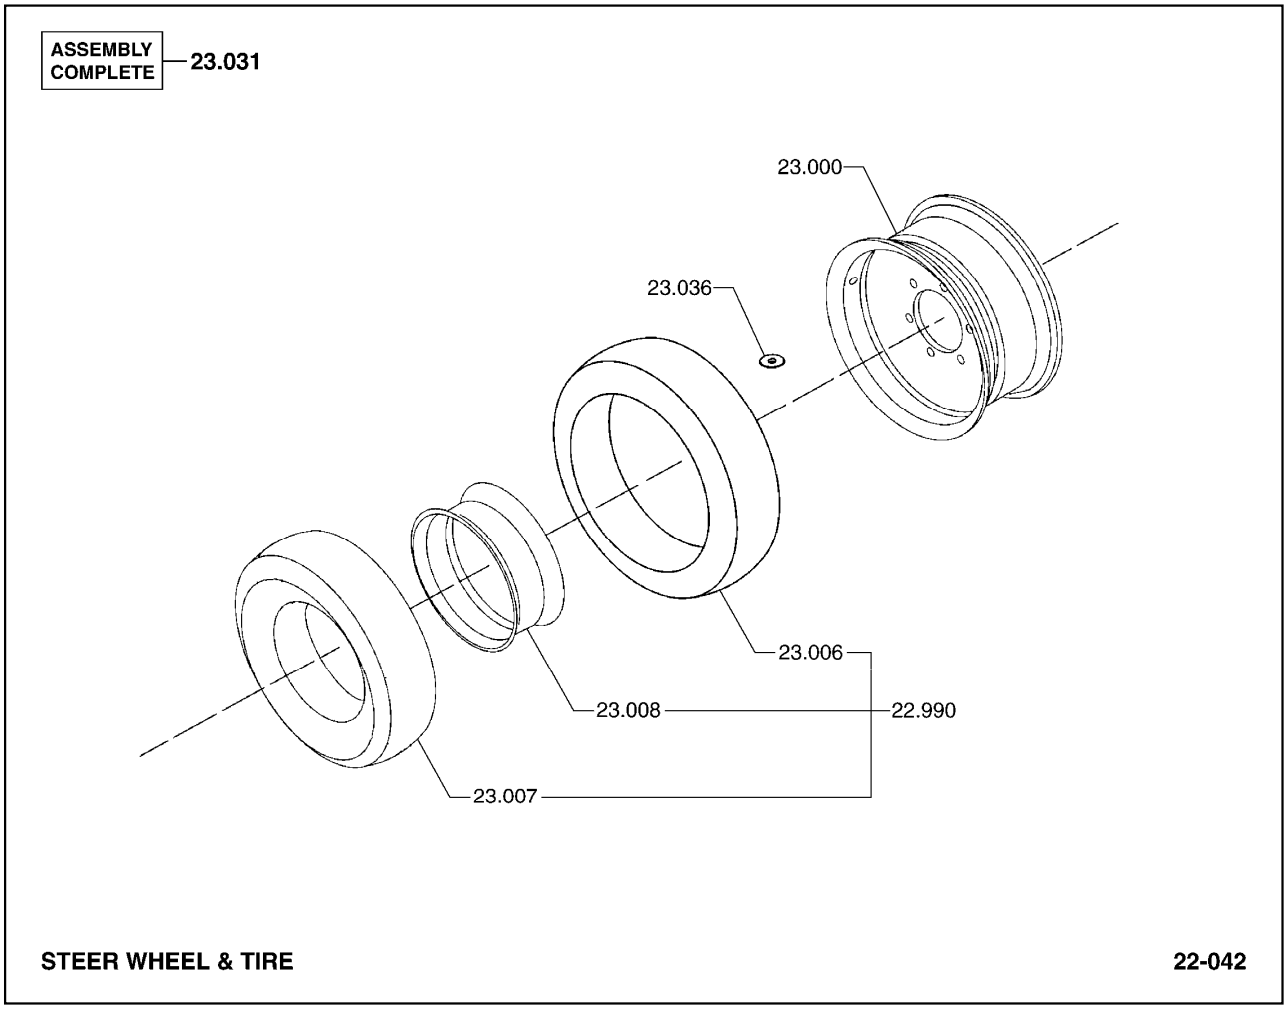


22.990	TIRE ASSEMBLY, STEER *
23.000	RIM ASSEMBLY, STEER WHEEL 림
23.006	TIRE, STEER WHEEL 타이어
23.007	TUBE, STEER WHEEL 튜브
23.008	FLAP, STEER WHEEL 플랩
23.031	STEER WHEEL AND TIRE ASSEMBLY 휠
23.036	FASTENER, STEER WHEEL ASSEMBLY 패스너

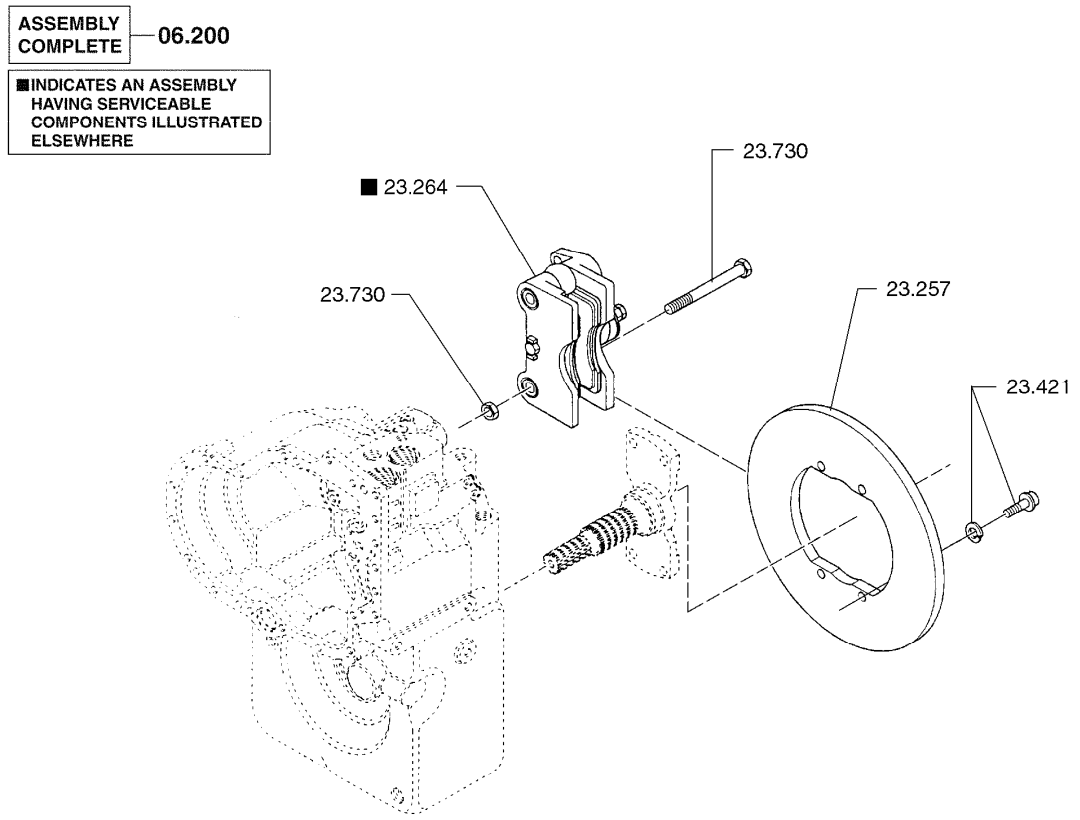

PARKING BRAKE MOUNTING **23-228**

06.200	TRANSMISSION ASSEMBLY 트랜스미션
23.257	DRUM, PARKING BRAKE 드럼
23.264	BRAKE ASSEMBLY, PARKING 브레이크
23.421	FASTENER, PARKING BRAKE DRUM 패스너
23.730	FASTENER, BRAKE ASSEMBLY 패스너

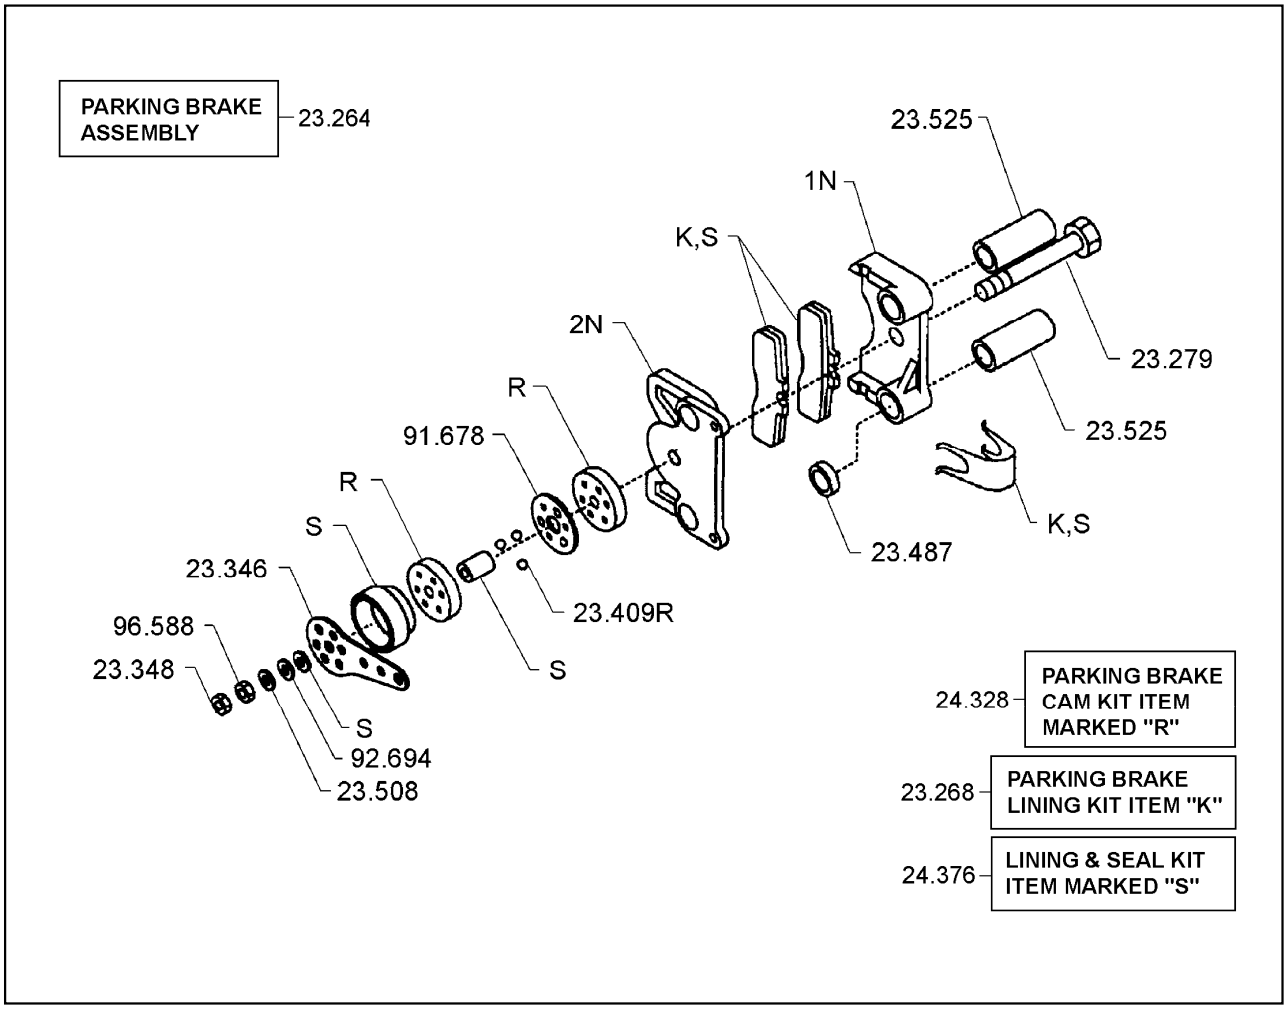

23.264 BRAKE ASSEMBLY, PARKING
브레이크

23.268 SHOE & LINING ASSEMBLY, PARKING BRAKE
슈와라이닝

23.279 ROD, PARKING BRAKE DRAW
로드

23.346 ARM, PARKING BRAKE
암

23.348 FASTENER, PARKING BRAKE ARM
패스너


23.409 ROLLER, PARKING BRAKE CAM
롤러

23.487 SPACER, PARKING BRAKE SIDE PLATE
스페이서

23.508 WASHER, PARK BRAKE CAM ACT LINK SHAFT
와셔

23.525 SLEEVE, BRAKE CYLINDER PUSH ROD
슬리브

24.328	REPAIR KIT, PARKING BRAKE 리페어킷
24.376	LINKING & SEAL KIT,PARKING BRAKE 링킹과실킷
91.678	RETAINER, PARKING BRAKE CAM ACTUATING LINK FASTENE 리테이너
92.694	WASHER, PARKING BRAKE LEVER FASTENER 와셔
96.588	NUT, PARKING BRAKE ADJUSTOR 너트

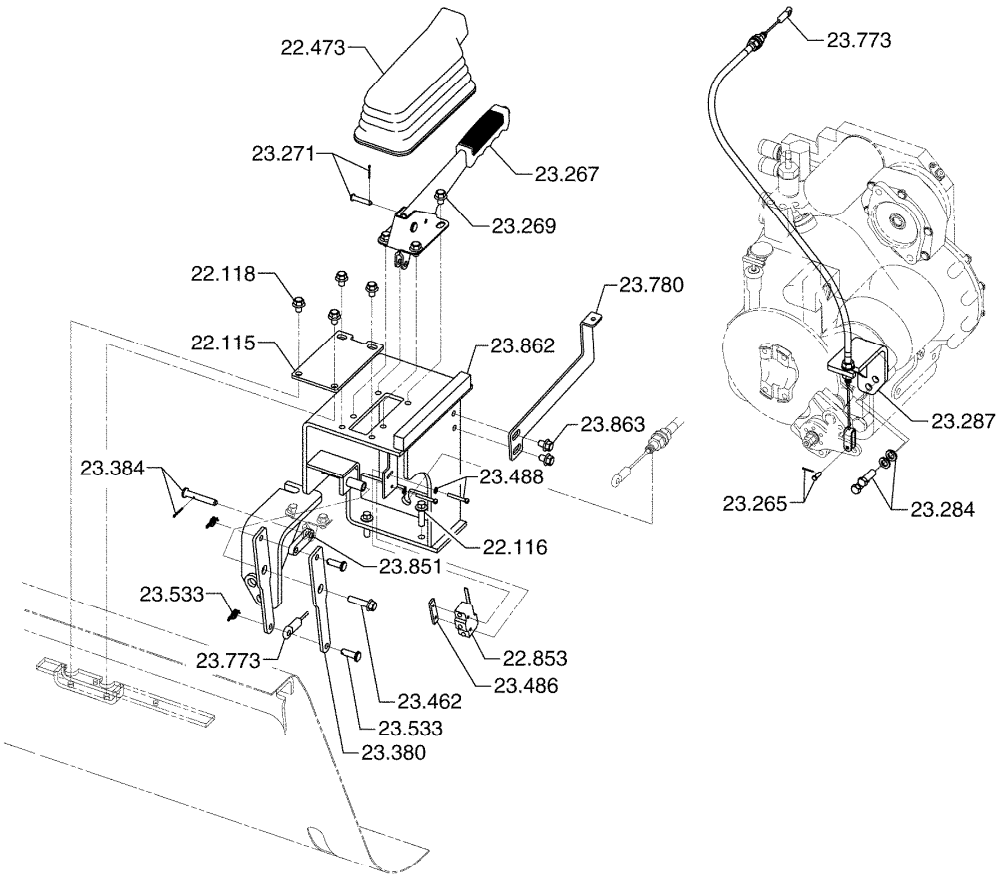

22.115 SUPPORT, PARKING BRAKE LEVER MOUNTING BRACKET
서포트

22.116 FASTENER, PARKING BRAKE MOUNTING BRKT SUPPORT
패스너

22.118 FASTENER, PARKING BRAKE LEVER
패스너

22.473 COVER, HAND BRAKE LEVER
커버

22.853 SWITCH, PARKING BRAKE PEDAL ACTUATING
스위치

23.265 FASTENER, PARKING BRAKE
패스너

23.267 LEVER, PARKING BRAKE
레버

23.269 FASTENER, PARKING BRAKE LEVER
패스너

23.271 FASTENER, PARKING BRAKE LEVER
패스너

23.284 FASTENER, PARKING BRAKE CABLE BRACKET
패스너

23.287 BRACKET, PARKING BRAKE CABLE
브라켓

23.380 LINK, PARKING BRAKE
링크

23.384 FASTENER, PARKING BRAKE LINK
패스너

23.462 FASTENER, PARKING BRAKE LINK
패스너

23.486 SIDE PLATE, PARKING BRAKE
사이드플레이트

23.488 FASTENER, PARKING BRAKE SIDE PLATE
패스너

23.533 FASTENER, BRAKE LINK CLEVIS
패스너

23.773 CABLE, PARKING BRAKE WHEEL END
케이블


23.780 SUPPORT, PARKING BRAKE LINKAGE
서포트

23.851 LINK, PARKING BRAKE
링크

23.862 BRACKET, PARKING BRAKE LEVER MOUNTING
브라켓

23.863 FASTENER, PARKING BRAKE LEVER BRACKET
패스너

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

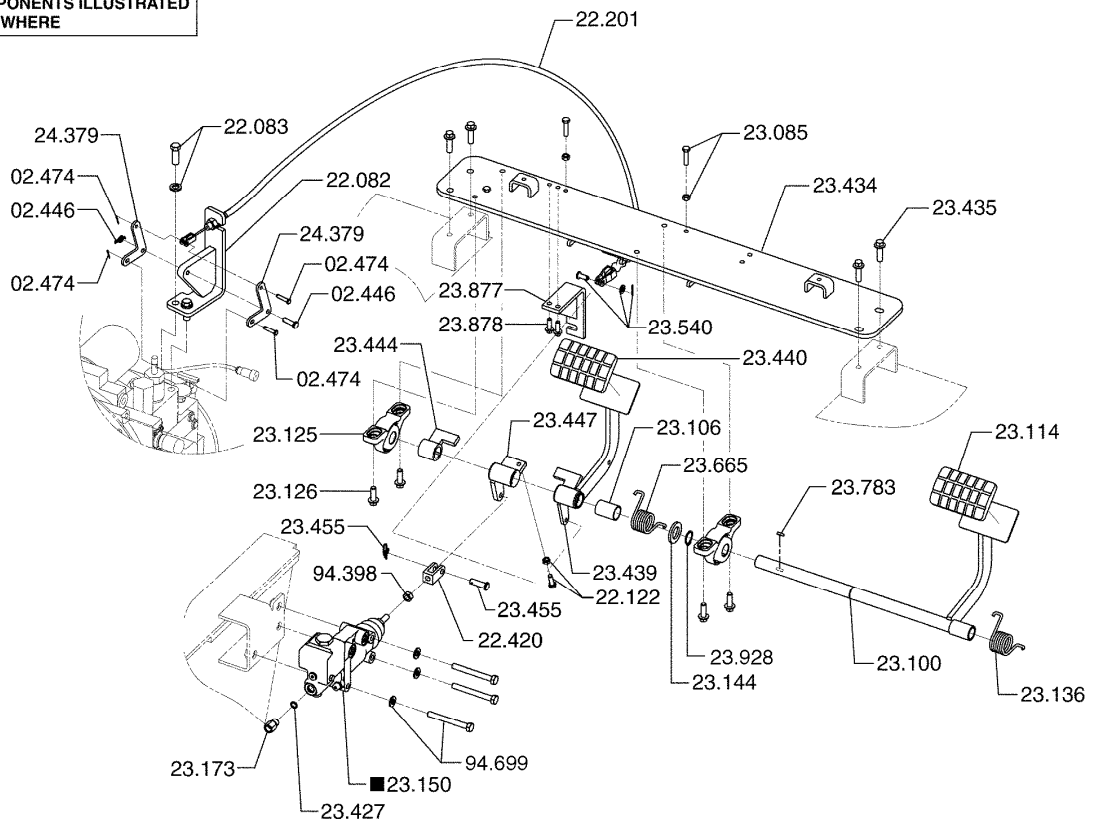

BRAKE & INCHING LINES **23-540**


02.446	FASTENER, ACCELERATOR SLIP ROD CLEVIS 패스너
02.474	FASTENER, ACCELERATOR CONTROL ROD 패스너
22.082	BRACKET, BRAKE CABLE (BRAKE END) 브라켓
22.083	FASTENER, BRAKE CABLE BRACKET (BRAKE END) 패스너
22.122	FASTENER, BRAKE PEDAL PIVOT RETAINER 패스너
22.201	CABLE, INCHING 케이블
22.420	CLEVIS, MASTER CYLINDER PUSH ROD 클레비스
23.085	FASTENER, BRAKE PEDAL STOP 패스너
23.100	PEDAL, BRAKE 페달
23.106	SPACER, BRAKE PEDAL BEARING 스페이서
23.114	PAD & FASTENER, BRAKE PEDAL 패드와패스너
23.125	BEARING, BRAKE PEDAL SHAFT 베어링
23.126	FASTENER, BRAKE PEDAL SHAFT BEARING 패스너
23.136	SPRING, BRAKE PEDAL RETURN 스프링
23.144	WASHER, BRAKE PEDAL SHAFT 와셔
23.150	CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE 실린더
23.173	FITTING, BRAKE MASTER CYLINDER OUTLET 피팅
23.427	SEAL, MASTER CYLINDER OUTLET HOUSING 시일
23.434	BRACKET, BRAKE PEDAL PIVOT 브라켓
23.435	FASTENER, BRAKE PEDAL PIVOT BRACKET 패스너
23.439	PEDAL, INCHING 페달
23.440	PAD & FASTENER, INCHING PEDAL 패드와패스너
23.444	LEVER, INBOARD INCHING 레버
23.447	LEVER, OUTBOARD INCHING 레버
23.455	FASTENER, INCHING LEVER ROD CLEVIS 패스너
23.540	FASTENER, BRAKE LINKAGE PIVOT ARM 패스너
23.665	SPRING, INCHING PEDAL RETURN 스프링
23.783	KEY, BRAKE PEDAL 키
23.877	BRACKET, INCHING PEDAL PIVOT 브라켓
23.878	FASTENER, INCHING PEDAL PIVOT BRACKET 패스너

23.928 RETAINER, INCHING PEDAL SHAFT
리테이너

24.379 LINK, INCHING
링크

94.398 NUT, BRAKE MASTER CYLINDER ACTUATING ROD FASTENE
너트

94.699 FASTENER, BRAKE MASTER CYLINDER SUPPORT BRACKET
패스너

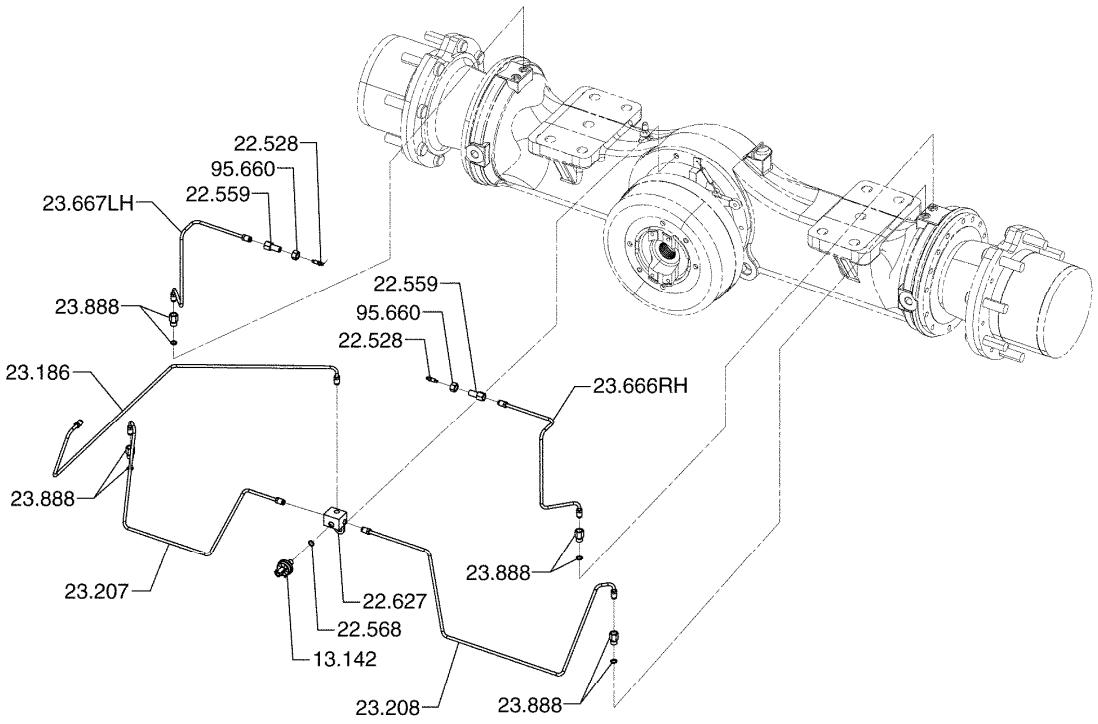

BRAKE LINES **23-542**

13.142 SWITCH, BRAKE INTERLOCK
스위치

22.528 BLEEDER, BRAKE LINES ADAPTOR
블리더

22.559 FITTING, BRAKE LINES BLEEDER
피팅

22.568 SEAL, BRAKE LINE TEE PLUG
시일

22.627 TEE, BRAKE LINE
티


23.186 LINE, BRAKE MASTER CYLINDER OUTLET
라인

23.207 LINE, LH DRIVE WHEEL BRAKE CYLINDER TO TEE
라인

23.208 LINE, RH DRIVE WHEEL BRAKE CYLINDER TO TEE
라인

23.666 LINE, BRAKE CYLINDER BLEEDER (RH)
라인


23.667	LINE, BRAKE CYLINDER BLEEDER (LH) 라인
23.888	FITTING, BRAKE LINE 피팅
95.660	NUT, BRAKE LINES ADAPTER FASTENER 너트

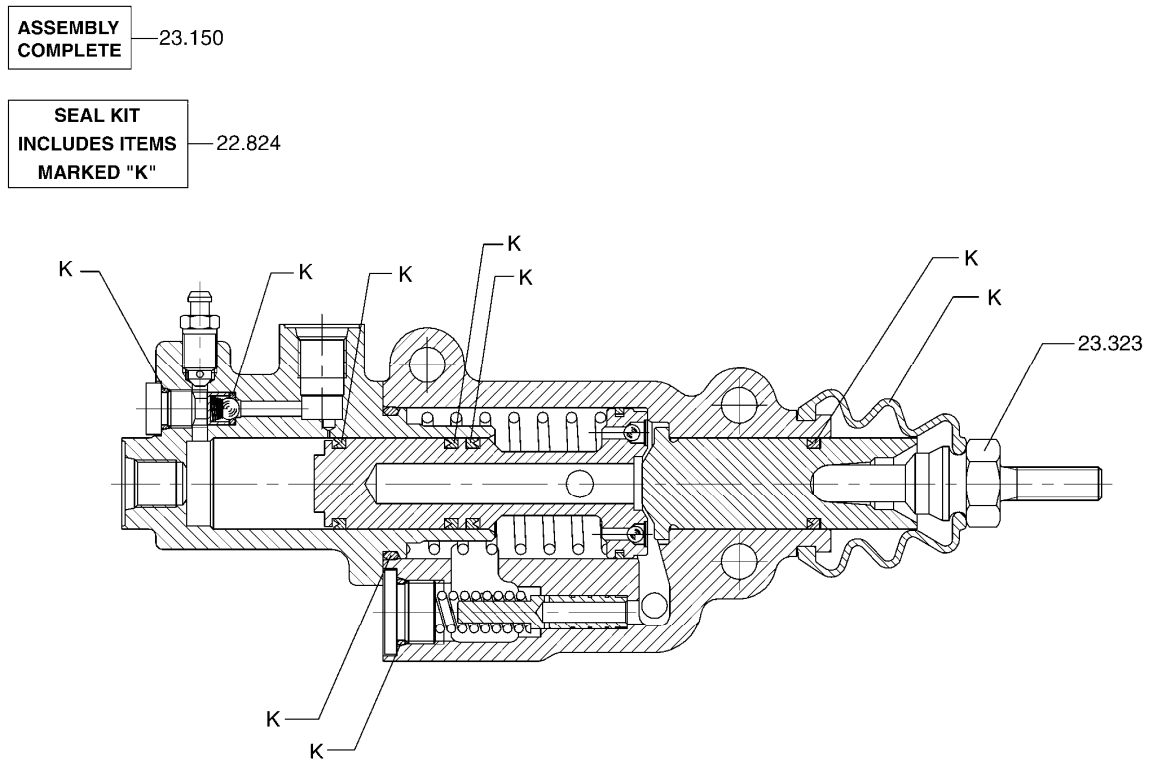

22.824 SEAL KIT, BRAKE ENERGIZER/MASTER CYL
시일킷

23.150 CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE
실린더

23.323 ROD, BRAKE ADJUSTING
로드

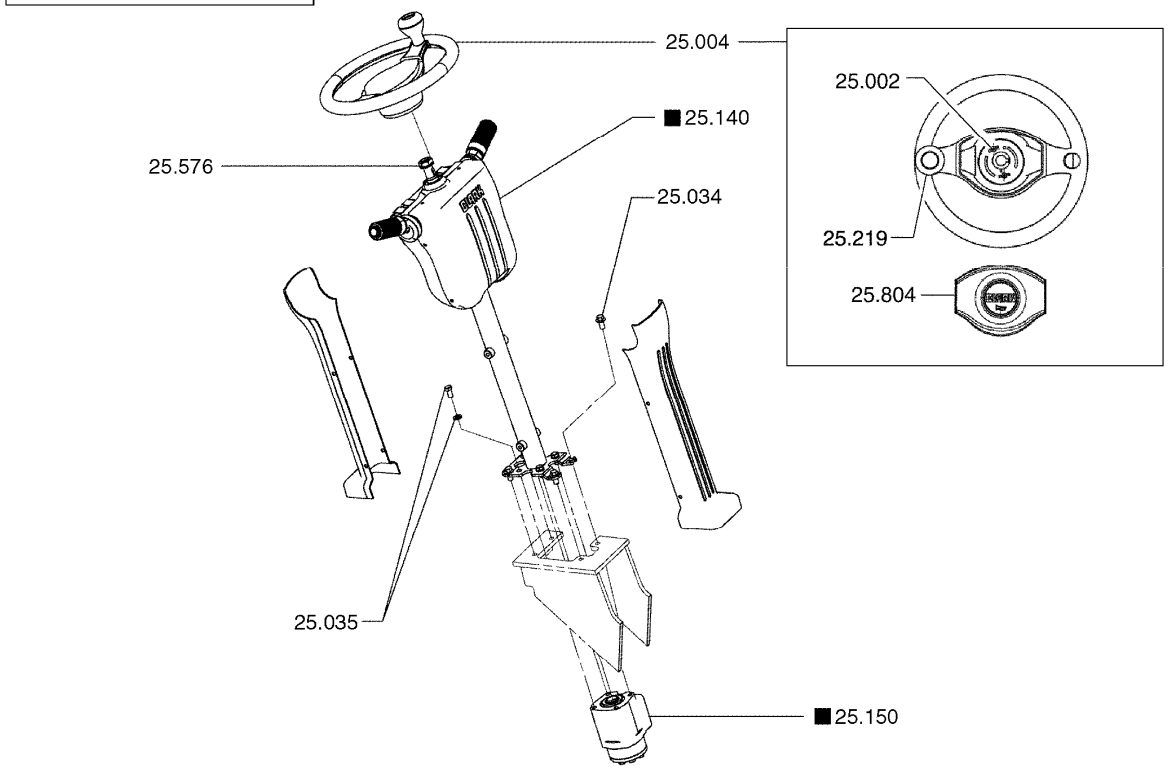

25.002 HORN BUTTON KIT
혼버튼킷

25.004 HAND WHEEL, STEERING GEAR
핸드휠

25.035 FASTENER, STEERING GEAR ATTACHING
패스너

25.150 GEAR BOX ASSEMBLY, STEERING
기어박스


25.219 KNOB, STEERING HAND WHEEL SPINNER
노브

25.576 SPACER, STEERING HAND WHEEL
스페이서

25.770 SHAFT & COLUMN ASSY, POWER STEERING (TILT)
샤프트와컬럼

25.785 FASTENER, TILT STEERING SHAFT & COLUMN ASSEMBLY
패스너


25.804 COVER, HANDLE CONTROL ASSEMBLY
커버

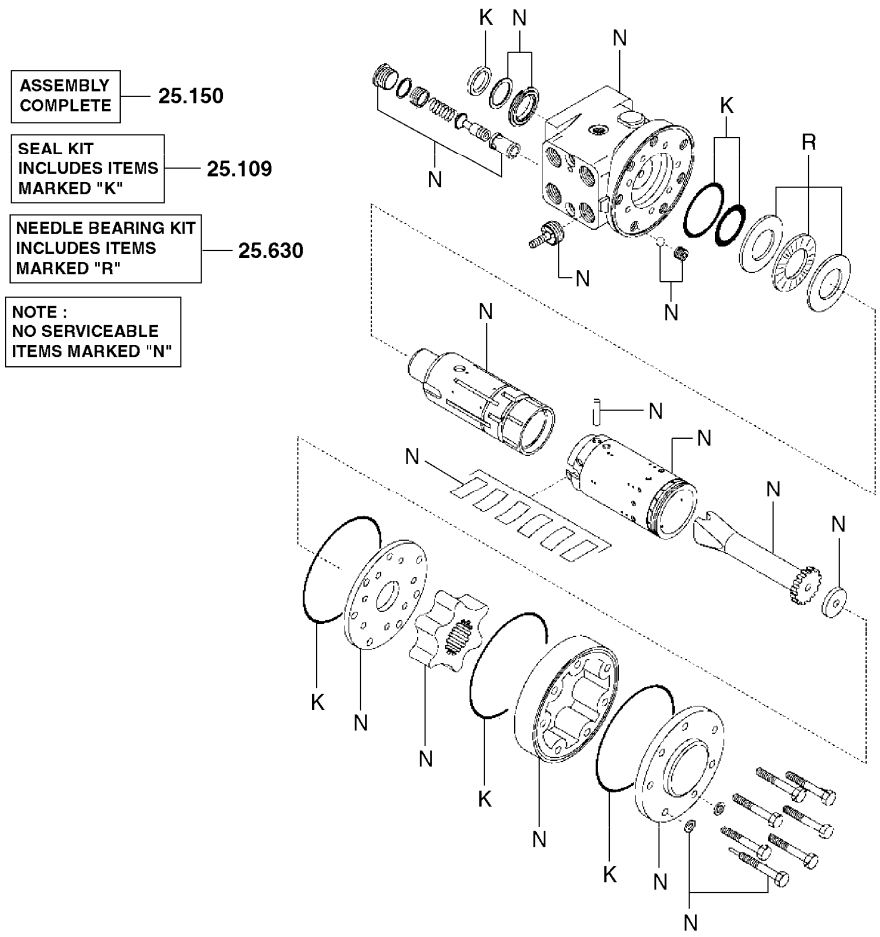

25.109 KIT, STEER GEAR SEAL
킷

25.150 GEAR BOX ASSEMBLY, STEERING
기어박스


25.630 REPAIR KIT, STEERING COLUMN
리페어킷

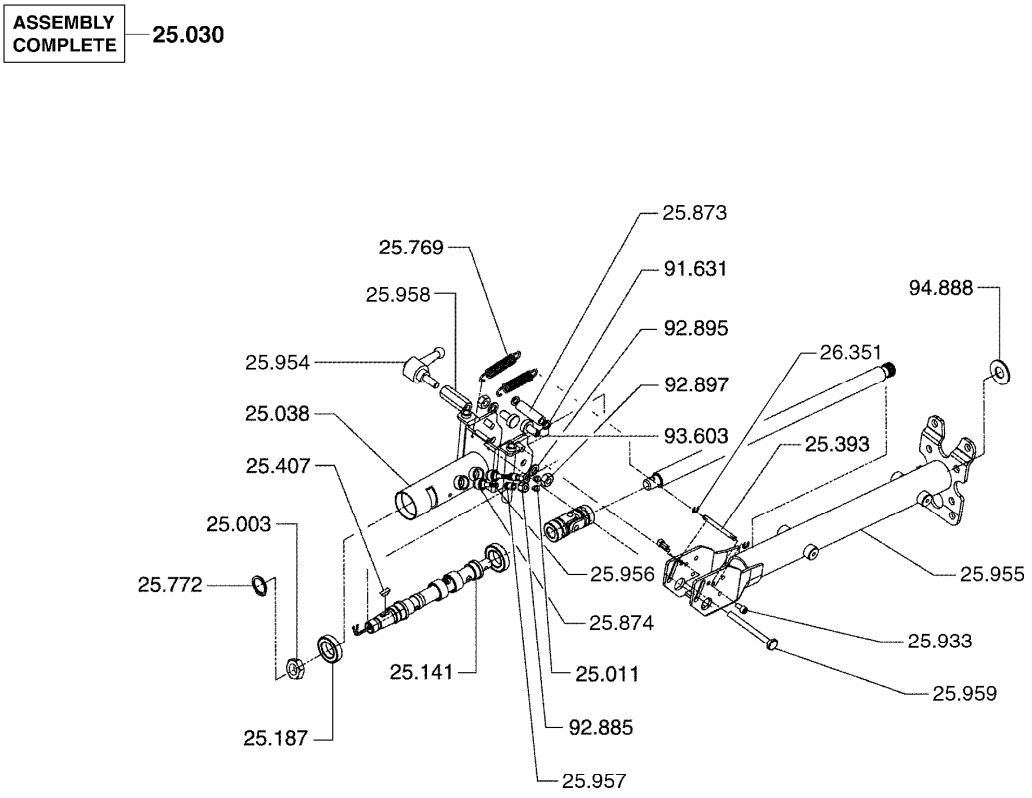

STEERING COLUMN SHAFT ASSEMBLY **25-291**

25.003	NUT, HANDWHEEL 너트
25.011	FASTENER, STEERING COLUMN 패스너
25.030	SHAFT ASSEMBLY, STEERING COLUMN 샤프트
25.038	HOUSING ASSEMBLY-CUP & BUSHING, STEERING 하우징
25.141	SHAFT, STEERING GEAR 샤프트
25.187	BEARING, STEER SHAFT 베어링
25.393	PIN, STEERING LINK (STEERING ARM) 핀
25.407	KEY, STEER COLUMN SHAFT COUPLING 키
25.769	SPRING, STEERING COLUMN TILTING (LOWER) 스프링

25.772	RETAINER, STEERING COLUMN SHAFT 리테이너
25.873	BUSHING, STEER COLUMN AXIAL 부싱
25.874	BUSHING, STEER COLUMN TELESCOPING 부싱
25.933	FASTENER, STEERING COLUMN 패스너
25.954	ARM, TILT STEERING COLUMN ADJUSTOR *
25.955	SUPPORT, STEERING COLUMN SHAFT *
25.956	BRUSH, STEERING COLUMN SHAFT *
25.957	BRUSH HOLDER, STEERING COLUMN SHAFT *
25.958	PIVOT, TILT STEERING COLUMN ADJUSTOR ARM *
25.959	PIN, TILT STEERING COLUMN ADJUSTOR ARM *
26.351	WASHER, STEERING ARM PIN 와셔
91.631	WASHER, STEERING COLUMN UPPER BRACKET FASTENER 와셔
92.885	NUT, STEERING COLUMN UPPER BRACKET FASTENER 너트
92.895	WASHER, STEERING COLUMN SUPPORT FASTENER 와셔
92.897	NUT, STEERING COLUMN SUPPORT FASTENER 너트
93.603	FASTENER, STEERING COLUMN TILTING SPRING BALL STUD 패스너
94.888	RETAINER, STEERING COLUMN ADJUSTOR 리테이너

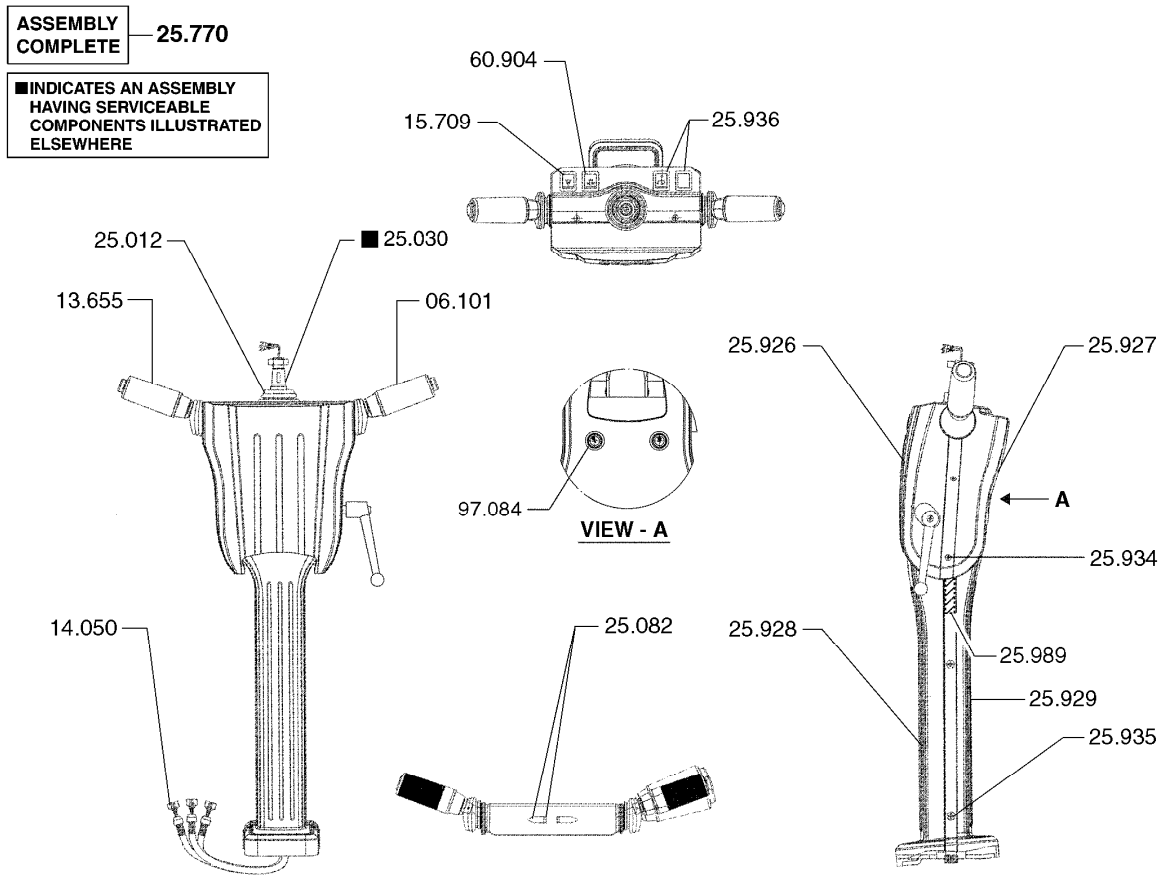

06.101 LEVER ASSEMBLY, FORWARD & REVERSE
레버

13.655 SWITCH, TURN INDICATOR
스위치

14.050 HARNESS, CONTROL CIRCUIT WIRING
하네스

15.709 SWITCH, EMERGENCY
스위치

25.012 CUSHION, STEERING COLUMN
쿠션


25.030 SHAFT ASSEMBLY, STEERING COLUMN
샤프트

25.082 FASTENER, LEVER MOUNTING BRACKET
패스너

25.770 SHAFT & COLUMN ASSY, POWER STEERING (TILT)
샤프트와컬럼

25.926 COVER, STEER COLUMN FRONT UPPER
커버

25.927	COVER, STEER COLUMN REAR UPPER 커버
25.928	COVER, STEER COLUMN FRONT LOWER 커버
25.929	COVER, STEER COLUMN REAR LOWER 커버
25.934	FASTENER, STEER COLUMN COVER 패스너
25.935	FASTENER, STEER COLUMN COVER 패스너
25.936	PLUG, STEER COLUMN SWITCH 플러그
25.989	SOUND SEAL, STEER COLUMN COVER *
60.904	SWITCH, STROBE LIGHT 스J穎
97.084	FASTENER, STEER COLUMN COVER 패스너

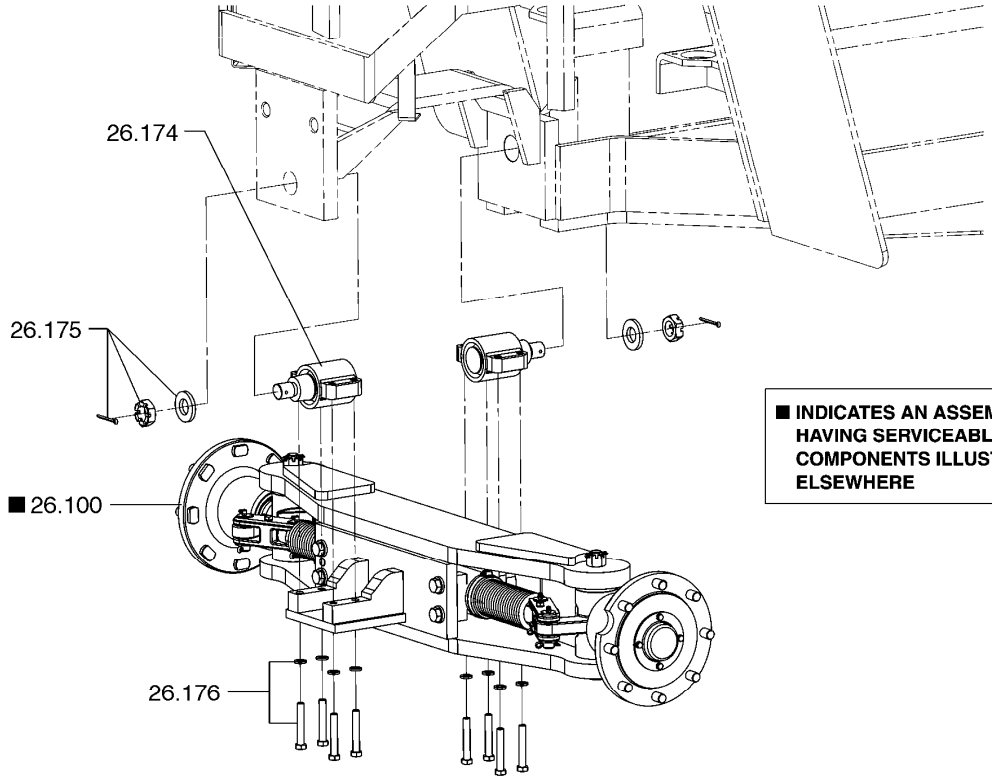


STEER AXLE MOUNTING 26-262

26.100 AXLE ASSEMBLY, STEERING
스티어액슬


26.174 SILENT BLOCK, AXLE MOUNTING (REAR)
사일런트블록

26.175 FASTENER, SILENT BLOCK TO FRAME (REAR)
패스너

26.176 FASTENER, SILENT BLOCK (REAR)
패스너

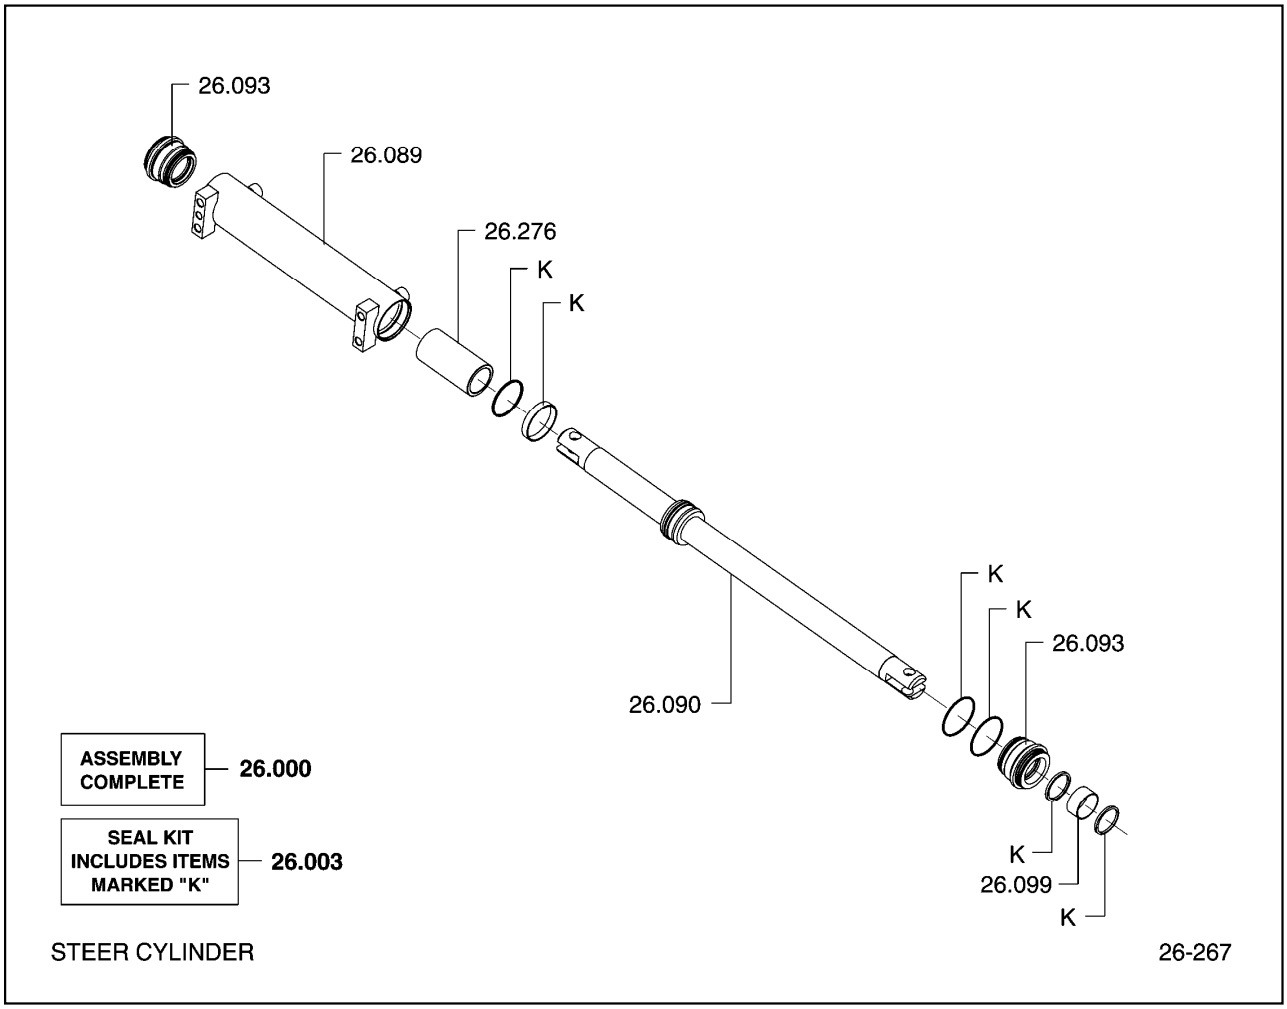

26.000	CYLINDER ASSEMBLY, STEERING 실린더
26.003	SEAL KIT, PISTON ROD 시일킷
26.089	BARREL, STEERING CYLINDER 배럴
26.090	STEER CYLINDER PISTON 룽드욱피스톤
26.093	GLAND, STEERING CYLINDER 그랜드
26.099	BUSHING, STEERING CYLINDER GLAND 부싱
26.276	SPACER, STEER CYLINDER ROD END 스페이서

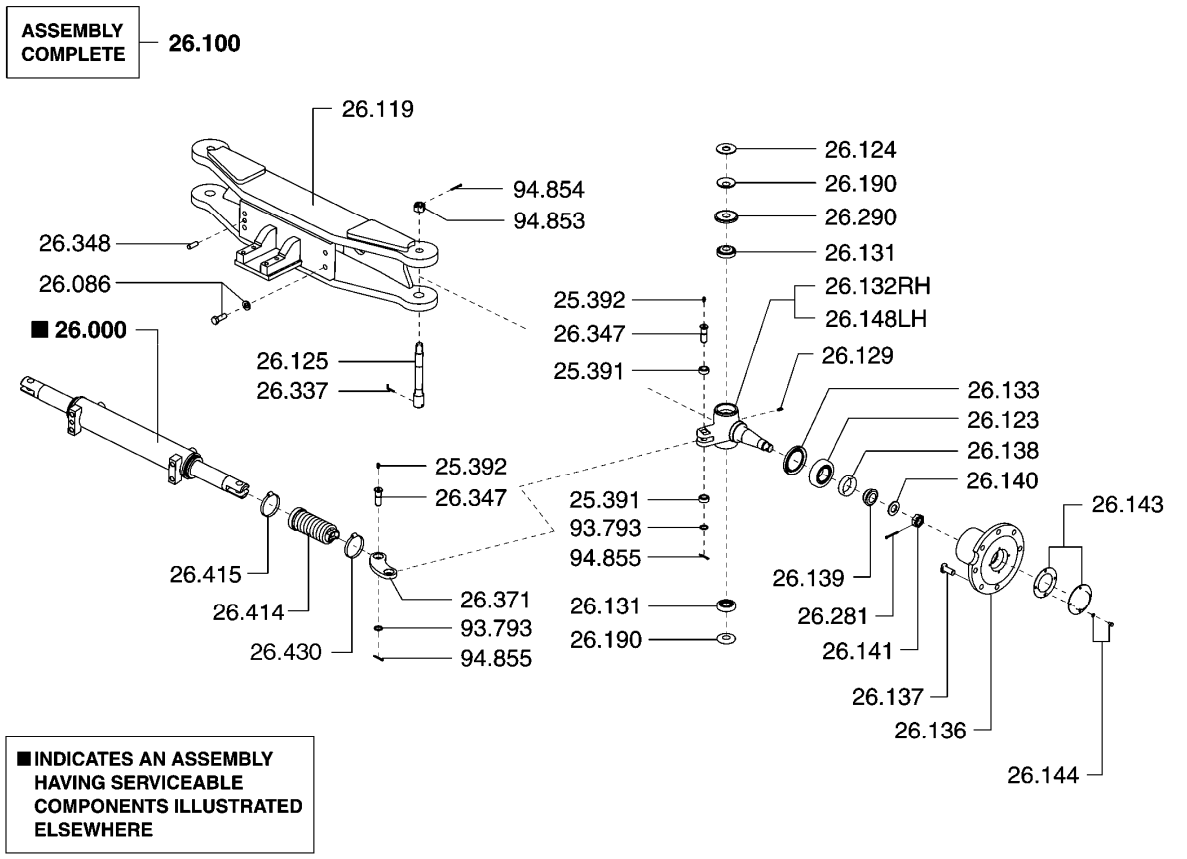

25.391	BEARING, STEERING ARM 베어링
25.392	FITTING-LUB, STEERING ARM 피팅
26.000	CYLINDER ASSEMBLY, STEERING 실린더
26.086	FASTENER, STEERING CYLINDER ANCHOR END 패스너
26.100	AXLE ASSEMBLY, STEERING 스티어액슬
26.119	AXLE, STEER 액슬
26.123	BEARING, STEER AXLE KNUCKLE THRUST 베어링
26.124	SHIM, STEER AXLE KNUCKLE 심
26.125	PIN, STEER AXLE KNUCKLE 핀
26.129	FITTING - LUB, STEER AXLE KNUCKLE 피팅
26.131	BEARING, STEER AXLE KNUCKLE PIN LOWER 베어링
26.132	KNUCKLE, STEER AXLE (RH) 너트
26.133	SEAL, STEER WHEEL HUB 시일
26.136	HUB & CUP, STEER WHEEL 허브와컵
26.137	FASTENER, STEER WHEEL 패스너
26.138	CUP, STEER WHEEL HUB BEARING (OUTER) 컵
26.139	CONE, STEER WHEEL HUB BEARING (OUTER) 콘
26.140	WASHER, STEER WHEEL HUB BEARING THRUST 와셔
26.141	FASTENER, STEER WHEEL HUB 패스너
26.143	CAP, STEER WHEEL HUB 캡
26.144	FASTENER, STEER AXLE HUB CAP 패스너
26.148	KNUCKLE, STEER AXLE (LH) 너트
26.190	SEAL, STEER AXLE KNUCKLE OIL 시일
26.281	RETAINER, STEER AXLE HUB BRG KNUCKLE NUT 리테이너
26.290	RETAINER, STEER AXLE KNUCKLE PIN LOWER BEARING 리테이너
26.337	LOCATOR, STEER AXLE KNUCKLE PIN 로케이터
26.347	PIN, STEER ARM 핀
26.348	LOCATOR, STEER CYLINDER 로케이터
26.371	TIE ROD, STEER AXLE 타이로드
26.414	BOOT, STEER AXLE 부트

26.415 CLAMP, STEER AXLE BOOT
클램프


26.430 CLAMP, STEER AXLE BOOT MTG
클램프

93.793 WASHER, STEERING ARM PIVOT FASTENER
와셔

94.853 FASTENER, STEER AXLE KNUCKLE PIN
패스너

94.854 COTTER, STEER AXLE KNUCKLE PIN FASTENER
커터

94.855 RETAINER, STEERING ARM PIN
리테이너

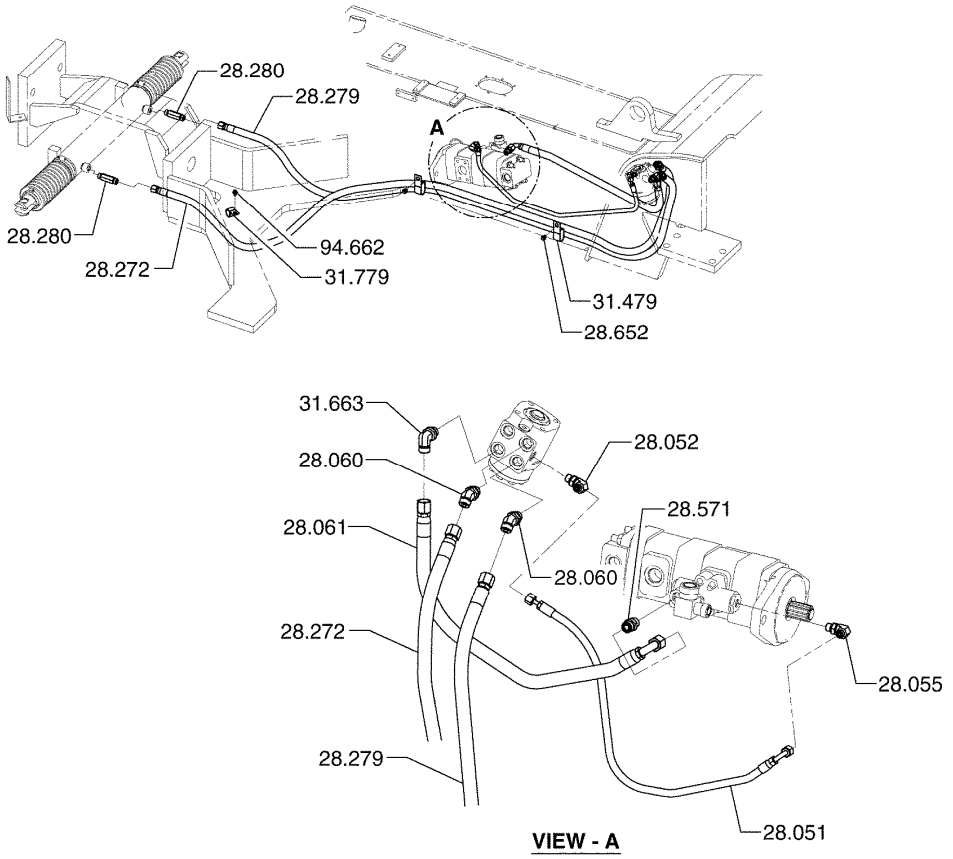

HYDRAULIC STEERING SYSTEM **26-319**

28.051 LINE, STEERING GEAR
라인

28.052 FITTING, STEERING GEAR
피팅

28.055 FITTING, STEERING GEAR
피팅

28.060 FITTING, STEER VALVE CONTROL PORT
피팅

28.061 LINE, STEER VALVE CONTROL
라인

28.272 LINE, STEER CYLINDER INLET
라인

28.279 LINE, STEER CYLINDER INLET
라인

28.280 FITTING, STEER CYLINDER
피팅

28.571 FITTING, STEER VALVE INLET LINE
피팅


28.652 CAPSCREW, STEERING LINES CLIP
캡스크류

31.479 CLAMP, STEERING LINES
클램프

31.663 FITTING, STEER VALVE INLET PORT
피팅

31.779 CLAMP, POWER STEERING LINES
클램프

94.662 FASTENER, POWER STEERING LINES CLAMP
패스너

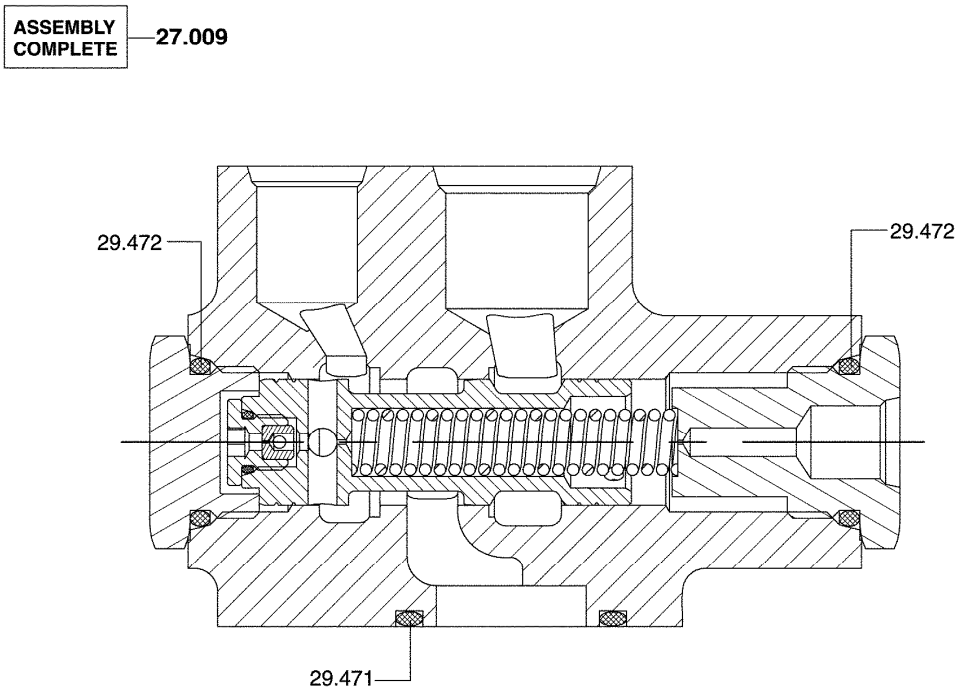


PRIORITY VALVE ASSEMBLY **27-000**

27.009 VALVE ASSEMBLY, HYDRAULIC PRIORITY
벨브

29.471 SEAL, PRIORITY VALVE FITTING
시일

29.472 SEAL, PRIORITY VALVE FITTING
시일

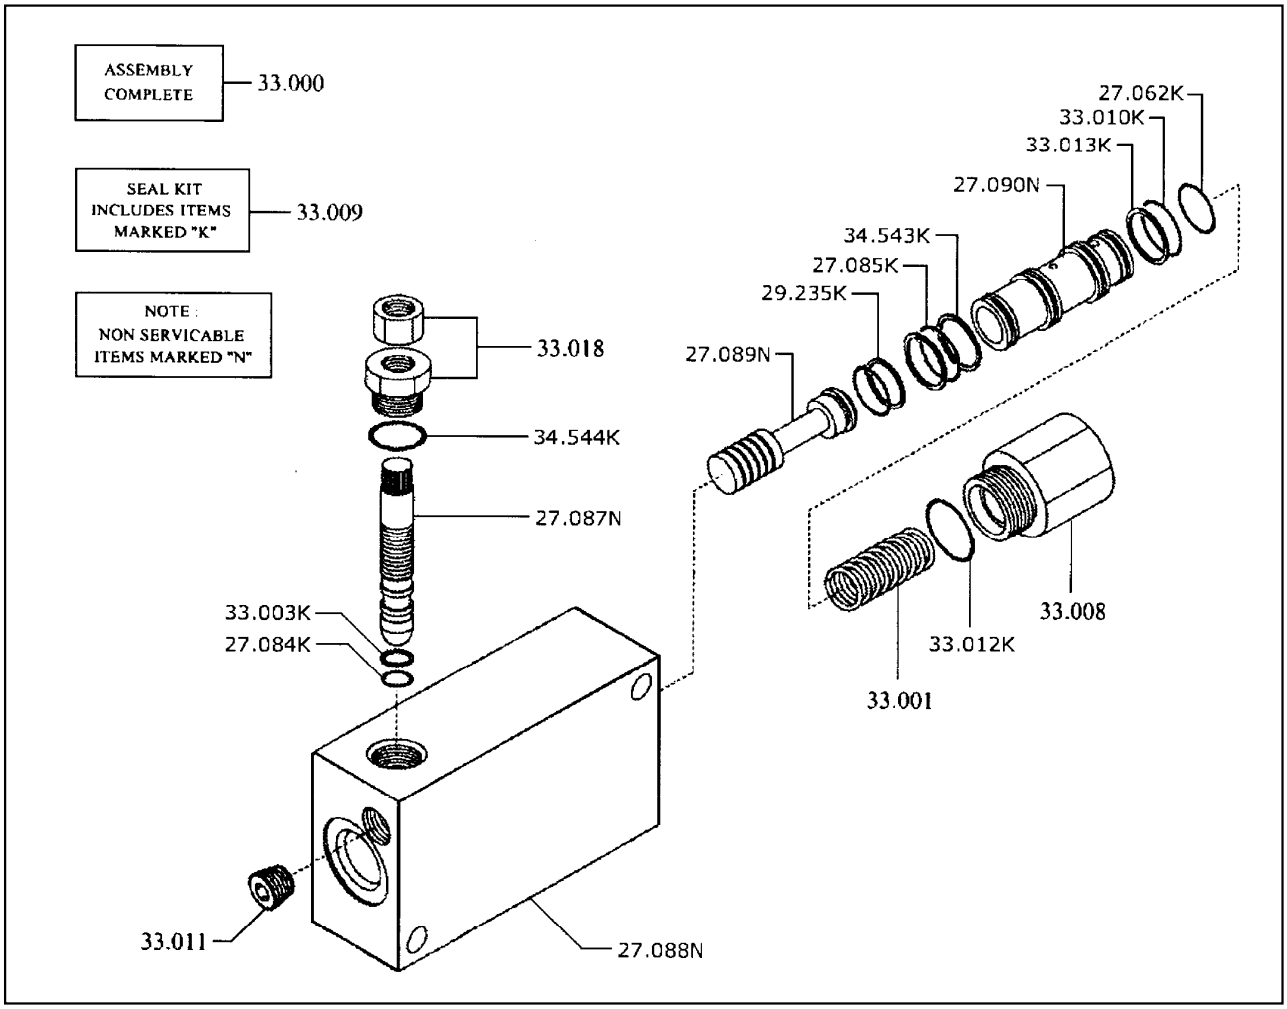

27.062 SEAL, FLOW CONTROL VALVE
시일

27.084 SEAL, FLOW CONTROL VALVE
시일

27.085 SEAL, FLOW CONTROL VALVE
시일

27.087 STEM, FLOW REGULATOR VALVE
스템

27.088 BODY, FLOW REGULATOR VALVE
바디


27.089 SPOOL, FLOW REGULATOR VALVE
스풀

27.090 SLEEVE, FLOW REGULATOR VALVE
슬리브

29.235 RETAINER, RELIEF VALVE PLUG
리테이너

33.000 VALVE ASSEMBLY, FLOW CONTROL
벨브

33.001	SPRING, FLOW CONTROL VALVE 스프링
33.003	RETAINER, FLOW CONTROL VALVE SUB-ASSEMBLY 리테이너
33.008	PLUG, FLOW VALVE 플러그
33.009	SEAL KIT, FLOW VALVE 시일킷
33.010	SEAL, FLOW VALVE PORT PLUG 시일
33.011	PLUG, FLOW VALVE PORT 플러그
33.012	SEAL, FLOW CONTROL VALVE SPRING PLUG 시일
33.013	RETAINER, FLOW CONTROL VALVE SPRING PLUG 리테이너
33.018	FASTENER, FLOW VALVE 패스너
34.543	FASTENER, FLOW CONTROL VALVE 패스너
34.544	SEAL, FLOW CONTROL VALVE RETAINER 시일

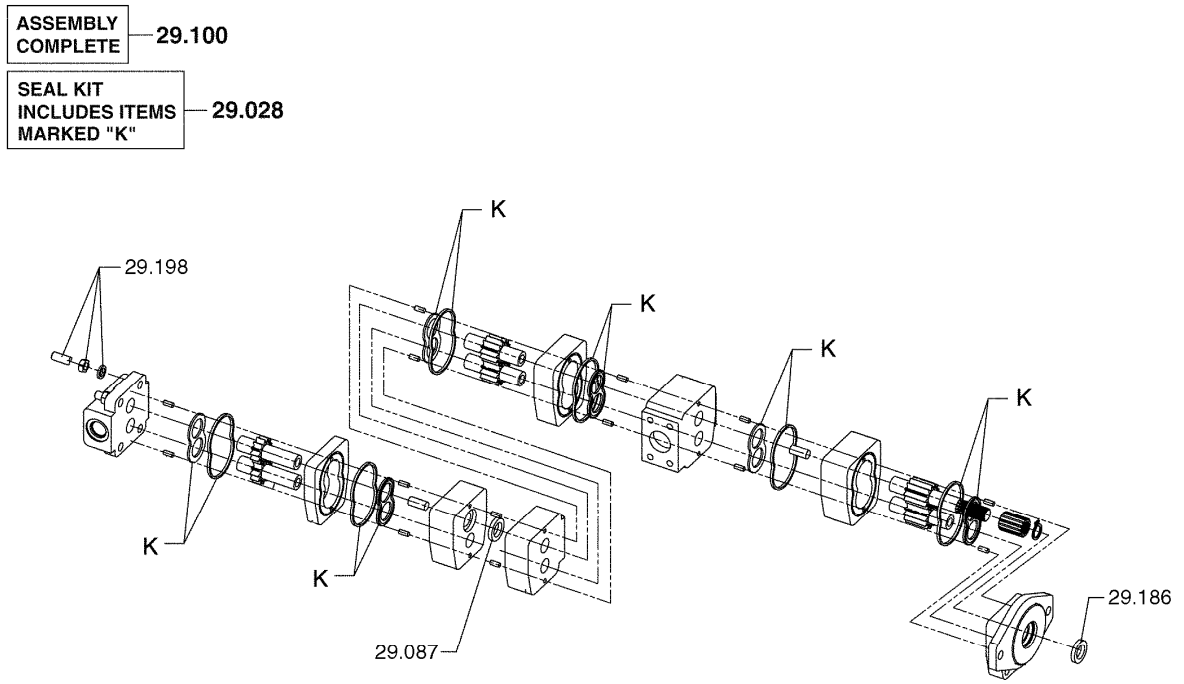

HYDRAULIC PUMP ASSEMBLY **29-283**

29.028 SEAL KIT, HYDRAULIC UNIT PUMP
시일킷


29.087 SEAL, HYDRAULIC PUMP HOUSING
시일

29.100 PUMP ASSEMBLY, HYDRAULIC
펌프

29.186 SEAL, PUMP SHAFT
시일


29.198 FASTENER, PUMP HOUSING
패스너

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

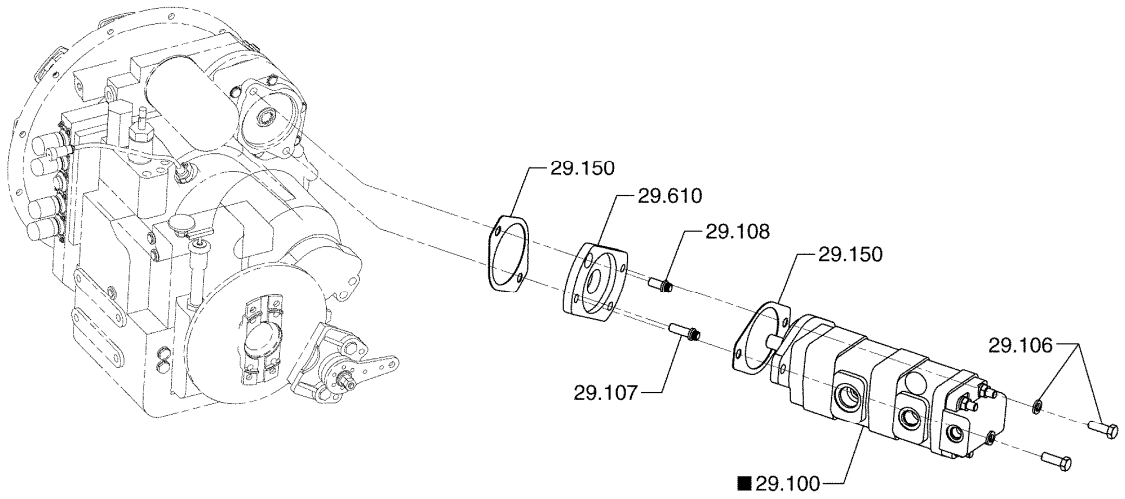

HYDRAULIC PUMP MOUNTING **29-306**

29.100	PUMP ASSEMBLY, HYDRAULIC 펌프
29.106	FASTENER, PUMP TO PLATE 패스너
29.107	FASTENER, PUMP MOUNTING PLATE 패스너
29.108	FASTENER, PUMP MOUNTING PLATE 패스너
29.150	GASKET, HYDRAULIC PUMP MOUNTING 가스켓
29.610	SPACER, HYDRAULIC PUMP MOUNTING 스페이서

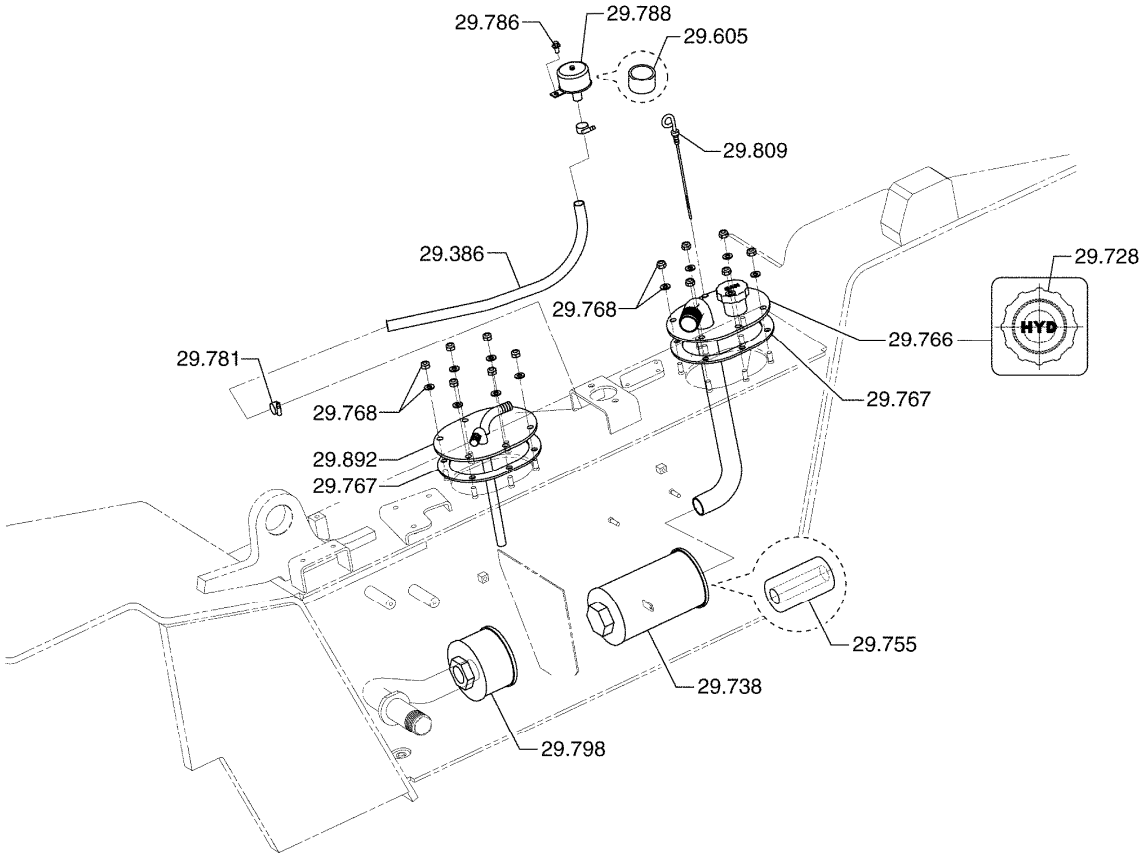

HYD TANK & COMPONENTS MOUNTING **29-320**

29.386 LINE, SUMP BREATHER
라인

29.605 FILTER, AIR BREATHER
필터

29.728 CAP, HYDRAULIC SUMP FILLER
캡

29.738 FILTER ASSEMBLY, HYDRAULIC SUMP
필터

29.755 SCREEN, HYDRAULIC SUMP FILTER
스크린

29.766 COVER, SUMP TANK
커버

29.767 SEAL, SUMP TANK COVER
시일

29.768 FASTENER, SUMP TANK COVER
패스너

29.781 CLAMP, SUMP BREATHER LINE
클램프

29.786 FASTENER, SUMP BREATHER
패스너


29.788 BREATHER, SUMP
브리더

29.798 SCREEN, HYDRAULIC SUMP PRE FILTER
스크린

29.809 DIPSTICK, SUMP LEVEL
딥스틱

29.892 COVER, HYDRAULIC SUMP
커버

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

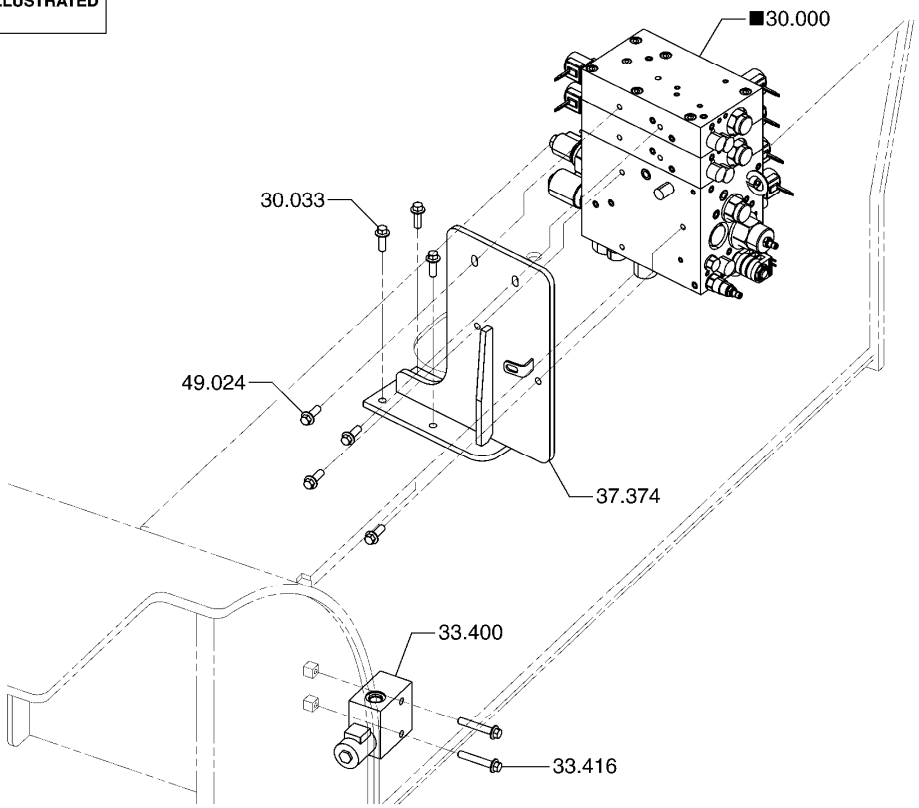

HYDRAULIC VALVE MOUNTING **30-339**

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브


30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너

33.400 VALVE ASSEMBLY, UNLOADING
벨브

33.416 FASTENER, UNLOADING VALVE
패스너

37.374 COVER, HYDRAULIC VALVE
커버

49.024 FASTENER, HYDRAULIC VALVE MOUNTING BRACKET
패스너

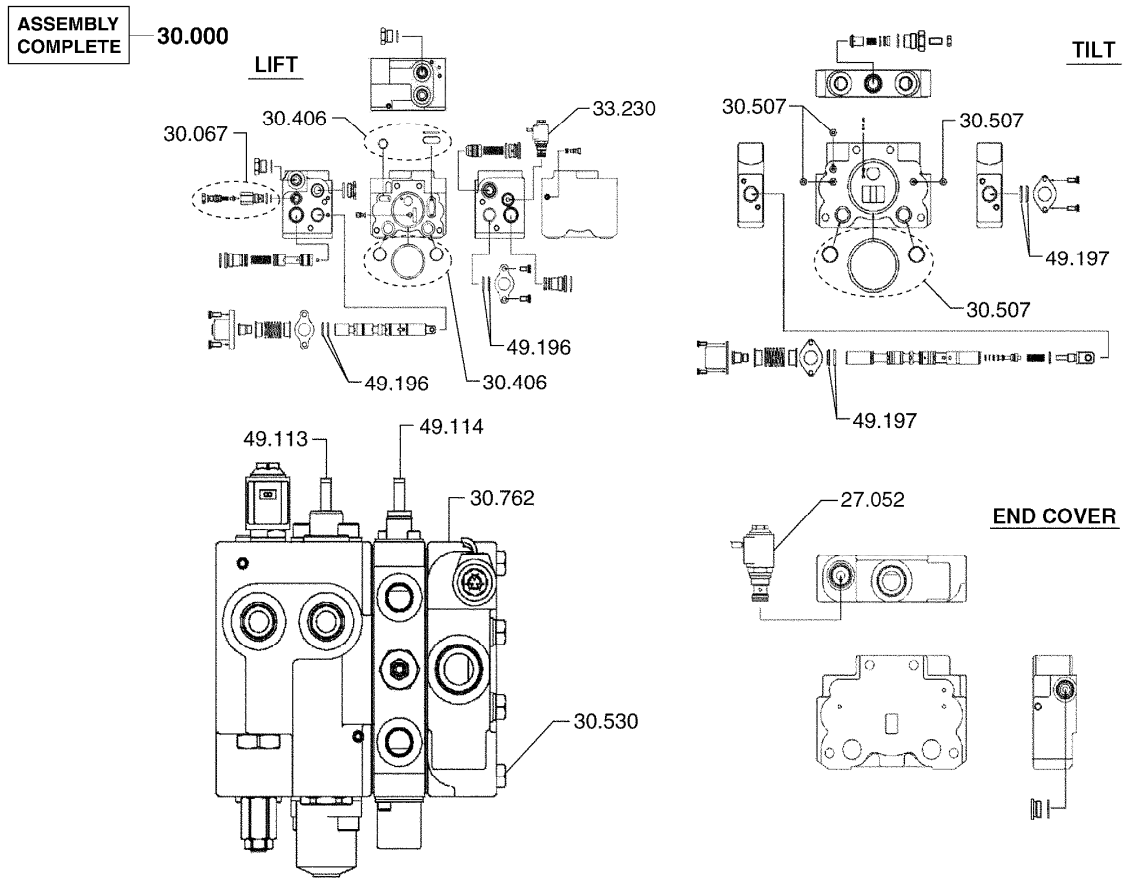

HYDRAULIC CONTROL VALVE - 2 SPOOL **30-363**

27.052 VALVE ASSEMBLY, AUXILIARY SOLENOID
벨브

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.067 RELIEF VALVE KIT, VALVE INLET SECTION
릴리프밸브

30.406 SEAL KIT, HYDRAULIC VALVE (LIFT)
시일킷

30.507 SEAL KIT, HYDRAULIC VALVE (TILT)
시일킷


30.530 FASTENER, VALVE THRU
패스너

30.762 END COVER, HYDRAULIC VALVE
엔드커버

33.230 VALVE ASSEMBLY, LIFT SOLENOID
벨브

49.113 LIFT SECTION, HYDRAULIC VALVE
리프트섹션

49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀실킷
49.197	SPOOL SEAL KIT, TILT SECTION 스풀실킷

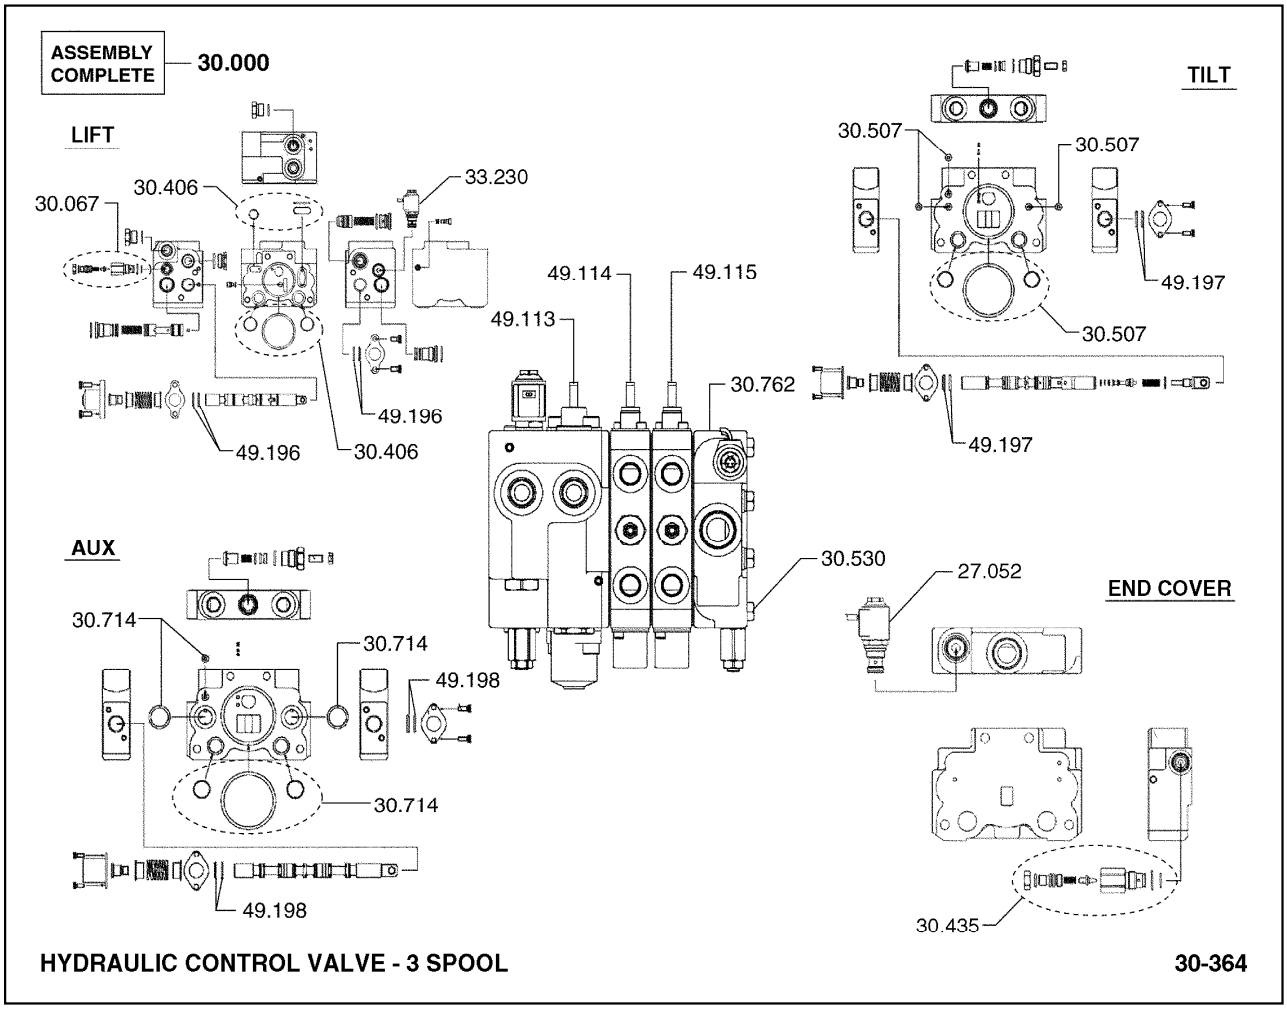

27.052 VALVE ASSEMBLY, AUXILIARY SOLENOID
벨브

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.067 RELIEF VALVE KIT, VALVE INLET SECTION
릴리프밸브

30.406 SEAL KIT, HYDRAULIC VALVE (LIFT)
시일킷

30.435 RELIEF VALVE ASSEMBLY, AUXILIARY VALVE
릴리프밸브


30.507 SEAL KIT, HYDRAULIC VALVE (TILT)
시일킷

30.530 FASTENER, VALVE THRU
패스너

30.714 SEAL KIT, HYDRAULIC VALVE SECTION (AUX)
시일킷

30.762 END COVER, HYDRAULIC VALVE
엔드커버

33.230	VALVE ASSEMBLY, LIFT SOLENOID 벨브
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀실킷
49.197	SPOOL SEAL KIT, TILT SECTION 스풀실킷
49.198	SPOOL SEAL KIT, AUX SECTION 스풀실킷

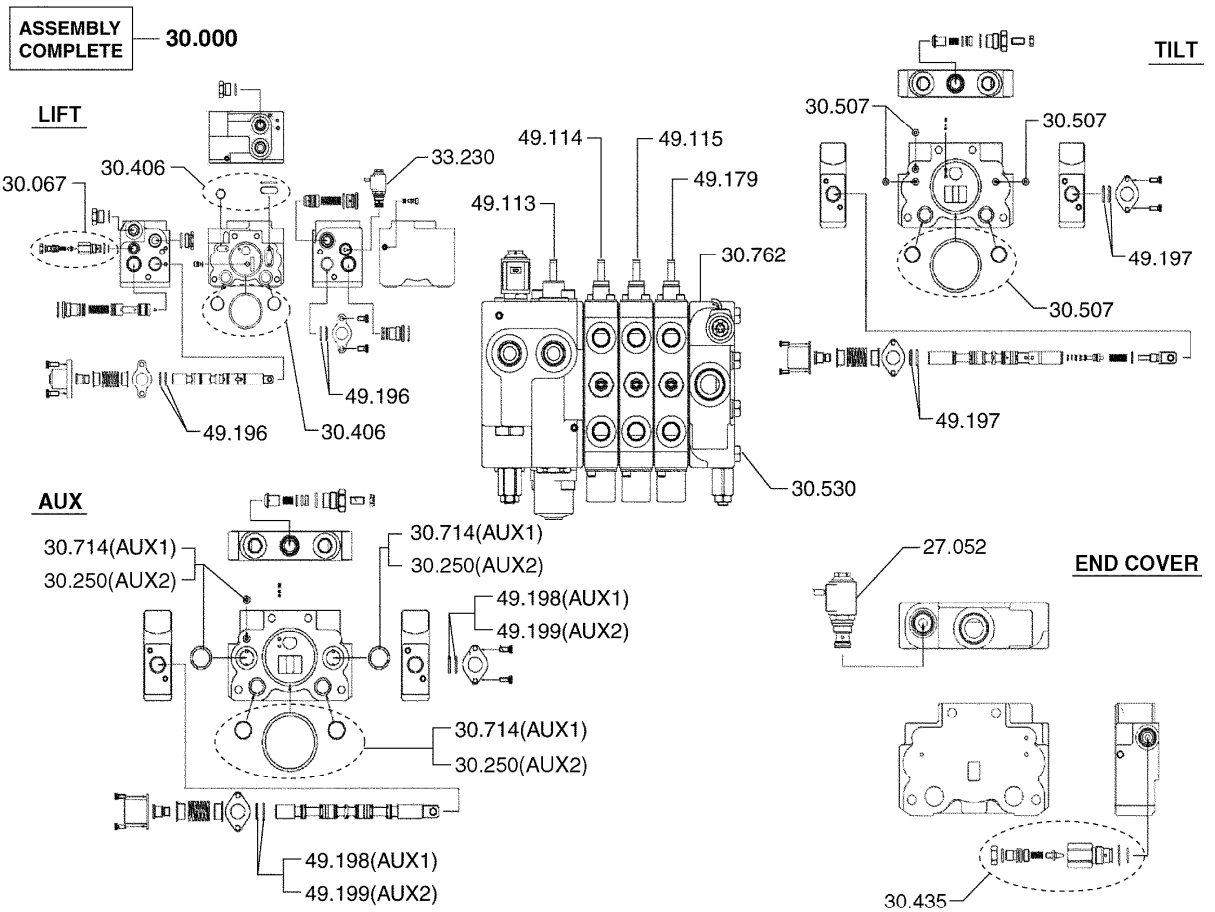

27.052 VALVE ASSEMBLY, AUXILIARY SOLENOID
벨브

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.067 RELIEF VALVE KIT, VALVE INLET SECTION
릴리프밸브

30.250 SEAL KIT, HYDRAULIC VALVE SECTION (AUX)
시일킷

30.406 SEAL KIT, HYDRAULIC VALVE (LIFT)
시일킷

30.435 RELIEF VALVE ASSEMBLY, AUXILIARY VALVE
릴리프밸브

30.507 SEAL KIT, HYDRAULIC VALVE (TILT)
시일킷

30.530 FASTENER, VALVE THRU
패스너

30.714 SEAL KIT, HYDRAULIC VALVE SECTION (AUX)
시일킷

30.762 END COVER, HYDRAULIC VALVE
엔드커버

33.230 VALVE ASSEMBLY, LIFT SOLENOID
벨브

49.113 LIFT SECTION, HYDRAULIC VALVE
리프트섹션

49.114 TILT SECTION, HYDRAULIC VALVE
틸트섹션

49.115 AUX SECTION, HYDRAULIC VALVE
보조섹션


49.179 AUX SECTION, HYDRAULIC VALVE
보조섹션

49.196 SPOOL SEAL KIT, LIFT SECTION
스풀실킷

49.197 SPOOL SEAL KIT, TILT SECTION
스풀실킷

49.198 SPOOL SEAL KIT, AUX SECTION
스풀실킷


49.199 SPOOL SEAL KIT, AUX SECTION
스풀실킷

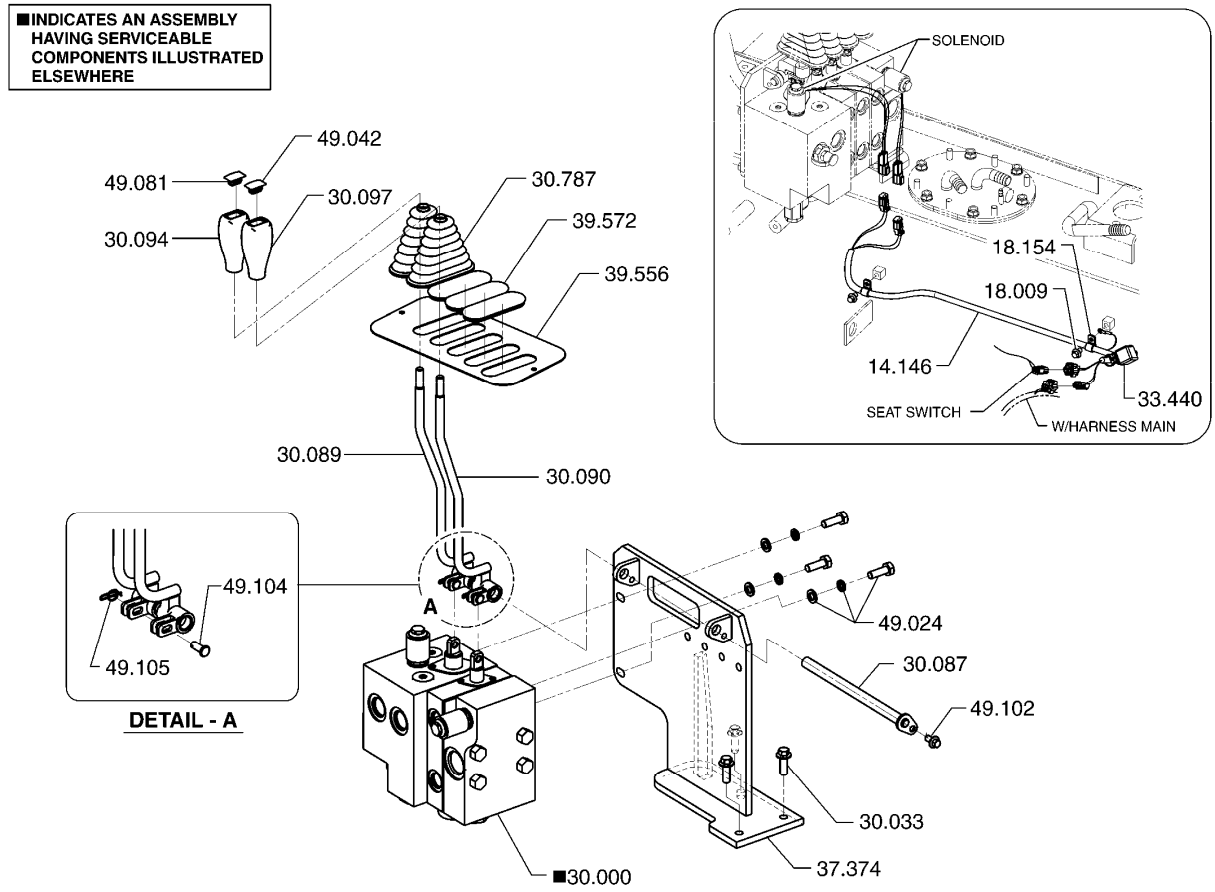

HYDRAULIC VALVE MOUNTING (2SPOOL) **30-397**

14.146	HARNESS, VALVE SWITCH WIRING 하네스
18.009	FASTENER, HARNESS CLIP 패스너
18.154	CLAMP, WIRING HARNESS HYDROSTATIC CONTROL 클램프
30.000	VALVE ASSEMBLY, HYDRAULIC 벨브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브

30.097	KNOB, TILT CONTROL LEVER 노브
30.787	BOOT, VALVE CONTROL LEVER 부트
33.440	RELAY, SOLENOID VALVE 릴레이
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너

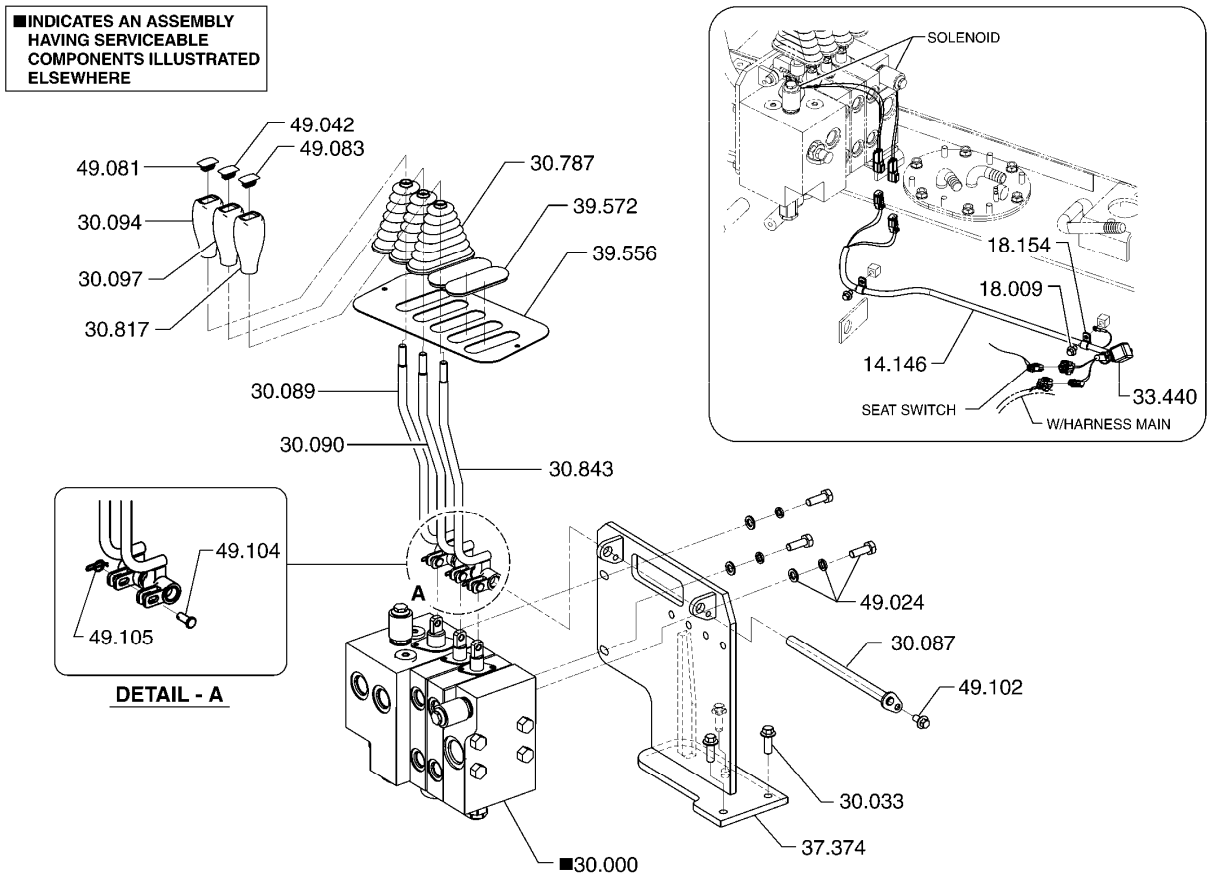

14.146 HARNESS, VALVE SWITCH WIRING
하네스

18.009 FASTENER, HARNESS CLIP
패스너

18.154 CLAMP, WIRING HARNESS HYDROSTATIC CONTROL
클램프

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너


30.087 PIN, VALVE CONTROL LEVER PIVOT
핀

30.089 LEVER, LIFT CONTROL
레버

30.094 KNOB, LIFT CONTROL LEVER
노브

30.097 KNOB, TILT CONTROL LEVER
노브

30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
33.440	RELAY, SOLENOID VALVE 릴레이
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너

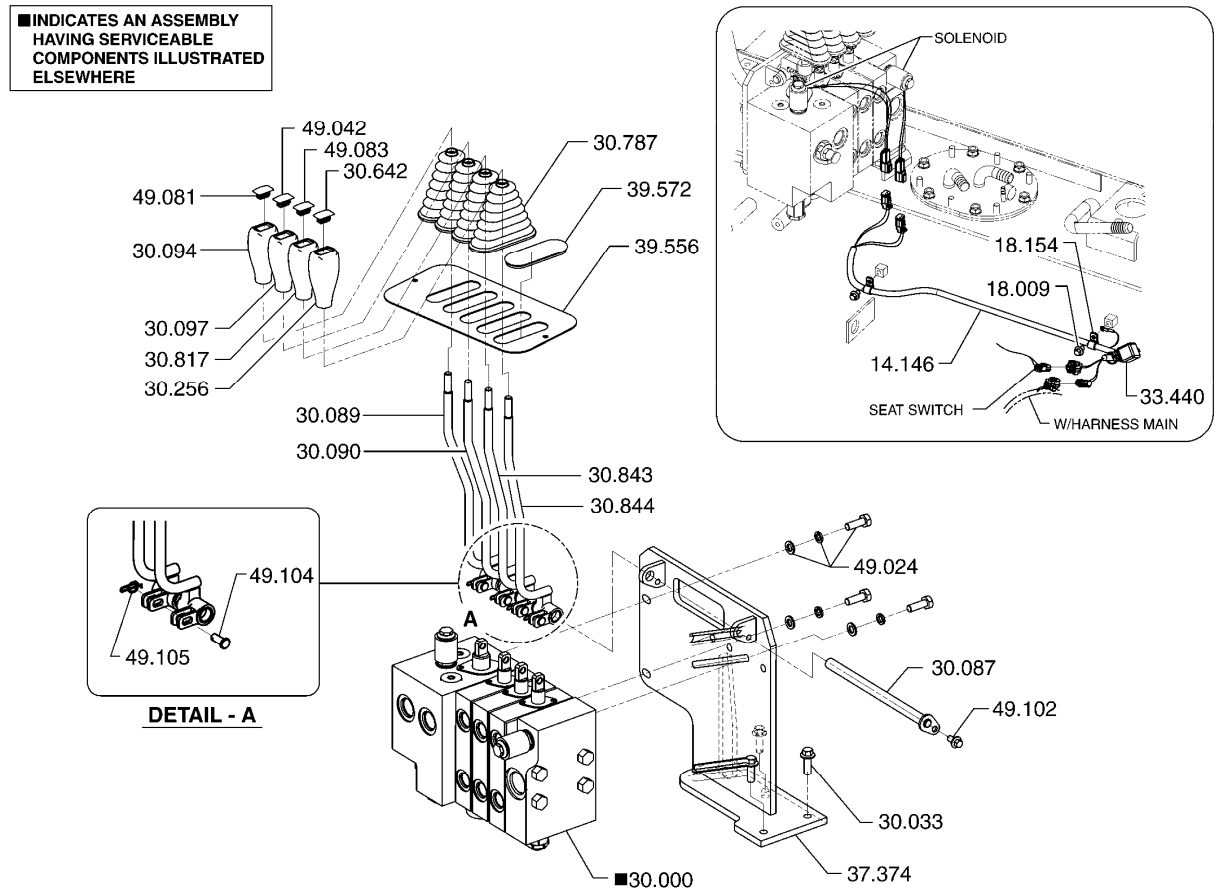

14.146 HARNESS, VALVE SWITCH WIRING
하네스

18.009 FASTENER, HARNESS CLIP
패스너

18.154 CLAMP, WIRING HARNESS HYDROSTATIC CONTROL
클램프

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너


30.087 PIN, VALVE CONTROL LEVER PIVOT
핀

30.089 LEVER, LIFT CONTROL
레버

30.090 LEVER, TILT CONTROL
레버

30.094 KNOB, LIFT CONTROL LEVER
노브

30.097	KNOB, TILT CONTROL LEVER 노브
30.256	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.642	CAP, AUXILIARY VALVE SPOOL 캡
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
33.440	RELAY, SOLENOID VALVE 릴레이
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너

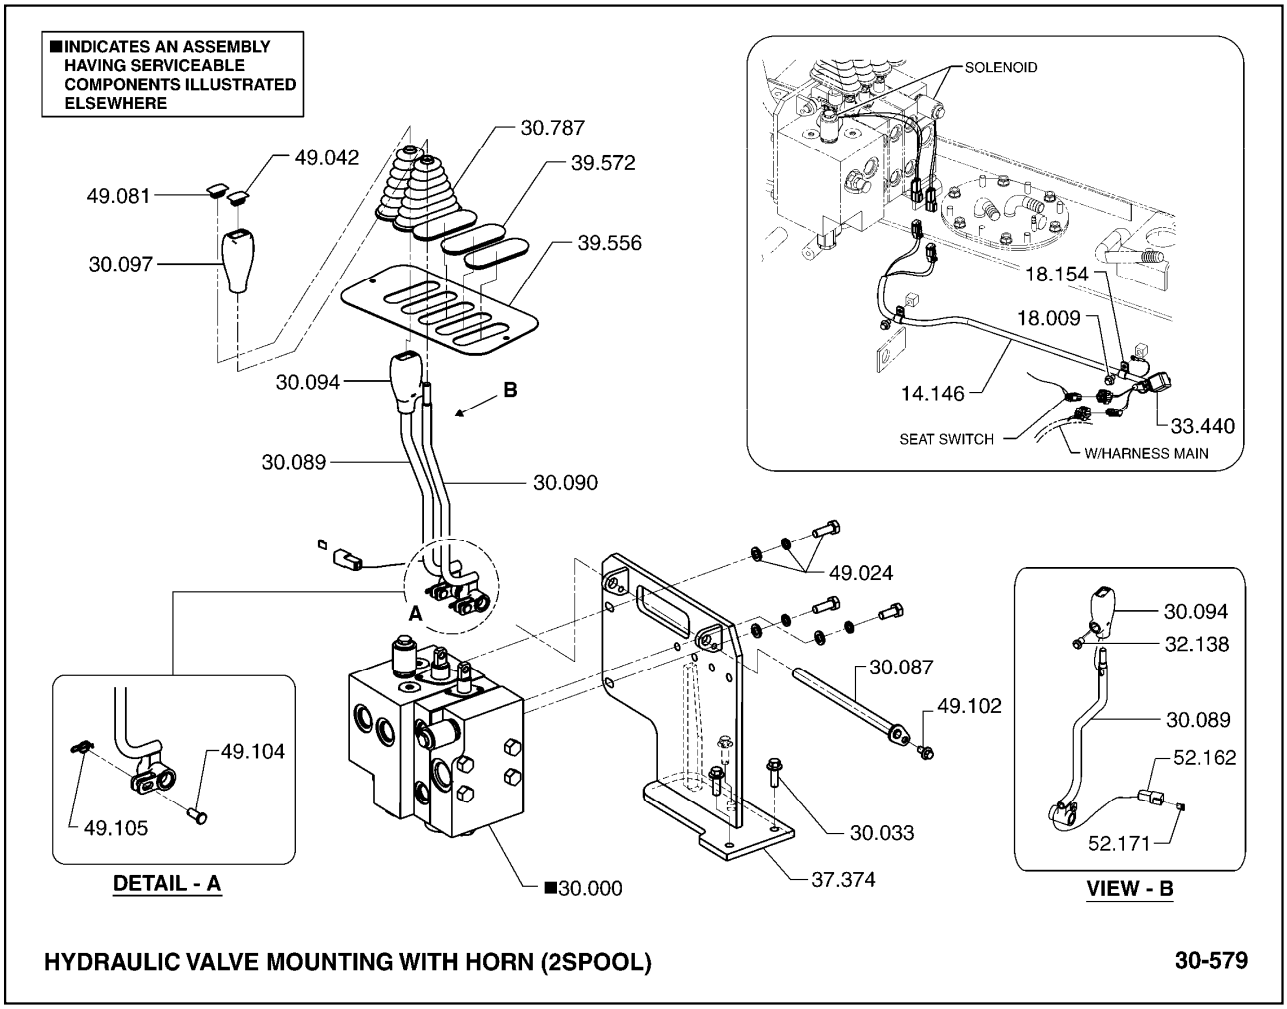

14.146 HARNESS, VALVE SWITCH WIRING
하네스

18.009 FASTENER, HARNESS CLIP
패스너

18.154 CLAMP, WIRING HARNESS HYDROSTATIC CONTROL
클램프

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너


30.087 PIN, VALVE CONTROL LEVER PIVOT
핀

30.089 LEVER, LIFT CONTROL
레버

30.090 LEVER, TILT CONTROL
레버

30.094 KNOB, LIFT CONTROL LEVER
노브

30.097	KNOB, TILT CONTROL LEVER 노브
30.787	BOOT, VALVE CONTROL LEVER 부트
32.138	SWITCH, PUSH BUTTON 스위치
33.440	RELAY, SOLENOID VALVE 릴레이
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터
52.171	LOCK, AUXILIARY VALVE LEVER WIRE *

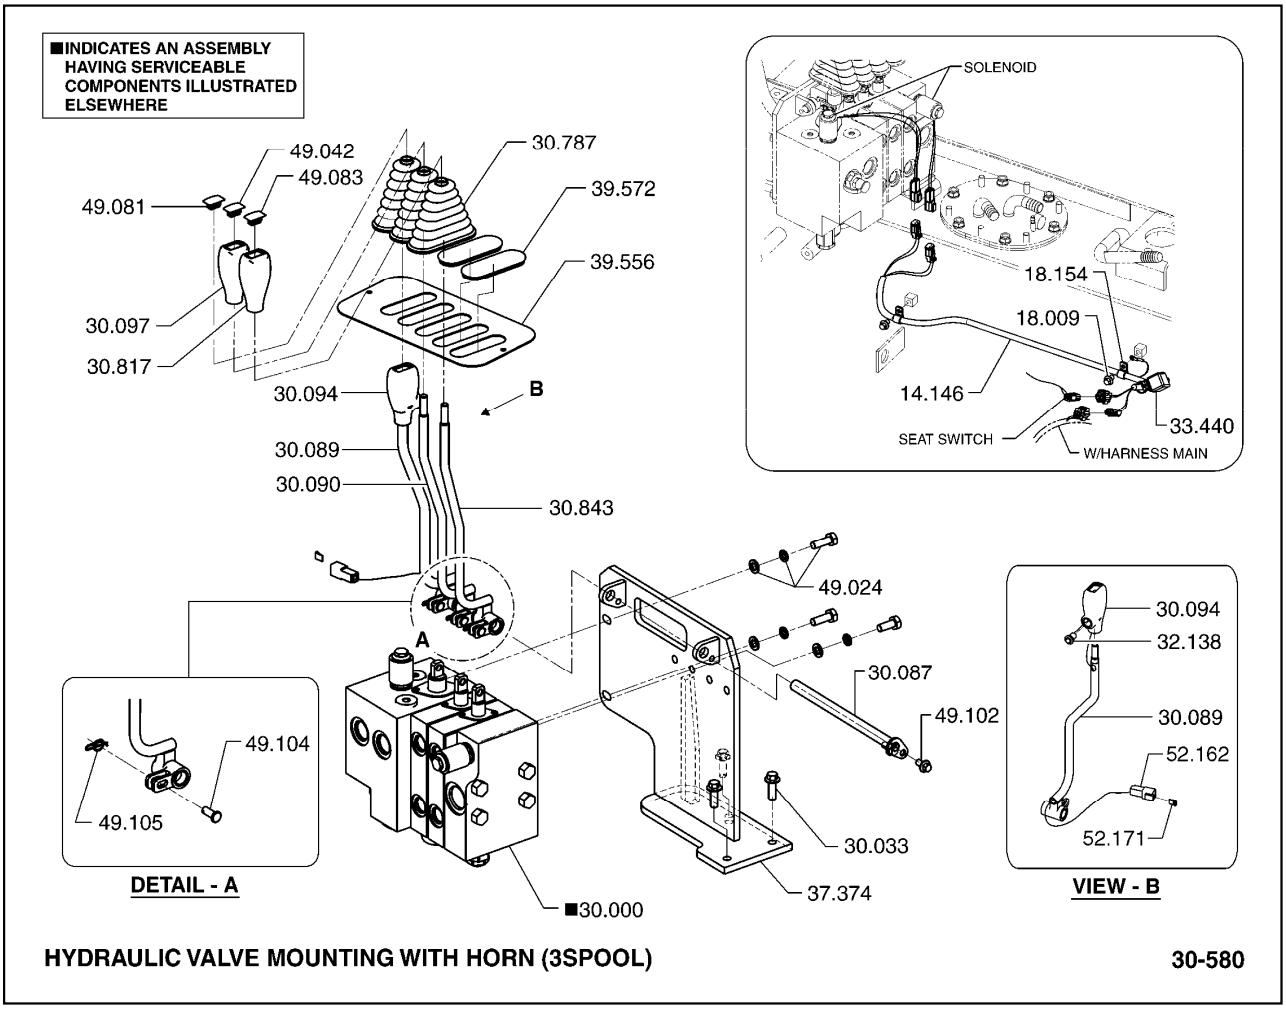

14.146 HARNESS, VALVE SWITCH WIRING
하네스

18.009 FASTENER, HARNESS CLIP
패스너

18.154 CLAMP, WIRING HARNESS HYDROSTATIC CONTROL
클램프

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너


30.087 PIN, VALVE CONTROL LEVER PIVOT
핀

30.089 LEVER, LIFT CONTROL
레버

30.090 LEVER, TILT CONTROL
레버


30.094 KNOB, LIFT CONTROL LEVER
노브

30.097	KNOB, TILT CONTROL LEVER 노브
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
32.138	SWITCH, PUSH BUTTON 스위치
33.440	RELAY, SOLENOID VALVE 릴레이
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터
52.171	LOCK, AUXILIARY VALVE LEVER WIRE *

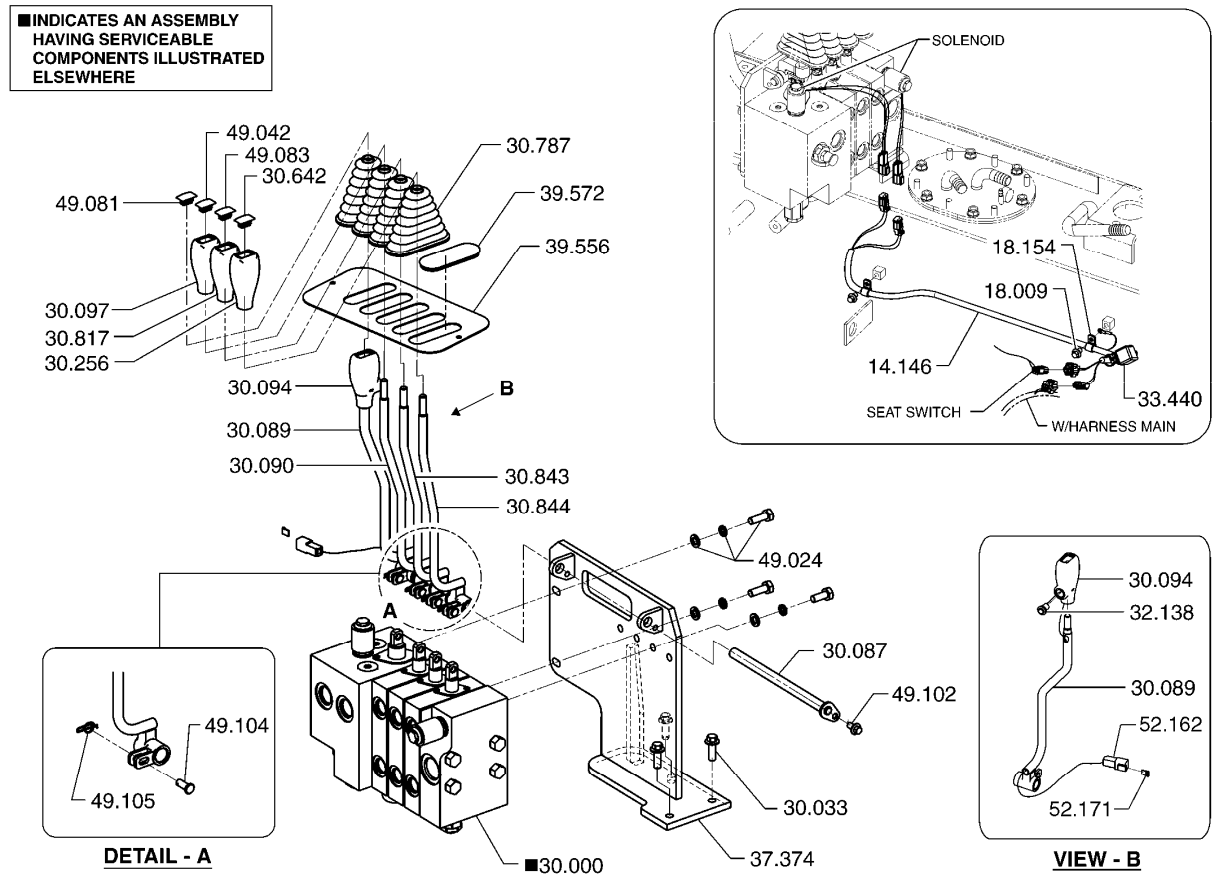

HYDRAULIC VALVE MOUNTING WITH HORN (4SPOOL) **30-581**

14.146	HARNESS, VALVE SWITCH WIRING 하네스	30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
18.009	FASTENER, HARNESS CLIP 패스너	32.138	SWITCH, PUSH BUTTON 스위치
18.154	CLAMP, WIRING HARNESS HYDROSTATIC CONTROL 클램프	33.440	RELAY, SOLENOID VALVE 릴레이
30.000	VALVE ASSEMBLY, HYDRAULIC 벨브	37.374	COVER, HYDRAULIC VALVE 커버
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너	39.556	COVER, VALVE LINKAGE ACCESS 커버
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀	39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
30.089	LEVER, LIFT CONTROL 레버	49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
30.090	LEVER, TILT CONTROL 레버	49.042	CAP, TILT CONTROL LEVER 캡
30.094	KNOB, LIFT CONTROL LEVER 노브	49.081	CAP, LIFT CONTROL LEVER 캡
30.097	KNOB, TILT CONTROL LEVER 노브	49.083	CAP, VALVE CONTROL LEVER DECAL 캡
30.256	KNOB, AUXILIARY VALVE CONTROL LEVER 노브	49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
30.642	CAP, AUXILIARY VALVE SPOOL 캡	49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
30.787	BOOT, VALVE CONTROL LEVER 부트	49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브	52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버	52.171	LOCK, AUXILIARY VALVE LEVER WIRE *

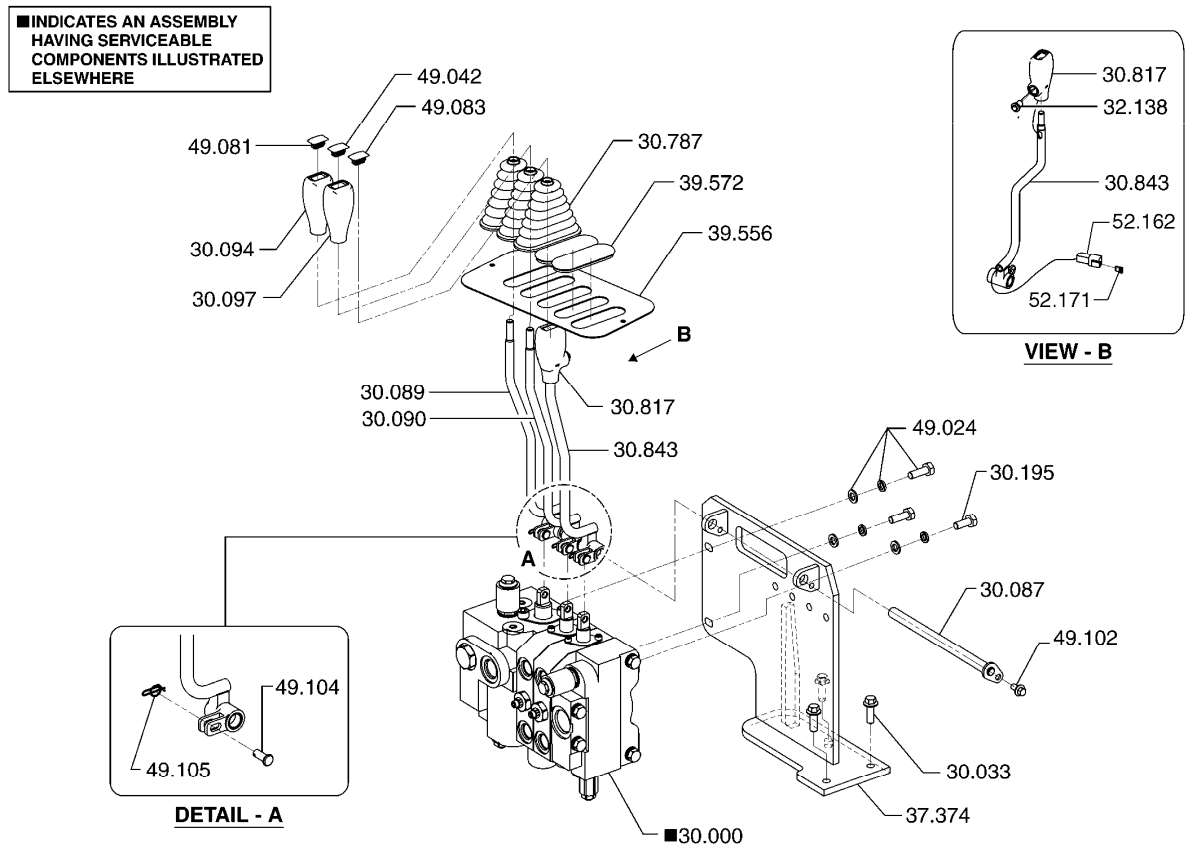

HYDRAULIC CONTROL 3-SPOOL VALVE MOUNTING (PUSH BUTTON) **30-582**

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너

30.087 PIN, VALVE CONTROL LEVER PIVOT
핀

30.089 LEVER, LIFT CONTROL
레버

30.090 LEVER, TILT CONTROL
레버


30.094 KNOB, LIFT CONTROL LEVER
노브

30.097 KNOB, TILT CONTROL LEVER
노브

30.195 CAPSCREW, HYDRAULIC VALVE MOUNTING
캡스크류

30.787 BOOT, VALVE CONTROL LEVER
부트

30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
32.138	SWITCH, PUSH BUTTON 스위치
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터
52.171	LOCK, AUXILIARY VALVE LEVER WIRE *

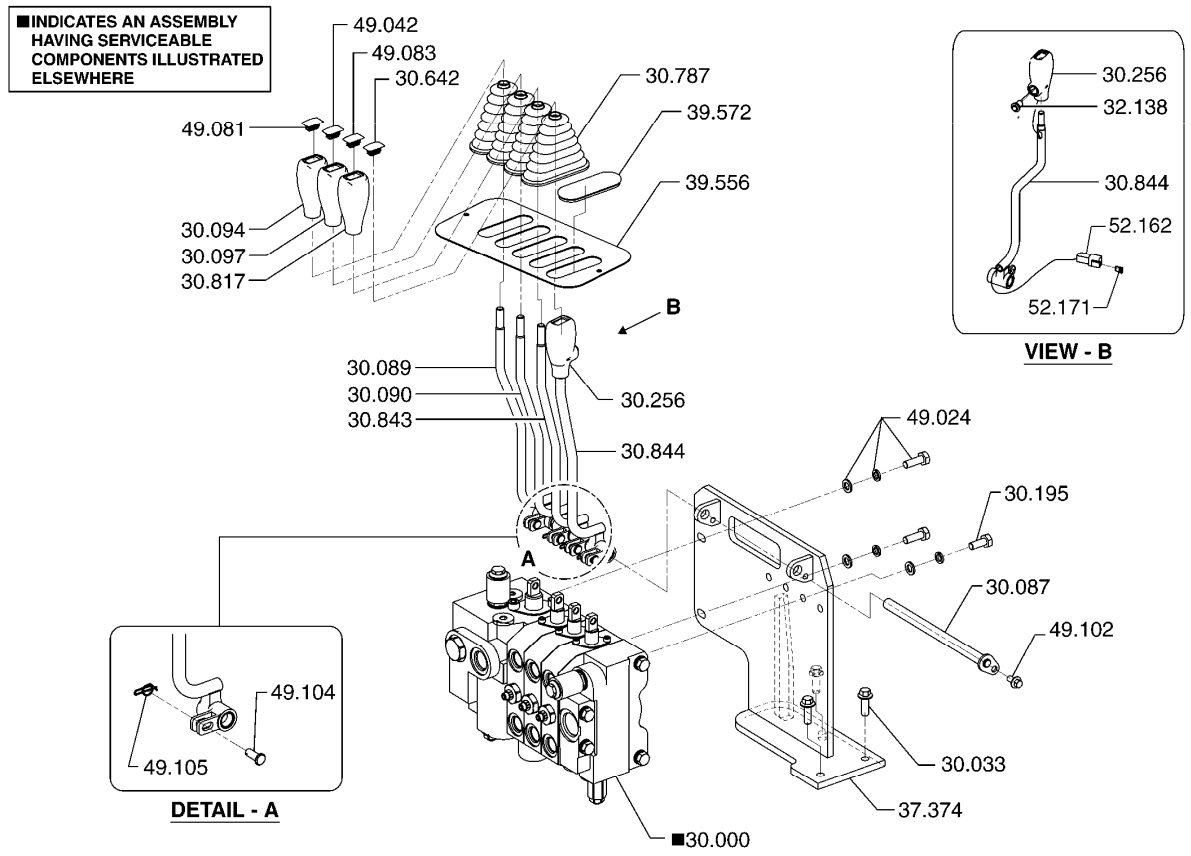

30.000 VALVE ASSEMBLY, HYDRAULIC
벨브

30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너

30.087 PIN, VALVE CONTROL LEVER PIVOT
핀

30.089 LEVER, LIFT CONTROL
레버

30.090 LEVER, TILT CONTROL
레버


30.094 KNOB, LIFT CONTROL LEVER
노브

30.097 KNOB, TILT CONTROL LEVER
노브

30.195 CAPSCREW, HYDRAULIC VALVE MOUNTING
캡스크류

30.256 KNOB, AUXILIARY VALVE CONTROL LEVER
노브

30.642	CAP, AUXILIARY VALVE SPOOL 캡
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
32.138	SWITCH, PUSH BUTTON 스위치
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터
52.171	LOCK, AUXILIARY VALVE LEVER WIRE *

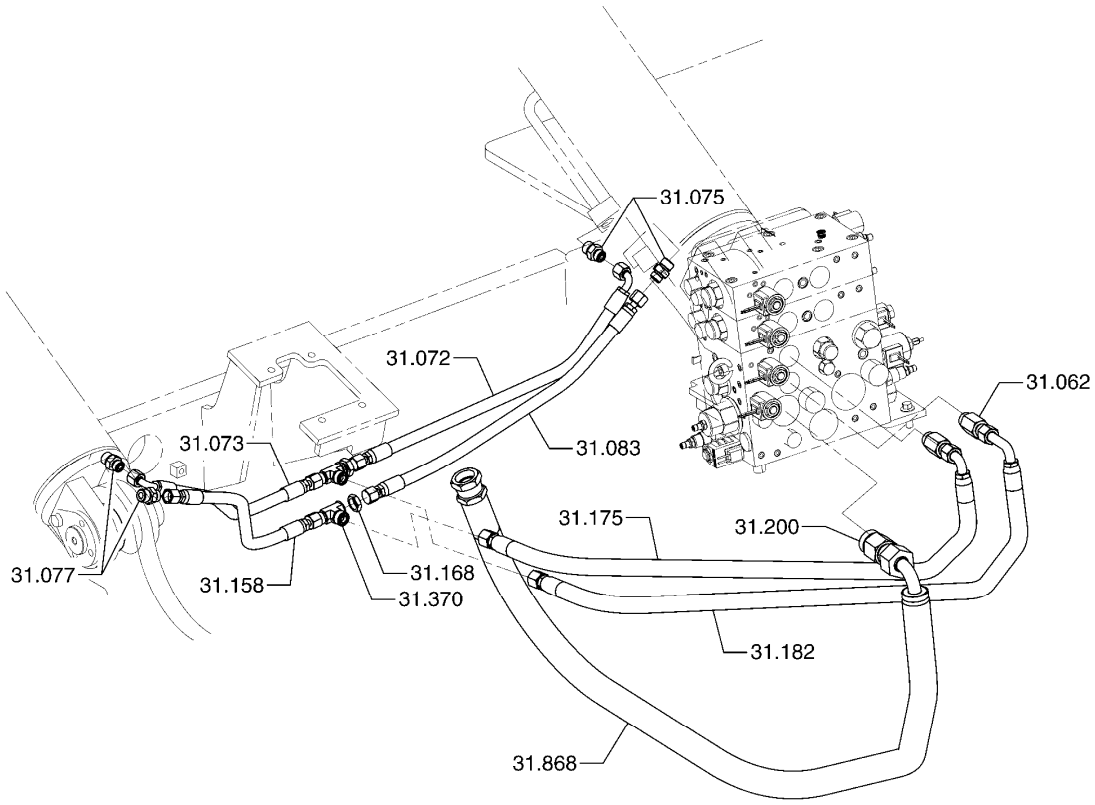

HYDRAULIC LIFT & TILT LINES **31-082**

31.062 FITTING, VALVE TILT PORT "B"
피팅

31.072 LINE, RH TILT CYLINDER ROD PORT
라인

31.073 LINE, LH TILT CYLINDER ROD PORT
라인

31.075 FITTING, RH TILT CYLINDER ROD PORT
피팅

31.077 FITTING, LH TILT CYLINDER ROD PORT
피팅


31.083 LINE, RH TILT CYLINDER ANCHOR PORT
라인

31.158 LINE, LH TILT CYLINDER ANCHOR PORT
라인

31.168 FASTENER, TILT LINE CLAMP
패스너

31.175 LINE, VALVE TILT PORT "B"
라인

31.182	LINE, VALVE TILT PORT "A" 라인
31.200	FITTING, MAIN VALVE LIFT PORT 피팅
31.370	FITTING, TILT CYLINDER ROD PORT LINE 피팅
31.868	LINE, MAIN VALVE LIFT 라인

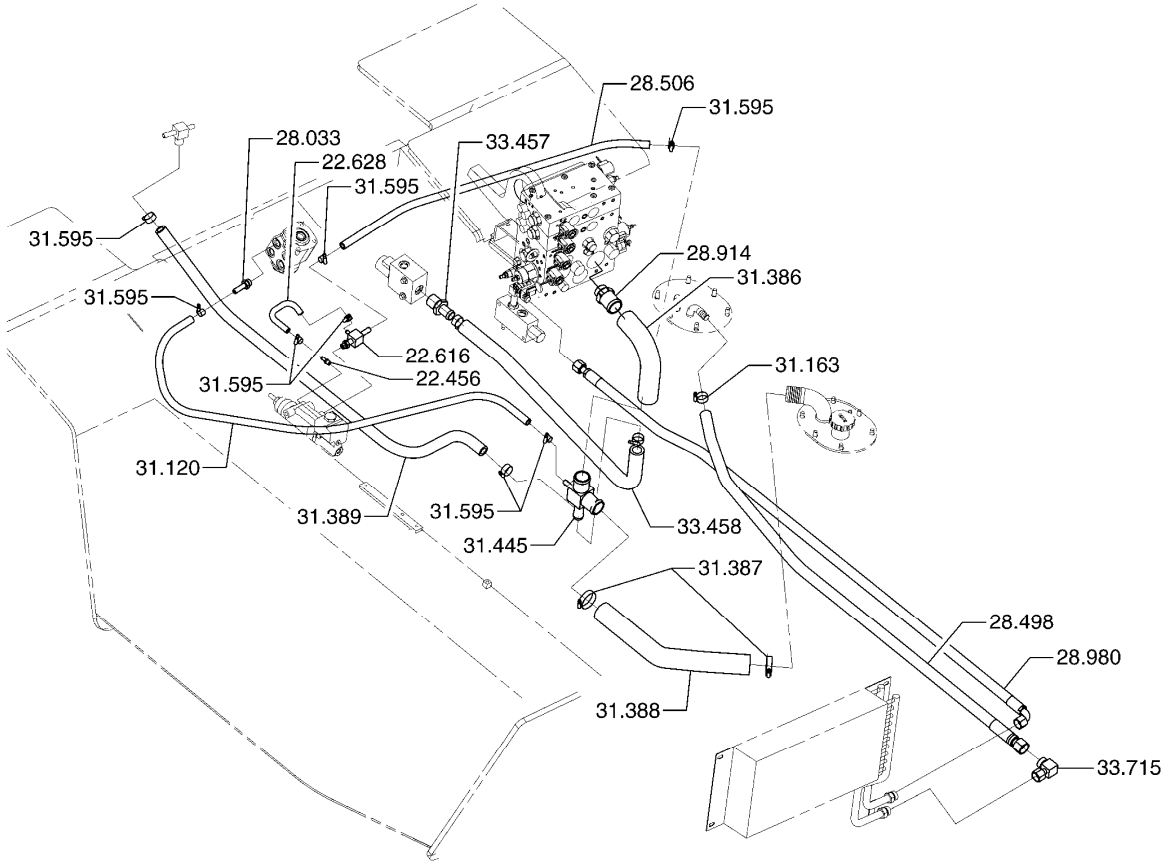

HYDRAULIC RETURN LINES **31-100**

22.456 BALL, INCHING CHECK VALVE SPRING
볼

22.616 FITTING, BRAKE ENERGIZER SUMP RETURN LINE
피팅

22.628 LINE, BRAKE LINE RETURN TO SUMP
라인

28.033 FITTING, SUMP RETURN
피팅

28.498 LINE, SUMP RETURN
라인

28.506 LINE, SUMP RETURN
라인

28.914 FITTING, VALVE SUMP RETURN PORT
피팅

28.980 HOSE, CONTROL MODULE TO OIL COOLING LINE
호스

31.120 LINE, SUMP RETURN (POWER STEERING)
라인

31.163 CLAMP, SUMP RETURN LINE
클램프

31.386 LINE, VALVE TO SUMP RETURN
라인

31.387 CLAMP, MAIN VALVE TO SUMP LINE
클램프

31.388 LINE, VALVE SUMP RETURN
라인

31.389 LINE, VALVE SUMP RETURN
라인


31.445 FITTING, MAIN VALVE TO FILTER LINE
피팅

31.595 CLAMP, SUMP RETURN LINE FITTING
클램프

33.457 FITTING, UNLOADING VALVE OUTLET LINE
피팅

33.458 LINE, UNLOADING VALVE OUTLET
라인

33.715 FITTING, SUMP RETURN LINE
피팅

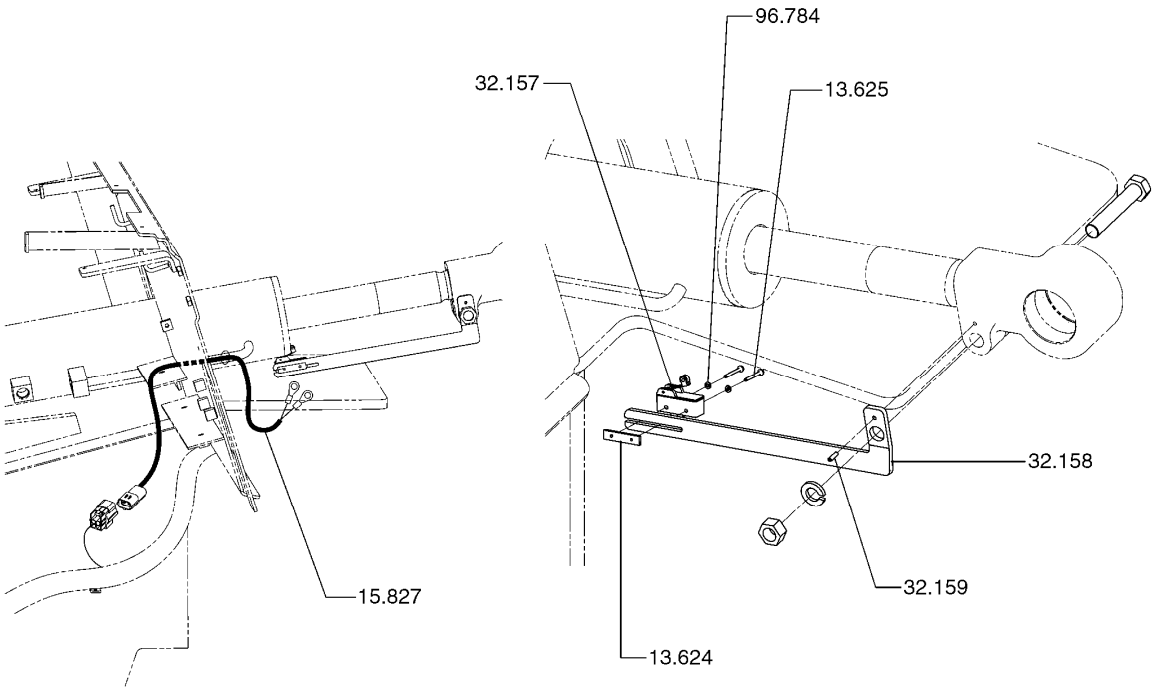

TILT LIMIT WITH OVERRIDE **31-181**

13.624 BRACKET, TILT LIMIT SWITCH
브라켓

13.625 FASTENER, TILT LIMIT SWITCH
패스너


15.827 WIRE, TILT LIMIT SWITCH
*

32.157 SWITCH, TILT LIMIT
스위치

32.158 BRACKET, TILT LIMIT SWITCH
브라켓

32.159 RETAINER, TILT LIMIT SWITCH BRACKET
리테이너


96.784 WASHER, TILT LIMIT SWITCH FASTENER
와셔

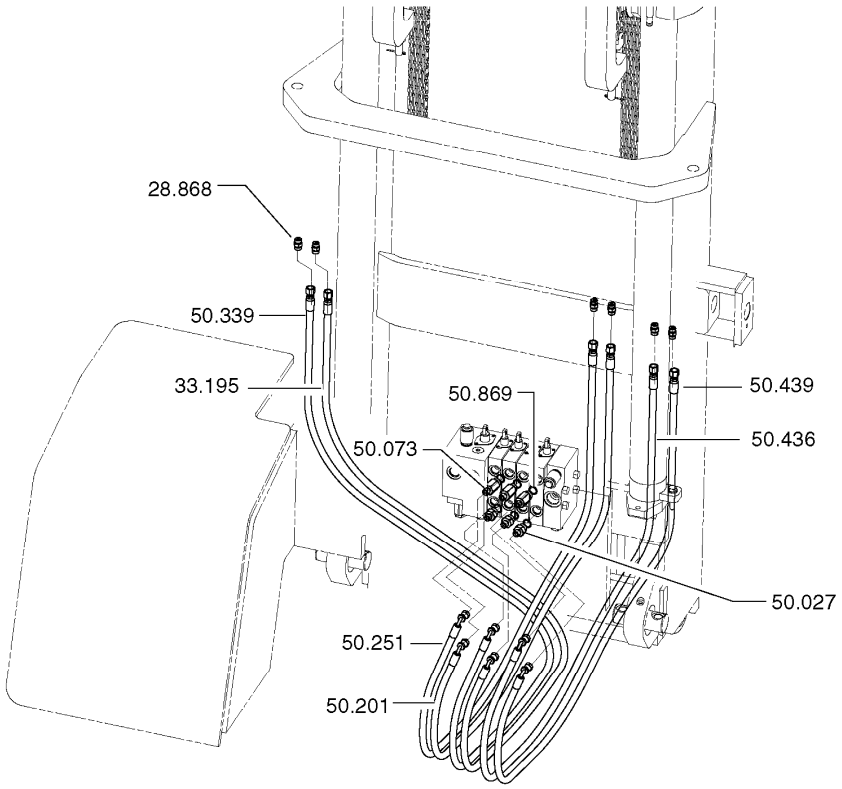

AUX VALVE PLUMBING (TRIPPLE) **31-242**


28.868	FITTING, AUXILIARY VALVE 피팅
33.195	LINE, DEVICE RH 라인
50.027	FITTING, 1ST AUXILIARY VALVE A PORT 피팅
50.073	FITTING, 2ND AUXILIARY VALVE "B" PORT 피팅
50.201	LINE, DEVICE 라인
50.251	LINE, DEVICE 라인
50.339	LINE, DEVICE LH 라인
50.436	LINE, 3RD AUXILIARY VALVE "B" PORT 라인
50.439	LINE, 3RD AUXILIARY VALVE "B" PORT 라인

50.869 SEAL, AUXILIARY VALVE B PORT
시일

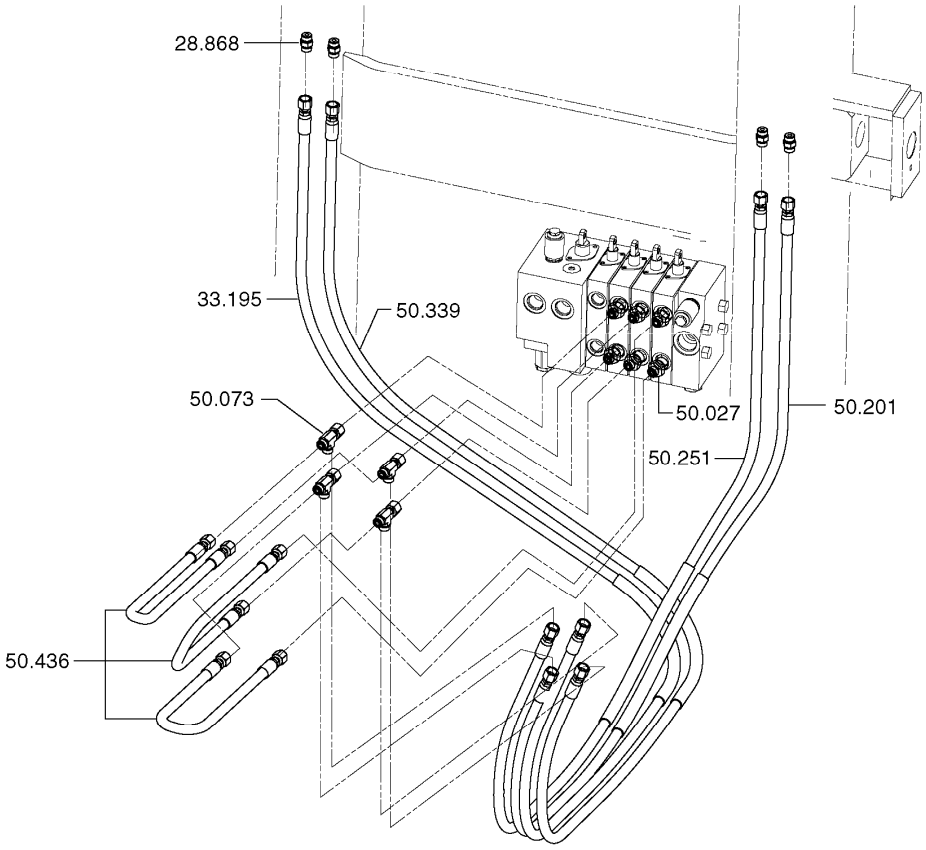

AUX VALVE PLUMBING (TRIPPLE) **31-243**

28.868	FITTING, AUXILIARY VALVE 피팅
33.195	LINE, DEVICE RH 라인
50.027	FITTING, 1ST AUXILIARY VALVE A PORT 피팅
50.073	FITTING, 2ND AUXILIARY VALVE "B" PORT 피팅
50.201	LINE, DEVICE 라인
50.251	LINE, DEVICE 라인
50.339	LINE, DEVICE LH 라인
50.436	LINE, 3RD AUXILIARY VALVE "B" PORT 라인

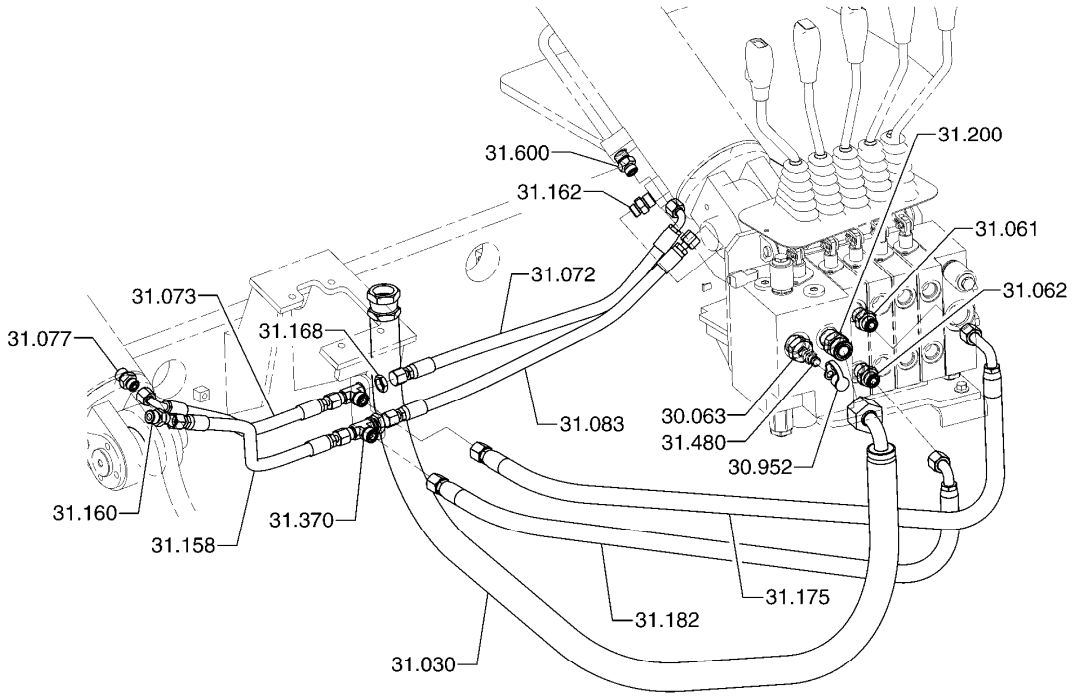

HYDRAULIC LIFT & TILT LINES **31-315**

30.063 PLUG, INLET SECTION PRESSURE PORT
플러그

30.952 DUST CAP, PRESSURE GAUGE PORT FITTING
더스트캡

31.030 LINE, VALVE TO LIFT CYLINDER
라인

31.061 FITTING, VALVE TILT PORT "A"
피팅

31.062 FITTING, VALVE TILT PORT "B"
피팅

31.072 LINE, RH TILT CYLINDER ROD PORT
라인

31.073 LINE, LH TILT CYLINDER ROD PORT
라인

31.077 FITTING, LH TILT CYLINDER ROD PORT
피팅

31.083 LINE, RH TILT CYLINDER ANCHOR PORT
라인

31.158 LINE, LH TILT CYLINDER ANCHOR PORT
라인

31.160 FITTING, LH TILT CYLINDER ANCHOR PORT
피팅

31.162 FITTING, RH TILT CYLINDER ANCHOR PORT
피팅

31.168 FASTENER, TILT LINE CLAMP
패스너

31.175 LINE, VALVE TILT PORT "B"
라인


31.182 LINE, VALVE TILT PORT "A"
라인

31.200 FITTING, MAIN VALVE LIFT PORT
피팅

31.370 FITTING, TILT CYLINDER ROD PORT LINE
피팅

31.480 PLUG, PRESSURE GAUGE PORT
플러그

31.600 FITTING, RH TILT CYLINDER ROD PORT
피팅

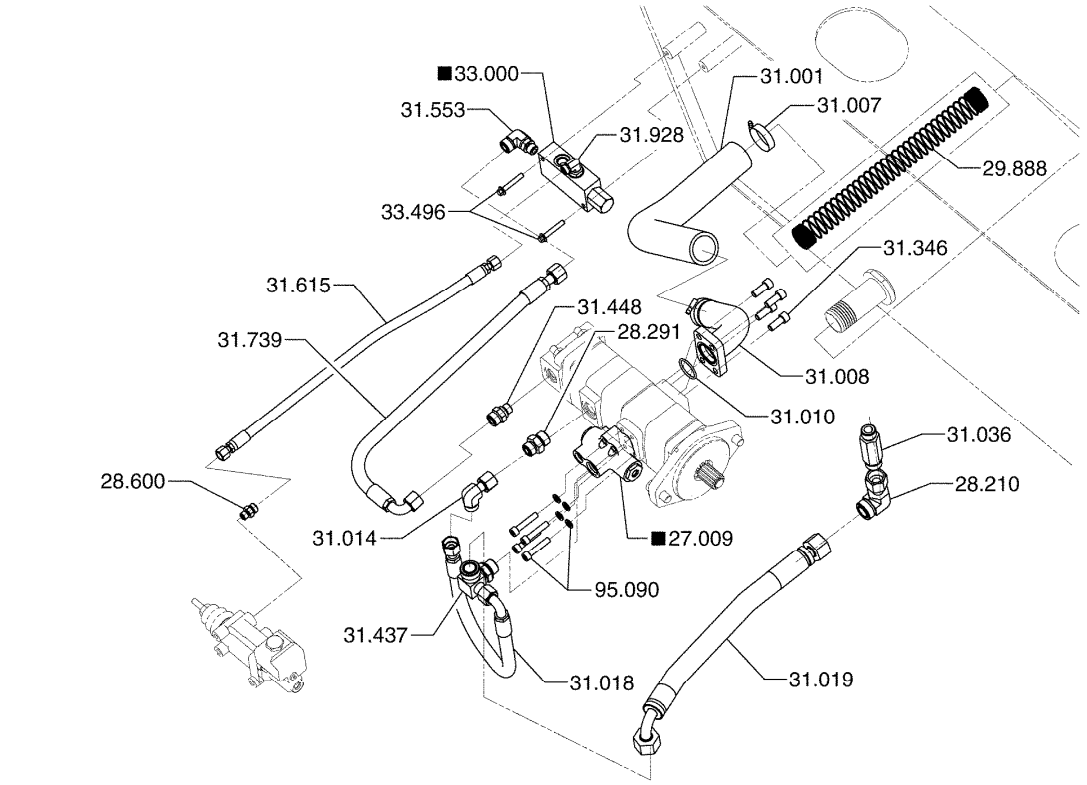

HYDRAULIC SUPPLY LINES **31-316**

27.009 VALVE ASSEMBLY, HYDRAULIC PRIORITY
벨브

28.210 FITTING, MAIN VALVE INLET LINE
피팅

28.291 FITTING, PUMP OUTLET
피팅

28.600 FITTING, FLOW CONTROL VALVE OUTLET PORT
피팅

29.888 SPRING, HYDRAULIC SUMP
스프링


31.001 LINE, SUMP OUTLET
라인

31.007 CLAMP, PUMP INLET LINE
클램프

31.008 FITTING, PUMP INLET
피팅

31.010 SEAL, PUMP INLET PORT
시일

31.014	FITTING, PUMP OUTLET 피팅
31.018	LINE, PUMP OUTLET 라인
31.019	LINE, VALVE INLET 라인
31.036	FITTING, MAIN VALVE INLET PORT 피팅
31.346	FASTENER, PUMP INLET PORT FITTING 패스너
31.437	FITTING, VALVE INLET LINE 피팅
31.448	FITTING, PUMP OUTLET LINE 피팅
31.553	FITTING, FLOW CONTROL HIGH PRESS OUTLET 피팅
31.615	LINE, FLOW CONTROL OUTLET 라인
31.739	LINE, AUXILIARY PUMP OUTLET 라인
31.928	FITTING, FLOW CONTROL VALVE 피팅
33.000	VALVE ASSEMBLY, FLOW CONTROL 벨브
33.496	FASTENER, FLOW CONTROL VALVE MOUNTING BRACKET 패스너
95.090	FASTENER, HYDRAULIC PRIORITY VALVE 패스너

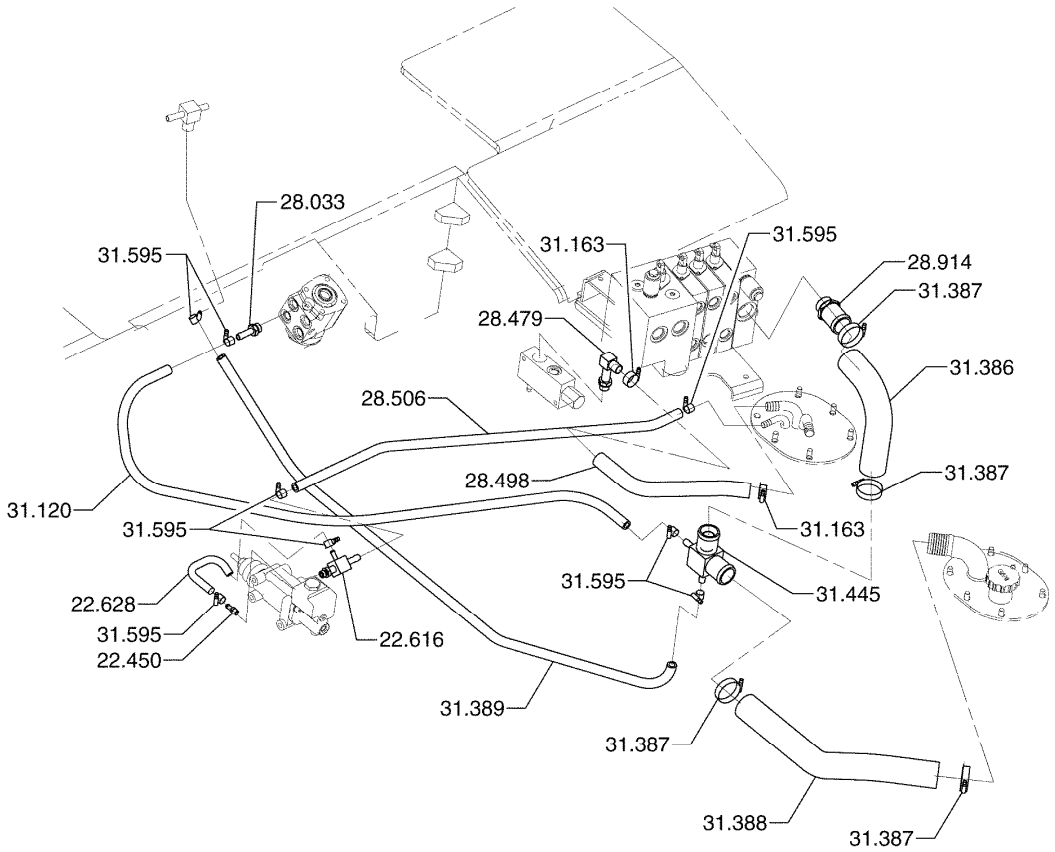

HYDRAULIC RETURN LINES **31-317**

22.450 FITTING, BRAKE MASTER CYLINDER FILLER RETURN LINE
피팅

22.616 FITTING, BRAKE ENERGIZER SUMP RETURN LINE
피팅

22.628 LINE, BRAKE LINE RETURN TO SUMP
라인

28.033 FITTING, SUMP RETURN
피팅

28.479 FITTING, FLOW CONTROL OUTLET PORT
피팅

28.498 LINE, SUMP RETURN
라인

28.506 LINE, SUMP RETURN
라인

28.914 FITTING, VALVE SUMP RETURN PORT
피팅

31.120 LINE, SUMP RETURN (POWER STEERING)
라인

31.163 CLAMP, SUMP RETURN LINE
클램프

31.386 LINE, VALVE TO SUMP RETURN
라인

31.387 CLAMP, MAIN VALVE TO SUMP LINE
클램프


31.388 LINE, VALVE SUMP RETURN
라인

31.389 LINE, VALVE SUMP RETURN
라인

31.445 FITTING, MAIN VALVE TO FILTER LINE
피팅


31.595 CLAMP, SUMP RETURN LINE FITTING
클램프

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

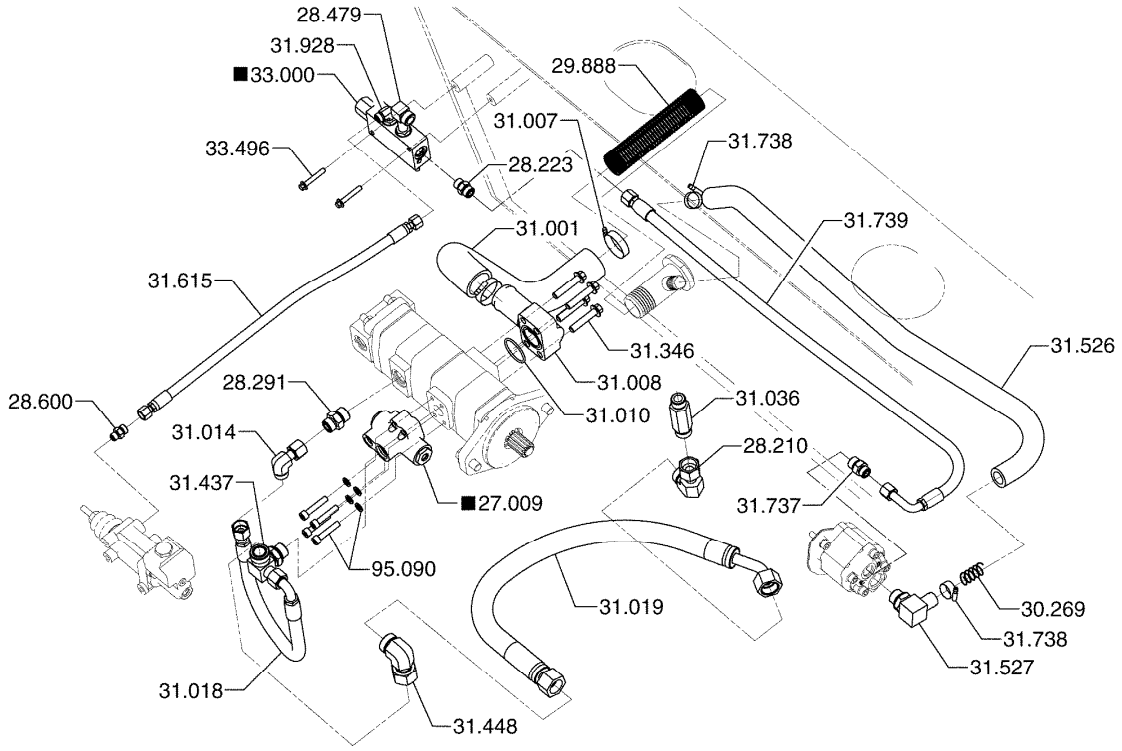

HYDRAULIC SUPPLY LINES **31-318**

27.009	VALVE ASSEMBLY, HYDRAULIC PRIORITY 벨브
28.210	FITTING, MAIN VALVE INLET LINE 피팅
28.223	FITTING, FLOW CONTROL VALVE INLET PORT 피팅
28.291	FITTING, PUMP OUTLET 피팅
28.479	FITTING, FLOW CONTROL OUTLET PORT 피팅
28.600	FITTING, FLOW CONTROL VALVE OUTLET PORT 피팅
29.888	SPRING, HYDRAULIC SUMP 스프링
30.269	SPRING, AUXILIARY INLET SECTION CHECK VALVE 스프링
31.001	LINE, SUMP OUTLET 라인
31.007	CLAMP, PUMP INLET LINE 클램프
31.008	FITTING, PUMP INLET 피팅
31.010	SEAL, PUMP INLET PORT 시일
31.014	FITTING, PUMP OUTLET 피팅
31.018	LINE, PUMP OUTLET 라인
31.019	LINE, VALVE INLET 라인
31.036	FITTING, MAIN VALVE INLET PORT 피팅
31.346	FASTENER, PUMP INLET PORT FITTING 패스너
31.437	FITTING, VALVE INLET LINE 피팅
31.448	FITTING, PUMP OUTLET LINE 피팅
31.526	LINE, AUXILIARY PUMP INLET 라인
31.527	FITTING, AUXILIARY PUMP INLET 피팅
31.615	LINE, FLOW CONTROL OUTLET 라인
31.737	FITTING, AUXILIARY SUMP OUTLET 피팅
31.738	CLAMP, AUXILIARY PUMP INLET LINE 클램프
31.739	LINE, AUXILIARY PUMP OUTLET 라인
31.928	FITTING, FLOW CONTROL VALVE 피팅
33.000	VALVE ASSEMBLY, FLOW CONTROL 벨브
33.496	FASTENER, FLOW CONTROL VALVE MOUNTING BRACKET 패스너
95.090	FASTENER, HYDRAULIC PRIORITY VALVE 패스너

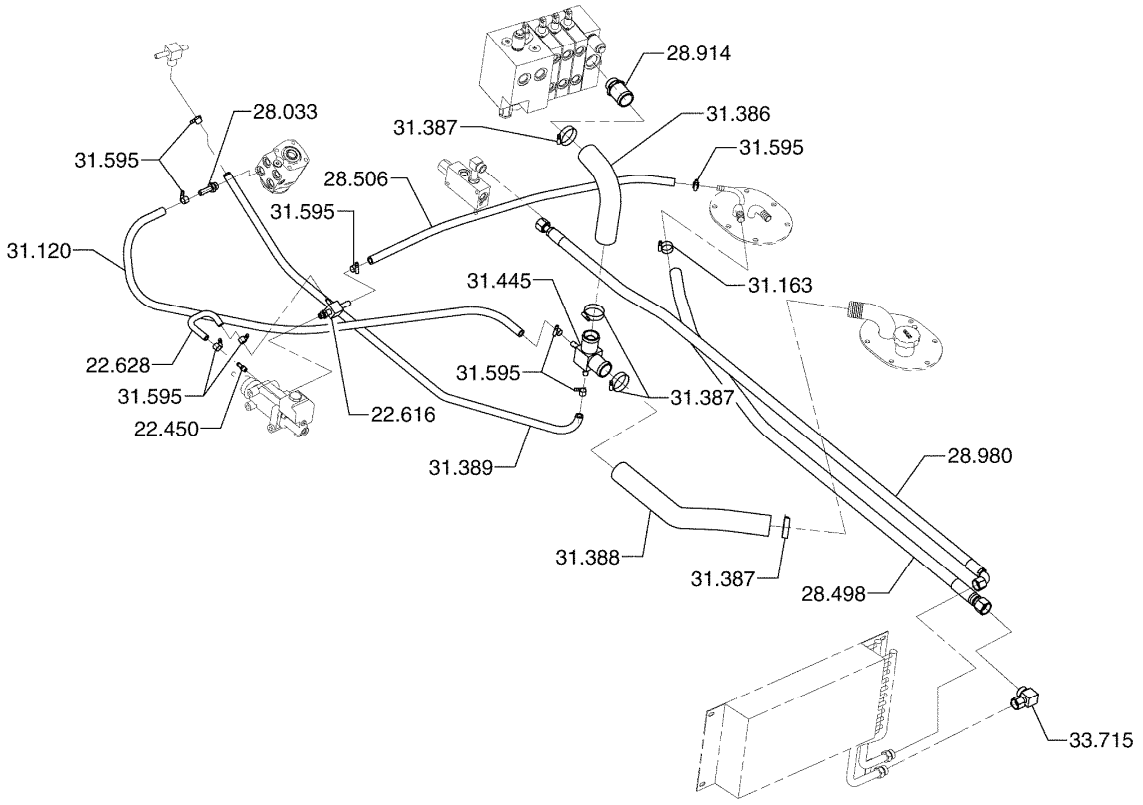

HYDRAULIC RETURN LINES **31-321**

22.450 FITTING, BRAKE MASTER CYLINDER FILLER RETURN LINE
피팅

22.616 FITTING, BRAKE ENERGIZER SUMP RETURN LINE
피팅

22.628 LINE, BRAKE LINE RETURN TO SUMP
라인

28.033 FITTING, SUMP RETURN
피팅

28.498 LINE, SUMP RETURN
라인

28.506 LINE, SUMP RETURN
라인

28.914 FITTING, VALVE SUMP RETURN PORT
피팅

28.980 HOSE, CONTROL MODULE TO OIL COOLING LINE
호스

31.120 LINE, SUMP RETURN (POWER STEERING)
라인

31.163 CLAMP, SUMP RETURN LINE
클램프

31.386 LINE, VALVE TO SUMP RETURN
라인

31.387 CLAMP, MAIN VALVE TO SUMP LINE
클램프


31.388 LINE, VALVE SUMP RETURN
라인

31.389 LINE, VALVE SUMP RETURN
라인

31.445 FITTING, MAIN VALVE TO FILTER LINE
피팅

31.595 CLAMP, SUMP RETURN LINE FITTING
클램프

33.715 FITTING, SUMP RETURN LINE
피팅

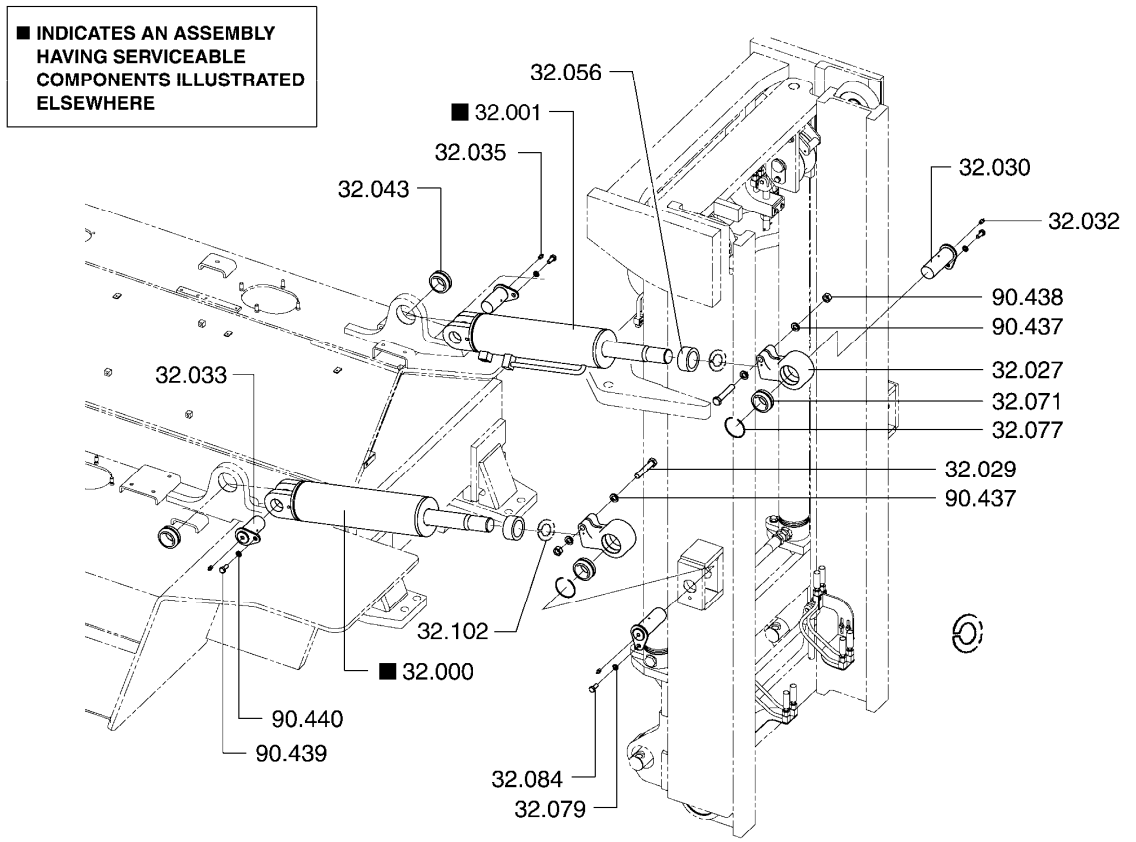

32.000 CYLINDER ASSEMBLY, TILT
실린더

32.001 TILT CYLINDER ASSEMBLY (LH)
틸트실린더

32.027 END, RH TILT CYLINDER ROD
엔드

32.029 FASTENER, TILT CYLINDER ROD END
패스너

32.030 PIN, TILT CYLINDER TO UPRIGHT
핀


32.032 FITTING, TILT CYLINDER TO UPRIGHT PIN LUB
피팅

32.033 PIN, TILT CYLINDER REAR MOUNTING RH
핀

32.035 FITTING, TILT CYLINDER TO FRAME PIN LUB
피팅

32.043 BEARING, TILT CYLINDER FRAME MOUNTING
베어링

32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.071	BEARING, TILT CYLINDER UPRIGHT MOUNTING 베어링
32.077	RETAINER, TILT CYLINDER ROD END 리테이너
32.079	LOCKWASHER, TILT CYLINDER ROD END FASTENER 로크와셔
32.084	CAPSCREW, TILT CYLINDER ROD END PIN RETAINER 캡스크류
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심
90.437	LOCKWASHER, TILT CYLINDER ROD END FASTENER 로크와셔
90.438	NUT, TILT CYLINDER ROD END FASTENER 너트
90.439	BOLT, TILT CYLINDER TO FRAME PIN LOCK 볼트
90.440	LOCKWASHER, TILT CYLINDER TO FRAME PIN LOCK FASTEN 로크와셔

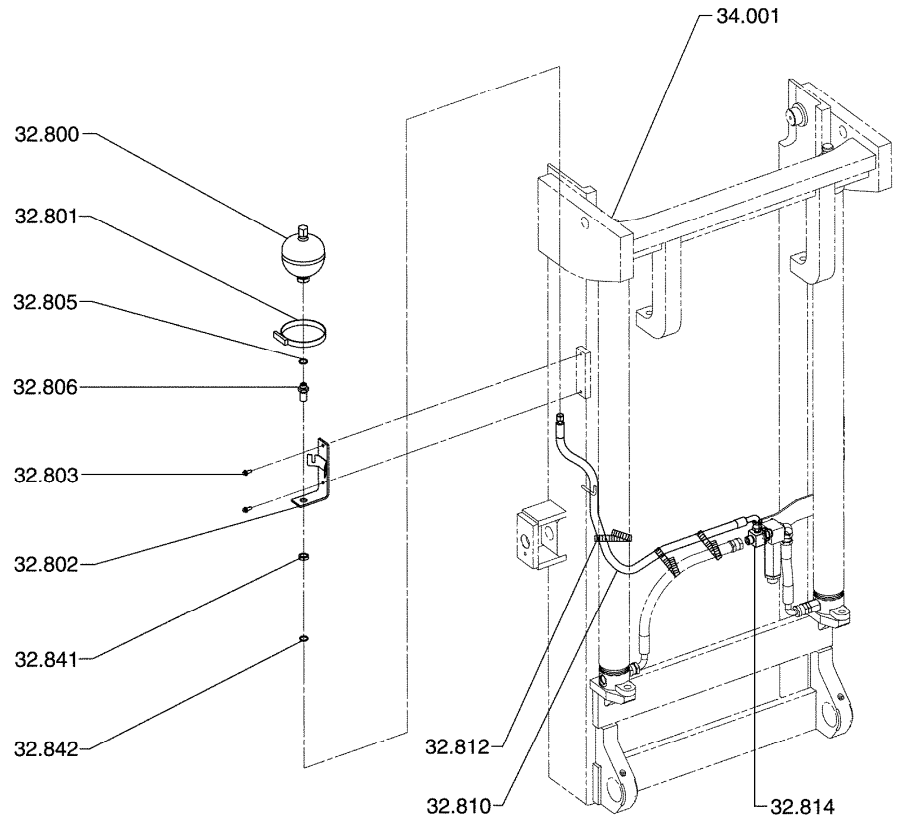

ACCUMULATOR **32-154**

32.800 ACCUMULATOR, HYDRAULIC
어큐뮬레이터

32.801 CLAMP, HYDRAULIC ACCUMULATOR MOUNTING
클램프

32.802 BRACKET, HYDRAULIC ACCUMULATOR
브라켓

32.803 FASTENER, HYDRAULIC ACCUMULATOR CLAMP
패스너

32.805 SEAL, HYDRAULIC ACCUMULATOR CONNECTOR
시일

32.806 CONNECTOR, HYDRAULIC ACCUMULATOR
커넥터

32.810 LINE, HYDRAULIC ACCUMULATOR
라인


32.812 CLIP, HYDRAULIC ACCUMULATOR LINE
클립

32.814 FITTING, HYDRAULIC ACCUMULATOR LINE
피팅

32.841 NUT, HYDRAULIC ACCUMULATOR FITTING
너트

32.842 SEAL, HYDRAULC ACCUMULATOR FITTING
시일


34.001 OUTER RAIL WELDER ASSEMBLY, UPRIGHT
아웃레일

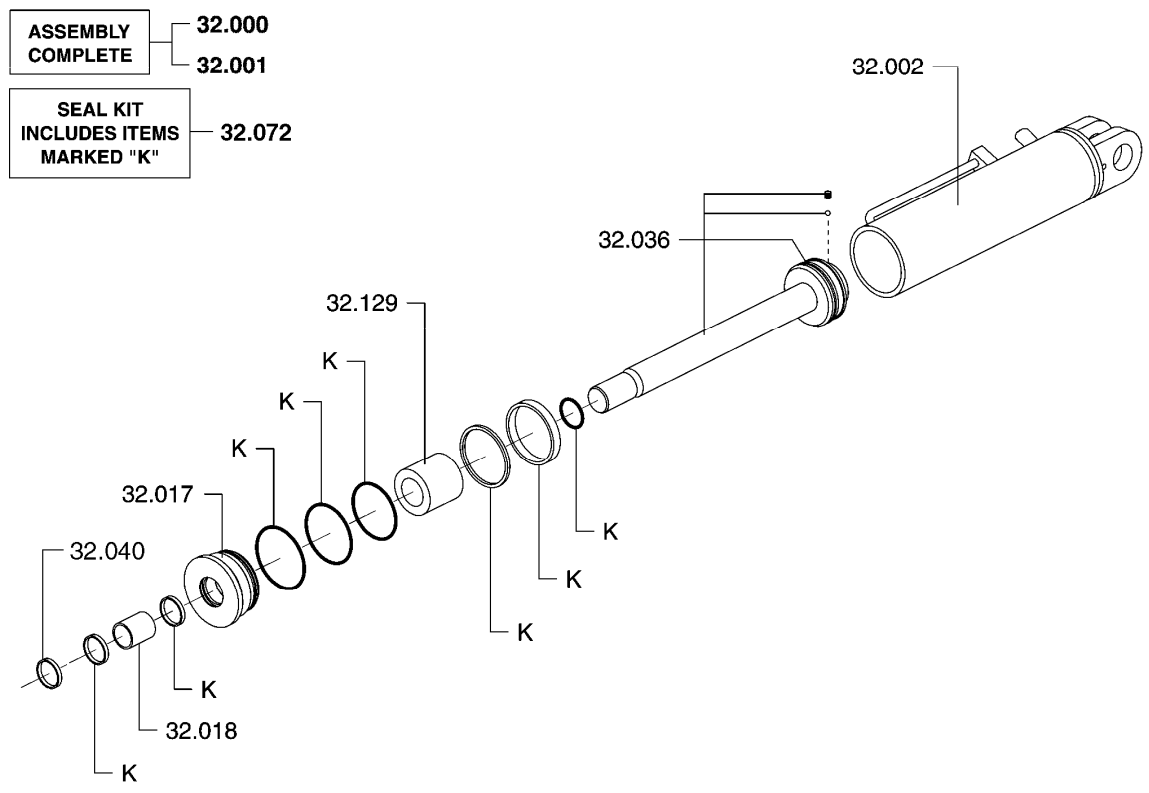

TILT CYLINDER **32-163**


32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.017	GLAND, TILT CYLINDER 그랜드
32.018	BUSHING, TILT CYLINDER GLAND 부싱
32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드와피스톤
32.040	RING, TILT CYLINDER GLAND POSITIONING 링
32.072	PACKING KIT, TILT CYLINDER 패킹킷
32.129	SPACER, TILT CYLINDER BARREL END 스페이서

■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

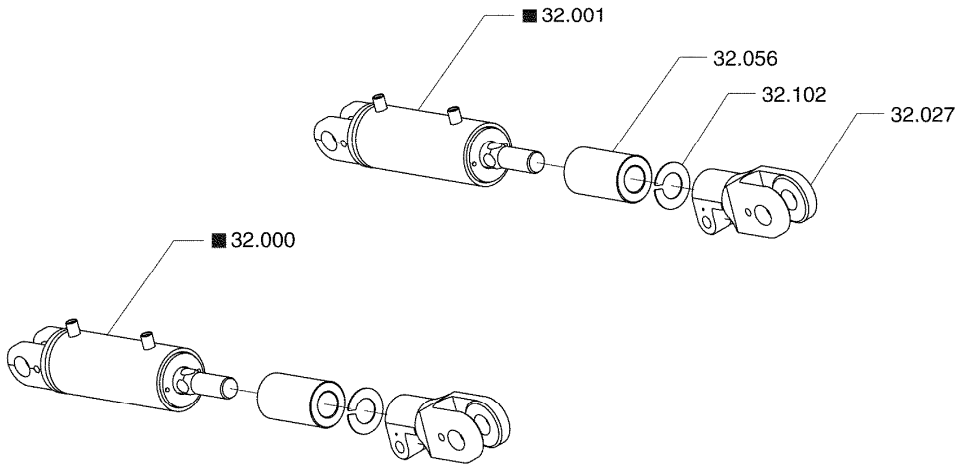

TILT AMOUNT GP **32-167**

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심

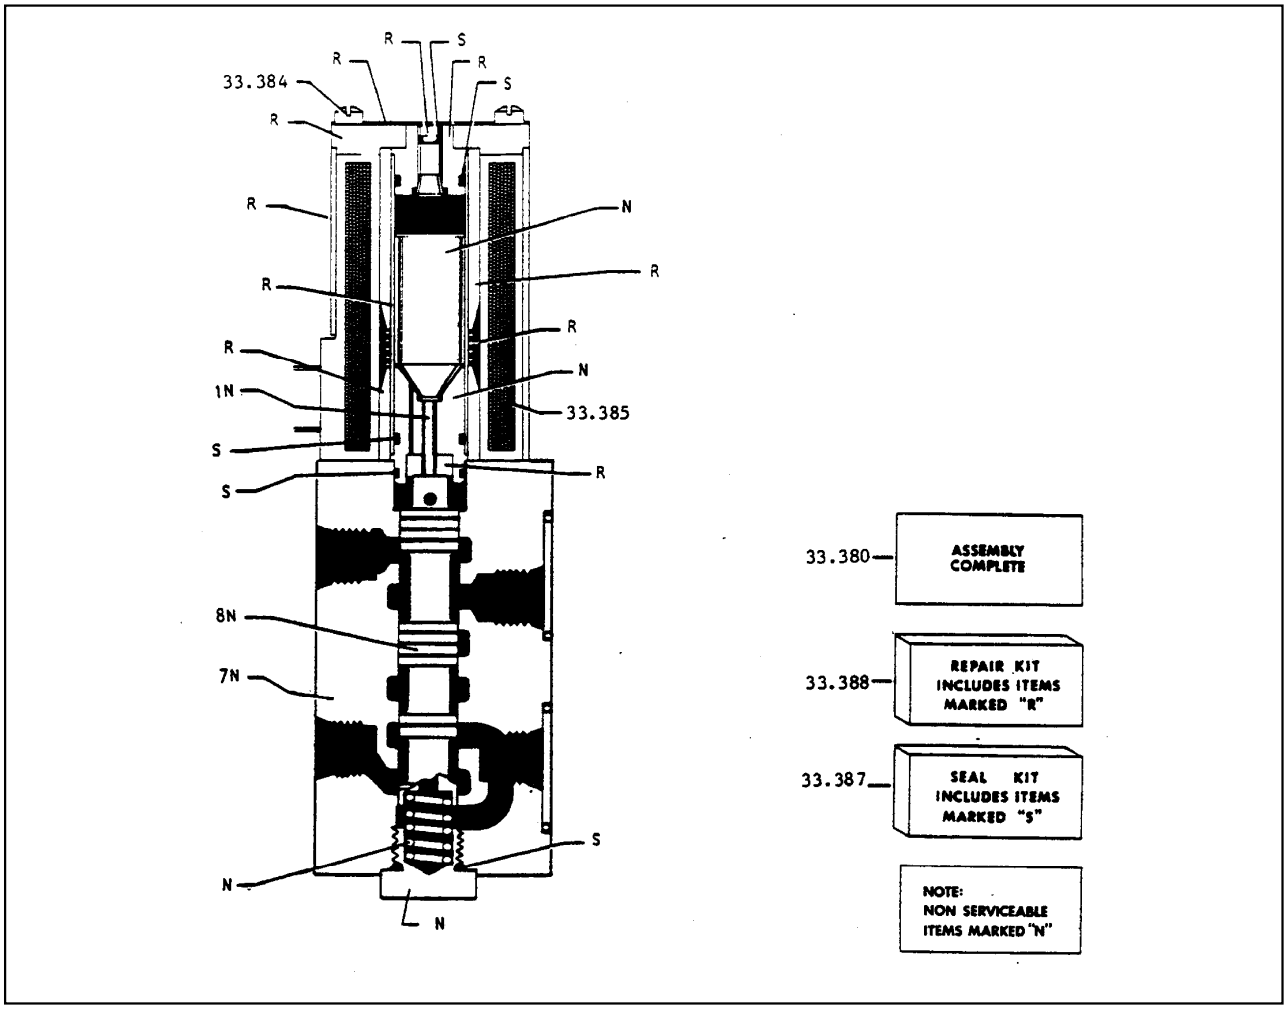


33.380 VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID
벨브

33.384 FASTENER, DEV SELECTOR VALVE SOLENOID COIL
패스너

33.385 COIL, DEVICE SELECTOR VALVE SOLENOID
코일

33.387 SEAL KIT, DEVICE SELECTOR VALVE
시일킷

33.388 REPAIR KIT, DEVICE SELECTOR VALVE
리페어킷

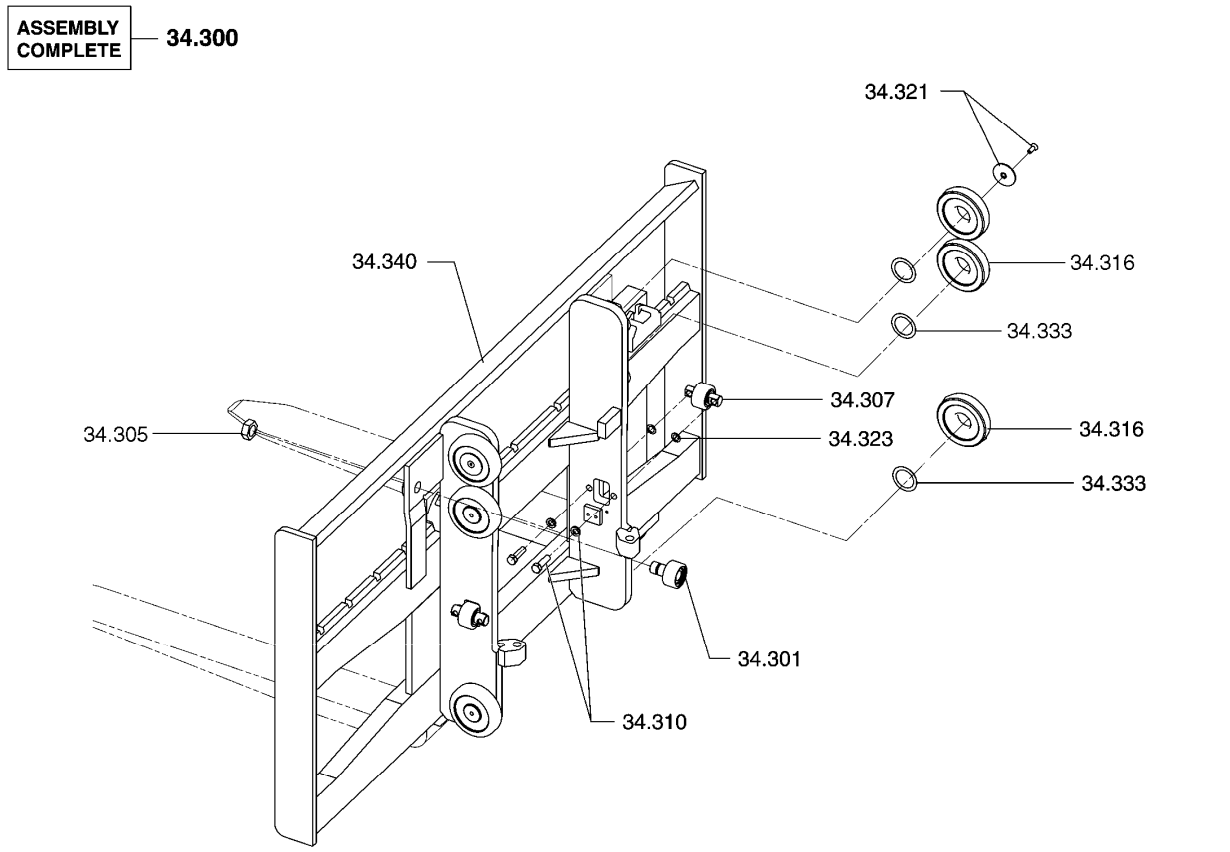

34.300 ASSEMBLY, FORK BARS & CARRIAGE
캐리지

34.301 ROLLER, CARRIAGE OUTER THRUST
롤러

34.305 NUT, CARRIAGE OUTER THRUST ROLLER
너트

34.307 ROLLER, CARRIAGE INNER THRUST
롤러

34.310 FASTENER, CARRIAGE INNER THRUST ROLLER BRACKET
패스너


34.316 ROLLER, CARRIAGE
롤러

34.321 FASTENER, CARRIAGE ROLLER SHAFT
패스너

34.323 SHIM, INNER THRUST ROLLER
심

34.333 SHIM, CARRIAGE ROLLER
심

34.340 CARRIAGE WELDED ASSEMBLY
캐리지용접물

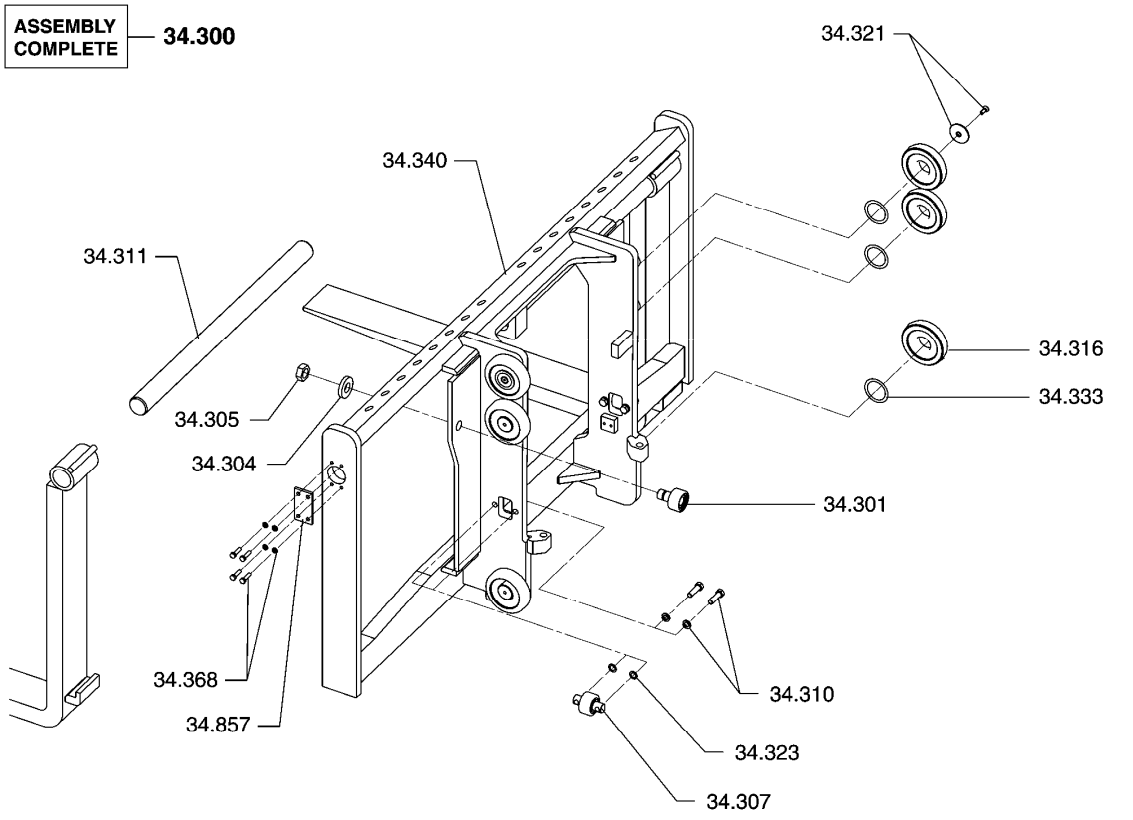

CARRIAGE ASSEMBLY **34-192**

34.300 ASSEMBLY, FORK BARS & CARRIAGE
캐리지

34.301 ROLLER, CARRIAGE OUTER THRUST
롤러

34.304 LOCKWASHER, CARRIAGE OUTER THRUST ROLLER
로크와셔

34.305 NUT, CARRIAGE OUTER THRUST ROLLER
너트

34.307 ROLLER, CARRIAGE INNER THRUST
롤러

34.310 FASTENER, CARRIAGE INNER THRUST ROLLER BRACKET
패스너

34.311 ASSEMBLY, FORK HANGER
포크행거

34.316 ROLLER, CARRIAGE
롤러

34.321 FASTENER, CARRIAGE ROLLER SHAFT
패스너


34.323 SHIM, INNER THRUST ROLLER
심

34.333 SHIM, CARRIAGE ROLLER
심

34.340 CARRIAGE WELDED ASSEMBLY
캐리지용접물

34.368 FASTENER, FORK LOCATING BAR
패스너

34.857 COVER, CARRIAGE STABILIZING GEAR (RH)
커버

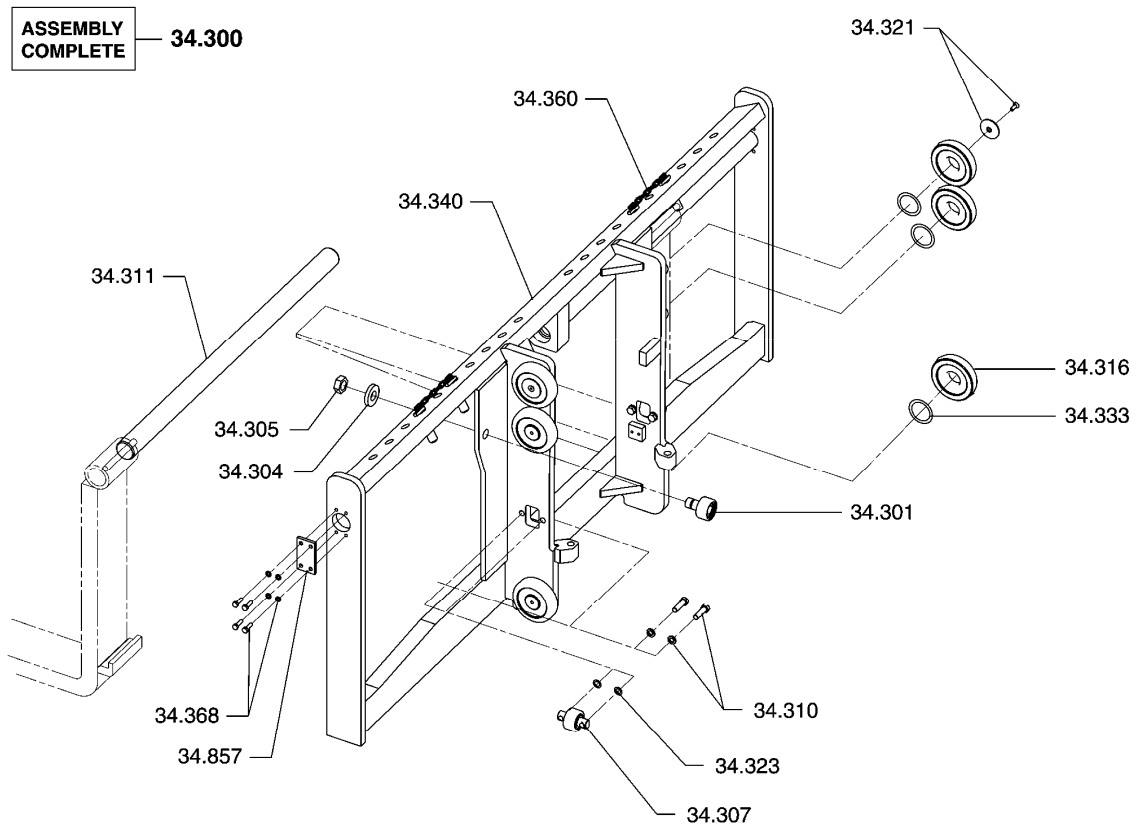

CARRIAGE ASSEMBLY **34-193**

34.300 ASSEMBLY, FORK BARS & CARRIAGE
캐리지

34.301 ROLLER, CARRIAGE OUTER THRUST
롤러

34.304 LOCKWASHER, CARRIAGE OUTER THRUST ROLLER
로크와셔

34.305 NUT, CARRIAGE OUTER THRUST ROLLER
너트

34.307 ROLLER, CARRIAGE INNER THRUST
롤러

34.310 FASTENER, CARRIAGE INNER THRUST ROLLER BRACKET
패스너

34.311 ASSEMBLY, FORK HANGER
포크행거

34.316 ROLLER, CARRIAGE
롤러

34.321 FASTENER, CARRIAGE ROLLER SHAFT
패스너

34.323 SHIM, INNER THRUST ROLLER
심


34.333 SHIM, CARRIAGE ROLLER
심

34.340 CARRIAGE WELDED ASSEMBLY
캐리지용접물

34.360 PIN, FORK LOCATING
핀

34.368 FASTENER, FORK LOCATING BAR
패스너

34.857 COVER, CARRIAGE STABILIZING GEAR (RH)
커버

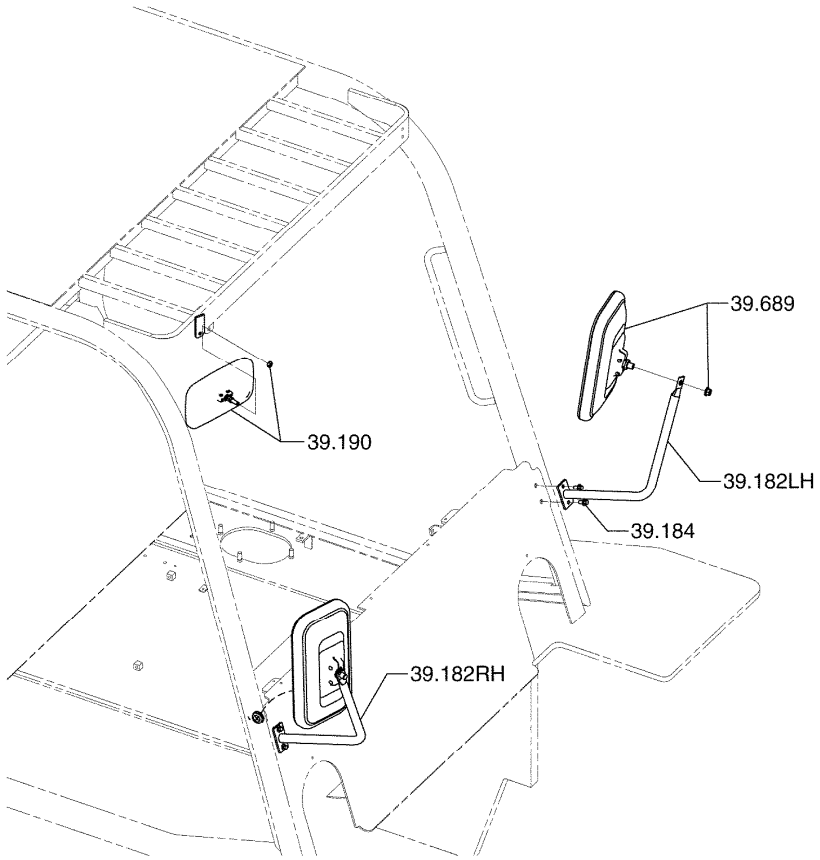

REAR VIEW MIRROR MOUNTING **37-023**

39.182 BRACKET, REAR VIEW MIRROR MOUNTING
브라켓


39.184 FASTENER, REAR VIEW MIRROR
패스너

39.190 MIRROR, RH OUTSIDE
미러


39.689 MIRROR, REAR VIEW
미러

ASSEMBLY COMPLETE — 37.554

NOTE :
ITEMS TO BE NOT SOLD SEPARATELY MARKED "NSS"

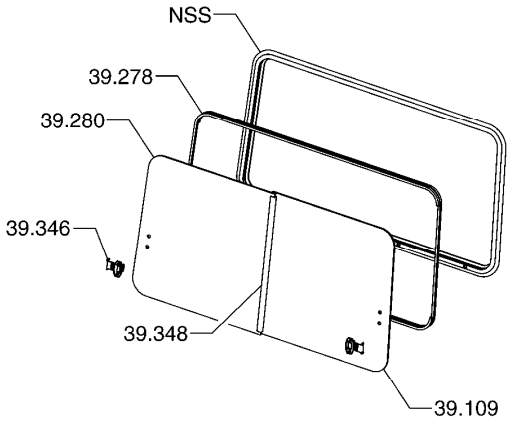

GLASS - DOUBLE SLIDING TYPE

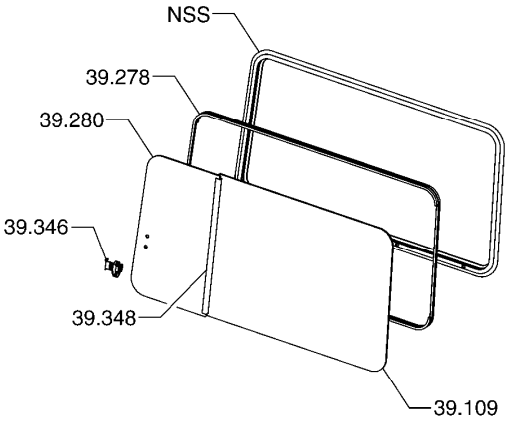

GLASS - SINGLE SLIDING TYPE

REAR WINDOW ASSEMBLY **37-060**

37.554 REAR GLASS COMPLETE, CABIN
리어글래스


39.109 GLASS, REAR
글래스

39.278 CHANNEL, MOVEABLE REAR WINDOW - RH SIDE
채널

39.280 GLASS, REAR WINDOW - MOVEABLE
글래스

39.346 LATCH, CAB REAR WINDOW
래치

39.348 CHANNEL, CAB REAR WINDOW
채널

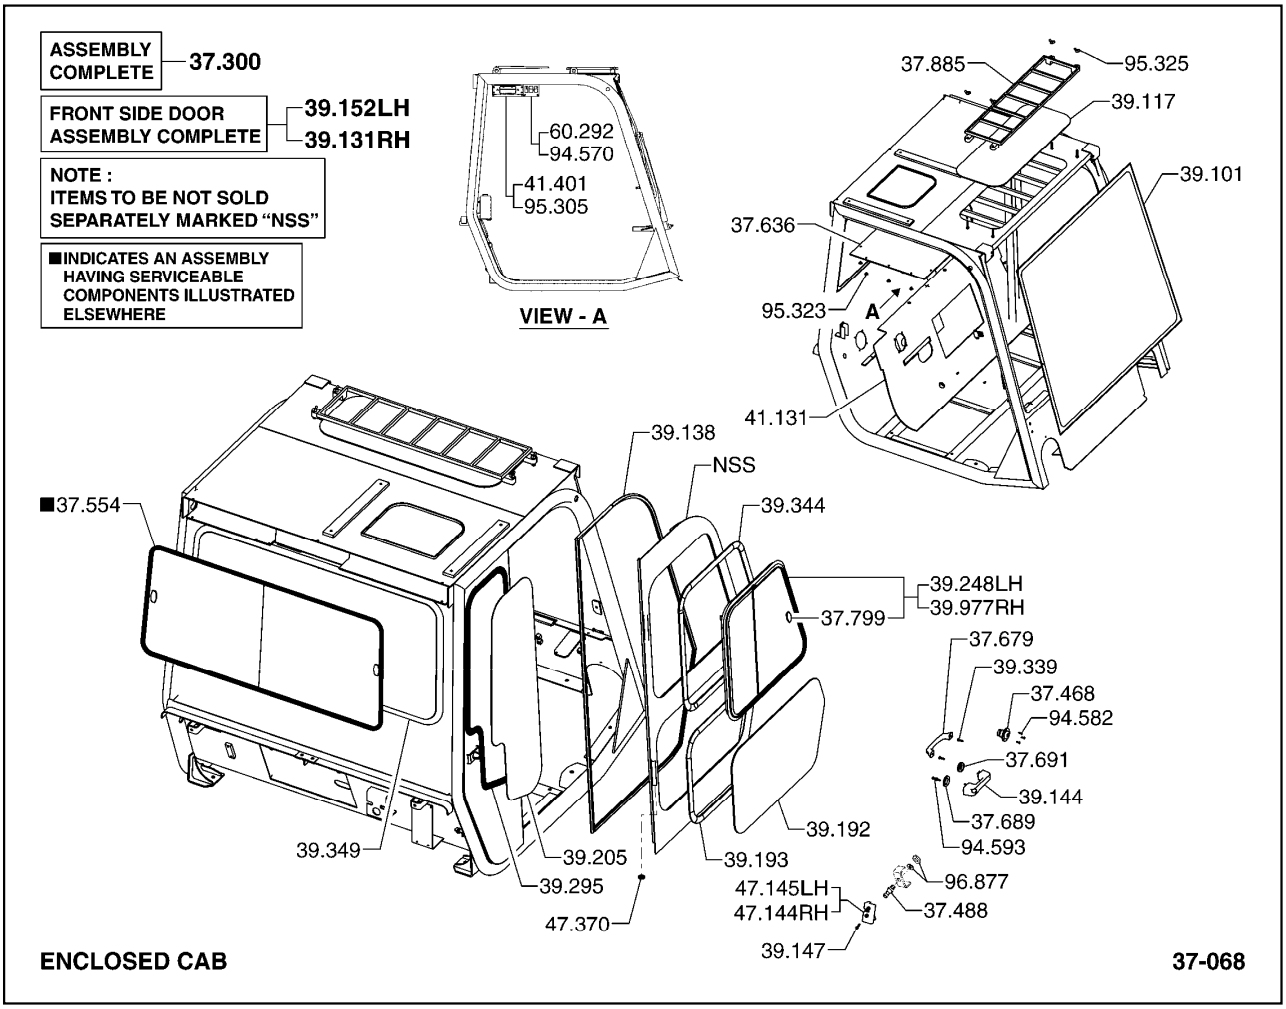

37.300	CAB ASSEMBLY 캐빈
37.468	CATCH, CAB DOOR LATCH 캐치
37.488	STRIKER PLATE, DOOR INSIDE LATCH 스트라이커
37.554	REAR GLASS COMPLETE, CABIN 리어글래스
37.636	COVERING, CAB INSIDE ROOF 커버링
37.679	HANDLE, RH DOOR INSIDE 핸들
37.689	SEAL, DOOR OUTSIDE HANDLE 시일
37.691	SEAL, DOOR OUTSIDE HANDLE 시일
37.799	LATCH, CAB DOOR WINDOW ASSEMBLY 래치
37.885	ROOF, ROOF PANEL 루프
39.101	GLASS, WINDSHIELD 글래스
39.117	ROOF SCREEN 루프스크린
39.131	DOOR ASSEMBLY, RIGHT HAND 도어
39.138	WEATHERSEAL, RIGHT HAND DOOR 웨더시일
39.144	HANDLE, RH DOOR OUTSIDE 핸들
39.147	FASTENER, RIGHT HAND DOOR LATCH 패스너
39.152	DOOR ASSEMBLY, LEFT HAND 도어
39.192	GLASS, RIGHT HAND DOOR (LOWER) 글래스
39.193	WEATHERSEAL, RH DOOR GLASS (LOWER) 웨더시일
39.205	GLASS, RH DOOR REAR 글래스
39.248	WINDOW ASSEMBLY, CAB DOOR (LH) 윈도우
39.295	WEATHERSEAL, DOOR REAR GLASS 웨더시일
39.339	FASTENER, RH DOOR INSIDE HANDLE 패스너
39.344	WEATHERSEAL, RH DOOR WINDOW ASSEMBLY 웨더시일
39.349	WEATHERSEAL, CAB REAR WINDOW 웨더시일
39.977	WINDOW ASSEMBLY, CAB DOOR (RH) 윈도우
41.131	SOUND ABSORBER, LOWER REAR PANEL 흡음재
41.401	BOX, AUDIO AND TRANSCEIVER MOUNTING 박스
47.144	LATCH, RH DOOR INSIDE 래치
47.145	LATCH, LH DOOR INSIDE 래치

47.370 SPACER, CAB DOOR HINGE
*

60.292 COVER, CAB SWITCH PANEL
커버

94.570 FASTENER, CAB SWITCH PANEL COVER
패스너

94.582 FASTENER, CAB DOOR LATCH CATCH
패스너


94.593 FASTENER, OUTSIDE DOOR HANDLE
패스너

95.305 FASTENER, AUDIO AND TRANSCEIVER BOX TO MOUNTING
패스너

95.323 FASTENER, CAB INSIDE ROOF COVERING
패스너

95.325 FASTENER, CAB ROOF
패스너

96.877 FASTENER, DOOR INSIDE LATCH STRIKER
패스너

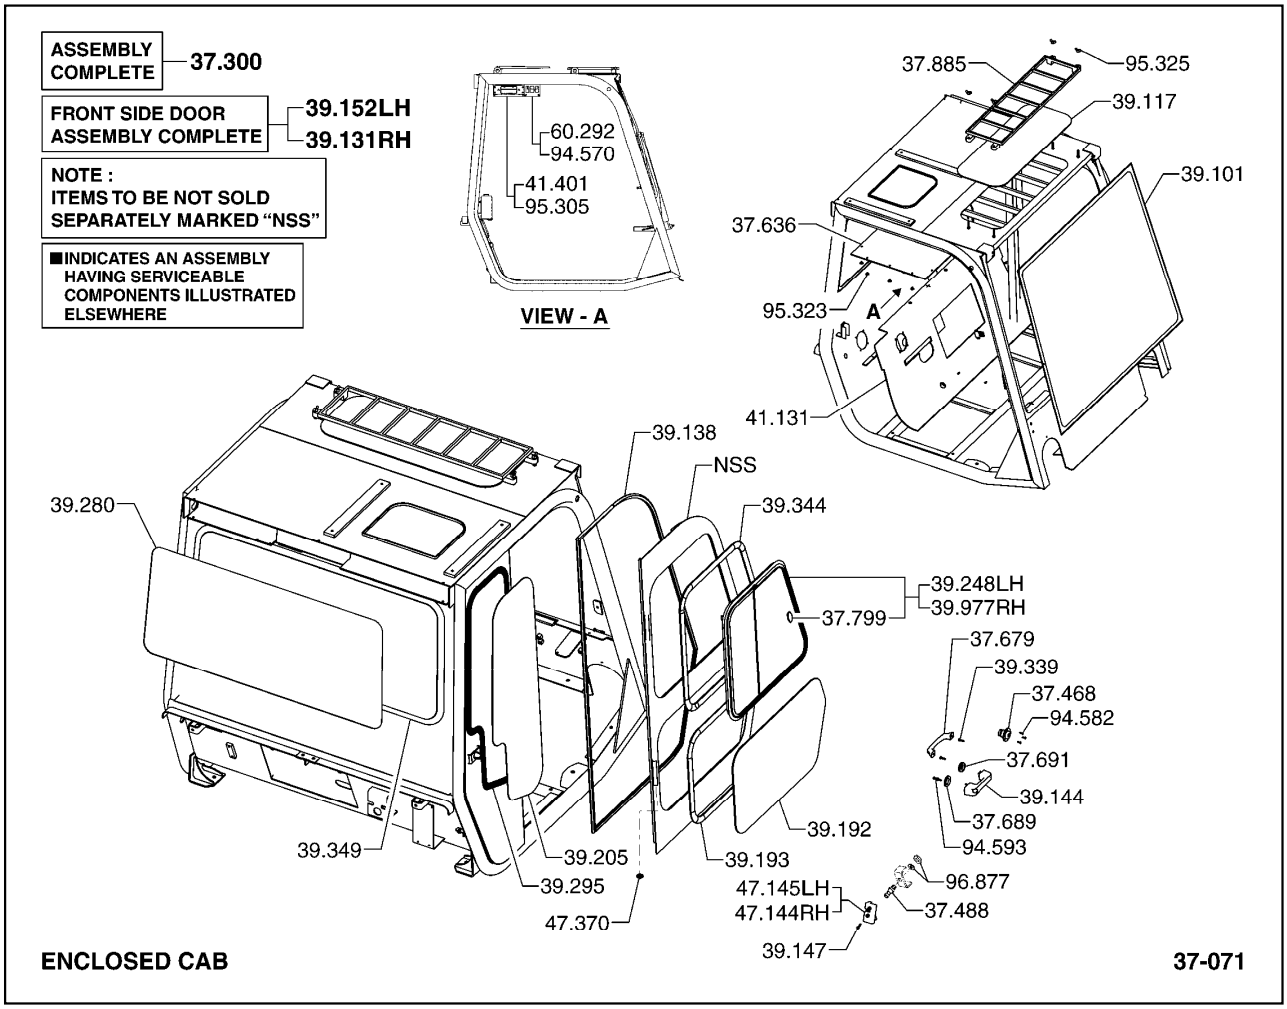

37.300	CAB ASSEMBLY 캐빈
37.468	CATCH, CAB DOOR LATCH 캐치
37.488	STRIKER PLATE, DOOR INSIDE LATCH 스트라이커
37.636	COVERING, CAB INSIDE ROOF 커버링
37.679	HANDLE, RH DOOR INSIDE 핸들
37.689	SEAL, DOOR OUTSIDE HANDLE 시일
37.691	SEAL, DOOR OUTSIDE HANDLE 시일
37.799	LATCH, CAB DOOR WINDOW ASSEMBLY 래치
37.885	ROOF, ROOF PANEL 루프
39.101	GLASS, WINDSHIELD 글래스
39.117	ROOF SCREEN 루프스크린
39.131	DOOR ASSEMBLY, RIGHT HAND 도어
39.138	WEATHERSEAL, RIGHT HAND DOOR 웨더시일
39.144	HANDLE, RH DOOR OUTSIDE 핸들
39.147	FASTENER, RIGHT HAND DOOR LATCH 패스너
39.152	DOOR ASSEMBLY, LEFT HAND 도어
39.192	GLASS, RIGHT HAND DOOR (LOWER) 글래스
39.193	WEATHERSEAL, RH DOOR GLASS (LOWER) 웨더시일
39.205	GLASS, RH DOOR REAR 글래스
39.248	WINDOW ASSEMBLY, CAB DOOR (LH) 윈도우
39.280	GLASS, REAR WINDOW - MOVEABLE 글래스
39.295	WEATHERSEAL, DOOR REAR GLASS 웨더시일
39.339	FASTENER, RH DOOR INSIDE HANDLE 패스너
39.344	WEATHERSEAL, RH DOOR WINDOW ASSEMBLY 웨더시일
39.349	WEATHERSEAL, CAB REAR WINDOW 웨더시일
39.977	WINDOW ASSEMBLY, CAB DOOR (RH) 윈도우
41.131	SOUND ABSORBER, LOWER REAR PANEL 흡음재
41.401	BOX, AUDIO AND TRANSCEIVER MOUNTING 박스
47.144	LATCH, RH DOOR INSIDE 래치
47.145	LATCH, LH DOOR INSIDE 래치

47.370 SPACER, CAB DOOR HINGE
*

60.292 COVER, CAB SWITCH PANEL
커버

94.570 FASTENER, CAB SWITCH PANEL COVER
패스너

94.582 FASTENER, CAB DOOR LATCH CATCH
패스너


94.593 FASTENER, OUTSIDE DOOR HANDLE
패스너

95.305 FASTENER, AUDIO AND TRANSCEIVER BOX TO MOUNTING
패스너


95.323 FASTENER, CAB INSIDE ROOF COVERING
패스너

95.325 FASTENER, CAB ROOF
패스너

96.877 FASTENER, DOOR INSIDE LATCH STRIKER
패스너

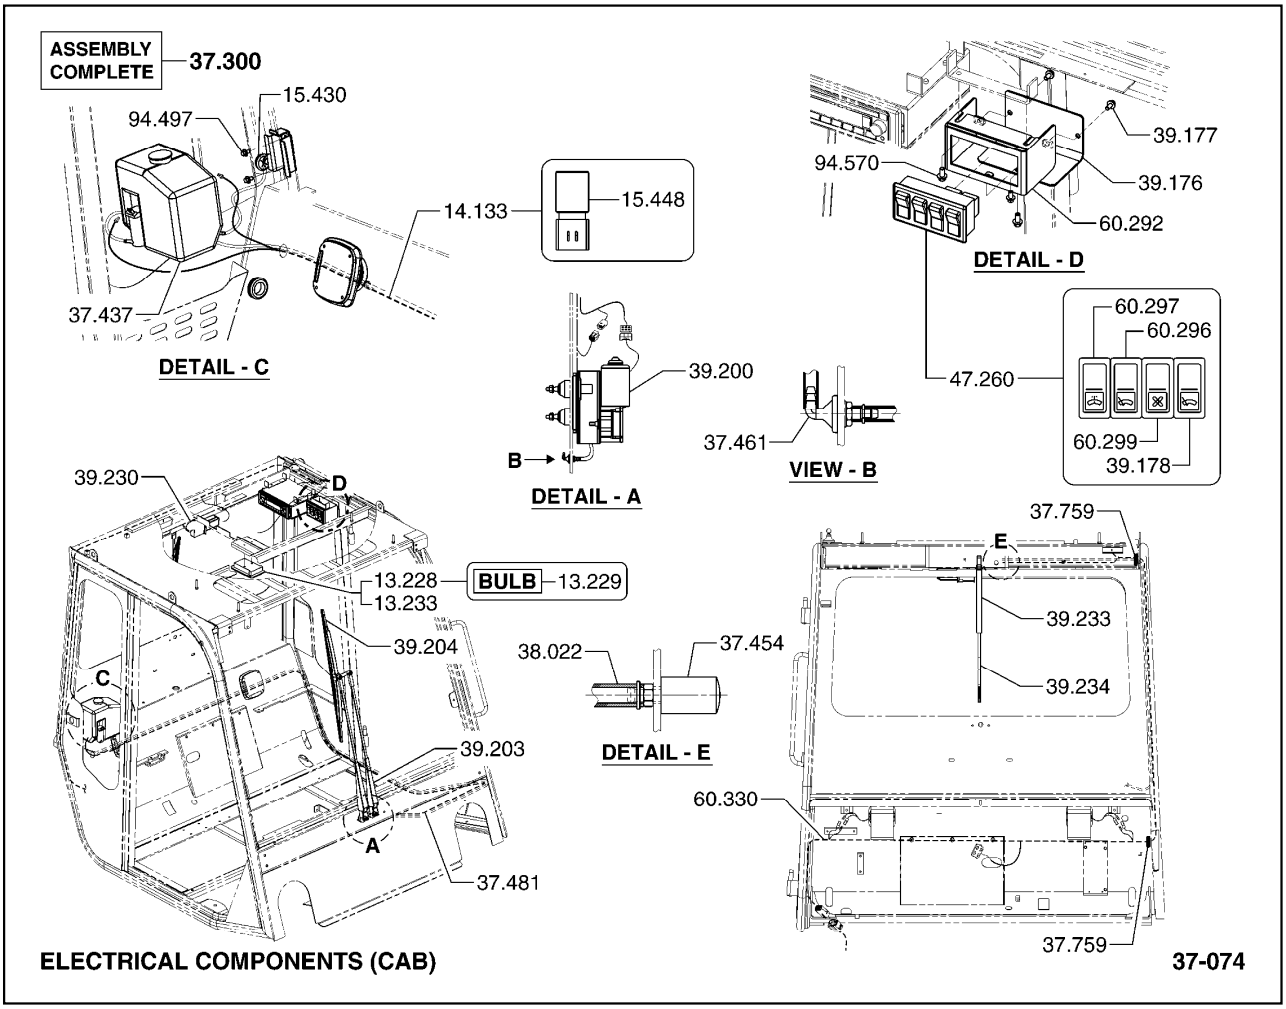

13.228	LAMP ASSEMBLY, DOME 램프
13.229	BULB, DOME LAMP 전구
13.233	FASTENER, DOME LAMP 패스너
14.133	WIRE, WIPER MOTOR 와이어
15.430	GROMMET, CABIN WIRING HARNESS 그로멧
15.448	DIODE, HARNESS 다이오드
37.300	CAB ASSEMBLY 캐빈
37.437	PUMP & TANK, WINDSHIELD WASHER 펌프와탱크
37.454	NOZZLE, REAR WINDOW GLASS WASHER 노즐
37.461	NOZZLE, WINDSHIELD GLASS WASHER 노즐
37.481	LINE, WINDOW GLASS WASHER 라인
37.759	GROMMET, COVER WINDSHIELD WIPER MOTOR 그로멧
38.022	HOSE, WINDOW WASHER 호스
39.176	BRACKET, WINDSHIELD WIPER SWITCH 브라켓
39.177	FASTENER, WINDSHIELD WIPER SWITCH BRACKET 패스너
39.178	SWITCH, WINDSHIELD WIPER 스위치
39.200	MOTOR, WINDSHIELD WIPER 모터
39.203	ARM, WINDSHIELD WIPER 암
39.204	BLADE, WINDSHIELD WIPER 블레이드
39.230	MOTOR, REAR WINDOW WIPER 모터
39.233	ARM, REAR WINDOW WIPER 암
39.234	BLADE, REAR WINDOW WIPER 블레이드
47.260	SWITCH ASSY, CABIN 스위치
60.292	COVER, CAB SWITCH PANEL 커버
60.296	SWITCH, WINDSHIELD WIPER (REAR) 스위치
60.297	SWITCH, WINDSHIELD WASHER 스위치
60.299	SWITCH, HEATER ON/OFF 스위치
60.330	WIRING HARNESS, CAB 와이어하네스
94.497	FASTENER, WINDSHIELD WASHER TANK 패스너
94.570	FASTENER, CAB SWITCH PANEL COVER 패스너

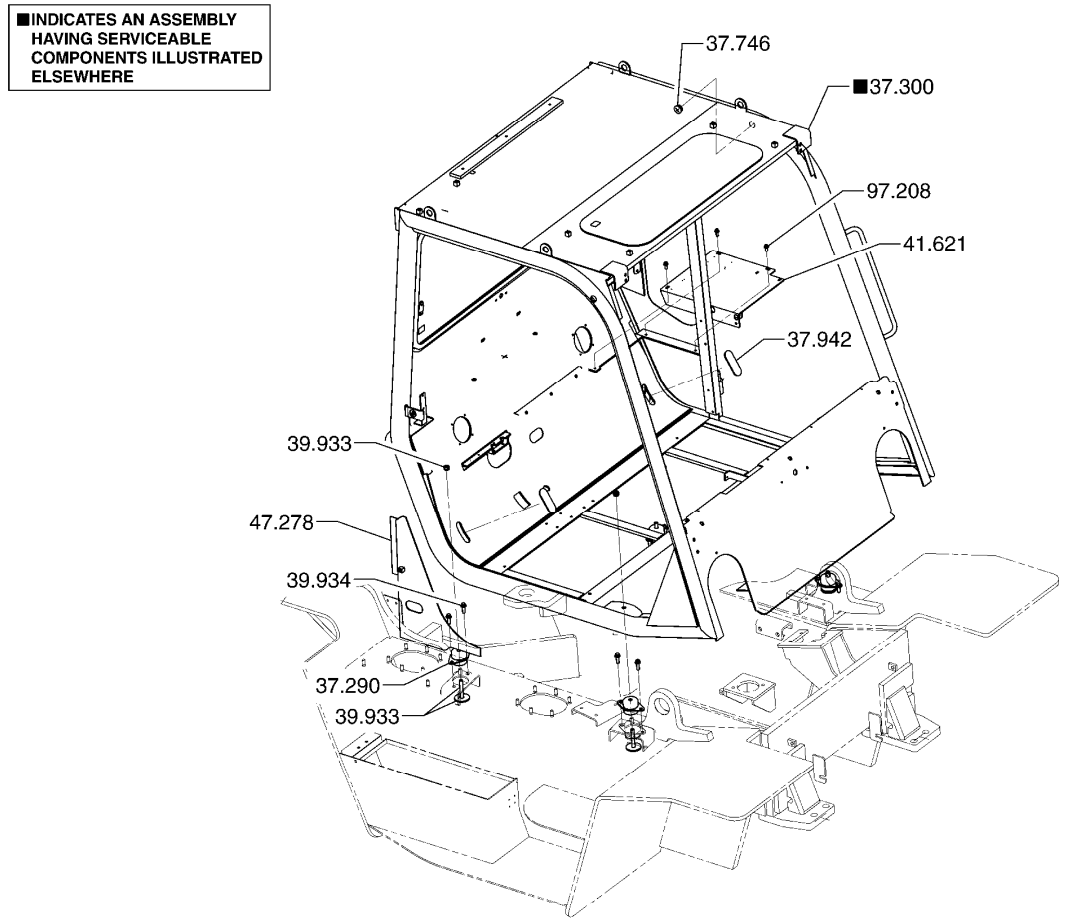

37.290 DAMPENER, OVERHEAD GUARD VIBRATION
댐프너

37.300 CAB ASSEMBLY
캐빈

37.746 PLUG, DRIVER OVERHEAD GUARD
플러그

37.942 PLUG, OVERHEAD GUARD REAR SUPPORT PAD FASTENER
플러그


39.933 FASTENER, OVERHEAD GUARD
패스너

39.934 FASTENER, OVERHEAD GUARD
패스너

41.621 BRACKET, AIR CONDITIONER SUPPORT
*

47.278 COVER, FRONT RH
커버

97.208 FASTENER, AIR CONDITIONER SUPPORT BRACKET
*

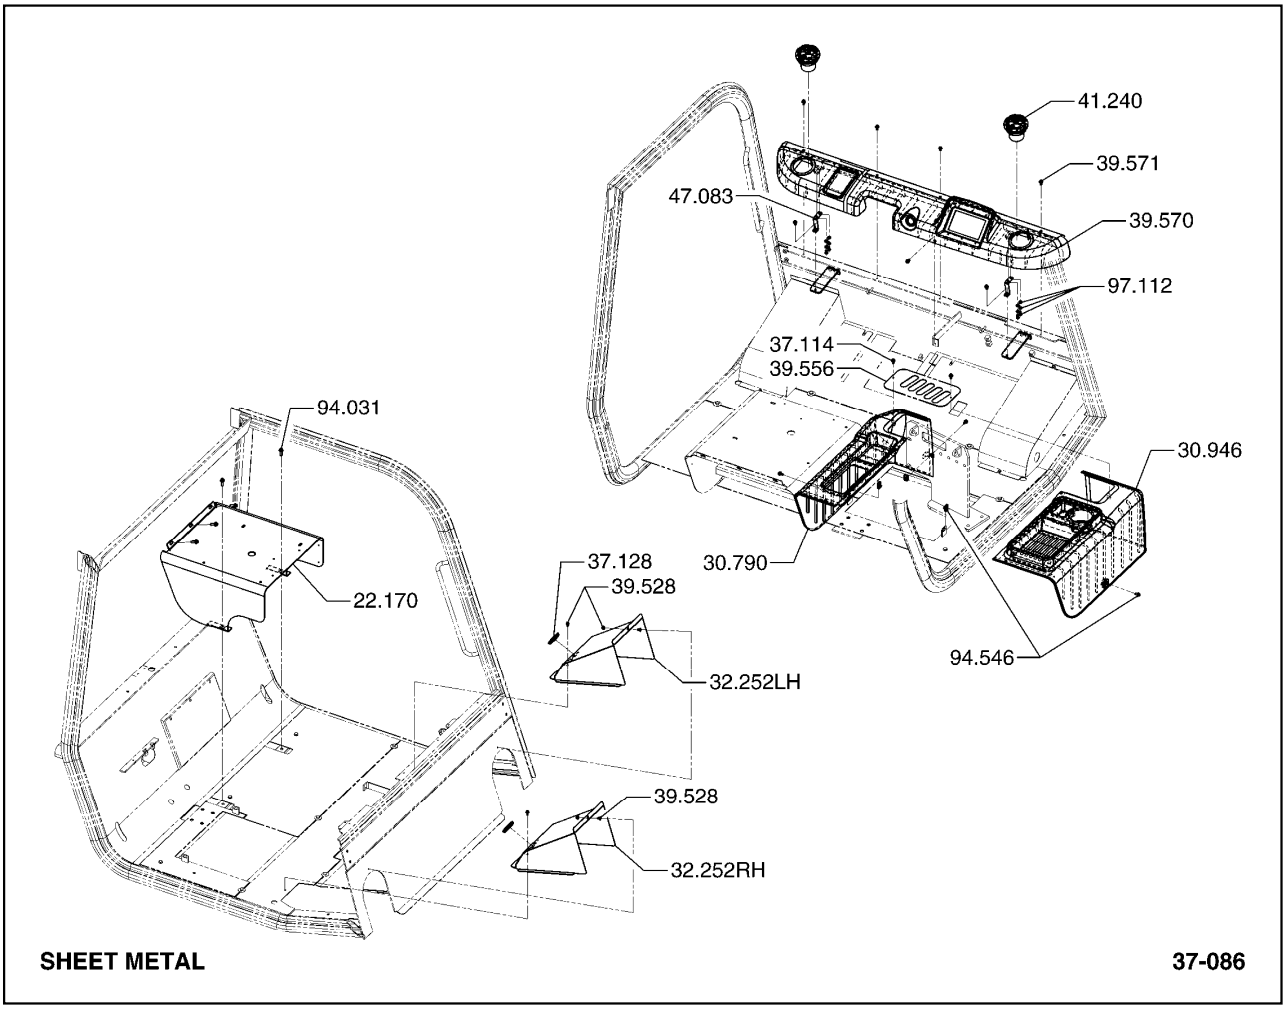

22.170 SUPPORT, SEAT MOUNTING PLATE
서포트

30.790 COVER, VALVE CONTROL LINKAGE SHIELD
커버

30.946 COVER, VALVE LEVER LOCKOUT
커버

32.252 COVER, TILT CYLINDER PISTON ROD BOOT
커버

37.114 FASTENER, VALVE LINKAGE ACCESS COVER
패스너


37.128 PLUG, TILT CYLINDER COVER ACCESS HOLE
플러그

39.528 FASTENER, TILT CYLINDER COVER
패스너

39.556 COVER, VALVE LINKAGE ACCESS
커버

39.570 COVER ASSEMBLY, DASH
커버

39.571	FASTENER, DASH COVER 패스너
41.240	VENT, HEATER AIR OUTLET (UPPER) 벤트
47.083	SUPPORT, DASH COVER 서포트
94.031	FASTENER, SEAT FRAME BASE 패스너
94.546	FASTENER, VALVE CONTROL LINKAGE SHIELD COVER 패스너
97.112	FASTENER, DASH COVER SUPPORT 패스너

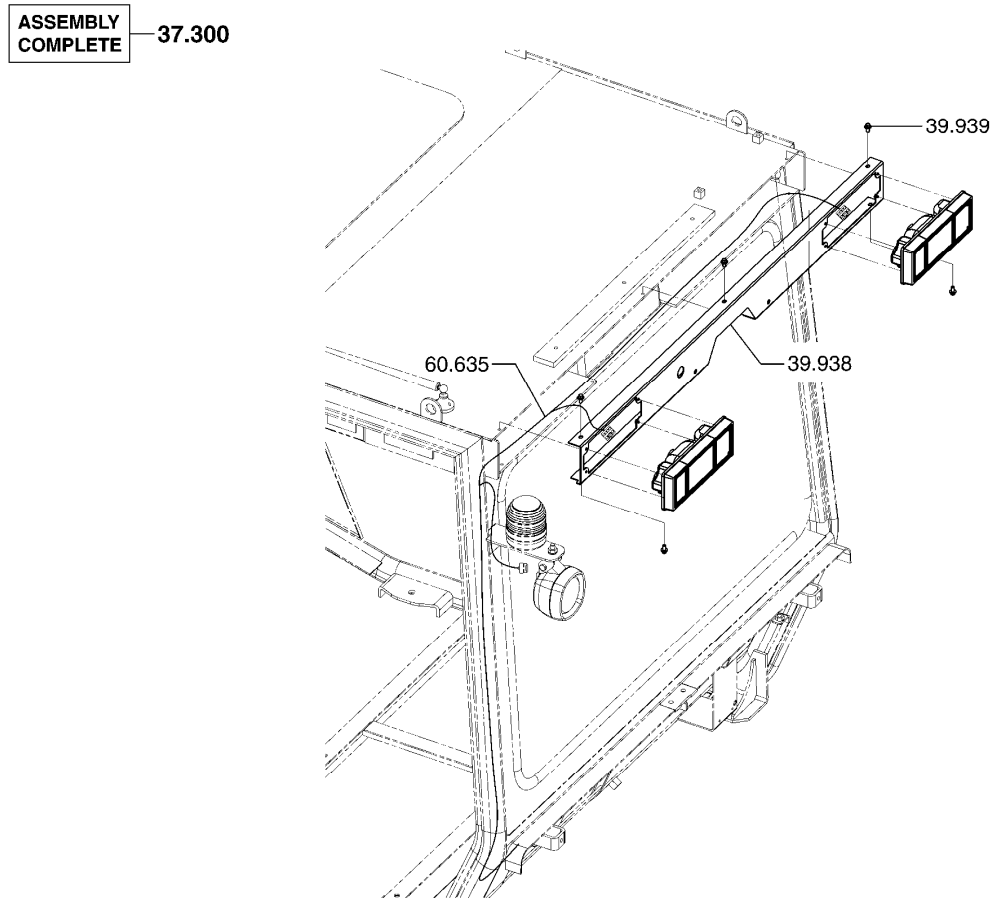


REAR ACCESSORY MOUNTING **37-092**

37.300 CAB ASSEMBLY
캐빈

39.938 BRACKET, OVERHEAD GUARD REAR SUPPORT
브라켓

39.939 FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET
패스너

60.635 WIRING HARNESS, LIGHT
와이어하네스

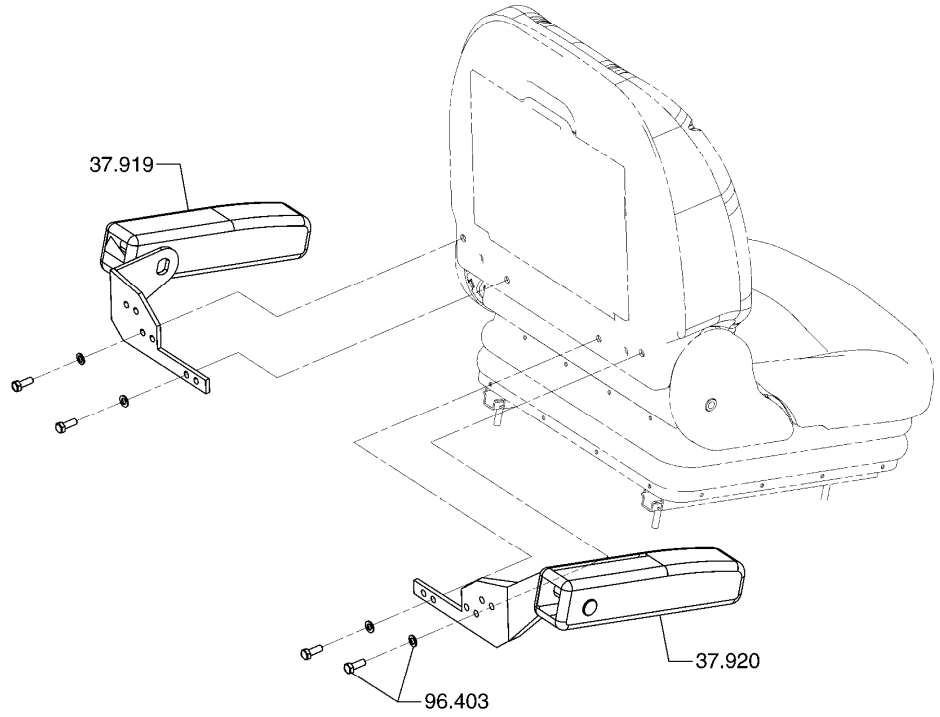


SEAT ARMREST ASSEMBLY **37-124**

37.919 ARMREST LH, SEAT
암레스트

37.920 ARMREST RH, SEAT
암레스트

96.403 FASTENER, SEAT ARMREST BRACKET
패스너

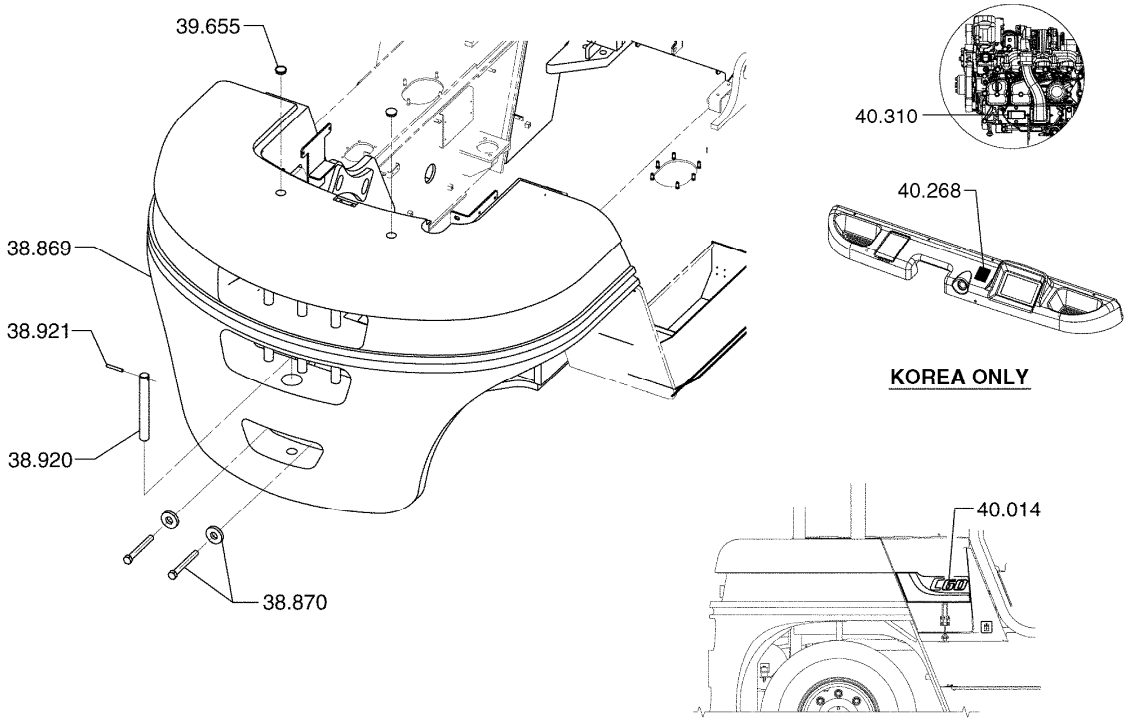

COUNTERWEIGHT MOUNTING **38-269**


38.869 COUNTERWEIGHT
카운터웨이트

38.870 FASTENER, COUNTERWEIGHT (LOWER)
패스너

38.920 PIN, COUPLER
핀

38.921 PIN, COUPLER PIN CROSS
핀


39.655 PLUG, FUEL TANK FILLER HOLE
플러그

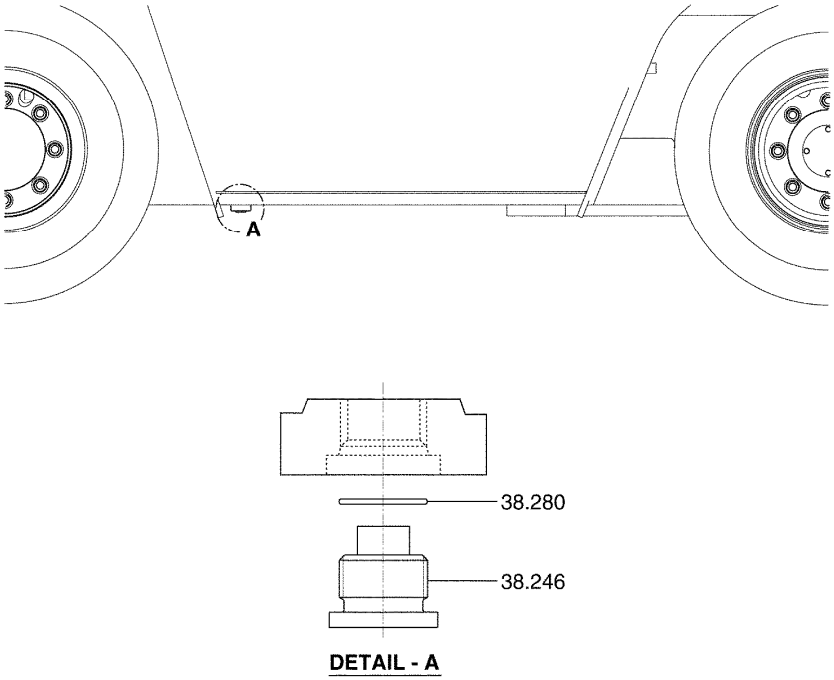

FRAME TANK BOTTOM PLUG **38-270**

38.246 PLUG, FRAME BOTTOM MAGNETIC
플러그


38.280 SEAL, FRAME BOTTOM MAGNETIC PLUG
실

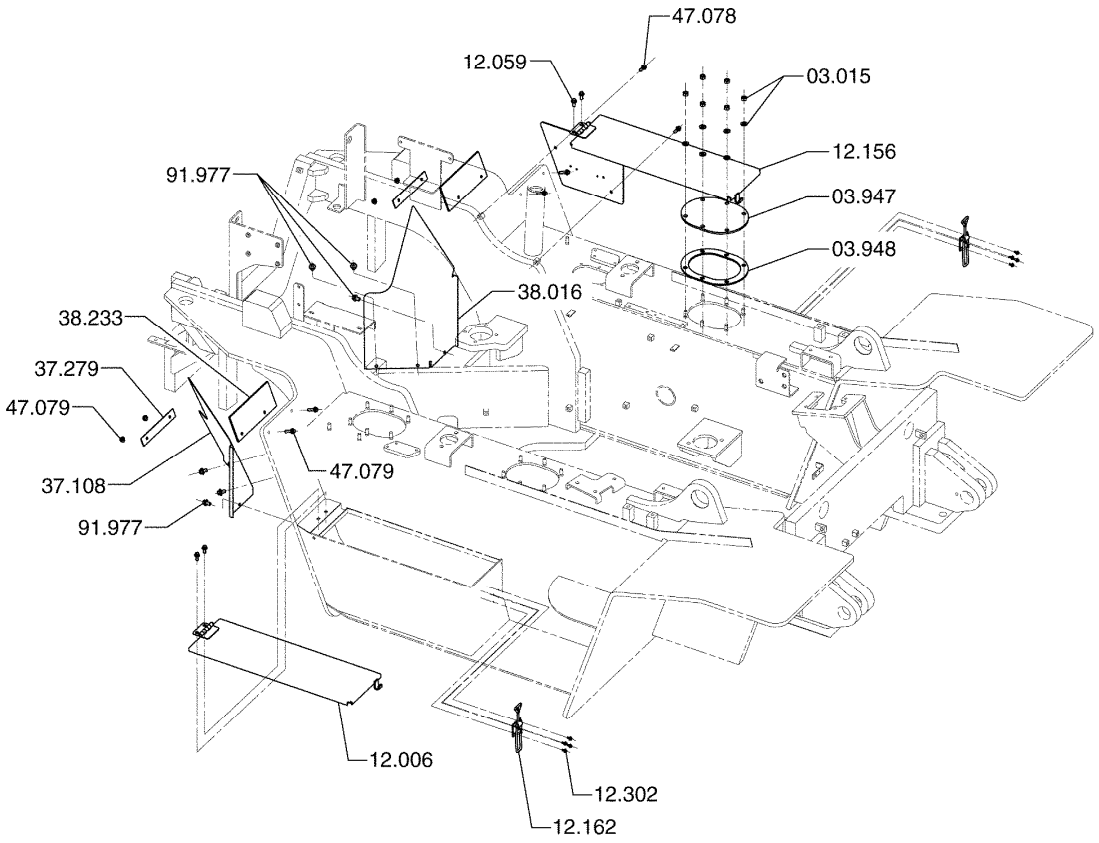

BATTERY & TOOL COVER MOUNTING **38-277**

03.015	FASTENER, FUEL TANK INSPECTION COVER 패스너
03.947	COVER, FUEL TANK 커버
03.948	GASKET, FUEL TANK COVER 가스켓
12.006	COVER, BATTERY 커버
12.059	FASTENER, BATTERY COVER 패스너
12.156	COVER, LH BATTERY 커버
12.162	CLIP, BATTERY RETAINER 클립
12.302	FASTENER, BATTERY COVER LATCH 패스너
37.108	SHIELD, RH REAR 쉴드

37.279	PLATE, FRAME SIDE 플레이트
38.016	SHIELD. LH REAR 쉴드
38.233	RUBBER, FRAME SIDE COVER 러버
47.078	FASTENER, FRAME COVER 패스너
47.079	FASTENER, FRAME COVER 패스너
91.977	FASTENER, REAR SHIELD 패스너

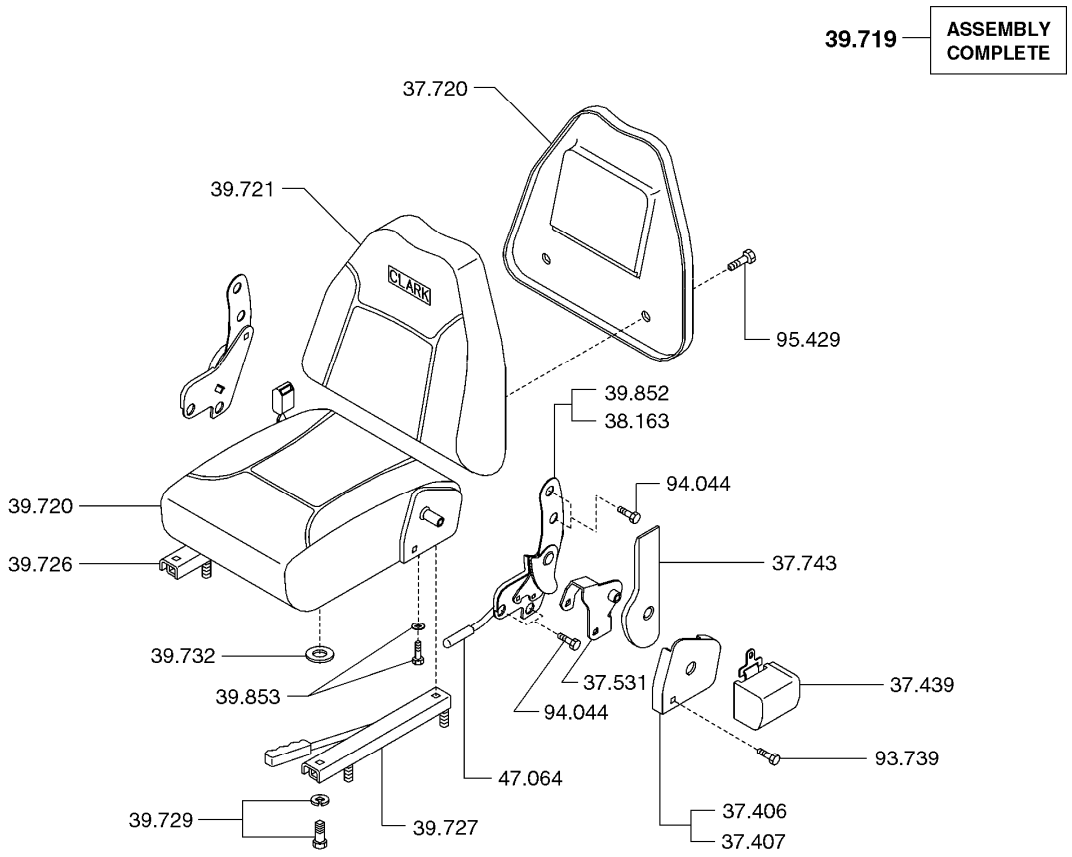

SEAT ASSEMBLY **39-661**

37.406 BRACKET, SEAT BACK REST COVER LH
브라켓

37.407 BRACKET, SEAT BACK REST COVER RH
브라켓

37.439 SAFETY BELT, SEAT
세이프티벨트

37.531 BRACKET, SEAT SAFETY BELT MOUNTING
브라켓

37.720 COVER, OPERATOR SEAT LATERAL RESTRAINT
커버


37.743 COVER, SEAT SUPPORT LATCH
커버

38.163 BRACKET, SEAT SUPPORT RH
브라켓

39.719 SEAT ASSEMBLY
시트

39.720 CUSHION, SEAT
쿠션

39.721	CUSHION, SEAT BACK REST 쿠션
39.726	ADJUSTOR, SEAT 어드져스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드져스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.732	SPACER, SEAT FRAME TO ADJUSTOR 스페이서
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
95.429	FASTENER, SEAT LATERAL RESTRAINT COVER 패스너

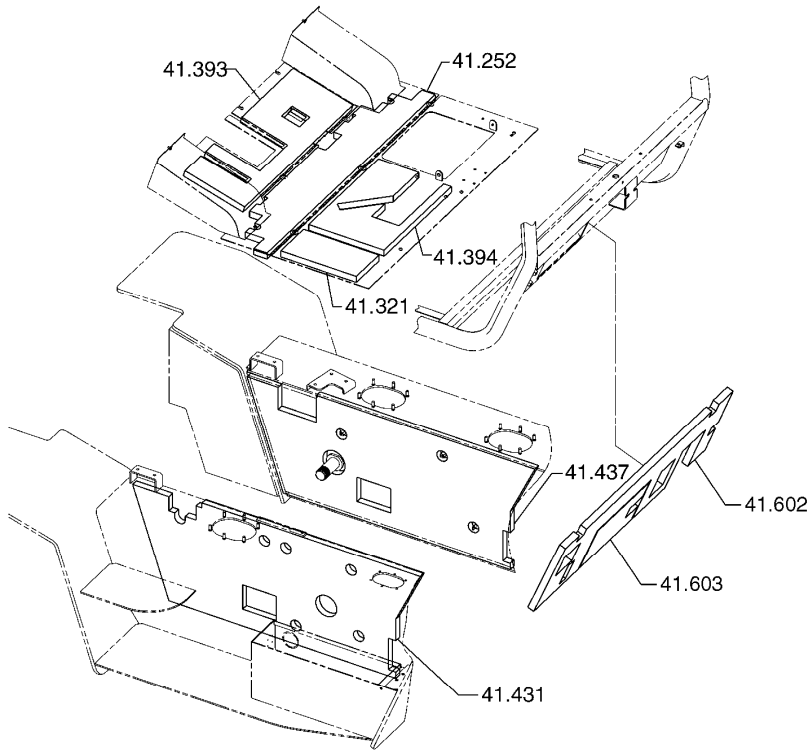

SPONGE MOUNTING **39-797**

41.252 SOUND SEAL, FLOOR PLATE FRONT
사운드시일

41.321 SOUND SEAL, FLOOR PLATE REAR
사운드시일

41.393 SOUND ABSORBER, FLOOR PLATE - FRONT
흡음재


41.394 SOUND ABSORBER, FLOOR PLATE - REAR
흡음재

41.431 SOUND SEAL, FRAME UPPER LH
사운드시일


41.437 SOUND SEAL,FRAME RH UPPER
사운드시일

41.602 SOUND SEAL, ENGINE HOOD
사운드시일

41.603 SOUND SEAL, ENGINE HOOD
사운드시일

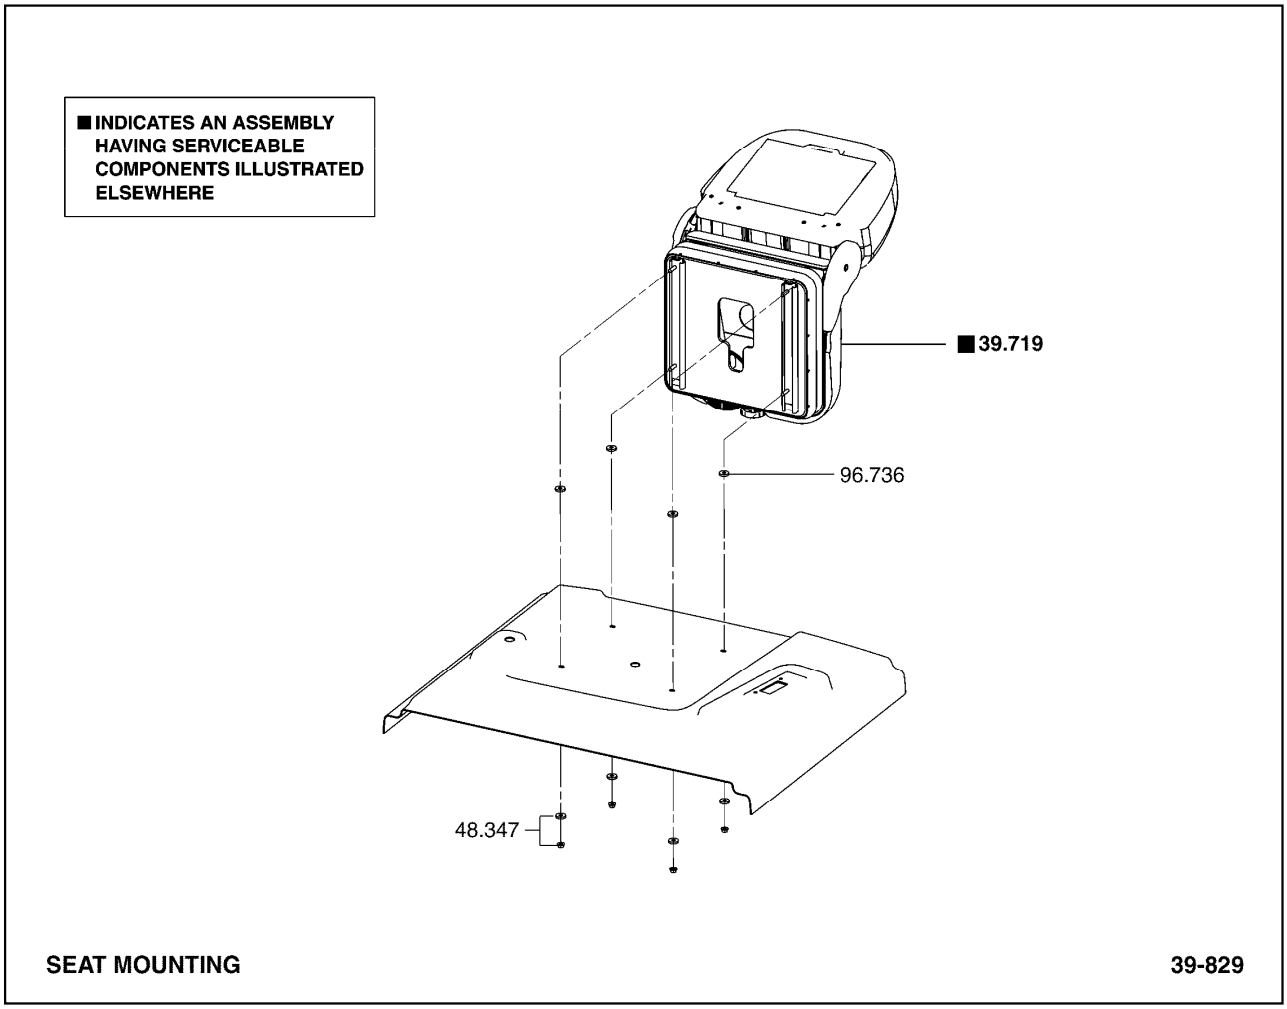

39.719	SEAT ASSEMBLY 시트
48.347	FASTENER, SEAT ASSEMBLY 패스너
96.736	WASHER, SEAT ASSEMBLY FASTENER 와셔

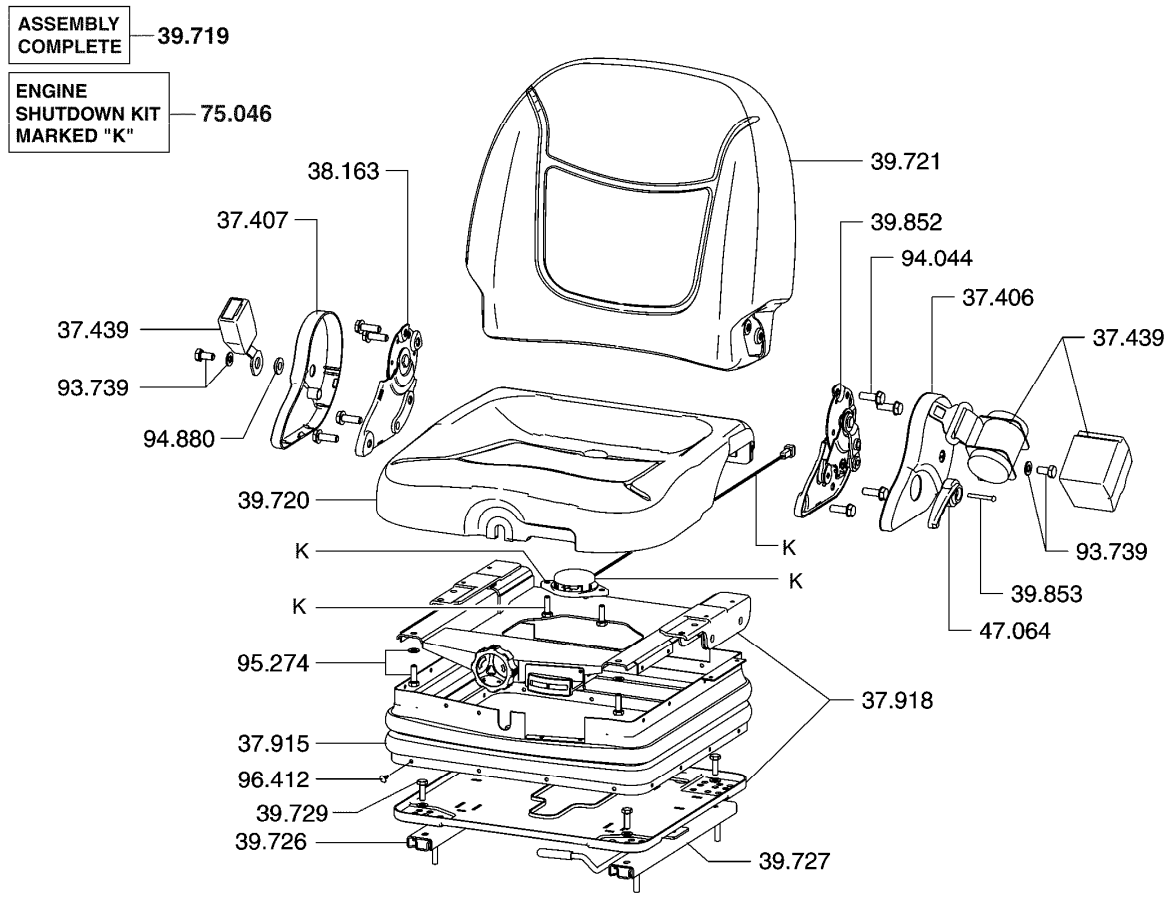

37.406 BRACKET, SEAT BACK REST COVER LH
브라켓

37.407 BRACKET, SEAT BACK REST COVER RH
브라켓

37.439 SAFETY BELT, SEAT
세이프티벨트

37.915 SUSPENSION COVER, SEAT SUSPENSION
서스펜션

37.918 SUSPENSION ASSEMBLY, SEAT
서스펜션

38.163 BRACKET, SEAT SUPPORT RH
브라켓


39.719 SEAT ASSEMBLY
시트


39.720 CUSHION, SEAT
쿠션


39.721 CUSHION, SEAT BACK REST
쿠션

39.726	ADJUSTOR, SEAT 어드져스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드져스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
75.046	KIT, SEAT ACTUATED ENGINE SHUTDOWN 킷
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
94.880	FASTENER, SEAT SUPPORT CATCH BRACKET 패스너
95.274	FASTENER, SEAT CUSHION SUSPENSION SUPPORT 패스너
96.412	FASTENER, SEAT SUSPENSION BACK SIDE COVER 패스너

NOTE :
ITEMS TO BE NOT SOLD SEPARATELY MARKED "NSS"

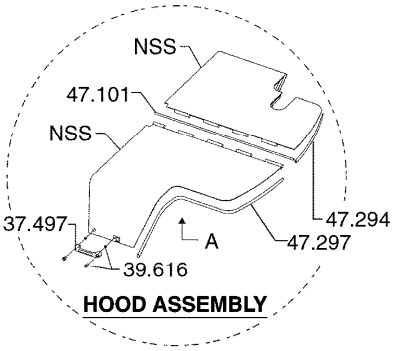

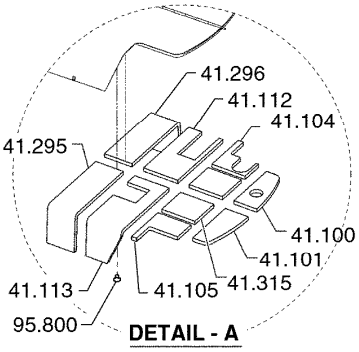

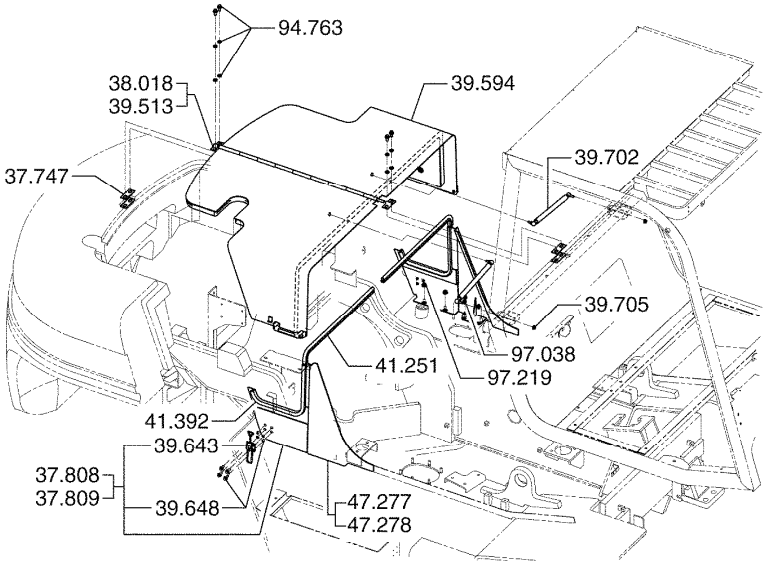


HOOD MOUNTING **39-847**

37.497	HANDLE, TOP HOOD LATCH 핸들	41.105	SOUND SEAL, LH SIDE HOOD 사운드시일
37.747	SHIM, SIDE HOOD PIVOT BRACKET 심	41.112	SOUND SEAL, RH SIDE HOOD FRONT 사운드시일
37.808	COVER, REAR RH 커버	41.113	SOUND SEAL, LH SIDE HOOD FRONT 사운드시일
37.809	COVER, REAR LH 커버	41.251	SOUND SEAL, TOP HOOD 사운드시일
38.018	BRACKET, HOOD SUPPORT 브라켓	41.295	SOUND ABSORBER, CAB SEAT HOOD LOWER 흡음재
39.513	SPACER, HOOD REAR SUPPORT 스페이서	41.296	SOUND ABSORBER, CAB SEAT HOOD LOWER 흡음재
39.594	HOOD, TOP 후드	41.315	SOUND SEAL, TOP HOOD REAR 사운드시일
39.616	FASTENER, TOP HOOD LATCH 패스너	41.392	SOUND SEAL, TOP HOOD 사운드시일
39.643	CATCH, TOP HOOD LATCH 캐치	47.101	PIN, TOP HOOD CATCH TO BRACKET 핀
39.648	FASTENER, TOP HOOD LATCH CATCH 패스너	47.277	COVER, FRONT LH 커버
39.702	PROP, HOOD 프롭	47.278	COVER, FRONT RH 커버
39.705	FASTENER, HOOD PROP 패스너	47.294	WEATHERSTRIP, REAR HOOD 웨더스트립
41.100	SOUND SEAL, TOP HOOD RH 사운드시일	47.297	WEATHERSTRIP, REAR HOOD 웨더스트립
41.101	SOUND SEAL, TOP HOOD LH 사운드시일	94.763	FASTENER, HOOD SUPPORT 패스너
41.104	SOUND SEAL, RH SIDE HOOD 사운드시일	95.800	FASTENER, SOUND SEAL 패스너

97.038 FASTENER, FRONT COVER
패스너

97.219 FASTENER, REAR COVER LATCH
*

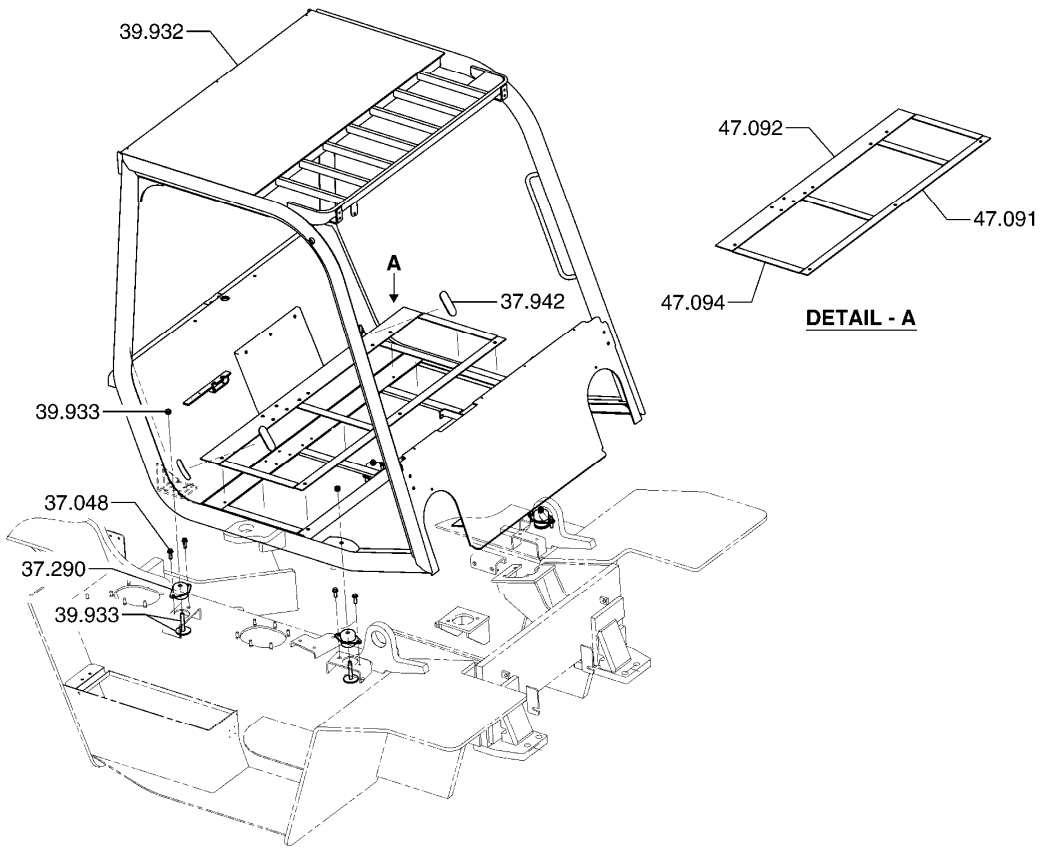

OVERHEAD GUARD MOUNTING **39-848**

37.048 FASTENER, OVERHEAD GUARD BUMPER
패스너

37.290 DAMPENER, OVERHEAD GUARD VIBRATION
댐프너

37.942 PLUG, OVERHEAD GUARD REAR SUPPORT PAD FASTENER
플러그


39.932 GUARD, OVERHEAD
가드

39.933 FASTENER, OVERHEAD GUARD
패스너

47.091 SEAL, DRIVERS CELL, LH FRONT
시일

47.092 SEAL, DRIVERS CELL, LH REAR
시일

47.094 SEAL, DRIVERS CELL, RH CENTER
시일

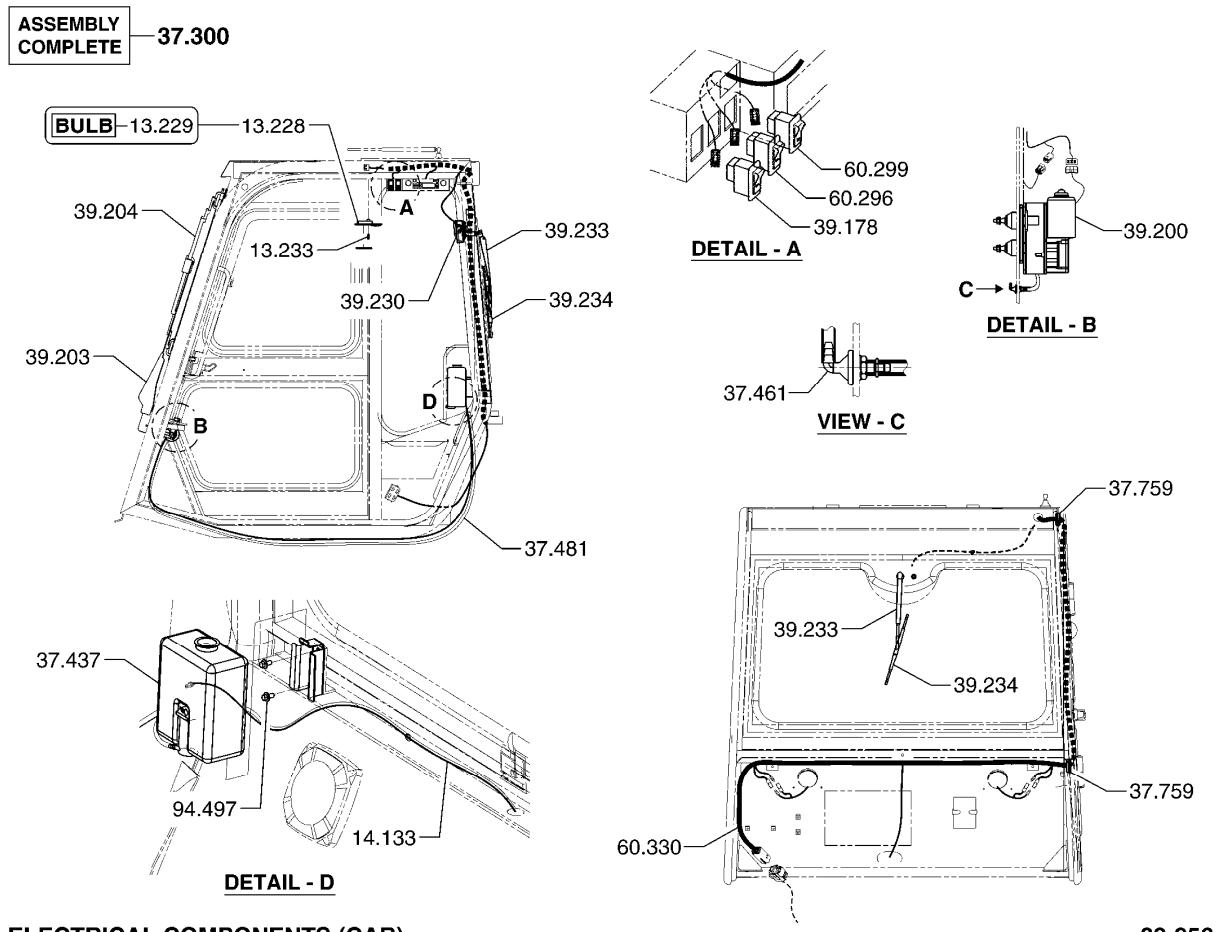

13.228	LAMP ASSEMBLY, DOME 램프
13.229	BULB, DOME LAMP 전구
13.233	FASTENER, DOME LAMP 패스너
14.133	WIRE, WIPER MOTOR 와이어
37.300	CAB ASSEMBLY 캐빈
37.437	PUMP & TANK, WINDSHIELD WASHER 펌프와탱크
37.461	NOZZLE, WINDSHIELD GLASS WASHER 노즐
37.481	LINE, WINDOW GLASS WASHER 라인
37.759	GROMMET, COVER WINDSHIELD WIPER MOTOR 그로멧

39.178 SWITCH, WINDSHIELD WIPER
스위치

39.200 MOTOR, WINDSHIELD WIPER
모터

39.203 ARM, WINDSHIELD WIPER
암

39.204 BLADE, WINDSHIELD WIPER
블레이드

39.230 MOTOR, REAR WINDOW WIPER
모터

39.233 ARM, REAR WINDOW WIPER
암


39.234 BLADE, REAR WINDOW WIPER
블레이드

60.296 SWITCH, WINDSHIELD WIPER (REAR)
스위치

60.299 SWITCH, HEATER ON/OFF
스위치

60.330 WIRING HARNESS, CAB
와이어하네스

94.497 FASTENER, WINDSHIELD WASHER TANK
패스너

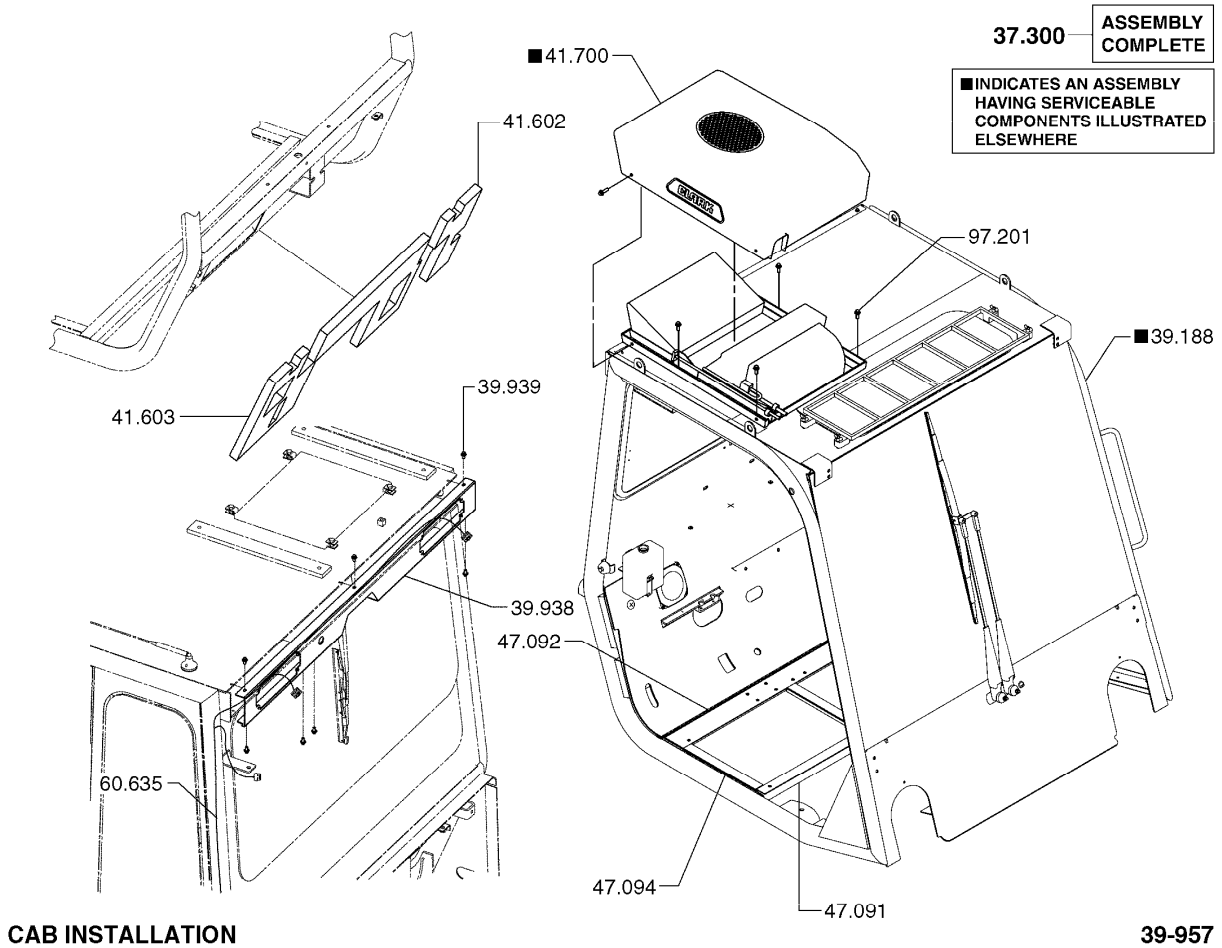

37.300 CAB ASSEMBLY
캐빈

39.188 CAB ASSEMBLY, WELDED
캐빈

39.938 BRACKET, OVERHEAD GUARD REAR SUPPORT
브라켓

39.939 FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET
패스너

41.602 SOUND SEAL, ENGINE HOOD
사운드시일


41.603 SOUND SEAL, ENGINE HOOD
사운드시일

41.700 AIR CONDITIONER ASSEMBLY
*


47.091 SEAL, DRIVERS CELL, LH FRONT
시일

47.092 SEAL, DRIVERS CELL, LH REAR
시일

47.094	SEAL, DRIVERS CELL, RH CENTER 시일
60.635	WIRING HARNESS, LIGHT 와이어하네스
97.201	FASTENER, AIR CONDITIONER MOUNTING *

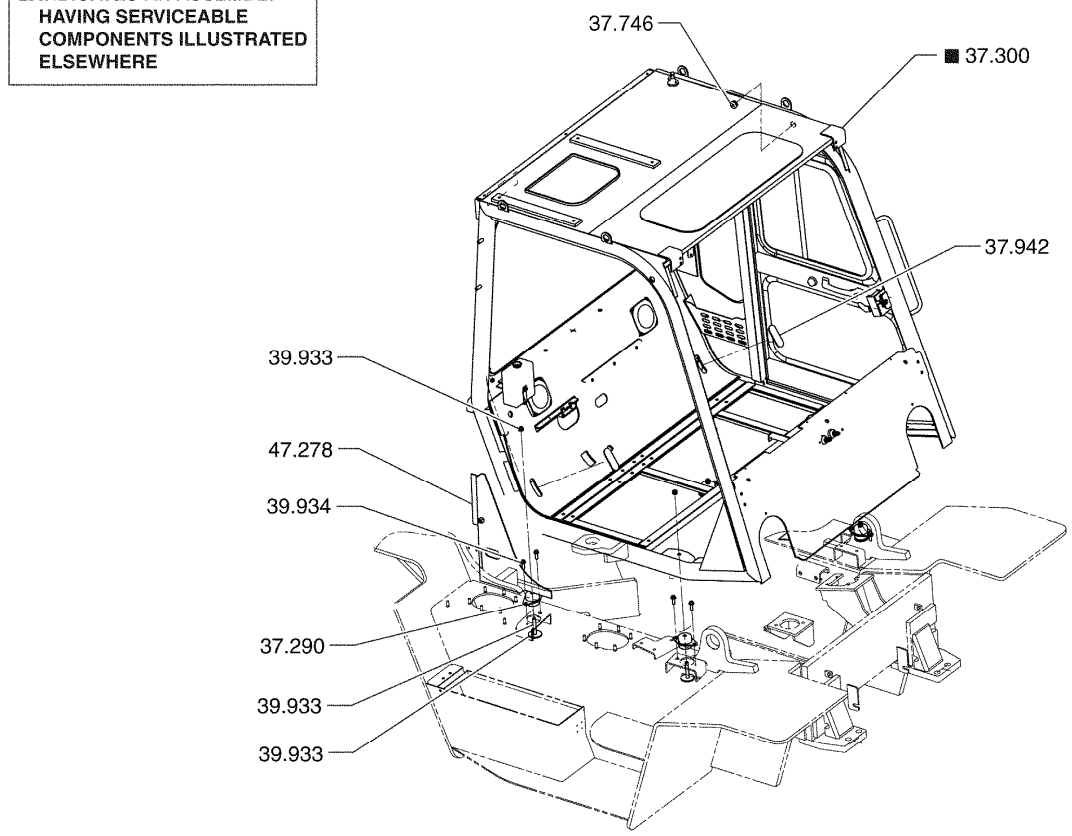

37.290	DAMPENER, OVERHEAD GUARD VIBRATION 댐프너
37.300	CAB ASSEMBLY 캐빈
37.746	PLUG, DRIVER OVERHEAD GUARD 플러그
37.942	PLUG, OVERHEAD GUARD REAR SUPPORT PAD FASTENER 플러그
39.933	FASTENER, OVERHEAD GUARD 패스너
39.934	FASTENER, OVERHEAD GUARD 패스너
47.278	COVER, FRONT RH 커버

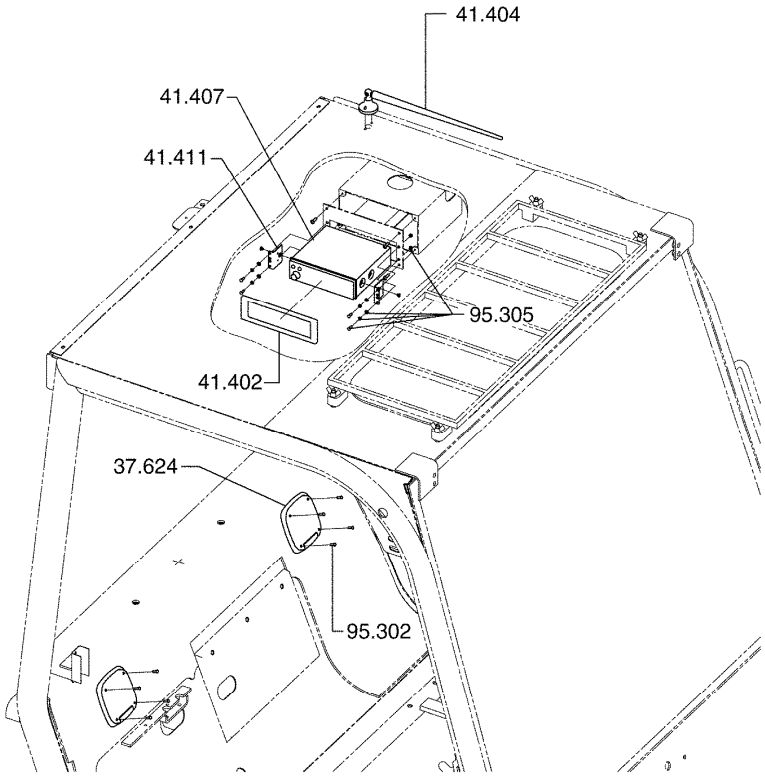

AUDIO INSTALLATION **39-961**

37.624 SPEAKER, CABIN
스피커

41.402 COVER, AUDIO AND TRANSCEIVER MOUNTING BOX
커버


41.404 ANTENNA, AUDIO
안테나

41.407 AUDIO
라디오

41.411 BRACKET, AUDIO AND TRANSCEIVER BOX MOUNTING
브라켓

95.302 FASTENER, LOUDSPEAKER
패스너

95.305 FASTENER, AUDIO AND TRANSCEIVER BOX TO MOUNTING BR
패스너

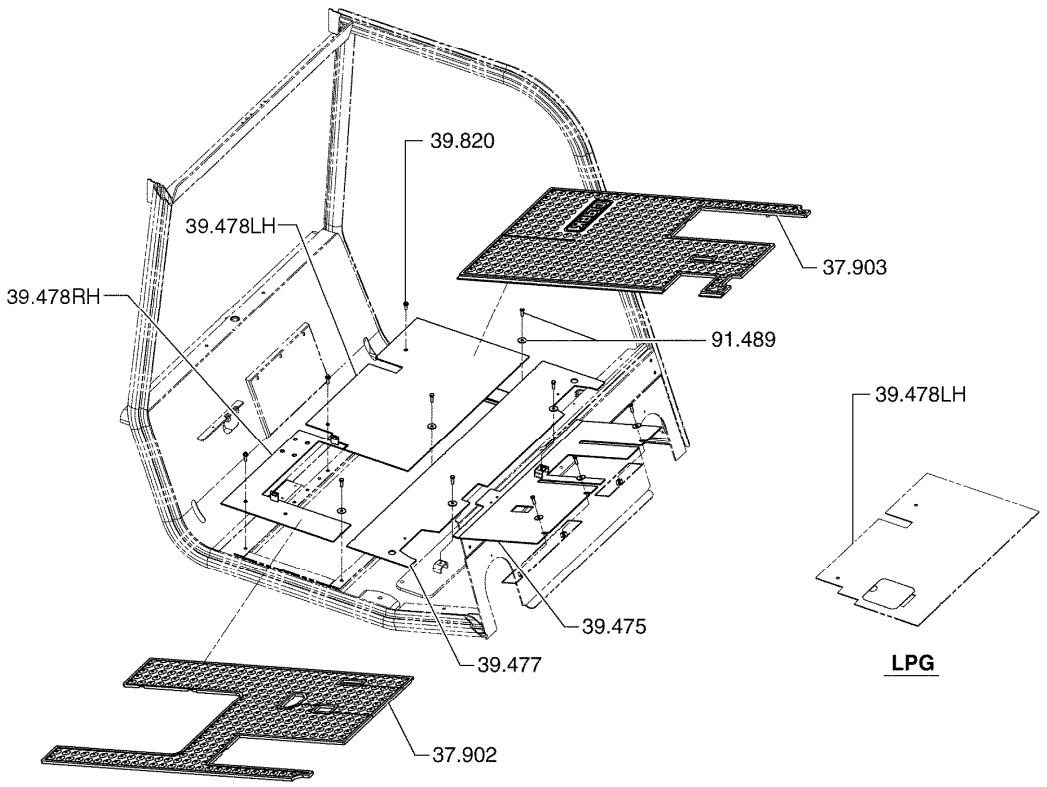

FLOOR PLATE MOUNTING **39-964**

37.902 MAT, FLOORPLATE
매트

37.903 MAT, FLOORPLATE
매트


39.475 PLATE, FRONT FLOOR
플레이트

39.477 PLATE, CENTER FLOOR
플레이트

39.478 PLATE, REAR FLOOR
플레이트

39.820 FASTENER, FLOOR PLATE MOUNTING BRACKET
패스너

91.489 FASTENER, FLOOR PLATE
패스너

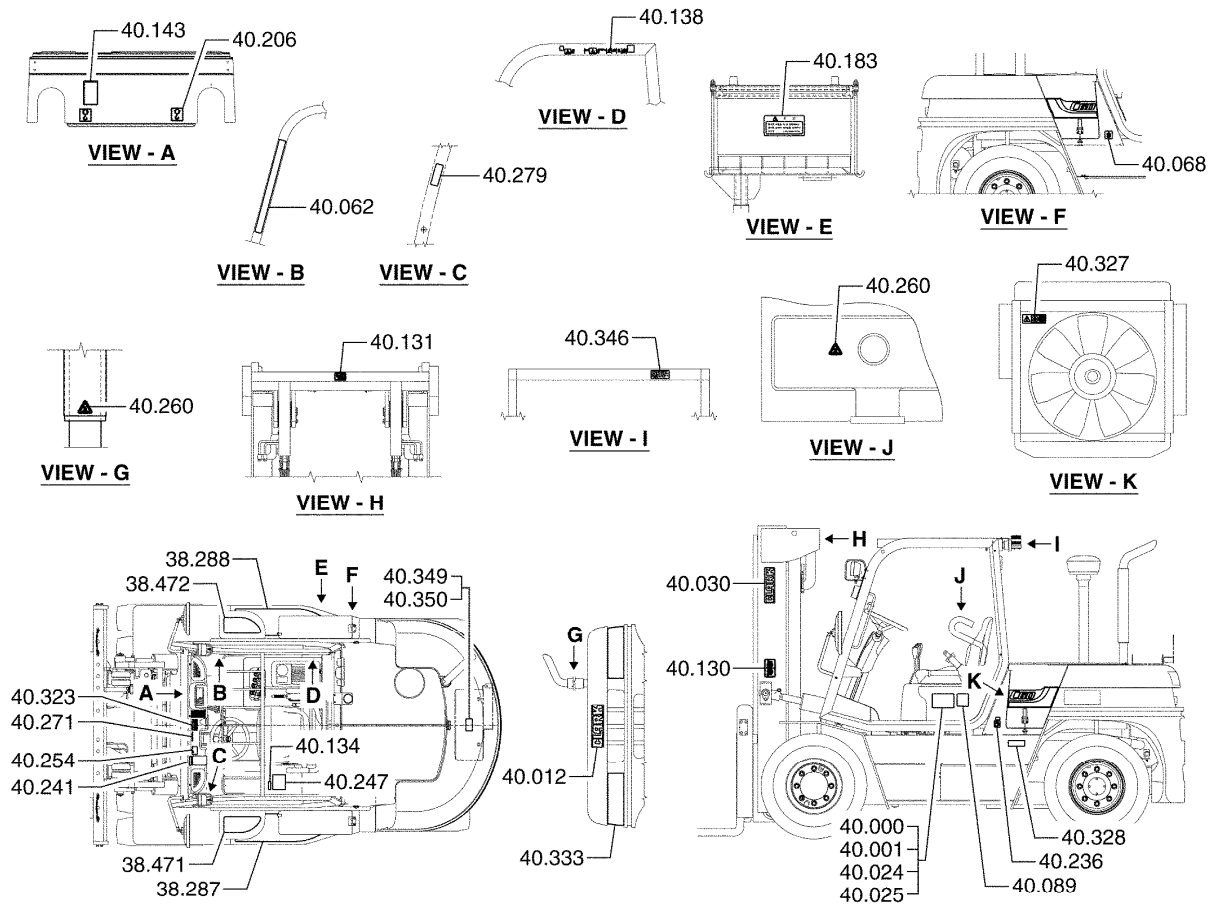


38.287	PAD, LH STEP NON-SKID (BOTTOM) *	40.134	DECAL, OPERATORS MANUAL LOCATION 데칼
38.288	PAD, RH STEP NON-SKID (BOTTOM) *	40.138	DECAL, SAFETY 데칼
38.471	PAD, LH STEP NON-SKID 패드	40.143	DECAL, OPERATORS INSTRUCTIONS 데칼
38.472	PAD, RH STEP NON-SKID 패드	40.183	DECAL, BATTERY DISCONNECT WARNING 데칼
40.000	PLATE, CAPACITY & SERIAL NUMBER 플레이트	40.206	DECAL, SLING EYE 데칼
40.001	FASTENER, CAPACITY & SERIAL PLATE 패스너	40.236	DECAL, FUEL 데칼
40.012	DECAL, CLARK LOGO-SMALL 데칼	40.241	DECAL, BRAKE OIL SPEC 데칼
40.024	PLATE, UNDERWRITERS LABEL 플레이트	40.247	DECAL, LPG FUEL CYL REPLACEMENT PROCEDURE 데칼
40.025	FASTENER, UNDERWRITERS LABEL PLATE 패스너	40.254	DECAL, TILT 데칼
40.030	DECAL, CLARK VERTICAL 데칼	40.260	DECAL, HOT SURFACE WARNING 데칼
40.062	DECAL, DRIVERS CAUTION 플레J鉗	40.271	DECAL, LP GAS 데칼
40.068	DECAL, HYD-SYSTEM OIL 데칼	40.279	DECAL, STARTING PROCEDURE 데칼
40.089	PLATE, SAFETY INSTRUCTION 플레이트	40.323	DECAL, NOTICE 데칼
40.130	LEGEND, SAFETY 범례	40.327	DECAL, FAN WARNING 데칼
40.131	LEGEND, SAFETY 범례	40.328	DECAL, WHEEL NUT WARNING 데칼

40.333 REFLECTOR, COUNTERWEIGHT
*

40.346 DECAL, OVERHEAD GUARD DROP TEST
*

40.349 PLATE, LESS LP TANK
*


40.350 FASTENER, PLATE LESS LP TANK
*

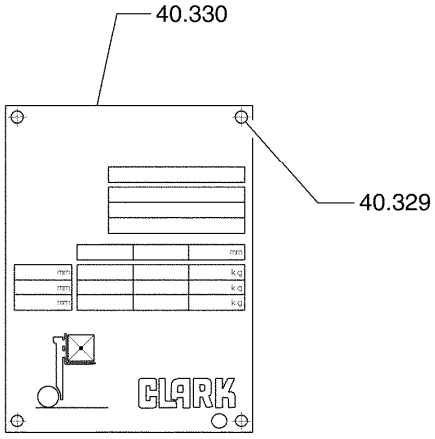


ATTACHMENT NAME PLATE **40-266**


40.329 FASTENER, ATTACHMENT NAME PLATE
패스너

40.330 PLATE. ATTACHMENT NAME
플레이트

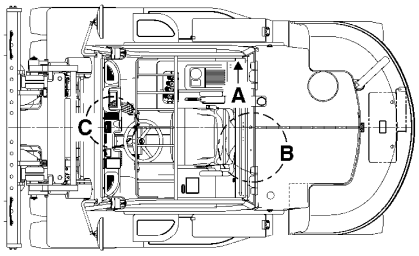


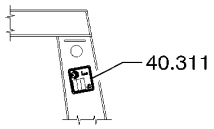


VIEW - A

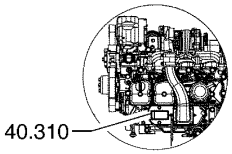

VIEW - B

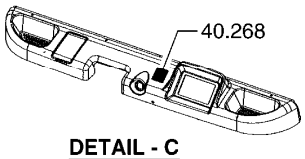

DETAIL - C

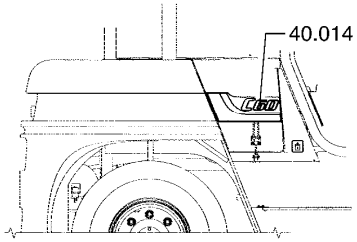


MODEL & SPECIFICATION DECALS **40-282**

40.014 DECAL, MODEL NAME
데칼

40.268 DECAL, SPEC
데칼

40.310 DECAL, EXHAUST GAS
데칼

40.311 DECAL, SOUND POWER LEVEL
데칼

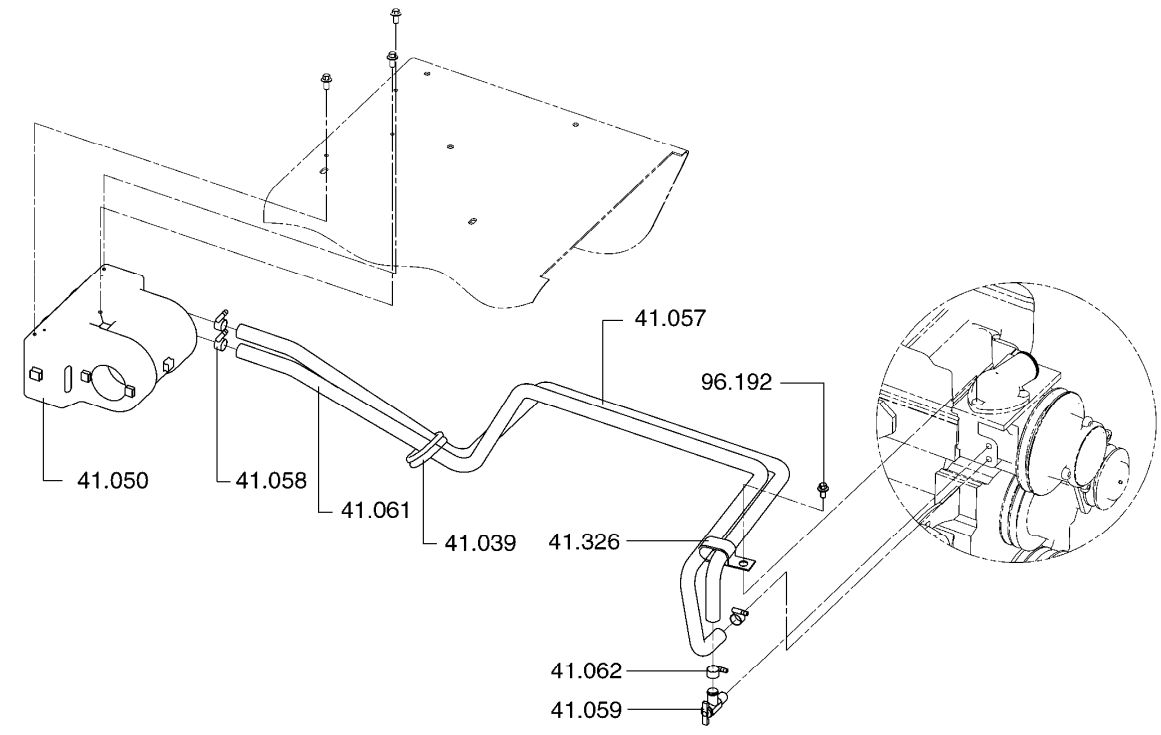

41.039 GROMMET, HEATER LINE
그로멧

41.050 HEATER ASSEMBLY
히터

41.057 LINE, HEATER INLET
라인

41.058 CLAMP, HEATER INLET LINE
클램프


41.059 FITTING, HEATER LINE (ENGINE)
피팅

41.061 LINE, HEATER OUTLET
라인

41.062 CLAMP, HEATER OUTLET LINE
클램프

41.326 CLAMP, HEATER HOSE PROTECTOR
클램프

96.192 FASTENER, HEATER INLET LINE CLAMP
패스너

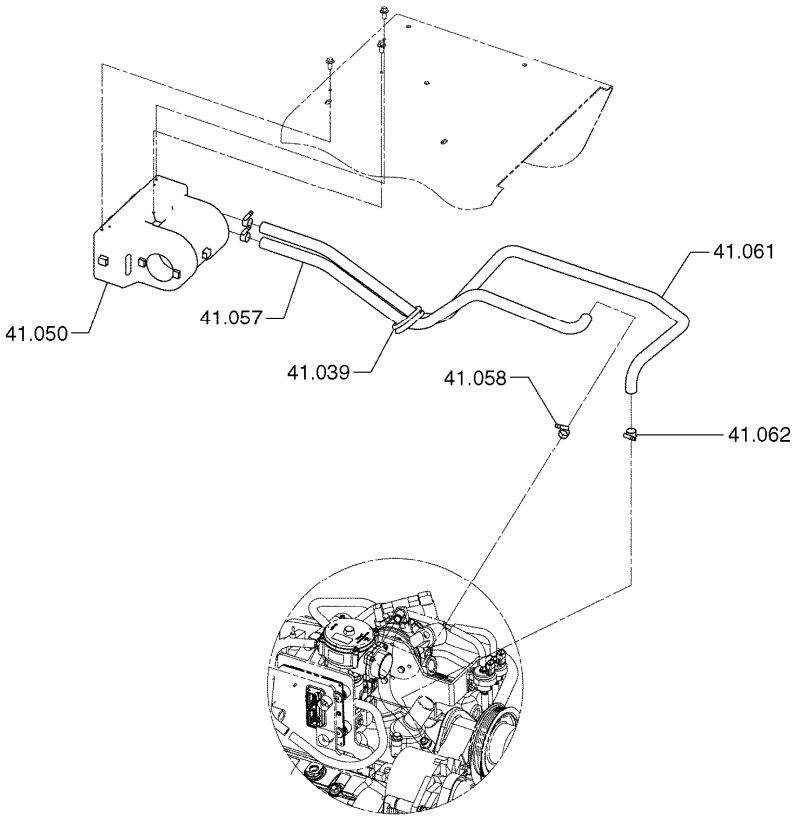

HEATER INSTALLATION **41-023**

41.039 GROMMET, HEATER LINE
그로멧


41.050 HEATER ASSEMBLY
히터

41.057 LINE, HEATER INLET
라인

41.058 CLAMP, HEATER INLET LINE
클램프


41.061 LINE, HEATER OUTLET
라인

41.062 CLAMP, HEATER OUTLET LINE
클램프

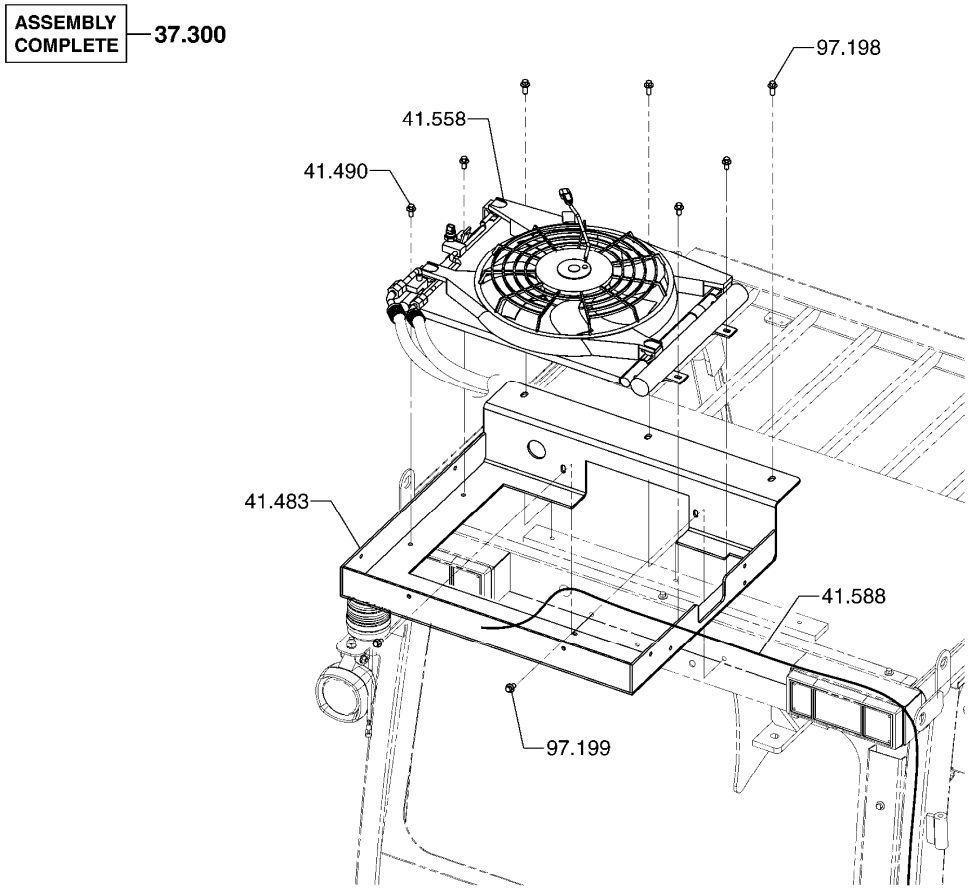


AIR CONDITIONER CONDENSER MOUNTING **41-089**

37.300	CAB ASSEMBLY 캐빈
41.483	BRACKET, A/C CONDENSER 브라켓
41.490	FASTENER, A/C CONDENSER MTG 패스너
41.558	CONDENSER, AIR CONDITIONER 컨덴서
41.588	WIRE HARNESS, AIR CONDITIONER CONDENSER 욱J潔紂電謬
97.198	FASTENER, A/C CONDENSER COVER MOUNTING *
97.199	FASTENER, A/C CONDENSER BRACKET *

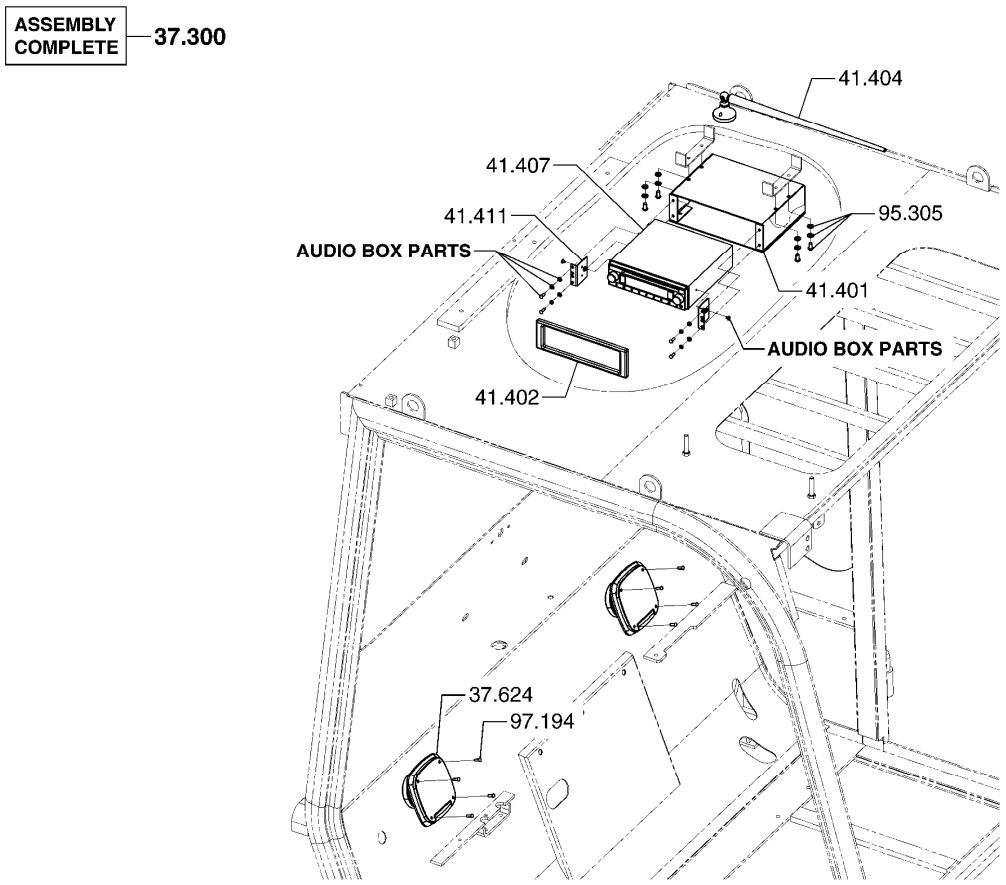

AUDIO INSTALLATION **41-116**


37.300	CAB ASSEMBLY 캐빈
37.624	SPEAKER, CABIN 스피커
41.401	BOX, AUDIO AND TRANSCEIVER MOUNTING 박스
41.402	COVER, AUDIO AND TRANSCEIVER MOUNTING BOX 커버
41.404	ANTENNA, AUDIO 안테나
41.407	AUDIO 라디오
41.411	BRACKET, AUDIO AND TRANSCEIVER BOX MOUNTING 브라켓
95.305	FASTENER, AUDIO AND TRANSCEIVER BOX TO MOUNTING BR 패스너
97.194	FASTENER, CABIN SPEAKER *

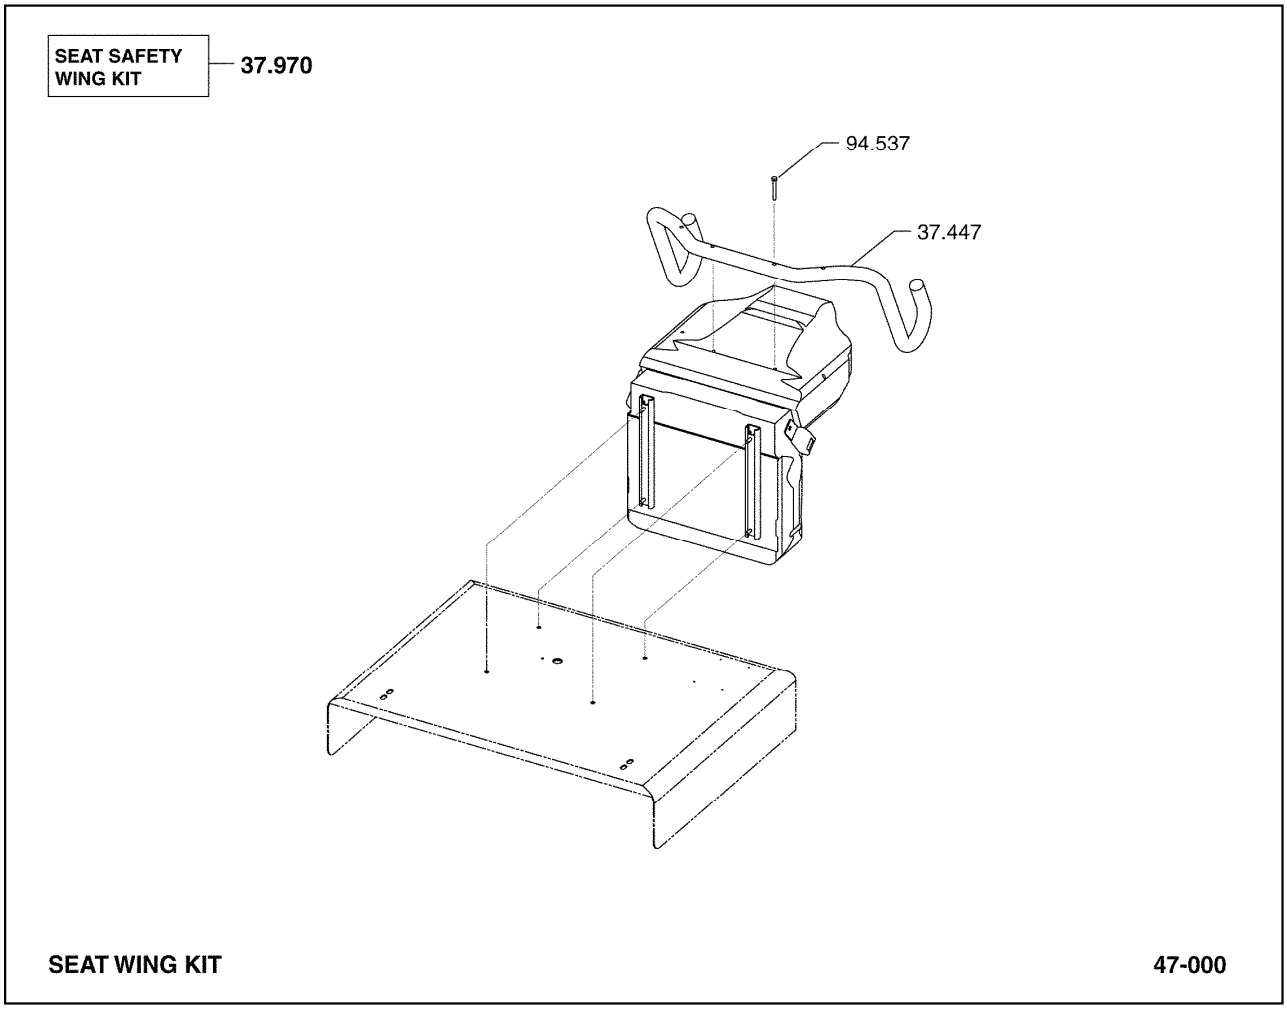

37.447 RESTRAINT, OPERATOR SEAT LATERAL
레스트레인트

37.970 KIT, SEAT SAFETY
킷

94.537 FASTENER, OPERATOR SEAT LATERAL RESTRAINT
패스너

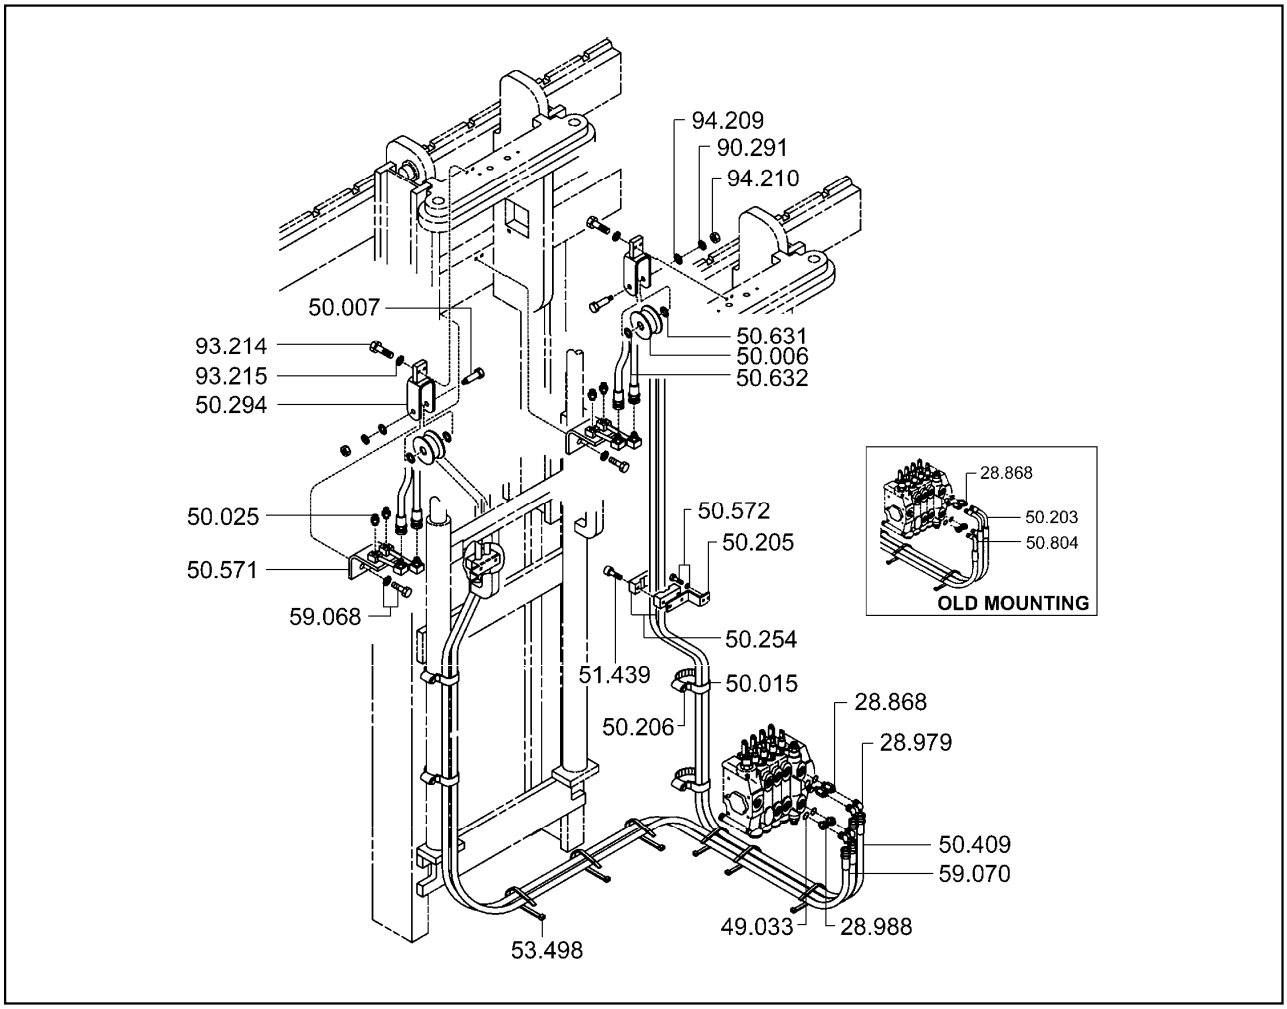

28.868 FITTING, AUXILIARY VALVE
피팅

28.979 FITTING, HYDRAULIC LINES
피팅

28.988 FITTING, HYDRAULIC VALVE BANK
피팅

49.033 SEAL, HYDRAULIC VALVE BANK
시일

50.006 SHEAVE, DEVICE HOSE UPPER
쉬브


50.007 RETAINER, DEVICE HOSE SHEAVE
리테이너

50.015 CLIP, DEVICE LINE TO UPRIGHT
클립

50.025 FITTING, DEVICE HOSE
피팅

50.203 LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인

50.205	BRACKET, DEVICE LINE CLAMP 브라켓
50.206	FASTENER, DEVICE RH LINE CLAMP 패스너
50.254	CLAMP, DEVICE LINE 클램프
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피봇
50.409	HOSE, DEVICE AT VALVE 호스
50.571	BRACKET, DEVICE HOSE 브라켓
50.572	FASTENER, DEVICE HOSE BRACKET 패스너
50.631	SPACER, DEVICE HOSE SHEAVE 스페이서
50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.804	LINE, DEVICE HYDRAULIC 라인
51.439	FASTENER, DEVICE HOSE CLIP 패스너
53.498	CLIP, DEVICE HOSE 클립
59.068	FASTENER, DEVICE HOSE BRACKET 패스너
59.070	LINE, DEVICE HOSE 라인
90.291	LOCKWASHER, DEVICE HOSE RETAINER 로크와셔
93.214	FASTENER, DEVICE HOSE SHEAVE PIVOT 패스너
93.215	LOCKWASHER, DEVICE HOSE SHEAVE PIVOT 로크와셔
94.209	FASTENER, DEVICE HOSE RETAINER 패스너
94.210	NUT, DEVICE HOSE RETAINER FASTENER 너트

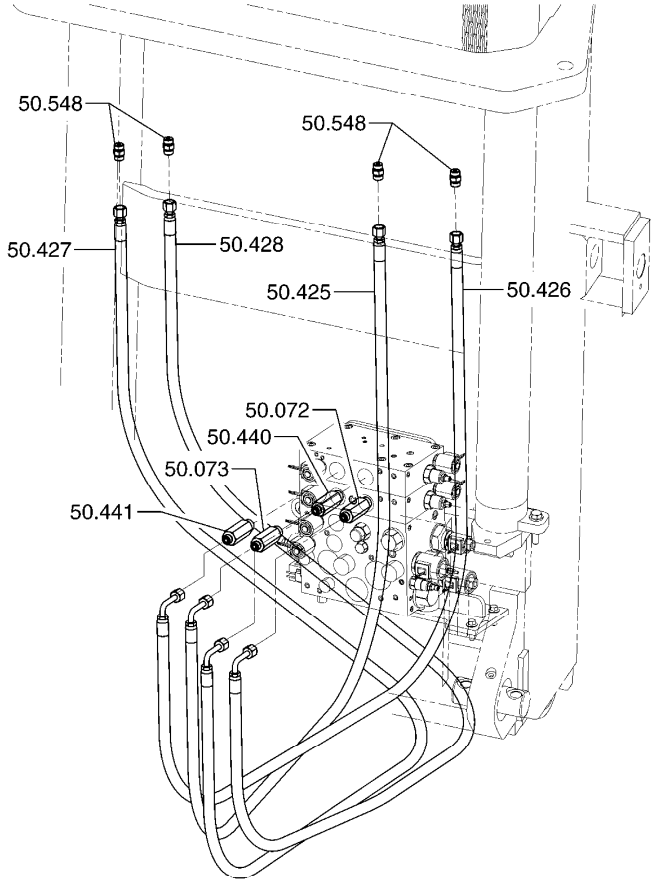

AUXILIARY VALVE LINES **50-146**

50.072 FITTING, 1ST AUXILIARY VALVE "B" PORT
피팅

50.073 FITTING, 2ND AUXILIARY VALVE "B" PORT
피팅

50.425 LINE, 1ST AUXILIARY VALVE "A" PORT
라인

50.426 LINE, 1ST AUXILIARY VALVE "B" PORT
라인


50.427 LINE, 2ND AUXILIARY VALVE "A" PORT
라인

50.428 LINE, 2ND AUXILIARY VALVE "B" PORT
라인

50.440 FITTING, 1ST AUXILIARY VALVE "A" PORT
피팅

50.441 FITTING, 2ND AUXILIARY VALVE "A" PORT
피팅

50.548 FITTING, DEVICE CROSSOVER HOSE
피팅

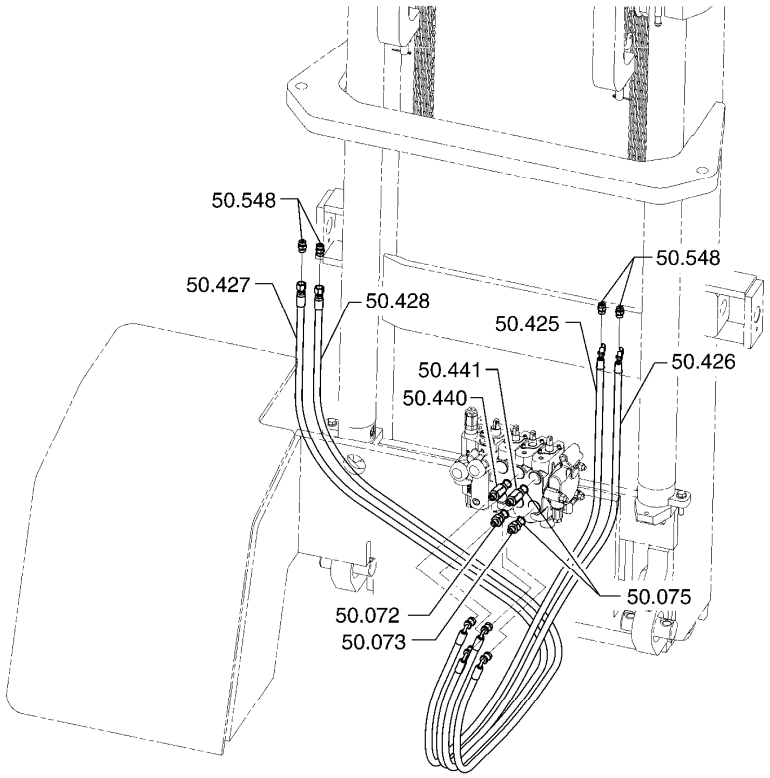

AUXILIARY VALVE LINES **50-186**

50.072 FITTING, 1ST AUXILIARY VALVE "B" PORT
피팅

50.073 FITTING, 2ND AUXILIARY VALVE "B" PORT
피팅

50.075 SEAL, AUXILIARY VALVE PORT FITTING
시일

50.425 LINE, 1ST AUXILIARY VALVE "A" PORT
라인

50.426 LINE, 1ST AUXILIARY VALVE "B" PORT
라인


50.427 LINE, 2ND AUXILIARY VALVE "A" PORT
라인

50.428 LINE, 2ND AUXILIARY VALVE "B" PORT
라인

50.440 FITTING, 1ST AUXILIARY VALVE "A" PORT
피팅

50.441 FITTING, 2ND AUXILIARY VALVE "A" PORT
피팅

50.548 FITTING, DEVICE CROSSOVER HOSE
피팅

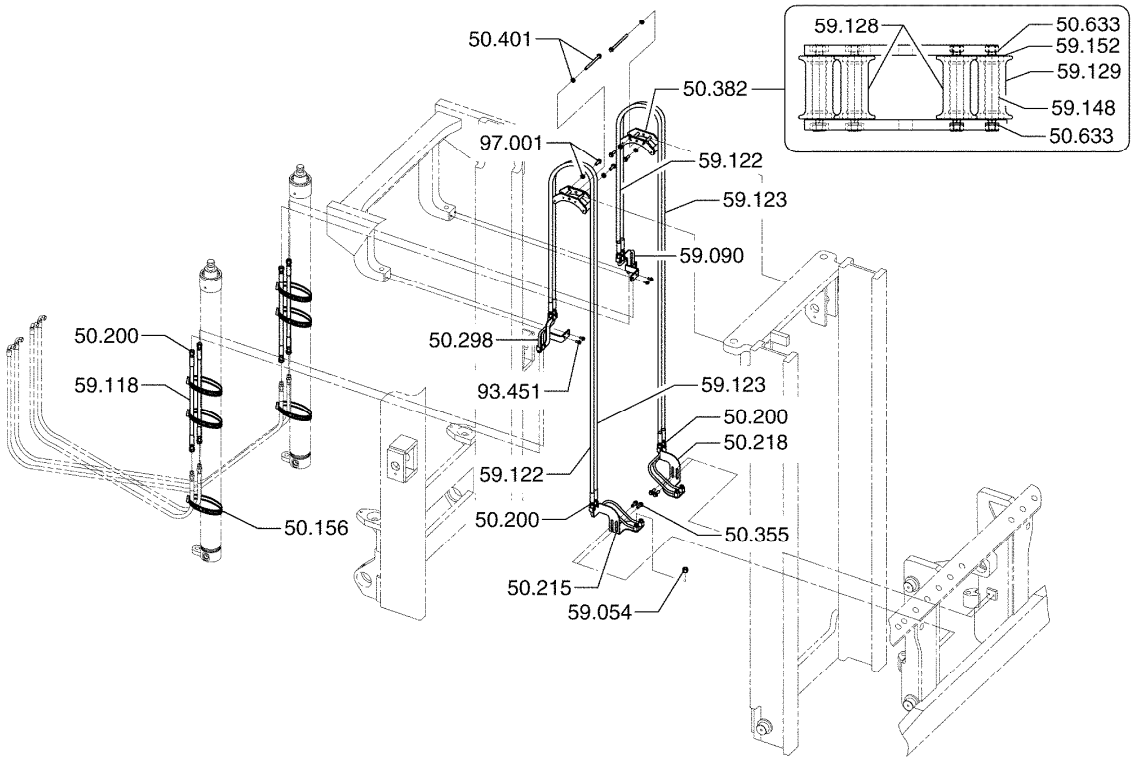

ATTACHMENT HOSE ADAPTATION (UPRIGHT) **50-196**

50.156 CLIP, DEVICE HOSE
클립

50.200 COUPLING, DEVICE HOSE
커플링

50.215 TERMINAL BLOCK, DEVICE HOSE
터미널블록

50.218 TERMINAL BLOCK, DEVICE LH HOSE
터미널블록

50.298 BRACKET, DEVICE HOSE TERMINAL
브라켓


50.355 FASTENER, DEVICE HOSE TERMINAL BLOCK
패스너

50.382 ROLLER, DEVICE HOSE
롤러

50.401 FASTENER, DEVICE HOSE ROLLER BRACKET
패스너

50.633 FASTENER, DEVICE HOSE ROLLER PIVOT
패스너

59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.118	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라J
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
59.123	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
59.128	TUBE, DEVICE HOSE REEL BRACKET *
59.129	TUBE, DEVICE HOSE REEL BRACKET *
59.148	SHAFT, DEVICE HOSE ROLLER *
59.152	SHIM, DEVICE HOSE ROLLER *
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
97.001	FASTENER, DEVICE HOSE ROLLER BRACKET 패스너

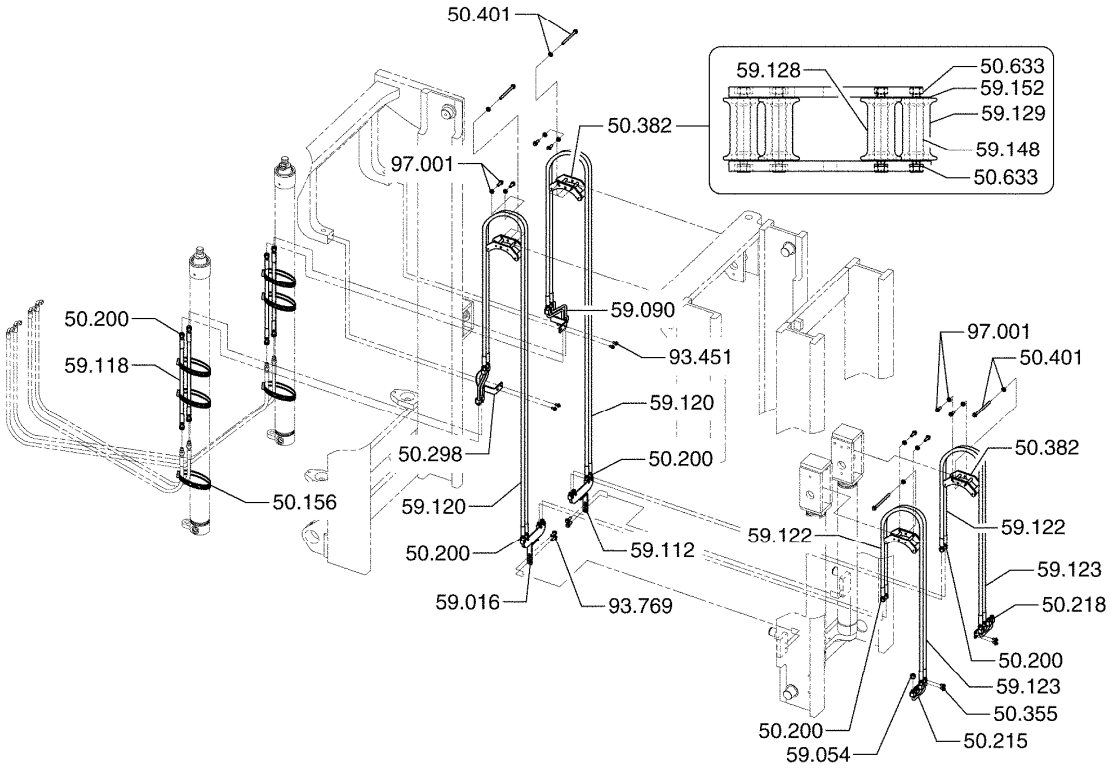

ATTACHMENT HOSE ADAPTATION (UPRIGHT) **50-262**

50.156 CLIP, DEVICE HOSE
클립

50.200 COUPLING, DEVICE HOSE
커플링

50.215 TERMINAL BLOCK, DEVICE HOSE
터미널블록

50.218 TERMINAL BLOCK, DEVICE LH HOSE
터미널블록

50.298 BRACKET, DEVICE HOSE TERMINAL
브라켓


50.355 FASTENER, DEVICE HOSE TERMINAL BLOCK
패스너

50.382 ROLLER, DEVICE HOSE
롤러

50.401 FASTENER, DEVICE HOSE ROLLER BRACKET
패스너

50.633 FASTENER, DEVICE HOSE ROLLER PIVOT
패스너


59.016	JUNCTION BLOCK, DEVICE HOSE 연결블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.112	JUNCTION BLOCK, DEVICE HOSE 연결블록
59.118	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라J
59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라J
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
59.123	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
59.128	TUBE, DEVICE HOSE REEL BRACKET *
59.129	TUBE, DEVICE HOSE REEL BRACKET *
59.148	SHAFT, DEVICE HOSE ROLLER *
59.152	SHIM, DEVICE HOSE ROLLER *
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
97.001	FASTENER, DEVICE HOSE ROLLER BRACKET 패스너

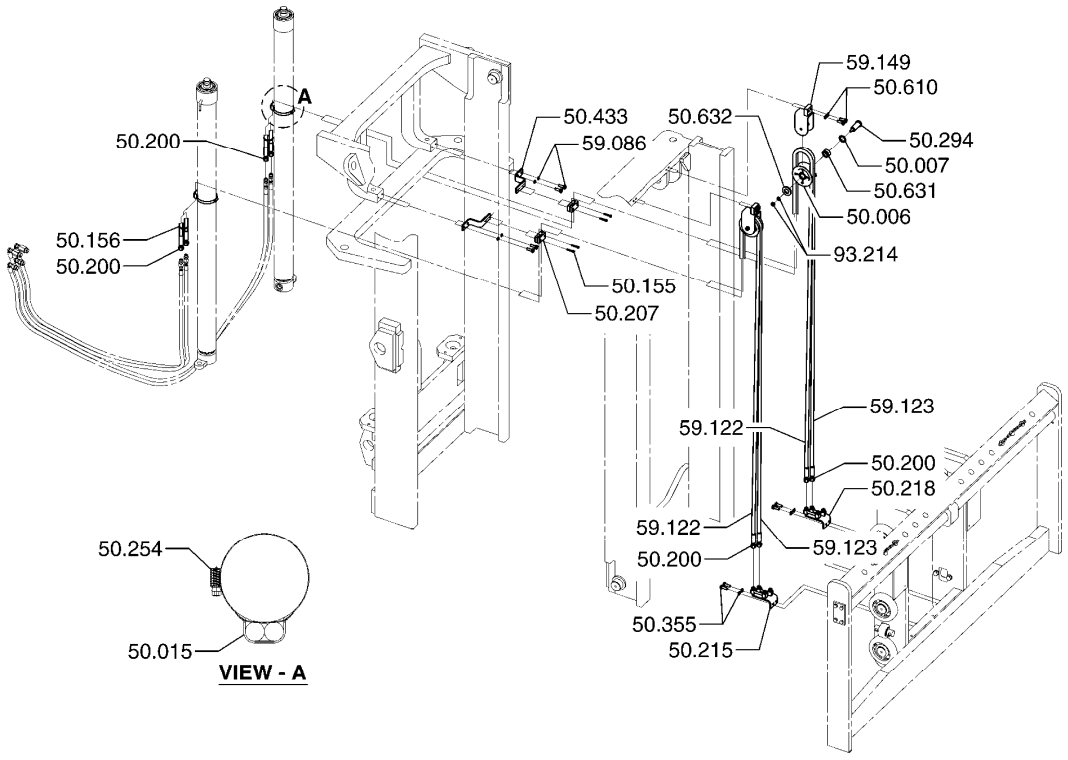

ATTACHMENT HOSE ADAPTATION (UPRIGHT) **50-271**

50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.007	RETAINER, DEVICE HOSE SHEAVE 리테이너
50.015	CLIP, DEVICE LINE TO UPRIGHT 클립
50.155	FASTENER, DEVICE HOSE CLIP 패스너
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.207	CLAMP, DEVICE HOSE 클램프
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록

50.254	CLAMP, DEVICE LINE 클램프
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피봇
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓
50.610	FASTENER, DEVICE HOSE GUARD 패스너
50.631	SPACER, DEVICE HOSE SHEAVE 스페이서
50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
59.123	LINE, DEVICE HYDRAULIC (INNER RAIL) 라J
59.149	GUARD, DEVICE HOSE SHEAVE *
93.214	FASTENER, DEVICE HOSE SHEAVE PIVOT 패스너

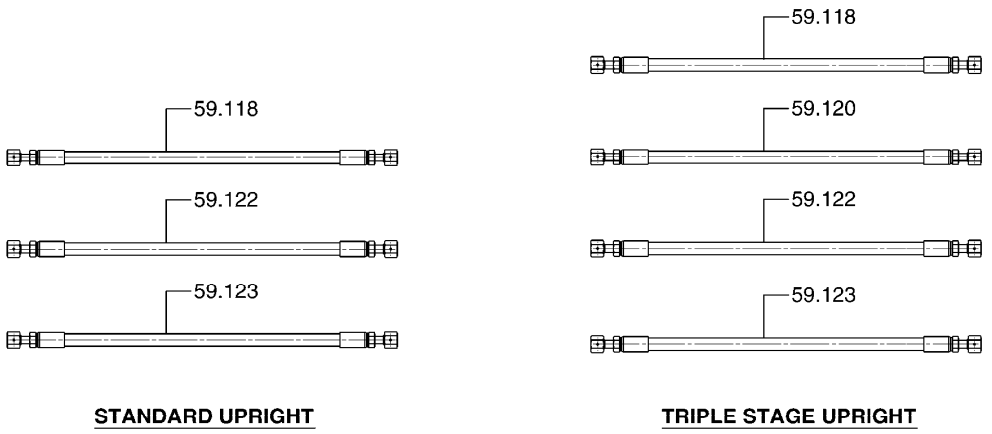


ATTACHMENT HOSE SETTINGS (UPRIGHT) **50-276**

59.118 LINE, DEVICE HYDRAULIC (OUTER RAIL)
라J

59.120 LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL)
라J

59.122 LINE, DEVICE HYDRAULIC (INNER RAIL)
라J

59.123 LINE, DEVICE HYDRAULIC (INNER RAIL)
라J

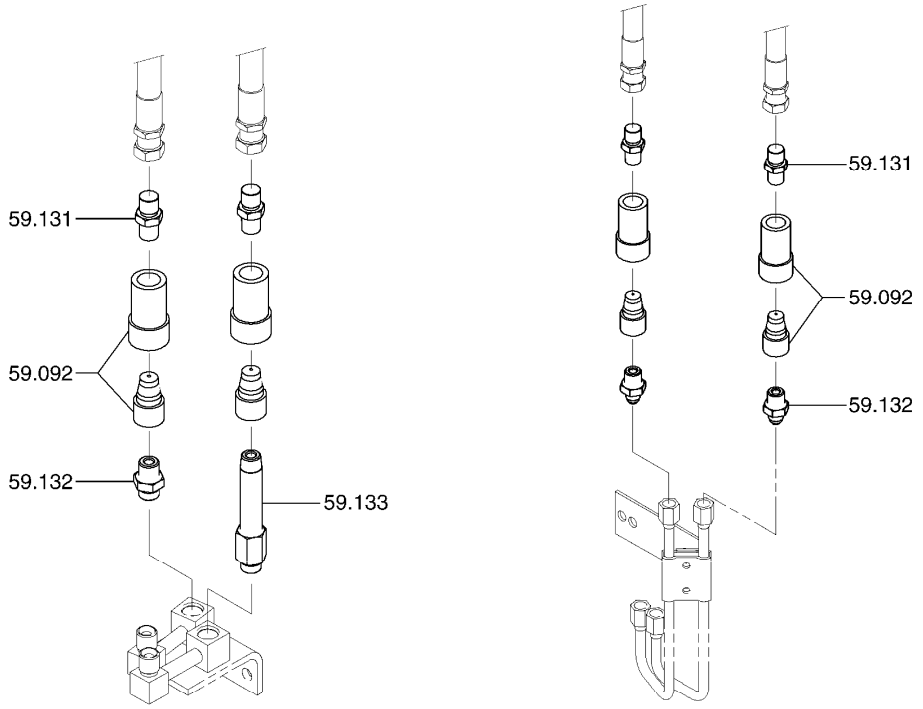


QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION **50-280**

59.092 QUICK DISCONNECT, DEVICE HOSE
퀵디스커넥트


59.131 FITTING, DEVICE LINE QUICK DISCONNECT
*

59.132 FITTING, DEVICE LINE QUICK DISCONNECT
*

59.133 FITTING, DEVICE LINE QUICK DISCONNECT
*

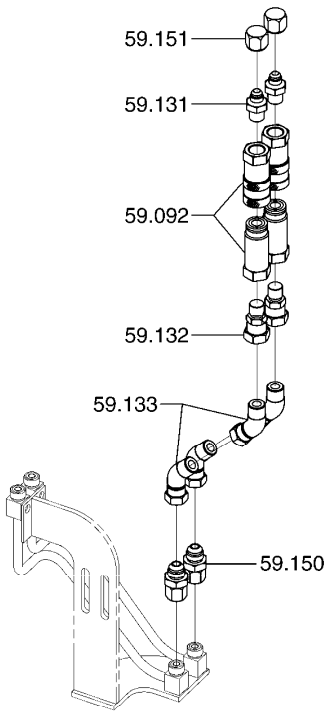


STANDARD

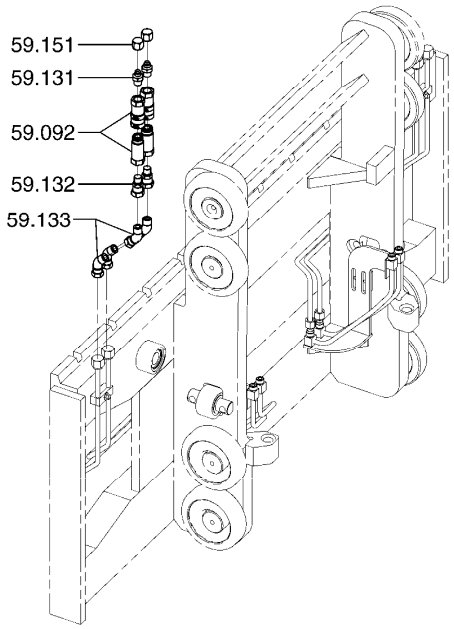

HIGH TERMINATION

QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION **50-281**

59.092	QUICK DISCONNECT, DEVICE HOSE 퀵디스커넥트
59.131	FITTING, DEVICE LINE QUICK DISCONNECT *
59.132	FITTING, DEVICE LINE QUICK DISCONNECT *
59.133	FITTING, DEVICE LINE QUICK DISCONNECT *
59.150	FITTING, DEVICE LINE QUICK DISCONNECTOR *
59.151	CAP, DEVICE LINE QUICK DISCONNECT FITTNG *

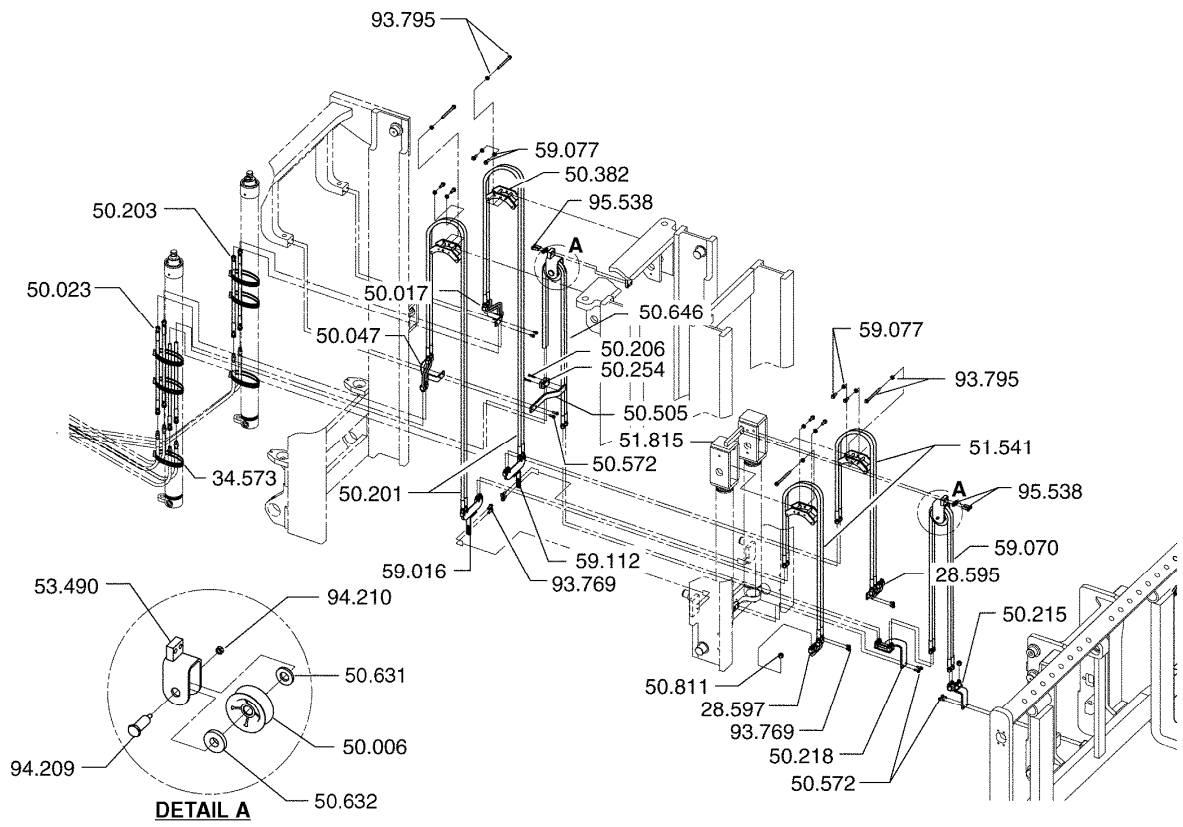


HOSE ADAPTATION **50-294**

28.595	TERMINAL BRACKET, UPRIGHT PIPING CARRIAGE 터미널브라켓	50.572	FASTENER, DEVICE HOSE BRACKET 패스너
28.597	TERMINAL BRACKET, UPRIGHT PIPING CARRIAGE 터미널브라켓	50.631	SPACER, DEVICE HOSE SHEAVE 스페이서
34.573	CLAMP, VENT LINE TO LIFT CYLINDER 클램프	50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.006	SHEAVE, DEVICE HOSE UPPER 쉬브	50.646	LINE, DEVICE 라인
50.017	TERMINAL BRACKET, DEVICE HOSE 터미널브라켓	50.811	NUT, DEVICE HOSE FITTING 너트
50.023	LINE, DEVICE HYDRAULIC 라인	51.541	LINE, DEVICE HYDRAULIC 라인
50.047	TERMINAL BRACKET, DEVICE HOSE 터미널브라켓	51.815	CARRIER, ROLL CLAMP ROTATING CYLINDER 캐리어
50.201	LINE, DEVICE 라인	53.490	GUARD, DEVICE HOSE 가드
50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인	59.016	JUNCTION BLOCK, DEVICE HOSE 연결블록
50.206	FASTENER, DEVICE RH LINE CLAMP 패스너	59.070	LINE, DEVICE HOSE 라인
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	59.077	FASTENER, DEVICE HOSE GUARD 패스너
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록	59.112	JUNCTION BLOCK, DEVICE HOSE 연결블록
50.254	CLAMP, DEVICE LINE 클램프	93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
50.382	ROLLER, DEVICE HOSE 롤러	93.795	FASTENER, DEVICE HOSE SHEAVE PIVOT 패스너
50.505	PLATE, DEVICE HOSE REEL REWIND REAR 플레이트	94.209	FASTENER, DEVICE HOSE RETAINER 패스너

94.210 NUT, DEVICE HOSE RETAINER FASTENER
너트


95.538 FASTENER, DEVICE HOSE REEL BRACKET
패스너

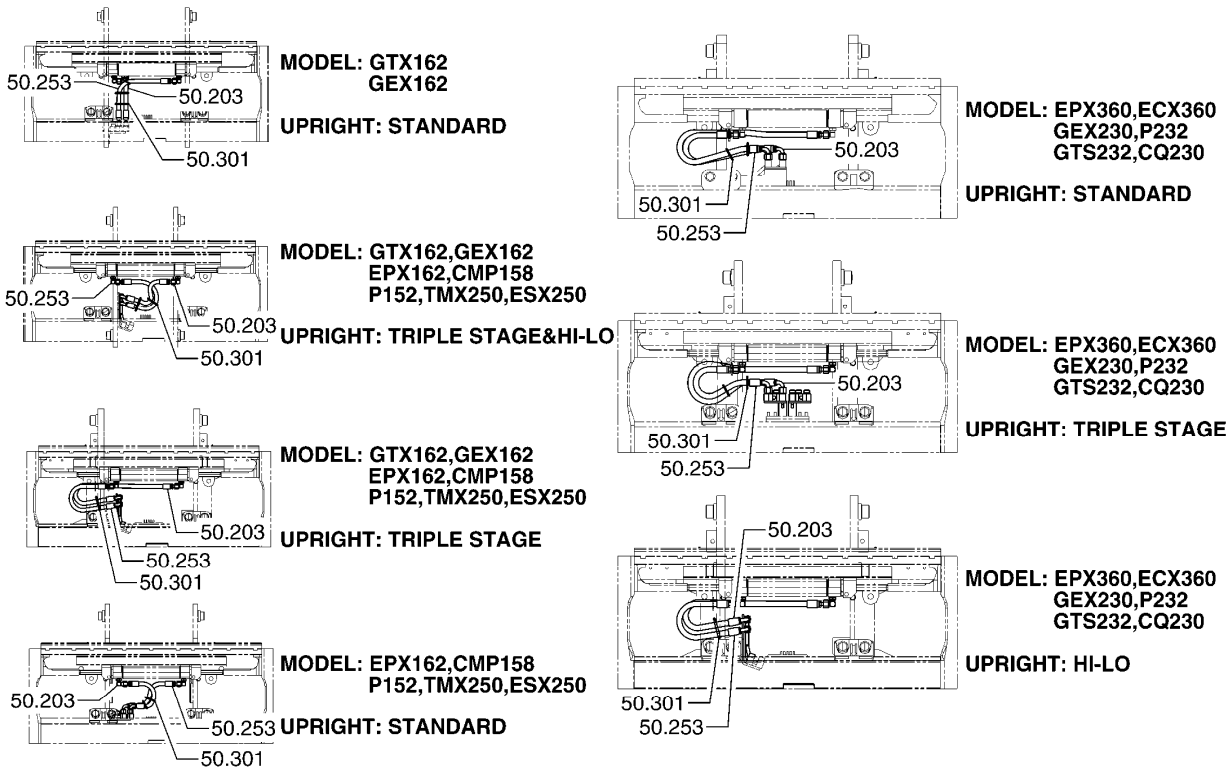

50.203 LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인

50.253 LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인

50.301 CLIP, DEVICE RH HOSE (AT CARRIAGE)
클립

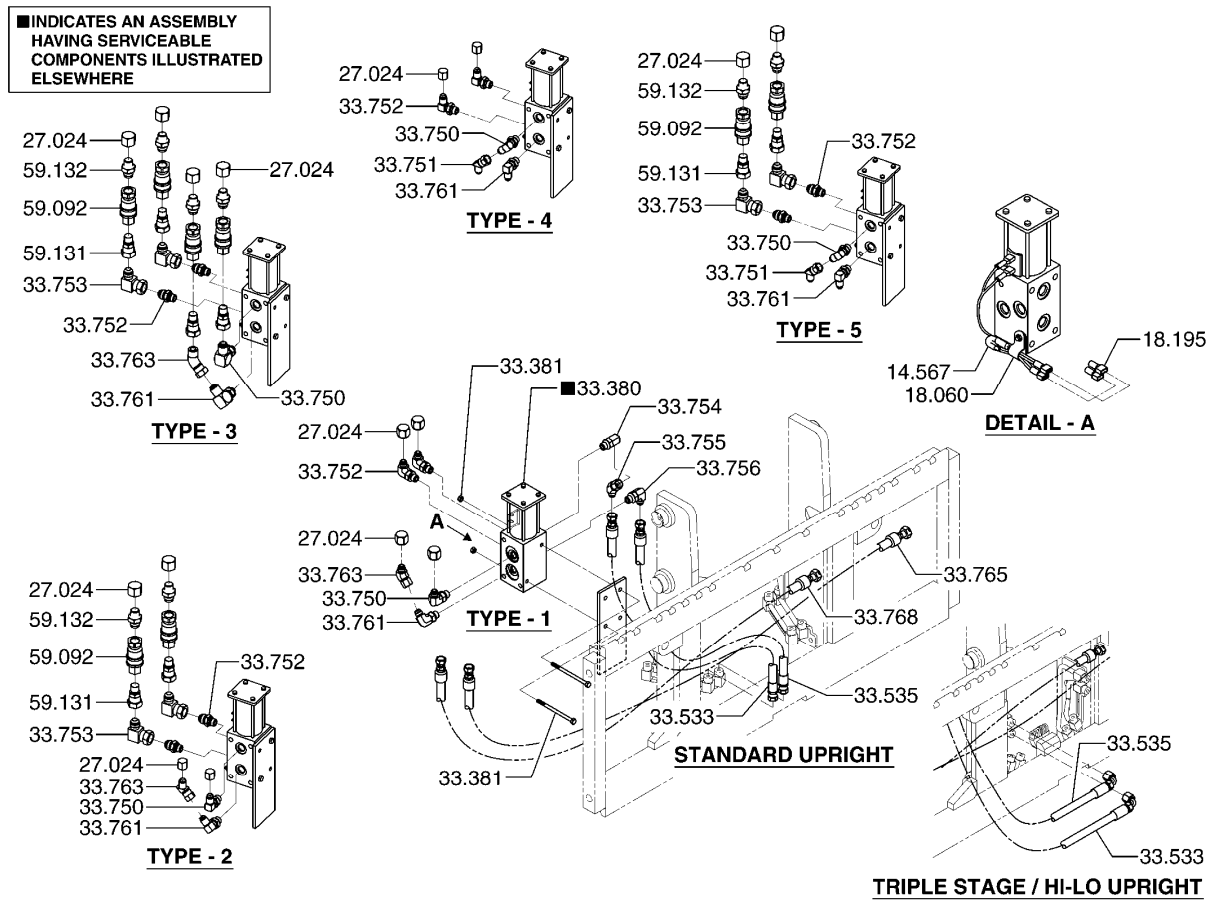

14.567 WIRE, DEVICE SELECTOR VALVE SWITCH FEED
와이어

18.060 CLAMP, DEVICE SELECTOR VALVE CABLE
클램프

18.195 TERMINAL, DEVICE SELECTOR VALVE SWITCH FEED WIRE
*

27.024 PLUG, DEVICE SELECTOR VALVE OPTIONAL OUTLET PORT
플러그

33.380 VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID
벨브


33.381 FASTENER, DEVICE SELECTOR VALVE
패스너

33.533 LINE, DEVICE SELECTOR VALVE "P" PORT HYDRAULIC
*

33.535 LINE, DEVICE SELECTOR VALVE "R" PORT HYDRAULIC
*

33.750 FITTING, DEVICE SELECTOR VALVE C1 PORT
피팅

33.751	FITTING, DEVICE SELECTOR VALVE C1 PORT 피팅
33.752	FITTING, DEVICE SELECTOR VALVE C2 PORT 피팅
33.753	FITTING, DEVICE SELECTOR VALVE C2 PORT 피팅
33.754	FITTING, DEVICE SELECTOR VALVE "P" PORT 피팅
33.755	FITTING, DEVICE SELECTOR VALVE "P" PORT 피팅
33.756	FITTING, DEVICE SELECTOR VALVE "R" PORT 피팅
33.761	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅
33.763	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅
33.765	LINE, DEVICE SELECTOR VALVE C4 PORT HYDRAULIC 라인
33.768	LINE, DEVICE SELECTOR VALVE C1 PORT HYDRAULIC 라인
59.092	QUICK DISCONNECT, DEVICE HOSE 퀵디스커넥트
59.131	FITTING, DEVICE LINE QUICK DISCONNECT *
59.132	FITTING, DEVICE LINE QUICK DISCONNECT *

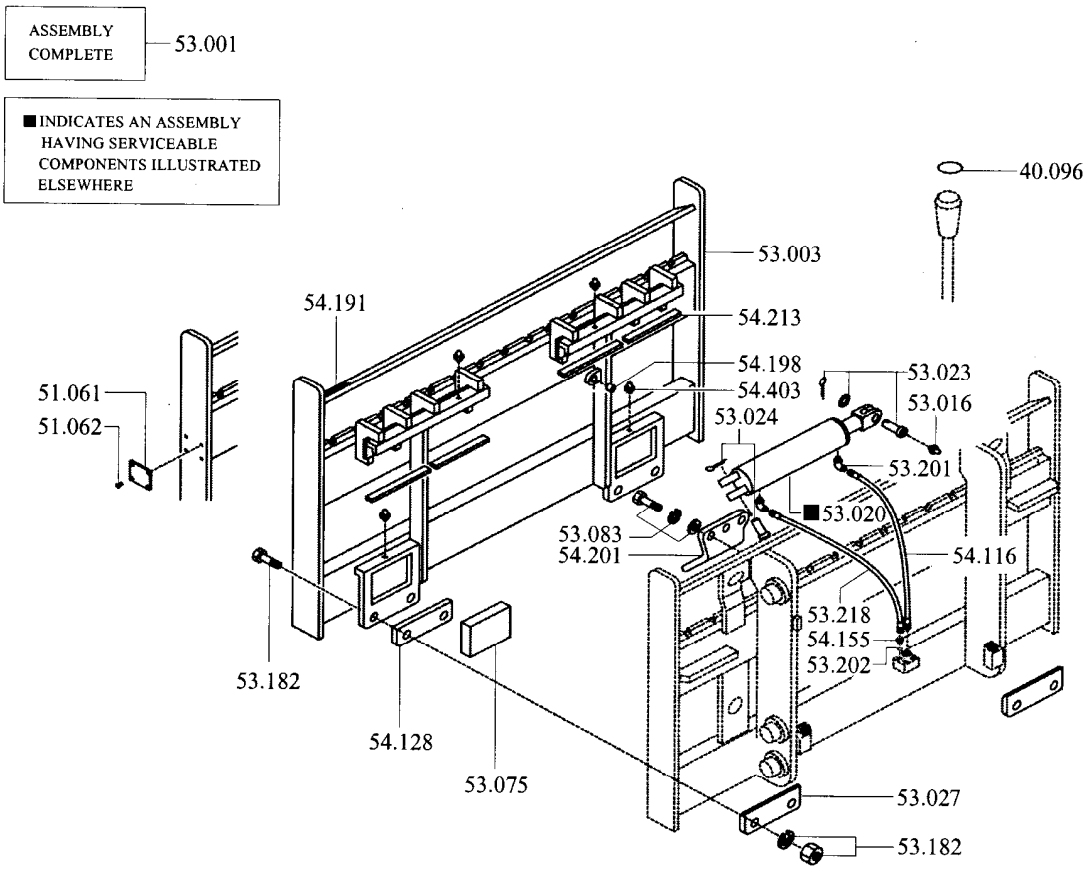

40.096 DECAL, SIDE SHIFTER INSTRUCTION
데칼

51.061 PLATE, DEVICE CAPACITY & SERIAL NUMBER
플레이트

51.062 FASTENER, DEVICE CAPACITY & SERIAL NUMBER PLATE
패스너

53.001 ATTACHMENT, SIDE SHIFTER COMPLETE
어태치먼트

53.003 FRAME, SIDE SHIFTER MOVABLE
프레임


53.016 FITTING-LUB, SIDE SHIFTER MOVABLE FRAME SUPPORT SH
피팅

53.020 CYLINDER ASSEMBLY, SIDE SHIFTER
실린더

53.023 ANCHOR, SIDE SHIFTER CYLINDER ROD END
앵커

53.024 ANCHOR, SIDE SHIFTER CYLINDER BASE
앵커

53.027	SPACER, SIDE SHIFTER MOVABLE FRAME LOWER GUIDE 스페이서
53.075	BEARING, SIDE SHIFTER (LOWER) 베어링
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너
53.182	FASTENER, SIDE SHIFTER HANGER 패스너
53.201	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT 피팅
53.202	SEAL, SIDE SHIFTER CYLINDER ANCHOR PORT FITTING 시일
53.218	LINE, SIDE SHIFTER CYLINDER ROD PORT 라인
54.116	LINE, SIDE SHIFT CYLINDER ROD PORT 라인
54.128	SPACER, SIDE SHIFTER MOVEABLE FRAME BEARING 스페이서
54.155	FITTING, SIDE SHIFTER CYLINDER ROD PORT LINE 피팅
54.191	PLATE, SIDE SHIFT NAME 플레이트
54.198	BEARING, SIDE SHIFTER BASE PLATE ARM 베어링
54.201	PLATE, SIDE SHIFT CYLINDER RAM THRUST 플레이트
54.213	BEARING, SIDE SHIFTER (UPPER) 베어링
54.403	FITTING-LUB, SIDE SHIFTER BASE PLATE ARM 피팅

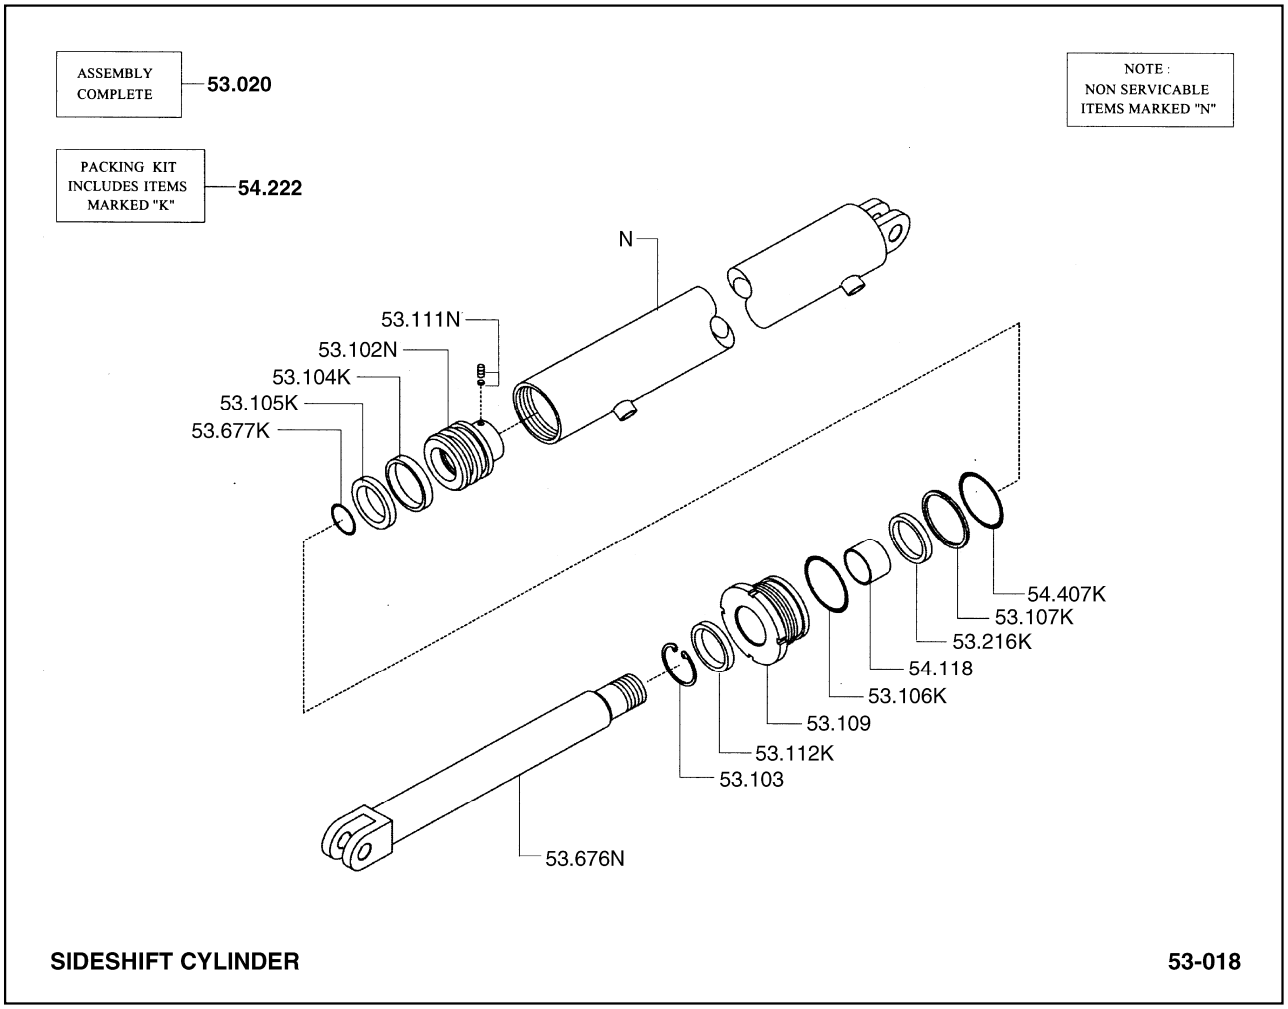

SIDESHIFT CYLINDER **53-018**

53.020 CYLINDER ASSEMBLY, SIDE SHIFTER
실린더

53.102 PISTON & ROD ASSEMBLY, SIDE SHIFTER CYLINDER
피스톤과로드

53.103 RING, SIDE SHIFTER CYLINDER PISTON WEAR
링

53.104 RING, SIDE SHIFTER CYL PISTON PACKING BACK-UP
링

53.105 PACKING, SIDE SHIFT CYLINDER PISTON
패킹

53.106 SEAL, SIDE SHIFTER CYLINDER GLAND
시일

53.107 RING, SIDE SHIFT CYL GLAND SEAL BACK-UP
링

53.109 GLAND, SIDE SHIFTER CYLINDER
그랜드

53.111 LOCK, SIDE SHIFTER CYLINDER GLAND RETAINER
로크

53.112 WIPER, SIDE SHIFTER CYLINDER PISTON ROD
와이퍼

53.216 SEAL, SIDE SHIFTER CYLINDER ROD PORT FITTING
시일


53.676 ROD, SIDE SHIFTER CYLINDER PISTON
로드

53.677 SEAL, SIDE SHIFTER CYLINDER PISTON
시일

54.118 BEARING, SIDE SHIFTER CYLINDER ROD END
베어링

54.222 PACKING KIT, SIDE SHIFTER CYLINDER
패킹킷

54.407 SEAL, SIDE SHIFTER CYLINDER PORT ROD
시일

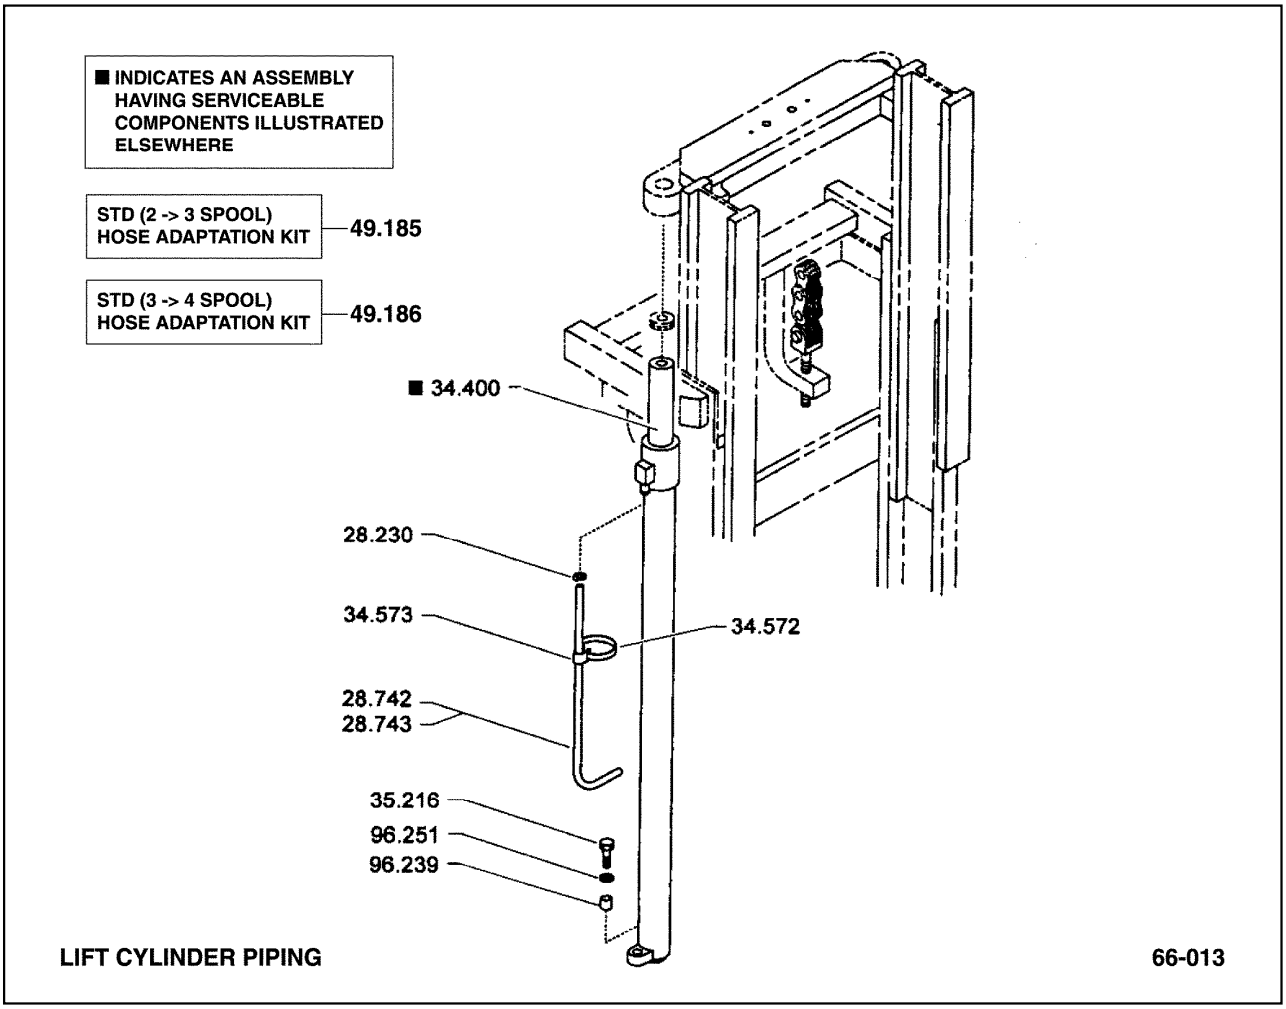

28.230 CLAMP, LIFT CYLINDER VENT LINE
클램프

28.742 LINE, LIFT CYLINDER LEFT HAND
라인

28.743 LINE, LIFT CYLINDER RIGHT HAND
라인

34.400 CYLINDER ASSEMBLY, LIFT
실린더

34.572 STRAP, VENT LINE TO LIFT CYLINDER
스트랩

34.573 CLAMP, VENT LINE TO LIFT CYLINDER
클램프


35.216 FASTENER, LIFT CYLINDER (ANCHOR END)
패스너

49.185 HOSE ADAPTATION KIT, STD 3 SPOOL CONVERSION
연결호스킷

49.186 HOSE ADAPTATION KIT, STD 4 SPOOL CONVERSION
연결호스킷

96.239 SPACER, LIFT CYLINDER FASTENER
스페이서

96.251 WASHER, LIFT CYLINDER FASTENER
와셔

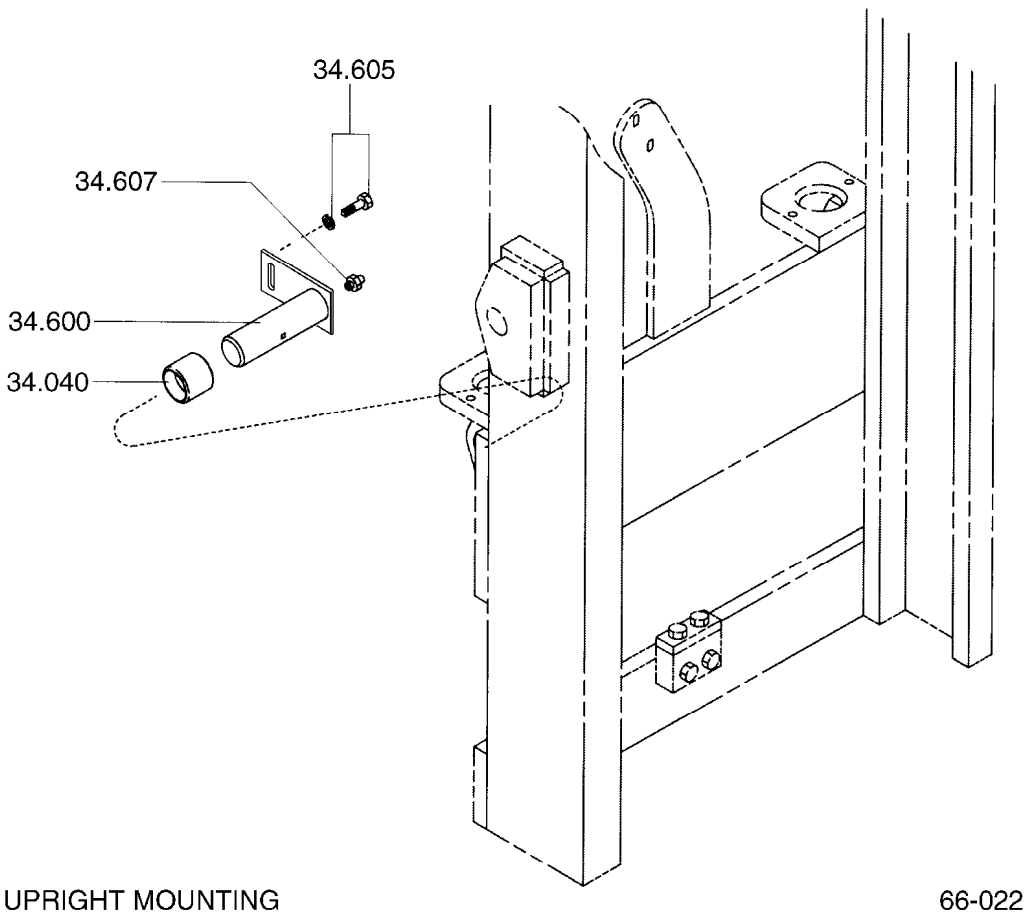


34.040 BUSHING, UPRIGHT SUPPORT PIN
부싱

34.600 SUPPORT, UPRIGHT
서포트


34.605 FASTENER, UPRIGHT SUPPORT PIN LOCK PLATE
패스너

34.607 FITTING-LUB, UPRIGHT SUPPORT
피팅

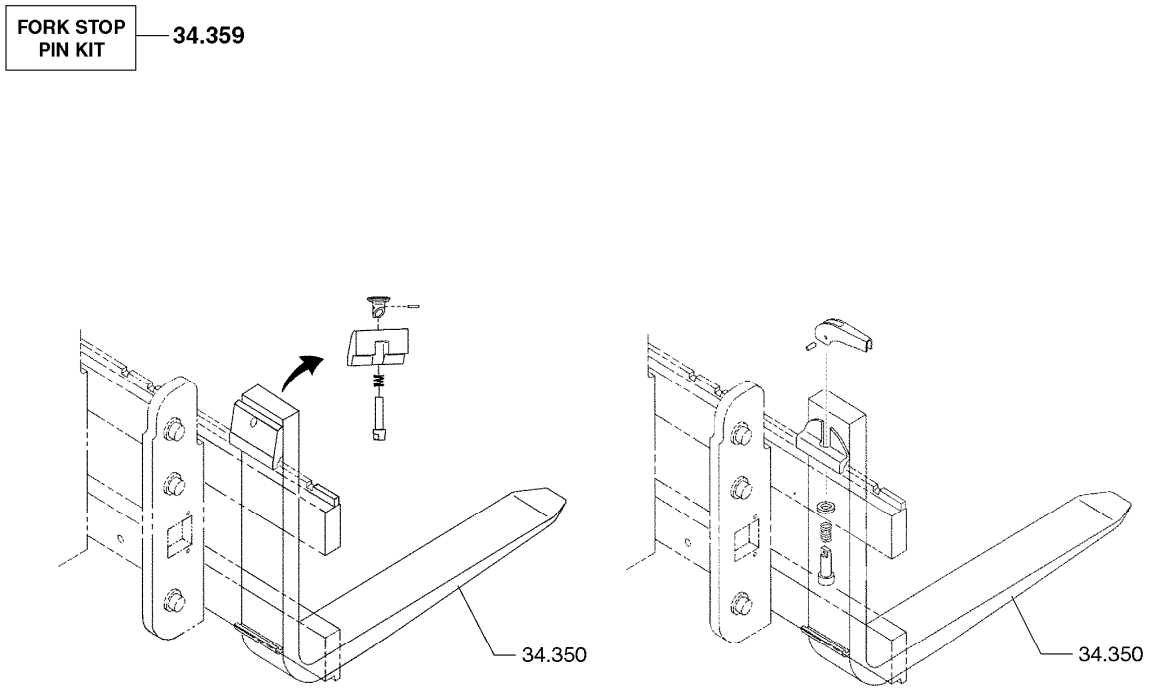

34.350 FORK ASSEMBLY
포크

34.359 KIT, FORK STOP PIN (CAPTIVE)
킷

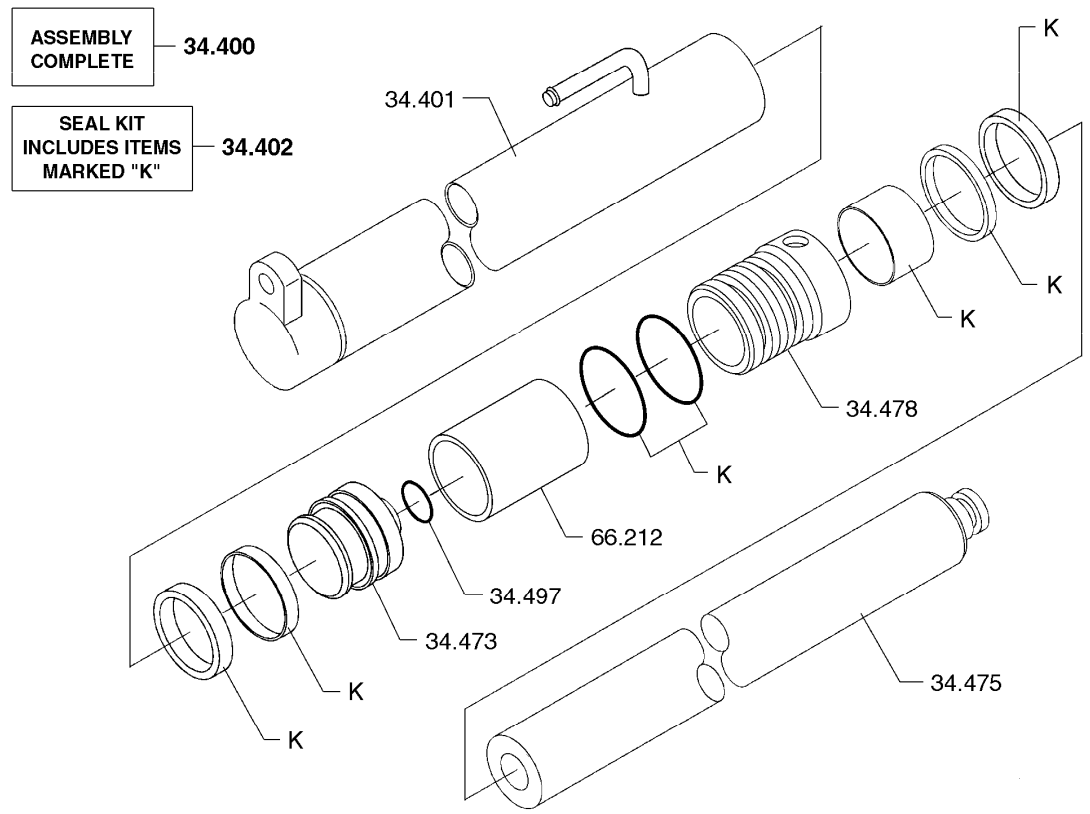

LIFT CYLINDER 66-099

34.400 CYLINDER ASSEMBLY, LIFT
실린더

34.401 BARREL, LIFT CYLINDER
배럴

34.402 SEAL & PACKING KIT, LIFT CYLINDER
시일과팩킹킷


34.473 PISTON, LIFT CYLINDER
피스톤

34.475 ROD, LIFT CYLINDER
로드

34.478 GLAND, LIFT CYLINDER
그랜드

34.497 SEAL, LIFT CYLINDER GLAND
시일

66.212 SPACER, LIFT CYLINDER FASTENER
스페이서

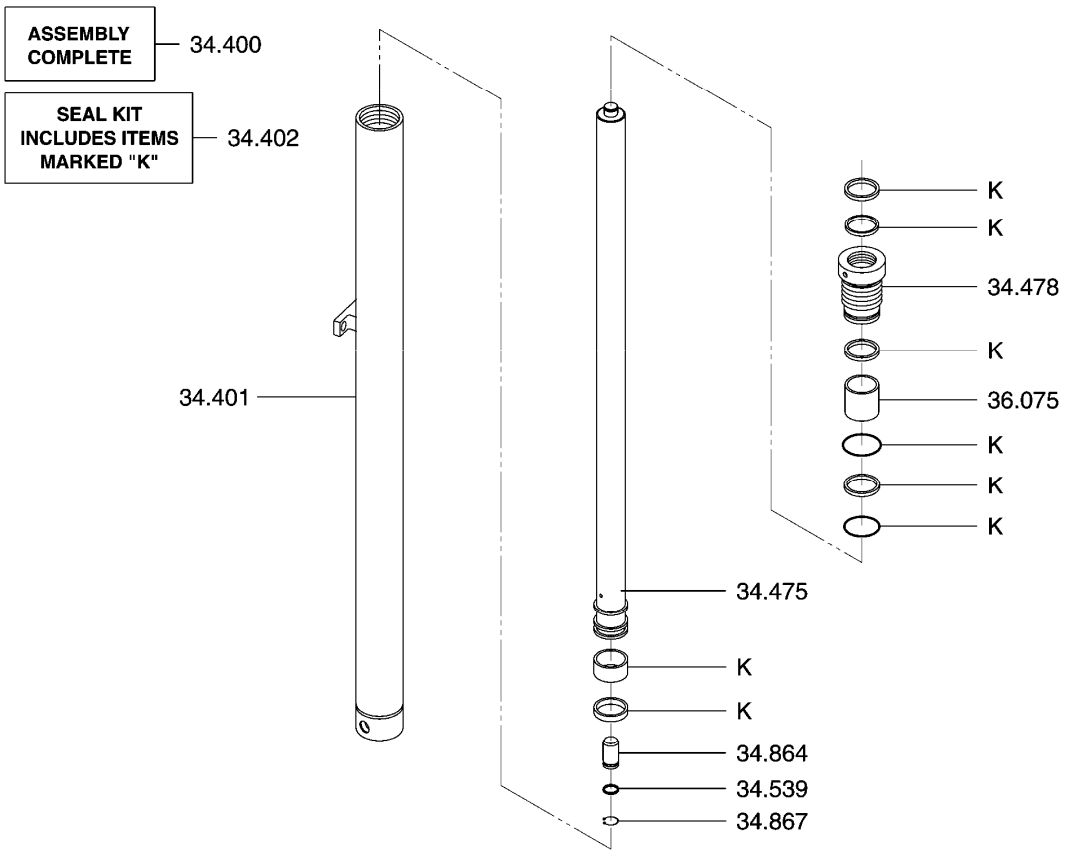

PRIMARY CYLINDER 66-173

34.400 CYLINDER ASSEMBLY, LIFT
실린더

34.401 BARREL, LIFT CYLINDER
배럴

34.402 SEAL & PACKING KIT, LIFT CYLINDER
시일과팩킹킷

34.475 ROD, LIFT CYLINDER
로드


34.478 GLAND, LIFT CYLINDER
그랜드

34.539 RETAINER, LIFT CYLINDER GLAND BUSHING
리테이너

34.864 CHECK VALVE, LIFT CYLINDER
체크밸브


34.867 RETAINER, LIFT CYLINDER CHECK VALVE
리테이너

36.075 BUSHING, CYLINDER PIVOT
부싱

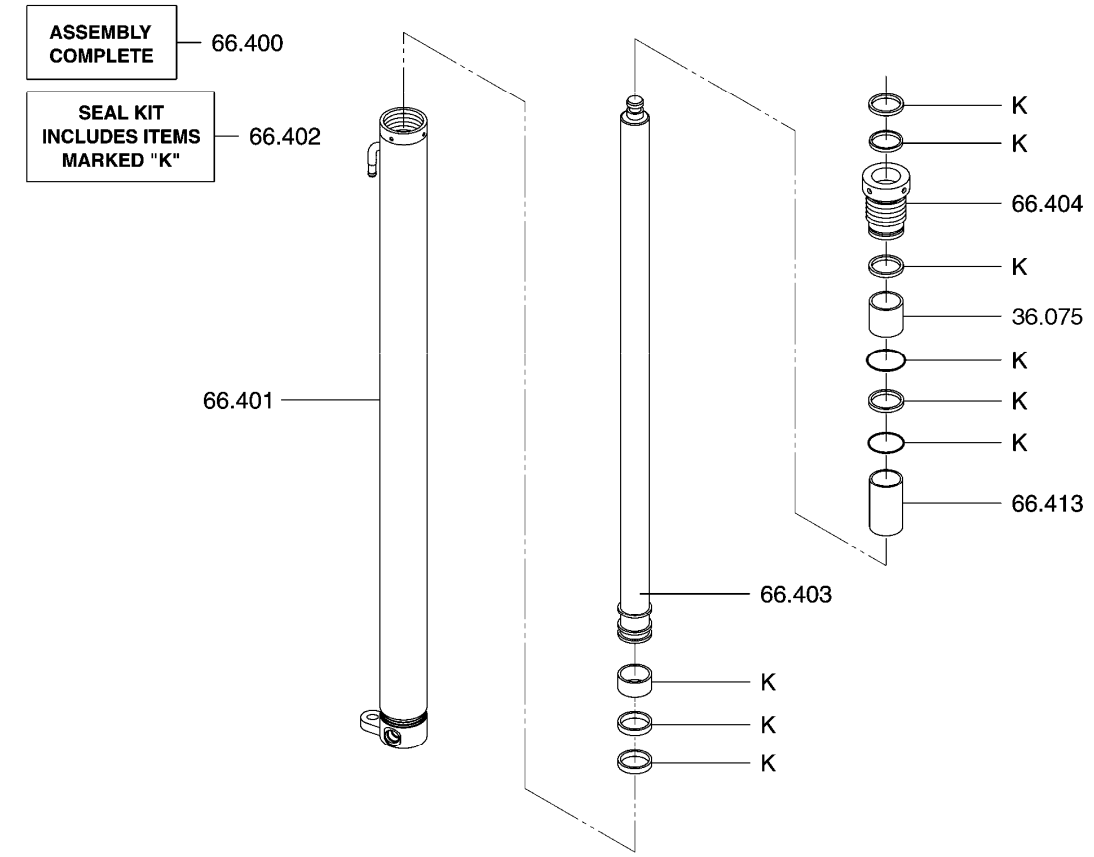

SECONDARY CYLINDER ASSEMBLY 66-175

36.075	BUSHING, CYLINDER PIVOT 부싱
66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
66.401	BARREL, FINAL LIFT CYLINDER 배럴
66.402	PACKING KIT, FINAL LIFT CYLINDER 패킹킷
66.403	PISTON ROD, FINAL LIFT CYLINDER 피스톤로드
66.404	CAP, FINAL LIFT CYLINDER GLAND 캡
66.413	SPACER, FINAL LIFT CYLINDER PISTON ROD 스페이서

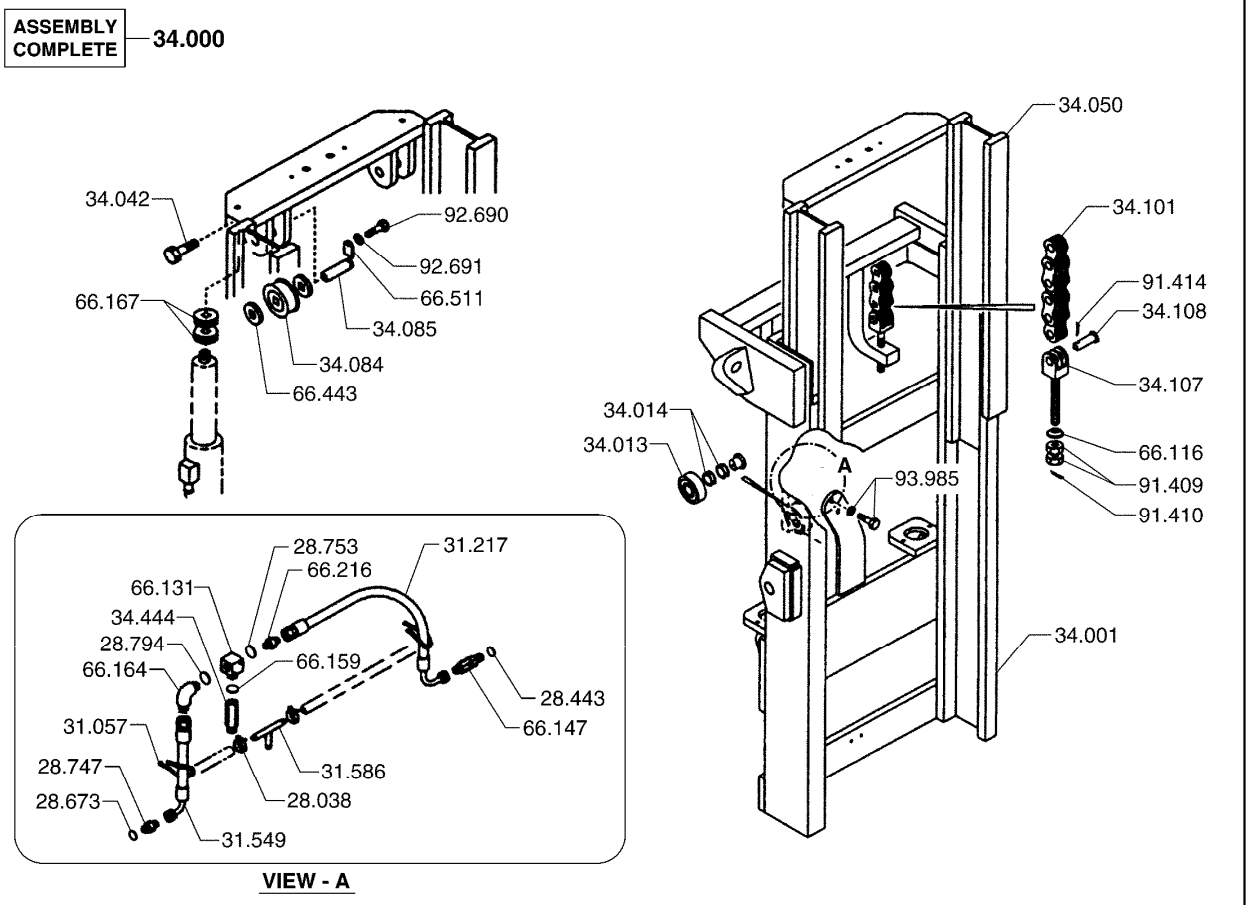

28.038	CLAMP, LIFT CYLINDER VENT LINE 클램프	34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일
28.443	SEAL, LIFT CYLINDER LOWERING PORT FITTING 시일	34.084	SHEAVE, LIFT CHAIN 쉬브
28.673	SEAL, LIFT CYLINDER INLET PORT 시일	34.085	SHAFT, LIFT CHAIN UPPER SHEAVE 샤프트
28.747	FITTING, LIFT CYLINDER LINE 피팅	34.101	CHAIN, LIFT 체인
28.753	SEAL, LIFT CYLINDER VENT PORT 시일	34.107	ANCHOR, LIFT CHAIN 앵커
28.794	SEAL, LIFT CYLINDER LINE JUNCTION BLOCK PORT 시일	34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
31.057	STRAP, VENT LINE TO CYLINDER 스트룹	34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 벨브
31.217	LINE, LIFT CYLINDER INLET FITTING 라인	66.116	SPACER, LIFT CHAIN ANCHOR 스페이서
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인	66.131	MANIFOLD, LIFT CYLINDER FLOW CONTROL VALVE 매니폴드
31.586	FITTING, LIFT CYLINDER VENT LINE 피팅	66.147	VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL 밸브
34.000	UPRIGHT & LIFT CYL ASSEMBLY 업라이트와실린더	66.159	SEAL, LIFT CYLINDER FLOW CONTROL VALVE INLET POR 시일
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아웃레일	66.164	FITTING, LIFT CYLINDER FLOW CONTROL VALVE MANIFO 피팅
34.013	ROLLER, UPRIGHT 롤러	66.167	SHIM, LIFT CYLINDER UPPER 심
34.014	SHIM, UPRIGHT ROLLER 심	66.216	FITTING, FLOW CONTROL VALVE MANIFOLD PORT 피팅
34.042	FASTENER, LIFT CYLINDER (UPPER) 패스너	66.443	WASHER, CHAIN SHEAVE 와셔

66.511 PLATE, LIFT CYLINDER CHAIN SHEAVE CARRIER
*

91.409 NUT, LIFT CHAIN FASTENER (CYLINDER END)
너트


91.410 RETAINER, LIFT CHAIN FASTENER (CYLINDER END)
리테이너

91.414 RETAINER, LIFT CHAIN TO ANCHOR FASTENER
리테이너

92.690 FASTENER, LIFT CHAIN SHEAVE SHAFT RETAINER
패스너

92.691 LOCKWASHER, LIFT CHAIN SHEAVE SHAFT RETAINER FAS
로크와셔

93.985 FASTENER, LIFT CYLINDER FLOW CONTROL VALVE MANIF
패스너

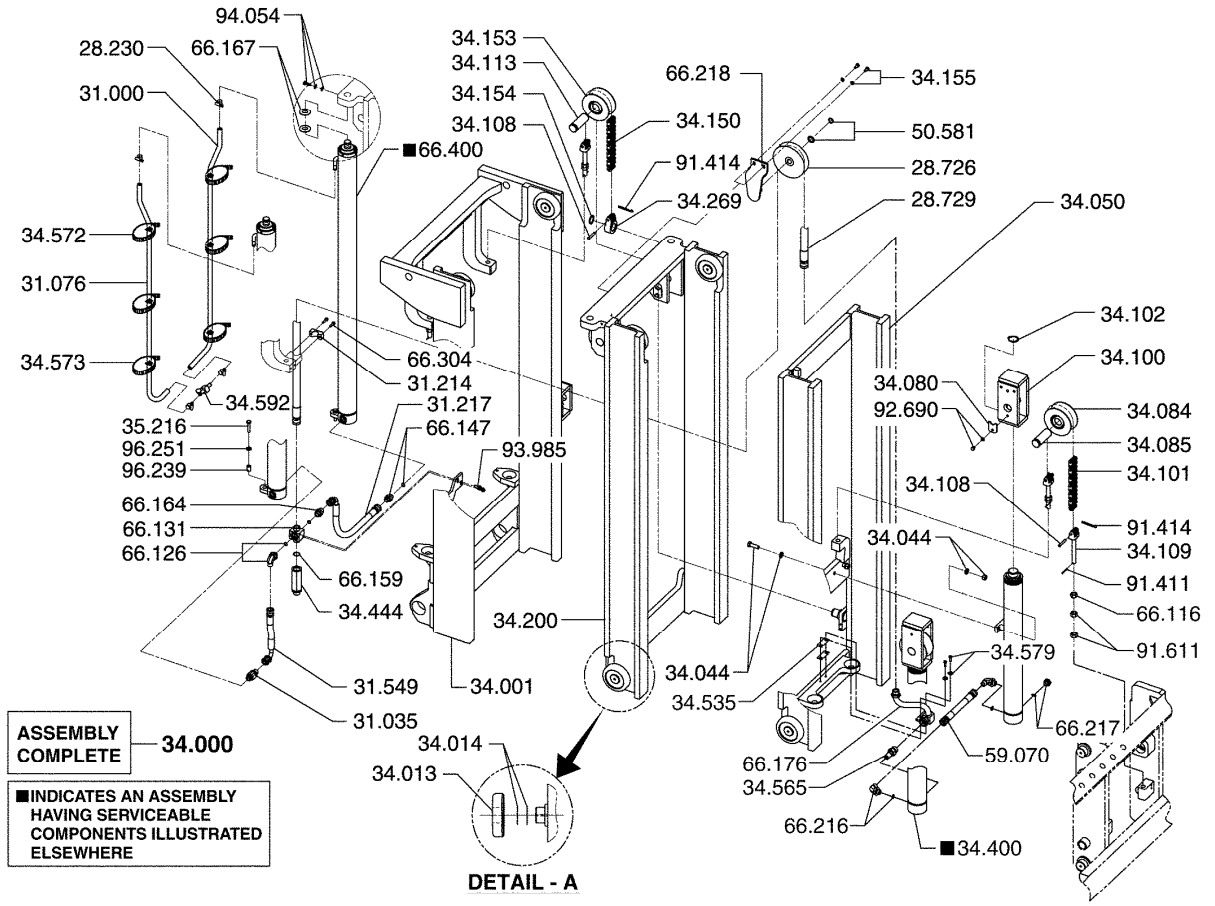

28.230	CLAMP, LIFT CYLINDER VENT LINE 클램프	34.080	FASTENER, LIFT CHAIN SHEAVE 패스너
28.726	SHEAVE, LIFT CYLINDER HOSE 쉬브	34.084	SHEAVE, LIFT CHAIN 쉬브
28.729	LINE, LIFT CYLINDER 라인	34.085	SHAFT, LIFT CHAIN UPPER SHEAVE 샤프트
31.000	LINE, LIFT CYLINDER VENT 라인	34.100	CARRIER, LIFT CYLINDER CHAIN SHEAVE 캐리어
31.035	FITTING, LIFT CYLINDER PORT 피팅	34.101	CHAIN, LIFT 체인
31.076	LINE, LIFT CYLINDER VENT 라인	34.102	FASTENER, SHEAVE CARRIER 패스너
31.214	CLAMP, LIFT LINE 클램프	34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
31.217	LINE, LIFT CYLINDER INLET FITTING 라인	34.109	ANCHOR, LIFT CHAIN CARRIAGE END 앵커
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인	34.113	SHAFT, LIFT CHAIN SHEAVE (CARRIER) 샤프트
34.000	UPRIGHT & LIFT CYL ASSEMBLY 업라이트와실린더	34.150	CHAIN, UPRIGHT RAIL LIFT 체인
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아웃레일	34.153	SHEAVE, UPRIGHT RAIL CHAIN 쉬브
34.013	ROLLER, UPRIGHT 롤러	34.154	RETAINER, UPRIGHT RAIL CHAIN SHEAVE 리테이너
34.014	SHIM, UPRIGHT ROLLER 심	34.155	FASTENER, CHAIN SHEAVE RETAINER 패스너
34.044	FASTENER, LIFT CYLINDER UPPER ANCHOR 패스너	34.200	INTERMEDIATE RAIL WELDED ASSEMBLY, UPRIGHT 인터레일
34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일	34.269	ANCHOR, RAIL CHAIN LH 앵커

34.400 CYLINDER ASSEMBLY, LIFT
실린더

34.444 VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL
벨브

34.535 SHIM, LIFT CYLINDER FEED TUBE PACKING RETAINER
심

34.565 FITTING, LIFT CYLINDER FLOW CONTROL VALVE INLET
피팅

34.572 STRAP, VENT LINE TO LIFT CYLINDER
스트랩

34.573 CLAMP, VENT LINE TO LIFT CYLINDER
클램프

34.579 FASTENER, LIFT CYLINDER PRESSURE LINE SUPPORT
패스너

34.592 FITTING, LIFT CYLINDER VENT LINE
피팅

35.216 FASTENER, LIFT CYLINDER (ANCHOR END)
패스너

50.581 FASTENER, HOSE SHEAVE FLANGE
패스너

59.070 LINE, DEVICE HOSE
라인

66.116 SPACER, LIFT CHAIN ANCHOR
스페이서

66.126 RETAINER, REACH LINE
리테이너

66.131 MANIFOLD, LIFT CYLINDER FLOW CONTROL VALVE
매니폴드

66.147 VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL
밸브

66.159 SEAL, LIFT CYLINDER FLOW CONTROL VALVE INLET POR
시일

66.164 FITTING, LIFT CYLINDER FLOW CONTROL VALVE MANIFO
피팅

66.167 SHIM, LIFT CYLINDER UPPER
심

66.176 LINE, FREE LIFT CYLINDER PRESSURE
라인

66.216 FITTING, FLOW CONTROL VALVE MANIFOLD PORT
피팅

66.217 FITTING, FLOW CONTROL VALVE MANIFOLD PORT
피팅

66.218 BRACKET, LIFT LINE SHEAVE
브라켓

66.304 FASTENER, LIFT CYLINDER LINE CLAMP
패스너

66.400 CYLINDER ASSEMBLY, FINAL LIFT
실린더

91.411 RETAINER, LIFT CHAIN TO ANCHOR FASTENER
리테이너

91.414 RETAINER, LIFT CHAIN TO ANCHOR FASTENER
리테이너

91.611 NUT, LIFT CHAIN ANCHOR FASTENER (CARRIAGE END)
너트


92.690 FASTENER, LIFT CHAIN SHEAVE SHAFT RETAINER
패스너

93.985 FASTENER, LIFT CYLINDER FLOW CONTROL VALVE MANIF
패스너

94.054 FASTENER, LIFT CYLINDER (UPPER)
패스너

96.239 SPACER, LIFT CYLINDER FASTENER
스페이서


96.251 WASHER, LIFT CYLINDER FASTENER
와셔

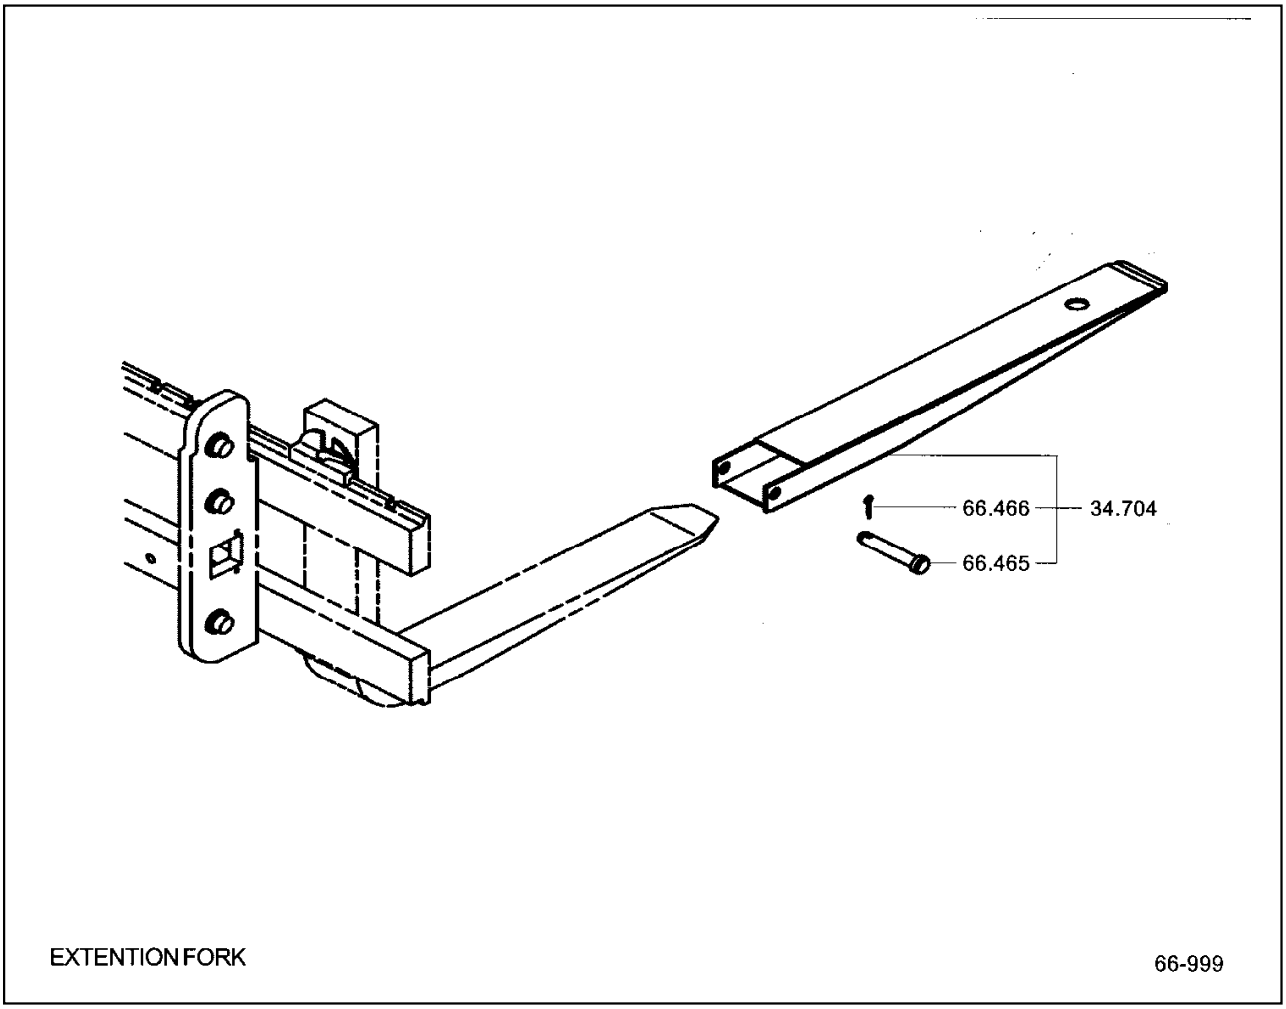


34.704 EXTENSION, FORK ASSEMBLY COMPLETE
익스텐션

66.465 PIN, EXTENTION FORK
핀

66.466 PIN, EXTENTION FORK
핀

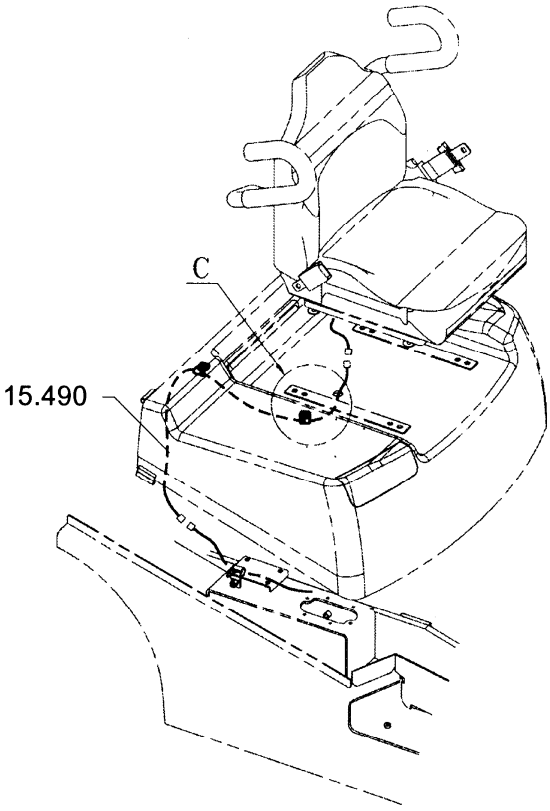


STANDARD SEAT

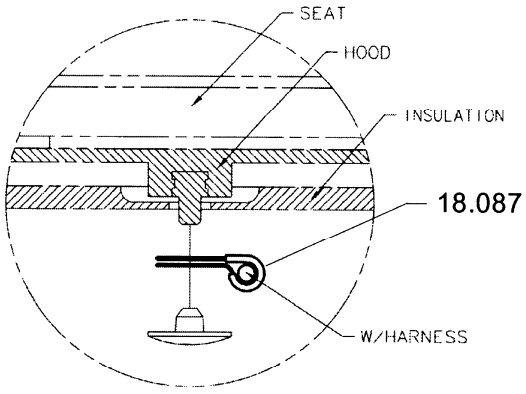

DETAIL C

15.490 HARNESS, SEAT ACTUATED ENGINE SHUTDOWN WIRING
하네스

18.087 CLIP, SEAT SAFETY SWITCH WIRE
클립

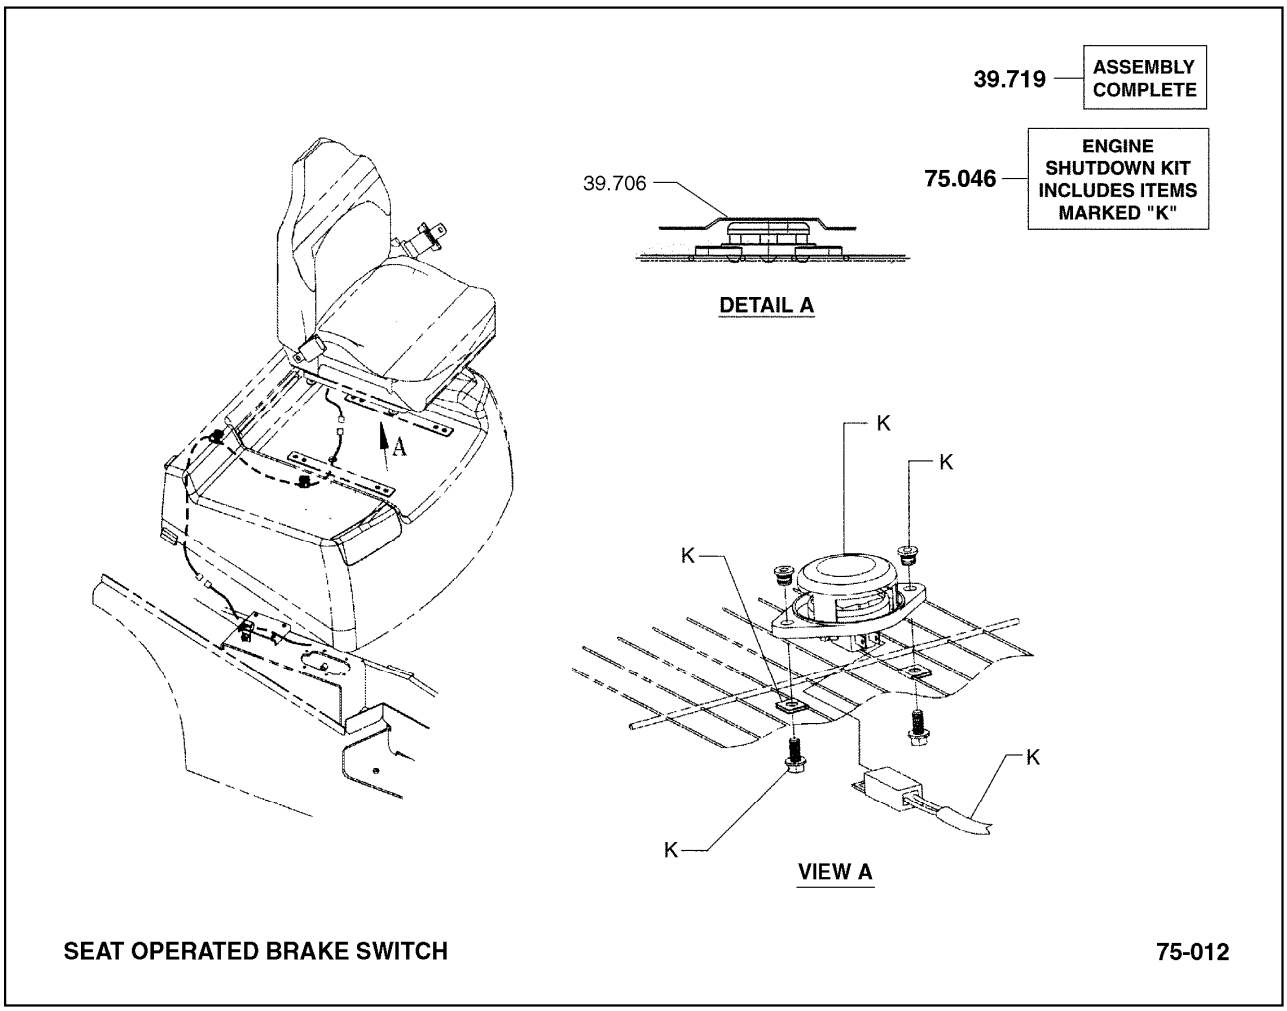

39.706 SUPPORT, SEAT
서포트

39.719 SEAT ASSEMBLY
시트

75.046 KIT, SEAT ACTUATED ENGINE SHUTDOWN
킷