
RUTHZIL TRATOR COMERCIAL DE PECAS LTDA 11 97083-6812 ROLANDO CITRANGULO
https://truckmanualshub.com/

PC75UU-2 S/N 5001-UP
KOMATSU PC75UU-2 S/N 5001-UP

Item	Description	Book	Page
	4D95L-1FF ENGINE S/N 131803-UP	4d95l-7c	
B0	ENGINE RELATED PARTS		030000
C0	COOLING SYSTEM		060000
D0	FUEL TANK AND RELATED PARTS		090000
E0	ELECTRICAL SYSTEM		120000
H0	HYDRAULIC SYSTEM		150000
J0	MAIN/REVOLVING FRAME AND RELATED PARTS		180000
K0	OPERATOR'S COMPARTMENT AND CONTROL SYSTEM		210000
M0	GUARD		240000
N0	SWING CIRCLE AND RELATED PARTS		270000
P0	TRAVEL AND LOWER PIPING		300000
R0	UNDER CARRIAGE		330000
T0	WORK EQUIPMENT		360000
U0	MARKS AND PLATES		390000
V0	ACCESSORY		420000
Y0	SERVICE KIT AND COMPONENT PARTS		450000

https://truckmanualshub.com/

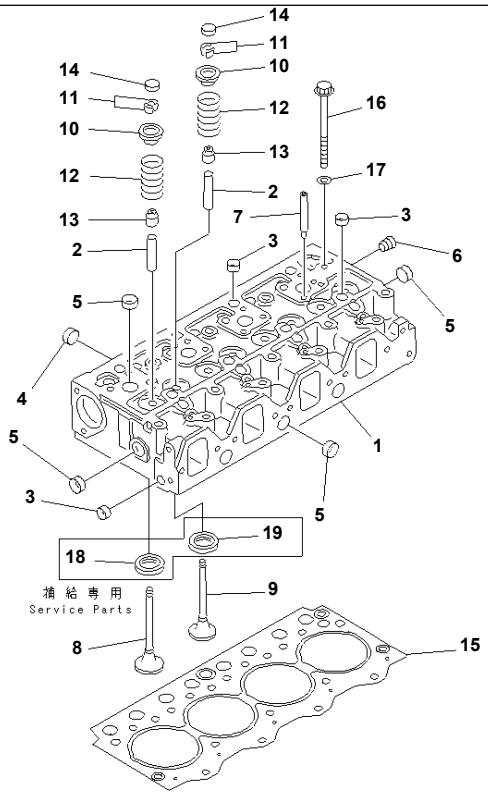

PE38275

4D95L-1FF S/N 131803-UP
CYLINDER HEAD


Item	Part No.	Description	Qty	Options
	6204-13-1100	CYLINDER HEAD ASS'Y,VALVE LESS	1	SN:131803--
1	☆	· HEAD,CYLINDER	1	SN:131803--
2	6204-19-1310	· GUIDE,VALVE	8	SN:131803--
3	07046-41810	· PLUG	9	SN:131803--
4	07046-42216	· PLUG	3	SN:131803--
5	07046-42516	· PLUG	11	SN:131803--
6	02720-40104	· PLUG	1	SN:131803--
7	6204-11-8910	· PIPE,BREATHER	2	SN:131803--
8	6207-41-4110	VALVE,INTAKE	4	SN:131803--
9	6204-43-4210	VALVE,EXHAUST	4	SN:131803--
10	6204-41-4510	SEAT,SPRING	8	SN:131803--
11	6204-41-4520	COTTER	16	SN:131803--
12	6204-41-4431	SPRING,VALVE	8	SN:131803--
13	6204-41-4540	SEAL,VALVE (K1)	8	SN:131803--
14	6204-41-4550	CAP,VALVE STEM	8	SN:131803--
15	6204-11-1830	GASKET,HEAD (K1)	1	SN:172882--
	◆6205-11-1813	GASKET,HEAD	1	SN:149345--172881
	□6204-11-1812	GASKET,HEAD	1	SN:137006--149344
	◆6204-11-1830	GASKET,HEAD (K1)	1	SN:131803--137005
16	6204-13-1610	BOLT	17	SN:131803--
17	01643-51232	WASHER	17	SN:131803--
18	6207-11-1430	SEAT,INTAKE VALVE (SERVICE PARTS) (STD)	4	SN:131803--
	6207-19-1430	SEAT¤ 0.25MM,INTAKE VALVE (SERVICE PARTS) (OS)	4	SN:131803--
	6207-18-1430	SEAT¤ 0.50MM,INTAKE VALVE (SERVICE PARTS) (OS)	4	SN:131803--

https://truckmanualshub.com/

CYLINDER HEAD

Item	Part No.	Description	Qty	Options
19	6204-11-1440	SEAT,EXHAUST VALVE (SERVICE PARTS) (STD)	4	SN:131803--
	6204-19-1440	SEAT¤ 0.25MM,EXHAUST VALVE (SERVICE PARTS) (OS)	4	SN:131803--
	6204-18-1440	SEAT¤ 0.50MM,EXHAUST VALVE (SERVICE PARTS) (OS)	4	SN:131803--

https://truckmanualshub.com/

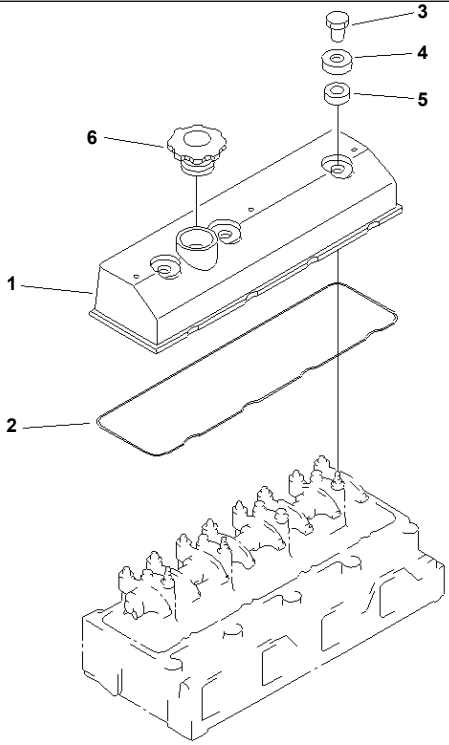


PE30140

4D95L-1FF S/N 131803-UP

HEAD COVER

Item	Part No.	Description	Qty	Options
1	6204-11-8110	COVER,HEAD	1	SN:131803--
2	6204-11-8810	O-RING (K1)	1	SN:131803--
3	6136-11-8120	NUT	3	SN:131803--
4	6136-11-8130	WASHER	3	SN:131803--
5	6136-11-8142	PACKING (K1)	3	SN:131803--
6	6130-12-8610	CAP	1	SN:131803--

https://truckmanualshub.com/

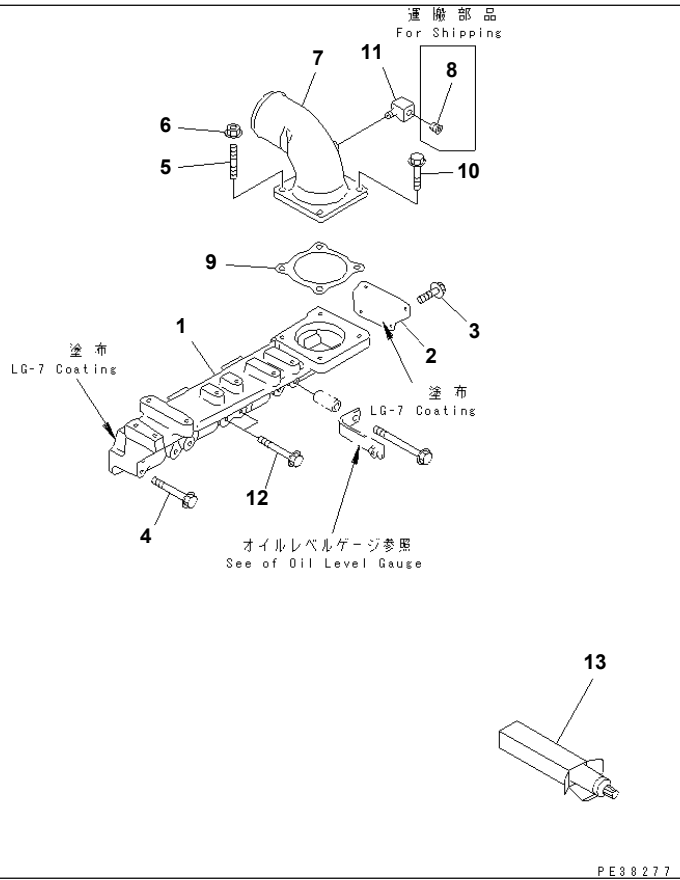


Ref. A1310-A0A4 Page 030050

4D95L-1FF S/N 131803-UP

AIR INTAKE(#131803-168762)

Item	Part No.	Description	Qty	Options
1	6204-11-4131	MANIFOLD,AIR INTAKE	1	SN:157067--@
	■6204-11-4130	MANIFOLD,AIR INTAKE	1	SN:131803--157066
(6204-11-4131{01435-21065(2))}				
2	6204-11-4140	PLATE	1	SN:131803--@
3	01435-00812	BOLT	4	SN:131803--@
4	01435-21075	BOLT	5	SN:131803--168762
5	01144-31025	STUD	1	SN:131803--@
6	01584-01008	NUT	1	SN:131803--@
7	6204-12-4230	CONNECTOR,AIR	1	SN:131803--@
8	02720-20204	PLUG,(FOR SHIPPING)	1	SN:131803--168762
9	6136-11-4850	GASKET (K1)	1	SN:157067--@
	□6136-11-4820	GASKET (K1)	1	SN:131803--157066
10	01435-21025	BOLT	3	SN:131803--@
11	6685-81-4920	ELBOW	1	SN:131803--@
12	01435-21065	BOLT	2	SN:157067--@
	01435-21075	BOLT	2	SN:131803--157066
13	09920-00150	LIQUID GASKET,LG-7¤ 150G	AR	SN:131803--@

Ref. A1310-A0A4 Page 030050

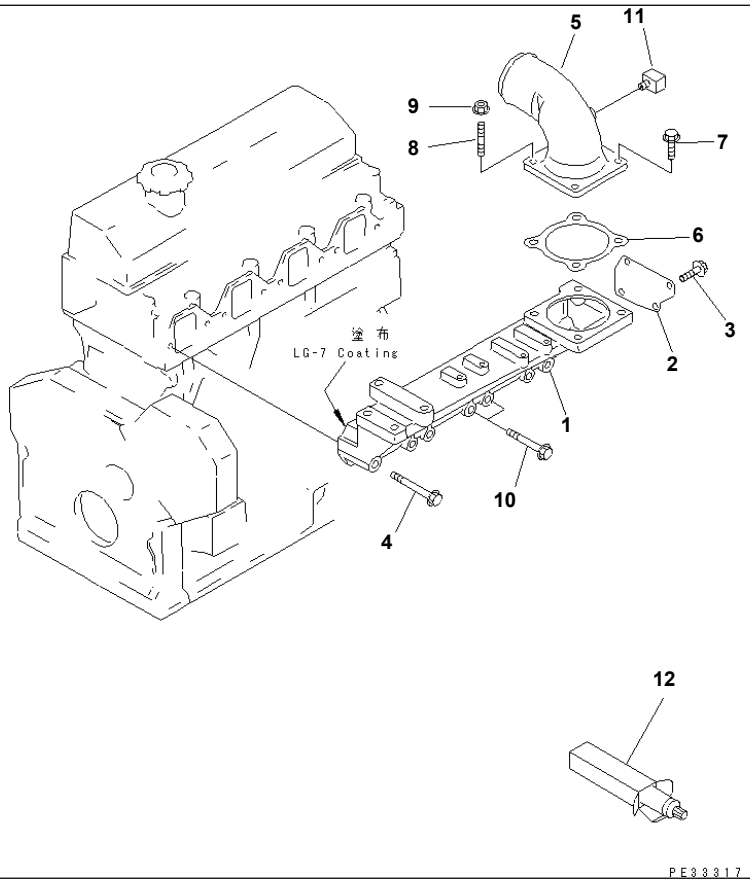


4D95L-1FF S/N 131803-UP

AIR INTAKE(#168763-)

Item	Part No.	Description	Qty	Options
1	6204-11-4131	MANIFOLD,AIR INTAKE	1	SN:157067--
2	6204-11-4140	PLATE	1	SN:131803--
3	01435-00812	BOLT	4	SN:131803--
4	01435-21075	BOLT	4	SN:168763--
5	6204-12-4230	CONNECTOR,AIR	1	SN:131803--
6	6136-11-4850	GASKET (K1)	1	SN:157067--
7	01435-21025	BOLT	3	SN:131803--
8	01144-31025	STUD	1	SN:131803--
9	01584-01008	NUT	1	SN:131803--
10	01435-21065	BOLT	2	SN:157067--
11	6685-81-4920	ELBOW	1	SN:131803--
12	09920-00150	LIQUID GASKET,LG-7¤ 150G	AR	SN:131803--

Ref. A1310-B0K4 Page 030060

https://truckmanualshub.com/

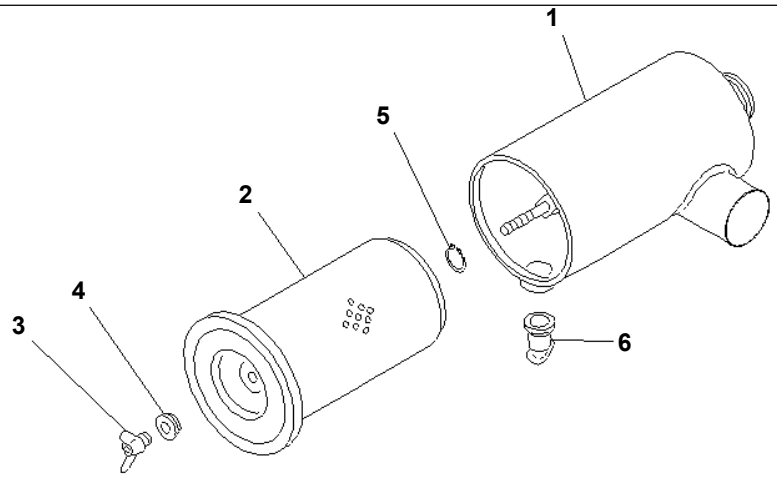


PE38278

4D95L-1FF S/N 131803-UP

AIR CLEANER (SINGLE ELEMENT TYPE)

Item	Part No.	Description	Qty	Options
1	6204-81-7960	BODY	1	SN:131803--
	600-181-6340	ELEMENT ASS'Y	1	SN:131803--
2	☆	· ELEMENT	1	SN:131803--
3	600-181-7920	· NUT,WING	1	SN:131803--
4	600-181-7511	· WASHER,SEAL	1	SN:131803--
5	04064-01510	· RING,SNAP	1	SN:131803--
6	600-181-9890	VALVE	1	SN:131803--

https://truckmanualshub.com/

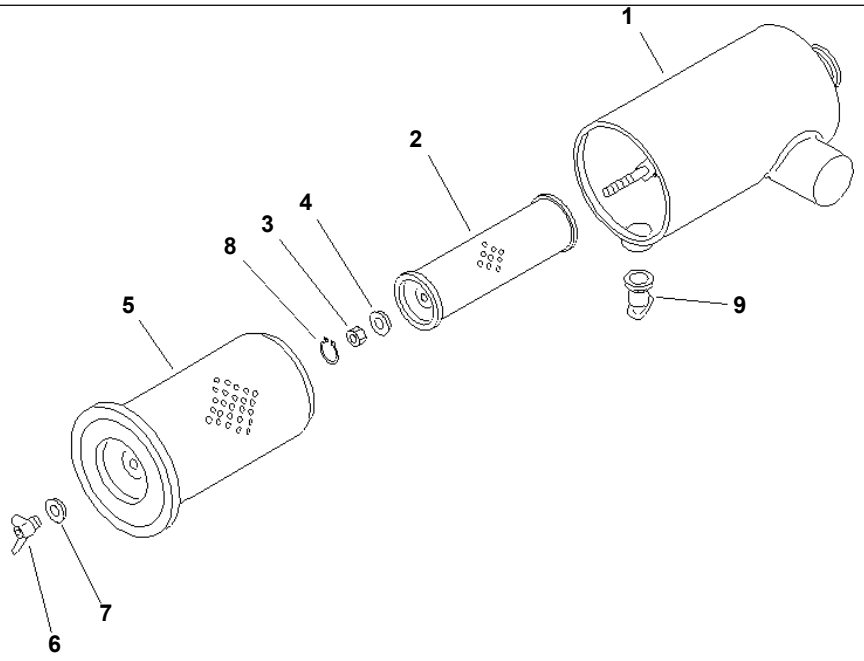

PE33259


4D95L-1FF S/N 131803-UP

AIR CLEANER (DOUBLE ELEMENT TYPE)

Item	Part No.	Description	Qty	Options
1	6204-81-7960	BODY	1	SN:131803--
	600-181-6330	ELEMENT ASS'Y	1	SN:131803--
2	☆	· ELEMENT,INNER	1	SN:131803--
3	600-181-7910	· NUT	1	SN:131803--
4	600-181-7511	· WASHER,SEAL	1	SN:131803--
	600-181-6340	· ELEMENT ASS'Y,OUTER	1	SN:131803--
5	☆	· · ELEMENT,OUTER	1	SN:131803--
6	600-181-7920	· · NUT,WING	1	SN:131803--
7	600-181-7511	· · WASHER,SEAL	1	SN:131803--
8	04064-01510	· · RING,SNAP	1	SN:131803--
9	600-181-9890	VALVE	1	SN:131803--

Ref. A1410-A0J2 Page 030080

https://truckmanualshub.com/

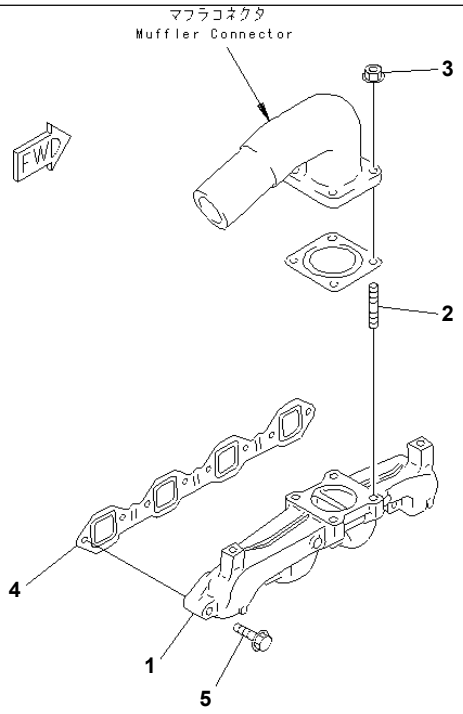


PE38279

4D95L-1FF S/N 131803-UP

EXHAUST MANIFOLD

Item	Part No.	Description	Qty	Options
1	6204-13-5110	MANIFOLD,EXHAUST	1	SN:131803--
2	01140-61025	STUD	4	SN:131803--
3	6142-12-5850	NUT	4	SN:131803--
4	6205-11-5810	GASKET (K1)	1	SN:131803--
5	01435-01045	BOLT	8	SN:131803--

https://truckmanualshub.com/

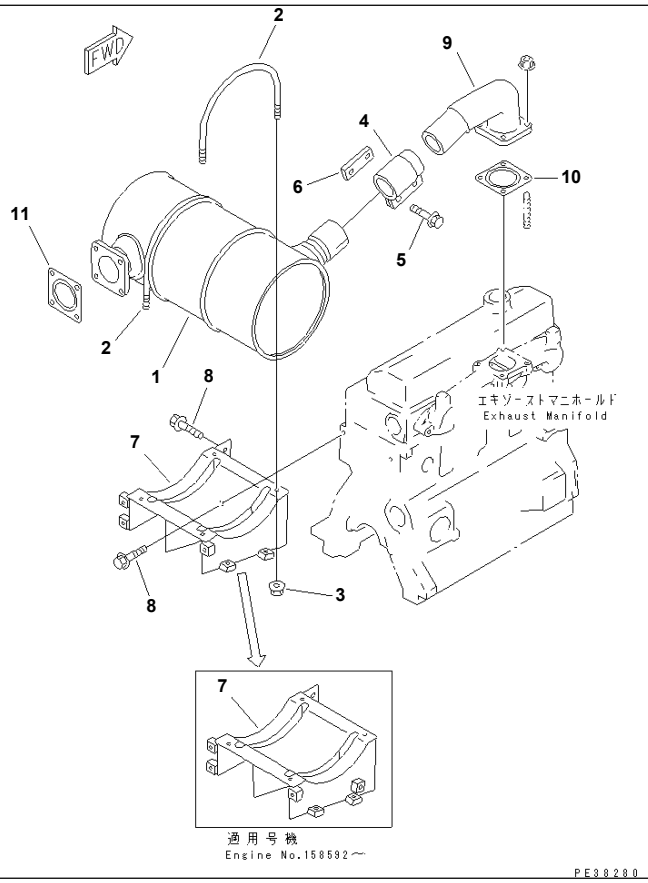


4D95L-1FF S/N 131803-UP

MUFFLER

Item	Part No.	Description	Qty	Options
1	6204-11-5210	MUFFLER	1	SN:131803--
2	6206-11-5980	U-BOLT	2	SN:131803--
3	01584-00806	NUT	4	SN:131803--
4	6206-11-5910	CLAMP	1	SN:131803--
5	01435-01235	BOLT	2	SN:131803--
6	6206-11-5850	PLATE,LOCK	1	SN:131803--
7	6204-11-5661	BRACKET	1	SN:158592--
	◆6204-11-5660	BRACKET	1	SN:131803--158591
8	01435-01025	BOLT	4	SN:131803--
9	6204-13-5610	CONNECTOR	1	SN:131803--
10	6130-12-5580	GASKET (K1)	1	SN:131803--
11	6131-15-5350	GASKET	1	SN:150681--
	6131-15-5350	GASKET (K1)	1	SN:131803--150680

Ref. A1610-A0A4 Page 030100

https://truckmanualshub.com/

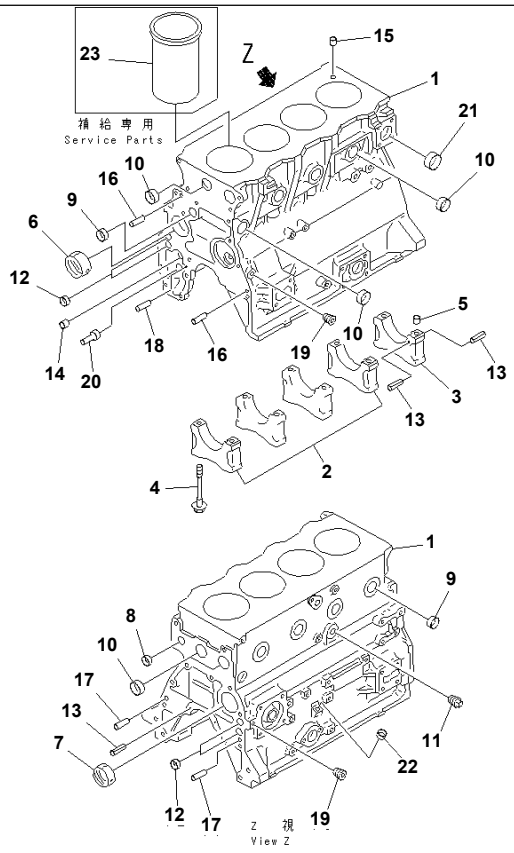

Ref. A2010-A0A6 **Page 030110**


4D95L-1FF S/N 131803-UP
CYLINDER BLOCK

Item	Part No.	Description	Qty	Options
	6204-21-1102	CYLINDER BLOCK ASS'Y	1	SN:131803--
1	☆	· BLOCK,CYLINDER	1	SN:131803--
2	△6204-29-1210	· CAP,MAIN METAL¤ NO.1¤2¤3¤4	4	SN:131803--
3	△6204-29-1220	· CAP,MAIN METAL¤ NO.5	1	SN:131803--
4	6204-21-1610	· BOLT,MAIN CAP	10	SN:131803--
5	6141-21-1530	· RING,DOWEL	2	SN:131803--
6	6204-21-1430	· BUSHING,CAMSHAFT	1	SN:154833--
	□6204-21-1410	· BUSHING,CAMSHAFT	1	SN:131803--154832
7	6206-21-1420	· BUSHING,CAMSHAFT	2	SN:131803--
8	07046-42216	· PLUG	1	SN:131803--
9	07046-42516	· PLUG	5	SN:131803--
10	07046-43016	· PLUG	7	SN:131803--
11	07042-10312	· PLUG	1	SN:131803--
12	07046-41810	· PLUG	4	SN:131803--
13	04025-00408	· PIN,SPRING	6	SN:131803--
14	6204-51-1711	· BUSHING,OIL PUMP	1	SN:131803--
15	6140-21-1130	· BUSHING,DOWEL	2	SN:131803--
16	04020-00820	· PIN,DOWEL	2	SN:131803--
17	04020-01228	· PIN,DOWEL	2	SN:131803--
18	6136-52-1620	· PIN,DOWEL¤ OIL PUMP	1	SN:131803--
19	07043-50108	· PLUG	6	SN:131803--
20	6204-51-1620	· SHAFT,OIL PUMP	1	SN:131803--
21	07046-44016	PLUG	1	SN:131803--
22	07046-21210	PLUG	1	SN:131803--

https://truckmanualshub.com/

CYLINDER BLOCK

Item	Part No.	Description	Qty	Options
23	6207-21-2110	LINER (MARK A),CYLINDER	AR	SN:131803--
	6207-21-2120	LINER (MARK B),CYLINDER	AR	SN:131803--

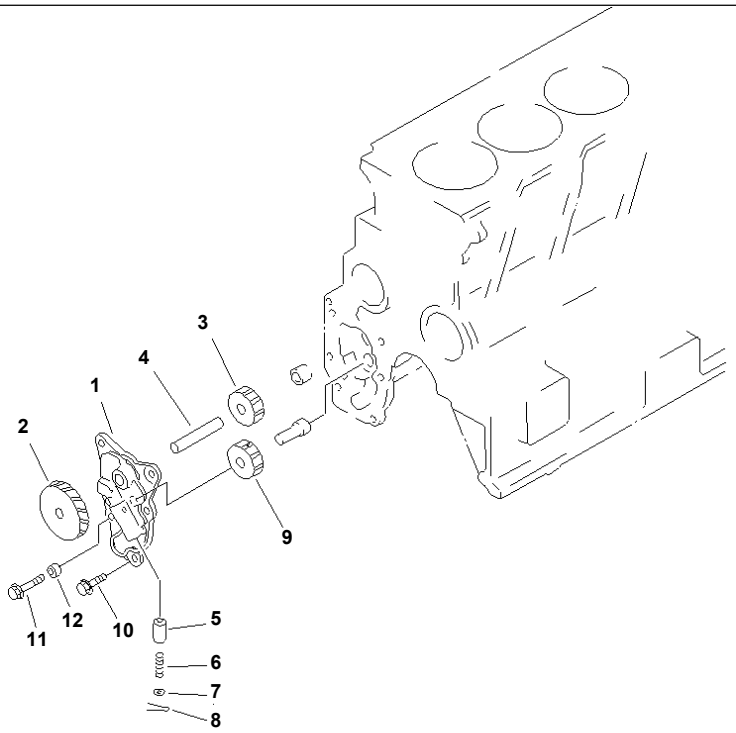


PE38245

4D95L-1FF S/N 131803-UP

OIL PUMP

Item	Part No.	Description	Qty	Options
	6204-51-1201	COVER ASS'Y	1	SN:131803--
1	☆	· COVER	1	SN:131803--
2	6206-51-1510	· GEAR	1	SN:131803--
	6204-51-1400	· SHAFT ASS'Y	1	SN:131803--
3	6204-51-1410	· · GEAR,DRIVE	1	SN:131803--
4	☆	· · SHAFT	1	SN:131803--
5	6204-51-1310	· VALVE	1	SN:131803--
6	6204-51-1320	· SPRING	1	SN:131803--
7	6204-51-1330	· WASHER	1	SN:131803--
8	6204-51-1340	· PIN,COTTER	1	SN:131803--
9	6204-51-1610	GEAR,DRIVEN	1	SN:131803--
10	01435-20816	BOLT	4	SN:131803--
11	01435-20825	BOLT	1	SN:131803--
12	6691-41-8230	SPACER¤ 10MM	1	SN:131803--

https://truckmanualshub.com/

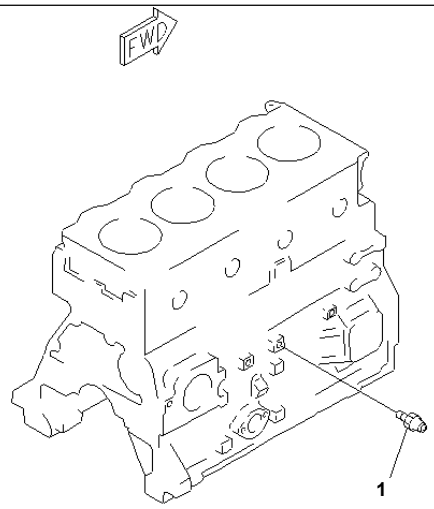


PE38246

4D95L-1FF S/N 131803-UP

OIL PRESSURE SWITCH

Item	Part No.	Description	Qty	Options
1	08073-10505	SWITCH	1	SN:131803--

https://truckmanualshub.com/

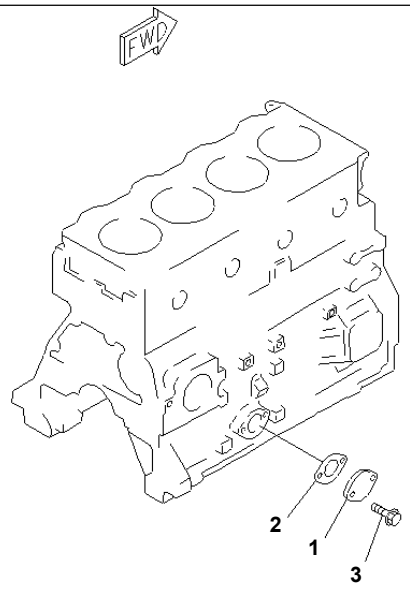


PE38247

4D95L-1FF S/N 131803-UP

CYLINDER BLOCK COVER

Item	Part No.	Description	Qty	Options
1	6204-21-6710	PLATE	1	SN:131803--
2	6204-21-6811	GASKET (K2)	1	SN:157067--
	□6132-11-4820	GASKET (K2)	1	SN:131803--157066
3	01435-20814	BOLT	2	SN:131803--

Ref. A2010-D0A6 Page 030140

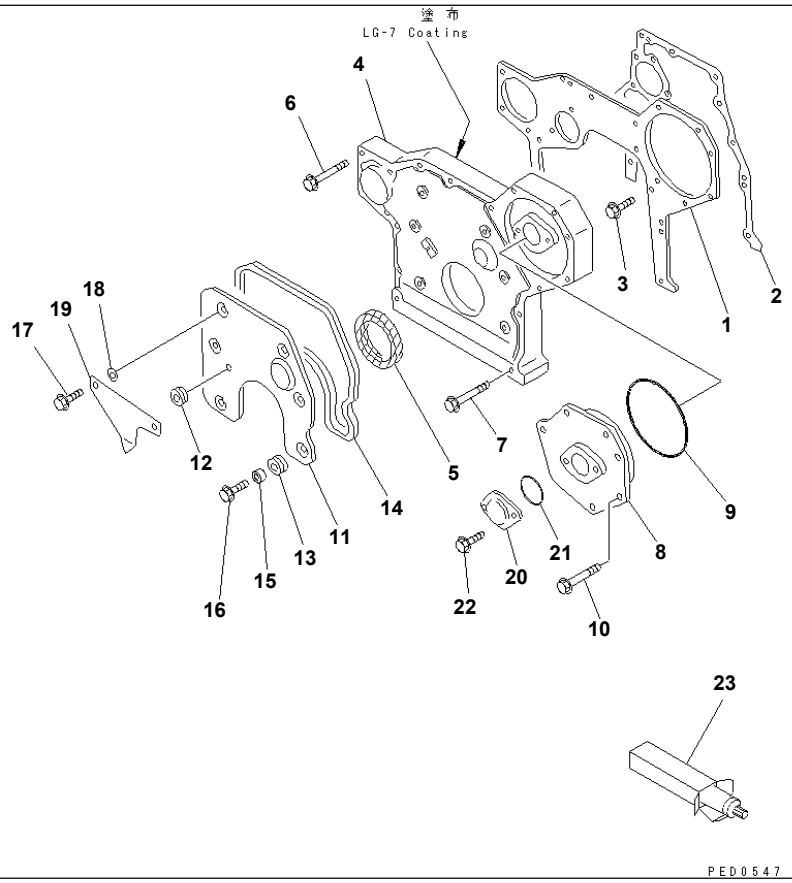

4D95L-1FF S/N 131803-UP

FRONT COVER


Item	Part No.	Description	Qty	Options
1	6204-21-3221	PLATE,FRONT	1	SN:131803--
2	6206-21-3840	GASKET (K2)	1	SN:150681--
	6206-21-3840	GASKET	1	SN:131803--150680
3	01435-20816	BOLT	2	SN:131803--
4	6204-21-3121	COVER,FRONT	1	SN:131803--
5	6204-21-3510	SEAL¤ FRONT (K2)	1	SN:131803--
6	01435-20855	BOLT	9	SN:131803--
7	01435-20870	BOLT	2	SN:131803--
8	6204-21-3130	COVER	1	SN:131803--
9	07000-02135	O-RING (K2)	1	SN:131803--
10	01435-20865	BOLT	6	SN:131803--
11	6204-21-3311	COVER	1	SN:131803--
12	6204-21-3451	GROMMET (K2)	1	SN:150681--
	6204-21-3451	GROMMET	1	SN:131803--150680
13	6204-21-3460	GROMMET (K2)	6	SN:150681--
	6204-21-3460	GROMMET	6	SN:131803--150680
14	6204-21-3410	PACKING (K2)	1	SN:150681--
	6204-21-3410	PACKING	1	SN:131803--150680
15	6204-21-3480	SPACER	6	SN:131803--
16	01435-20620	BOLT	4	SN:131803--
17	01435-20625	BOLT	2	SN:131803--
18	01643-30623	WASHER	2	SN:131803--
19	6204-23-3850	PLATE	1	SN:131803--
20	6144-81-5151	COVER	1	SN:131803--

https://truckmanualshub.com/

FRONT COVER

Item	Part No.	Description	Qty	Options
21	07000-03050	O-RING (K2)	1	SN:131803--
22	01435-20616	BOLT	2	SN:131803--
23	(09920-00150)	LIQUID GASKET,LG-7¤ 150G	AR	SN:131803--

https://truckmanualshub.com/

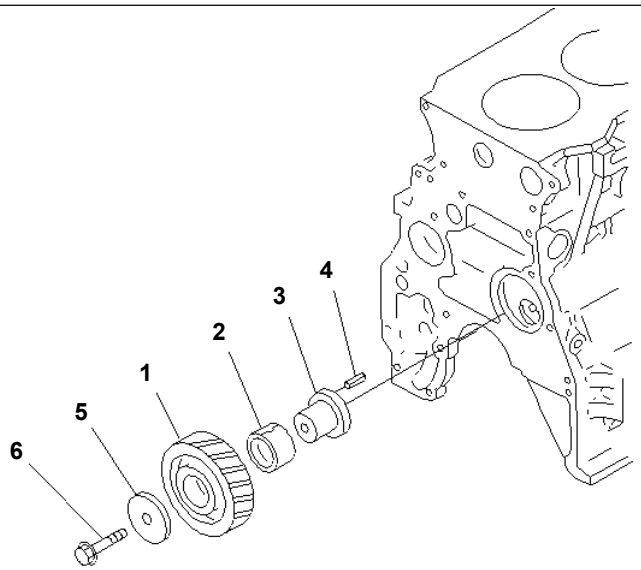

PE38341


4D95L-1FF S/N 131803-UP

IDLER GEAR

Item	Part No.	Description	Qty	Options
	6206-31-6301	IDLER GEAR ASS'Y	1	SN:131803--
1	☆	· GEAR,IDLER	1	SN:131803--
2	6204-31-6341	· BUSHING	1	SN:131803--
3	6204-31-6331	SHAFT	1	SN:131803--
4	04025-00512	PIN,SPRING	1	SN:131803--
5	6204-31-6350	WASHER	1	SN:131803--
6	01435-01270	BOLT	1	SN:131803--

Ref. A2050-A0A1 Page 030160

https://truckmanualshub.com/

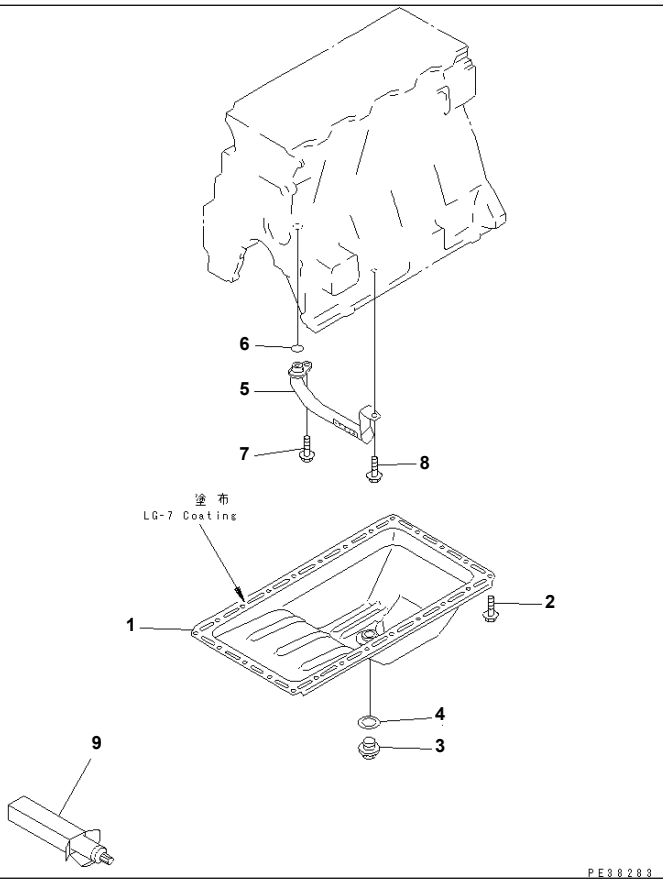


4D95L-1FF S/N 131803-UP

OIL PAN AND SUCTION TUBE(#131803-168762)

Item	Part No.	Description	Qty	Options
1	6204-21-5112	PAN,OIL	1	SN:131803--@
2	01435-00814	BOLT	24	SN:131803--@
3	6204-21-5180	PLUG,DRAIN	1	SN:131803--@
4	07005-02216	GASKET (K2)	1	SN:131803--@
5	6204-51-6130	TUBE,SUCTION	1	SN:131803--@
6	6204-51-6120	O-RING (K2)	1	SN:131803--@
7	01435-20816	BOLT	1	SN:131803--@
8	01435-20812	BOLT	1	SN:131803--@
9	(09920-00150)	LIQUID GASKET,LG-7¤ 150G	AR	SN:131803--@

https://truckmanualshub.com/

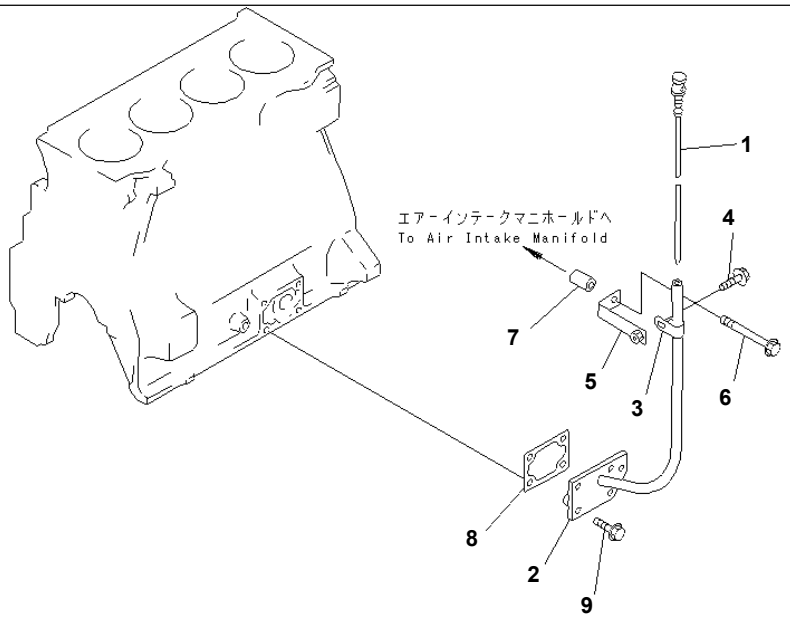


PE38284

4D95L-1FF S/N 131803-UP

OIL LEVEL GAUGE(#131803-168762)

Item	Part No.	Description	Qty	Options
1	6204-21-5360	GAUGE,OIL	1	SN:131803--@
2	6204-21-5540	GUIDE,OIL GAUGE	1	SN:131803--@
3	6144-21-5650	CLIP	1	SN:131803--@
4	01435-20816	BOLT	1	SN:131803--168762
5	6204-21-5590	BRACKET	1	SN:131803--168762
6	01436-01005	BOLT	1	SN:131803--168762
7	6166-11-5390	SPACER	1	SN:131803--188762
8	6206-21-6870	GASKET	1	SN:157067--@
	□6206-21-6850	GASKET (K2)	1	SN:131803--157066
9	01435-21020	BOLT	4	SN:131803--@

https://truckmanualshub.com/

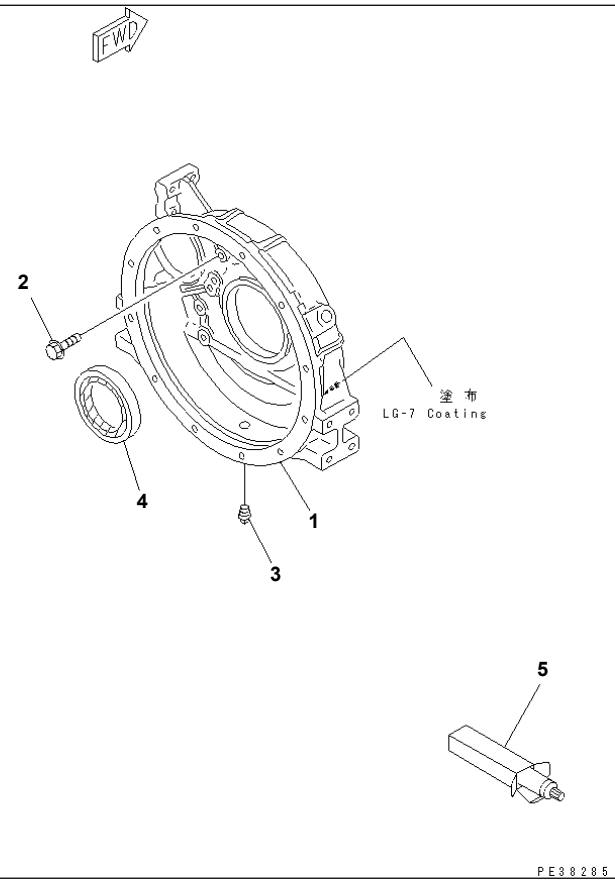


4D95L-1FF S/N 131803-UP

FLYWHEEL HOUSING

Item	Part No.	Description	Qty	Options
1	6204-21-4190	HOUSING,FLYWHEEL	1	SN:131803--
2	01435-01030	BOLT	11	SN:131803--
3	07042-00415	PLUG	1	SN:131803--
4	6141-21-1332	SEAL¤ REAR (K2)	1	SN:131803--
5	(09920-00150)	LIQUID GASKET,LG-7¤ 150G	AR	SN:131803--

https://truckmanualshub.com/

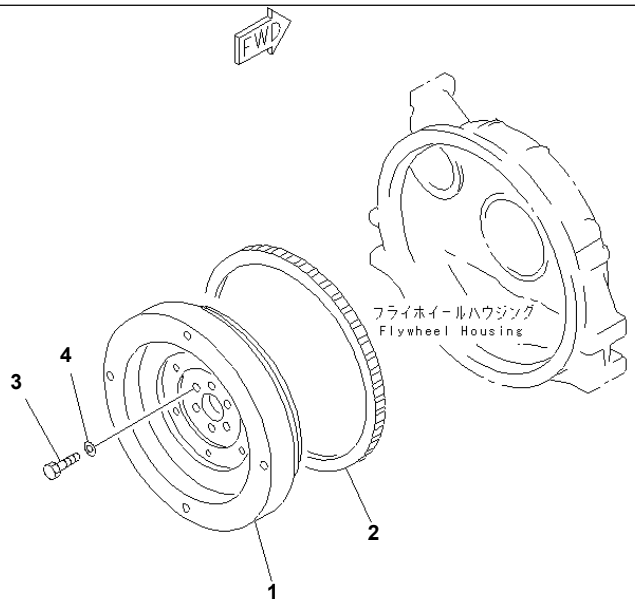


PE38286

4D95L-1FF S/N 131803-UP
FLYWHEEL

Item	Part No.	Description	Qty	Options
	6204-31-4272	FLYWHEEL ASS'Y	1	SN:157251--
	◆6204-31-4271	FLYWHEEL ASS'Y	1	SN:131803--157250
1	☆	· FLYWHEEL	1	SN:157251--
	☆	· FLYWHEEL	1	SN:131803--157250
2	6204-31-4193	· GEAR,RING	1	SN:157251--
	6204-31-4192	· GEAR,RING	1	SN:131803--157250
3	01050-31430	BOLT	6	SN:131803--
4	6130-32-1361	WASHER	6	SN:131803--

https://truckmanualshub.com/

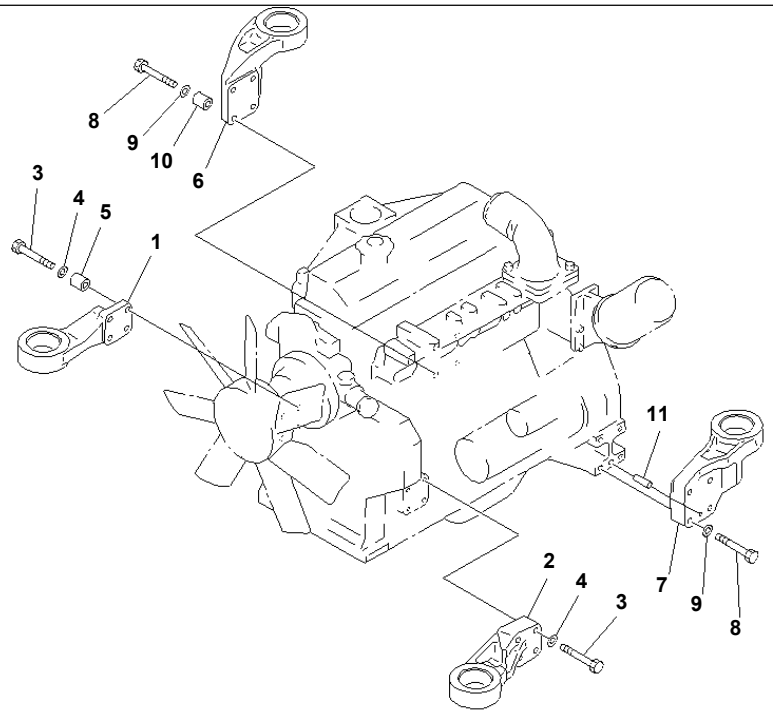


PE38287

4D95L-1FF S/N 131803-UP

ENGINE MOUNTING

Item	Part No.	Description	Qty	Options
1	(20X-01-22211)	BRACKET,R.H.	1	SN:131803--
2	(21W-01-15110)	BRACKET,L.H.	1	SN:131803--
3	(21W-01-15140)	BOLT	8	SN:131803--
4	(01643-31032)	WASHER	8	SN:131803--
5	(144-874-7470)	BOSS	2	SN:131803--
6	(20X-01-22230)	BRACKET,R.H.	1	SN:131803--
7	(21W-01-15120)	BRACKET,L.H.	1	SN:131803--
8	(21W-01-15150)	BOLT	8	SN:131803--
9	(01643-31232)	WASHER	8	SN:131803--
10	(6131-22-3750)	BOSS	4	SN:131803--
11	(04020-01228)	PIN,DOWEL	1	SN:131803--

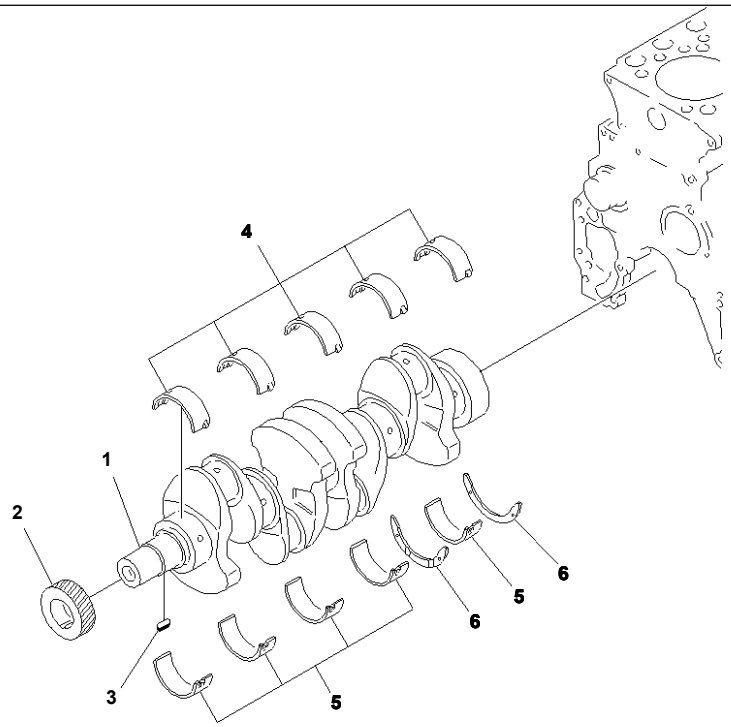

PE38288

4D95L-1FF S/N 131803-UP

CRANKSHAFT


Item	Part No.	Description	Qty	Options
	6204-31-1200	CRANKSHAFT ASS'Y	1	SN:131803--
1	☆	· CRANKSHAFT	1	SN:131803--
2	6204-31-1220	· GEAR,CRANKSHAFT	1	SN:131803--
3	6206-31-1530	· KEY	1	SN:131803--
STANDARD				
	6204-21-8100	MAIN METAL ASS'Y	5	SN:131803--
4	☆	· METAL,UPPER	1	SN:131803--
5	☆	· METAL,LOWER	1	SN:131803--
UNDERSIZE 0.25MM				
	6204-29-8100	MAIN METAL ASS'Y	5	SN:131803--
4	☆	· METAL,UPPER	1	SN:131803--
5	☆	· METAL,LOWER	1	SN:131803--
UNDERSIZE 0.50MM				
	6204-28-8100	MAIN METAL ASS'Y	5	SN:131803--
4	☆	· METAL,UPPER	1	SN:131803--
5	☆	· METAL,LOWER	1	SN:131803--
UNDERSIZE 0.75MM				
	6204-27-8100	MAIN METAL ASS'Y	5	SN:131803--
4	☆	· METAL,UPPER	1	SN:131803--
5	☆	· METAL,LOWER	1	SN:131803--
UNDERSIZE 1.00MM				
	6204-26-8100	MAIN METAL ASS'Y	5	SN:131803--
4	☆	· METAL,UPPER	1	SN:131803--
5	☆	· METAL,LOWER	1	SN:131803--

https://truckmanualshub.com/

CRANKSHAFT

Item	Part No.	Description	Qty	Options
STANDARD				
6	6204-21-8600	THRUST METAL ASS'Y	1	SN:131803--
	☆	· METAL	2	SN:131803--
OVERSIZE 0.25MM				
6	6204-29-8600	THRUST METAL ASS'Y	1	SN:131803--
	☆	· METAL	2	SN:131803--
OVERSIZE 0.50MM				
6	6204-28-8600	THRUST METAL ASS'Y	1	SN:131803--
	☆	· METAL	2	SN:131803--
OVERSIZE 0.75MM				
6	6204-27-8600	THRUST METAL ASS'Y	1	SN:131803--
	☆	· METAL	2	SN:131803--
OVERSIZE 1.00MM				
6	6204-26-8600	THRUST METAL ASS'Y	1	SN:131803--
	☆	· METAL	2	SN:131803--

https://truckmanualshub.com/

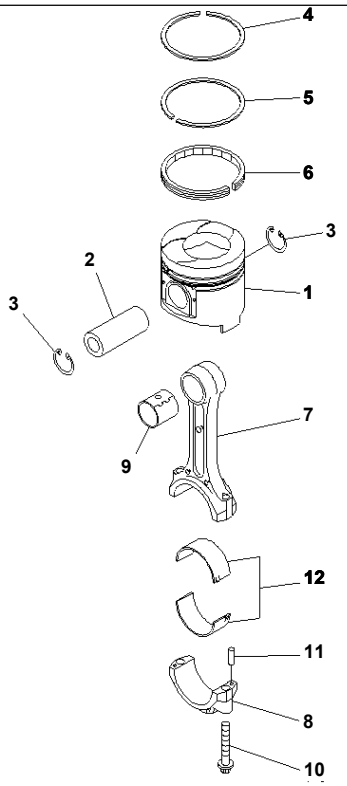

PD38217

4D95L-1FF S/N 131803-UP

PISTON


Item	Part No.	Description	Qty	Options
STANDARD				
1	6206-33-2140	PISTON (S)	4	SN:131803--
OVERSIZE 0.25MM				
1	6206-39-2140	PISTON (S)	4	SN:131803--
OVERSIZE 0.50MM				
1	6206-38-2140	PISTON (S)	4	SN:131803--
2	6204-31-2410	PIN,PISTON	4	SN:131803--
3	04065-03012	RING,SNAP	8	SN:131803--
STANDARD				
	6204-31-2202	PISTON RING ASS'Y,PER CYLINDER	4	SN:131803--
4	☆	· RING,TOP	1	SN:131803--
5	☆	· RING,SECOND	1	SN:131803--
6	☆	· RING,OIL	1	SN:131803--
OVERSIZE 0.25MM				
	6204-39-2202	PISTON RING ASS'Y,PER CYLINDER	4	SN:131803--
4	☆	· RING,TOP	1	SN:131803--
5	☆	· RING,SECOND	1	SN:131803--
6	☆	· RING,OIL	1	SN:131803--
OVERSIZE 0.50MM				
	6204-38-2202	PISTON RING ASS'Y,PER CYLINDER	4	SN:131803--
4	☆	· RING,TOP	1	SN:131803--
5	☆	· RING,SECOND	1	SN:131803--
6	☆	· RING,OIL	1	SN:131803--
	6204-31-3101	CONNECTING ROD ASS'Y	4	SN:131803--

https://truckmanualshub.com/

PISTON

Item	Part No.	Description	Qty	Options
7	☆	· ROD,CONNECTING	1	SN:131803--
8	☆	· CAP	1	SN:131803--
9	6204-31-3130	· BUSHING	1	SN:131803--
10	6204-31-3310	· BOLT	2	SN:131803--
11	6207-31-3140	· PIN	2	SN:131803--
STANDARD				
12	6204-31-3400	CRANK PIN METAL A.	4	SN:131803--
	☆	· METAL	2	SN:131803--
UNDERSIZE 0.25MM				
12	6204-39-3400	CRANK PIN METAL A.	4	SN:131803--
	☆	· METAL	2	SN:131803--
UNDERSIZE 0.50MM				
12	6204-38-3400	CRANK PIN METAL A.	4	SN:131803--
	☆	· METAL	2	SN:131803--
UNDERSIZE 0.75MM				
12	6204-37-3400	CRANK PIN METAL A.	4	SN:131803--
	☆	· METAL	2	SN:131803--
UNDERSIZE 1.00MM				
12	6204-36-3400	CRANK PIN METAL A.	4	SN:131803--
	☆	· METAL	2	SN:131803--

https://truckmanualshub.com/

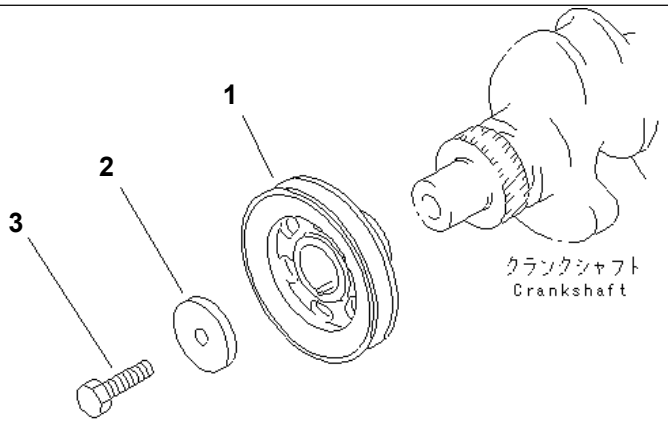


PE38347

4D95L-1FF S/N 131803-UP

CRANK PULLEY (NON HARDENING)

Item	Part No.	Description	Qty	Options
1	6204-33-1440	PULLEY¤NON HARDENING	1	SN:131803--
2	6204-31-1510	WASHER	1	SN:131803--
3	6130-32-1420	BOLT	1	SN:131803--

https://truckmanualshub.com/

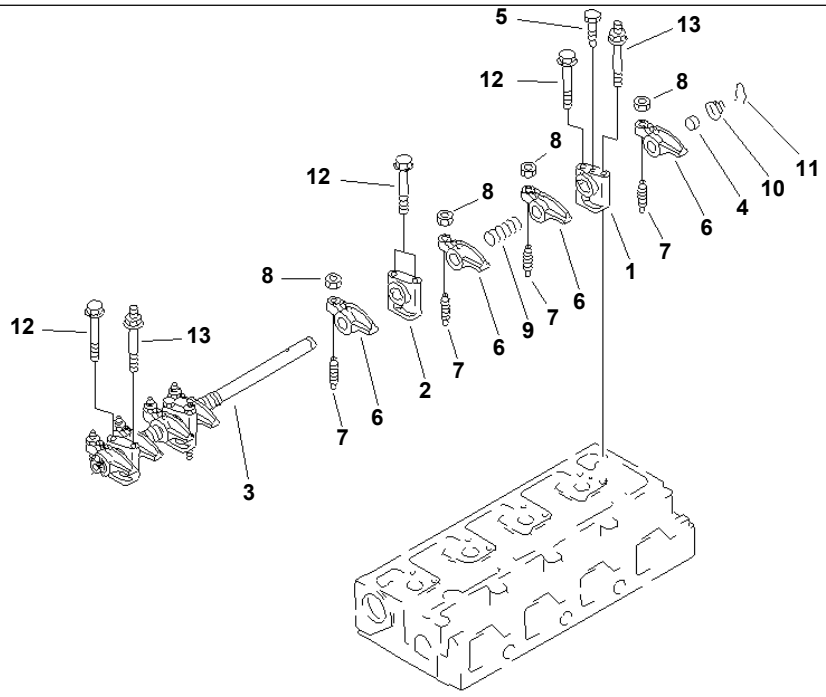


PE30139

4D95L-1FF S/N 131803-UP

ROCKER ARM

Item	Part No.	Description	Qty	Options
1	6204-41-5110	BRACKET	1	SN:131803--
2	6204-41-5120	BRACKET	3	SN:131803--
	6202-43-5200	SHAFT ASS'Y	1	SN:131803--
3	☆	· SHAFT	1	SN:131803--
4	6221-41-5540	· PLUG	2	SN:131803--
5	6221-41-5310	BOLT	1	SN:131803--
6	6202-43-5410	ARM,ROCKER	8	SN:131803--
7	6221-41-5410	SCREW,ADJUST	8	SN:131803--
8	6221-41-5420	NUT	8	SN:131803--
9	6202-43-5320	SPRING	3	SN:131803--
10	6221-41-5520	SPRING	2	SN:131803--
11	6136-41-5330	CLIP	2	SN:131803--
12	01435-00865	BOLT	5	SN:131803--
13	6204-41-5710	BOLT	3	SN:131803--

https://truckmanualshub.com/

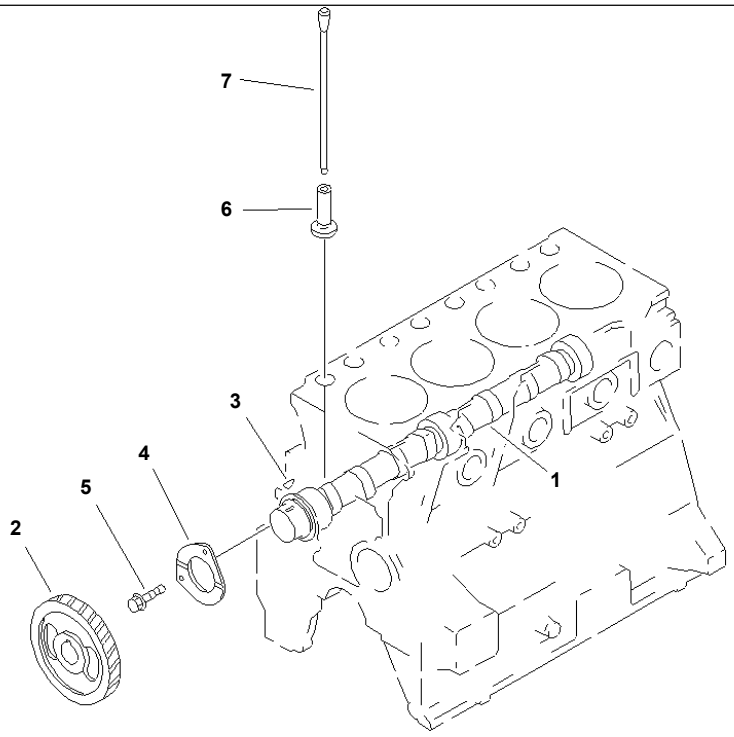


PE30150

4D95L-1FF S/N 131803-UP

CAMSHAFT AND TAPPET

Item	Part No.	Description	Qty	Options
	6205-41-1300	CAMSHAFT ASS'Y	1	SN:131803--
1	☆	· CAMSHAFT	1	SN:131803--
2	6204-41-1221	· GEAR,CAMSHAFT	1	SN:131803--
3	04010-00516	· KEY	1	SN:131803--
4	6204-41-1131	· PLATE,THRUST	1	SN:131803--
5	01435-20820	BOLT	2	SN:131803--
6	6204-41-2110	TAPPET	8	SN:131803--
7	6204-41-3110	ROD,PUSH	8	SN:131803--

https://truckmanualshub.com/

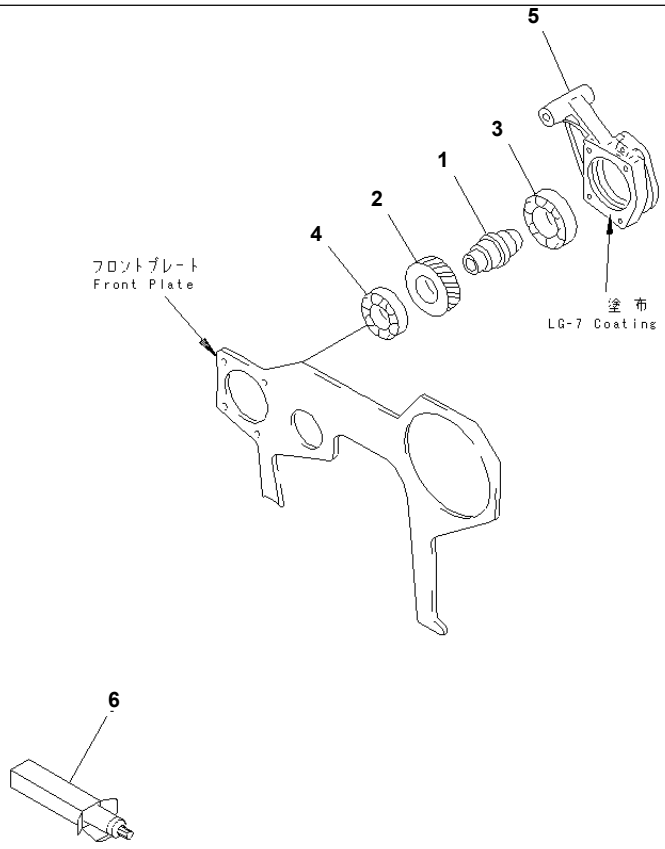


4D95L-1FF S/N 131803-UP

FRONT POWER TAKE OFF

Item	Part No.	Description	Qty	Options
	6204-21-9100	SHAFT ASS'Y,POWER TAKE OFF	1	SN:131803--
1	☆	· SHAFT	1	SN:131803--
2	☆	· GEAR	1	SN:131803--
3	06040-06207	BEARING	1	SN:131803--
4	6130-22-9160	BEARING	1	SN:131803--
5	6204-21-9270	HOUSING,POWER TAKE OFF	1	SN:131803--
6	(09920-00150)	LIQUID GASKET,LG-7¤ 150G	AR	SN:131803--

Ref. A2610-A0A3 Page 030290

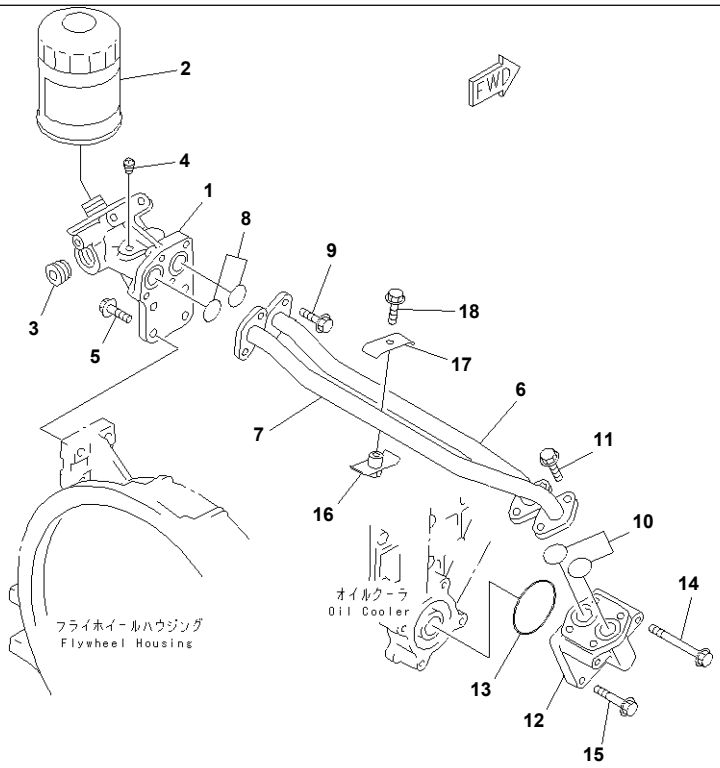


4D95L-1FF S/N 131803-UP

OIL FILTER

Item	Part No.	Description	Qty	Options
	6204-51-5300	OIL FILTER ASS'Y	1	SN:131803--
1	6204-51-5310	· HEAD	1	SN:131803--
2	600-211-5241	· CARTRIDGE	1	SN:131803--
3	6206-61-5170	· PLUG	1	SN:131803--
4	07042-30108	· PLUG	1	SN:131803--
5	01435-21025	BOLT	4	SN:131803--
6	6204-51-5920	TUBE	1	SN:131803--
7	6204-51-5930	TUBE	1	SN:131803--
8	07000-63025	O-RING	2	SN:150681--
	07000-63025	O-RING (K2)	2	SN:131803--150680
9	01435-20825	BOLT	4	SN:131803--
10	07000-63025	O-RING	2	SN:150681--
	07000-63025	O-RING (K2)	2	SN:131803--150680
11	01435-20825	BOLT	4	SN:131803--
12	6204-51-5410	ADAPTER	1	SN:131803--
13	07000-62070	O-RING	1	SN:150681--
	07000-62070	O-RING (K2)	1	SN:131803--150680
14	01435-20885	BOLT	2	SN:131803--
15	01435-20835	BOLT	2	SN:131803--
16	6204-51-5980	CLAMP	1	SN:131803--
17	6204-51-5990	CLAMP	1	SN:131803--
18	01435-20835	BOLT	1	SN:131803--

https://truckmanualshub.com/

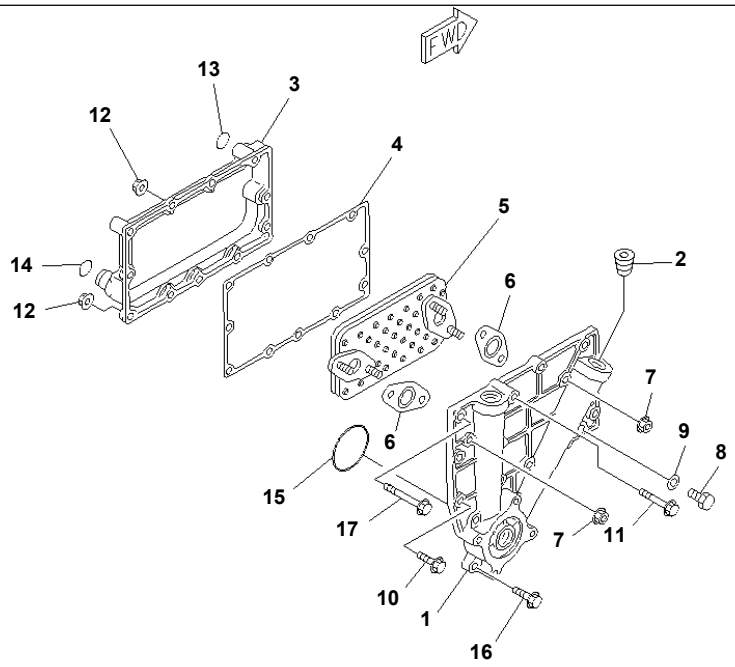


PE38292

4D95L-1FF S/N 131803-UP
OIL COOLER

Item	Part No.	Description	Qty	Options
1	6204-61-5110	COVER ASS'Y	1	SN:131803--
2	6204-61-5170	· PLUG	2	SN:131803--
3	6204-61-5120	HOUSING	1	SN:131803--
4	6204-61-5181	GASKET (K2)	1	SN:160812--
	□6204-61-5180	GASKET (K2)	1	SN:131803--160811
5	600-651-1510	ELEMENT	1	SN:131803--
6	6204-61-5191	GASKET (K2)	2	SN:160812--
	□6204-61-5190	GASKET (K2)	2	SN:131803--160811
7	01584-00806	NUT	4	SN:131803--
8	600-311-6720	PLUG	1	SN:131803--
9	07005-00812	GASKET (K2)	1	SN:131803--
10	01435-20830	BOLT	7	SN:131803--
11	01435-20850	BOLT	1	SN:131803--
12	01584-00806	NUT	8	SN:131803--
13	07000-02020	O-RING (K2)	1	SN:131803--
14	07000-02018	O-RING (K2)	1	SN:131803--
15	07000-62070	O-RING	1	SN:160812--
	07000-62070	O-RING (K2)	1	SN:131803--160811
16	01435-20825	BOLT	4	SN:131803--
17	01435-20855	BOLT	3	SN:131803--

https://truckmanualshub.com/

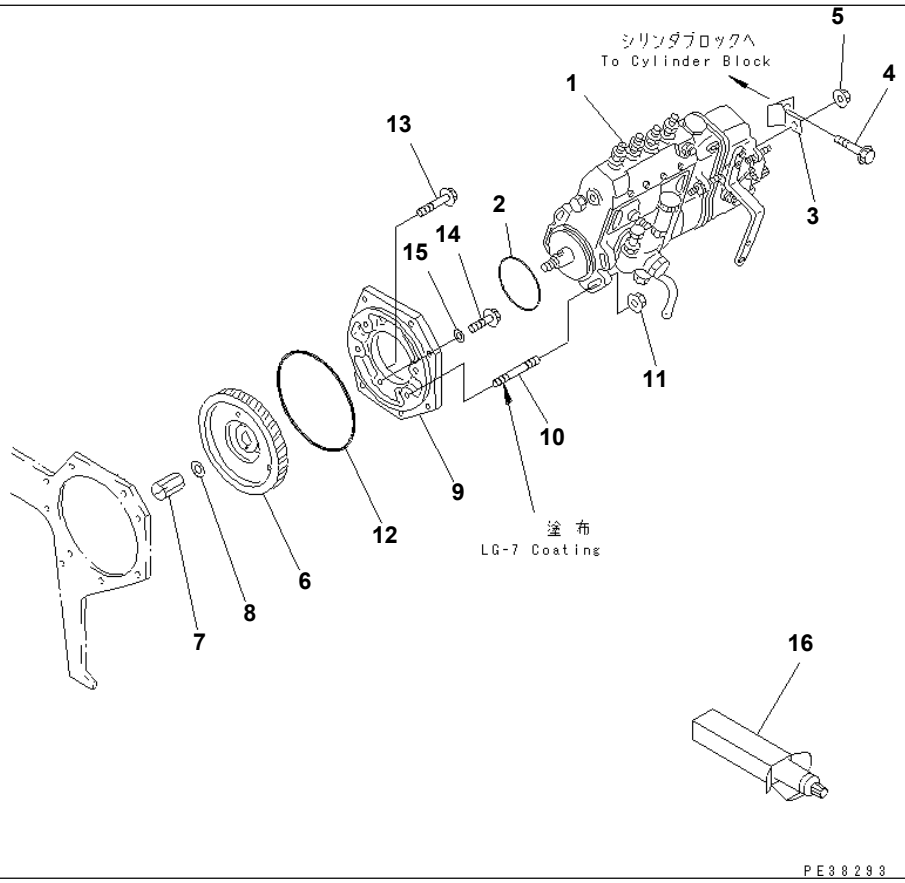


Ref. A4010-A0A4 Page 030320

4D95L-1FF S/N 131803-UP

FUEL INJECTION PUMP MOUNTING(#131803-168762)

Item	Part No.	Description	Qty	Options
1	(6204-71-1290)	INJECTION PUMP A.,(SEE FIG.A4010-B0A4)	1	SN:131803--168762
2	07000-02065	O-RING (K2)	1	SN:131803--@
3	6206-71-1852	BRACKET	1	SN:131803--@
4	01435-21016	BOLT	1	SN:131803--@
5	01584-00806	NUT	1	SN:131803--@
6	6204-71-3130	GEAR	1	SN:131803--@
7	6204-71-3630	NUT	1	SN:131803--@
8	6114-31-3330	WASHER (K2)	1	SN:131803--@
9	6204-71-3110	HOLDER	1	SN:131803--@
10	01144-51035	STUD	4	SN:131803--@
11	01584-01008	NUT	4	SN:131803--@
12	07000-02135	O-RING (K2)	1	SN:131803--@
13	6204-71-3190	BOLT	1	SN:131803--@
14	01435-20812	BOLT	1	SN:131803--@
15	07005-00812	GASKET (K2)	1	SN:131803--@
16	(09920-00150)	LIQUID GASKET,LG-7¤ 150G	AR	SN:131803--@

Ref. A4010-A0A4 Page 030320

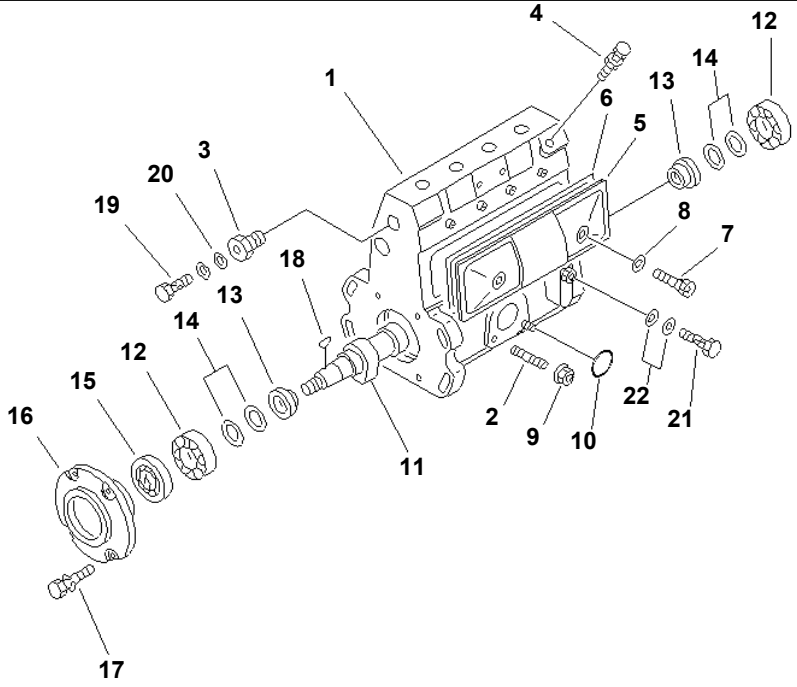

PE3P605

4D95L-1FF S/N 131803-UP

FUEL INJECTION PUMP (PUMP) (1/2) (INNER PARTS)(#131803-168762)


Item	Part No.	Description	Qty	Options
	6204-71-1290	INJECTION PUMP A.	1	SN:131803--168762
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.A4010-B0A4 TO A4010-F0A4.				
THE ZEXEL PART NUMBER IS THAT DK IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
	DK101049-8760	· PUMP ASS'Y	1	SN:131803--168762
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.A4010-B0A4 AND A4010-C0A4.				
1	DK131063-9820	· · HOUSING	1	SN:131803--168762
2	DK029040-6020	· · · STUD	3	SN:131803--168762
3	DK131400-0100	· · · ADAPTER	1	SN:131803--168762
4	DK131420-0420	· · · BOLT	1	SN:131803--168762
5	DK131028-6220	· · COVER	1	SN:131803--168762
6	DK131011-1900	· · · GASKET	1	SN:131803--168762
7	DK131017-1000	· · SCREW	2	SN:131803--168762
8	DK029340-6020	· · GASKET	2	SN:131803--168762
9	DK139206-0400	· · NUT	3	SN:131803--168762
10	DK029633-1010	· · O-RING	1	SN:131803--168762
11	DK131360-2700	· · CAMSHAFT	1	SN:131803--168762
12	DK016630-2030	· · BEARING	AR	SN:131803--168762
	DK028201-7020	· · BEARING	AR	SN:131803--168762
13	DK131302-0300	· · RING	2	SN:131803--168762
14	DK029311-7010	· · SHIM¤ 0.1MM	AR	SN:131803--168762
	DK029311-7020	· · SHIM¤ 0.12MM	AR	SN:131803--168762
	DK029311-7030	· · SHIM¤ 0.14MM	AR	SN:131803--168762
	DK029311-7040	· · SHIM¤ 0.16MM	AR	SN:131803--168762
	DK029311-7050	· · SHIM¤ 0.18MM	AR	SN:131803--168762

https://truckmanualshub.com/

FUEL INJECTION PUMP (PUMP) (1/2) (INNER PARTS)(#131803-168762)

Item	Part No.	Description	Qty	Options
	DK029311-7090	· · SHIM¤ 0.3MM	AR	SN:131803--168762
	DK029311-7060	· · SHIM¤ 0.5MM	AR	SN:131803--168762
	DK029311-7210	· · SHIM¤ 0.7MM	AR	SN:131803--168762
	DK029311-7070	· · SHIM¤ 1.0MM	AR	SN:131803--168762
	DK029311-7220	· · SHIM¤ 1.4MM	AR	SN:131803--168762
	DK139417-0000	· · SHIM¤ 2.40MM	AR	SN:131803--168762
15	DK029621-7050	· · SEAL,OIL	1	SN:131803--168762
16	DK131330-6200	· · COVER	1	SN:131803--168762
17	DK020006-1440	· · BOLT	4	SN:131803--168762
18	DK025803-1640	· · KEY	1	SN:131803--168762
19	DK131401-0020	· · BOLT,EYE	1	SN:131803--168762
20	DK029341-4130	· · GASKET	2	SN:131803--168762
21	DK029731-0120	· · BOLT,EYE	1	SN:131803--168762
22	DK029341-0110	· · GASKET	2	SN:131803--168762

https://truckmanualshub.com/

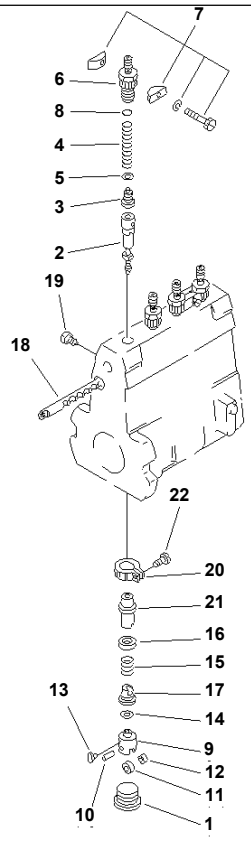

PE3P607

4D95L-1FF S/N 131803-UP


FUEL INJECTION PUMP (PUMP) (2/2) (INNER PARTS)(#131803-168762)

Item	Part No.	Description	Qty	Options
	(6204-71-1290)	INJECTION PUMP A.	1	SN:131803--168762
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.A4010-B0A4 TO A4010-F0A4.				
THE ZEXEL PART NUMBER IS THAT DK IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
	(DK101049-8760)	· PUMP ASS'Y	1	SN:131803--168762
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.A4010-B0A4 AND A4010-C0A4.				
1	DK131034-1401	· · PLUG	4	SN:131803--168762
2	DK131152-4420	· · PLUNGER ASS'Y	4	SN:131803--168762
3	DK131110-6820	· · VALVE,DELIVERY	4	SN:131803--168762
4	DK131112-1600	· · SPRING	4	SN:131803--168762
5	DK131115-1600	· · GASKET	4	SN:131803--168762
6	DK131116-5220	· · HOLDER	4	SN:131803--168762
7	DK131122-0520	· · PLATE ASS'Y	2	SN:131803--168762
8	DK029632-0030	· · O-RING	4	SN:131803--168762
9	DK131200-2820	· · TAPPET ASS'Y	4	SN:131803--168762
10	DK131203-0800	· · · PIN	1	SN:131803--168762
11	DK131204-1000	· · · ROLLER	1	SN:131803--168762
12	DK131205-0500	· · · BUSHING	1	SN:131803--168762
13	DK131206-0200	· · · GUIDE	1	SN:131803--168762
14	DK029311-0580	· · SHIM¤ 0.2MM	AR	SN:131803--168762
	DK029311-0590	· · SHIM¤ 0.25MM	AR	SN:131803--168762
	DK029311-0020	· · SHIM¤ 0.30MM	AR	SN:131803--168762
	DK029311-0600	· · SHIM¤ 0.35MM	AR	SN:131803--168762
	DK029311-0030	· · SHIM¤ 0.40MM	AR	SN:131803--168762
	DK029311-0610	· · SHIM¤ 0.45MM	AR	SN:131803--168762

https://truckmanualshub.com/

FUEL INJECTION PUMP (PUMP) (2/2) (INNER PARTS)(#131803-168762)

Item	Part No.	Description	Qty	Options
	DK029311-0040	· · SHIM¤ 0.50MM	AR	SN:131803--168762
	DK029311-0270	· · SHIM¤ 0.55MM	AR	SN:131803--168762
	DK029311-0050	· · SHIM¤ 0.6MM	AR	SN:131803--168762
	DK029311-0280	· · SHIM¤ 0.65MM	AR	SN:131803--168762
	DK029311-0060	· · SHIM¤ 0.7MM	AR	SN:131803--168762
	DK029311-0290	· · SHIM¤ 0.75MM	AR	SN:131803--168762
	DK029311-0070	· · SHIM¤ 0.8MM	AR	SN:131803--168762
	DK029311-0310	· · SHIM¤ 0.85MM	AR	SN:131803--168762
	DK029311-0080	· · SHIM¤ 0.9MM	AR	SN:131803--168762
	DK029311-0320	· · SHIM¤ 0.95MM	AR	SN:131803--168762
	DK029311-0090	· · SHIM¤ 1.0MM	AR	SN:131803--168762
	DK029311-0330	· · SHIM¤ 1.05MM	AR	SN:131803--168762
	DK029311-0110	· · SHIM¤ 1.1MM	AR	SN:131803--168762
	DK029311-0340	· · SHIM¤ 1.15MM	AR	SN:131803--168762
	DK029311-0120	· · SHIM¤ 1.2MM	AR	SN:131803--168762
	DK029311-0350	· · SHIM¤ 1.25MM	AR	SN:131803--168762
	DK029311-0130	· · SHIM¤ 1.3MM	AR	SN:131803--168762
	DK029311-0620	· · SHIM¤ 1.35MM	AR	SN:131803--168762
	DK029311-0140	· · SHIM¤ 1.4MM	AR	SN:131803--168762
	DK029311-0630	· · SHIM¤ 1.45MM	AR	SN:131803--168762
	DK029311-0490	· · SHIM¤ 1.5MM	AR	SN:131803--168762
	DK029311-0710	· · SHIM¤ 1.55MM	AR	SN:131803--168762
	DK029311-0500	· · SHIM¤ 1.6MM	AR	SN:131803--168762
15	DK131215-2500	· · SPRING	4	SN:131803--168762
16	DK131216-0100	· · SEAT,SPRING	4	SN:131803--168762
17	DK131217-0200	· · SEAT,SPRING	4	SN:131803--168762
18	DK131254-0000	· · RACK,CONTROL	1	SN:131803--168762
19	DK131226-0300	· · SCREW	1	SN:131803--168762
20	DK131240-0100	· · PINION	4	SN:131803--168762
21	DK131241-0100	· · SLEEVE,CONTROL	4	SN:131803--168762
22	DK131242-0100	· · SCREW	4	SN:131803--168762

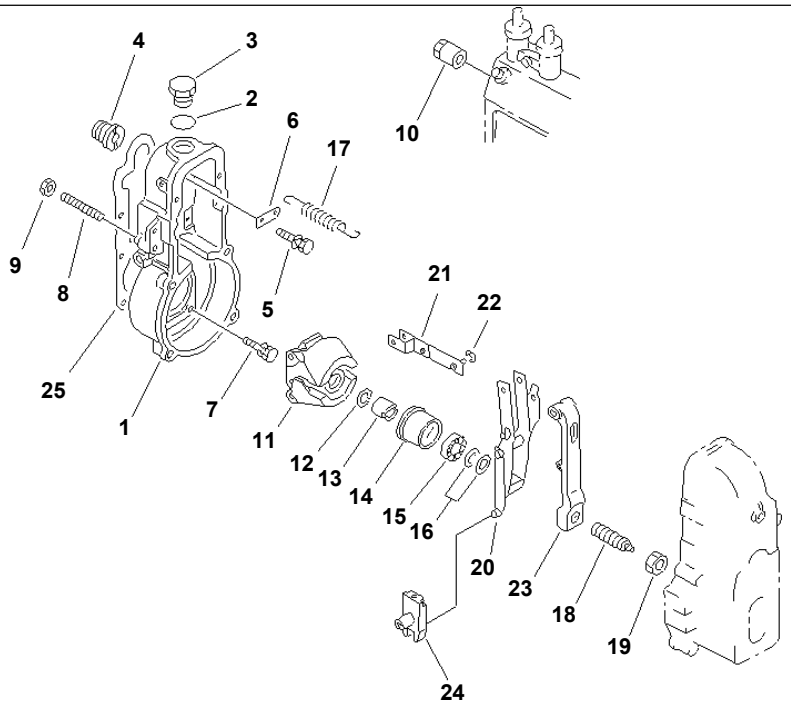

PE3P110

4D95L-1FF S/N 131803-UP


FUEL INJECTION PUMP (GOVERNOR) (1/2) (INNER PARTS)(#131803-168762)

Item	Part No.	Description	Qty	Options
	(6204-71-1290)	INJECTION PUMP A.	1	SN:131803--168762
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.A4010-B0A4 TO A4010-F0A4.				
THE ZEXEL PART NUMBER IS THAT DK IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
	DK105400-7830	· GOVERNOR ASS'Y	1	SN:131803--168762
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.A4010-D0A4 AND A4010-E0A4.				
1	DK154000-6300	· · HOUSING	1	SN:131803--168762
2	DK029632-5070	· · O-RING	1	SN:131803--168762
3	DK154007-2900	· · PLUG	1	SN:131803--168762
4	DK154007-0200	· · ADAPTER	1	SN:131803--168762
5	DK020018-1840	· · BOLT	1	SN:131803--168762
6	DK154350-1900	· · PLATE	1	SN:131803--168762
7	DK029010-6810	· · BOLT	6	SN:131803--168762
8	DK154010-0100	· · SCREW	1	SN:131803--168762
9	DK154011-0100	· · NUT,LOCK	1	SN:131803--168762
10	DK154050-1720	· · LIMITER	1	SN:131803--168762
11	DK154100-9720	· · FLYWEIGHT ASS'Y	1	SN:131803--168762
12	DK029321-2020	· · WASHER,SPRING	1	SN:131803--168762
13	DK029231-2030	· · NUT	1	SN:131803--168762
14	DK154123-0120	· · SLEEVE	1	SN:131803--168762
15	DK029801-0030	· · · BEARING	1	SN:131803--168762
16	DK029311-0010	· · SHIM¤ 0.20MM	AR	SN:131803--168762
	DK029311-0180	· · SHIM¤ 0.30MM	AR	SN:131803--168762
	DK029311-0190	· · SHIM¤ 0.40MM	AR	SN:131803--168762
	DK139410-0000	· · SHIM¤ 0.50MM	AR	SN:131803--168762

https://truckmanualshub.com/

FUEL INJECTION PUMP (GOVERNOR) (1/2) (INNER PARTS)(#131803-168762)

Item	Part No.	Description	Qty	Options
	DK029311-0210	· · SHIM¤ 1.00MM	AR	SN:131803--168762
	DK139410-0100	· · SHIM¤ 1.50MM	AR	SN:131803--168762
	DK139410-3000	· · SHIM¤ 2.00MM	AR	SN:131803--168762
	DK139410-3100	· · SHIM¤ 3.00MM	AR	SN:131803--168762
	DK139410-3200	· · SHIM¤ 4.00MM	AR	SN:131803--168762
17	DK154154-1200	· · SPRING	1	SN:131803--168762
18	DK154177-1820	· · CAPSULE,SPRING	1	SN:131803--168762
19	DK029201-6010	· · NUT	1	SN:131803--168762
20	DK154210-0920	· · GUIDE LEVER ASS'Y	1	SN:131803--168762
21	DK154230-3920	· · LINK	1	SN:131803--168762
22	DK016010-0540	· · RING,SNAP	1	SN:131803--168762
23	DK154236-4100	· · LEVER,TENSION	1	SN:131803--168762
24	DK154326-5020	· · LEVER ASS'Y	1	SN:131803--168762
25	DK154350-7700	· · GASKET	1	SN:131803--168762

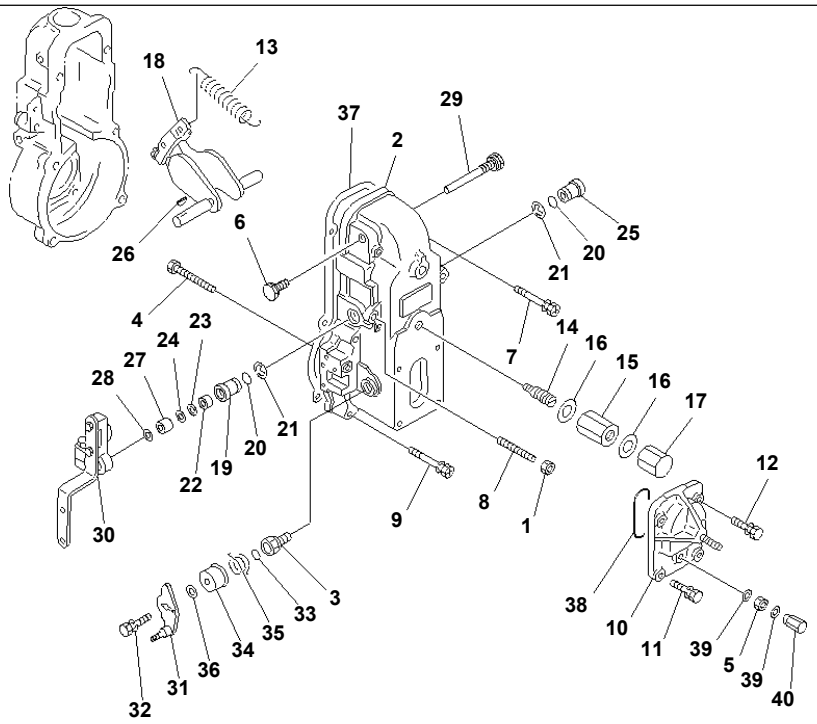

PE3P629

4D95L-1FF S/N 131803-UP

FUEL INJECTION PUMP (GOVERNOR) (2/2) (INNER PARTS)(#131803-168762)


Item	Part No.	Description	Qty	Options
	(6204-71-1290)	INJECTION PUMP A.	1	SN:131803--168762
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.A4010-B0A4 TO A4010-F0A4.				
THE ZEXEL PART NUMBER IS THAT DK IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
	(DK105400-7830)	· GOVERNOR ASS'Y	1	SN:131803--168762
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.A4010-D0A4 AND A4010-E0A4.				
1	DK154011-0100	· · NUT,LOCK	1	SN:131803--168762
2	DK154500-1020	· · COVER	1	SN:131803--168762
3	DK154321-0400	· · · BUSHING	1	SN:131803--168762
4	DK154031-2400	· · SCREW	1	SN:131803--168762
5	DK139206-0600	· · NUT	1	SN:131803--168762
6	DK154036-0300	· · PLUG	1	SN:131803--168762
7	DK020106-5040	· · BOLT	2	SN:131803--168762
8	DK154010-0200	· · SCREW	1	SN:131803--168762
9	DK020106-3840	· · BOLT	4	SN:131803--168762
10	DK154063-6820	· · COVER	1	SN:131803--168762
11	DK029020-6210	· · BOLT	2	SN:131803--168762
12	DK020006-1640	· · BOLT	2	SN:131803--168762
13	DK154150-0400	· · SPRING,GOVERNOR	1	SN:131803--168762
14	DK154158-0820	· · CAPSULE,SPRING	1	SN:131803--168762
15	DK154011-1700	· · NUT	1	SN:131803--168762
16	DK026512-1540	· · GASKET	2	SN:131803--168762
17	DK154159-1200	· · NUT,CAP	1	SN:131803--168762
18	DK154200-7020	· · LEVER ASS'Y,SWIVEL	1	SN:131803--168762
19	DK154204-3000	· · BUSHING	1	SN:131803--168762

https://truckmanualshub.com/

FUEL INJECTION PUMP (GOVERNOR) (2/2) (INNER PARTS)(#131803-168762)

Item	Part No.	Description	Qty	Options
20	DK029631-8020	· · O-RING	2	SN:131803--168762
21	DK016010-1640	· · RING,SNAP	2	SN:131803--168762
22	DK139611-0000	· · SEAL,OIL	1	SN:131803--168762
23	DK139411-0000	· · SHIM¤ 0.40MM	1	SN:131803--168762
24	DK029311-1090	· · SHIM¤ 0.30MM	AR	SN:131803--168762
25	DK154204-3100	· · BUSHING	1	SN:131803--168762
26	DK025803-1310	· · KEY¤ 13MM	1	SN:131803--168762
27	DK154206-2800	· · COLLAR	1	SN:131803--168762
28	DK154206-0200	· · WASHER¤ 1.0MM	AR	SN:131803--168762
29	DK154237-1100	· · PIN	1	SN:131803--168762
30	DK154343-0220	· · LEVER	1	SN:131803--168762
31	DK154367-4020	· · LEVER	1	SN:131803--168762
32	DK020006-1640	· · BOLT	1	SN:131803--168762
33	DK029631-0030	· · O-RING	1	SN:131803--168762
34	DK154322-0100	· · CAP	1	SN:131803--168762
35	DK154327-7600	· · SPRING	1	SN:131803--168762
36	DK029311-0520	· · SHIM¤ 0.2MM	AR	SN:131803--168762
	DK029311-0530	· · SHIM¤ 0.25MM	AR	SN:131803--168762
	DK029311-0540	· · SHIM¤ 0.3MM	AR	SN:131803--168762
	DK029311-0550	· · SHIM¤ 0.35MM	AR	SN:131803--168762
	DK029311-0560	· · SHIM¤ 0.4MM	AR	SN:131803--168762
	DK029311-0570	· · SHIM¤ 0.5MM	AR	SN:131803--168762
37	DK154350-7800	· · GASKET	1	SN:131803--168762
38	DK029635-2020	· · O-RING	1	SN:131803--168762
39	DK026506-1040	· · GASKET	2	SN:131803--168762
40	DK154035-1600	· · NUT,CAP	1	SN:131803--168762

https://truckmanualshub.com/

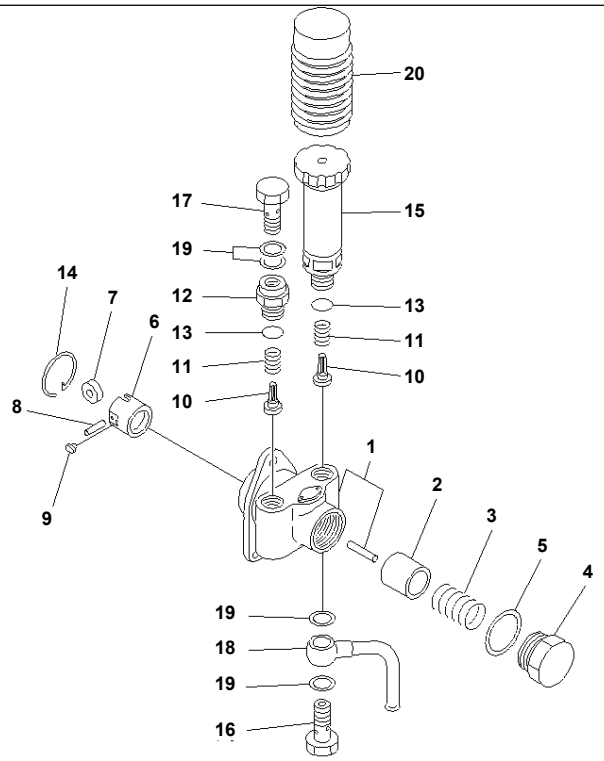


PE3P081

4D95L-1FF S/N 131803-UP

FUEL INJECTION PUMP (FEED PUMP) (INNER PARTS)(#131803-168762)

Item	Part No.	Description	Qty	Options
	(6204-71-1290)	INJECTION PUMP A.	1	SN:131803--168762
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.A4010-B0A4 TO A4010-F0A4.				
THE ZEXEL PART NUMBER IS THAT DK IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
	DK105220-5700	· FEED PUMP ASS'Y	1	SN:131803--168762
1	DK152003-1020	· · HOUSING	1	SN:131803--168762
2	DK152100-1120	· · PISTON	1	SN:131803--168762
3	DK152102-1600	· · SPRING	1	SN:131803--168762
4	DK152105-1600	· · PLUG	1	SN:131803--168762
5	DK029332-6030	· · GASKET	1	SN:131803--168762
6	DK152111-2820	· · TAPPET ASS'Y	1	SN:131803--168762
7	DK152112-0100	· · · ROLLER	1	SN:131803--168762
8	DK152113-0700	· · · PIN	1	SN:131803--168762
9	DK152114-0400	· · · GUIDE	2	SN:131803--168762
10	DK152115-0500	· · VALVE	2	SN:131803--168762
11	DK152116-0200	· · SPRING	2	SN:131803--168762
12	DK152118-0900	· · ADAPTER	1	SN:131803--168762
13	DK029631-6060	· · O-RING	2	SN:131803--168762
14	DK152121-0200	· · RING,SNAP	1	SN:131803--168762
15	DK152200-5420	· · PUMP,PRIMING	1	SN:131803--168762
16	DK152300-5920	· · BOLT,JOINT	1	SN:131803--168762
17	DK029731-4680	· · BOLT,JOINT	1	SN:131803--168762
18	DK152350-6720	· · PIPE	1	SN:131803--168762
19	DK029341-4130	· · GASKET	4	SN:131803--168762
20	DK152320-0100	· · COVER	1	SN:131803--168762

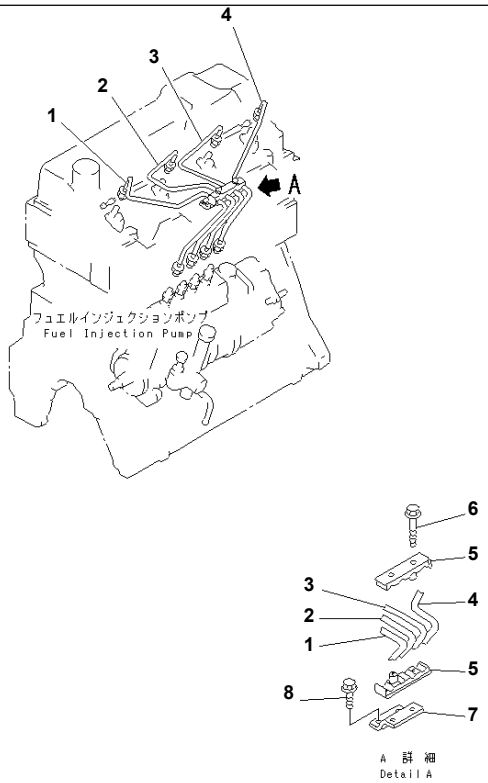


PE38261

4D95L-1FF S/N 131803-UP

INJECTION PIPING

Item	Part No.	Description	Qty	Options
1	6204-71-5110	TUBE,INJECTION¤ NO.1	1	SN:131803--
2	6204-71-5120	TUBE,INJECTION¤ NO.2	1	SN:131803--
3	6204-71-5130	TUBE,INJECTION¤ NO.3	1	SN:131803--
4	6204-71-5140	TUBE,INJECTION¤ NO.4	1	SN:131803--
5	6204-71-5710	CLAMP	2	SN:131803--
6	01435-20625	BOLT	2	SN:131803--
7	6204-71-5810	PLATE	1	SN:131803--
8	01435-20612	BOLT	2	SN:131803--

https://truckmanualshub.com/

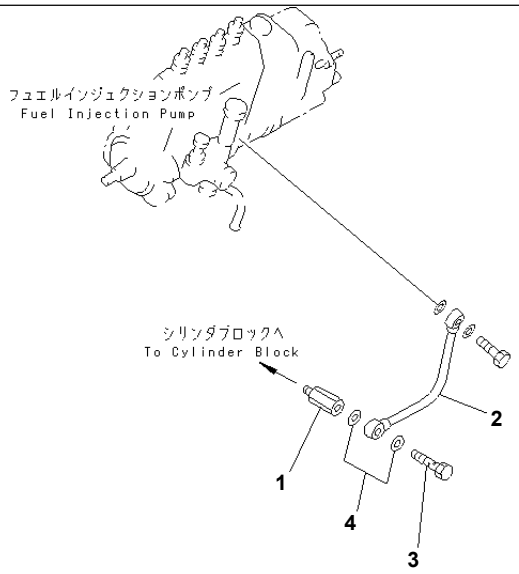


PE38262

4D95L-1FF S/N 131803-UP

FUEL INJECTION PUMP LUBRINCATOR

Item	Part No.	Description	Qty	Options
1	6204-71-4250	CONNECTOR	1	SN:131803--
2	6204-71-4230	PIPE,OIL	1	SN:131803--
3	07206-30710	BOLT,JOINT	1	SN:131803--
4	07005-01012	GASKET (K2)	2	SN:131803--

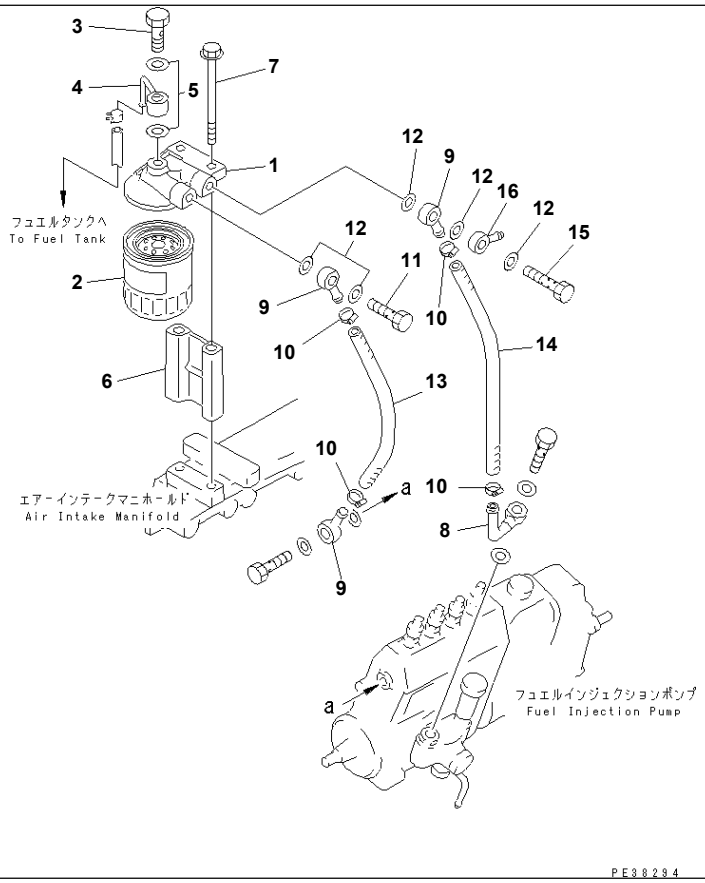


4D95L-1FF S/N 131803-UP

FUEL FILTER

Item	Part No.	Description	Qty	Options
	6206-73-6200	FUEL FILTER ASS'Y	1	SN:131803--
1	6204-71-6210	· HEAD	1	SN:131803--
2	600-311-7440	· CARTRIDGE	1	SN:131803--
3	6206-73-6220	· JOINT	1	SN:131803--
4	6206-73-6230	· CONNECTOR	1	SN:131803--
5	07005-01412	· GASKET (K2)	2	SN:131803--
6	6206-71-6590	SPACER	1	SN:131803--
7	01436-01020	BOLT	2	SN:131803--
8	6206-71-5850	JOINT	1	SN:131803--
9	6144-71-5750	JOINT	3	SN:131803--
10	07281-00197	CLAMP	4	SN:131803--
11	07206-11014	BOLT,JOINT	1	SN:131803--
12	07005-01412	GASKET (K2)	5	SN:131803--
13	07260-20928	HOSE	1	SN:131803--
14	07260-20932	HOSE	1	SN:131803--
15	6127-71-5710	BOLT,JOINT	1	SN:131803--
16	6206-71-5940	JOINT	1	SN:131803--

https://truckmanualshub.com/

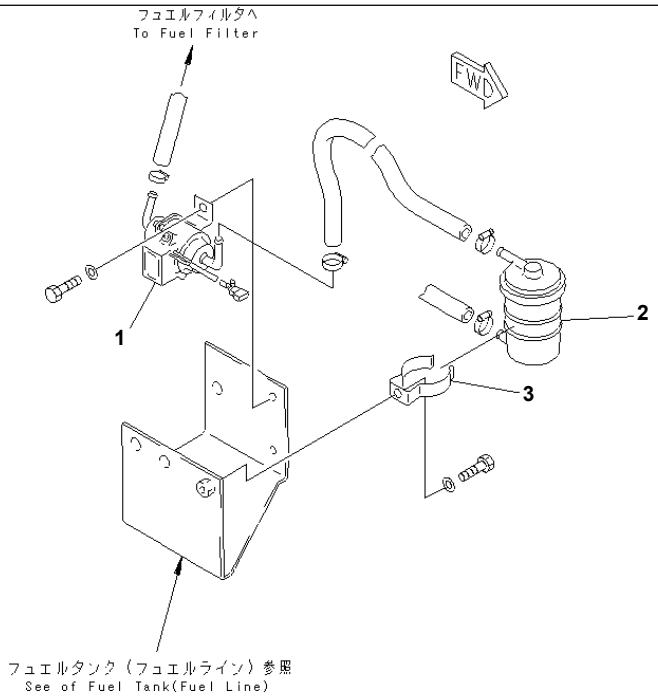


PE38295

4D95L-1FF S/N 131803-UP

FUEL LIFT PUMP

Item	Part No.	Description	Qty	Options
1	6206-71-5491	PUMP ASS'Y,SUCTION	1	SN:131803--
2	600-311-7410	CARTRIDGE	1	SN:131803--
3	6201-72-1850	CLAMP	1	SN:131803--

https://truckmanualshub.com/

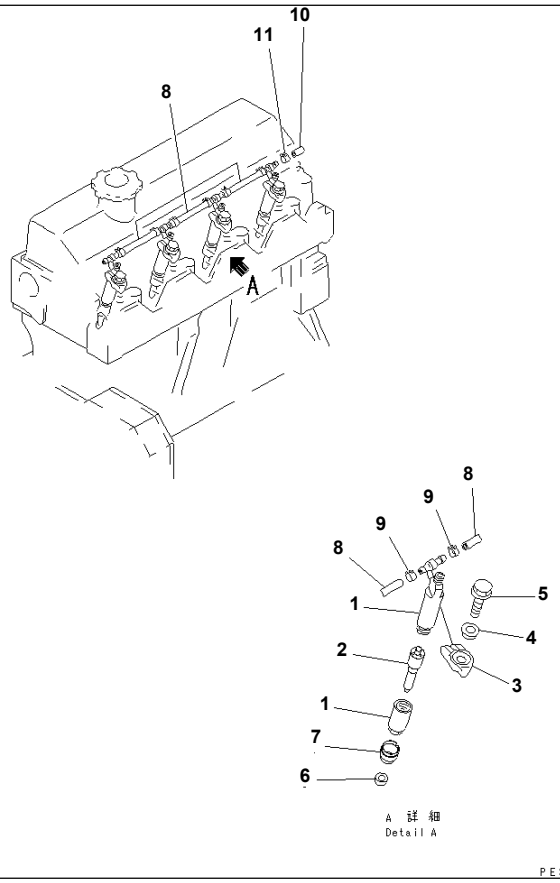


4D95L-1FF S/N 131803-UP

INJECTION NOZZLE

Item	Part No.	Description	Qty	Options
	6206-11-3100	NOZZLE HOLDER ASS'Y	4	SN:131803--
1	(6207-11-3110)	· HOLDER ASS'Y,(SEE FIG.A4210-B0A4)	1	SN:131803--
2	6206-11-3130	· NOZZLE	1	SN:131803--
3	6204-11-3810	HOLDER	4	SN:131803--
4	6204-11-3830	WASHER	4	SN:131803--
5	01435-01035	BOLT	4	SN:131803--
6	6204-11-3880	GASKET (K1)	4	SN:131803--
7	6204-11-3850	SEAL,DUST (K1)	4	SN:131803--
8	6204-71-9100	HOSE,SPILL	3	SN:131803--
9	07285-00100	CLIP	6	SN:131803--
10	6204-71-5581	CAP	1	SN:131803--
11	07285-00100	CLIP	1	SN:131803--

Ref. A4210-A0A4 Page 030480

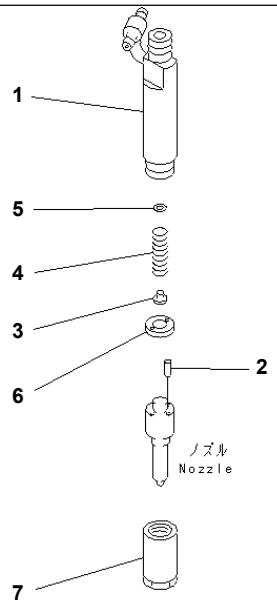

PE38876

NOZZLE HOLDER (INNER PARTS)


Item	Part No.	Description	Qty	Options
1	6207-11-3110	HOLDER ASS'Y	6	SN:131803--
THE ZEXEL PART NUMBER IS THAT DK IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
2	DK150508-5900	· PIN	2	SN:131803--
3	DK150515-9900	· SEAT	1	SN:131803--
4	DK150562-4300	· SPRING	1	SN:131803--
5	DK150531-0000	· SHIM¤ 0.50MM	AR	SN:131803--
	DK150531-0100	· SHIM¤ 0.525MM	AR	SN:131803--
	DK150531-0200	· SHIM¤ 0.55MM	AR	SN:131803--
	DK150531-0300	· SHIM¤ 0.575MM	AR	SN:131803--
	DK150531-0400	· SHIM¤ 0.60MM	AR	SN:131803--
	DK150531-0500	· SHIM¤ 0.625MM	AR	SN:131803--
	DK150531-0600	· SHIM¤ 0.65MM	AR	SN:131803--
	DK150531-0700	· SHIM¤ 0.675MM	AR	SN:131803--
	DK150531-0800	· SHIM¤ 0.70MM	AR	SN:131803--
	DK150531-0900	· SHIM¤ 0.725MM	AR	SN:131803--
	DK150531-1000	· SHIM¤ 0.75MM	AR	SN:131803--
	DK150531-1100	· SHIM¤ 0.775MM	AR	SN:131803--
	DK150531-1200	· SHIM¤ 0.80MM	AR	SN:131803--
	DK150531-1300	· SHIM¤ 0.825MM	AR	SN:131803--
	DK150531-1400	· SHIM¤ 0.85MM	AR	SN:131803--
	DK150531-1500	· SHIM¤ 0.875MM	AR	SN:131803--
	DK150531-1600	· SHIM¤ 0.90MM	AR	SN:131803--
	DK150531-1700	· SHIM¤ 0.925MM	AR	SN:131803--
	DK150531-1800	· SHIM¤ 0.95MM	AR	SN:131803--

https://truckmanualshub.com/

NOZZLE HOLDER (INNER PARTS)

Item	Part No.	Description	Qty	Options
	DK150531-1900	· SHIM¤ 0.975MM	AR	SN:131803--
	DK150531-2000	· SHIM¤ 1.0MM	AR	SN:131803--
	DK150531-2100	· SHIM¤ 1.025MM	AR	SN:131803--
	DK150531-2200	· SHIM¤ 1.05MM	AR	SN:131803--
	DK150531-2300	· SHIM¤ 1.075MM	AR	SN:131803--
	DK150531-2400	· SHIM¤ 1.10MM	AR	SN:131803--
	DK150531-2500	· SHIM¤ 1.125MM	AR	SN:131803--
	DK150531-2600	· SHIM¤ 1.15MM	AR	SN:131803--
	DK150531-2700	· SHIM¤ 1.175MM	AR	SN:131803--
	DK150531-2800	· SHIM¤ 1.200MM	AR	SN:131803--
	DK150531-2900	· SHIM¤ 1.225MM	AR	SN:131803--
	DK150531-3000	· SHIM¤ 1.25MM	AR	SN:131803--
	DK150531-3100	· SHIM¤ 1.275MM	AR	SN:131803--
	DK150531-3200	· SHIM¤ 1.30MM	AR	SN:131803--
	DK150531-3300	· SHIM¤ 1.325MM	AR	SN:131803--
	DK150531-3400	· SHIM¤ 1.35MM	AR	SN:131803--
	DK150531-3500	· SHIM¤ 1.375MM	AR	SN:131803--
	DK150531-3600	· SHIM¤ 1.40MM	AR	SN:131803--
	DK150531-3700	· SHIM¤ 1.425MM	AR	SN:131803--
	DK150531-3800	· SHIM¤ 1.45MM	AR	SN:131803--
	DK150531-3900	· SHIM¤ 1.475MM	AR	SN:131803--
	DK150531-4000	· SHIM¤ 1.50MM	AR	SN:131803--
6	DK150524-4600	· SPACER	1	SN:131803--
7	DK150655-0000	· NUT,RETAINING	1	SN:131803--


https://truckmanualshub.com/

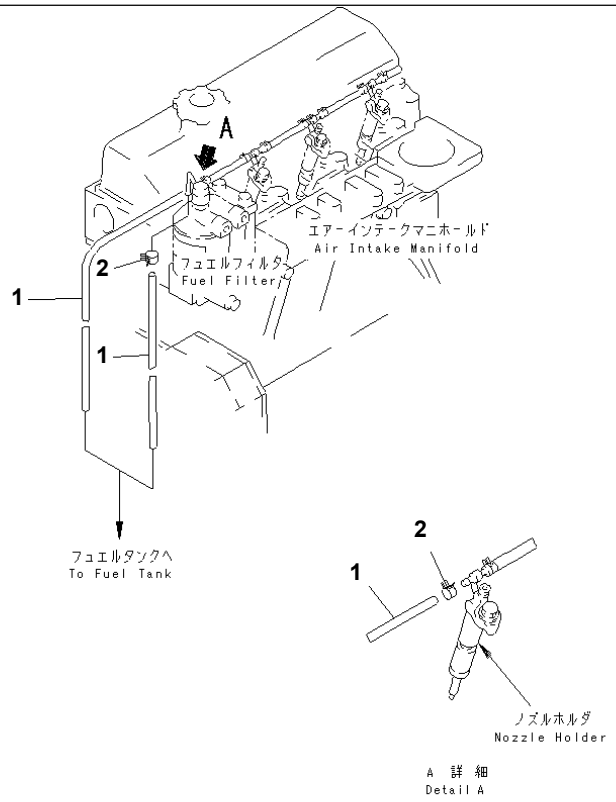

4D95L-1FF S/N 131803-UP
FUEL RETURN

Item	Part No.	Description	Qty	Options
1	6206-71-9160	HOSE,SPILL	2	SN:137006--
	◆6206-71-9180	HOSE,SPILL	2	SN:131803--137005
2	07285-00100	CLIP	2	SN:131803--

https://truckmanualshub.com/

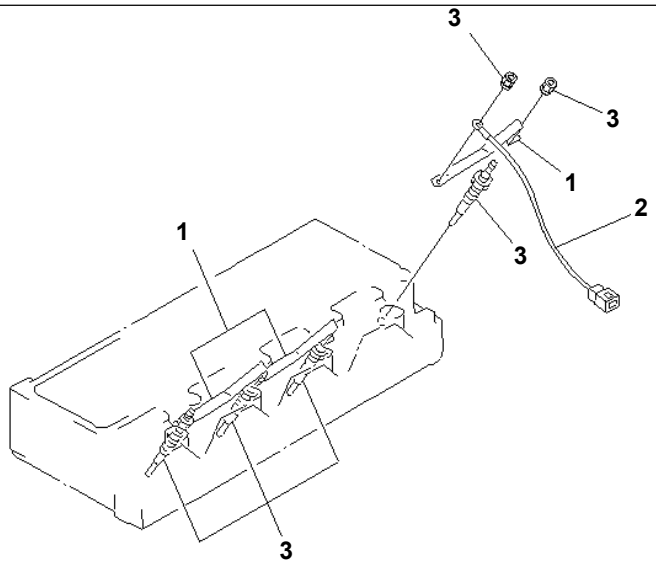

PE38298


4D95L-1FF S/N 131803-UP

GLOW PLUG

Item	Part No.	Description	Qty	Options
1	6204-83-4210	LEAD	3	SN:131803--
2	6204-83-4711	WIRE	1	SN:131803--
3	600-815-1340	GLOW PLUG,GLOW	4	SN:131803--

Ref. A4270-A0A1 Page 030510

https://truckmanualshub.com/

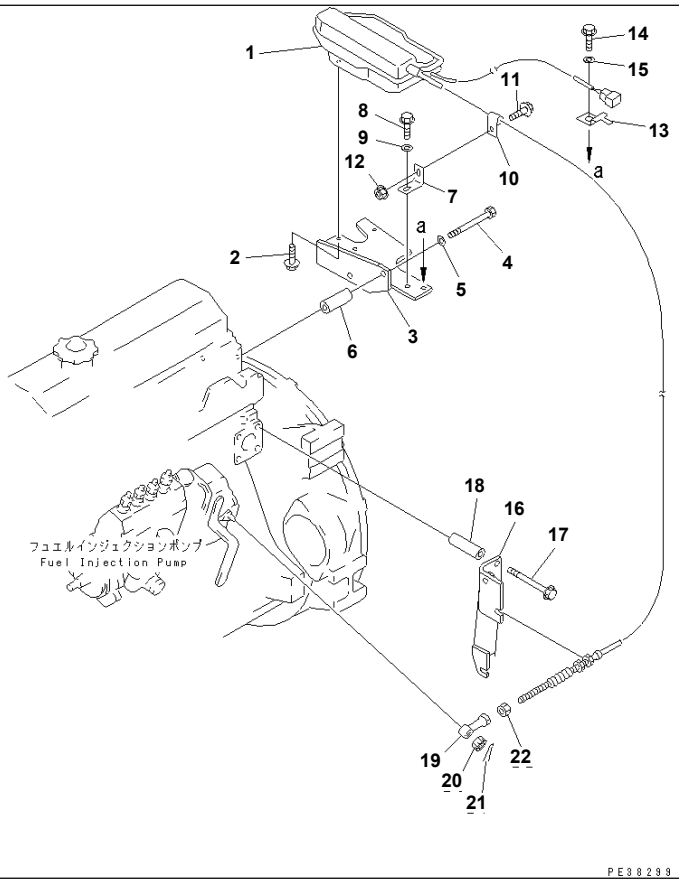


4D95L-1FF S/N 131803-UP

STOP MOTOR(#131803-168762)

Item	Part No.	Description	Qty	Options
1	600-815-7670	MOTOR,STOP	1	SN:131803--168762
2	01435-20616	BOLT	3	SN:131803--168762
3	6204-81-9540	BRACKET	1	SN:131803--168762
4	01010-51090	BOLT	2	SN:131803--168762
5	01643-31032	WASHER	2	SN:131803--168762
6	6150-81-6940	SPACER	2	SN:131803--168762
7	6202-72-1851	BRACKET	1	SN:131803--168762
8	01435-21014	BOLT	1	SN:131803--168762
9	01640-01016	WASHER	1	SN:131803--168762
10	600-050-2150	CLIP	1	SN:131803--168762
11	01435-20816	BOLT	1	SN:131803--168762
12	01584-00806	NUT	1	SN:131803--168762
13	08053-01512	CLIP	1	SN:131803--168762
14	01435-21014	BOLT	1	SN:131803--168762
15	01643-31032	WASHER	1	SN:131803--168762
16	6204-71-1820	BRACKET	1	SN:131803--168762
17	01435-21080	BOLT	2	SN:131803--168762
18	6136-11-5120	SPACER	2	SN:131803--168762
19	04250-50639	END,ROD	1	SN:131803--168762
20	01590-30607	NUT	1	SN:131803--168762
21	04050-11212	PIN,COTTER	1	SN:131803--168762
22	01580-00605	NUT	1	SN:131803--168762

https://truckmanualshub.com/

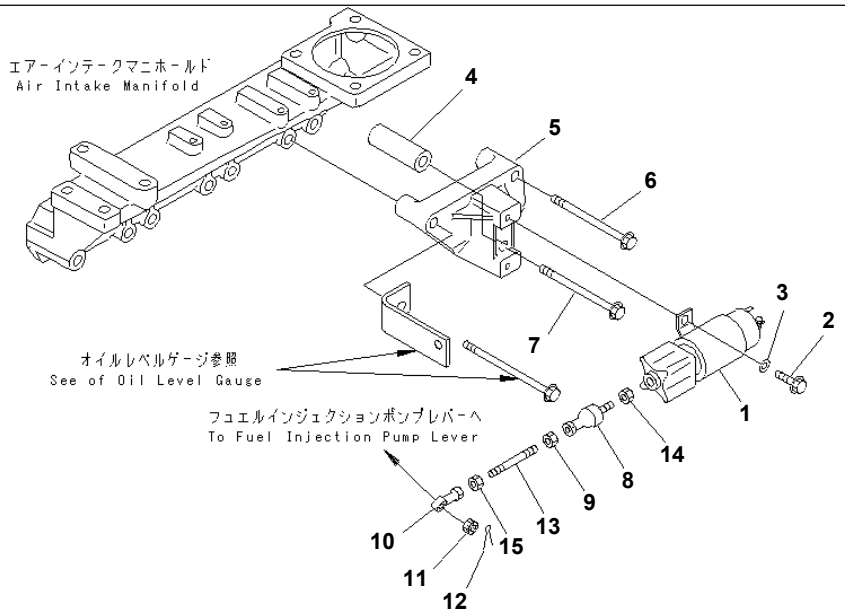

PE33279


4D95L-1FF S/N 131803-UP

SOLENOID(#168763-)

Item	Part No.	Description	Qty	Options
1	600-815-7550	SOLENOID ASS'Y	1	SN:168763--
2	01435-20614	BOLT	2	SN:168763--
3	01640-20610	WASHER	2	SN:168763--
4	6204-81-9560	SPACER	1	SN:168763--
5	6204-81-9550	BRACKET	1	SN:168763--
6	01436-01015	BOLT	1	SN:168763--
7	01435-01090	BOLT	1	SN:168763--
8	6204-81-9640	JOINT	1	SN:168763--
9	01580-00605	NUT	1	SN:168763--
10	04250-60639	END,ROD	1	SN:168763--
11	01590-10607	NUT	1	SN:168763--
12	04050-11212	PIN	1	SN:168763--
13	04248-50606	ROD	1	SN:168763--
14	01580-00605	NUT	1	SN:168763--
15	01508-40603	NUT,L.H. THREAD	1	SN:168763--

Ref. A4510-A0E7 Page 030530

https://truckmanualshub.com/

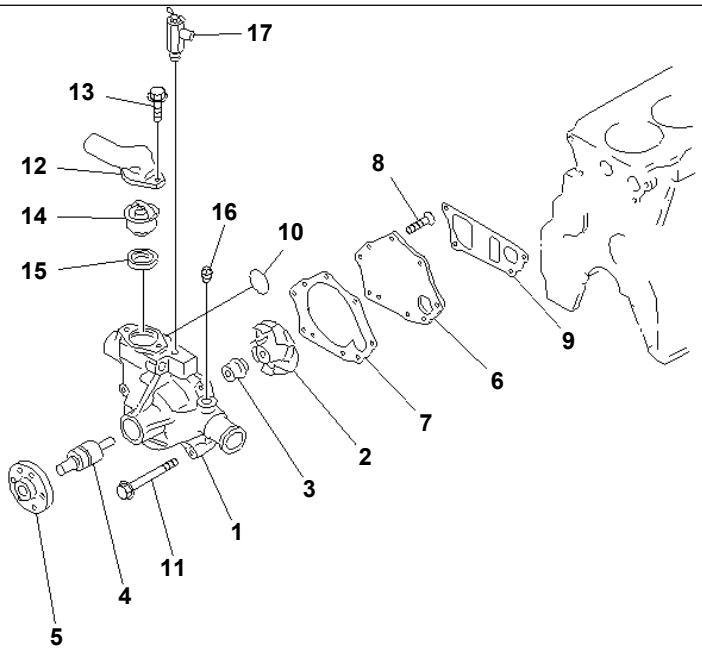


PE38300

4D95L-1FF S/N 131803-UP
WATER PUMP

Item	Part No.	Description	Qty	Options
	6206-61-1104	WATER PUMP ASS'Y	1	SN:156207--
	□6206-61-1103	WATER PUMP ASS'Y	1	SN:131803--156206
1	☆	· BODY	1	SN:156207--
	☆	· BODY	1	SN:131803--156206
2	6206-61-1553	· IMPELLER	1	SN:131803--
3	6221-61-1520	· SEAL¤ WATER	1	SN:150681--
	6221-61-1520	· SEAL¤ WATER (K2)	1	SN:131803--150680
4	6206-61-1342	· SHAFT	1	SN:156207--
	6206-61-1341	· SHAFT	1	SN:131803--156206
5	6206-61-1411	· BOSS	1	SN:131803--
6	6206-61-1120	· COVER	1	SN:131803--
7	6206-61-1131	· GASKET (K2)	1	SN:156207--
	□6206-61-1130	· GASKET (K2)	1	SN:131803--156206
8	01236-40816	· SCREW	5	SN:131803--
9	6206-61-1730	GASKET (K2)	1	SN:156207--
	□6206-61-1710	GASKET (K2)	1	SN:131803--156206
10	07000-03040	O-RING (K1¤K2)	1	SN:131803--
11	01435-20855	BOLT	3	SN:131803--
12	6204-11-6430	CONNECTOR,WATER OUTLET	1	SN:131803--
13	01435-20820	BOLT	2	SN:131803--
14	600-421-6120	THERMOSTAT	1	SN:131803--
15	6140-11-6331	GASKET (K1)	1	SN:131803--
16	07042-00312	PLUG	1	SN:131803--
17	203-977-4130	VALVE	1	SN:131803--

https://truckmanualshub.com/

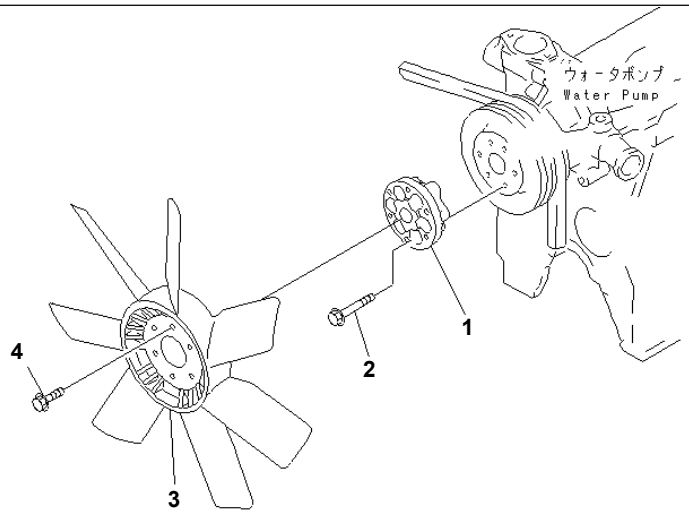


PE38302

4D95L-1FF S/N 131803-UP

COOLING FAN

Item	Part No.	Description	Qty	Options
1	6206-61-3940	SPACER	1	SN:131803--
2	01435-20850	BOLT	6	SN:131803--
3	600-625-0520	FAN,COOLING	1	SN:131803--
4	01435-21020	BOLT	6	SN:131803--

https://truckmanualshub.com/

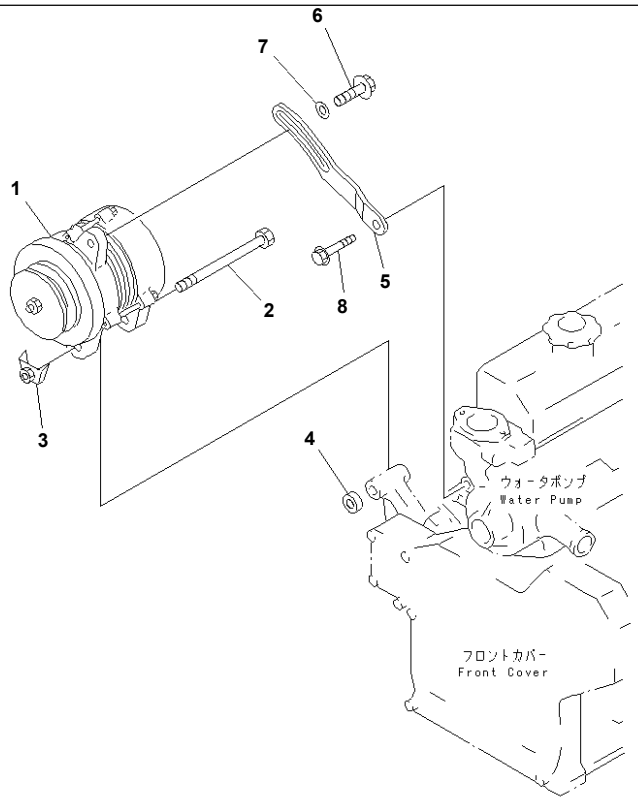


Ref. A6010-A0A4 Page 030580

4D95L-1FF S/N 131803-UP

ALTERNATOR MOUNTING (15A) (WITH NON HARDENING PULLEY)

Item	Part No.	Description	Qty	Options
1	(600-821-3850)	ALTERNATOR A. (15A),(SEE FIG.A6010-B0A4)	1	SN:131803--
2	6204-81-6810	BOLT	1	SN:131803--
3	6204-81-6960	NUT	1	SN:131803--
4	6142-82-6550	SPACER	1	SN:131803--
5	6204-81-6630	PLATE,ADJUST	1	SN:131803--
6	01435-20825	BOLT	1	SN:131803--
7	01643-30823	WASHER	1	SN:131803--
8	01435-20855	BOLT	1	SN:131803--

https://truckmanualshub.com/

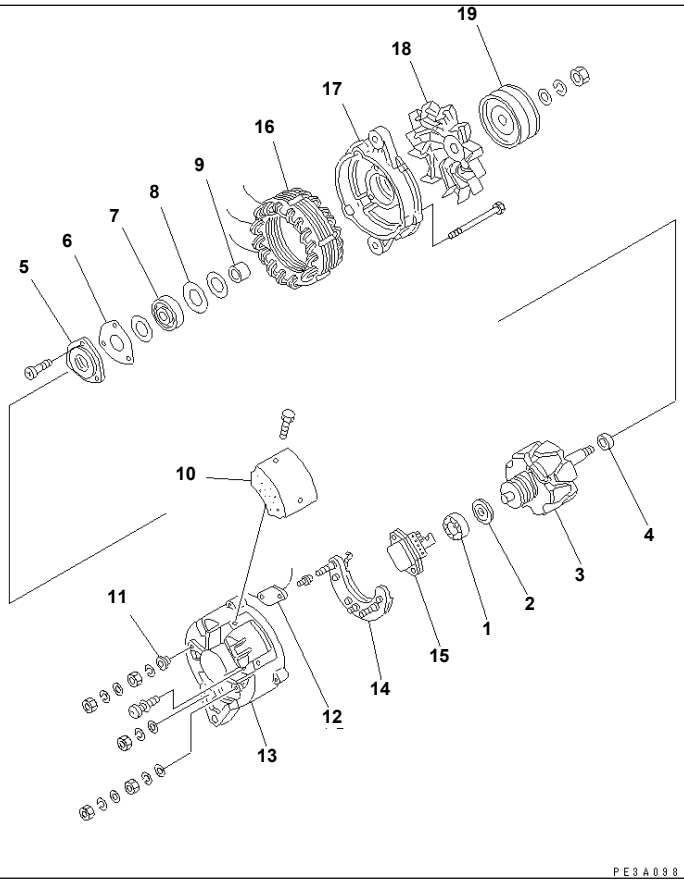


4D95L-1FF S/N 131803-UP

ALTERNATOR (15A) (WITH NON HARDENIG PULLEY) (INNER PARTS)

Item	Part No.	Description	Qty	Options
	600-821-3850	ALTERNATOR A. (15A)	1	SN:131803--
THE NIKKO DENKI PART NUMBER IS THAT KD IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
1	KD1-0452-62017	· BEARING,BALL¤ REAR	1	SN:131803--
2	KD1-33926-0252	· RETAINER	1	SN:131803--
3	KD0-33100-1380	· ROTOR ASS'Y	1	SN:131803--
4	KD1-33923-0940	· COLLAR	1	SN:131803--
5	KD1-33926-0930	· RETAINER	1	SN:131803--
6	KD1-33926-0920	· RETAINER	1	SN:131803--
7	KD1-0452-63027	· BEARING,BALL¤ FRONT	1	SN:131803--
8	KD1-33926-0910	· RETAINER	1	SN:131803--
9	KD1-33923-0930	· COLLAR	1	SN:131803--
10	KD1-33761-1170	· COVER	1	SN:131803--
	KD0-33700-2590	· REAR BRACKET ASS'Y	1	SN:131803--
11	KD1-38943-0050	· · BUSHING,INSULATE	1	SN:131803--
12	KD1-33780-0600	· · TERMINAL ASS'Y	1	SN:131803--
13	KD0-33710-3100	· · BRACKET,REAR	1	SN:131803--
14	KD0-33730-2300	· · RECTIFIER ASS'Y	1	SN:131803--
15	KD0-33719-0080	· REGULATOR ASS'Y	1	SN:131803--
16	KD0-33200-1311	· STATOR ASS'Y	1	SN:131803--
17	KD0-33311-0420	· BRACKET,FRONT	1	SN:131803--
18	KD1-33421-0600	· FAN	1	SN:131803--
19	KD0-33411-2720	· PULLEY,NON HARDENING	1	SN:131803--
20	KD1-33951-0680	PACKING,(NOT SHOWN)	2	SN:131803--

https://truckmanualshub.com/

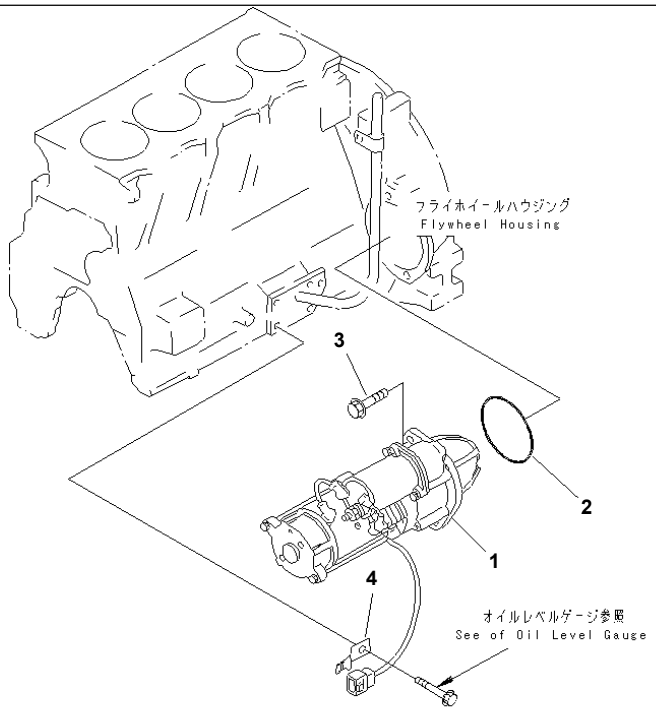

PE38304


4D95L-1FF S/N 131803-UP

STARTING MOTOR MOUNTING (2.8KW)

Item	Part No.	Description	Qty	Options
1	(600-813-4411)	STARTING MOTOR ASS'Y,(2.8KW) (SEE FIG.A6210-B0A1)	1	SN:157067--
	(□600-813-4410)	STARTING MOTOR ASS'Y,(2.8KW) (SEE FIG.A6210-B0A1)	1	SN:131803--157066
2	07000-02095	O-RING (K2)	1	SN:131803--
3	01435-21230	BOLT	2	SN:131803--
4	08053-01512	CLIP	1	SN:131803--

Ref. A6210-A0A1 Page 030600

https://truckmanualshub.com/

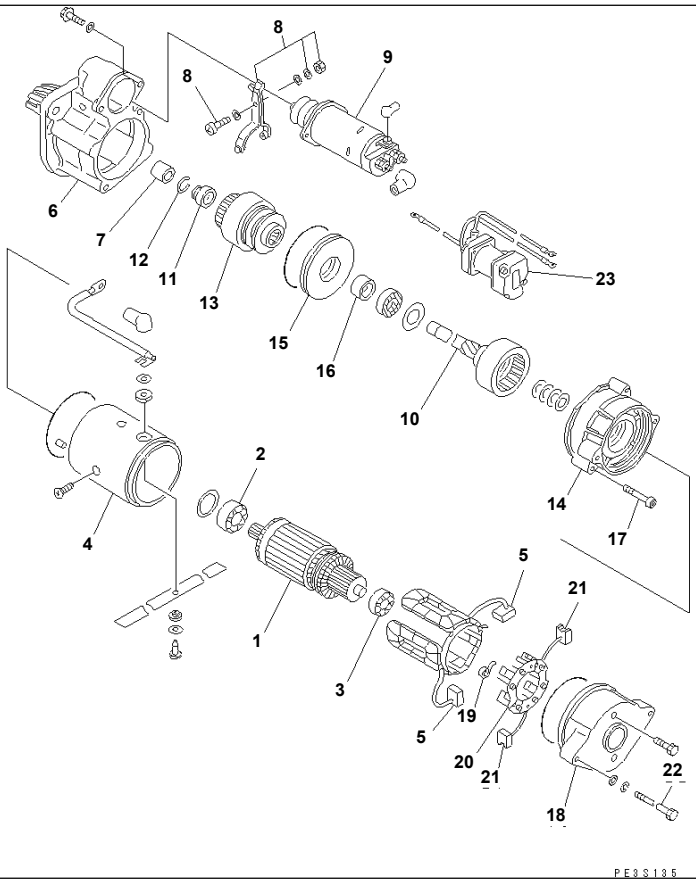

4D95L-1FF S/N 131803-UP

STARTING MOTOR (2.8KW) (INNER PARTS)


Item	Part No.	Description	Qty	Options
	600-813-4411	STARTING MOTOR ASS'Y,(2.8KW)	1	SN:157067--
	□600-813-4410	STARTING MOTOR ASS'Y,(2.8KW)	1	SN:131803--157066
THE NIKKO DENKI PART NUMBER IS THAT KD IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
1	KD1-23100-0170	· ARMATURE ASS'Y	1	SN:131803--
2	KD1-0454-60037	· · BEARING,BALL¤ FRONT	1	SN:131803--
3	KD1-0454-06087	· · BEARING,BALL¤ REAR	1	SN:131803--
4	KD0-23200-0240	· YOKE ASS'Y	1	SN:131803--
5	KD1-23740-0150	· · BRUSH ASS'Y	2	SN:131803--
6	KD1-23310-0550	· FRONT BRACKET ASS'Y	1	SN:131803--
7	KD7-23351-0160	· · METAL	1	SN:131803--
8	KD1-23320-0180	· SHIFT LEVER ASS'Y	1	SN:157067--
	KD7-23320-0030	· SHIFT LEVER ASS'Y	1	SN:131803--157066
9	KD0-47100-4063	· MAGNETIC SWITCH A.	1	SN:157067--
	KD0-47100-4060	· MAGNETIC SWITCH A.	1	SN:131803--157066
10	KD1-23111-0370	· SHAFT ASS'Y	1	SN:131803--
11	KD1-23181-0050	· STOPPER,PINION	1	SN:131803--
12	KD1-09066-0050	· RING,CLIP	1	SN:131803--
13	KD0-23500-0353	· CLUTCH ASS'Y,OVER RUNNING	1	SN:157067--
	KD0-23500-0350	· CLUTCH ASS'Y,OVER RUNNING	1	SN:131803--157066
14	KD1-23611-0460	· BRACKET,CENTER	1	SN:131803--
15	KD0-23600-0170	· CENTER BRACKET A.	1	SN:131803--
16	KD7-23351-0150	· · METAL	1	SN:131803--
17	KD1-0240-06355	· BOLT	2	SN:131803--

https://truckmanualshub.com/

STARTING MOTOR (2.8KW) (INNER PARTS)

Item	Part No.	Description	Qty	Options
	KD7-23700-0220	· REAR BRACKET ASS'Y	1	SN:131803--
18	KD1-23711-0180	· · BRACKET,REAR	1	SN:131803--
19	KD0-23913-0080	· · SPRING,BRUSH	4	SN:131803--
20	KD0-23750-0160	· · BRUSH HOLDER A.	1	SN:131803--
21	KD1-23740-0140	· · BRUSH ASS'Y	2	SN:131803--
22	KD1-23901-0080	· BOLT	2	SN:131803--
23	KD0-25000-7770	· SWITCH ASS'Y	1	SN:157067--
	KD0-25000-6083	· SWITCH ASS'Y	1	SN:131803--157066
24	KD7-09210-1090	SEAL ASS'Y,(NOT SHOWN)	1	SN:131803--

https://truckmanualshub.com/

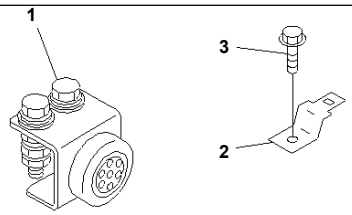


PE38305

4D95L-1FF S/N 131803-UP

HEATER SIGNAL

Item	Part No.	Description	Qty	Options
1	600-815-1361	SIGNAL,HEATER	1	SN:131803--
2	201-06-62160	BRACKET	1	SN:131803--
3	01435-20610	BOLT	1	SN:131803--

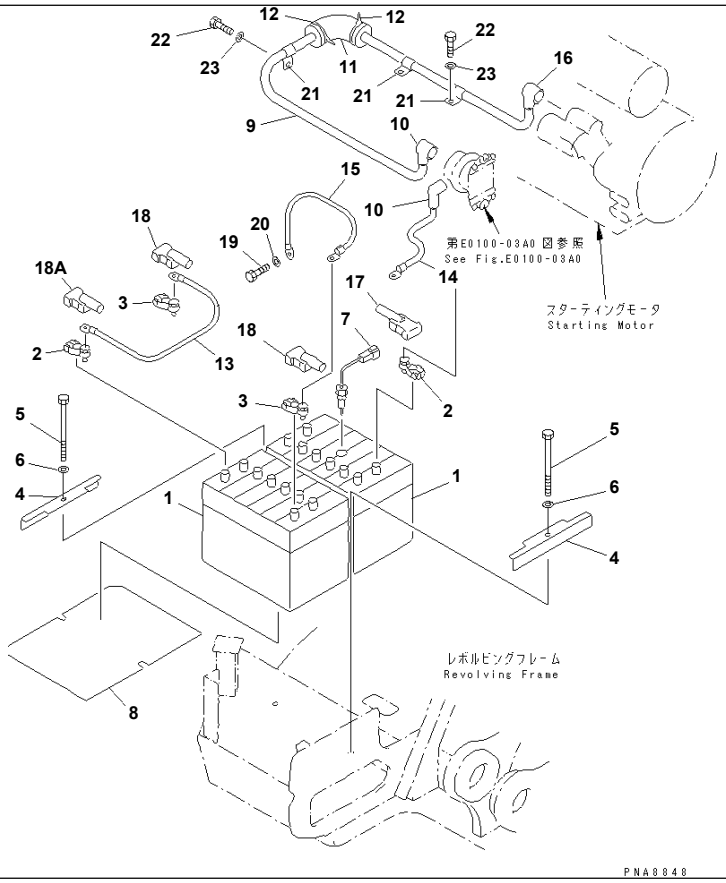

PC75UU-2 S/N 5001-UP

BATTERY AND MOUNTING


Item	Part No.	Description	Qty	Options
1	08000-02206	BATTERY (55D26R)	2	SN:5001--
2	08000-00000	TERMINAL¤ (+)	2	SN:5001--
3	08000-00001	TERMINAL¤ (-)	2	SN:5001--
4	21W-06-11640	CLAMP	2	SN:5001--
5	21W-06-21290	BOLT	2	SN:5323--
	700-85-11110	BOLT	2	SN:5001--5322
6	01643-31032	WASHER	2	SN:5001--
7	7861-92-4410	SENSOR,BATTERY¤ LEVEL	1	SN:5001--
8	21W-06-21240	PLATE	1	SN:5001--
9	21W-06-21220	CABLE	1	SN:5001--
10	08038-04030	CAP	2	SN:5001--
11	203-62-41150	COVER	2	SN:5001--
12	08034-00823	BAND	4	SN:5001--
13	20X-06-21160	WIRE	1	SN:5001--
14	08028-48025	CABLE	1	SN:7346--
	20X-06-21170	WIRE	1	SN:5001--7345
15	08028-18050	WIRE	1	SN:5001--
16	08038-04030	CAP	1	SN:5001--
17	08038-42511	CAP	1	SN:10371--
	08038-22511	CAP	1	SN:5001--10370
18	08038-22009	CAP	2	SN:10371--
	08038-22009	CAP	3	SN:5001--10370
18A	08038-42009	CAP	1	SN:10371--
19	01010-51020	BOLT	1	SN:5001--

https://truckmanualshub.com/

BATTERY AND MOUNTING

Item	Part No.	Description	Qty	Options
20	01643-31032	WASHER	1	SN:5001--
21	08036-01814	CLIP	3	SN:5001--
22	01010-51020	BOLT	3	SN:5001--
23	01643-31032	WASHER	3	SN:5001--

https://truckmanualshub.com/

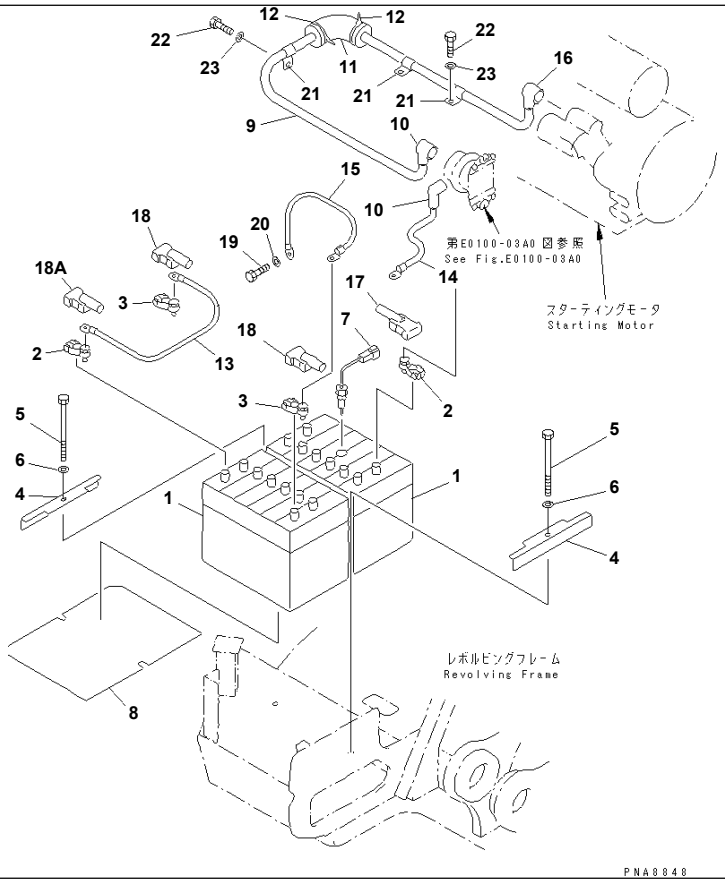

PC75UU-2 S/N 5001-UP

BATTERY AND MOUNTING (COLD WEATHER SPEC.)


Item	Part No.	Description	Qty	Options
1	101-06-21410	BATTERY¤ WET(80D26R),(FOR COLD WEATHER)	2	SN:5001--
2	08000-00000	TERMINAL¤ (+)	2	SN:5001--
3	08000-00001	TERMINAL¤ (-)	2	SN:5001--
4	21W-06-11640	CLAMP	2	SN:5001--
5	21W-06-21290	BOLT	2	SN:5323--
	700-85-11110	BOLT	2	SN:5001--5322
6	01643-31032	WASHER	2	SN:5001--
7	7861-92-4410	SENSOR,BATTERY¤ LEVEL	1	SN:5001--
8	21W-06-21240	PLATE	1	SN:5001--
9	21W-06-21220	CABLE	1	SN:5001--
10	08038-04030	CAP	2	SN:5001--
11	203-62-41150	COVER	2	SN:5001--
12	08034-00823	BAND	4	SN:5001--
13	20X-06-21160	WIRE	1	SN:5001--
14	08028-48025	CABLE	1	SN:7346--
	20X-06-21170	WIRE	1	SN:5001--7345
15	08028-18050	WIRE	1	SN:5001--
16	08038-04030	CAP	1	SN:5001--
17	08038-42511	CAP	1	SN:10371--
	08038-22511	CAP	1	SN:5001--10370
18	08038-22009	CAP	2	SN:10371--
	08038-22009	CAP	3	SN:5001--10370
18A	08038-42009	CAP	1	SN:10371--
19	01010-51020	BOLT	1	SN:5001--

https://truckmanualshub.com/

BATTERY AND MOUNTING (COLD WEATHER SPEC.)

Item	Part No.	Description	Qty	Options
20	01643-31032	WASHER	1	SN:5001--
21	08036-01814	CLIP	3	SN:5001--
22	01010-51020	BOLT	3	SN:5001--
23	01643-31032	WASHER	3	SN:5001--

https://truckmanualshub.com/

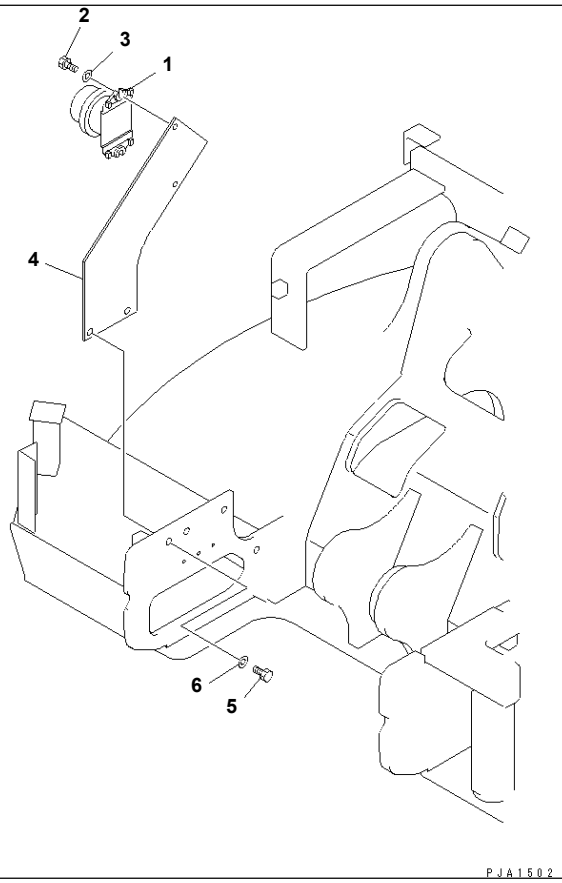


PC75UU-2 S/N 5001-UP

BATTERY AND MOUNTING (RELAY)

Item	Part No.	Description	Qty	Options
1	22W-06-13220	SWITCH,BATTERY RELAY	1	SN:5001--
2	01010-50830	BOLT	2	SN:5001--
3	01602-20825	WASHER,SPRING	2	SN:5001--
4	21W-06-21231	BRACKET	1	SN:5001--
5	01010-51030	BOLT	2	SN:5001--
6	01643-31032	WASHER	2	SN:5001--

https://truckmanualshub.com/

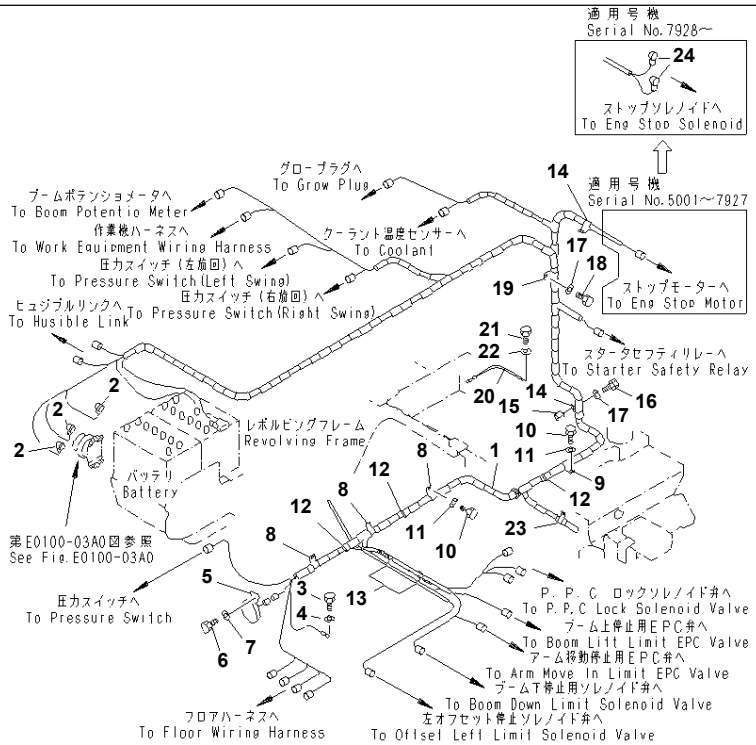

PJA5781


PC75UU-2 S/N 5001-UP
ELECTRICAL (MAIN HARNESS) (CANOPY AND CAB)

Item	Part No.	Description	Qty	Options
1	21W-06-21215	WIRING HARNESS	1	SN:10371--
	21W-06-21214	WIRING HARNESS	1	SN:10004--10370
	21W-06-21213	WIRING HARNESS	1	SN:7928--10003
	21W-06-21212	WIRING HARNESS	1	SN:5001--7927
	203-06-57241	· FUSIBLE LINK	2	SN:5001--
	20U-06-21270	· GROMMET	1	SN:5001--
2	08038-10519	CAP	3	SN:5001--
3	01010-51025	BOLT	1	SN:5001--
4	01643-31032	WASHER	1	SN:5001--
5	08160-62400	HORN	1	SN:5001--
6	01010-50816	BOLT	2	SN:5001--
7	01643-30823	WASHER	2	SN:5001--
8	08036-02514	CLIP	3	SN:5001--
9	08036-01814	CLIP	1	SN:5001--
10	01010-51020	BOLT	4	SN:5001--
11	01643-31032	WASHER	4	SN:5001--
12	08034-00519	BAND	3	SN:5001--
13	08034-30521	BAND	2	SN:5001--
14	08036-01814	CLIP	2	SN:5001--
15	195-33-11220	SPACER	1	SN:5001--
16	01010-51040	BOLT	1	SN:5001--
17	01643-31032	WASHER	2	SN:5001--
18	01010-51020	BOLT	1	SN:5001--
19	08036-01014	CLIP	1	SN:5001--

https://truckmanualshub.com/

ELECTRICAL (MAIN HARNESS) (CANOPY AND CAB)

Item	Part No.	Description	Qty	Options
20	08028-18040	WIRE	1	SN:5001--
21	01010-51020	BOLT	1	SN:5001--
22	01643-31032	WASHER	1	SN:5001--
23	08036-10810	CLIP	1	SN:5001--
24	08038-00519	CAP	2	SN:7928--

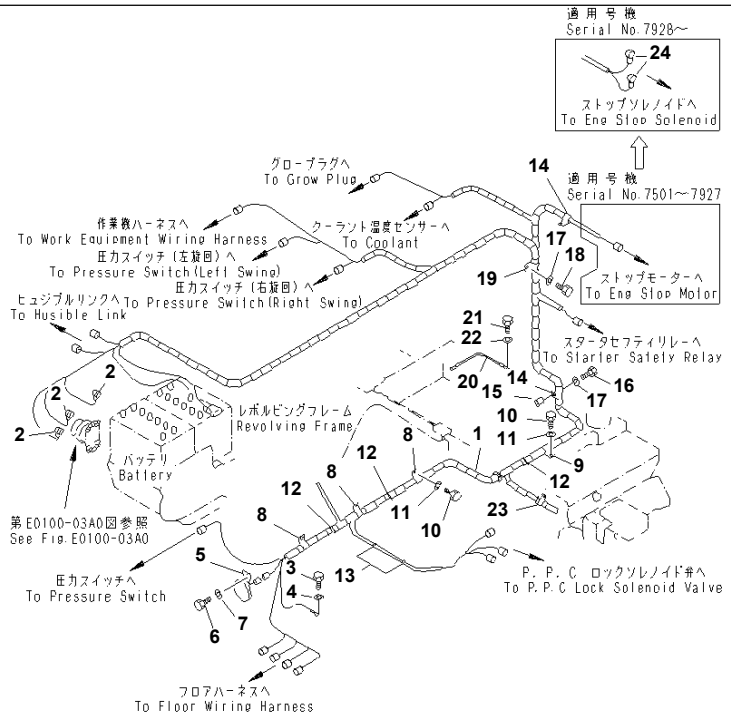

PJA5782

PC75UU-2 S/N 5001-UP
ELECTRICAL (MAIN HARNESS) (CANOPY AND CAB) (FOR MONO BOOM)(#7075-)


Item	Part No.	Description	Qty	Options
1	21W-06-23122	WIRING HARNESS	1	SN:10371--
	21W-06-23121	WIRING HARNESS	1	SN:7928--10370
	21W-06-23120	WIRING HARNESS	1	SN:7075--7927
	203-06-57241	· FUSIBLE LINK	2	SN:7075--
	20U-06-21270	· GROMMET	1	SN:7075--
2	08038-10519	CAP	3	SN:7075--
3	01010-51025	BOLT	1	SN:7075--
4	01643-31032	WASHER	1	SN:7075--
5	08160-62400	HORN	1	SN:7075--
6	01010-50816	BOLT	2	SN:7075--
7	01643-30823	WASHER	2	SN:7075--
8	08036-02514	CLIP	3	SN:7075--
9	08036-01814	CLIP	1	SN:7075--
10	01010-51020	BOLT	4	SN:7075--
11	01643-31032	WASHER	4	SN:7075--
12	08034-00519	BAND	3	SN:7075--
13	08034-30521	BAND	2	SN:7075--
14	08036-01814	CLIP	2	SN:7075--
15	195-33-11220	SPACER	1	SN:7075--
16	01010-51040	BOLT	1	SN:7075--
17	01643-31032	WASHER	2	SN:7075--
18	01010-51020	BOLT	1	SN:7075--
19	08036-01014	CLIP	1	SN:7075--

https://truckmanualshub.com/

ELECTRICAL (MAIN HARNESS) (CANOPY AND CAB) (FOR MONO BOOM)(#7075-)

Item	Part No.	Description	Qty	Options
20	08028-18040	WIRE	1	SN:7075--
21	01010-51020	BOLT	1	SN:7075--
22	01643-31032	WASHER	1	SN:7075--
23	08036-10810	CLIP	1	SN:7075--
24	08038-00519	CAP	2	SN:7928--

https://truckmanualshub.com/

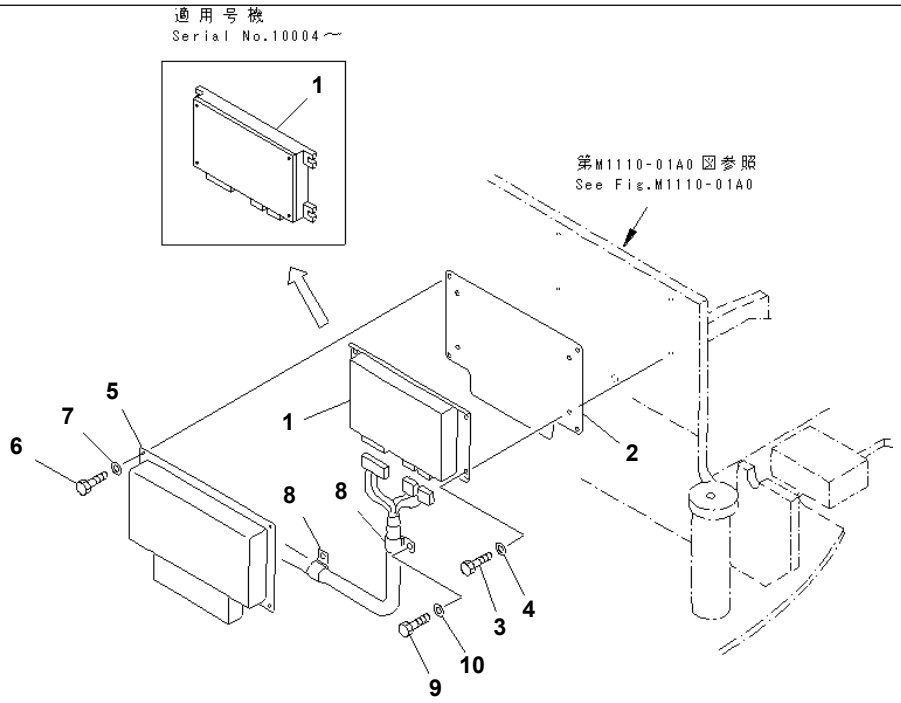


PNA8849

PC75UU-2 S/N 5001-UP

ELECTRICAL (SAFETY EQUIPMENT) (CANOPY)

Item	Part No.	Description	Qty	Options
1	7824-68-5000	CONTROLLER	1	SN:10371--
	7824-66-2003	CONTROLLER	1	SN:10004--10370
	7824-66-2002	CONTROLLER	1	SN:7928--10003
	□7824-66-2001	CONTROLLER	1	SN:5495--7927
	7824-66-2000	CONTROLLER	1	SN:5001--5494
2	20U-06-21321	PLATE	1	SN:5001--
3	01010-50835	BOLT	4	SN:10004--
	01010-50825	BOLT	4	SN:5001--10003
4	01643-30823	WASHER	4	SN:5001--
5	20U-06-21141	COVER	1	SN:5001--
6	01010-50612	BOLT	4	SN:5001--
7	01643-30623	WASHER	4	SN:5001--
8	08036-02514	CLIP	2	SN:5001--
9	01010-51016	BOLT	2	SN:5001--
10	01643-31032	WASHER	2	SN:5001--

https://truckmanualshub.com/

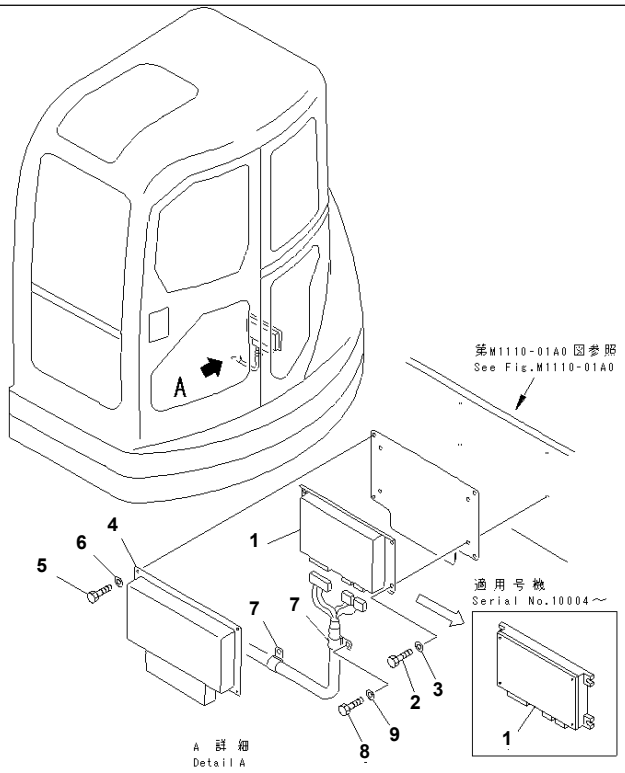


PNA8850

PC75UU-2 S/N 5001-UP
ELECTRICAL (SAFETY EQUIPMENT) (CAB)

Item	Part No.	Description	Qty	Options
1	7824-68-5000	CONTROLLER	1	SN:10371--
	7824-66-2003	CONTROLLER	1	SN:10004--10370
	7824-66-2002	CONTROLLER	1	SN:7928--10003
	□7824-66-2001	CONTROLLER	1	SN:5495--7927
	7824-66-2000	CONTROLLER	1	SN:5001--5494
2	01010-50825	BOLT	4	SN:10004--
	01010-50816	BOLT	4	SN:5001--10003
3	01643-30823	WASHER	4	SN:5001--
4	20U-06-21360	COVER	1	SN:5001--
5	01010-50612	BOLT	4	SN:5001--
6	01643-30623	WASHER	4	SN:5001--
7	08036-02514	CLIP	2	SN:5001--
8	01010-51016	BOLT	2	SN:5001--
9	01643-31032	WASHER	2	SN:5001--

https://truckmanualshub.com/

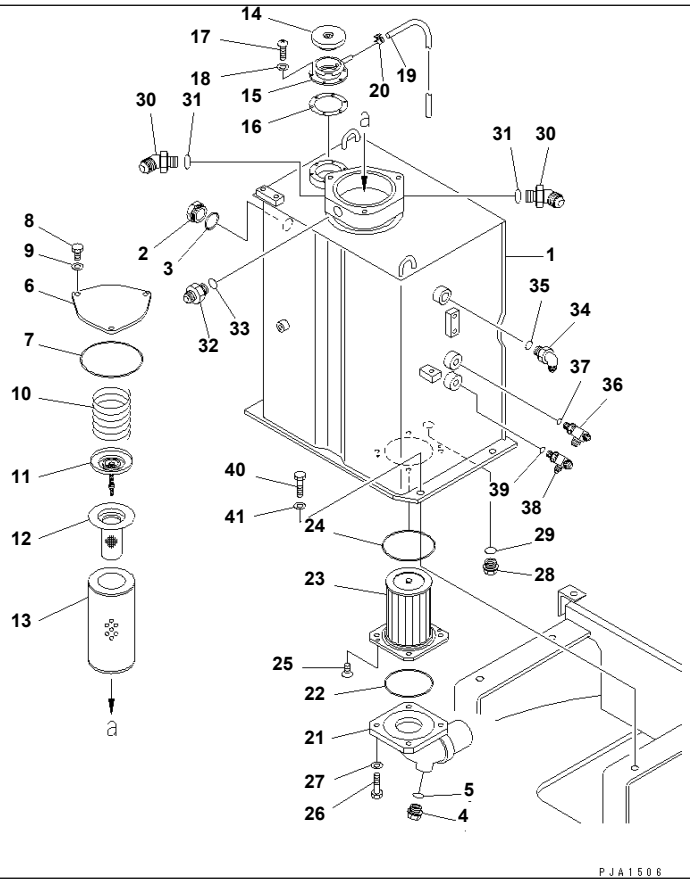

PC75UU-2 S/N 5001-UP
HYDRAULIC TANK


Item	Part No.	Description	Qty	Options
1	21W-60-21110	TANK	1	SN:5001--
2	20N-60-11142	GAUGE,LEVEL	1	SN:6700--
	20N-60-11141	GAUGE,LEVEL	1	SN:5001--6699
3	20N-60-11181	· GASKET	1	SN:6700--
	20N-60-11180	· GASKET	1	SN:5001--6699
4	07044-12412	PLUG	1	SN:5001--
5	07002-02434	O-RING	1	SN:5001--
6	201-60-62150	COVER	1	SN:5001--
7	07000-02135	O-RING	1	SN:5001--
8	01010-51025	BOLT	3	SN:5001--
9	01643-31032	WASHER	3	SN:5001--
10	20X-60-22140	SPRING	1	SN:5001--
11	201-60-62130	VALVE ASS'Y	1	SN:5001--
12	201-60-62140	STRAINER	1	SN:5001--
13	07063-01054	ELEMENT	1	SN:5001--
14	201-60-12190	CAP ASS'Y	1	SN:5001--
15	201-60-12171	FILLER,NECK	1	SN:5001--
16	205-60-66211	GASKET	1	SN:10371--
	205-60-51460	GASKET	1	SN:5001--10370
17	01220-40516	SCREW	6	SN:5001--
18	01601-20513	WASHER,SPRING	6	SN:5001--
19	07270-00895	TUBE	1	SN:5001--
20	07280-01110	CLAMP	1	SN:5001--
21	21W-60-21120	TUBE	1	SN:5001--

https://truckmanualshub.com/

HYDRAULIC TANK

Item	Part No.	Description	Qty	Options
22	07000-02105	O-RING	1	SN:5001--
23	201-60-62171	STRAINER	1	SN:5001--
24	07000-02115	O-RING	1	SN:5001--
25	01224-40616	SCREW	2	SN:5001--
26	01010-51035	BOLT	4	SN:5001--
27	01643-31032	WASHER	4	SN:5001--
28	07044-12412	PLUG	1	SN:5001--
29	07002-02434	O-RING	1	SN:5001--
30	07236-10628	ELBOW	2	SN:5001--
31	07002-02434	O-RING	2	SN:5001--
32	07230-20522	UNION	1	SN:5001--
33	07002-02434	O-RING	1	SN:5001--
34	114-62-23110	NIPPLE	1	SN:5001--
35	07002-02034	O-RING	1	SN:5001--
36	201-62-65280	TEE	1	SN:5001--
37	07002-01423	O-RING	1	SN:5001--
38	203-62-58410	TEE	1	SN:5001--
39	07002-01423	O-RING	1	SN:5001--
40	01010-51235	BOLT	4	SN:5001--
41	01643-31232	WASHER	4	SN:5001--


https://truckmanualshub.com/

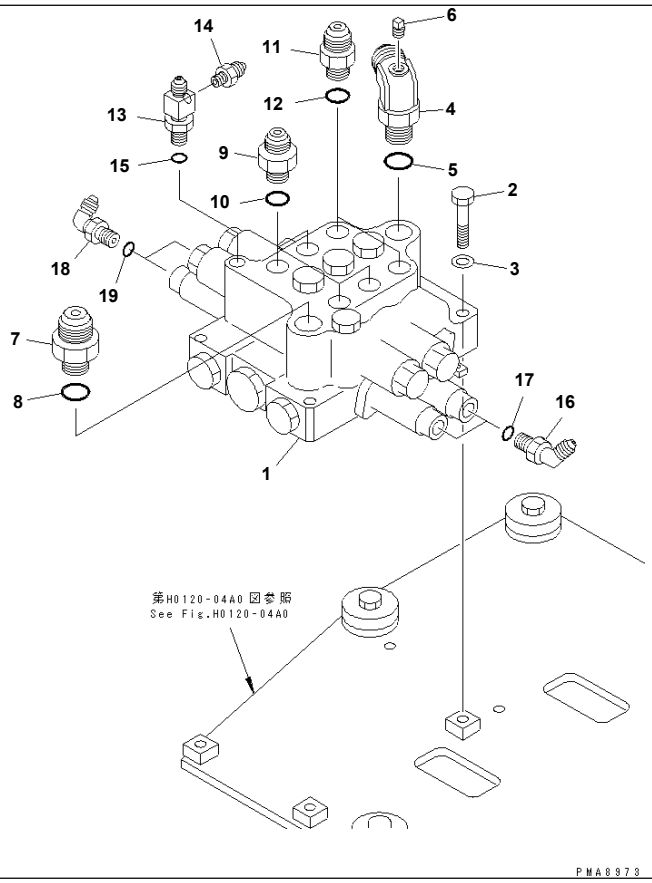

PC75UU-2 S/N 5001-UP

MAIN VALVE (MOUNT AND ELBOW) (FOR FRONT VALVE)


Item	Part No.	Description	Qty	Options
1	(709-23-13602)	VALVE ASS'Y,(SEE FIG.Y0660-01A0)	1	SN:10371--
	(709-23-13601)	VALVE ASS'Y,(SEE FIG.Y0660-01A0)	1	SN:5001--10370
2	01010-51050	BOLT	3	SN:5001--
3	01643-31032	WASHER	3	SN:5001--
4	07235-50628	ELBOW	1	SN:5001--
5	07002-12434	O-RING	1	SN:5001--
6	07042-30108	PLUG	1	SN:5001--
7	07230-20628	UNION	1	SN:5001--
8	07002-02434	O-RING	1	SN:5001--
9	07230-20422	UNION	4	SN:5001--
10	07002-12034	O-RING	4	SN:5001--
11	20T-62-71690	NIPPLE	2	SN:5001--
12	07002-12034	O-RING	2	SN:5001--
13	21W-62-22980	TEE	1	SN:5001--
14	208-06-11220	NIPPLE	1	SN:5001--
15	07002-01423	O-RING	1	SN:5001--
16	07236-10210	ELBOW	2	SN:5001--
17	07002-01423	O-RING	2	SN:5001--
18	07235-10210	ELBOW	2	SN:5001--
19	07002-01423	O-RING	2	SN:5001--

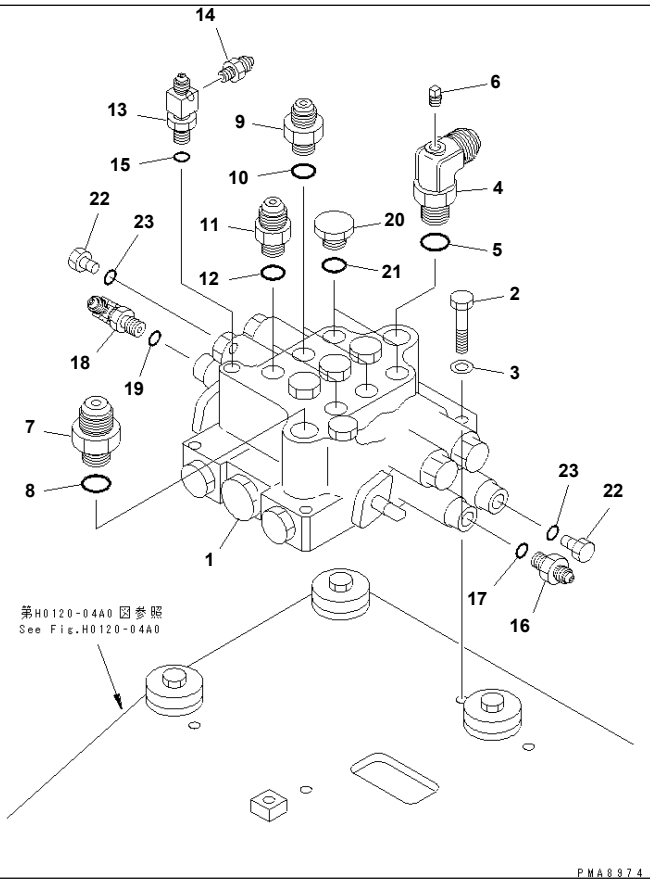

PC75UU-2 S/N 5001-UP

MAIN VALVE (MOUNT AND ELBOW) (FOR REAR VALVE)

Item	Part No.	Description	Qty	Options
1	(709-23-13502)	VALVE ASS'Y,(SEE FIG.Y0660-21A0)	1	SN:10371--
	(709-23-13501)	VALVE ASS'Y,(SEE FIG.Y0660-21A0)	1	SN:5001--10370
2	01010-51050	BOLT	3	SN:5001--
3	01643-31032	WASHER	3	SN:5001--
4	07235-50628	ELBOW	1	SN:5001--
5	07002-12434	O-RING	1	SN:5001--
6	07042-30108	PLUG	1	SN:5001--
7	07230-20628	UNION	1	SN:5001--
8	07002-02434	O-RING	1	SN:5001--
9	07230-20422	UNION	2	SN:5001--
10	07002-12034	O-RING	2	SN:5001--
11	20T-62-71690	NIPPLE	2	SN:5001--
12	07002-02034	O-RING	2	SN:5001--
13	21W-62-22980	TEE	1	SN:5001--
14	208-06-11220	NIPPLE	1	SN:5001--
15	07002-01423	O-RING	1	SN:5001--
16	07230-20210	UNION	1	SN:5001--
17	07002-01423	O-RING	1	SN:5001--
18	07235-10210	ELBOW	1	SN:5001--
19	07002-01423	O-RING	1	SN:5001--
20	07040-12012	PLUG,(UNUSED FOR ATTACHMENT)	2	SN:5001--
21	07002-12034	O-RING,(UNUSED FOR ATTACHMENT)	2	SN:5001--
22	07040-11409	PLUG,(UNUSED FOR ATTACHMENT)	2	SN:5001--
23	07002-01423	O-RING,(UNUSED FOR ATTACHMENT)	2	SN:5001--

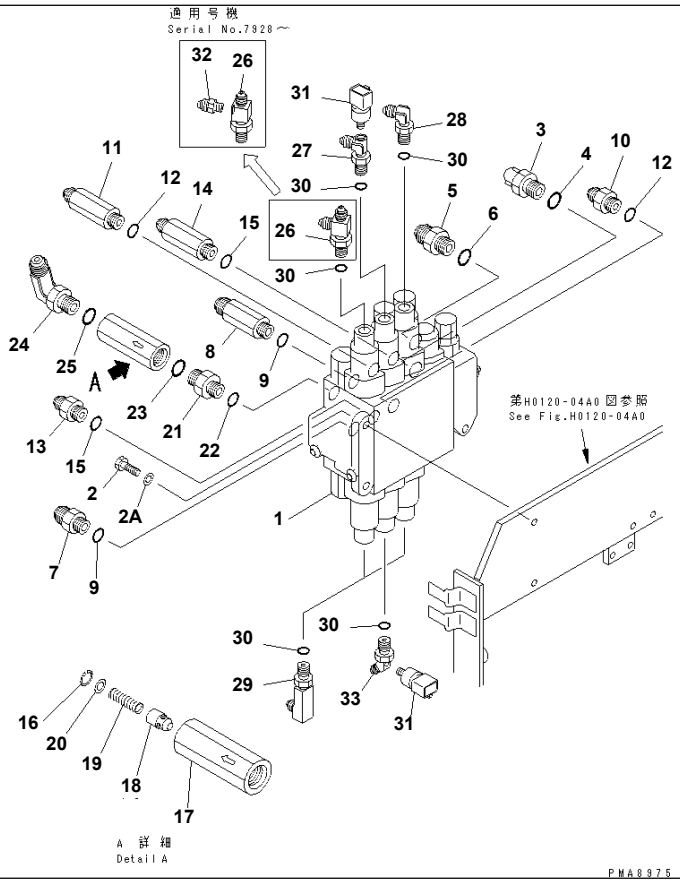

PC75UU-2 S/N 5001-UP

MAIN VALVE (MOUNT AND ELBOW) (FOR UPPER VALVE)


Item	Part No.	Description	Qty	Options
1	(21W-60-22120)	VALVE ASS'Y,(SEE FIG.Y1680-01A0)	1	SN:5001--
2	01010-50825	BOLT	3	SN:5001--
2A	01643-30823	WASHER	3	SN:5001--
3	07236-10422	ELBOW	1	SN:5001--
4	07002-12034	O-RING	1	SN:5001--
5	20T-62-71690	NIPPLE	1	SN:5001--
6	07002-02034	O-RING	1	SN:5001--
7	20T-62-71150	UNION	1	SN:5001--
8	20T-62-71160	UNION	1	SN:5001--
9	07002-11823	O-RING	2	SN:5001--
10	20T-62-56710	UNION	1	SN:5001--
11	20T-62-67150	UNION	1	SN:5001--
12	07002-11823	O-RING	2	SN:5001--
13	20T-62-56710	UNION	1	SN:5001--
14	20T-62-67150	UNION	1	SN:5001--
15	07002-11823	O-RING	2	SN:5001--
	205-60-64300	CHECK VALVE ASS'Y	1	SN:5001--
16	04065-01410	· RING,SNAP	1	SN:5001--
17	205-60-64290	· BODY	1	SN:5001--
18	205-60-51390	· POPPET	1	SN:5001--
19	205-60-51410	· SPRING	1	SN:5001--
20	205-60-51420	· SEAT	1	SN:5001--
21	21X-62-12190	UNION	1	SN:5001--
22	07002-11823	O-RING	1	SN:5001--

https://truckmanualshub.com/

MAIN VALVE (MOUNT AND ELBOW) (FOR UPPER VALVE)

Item	Part No.	Description	Qty	Options
23	07002-12034	O-RING	1	SN:5001--
24	07235-10422	ELBOW	1	SN:5001--
25	07002-12034	O-RING	1	SN:5001--
26	21W-62-22980	TEE	1	SN:7928--
	208-62-17550	TEE	1	SN:5001--7927
27	07235-50210	ELBOW	1	SN:7928--
	07235-50210	ELBOW	2	SN:5001--7927
28	07235-10210	ELBOW	1	SN:5001--
29	208-62-18190	ELBOW	2	SN:5001--
30	07002-01423	O-RING	6	SN:5001--
31	20Y-06-21710	SWITCH,PRESSURE (FOR SWING)	2	SN:7928--
	203-06-56121	SWITCH,PRESSURE (FOR SWING)	2	SN:5001--7927
32	208-06-11220	NIPPLE	1	SN:7928--
33	07236-50210	ELBOW	1	SN:7928--

PC75UU-2 S/N 5001-UP

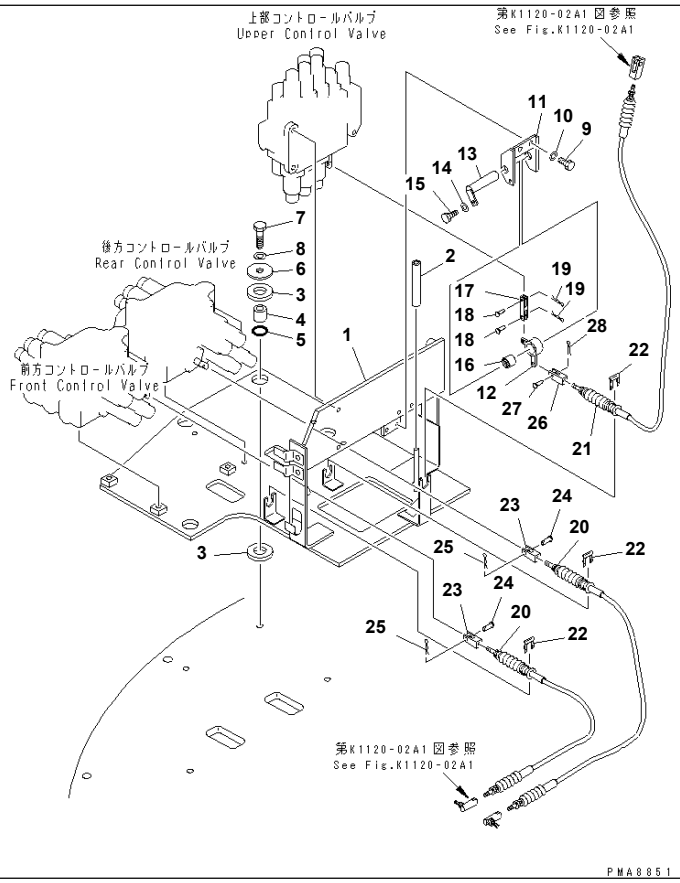

Ref. H0120-04A0 **Page 150050**

PC75UU-2 S/N 5001-UP


MAIN VALVE (BRACKET)

Item	Part No.	Description	Qty	Options
1	21W-62-22211	BRACKET	1	SN:5001--
2	07288-01001	HOSE	1	SN:5001--
3	203-62-42770	CUSHION	8	SN:5001--
4	20X-62-21550	SPACER	4	SN:5001--
5	07000-03025	O-RING	4	SN:5001--
6	566-35-42430	PLATE	4	SN:5001--
7	01010-51245	BOLT	4	SN:5001--
8	01643-31232	WASHER	4	SN:5001--
9	01010-50820	BOLT	2	SN:5001--
10	01643-30823	WASHER	2	SN:5001--
11	20U-43-21412	BRACKET	1	SN:5001--
12	20U-43-21430	LEVER	1	SN:5001--
13	21W-43-21170	SHAFT	1	SN:5001--
14	01010-50612	BOLT	1	SN:5001--
15	01643-30623	WASHER	1	SN:5001--
16	195-61-34120	BEARING	1	SN:5001--
17	21W-43-21180	YOKE	1	SN:5001--
18	04205-10514	PIN	2	SN:5001--
19	04052-10530	PIN,SNAP	2	SN:5001--
20	21W-43-21121	CABLE	2	SN:5001--
21	21W-43-21141	CABLE	1	SN:5001--
22	20U-43-21330	PLATE,LOCK	3	SN:5001--
23	04210-20624	YOKE	2	SN:5001--
24	04205-10618	PIN	2	SN:5001--

https://truckmanualshub.com/

MAIN VALVE (BRACKET)

Item	Part No.	Description	Qty	Options
25	04052-10633	PIN,SNAP	2	SN:5001--
26	104-43-25190	YOKE	1	SN:5001--
27	04205-10516	PIN	1	SN:5001--
28	04052-10530	PIN,SNAP	1	SN:5001--

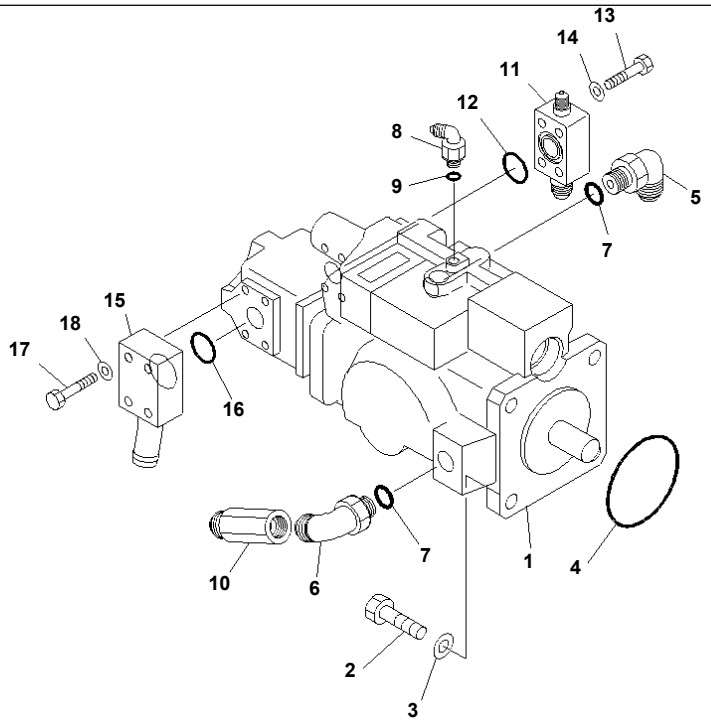


PMA8852

PC75UU-2 S/N 5001-UP

MAIN PUMP (MOUNT AND ELBOW)

Item	Part No.	Description	Qty	Options
1	(21W-60-22111)	PUMP ASS'Y,(SEE FIG.Y1610-01A0)	1	SN:5001--
2	01010-51650	BOLT	4	SN:5001--
3	01643-31645	WASHER	4	SN:5001--
4	07000-02105	O-RING	1	SN:5001--
5	07235-10628	ELBOW	1	SN:5001--
6	07235-10522	ELBOW	1	SN:5001--
7	07002-12434	O-RING	2	SN:5001--
8	07235-10210	ELBOW	1	SN:5001--
9	07002-11423	O-RING	1	SN:5001--
10	21W-62-22171	UNION	1	SN:5001--
11	21W-62-22491	BLOCK	1	SN:5001--
12	07000-13032	O-RING	1	SN:5001--
13	01010-51050	BOLT	4	SN:5001--
14	01643-31032	WASHER	4	SN:5001--
15	21W-62-22590	BLOCK	1	SN:5001--
16	07000-03032	O-RING	1	SN:5001--
17	01010-51055	BOLT	4	SN:5001--
18	01643-31032	WASHER	4	SN:5001--

https://truckmanualshub.com/

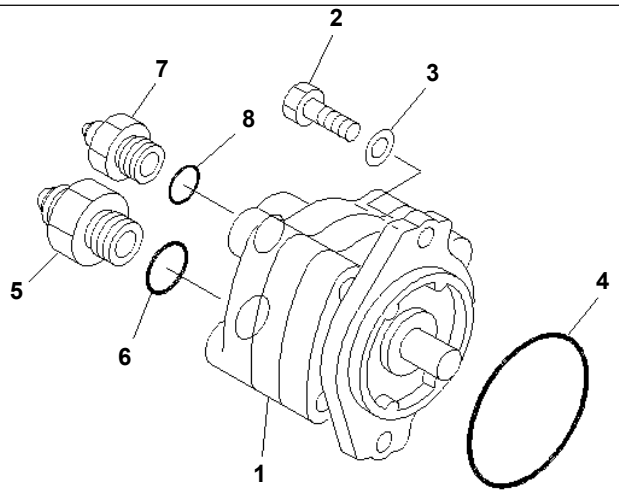


PNA8853

PC75UU-2 S/N 5001-UP

CONTROL PUMP (MOUNT AND ELBOW)

Item	Part No.	Description	Qty	Options
1	(705-40-01370)	PUMP ASS'Y,(SEE FIG.Y1610-11A0)	1	SN:5001--
2	01010-51030	BOLT	2	SN:5001--
3	01643-31032	WASHER	2	SN:5001--
4	07000-02085	O-RING	1	SN:5001--
5	416-85-52510	NIPPLE	1	SN:5001--
6	22W-62-13420	O-RING	1	SN:5001--
7	21W-62-22710	UNION	1	SN:5001--
8	208-38-11590	O-RING	1	SN:5001--

https://truckmanualshub.com/

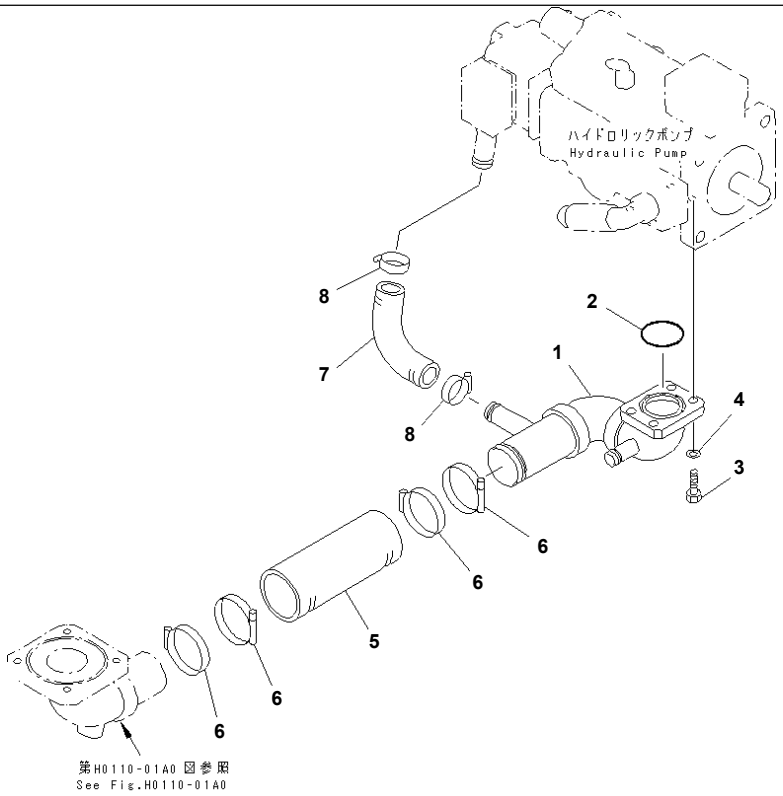


PNA8854

PC75UU-2 S/N 5001-UP
SUCTION LINE

Item	Part No.	Description	Qty	Options
1	21W-62-22142	TUBE	1	SN:10290--
	21W-62-22141	TUBE	1	SN:5001--10289
2	07000-02060	O-RING	1	SN:5001--
3	01010-51030	BOLT	4	SN:5001--
4	01643-31032	WASHER	4	SN:5001--
5	07260-25820	HOSE	1	SN:5001--
6	07281-00809	CLAMP	4	SN:10371--
	07281-00809	CLAMP	3	SN:5001--10370
7	21W-62-22480	HOSE	1	SN:5001--
8	07281-00489	CLAMP	2	SN:5001--


https://truckmanualshub.com/

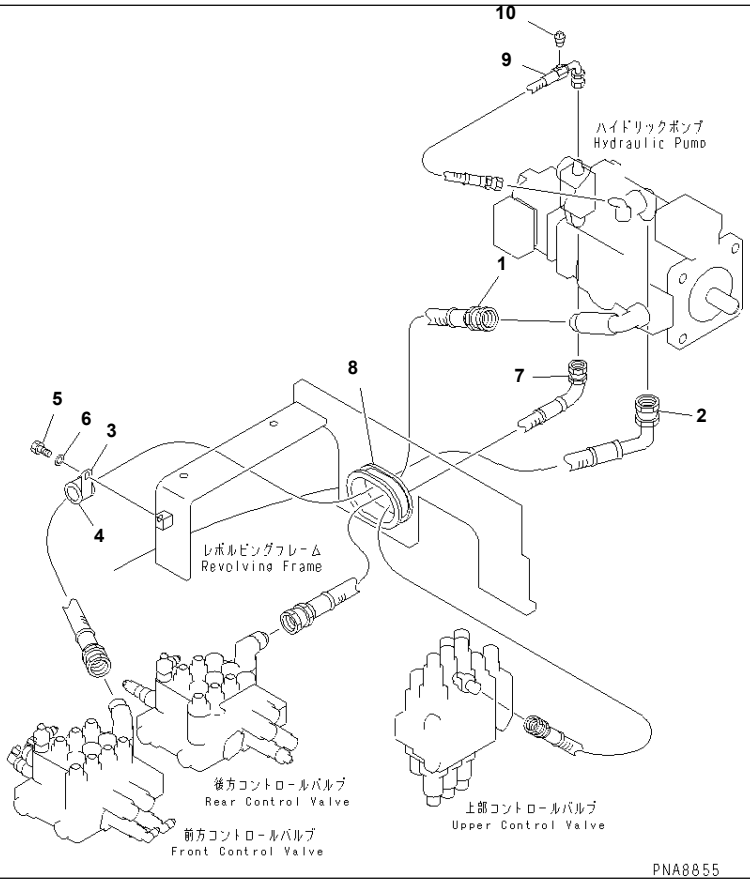

PC75UU-2 S/N 5001-UP
DELIVERY LINE

Item	Part No.	Description	Qty	Options
1	21W-62-22540	HOSE	1	SN:5001--
2	21W-62-22161	HOSE	1	SN:5001--
3	04434-53411	CLIP	1	SN:5001--
4	07095-20627	CUSHION	1	SN:5001--
5	01010-51030	BOLT	1	SN:5001--
6	01643-31032	WASHER	1	SN:5001--
7	21W-62-22560	HOSE	1	SN:5001--
8	21W-62-22510	GROMMET	1	SN:5001--
9	21W-62-22660	HOSE	1	SN:5001--
10	07042-20108	· PLUG	1	SN:5001--

PC75UU-2 S/N 5001-UP

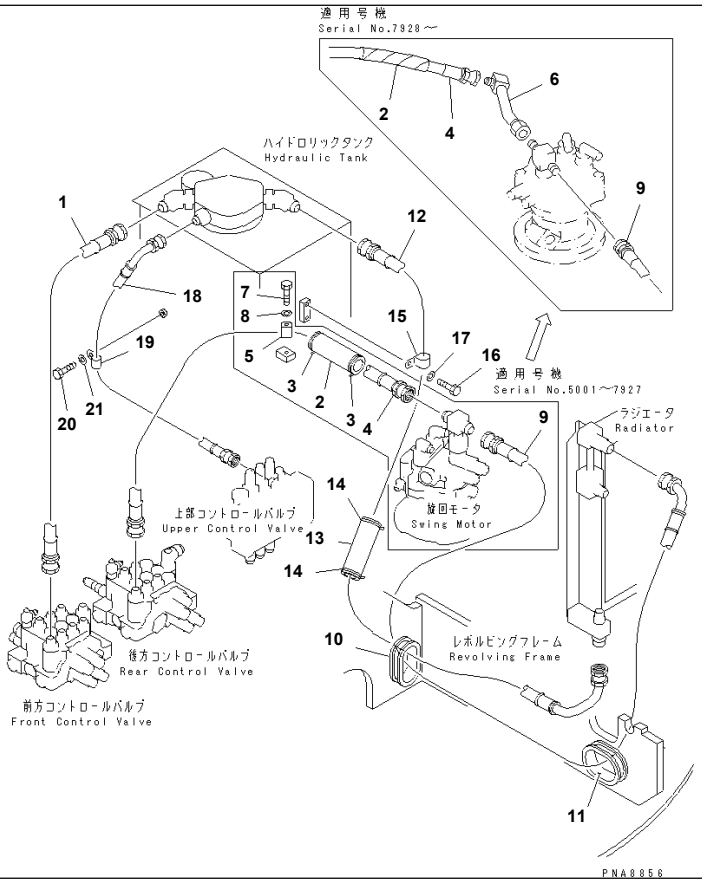


Ref. H0330-01A0 **Page 150100**

PC75UU-2 S/N 5001-UP
RETURN LINE

Item	Part No.	Description	Qty	Options
1	21W-62-22990	HOSE	1	SN:5001--
2	203-62-32440	COVER	1	SN:7928--
	203-62-41150	COVER	1	SN:5001--7927
3	08034-00823	BAND	2	SN:5001--7927
4	21W-62-23140	HOSE	1	SN:7928--
	21W-62-22990	HOSE	1	SN:5001--7927
5	04434-53211	CLIP	1	SN:5001--7927
6	21W-62-23130	TUBE	1	SN:7928--
7	01010-51020	BOLT	1	SN:5001--7927
8	01643-31032	WASHER	1	SN:5001--7927
9	21W-62-22321	HOSE	1	SN:5001--
10	21W-62-22180	GROMMET	1	SN:5001--
11	21W-62-22510	GROMMET	1	SN:5001--
12	21W-62-22331	HOSE	1	SN:5001--
13	203-62-41150	COVER	1	SN:5001--
14	08034-00823	BAND	2	SN:5001--
15	04434-53211	CLIP	1	SN:5001--
16	01010-51020	BOLT	1	SN:5001--
17	01643-31032	WASHER	1	SN:5001--
18	20U-62-22720	HOSE	1	SN:5001--
19	04434-52511	CLIP	1	SN:5001--
20	01010-51020	BOLT	1	SN:5001--
21	01643-31032	WASHER	1	SN:5001--

https://truckmanualshub.com/

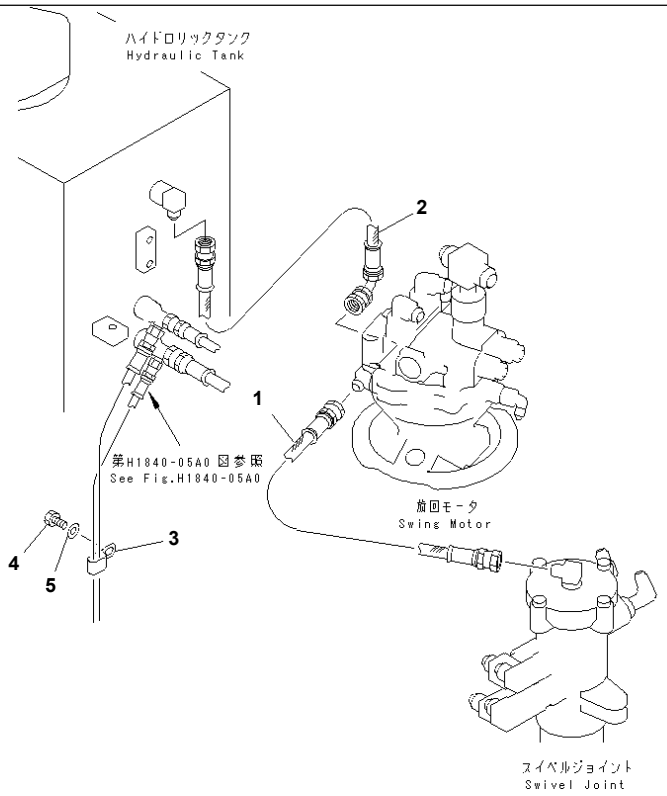


PC75UU-2 S/N 5001-UP

DRAIN LINE(#5001-7927)

Item	Part No.	Description	Qty	Options
1	21W-62-22111	HOSE	1	SN:5001--@
2	21W-62-22930	HOSE	1	SN:5001--7927
3	04435-51610	CLIP	1	SN:5001--@
4	01010-51020	BOLT	1	SN:5001--@
5	01643-31032	WASHER	1	SN:5001--@

https://truckmanualshub.com/

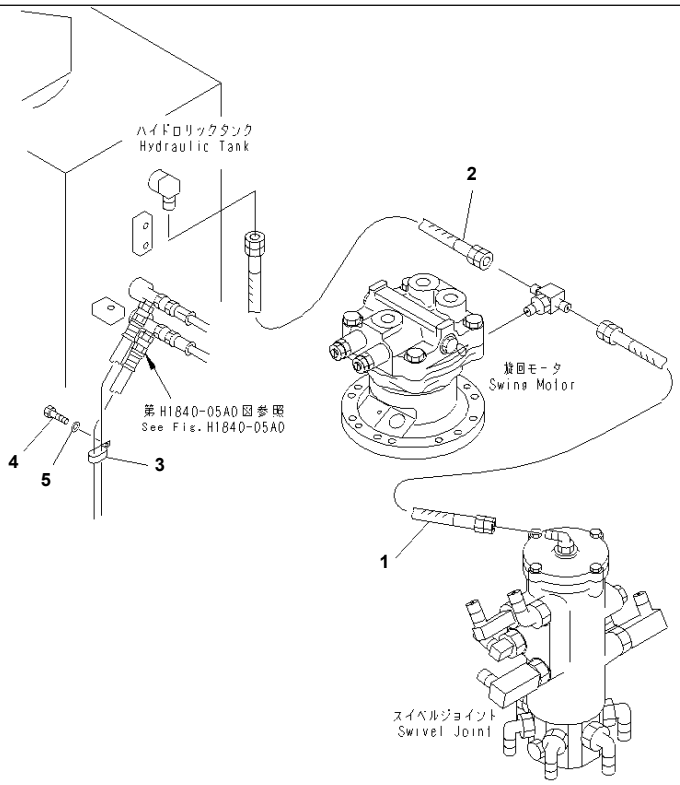


PC75UU-2 S/N 5001-UP

DRAIN LINE(#7928-)

Item	Part No.	Description	Qty	Options
1	21W-62-22111	HOSE	1	SN:5001--
2	07102-20305	HOSE	1	SN:7928--
3	04435-51610	CLIP	1	SN:5001--
4	01010-51020	BOLT	1	SN:5001--
5	01643-31032	WASHER	1	SN:5001--

https://truckmanualshub.com/

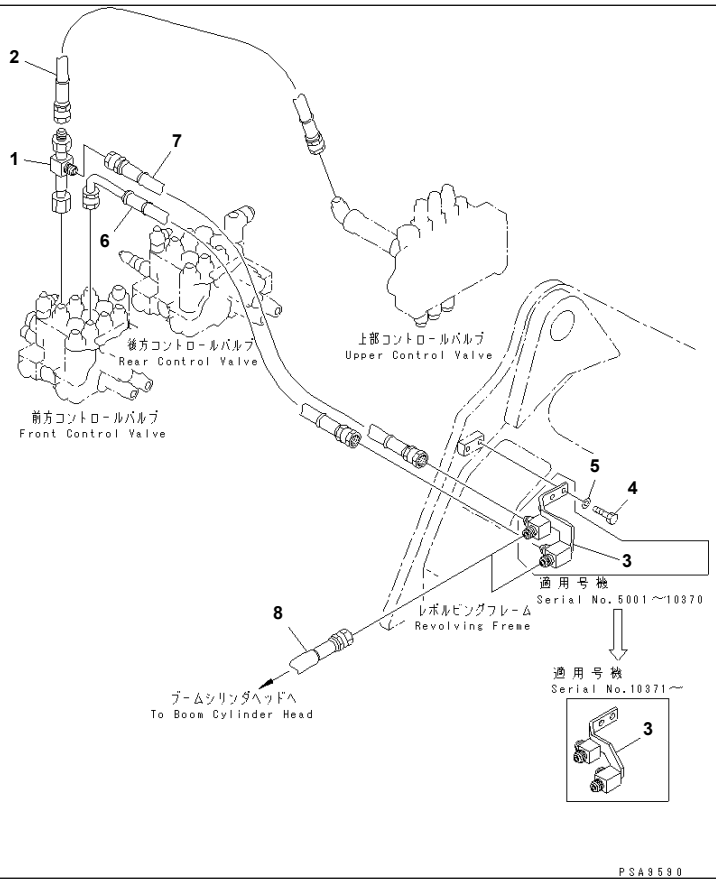


PC75UU-2 S/N 5001-UP

ACTUATOR LINE (BOOM)

Item	Part No.	Description	Qty	Options
1	21W-62-22670	TUBE	1	SN:5001--
2	21W-62-22750	HOSE	1	SN:5001--
3	21W-62-22362	BRACKET	1	SN:10371--
	21W-62-22361	BRACKET	1	SN:5001--10370
4	01010-51020	BOLT	2	SN:5001--
5	01643-31032	WASHER	2	SN:5001--
6	21W-62-22341	HOSE	1	SN:5001--
7	21W-62-22351	HOSE	1	SN:5001--
8	07086-40407	HOSE	2	SN:5001--

https://truckmanualshub.com/

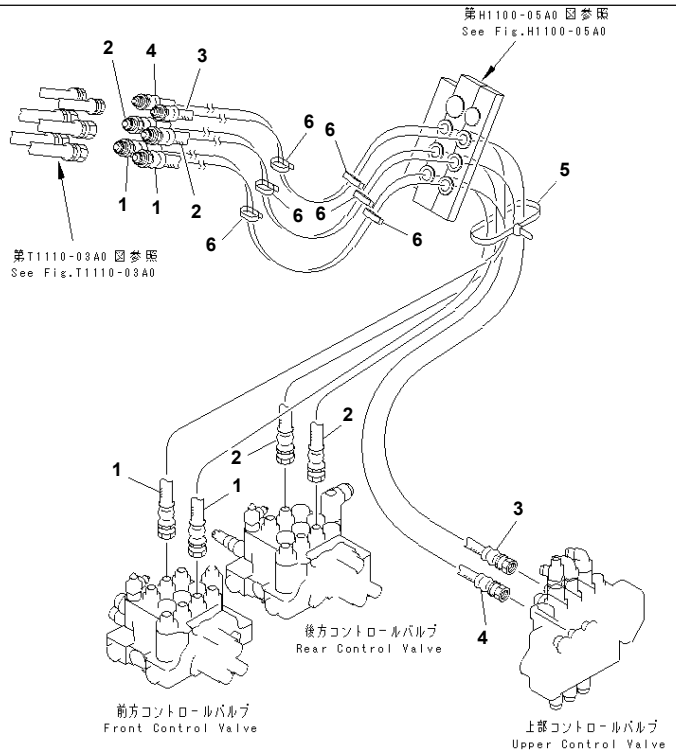


PMA8859

PC75UU-2 S/N 5001-UP

ACTUATOR LINE (BUCKET¤ ARM AND OFFSET)

Item	Part No.	Description	Qty	Options
1	21W-62-22371	HOSE	2	SN:5001--
2	21W-62-22381	HOSE¤ 2150MM	2	SN:5001--
3	21W-62-22770	HOSE	1	SN:5001--
4	21W-62-22391	HOSE	1	SN:5001--
5	08034-10838	BAND	1	SN:5001--
6	08034-10520	BAND	6	SN:5001--

https://truckmanualshub.com/

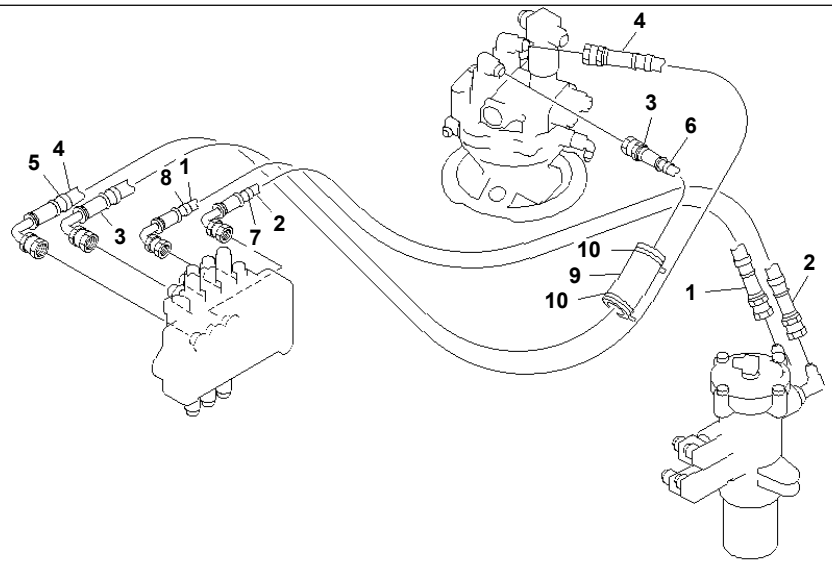


PJA1513

PC75UU-2 S/N 5001-UP

ACTUATOR LINE (SWING AND BLADE)(#5001-7927)

Item	Part No.	Description	Qty	Options
1	21W-62-22441	HOSE¤ 1100MM	1	SN:5001--7927
2	21W-62-22431	HOSE	1	SN:5001--7927
3	21W-62-22451	HOSE	1	SN:5001--7927
4	21W-62-22461	HOSE	1	SN:5001--7927
5	203-62-57950	MARK¤ 5	2	SN:5001--@
6	203-62-57960	MARK¤ 6	2	SN:5001--@
7	203-62-57970	MARK¤ 7	2	SN:5001--@
8	203-62-57980	MARK¤ 8	2	SN:5001--@
9	203-62-41150	COVER	1	SN:5001--@
10	08034-00823	BAND	2	SN:5001--@

https://truckmanualshub.com/

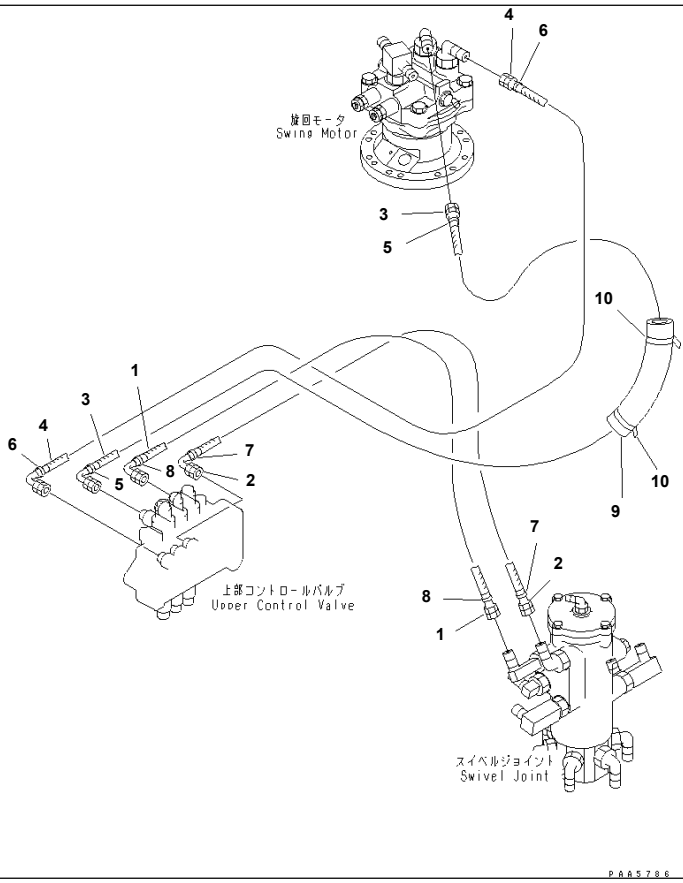


PC75UU-2 S/N 5001-UP

ACTUATOR LINE (SWING AND BLADE)(#7928-)

Item	Part No.	Description	Qty	Options
1	20U-62-22881	HOSE¤ 800MM	1	SN:7928--
2	21W-62-21180	HOSE¤ 850MM	1	SN:7928--
3	21W-62-22461	HOSE	1	SN:7928--
4	21W-62-21170	HOSE	1	SN:7928--
5	203-62-57950	MARK¤ 5	2	SN:5001--
6	203-62-57960	MARK¤ 6	2	SN:5001--
7	203-62-57970	MARK¤ 7	2	SN:5001--
8	203-62-57980	MARK¤ 8	2	SN:5001--
9	203-62-41150	COVER	1	SN:5001--
10	08034-00823	BAND	2	SN:5001--

https://truckmanualshub.com/

アクチュエータ ライン (トラベル)
FIG. H1100-04A0 ACTUATOR LINE (TRAVEL) (#5001-7927)

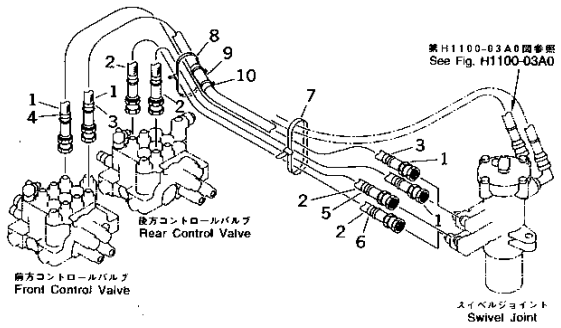


PC75UU-2

PC75UU-2 S/N 5001-UP
ACTUATOR LINE (TRAVEL)(#5001-7927)

Item	Part No.	Description	Qty	Options
1	21W-62-22760	HOSE	2	SN:5001--@
2	21W-62-22940	HOSE	2	SN:5001--7927
3	203-62-57910	MARK¤ 1	2	SN:5001--@
4	203-62-57920	MARK¤ 2	2	SN:5001--@
5	203-62-57930	MARK¤ 3	2	SN:5001--@
6	203-62-57940	MARK¤ 4	2	SN:5001--@
7	08034-00876	BAND	1	SN:5001--@
8	08034-10838	BAND	1	SN:5001--@
9	20U-62-11760	VINYL	1	SN:5001--@
10	08034-10838	BAND	2	SN:5001--@

https://truckmanualshub.com/

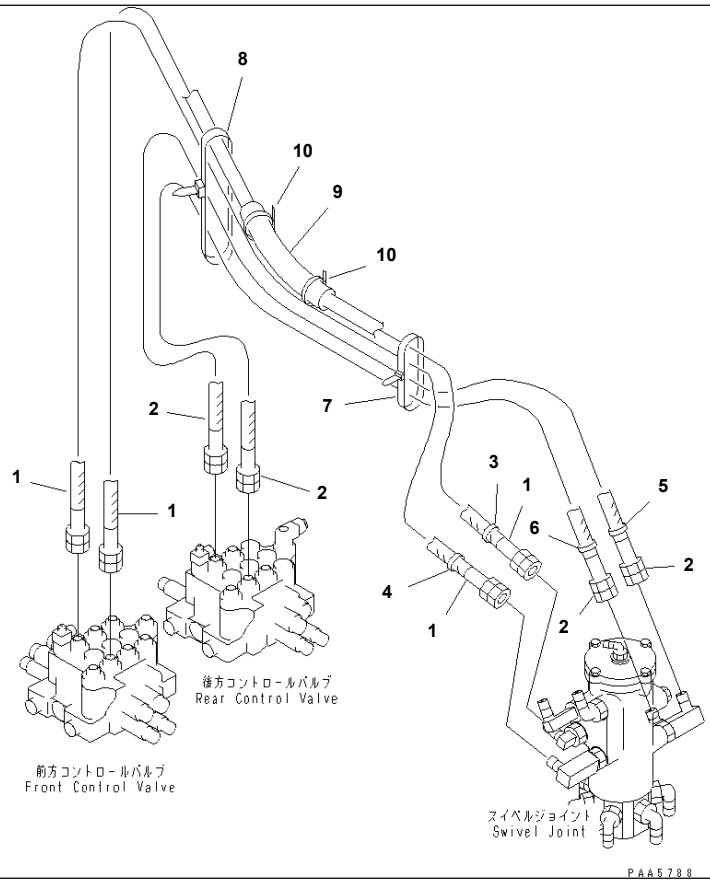


PC75UU-2 S/N 5001-UP

ACTUATOR LINE (TRAVEL)(#7928-)

Item	Part No.	Description	Qty	Options
1	21W-62-22760	HOSE	2	SN:5001--
2	21W-62-22950	HOSE	2	SN:7928--
3	203-62-57910	MARK¤ 1	2	SN:5001--
4	203-62-57920	MARK¤ 2	2	SN:5001--
5	203-62-57930	MARK¤ 3	2	SN:5001--
6	203-62-57940	MARK¤ 4	2	SN:5001--
7	08034-00876	BAND	1	SN:5001--
8	08034-10838	BAND	1	SN:5001--
9	20U-62-11760	VINYL	1	SN:5001--
10	08034-10838	BAND	2	SN:5001--

https://truckmanualshub.com/

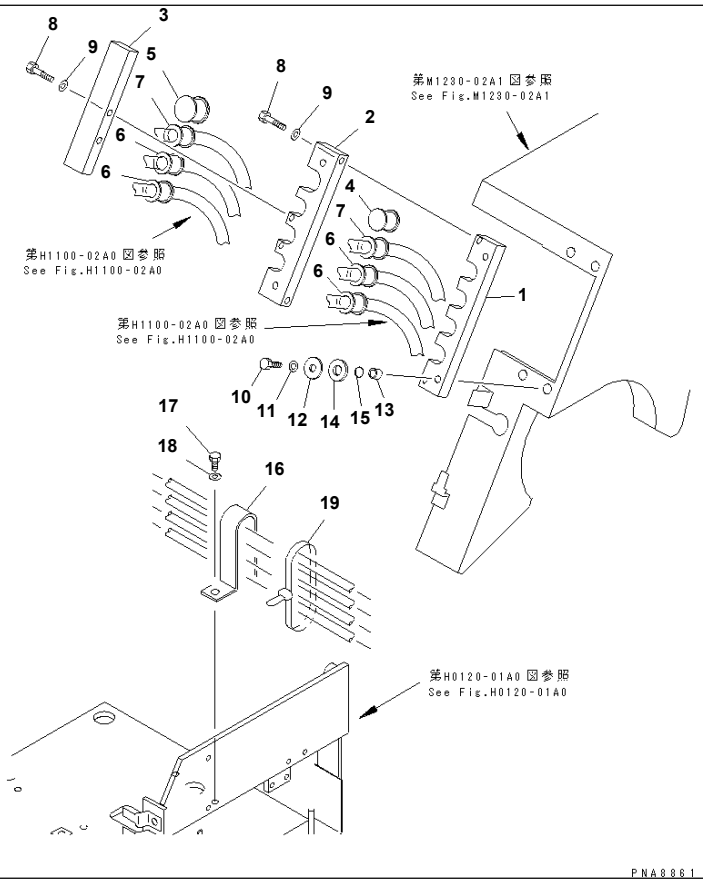


PC75UU-2 S/N 5001-UP

ACTUATOR LINE (BAND AND MOUNT)

Item	Part No.	Description	Qty	Options
1	20U-62-22911	PLATE	1	SN:5001--
2	20U-62-22921	PLATE	1	SN:5001--
3	20U-62-22931	PLATE	1	SN:5001--
4	20U-62-22940	CUSHION	1	SN:5001--
5	20U-62-22460	CUSHION	1	SN:5001--
6	07095-20420	CUSHION	4	SN:5001--
7	20U-62-23250	CUSHION	2	SN:5001--
8	01010-50860	BOLT	4	SN:5001--
9	01643-30823	WASHER	4	SN:5001--
10	01010-51040	BOLT	4	SN:5001--
11	01643-31032	WASHER	4	SN:5001--
12	21W-62-23110	WASHER	4	SN:5001--
13	21W-62-22810	SPACER	4	SN:5001--
14	21W-62-22970	SHEET	4	SN:5001--
15	07000-02015	O-RING	4	SN:5001--
16	21W-62-22680	PLATE	1	SN:5001--
17	01010-51016	BOLT	1	SN:5001--
18	01643-31032	WASHER	1	SN:5001--
19	08034-00823	BAND	4	SN:5001--

https://truckmanualshub.com/

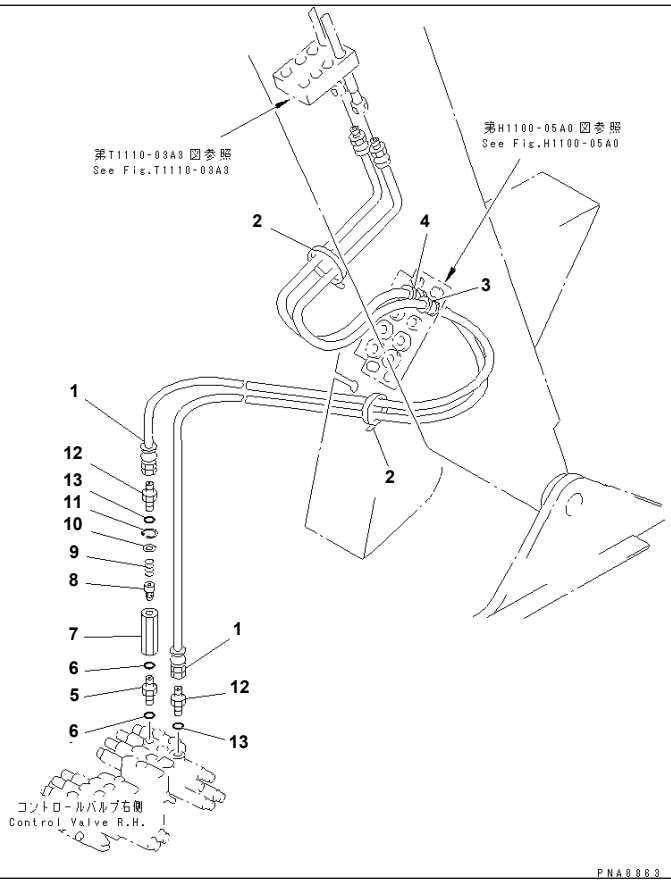


Ref. H1270-01A3 **Page 150200**

PC75UU-2 S/N 5001-UP
ATTACHMENT LINE (TELESCOPIC ARM)

Item	Part No.	Description	Qty	Options
1	21W-62-22381	HOSE¤ 2150MM	2	SN:5001--
2	08034-10520	BAND	2	SN:5001--
3	07095-20420	CUSHION	1	SN:5001--
4	07095-00421	CUSHION	1	SN:5001--
5	701-10-63140	PLUG	1	SN:5001--
6	07002-12034	O-RING	2	SN:5001--
7	205-60-64290	BODY	1	SN:5001--
8	21W-60-25110	POPPET	1	SN:5001--
9	205-60-51410	SPRING	1	SN:5001--
10	205-60-51420	SEAT	1	SN:5001--
11	04065-01410	RING,SNAP	1	SN:5001--
12	07230-20422	UNION	2	SN:5001--
13	07002-12034	O-RING	2	SN:5001--

https://truckmanualshub.com/

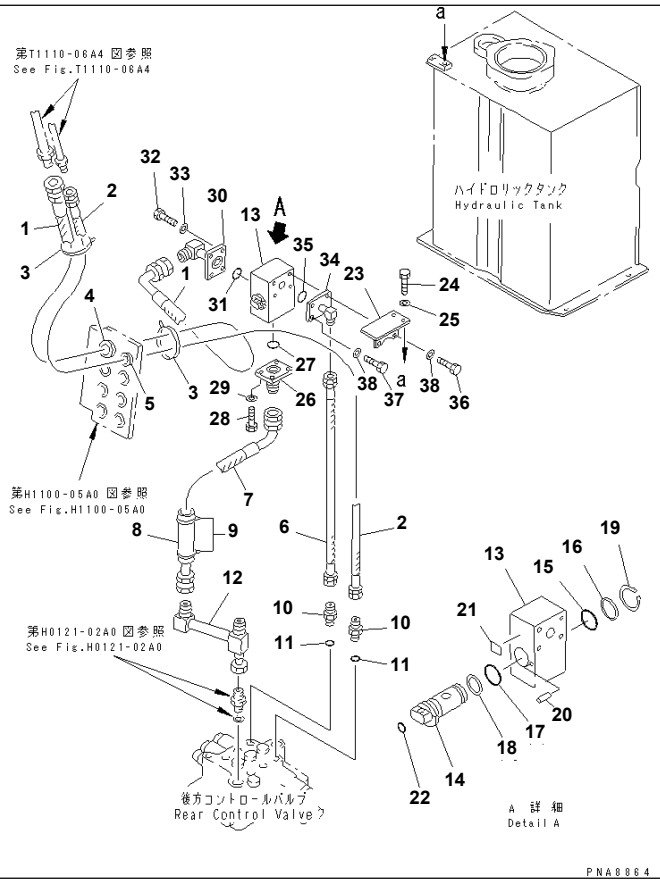

PC75UU-2 S/N 5001-UP


ATTACHMENT LINE (ATTACHMENT)

Item	Part No.	Description	Qty	Options
1	21W-973-2170	HOSE	1	SN:5001--
2	21W-973-2180	HOSE	1	SN:5001--
3	08034-10520	BAND	2	SN:5001--
4	07095-20627	CUSHION	1	SN:5001--
5	07095-20420	CUSHION	1	SN:5001--
6	21W-973-2220	HOSE	1	SN:5001--
7	21W-973-2160	HOSE	1	SN:5001--
8	203-62-41150	COVER	1	SN:5001--
9	08034-00823	BAND	2	SN:5001--
10	07230-20422	UNION	2	SN:5001--
11	07002-12034	O-RING	2	SN:5001--
12	21W-973-2140	TUBE	1	SN:5001--
	203-973-5500	VALVE ASS'Y	1	SN:5001--
13	203-973-5942	· BODY	1	SN:5001--
14	202-973-6790	· SPOOL	1	SN:5001--
15	07000-13038	· O-RING	1	SN:5001--
16	07001-03038	· RING	1	SN:5001--
17	07000-13022	· O-RING	1	SN:5001--
18	07001-03032	· RING	1	SN:5001--
19	04064-03818	· RING,SNAP	1	SN:5001--
20	04025-00412	· PIN	1	SN:5001--
21	203-00-56630	PLATE¤ MARK	1	SN:5001--
22	203-00-56640	PLATE¤ MARK	1	SN:5001--
23	21W-973-2110	BRACKET	1	SN:5001--

https://truckmanualshub.com/

ATTACHMENT LINE (ATTACHMENT)

Item	Part No.	Description	Qty	Options
24	01010-51020	BOLT	2	SN:5001--
25	01643-31032	WASHER	2	SN:5001--
26	21W-973-2190	TUBE	1	SN:5001--
27	07000-13030	O-RING	1	SN:5001--
28	01010-51030	BOLT	4	SN:5001--
29	01643-31032	WASHER	4	SN:5001--
30	21W-973-2230	TUBE	1	SN:5001--
31	07000-13030	O-RING	1	SN:5001--
32	01010-51030	BOLT	4	SN:5001--
33	01643-31032	WASHER	4	SN:5001--
34	21W-973-2210	TUBE	1	SN:5001--
35	07000-13030	O-RING	1	SN:5001--
36	01010-51035	BOLT	2	SN:5001--
37	01010-51030	BOLT	2	SN:5001--
38	01643-31032	WASHER	4	SN:5001--

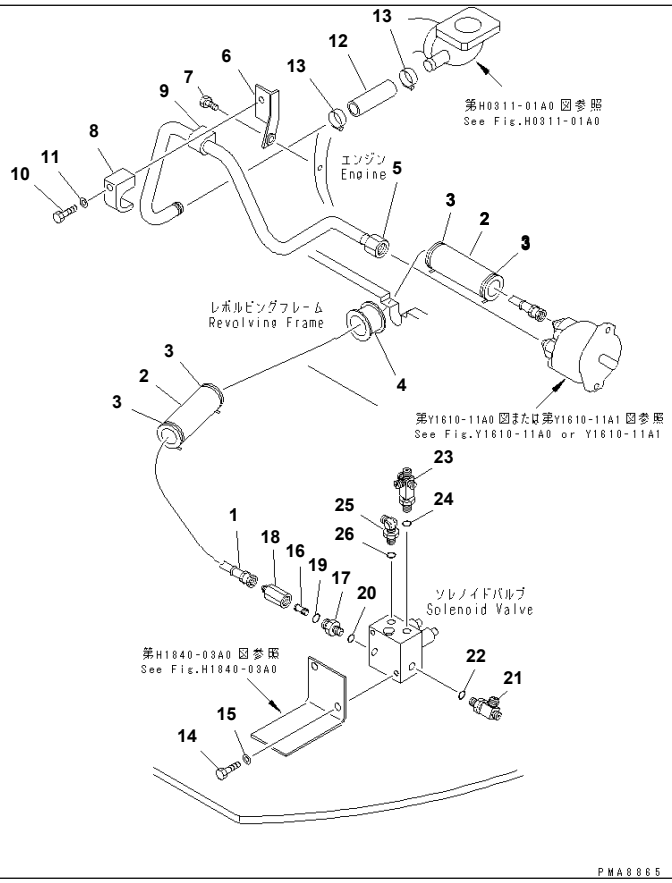

PC75UU-2 S/N 5001-UP

P.P.C MAIN LINE (PUMP LINE)


Item	Part No.	Description	Qty	Options
1	20U-62-23122	HOSE	1	SN:5001--
2	203-62-41150	COVER	3	SN:5001--
3	08034-00823	BAND	6	SN:5001--
4	20U-06-21270	GROMMET	1	SN:5001--
5	21W-62-22152	TUBE	1	SN:5001--
6	21W-62-22190	BRACKET	1	SN:5001--
7	01010-51035	BOLT	1	SN:5001--
8	203-62-43370	CLAMP	1	SN:5001--
9	203-62-43390	CUSHION	1	SN:5001--
10	01010-51065	BOLT	1	SN:5001--
11	01463-31032	WASHER	1	SN:5001--
12	21E-62-11140	HOSE	1	SN:5001--
13	07281-00359	CLAMP	2	SN:5001--
14	01010-51020	BOLT	2	SN:5001--
15	01643-31032	WASHER	2	SN:5001--
16	20T-62-71910	STRAINER	1	SN:5001--
17	20T-62-71920	UNION	1	SN:5001--
18	20T-62-71930	UNION	1	SN:5001--
19	07002-01823	O-RING	1	SN:5001--
20	07002-01423	O-RING	1	SN:5001--
21	201-62-65280	TEE	1	SN:5001--
22	07002-01423	O-RING	1	SN:5001--
23	20U-62-22161	TEE	1	SN:5001--
24	07002-01423	O-RING	1	SN:5001--

https://truckmanualshub.com/

P.P.C MAIN LINE (PUMP LINE)

Item	Part No.	Description	Qty	Options
25	07235-10210	ELBOW	1	SN:5001--
26	07002-01423	O-RING	1	SN:5001--

https://truckmanualshub.com/

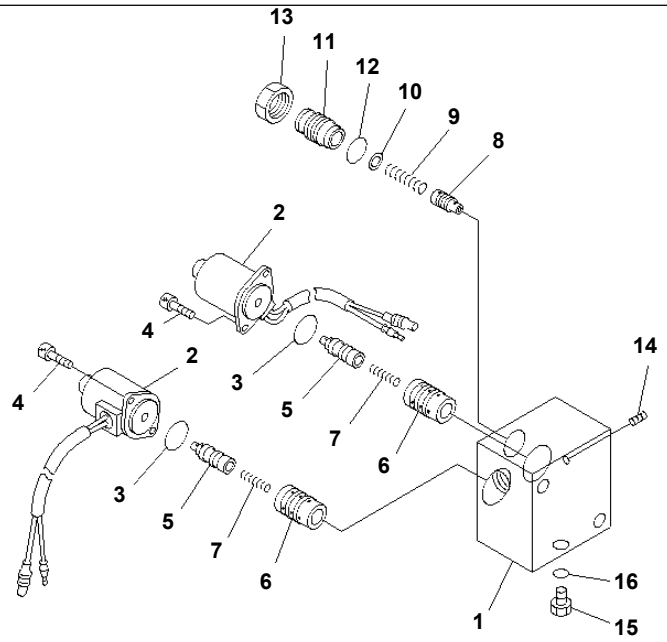


PMA2413

PC75UU-2 S/N 5001-UP

P.P.C MAIN LINE (LOCK VALVE)

Item	Part No.	Description	Qty	Options
	21W-60-22160	VALVE ASS'Y	1	SN:5001--
THE UCHIDA YUATSU PART NUMBER IS THAT UC IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
1	☆	· BODY	1	SN:5001--
2	21W-60-22190	· SOLENOID	2	SN:5001--
3	UC1301198007	· O-RING	2	SN:5001--
4	UC1301502002	· BOLT	4	SN:5001--
5	☆	· SPOOL	2	SN:5001--
6	☆	· GUIDE	2	SN:5001--
7	☆	· SPRING	2	SN:5001--
8	☆	· SPOOL	1	SN:5001--
9	☆	· SPRING	1	SN:5001--
10	☆	· SHIM	1	SN:5001--
11	☆	· SCREW,ADJUSTING	1	SN:5001--
12	UC1800042641	· O-RING	1	SN:5001--
13	☆	· NUT	1	SN:5001--
14	☆	· PLUG	2	SN:5001--
15	07040-11007	PLUG	1	SN:5001--
16	07002-01023	O-RING	1	SN:5001--

https://truckmanualshub.com/

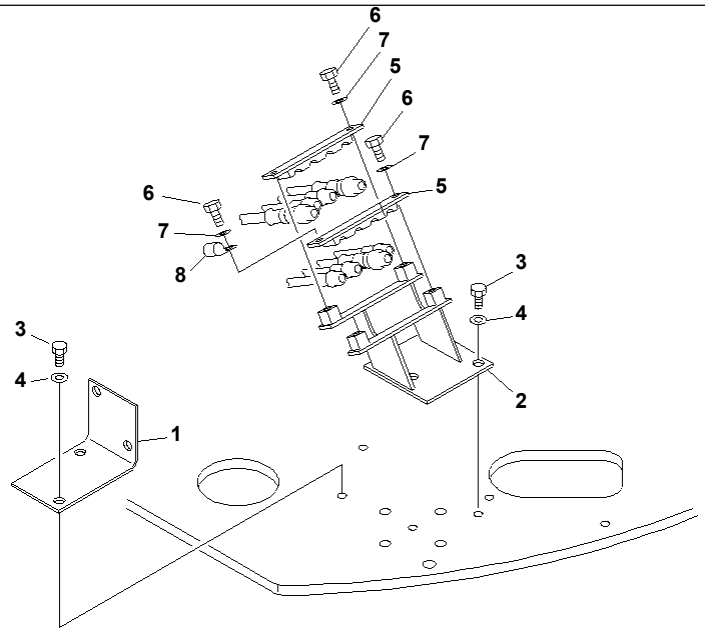


PJA1530

PC75UU-2 S/N 5001-UP

P.P.C MAIN LINE (BRACKET)

Item	Part No.	Description	Qty	Options
1	20U-62-23481	BRACKET	1	SN:5001--
2	20U-62-22311	BRACKET	1	SN:5001--
3	01010-51225	BOLT	4	SN:5001--
4	01643-31232	WASHER	4	SN:5001--
5	20U-62-22320	PLATE	2	SN:5001--
6	01010-51020	BOLT	4	SN:5001--
7	01643-31032	WASHER	4	SN:5001--
8	08036-11214	CLIP	1	SN:5001--

https://truckmanualshub.com/

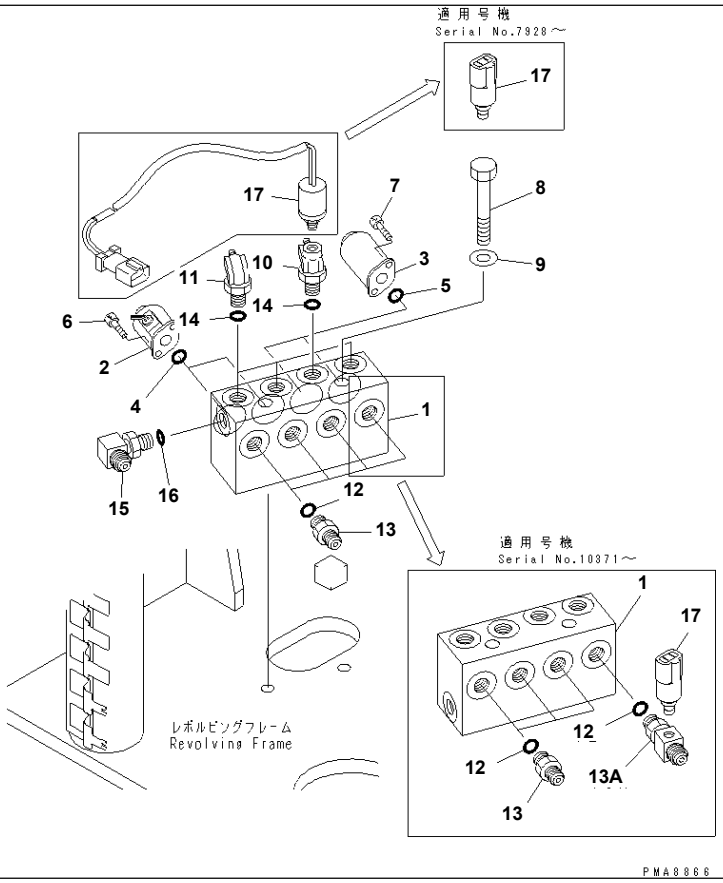


PC75UU-2 S/N 5001-UP

P.P.C MAIN LINE (SAFETY VALVE)

Item	Part No.	Description	Qty	Options
1	21W-60-22100	VALVE ASS'Y	1	SN:5001--
THE UCHIDA YUATSU PART NUMBER IS THAT UC IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
2	21W-60-22170	· SOLENOID ASS'Y	2	SN:5001--
3	21W-60-22180	· SOLENOID ASS'Y	2	SN:5001--
4	UC1301198007	· O-RING	2	SN:5001--
5	UC1300049005	· O-RING	2	SN:5001--
6	UC1301502002	· BOLT	4	SN:5001--
7	UC1301514005	· BOLT	4	SN:5001--
8	01010-51200	BOLT	2	SN:5001--
9	01643-31232	WASHER	2	SN:5001--
10	07235-50210	ELBOW	1	SN:5001--
11	07235-10210	ELBOW	3	SN:5001--
12	07002-01423	O-RING	4	SN:5001--
13	07230-20210	UNION	3	SN:10371--
	07230-20210	UNION	4	SN:5001--10370
13A	21W-62-22980	TEE	1	SN:10371--
14	07002-01423	O-RING	4	SN:5001--
15	20Y-970-1731	ELBOW	1	SN:5001--
16	07002-01423	O-RING	1	SN:5001--
17	20Y-06-21710	SWITCH,PRESSURE	2	SN:10371--
	20Y-06-21710	SWITCH,PRESSURE	1	SN:7928--10370
	203-06-56121	SWITCH,PRESSURE	1	SN:5001--7927

https://truckmanualshub.com/

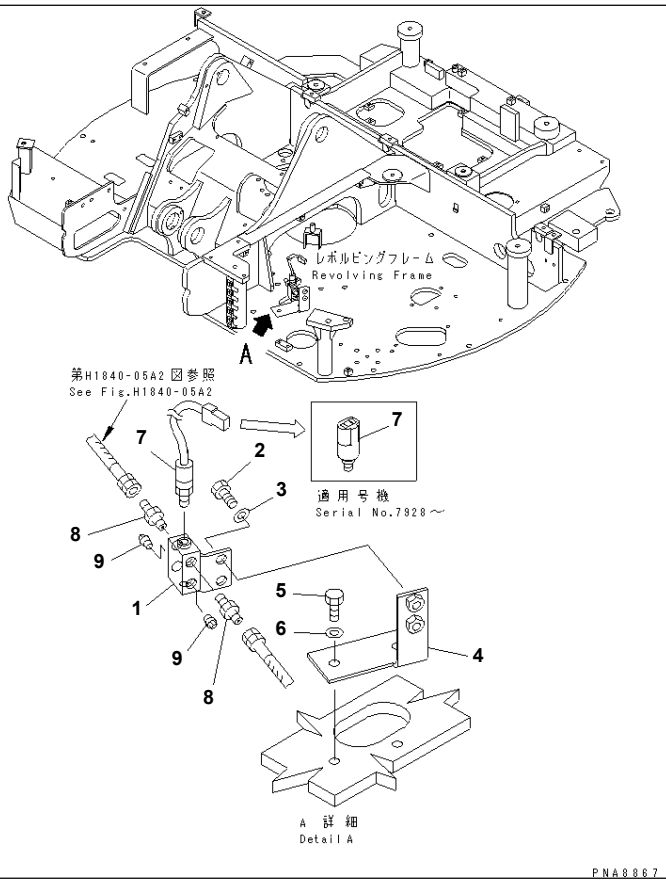


PC75UU-2 S/N 5001-UP

P.P.C MAIN LINE (BLOCK)(#7075-)

Item	Part No.	Description	Qty	Options
1	21X-62-22750	PLATE	1	SN:7075--
2	01010-51020	BOLT	2	SN:7075--
3	01643-31032	WASHER	2	SN:7075--
4	21W-62-27170	PLATE	1	SN:7075--
5	01010-51225	BOLT	2	SN:7075--
6	01643-31232	WASHER	2	SN:7075--
7	20Y-06-21710	SWITCH,PRESSURE	1	SN:7928--
	203-06-56121	SWITCH,PRESSURE	1	SN:7075--7927
8	07238-10210	CONNECTOR	2	SN:7075--
9	07042-30211	PLUG	2	SN:7075--

https://truckmanualshub.com/

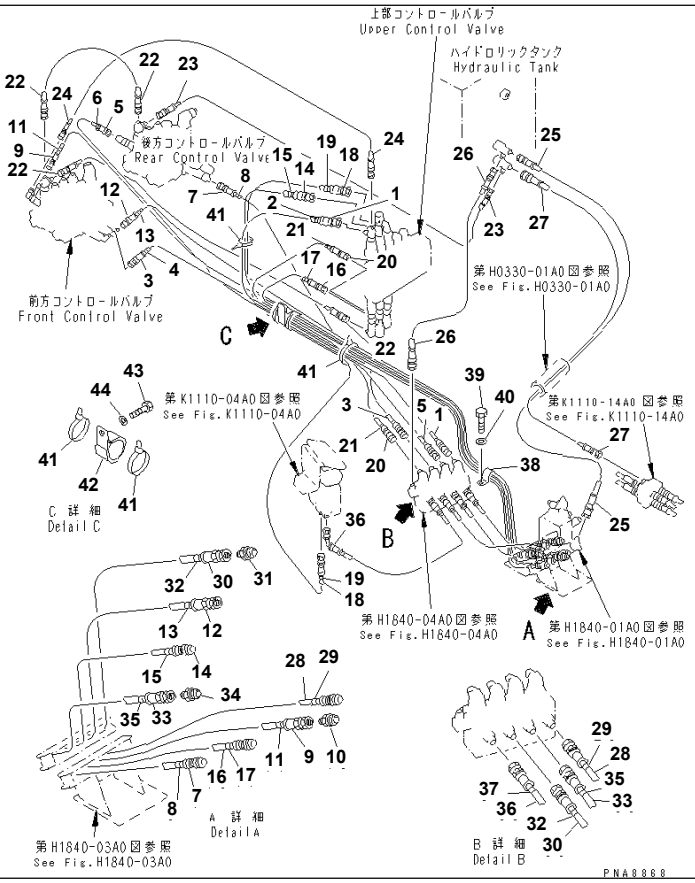

PC75UU-2 S/N 5001-UP

P.P.C MAIN LINE (P.P.C MAIN LINE)


Item	Part No.	Description	Qty	Options
1	21X-62-22210	HOSE	1	SN:5001--
2	203-62-57920	MARK¤ 2	2	SN:5001--
3	21W-62-22531	HOSE¤ 1000MM	1	SN:5001--
4	203-62-57910	MARK¤ 1	2	SN:5001--
5	20U-62-23152	HOSE	1	SN:5001--
6	203-62-57970	MARK¤ 7	2	SN:5001--
7	21W-62-22850	HOSE	1	SN:5001--
8	203-62-57980	MARK¤ 8	2	SN:5001--
9	21W-62-22890	HOSE	1	SN:5001--
10	20U-62-22180	NIPPLE	1	SN:5001--
11	203-62-57940	MARK¤ 4	2	SN:5001--
12	21W-62-22860	HOSE	1	SN:5001--
13	203-62-57930	MARK¤ 3	2	SN:5001--
14	20U-62-23161	HOSE	1	SN:5001--
15	203-62-57950	MARK¤ 5	2	SN:5001--
16	20U-62-25360	HOSE	1	SN:7928--
	21W-62-22880	HOSE	1	SN:5001--7927
17	203-62-57960	MARK¤ 6	2	SN:5001--
18	21W-62-22552	HOSE	1	SN:5001--
19	203-62-58110	MARK¤ 11	2	SN:5001--
20	21W-62-22910	HOSE	1	SN:5001--
21	203-62-57990	MARK¤ 10	2	SN:5001--
22	20U-973-2360	HOSE	2	SN:5001--
23	21W-62-22720	HOSE	1	SN:5001--

https://truckmanualshub.com/

P.P.C MAIN LINE (P.P.C MAIN LINE)

Item	Part No.	Description	Qty	Options
24	21W-62-22870	HOSE	1	SN:5001--
25	21W-62-22730	HOSE	1	SN:5001--
26	21W-62-22840	HOSE	1	SN:5001--
27	21W-62-22581	HOSE	1	SN:5001--
28	20U-62-23730	HOSE	1	SN:5001--
29	203-62-57920	MARK¤ 2	2	SN:5001--
30	20U-62-22270	HOSE	1	SN:5001--
31	20U-62-22180	NIPPLE	1	SN:5001--
32	203-62-57910	MARK¤ 1	2	SN:5001--
33	20U-62-23780	HOSE¤ 330MM	1	SN:5001--
34	20U-62-22180	NIPPLE	1	SN:5001--
35	203-62-57970	MARK¤ 7	2	SN:5001--
36	21W-62-22830	HOSE	1	SN:5001--
37	203-62-57990	MARK¤ 10	2	SN:5001--
38	04434-53211	CLIP	1	SN:5001--
39	01010-51020	BOLT	1	SN:5001--
40	01643-31032	WASHER	1	SN:5001--
41	08034-00823	BAND	5	SN:5001--
42	155-61-15350	CLIP	1	SN:5001--
43	01010-51020	BOLT	1	SN:5001--
44	01643-31032	WASHER	1	SN:5001--

https://truckmanualshub.com/

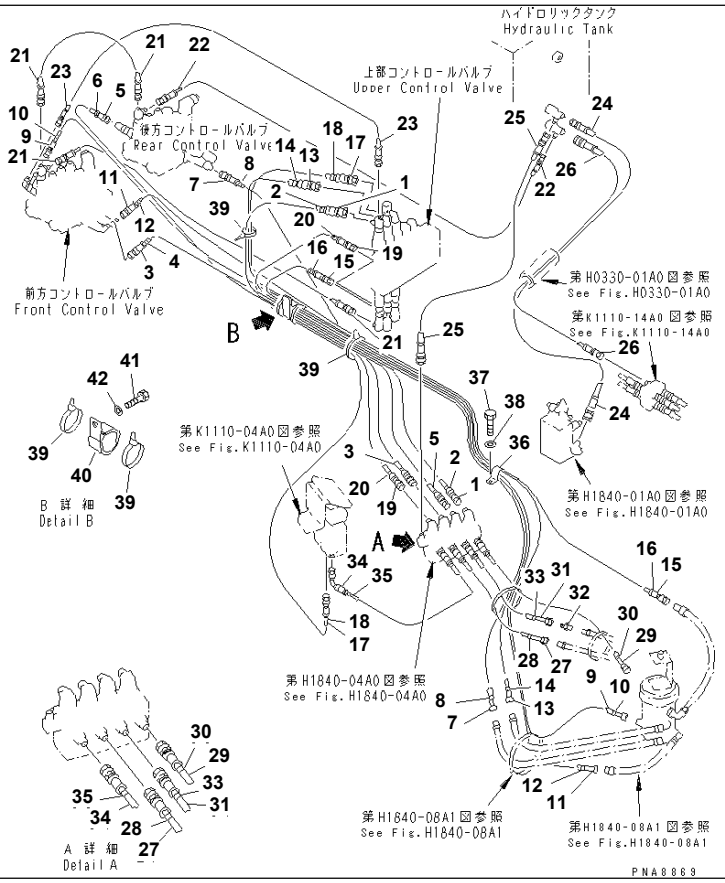

PC75UU-2 S/N 5001-UP


P.P.C MAIN LINE (P.P.C MAIN LINE) (MULTIPLE PATTERN CONTROL)

Item	Part No.	Description	Qty	Options
1	21X-62-22210	HOSE	1	SN:5001--
2	203-62-57920	MARK¤ 2	2	SN:5001--
3	21W-62-22531	HOSE¤ 1000MM	1	SN:5001--
4	203-62-57910	MARK¤ 1	2	SN:5001--
5	20U-62-23152	HOSE	1	SN:5001--
6	203-62-57970	MARK¤ 7	2	SN:5001--
7	21W-62-22850	HOSE	1	SN:5001--
8	203-62-57980	MARK¤ 8	2	SN:5001--
9	21W-62-22890	HOSE	1	SN:5001--
10	203-62-57940	MARK¤ 4	2	SN:5001--
11	21W-62-22860	HOSE	1	SN:5001--
12	203-62-57930	MARK¤ 3	2	SN:5001--
13	20U-62-23161	HOSE	1	SN:5001--
14	203-62-57950	MARK¤ 5	2	SN:5001--
15	20U-62-25360	HOSE	1	SN:7928--
	21W-62-22880	HOSE	1	SN:5001--7927
16	203-62-57960	MARK¤ 6	2	SN:5001--
17	21W-62-22552	HOSE	1	SN:5001--
18	203-62-58110	MARK¤ 11	2	SN:5001--
19	21W-62-22910	HOSE	1	SN:5001--
20	203-62-57990	MARK¤ 10	2	SN:5001--
21	20U-973-2360	HOSE	2	SN:5001--
22	21W-62-22720	HOSE	1	SN:5001--
23	21W-62-22870	HOSE	1	SN:5001--

https://truckmanualshub.com/

P.P.C MAIN LINE (P.P.C MAIN LINE) (MULTIPLE PATTERN CONTROL)

Item	Part No.	Description	Qty	Options
24	21W-62-22730	HOSE	1	SN:5001--
25	21W-62-22840	HOSE	1	SN:5001--
26	21W-62-22581	HOSE	1	SN:5001--
27	20U-62-23730	HOSE	1	SN:5001--
28	203-62-57920	MARK¤ 2	2	SN:5001--
29	20U-62-22270	HOSE	1	SN:5001--
30	203-62-57910	MARK¤ 1	2	SN:5001--
31	20U-62-23780	HOSE¤ 330MM	1	SN:5001--
32	20U-62-22180	NIPPLE	1	SN:5001--
33	203-62-57970	MARK¤ 7	2	SN:5001--
34	21W-62-22830	HOSE	1	SN:5001--
35	203-62-57990	MARK¤ 10	2	SN:5001--
36	04434-53211	CLIP	1	SN:5001--
37	01010-51020	BOLT	1	SN:5001--
38	01643-31032	WASHER	1	SN:5001--
39	08034-00823	BAND	5	SN:5001--
40	155-61-15350	CLIP	1	SN:5001--
41	01010-51020	BOLT	1	SN:5001--
42	01643-31032	WASHER	1	SN:5001--

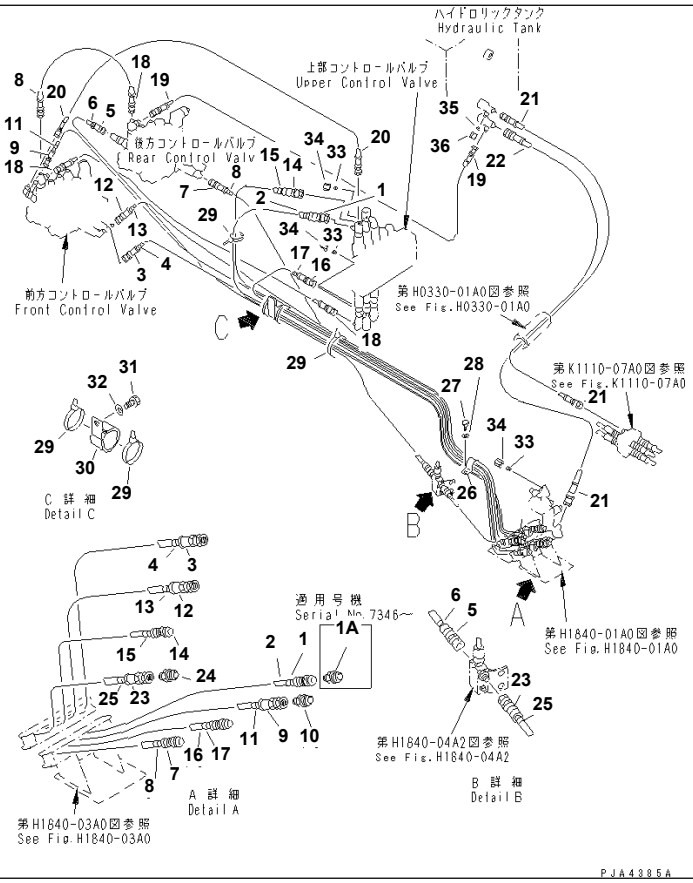

PC75UU-2 S/N 5001-UP

P.P.C MAIN LINE (P.P.C MAIN LINE)(#7075-)


Item	Part No.	Description	Qty	Options
1	21W-973-2240	HOSE	1	SN:7346--
	20U-62-24140	HOSE	1	SN:7075--7345
1A	20U-62-22180	NIPPLE	1	SN:7346--
2	203-62-57920	MARK¤ 2	2	SN:7075--
3	21W-62-22850	HOSE	1	SN:7075--
4	203-62-57910	MARK¤ 1	2	SN:7075--
5	20U-62-23152	HOSE	1	SN:7075--
6	203-62-57970	MARK¤ 7	2	SN:7075--
7	21W-62-22850	HOSE	1	SN:7075--
8	203-62-57980	MARK¤ 8	2	SN:7075--
9	21W-62-22890	HOSE	1	SN:7075--
10	20U-62-22180	NIPPLE	1	SN:7075--
11	203-62-57940	MARK¤ 4	2	SN:7075--
12	21W-62-22860	HOSE	1	SN:7075--
13	203-62-57930	MARK¤ 3	2	SN:7075--
14	20U-62-23161	HOSE	1	SN:7075--
15	203-62-57950	MARK¤ 5	2	SN:7075--
16	20U-62-25360	HOSE	1	SN:7928--
	21W-62-22880	HOSE	1	SN:7075--7927
17	203-62-57960	MARK¤ 6	2	SN:7075--
18	20U-973-2360	HOSE	2	SN:7075--
19	21W-62-22720	HOSE	1	SN:7075--
20	21W-62-22870	HOSE	1	SN:7075--
21	21W-62-22730	HOSE	1	SN:7075--

https://truckmanualshub.com/

P.P.C MAIN LINE (P.P.C MAIN LINE)(#7075-)

Item	Part No.	Description	Qty	Options
22	21W-62-22581	HOSE	1	SN:7075--
23	20U-62-23780	HOSE¤ 330MM	1	SN:7075--
24	20U-62-22180	NIPPLE	1	SN:7075--
25	203-62-57970	MARK¤ 7	2	SN:7075--
26	04434-53211	CLIP	1	SN:7075--
27	01010-51020	BOLT	1	SN:7075--
28	01643-31032	WASHER	1	SN:7075--
29	08034-00823	BAND	5	SN:7075--
30	155-61-15350	CLIP	1	SN:7075--
31	01010-51020	BOLT	1	SN:7075--
32	01643-31032	WASHER	1	SN:7075--
33	07222-00210	PLUG	3	SN:7075--
34	07221-20210	NUT	3	SN:7075--
35	07222-00312	PLUG	1	SN:7075--
36	07221-20315	NUT	1	SN:7075--

https://truckmanualshub.com/

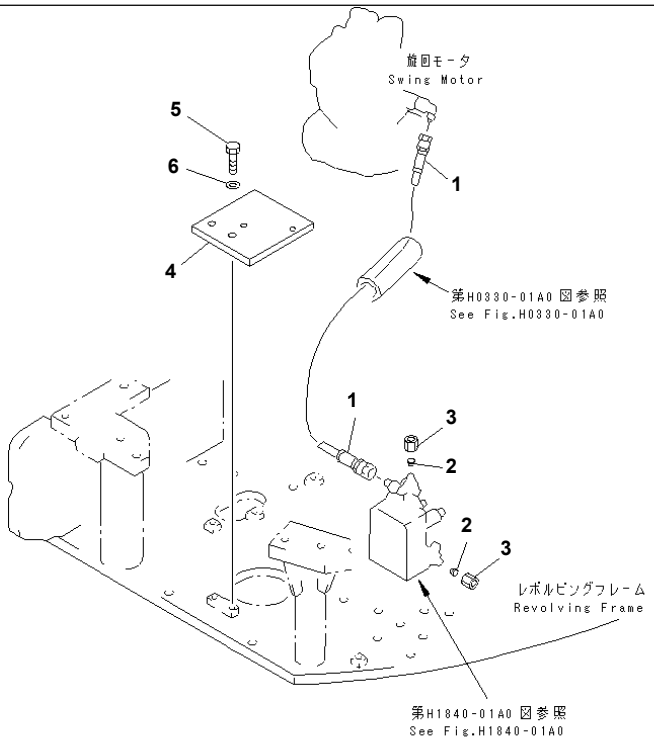


PSA9591

PC75UU-2 S/N 5001-UP

P.P.C MAIN LINE (SWING BRAKE LINE AND DECEL MOTOR MOUNT)

Item	Part No.	Description	Qty	Options
1	20U-62-23122	HOSE	1	SN:7928--
	20U-62-23690	HOSE¤ 1050MM	1	SN:5001--7927
2	07222-00210	PLUG,(FOR ATTACHMENT LINE LESS)	2	SN:5001--
3	07221-20210	NUT,(FOR ATTACHMENT LINE LESS)	2	SN:5001--
4	21W-60-22350	BRACKET	1	SN:10371--
5	01010-51030	BOLT	2	SN:10371--
6	01643-31032	WASHER	2	SN:10371--

https://truckmanualshub.com/

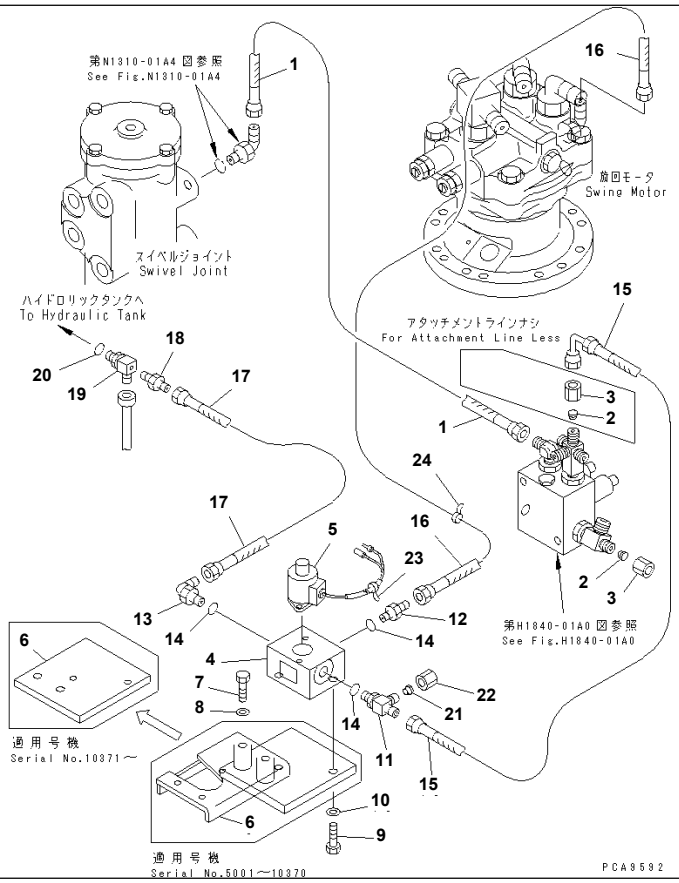

PC75UU-2 S/N 5001-UP

P.P.C MAIN LINE (ADDITIONAL SOLENOID VALVE) (SECOND TRAVEL SPEC.)


Item	Part No.	Description	Qty	Options
1	21W-62-22910	HOSE	1	SN:5001--
2	07222-00210	PLUG,(FOR ATTACHMENT LINE LESS)	2	SN:5001--
3	07221-20210	NUT,(FOR ATTACHMENT LINE LESS)	2	SN:5001--
4	21W-60-22310	VALVE ASS'Y,ADDITIONAL SOLENOID	1	SN:5001--
5	21W-60-22190	· SOLENOID	1	SN:5001--
6	21W-60-22350	BRACKET	1	SN:10371--
	21W-60-22320	BRACKET	1	SN:5001--10370
7	01010-51030	BOLT	2	SN:10371--
	01010-51060	BOLT	2	SN:5001--10370
8	01643-31032	WASHER	2	SN:5001--
9	01010-50825	BOLT	2	SN:5001--
10	01643-30823	WASHER	2	SN:5001--
11	208-62-17550	TEE	1	SN:5001--
12	07230-20210	UNION	1	SN:5001--
13	07235-10210	ELBOW	1	SN:5001--
14	07002-01423	O-RING	3	SN:5001--
15	21W-62-22870	HOSE	1	SN:5001--
16	20U-62-23152	HOSE	1	SN:7964--
	20U-62-23670	HOSE¤ 1200MM	1	SN:5001--7963
17	21W-62-22890	HOSE	1	SN:5001--
18	208-06-11220	NIPPLE	1	SN:5001--
19	07235-50315	ELBOW	1	SN:5001--
20	07002-02034	O-RING	1	SN:5001--
21	07222-00210	PLUG	1	SN:5001--

https://truckmanualshub.com/

P.P.C MAIN LINE (ADDITIONAL SOLENOID VALVE) (SECOND TRAVEL SPEC.)

Item	Part No.	Description	Qty	Options
22	07221-20210	NUT	1	SN:5001--
23	08034-30521	BAND	1	SN:10371--
24	08034-00414	BAND	1	SN:10371--

https://truckmanualshub.com/

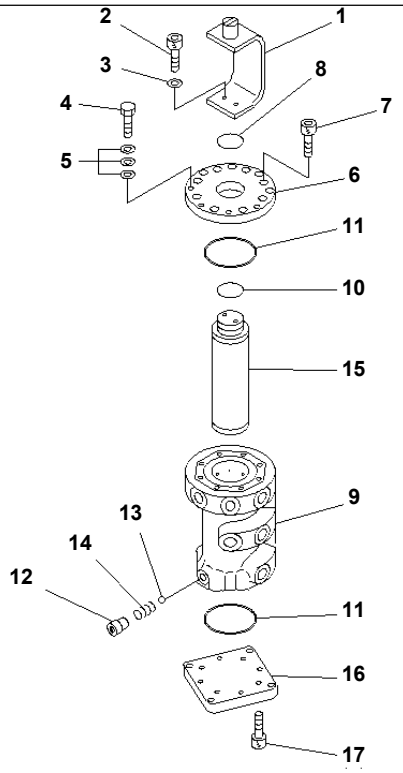


PNA1664

PC75UU-2 S/N 5001-UP

P.P.C MAIN LINE (4-WAY VALVE) (MULTIPLE PATTERN CONTROL)

Item	Part No.	Description	Qty	Options
	20U-62-23701	VALVE ASS'Y	1	SN:9092--
	20U-62-23700	VALVE ASS'Y	1	SN:5001--9091
1	20U-62-23751	· LEVER	1	SN:9092--
	20U-62-23750	· LEVER	1	SN:5001--9091
2	01252-30616	· BOLT	2	SN:5001--
3	01643-30623	· WASHER	2	SN:5001--
4	01010-50625	· BOLT	2	SN:5001--
5	01643-30623	· WASHER	6	SN:5001--
6	203-62-59230	· COVER	1	SN:9092--
	203-62-58430	· COVER	1	SN:5001--9091
7	01252-30616	· BOLT	8	SN:5001--
8	07000-03035	· O-RING	1	SN:5001--
9	☆	· BODY	1	SN:5001--
10	07000-03028	· O-RING	1	SN:5001--
11	07000-02060	· O-RING	2	SN:5001--
12	07043-00108	· PLUG	1	SN:5001--
13	04260-00793	· BALL	1	SN:5001--
14	236-10-12240	· SPRING	1	SN:5001--
15	☆	· SHAFT	1	SN:5001--
16	203-62-58980	· COVER	1	SN:5001--
17	01252-30616	· BOLT	8	SN:5001--

Ref. H1840-07A1 Page 150320

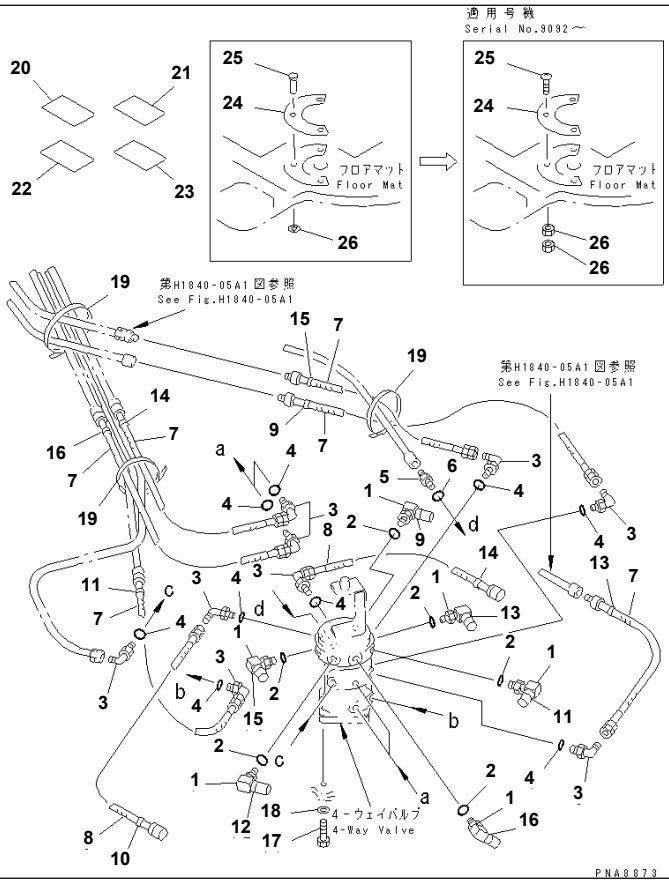

PC75UU-2 S/N 5001-UP

P.P.C MAIN LINE (4-WAY VALVE PIPING) (MULTIPLE PATTERN CONTROL)


Item	Part No.	Description	Qty	Options
1	20U-62-23770	ELBOW	6	SN:5001--
2	07002-01423	O-RING	6	SN:5001--
3	07235-10210	ELBOW	9	SN:5001--
4	07002-01423	O-RING	9	SN:5001--
5	07230-20210	UNION	1	SN:5001--
6	07002-01423	O-RING	1	SN:5001--
7	21X-62-22270	HOSE¤ 250MM	6	SN:5001--
	20U-62-22190	· O-RING	1	SN:5001--
8	20U-62-23421	HOSE	2	SN:5001--
9	203-62-57910	MARK¤ 1	2	SN:5001--
10	203-62-57920	MARK¤ 2	1	SN:5001--
11	203-62-57930	MARK¤ 3	2	SN:5001--
12	203-62-57940	MARK¤ 4	1	SN:5001--
13	203-62-57950	MARK¤ 5	2	SN:5001--
14	203-62-57960	MARK¤ 6	2	SN:5001--
15	203-62-57970	MARK¤ 7	2	SN:5001--
16	203-62-57980	MARK¤ 8	2	SN:5001--
17	01010-51040	BOLT	4	SN:5001--
18	01643-31032	WASHER	4	SN:5001--
19	08034-00823	BAND	6	SN:5001--
20	20Y-00-11310	PLATE¤ OPERATING,KOMATSU PATTERN	1	SN:5001--
21	203-916-5130	PLATE¤ OPERATING,MITSUBISHI PATTERN	1	SN:5001--
22	203-916-5150	PLATE¤ OPERATING,SINKOU PATTERN	1	SN:5001--
23	203-916-5730	PLATE¤ OPERATING,ISO PATTERN	1	SN:5001--

https://truckmanualshub.com/

P.P.C MAIN LINE (4-WAY VALVE PIPING) (MULTIPLE PATTERN CONTROL)

Item	Part No.	Description	Qty	Options
24	20U-54-23371	PLATE¤ OPERATING,MULTIPLE PATTERN	1	SN:9092--
	20U-54-23370	PLATE¤ OPERATING,MULTIPLE PATTERN	1	SN:5001--9091
25	01023-60314	SCREW	3	SN:9092--
	04411-00310	RIVET	3	SN:5001--9091
26	01580-10302	NUT	6	SN:9092--
	20U-54-23380	NUT	3	SN:5001--9091

https://truckmanualshub.com/

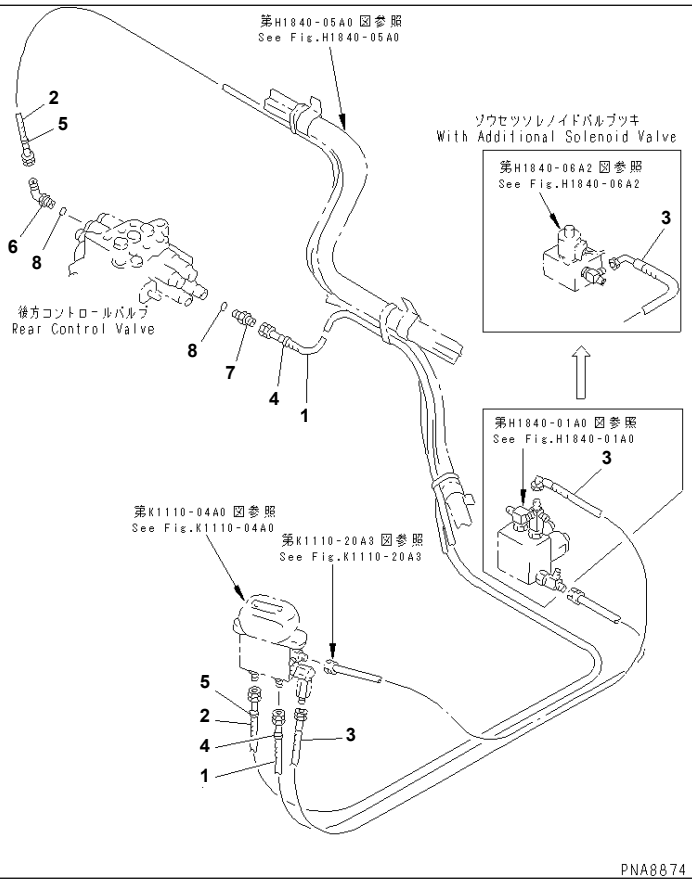


PC75UU-2 S/N 5001-UP

P.P.C MAIN LINE (ATTACHMENT LINE) (TELESCOPIC ARM AND ATTACHMENT)

Item	Part No.	Description	Qty	Options
1	21W-973-2240	HOSE	1	SN:5001--
2	21W-973-2250	HOSE	1	SN:5001--
3	21W-62-22870	HOSE	1	SN:5001--
4	203-62-58120	MARK¤ 12	2	SN:5001--
5	203-62-58130	MARK¤ 13	2	SN:5001--
6	07235-10210	ELBOW	1	SN:5001--
7	07230-20210	UNION	1	SN:5001--
8	07002-01423	O-RING	2	SN:5001--

Ref. H1840-09A3 Page 150340

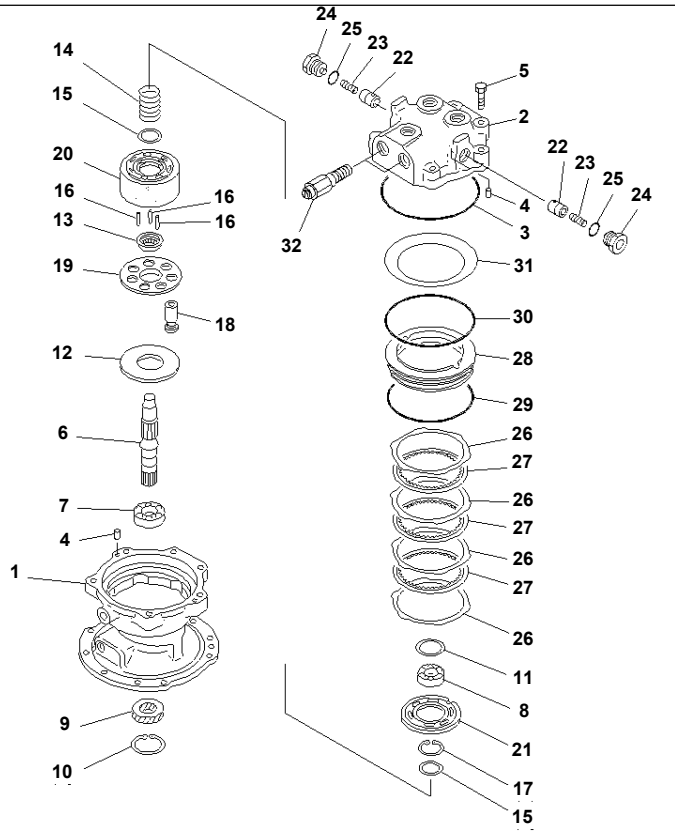

SWING MOTOR (1/2)(#5001-7927)

Item	Part No.	Description	Qty	Options
	708-7T-00230	SWING MOTOR ASS'Y	1	SN:5001--7927
1	(★708-7T-51130)	· CASE	1	SN:5001--7927
2	(★708-7T-51510)	· COVER,END	1	SN:5001--7927
3	(★708-7T-51210)	· O-RING	1	SN:5001--@
4	(★720-68-19610)	· PIN	3	SN:5001--@
5	(★01010-51045)	· BOLT	6	SN:5001--7927
6	(★708-7T-52120)	· SHAFT	1	SN:5001--@
7	(★708-7T-12240)	· BEARING	1	SN:5001--@
8	(★708-7T-12250)	· BEARING	1	SN:5001--@
9	708-7T-12230	· SEAL,OIL	1	SN:5001--@
10	04065-04518	· RING,SNAP	1	SN:5001--@
11	(★708-7T-05020)	· SPACER KIT	1	SN:5001--@
	☆	· · SPACER¤ 1.6MM	1	SN:5001--@
	☆	· · SPACER¤ 1.7MM	1	SN:5001--@
	☆	· · SPACER¤ 1.8MM	1	SN:5001--@
	☆	· · SPACER¤ 1.9MM	1	SN:5001--@
	☆	· · SPACER¤ 2.0MM	1	SN:5001--@
	☆	· · SPACER¤ 2.1MM	1	SN:5001--@
	☆	· · SPACER¤ 2.2MM	1	SN:5001--@
12	(★708-7T-53420)	· PLATE,THRUST	1	SN:5001--7927
13	(★708-7T-53511)	· GUIDE,RETAINER	1	SN:5001--7927
14	(★708-7T-13560)	· SPRING	1	SN:5001--7927
15	(★708-7T-13530)	· WASHER	2	SN:5001--@


https://truckmanualshub.com/

SWING MOTOR (1/2)(#5001-7927)

Item	Part No.	Description	Qty	Options
16	(★708-7T-13540)	· PIN	3	SN:5001--@
17	(★04065-03815)	· RING,SNAP	1	SN:5001--@
18	(★708-7T-53350)	· PISTON SUB ASS'Y	7	SN:5001--7927
19	(★708-7T-13342)	· RETAINER,SHOE	1	SN:5001--@
20	(★708-7T-53130)	· BLOCK,CYLINDER	1	SN:5001--7927
21	(★708-7T-53212)	· PLATE,VALVE	1	SN:5001--7927
22	706-73-72420	· VALVE	2	SN:5001--@
23	706-73-72440	· SPRING	2	SN:5001--@
24	706-73-72430	· PLUG	2	SN:5001--@
25	07002-12434	· O-RING	2	SN:5001--@
26	(★708-7T-52512)	· PLATE	4	SN:5001--7927
27	(★708-7T-52520)	· DISC	3	SN:5001--7927
28	(★708-7T-55140)	· PISTON,BRAKE	1	SN:5001--7927
29	(★07000-12130)	· O-RING	1	SN:5001--@
30	(★708-7T-55220)	· O-RING	1	SN:5001--@
31	(★708-7T-55150)	· SPRING	1	SN:5001--7927
32	(702-73-04100)	· RELIEF VALVE ASS'Y	2	SN:5001--@

https://truckmanualshub.com/

スイング モータ (2/2)
FIG. Y0640-02A0 SWING MOTOR (2/2) (#5001-7927)

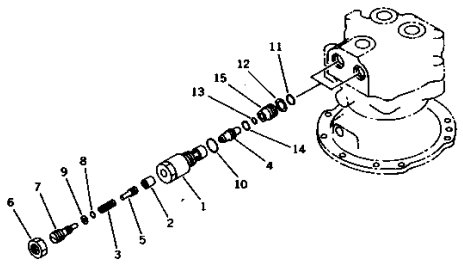

PC75 AVANCE UU


PC75UU-2 S/N 5001-UP

SWING MOTOR (2/2)(#5001-7927)

Item	Part No.	Description	Qty	Options
	(708-7T-00230)	SWING MOTOR ASS'Y	1	SN:5001--7927
	702-73-04100	· RELIEF VALVE ASS'Y	2	SN:5001--@
1	☆	· · SLEEVE	1	SN:5001--@
2	☆	· · VALVE	1	SN:5001--@
3	☆	· · SPRING	1	SN:5001--@
4	☆	· · SEAT	1	SN:5001--@
5	☆	· · PISTON	1	SN:5001--@
6	☆	· · NUT	1	SN:5001--@
7	☆	· · SCREW	1	SN:5001--@
8	☆	· · O-RING	1	SN:5001--@
9	☆	· · RING,BACK-UP	1	SN:5001--@
10	07002-12434	· · O-RING	1	SN:5001--@
11	07000-22016	· · O-RING	1	SN:5001--@
12	07001-02016	· · RING,BACK-UP	1	SN:5001--@
13	☆	· · SEAL	1	SN:5001--@
14	☆	· · SEAL	1	SN:5001--@
15	☆	· · PLUG	1	SN:5001--@

https://truckmanualshub.com/

スイング モータ (2/2)
FIG. Y0640-02A0A SWING MOTOR (2/2) (#7928-)

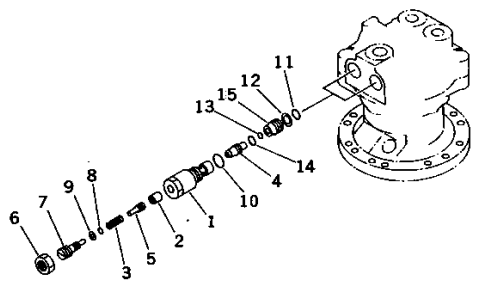


PC75 AVANCE UU

PC75UU-2 S/N 5001-UP
SWING MOTOR (2/2)(#7928-)

Item	Part No.	Description	Qty	Options
	(708-7T-00251)	SWING MOTOR ASS'Y	1	SN:10371--
	(708-7T-00250)	SWING MOTOR ASS'Y	1	SN:7928--10370
THESE ASSEMBLIES CONSIST OF ALL PARTS SHOWN IN FIGS.Y0640-01A0 AND Y0640-02A0.				
	702-73-04100	· RELIEF VALVE ASS'Y	2	SN:5001--
1	☆	· · SLEEVE	1	SN:5001--
2	☆	· · VALVE	1	SN:5001--
3	☆	· · SPRING	1	SN:5001--
4	☆	· · SEAT	1	SN:5001--
5	☆	· · PISTON	1	SN:5001--
6	☆	· · NUT	1	SN:5001--
7	☆	· · SCREW	1	SN:5001--
8	☆	· · O-RING	1	SN:5001--
9	☆	· · RING,BACK-UP	1	SN:5001--
10	07002-12434	· · O-RING	1	SN:5001--
11	07000-22016	· · O-RING	1	SN:5001--
12	07001-02016	· · RING,BACK-UP	1	SN:5001--
13	☆	· · SEAL	1	SN:5001--
14	☆	· · SEAL	1	SN:5001--
15	☆	· · PLUG	1	SN:5001--

https://truckmanualshub.com/

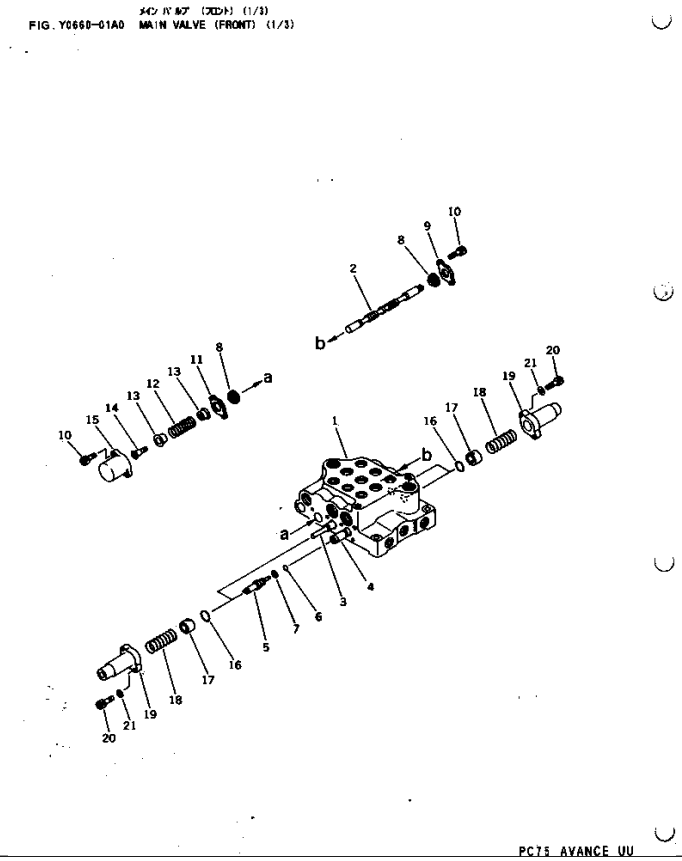

PC75UU-2 S/N 5001-UP

MAIN VALVE (FRONT) (1/3)

Item	Part No.	Description	Qty	Options
	709-23-13602	VALVE ASS'Y	1	SN:10371--
	709-23-13601	VALVE ASS'Y	1	SN:5001--10370
THESE ASSEMBLIES CONSIST OF ALL PARTS SHOWN IN FIGS.Y0660-01A0 TO Y0660-03A0.				
1	☆	· BODY,VALVE	1	SN:5001--
2	☆	· SPOOL	1	SN:10371--
	☆	· SPOOL	1	SN:5001--10370
3	☆	· SPOOL	1	SN:5001--
4	☆	· SPOOL	1	SN:5001--
5	709-26-11410	· JOINT	1	SN:5001--
6	07000-11003	· O-RING	1	SN:5001--
7	07001-01003	· RING,BACK-UP	1	SN:5001--
8	709-25-11290	· SEAL	2	SN:5001--
9	709-25-11320	· PLATE	1	SN:5001--
10	01252-30616	· BOLT	4	SN:5001--
11	709-25-11310	· PLATE	1	SN:5001--
12	700-23-13130	· SPRING	1	SN:5001--
13	700-22-11291	· RETAINER	2	SN:5001--
14	700-22-11321	· PLUG	1	SN:5001--
15	700-22-11332	· COVER	1	SN:5001--
16	07000-03022	· O-RING	4	SN:5001--
17	709-26-11420	· RETAINER	4	SN:5001--
18	709-26-11450	· SPRING	4	SN:5001--
19	709-23-11211	· CASE	4	SN:5001--
20	01252-30620	· BOLT	8	SN:5001--


https://truckmanualshub.com/

MAIN VALVE (FRONT) (1/3)

Item	Part No.	Description	Qty	Options
21	01641-20608	· WASHER	8	SN:5001--

https://truckmanualshub.com/


FIG. Y0660-02A0 MAIN VALVE (FRONT) (2/3)

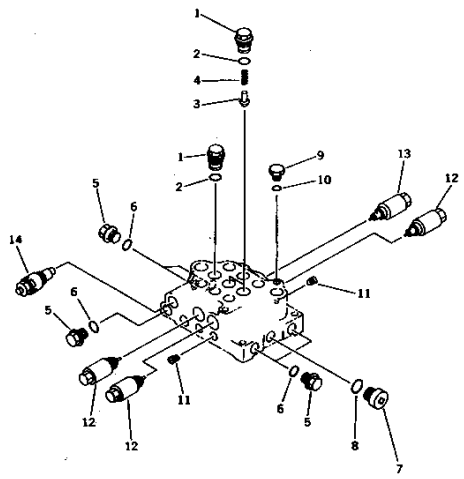

PC75 AVANCE UU

PC75UU-2 S/N 5001-UP
MAIN VALVE (FRONT) (2/3)

Item	Part No.	Description	Qty	Options
	(709-23-13602)	VALVE ASS'Y	1	SN:10371--
	(709-23-13601)	VALVE ASS'Y	1	SN:5001--10370
THESE ASSEMBLIES CONSIST OF ALL PARTS SHOWN IN FIGS.Y0660-01A0 TO Y0660-03A0.				
1	709-25-11640	· PLUG	3	SN:5001--
2	07000-12020	· O-RING	3	SN:5001--
3	709-25-11650	· VALVE,CHECK	2	SN:5001--
4	709-25-11361	· SPRING	2	SN:5001--
5	708-7B-16570	· PLUG	5	SN:5001--
6	07002-12034	· O-RING	5	SN:5001--
7	07040-13016	· PLUG	1	SN:5001--
8	07002-03034	· O-RING	1	SN:5001--
9	07040-11409	· PLUG	1	SN:5001--
10	07002-01423	· O-RING	1	SN:5001--
11	07043-70108	· PLUG	2	SN:5001--
12	(709-20-62100)	· VALVE ASS'Y,SUCTION AND SAFETY	3	SN:5001--
13	(709-20-61201)	· VALVE ASS'Y,SUCTION AND SAFETY	1	SN:5001--
14	(709-20-52300)	· VALVE ASS'Y,RELIEF	1	SN:5001--

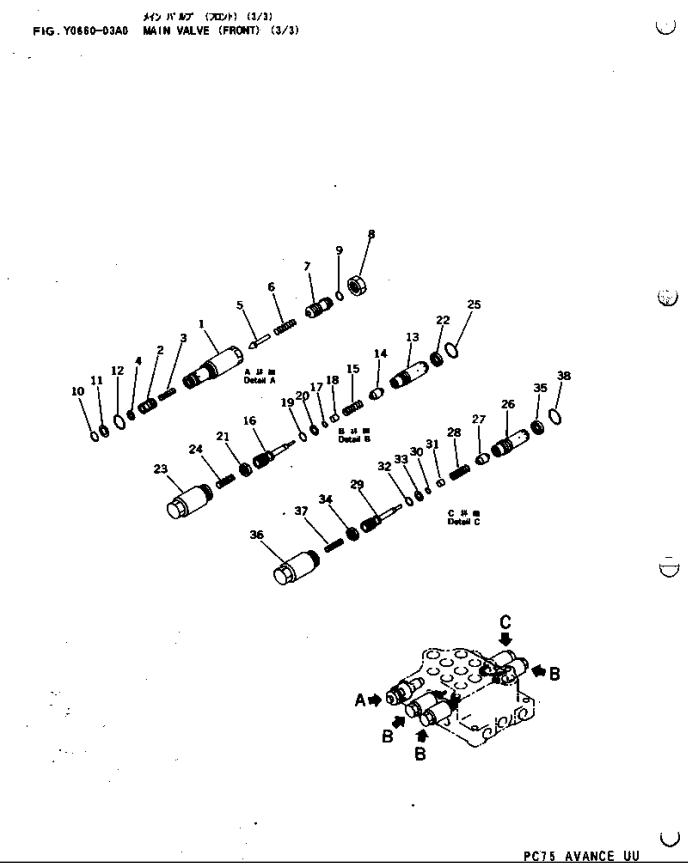

PC75UU-2 S/N 5001-UP
MAIN VALVE (FRONT) (3/3)

Item	Part No.	Description	Qty	Options
	(709-23-13602)	VALVE ASS'Y	1	SN:10371--
	(709-23-13601)	VALVE ASS'Y	1	SN:5001--10370
THESE ASSEMBLIES CONSIST OF ALL PARTS SHOWN IN FIGS.Y0660-01A0 TO Y0660-03A0.				
	709-20-52300	· VALVE ASS'Y,RELIEF	1	SN:5001--
1	☆	· · SLEEVE	1	SN:5001--
2	☆	· · VALVE	1	SN:5001--
3	☆	· · SPRING	1	SN:5001--
4	☆	· · RING	1	SN:5001--
5	☆	· · POPPET	1	SN:5001--
6	☆	· · SPRING	1	SN:5001--
7	☆	· · SCREW	1	SN:5001--
8	☆	· · NUT	1	SN:5001--
9	☆	· · O-RING	1	SN:5001--
10	700-22-11410	· · O-RING	1	SN:5001--
11	700-80-64220	· · RING,BACK-UP	1	SN:5001--
12	07002-02434	· · O-RING	1	SN:5001--
	709-20-62100	· VALVE ASS'Y,SUCTION AND SAFETY	3	SN:5001--
13	☆	· · VALVE	1	SN:5001--
14	☆	· · POPPET	1	SN:5001--
15	☆	· · SPRING	1	SN:5001--
16	☆	· · PISTON	1	SN:5001--
17	☆	· · O-RING	1	SN:5001--
18	☆	· · SEAL	1	SN:5001--
19	☆	· · O-RING	1	SN:5001--


https://truckmanualshub.com/

MAIN VALVE (FRONT) (3/3)

Item	Part No.	Description	Qty	Options
20	☆	· · RING,BACK-UP	1	SN:5001--
21	☆	· · NUT	1	SN:5001--
22	☆	· · SEAL	1	SN:5001--
23	☆	· · SLEEVE	1	SN:5001--
24	☆	· · SPRING	1	SN:5001--
25	709-25-11390	· · O-RING	1	SN:5001--
	709-20-61201	· VALVE ASS'Y,SUCTION AND SAFETY	1	SN:5001--
26	☆	· · VALVE	1	SN:5001--
27	☆	· · POPPET	1	SN:5001--
28	☆	· · SPRING	1	SN:5001--
29	☆	· · PISTON	1	SN:5001--
30	☆	· · O-RING	1	SN:5001--
31	☆	· · SEAL	1	SN:5001--
32	☆	· · O-RING	1	SN:5001--
33	☆	· · RING,BACK-UP	1	SN:5001--
34	☆	· · NUT	1	SN:5001--
35	☆	· · SEAL	1	SN:5001--
36	☆	· · SLEEVE	1	SN:5001--
37	☆	· · SPRING	1	SN:5001--
38	709-25-11390	· · O-RING	1	SN:5001--

https://truckmanualshub.com/

メイン バルブ (リヤー) (1/3)
FIG. Y0660-21A0 MAIN VALVE (REAR) (1/3)

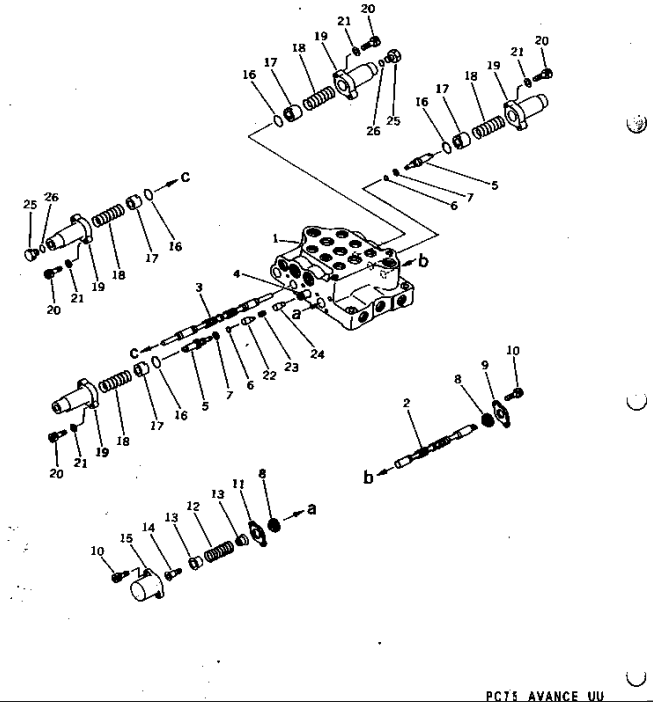

Ref. Y0660-21A0 Page 450090

PC75UU-2 S/N 5001-UP

MAIN VALVE (REAR) (1/3)

Item	Part No.	Description	Qty	Options
	709-23-13502	VALVE ASS'Y	1	SN:10371--
	709-23-13501	VALVE ASS'Y	1	SN:5001--10370
THESE ASSEMBLIES CONSIST OF ALL PARTS SHOWN IN FIGS.Y0660-21A0 TO Y0660-23A0.				
1	☆	· BODY,VALVE	1	SN:5001--
2	☆	· SPOOL	1	SN:10371--
	☆	· SPOOL	1	SN:5001--10370
3	☆	· SPOOL	1	SN:5001--
4	☆	· SPOOL	1	SN:5001--
5	709-26-11410	· JOINT	2	SN:5001--
6	07000-11003	· O-RING	2	SN:5001--
7	07001-01003	· RING,BACK-UP	2	SN:5001--
8	709-25-11290	· SEAL	2	SN:5001--
9	709-25-11320	· PLATE	1	SN:5001--
10	01252-30616	· BOLT	4	SN:5001--
11	709-25-11310	· PLATE	1	SN:5001--
12	700-23-13130	· SPRING	1	SN:5001--
13	700-22-11291	· RETAINER	2	SN:5001--
14	700-22-11321	· PLUG	1	SN:5001--
15	700-22-11332	· COVER	1	SN:5001--
16	07000-03022	· O-RING	4	SN:5001--
17	709-26-11420	· RETAINER	4	SN:5001--
18	709-26-11450	· SPRING	4	SN:5001--
19	709-23-11211	· CASE	4	SN:5001--
20	01252-30620	· BOLT	8	SN:5001--


https://truckmanualshub.com/

MAIN VALVE (REAR) (1/3)

Item	Part No.	Description	Qty	Options
21	01641-20608	· WASHER	8	SN:5001--
22	709-23-11230	· PIN	1	SN:5001--
23	709-23-11240	· SPRING	1	SN:5001--
24	709-23-11250	· VALVE	1	SN:5001--
25	07040-11409	· PLUG	2	SN:5001--
26	07002-01423	· O-RING	2	SN:5001--

https://truckmanualshub.com/

メイン バルブ (リヤー) (2/3)
FIG. Y0660-22A0 MAIN VALVE (REAR) (2/3)

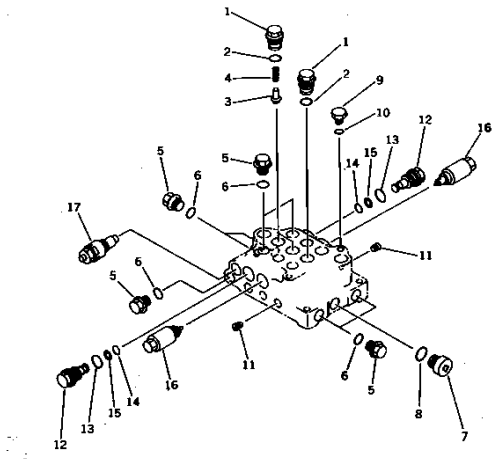

PC75UU-2 S/N 5001-UP


MAIN VALVE (REAR) (2/3)

Item	Part No.	Description	Qty	Options
	(709-23-13502)	VALVE ASS'Y	1	SN:10371--
	(709-23-13501)	VALVE ASS'Y	1	SN:5001--10370
THESE ASSEMBLIES CONSIST OF ALL PARTS SHOWN IN FIGS.Y0660-21A0 TO Y0660-23A0.				
1	709-25-11640	· PLUG	3	SN:5001--
2	07000-12020	· O-RING	3	SN:5001--
3	709-25-11650	· VALVE,CHECK	2	SN:5001--
4	709-25-11361	· SPRING	2	SN:5001--
5	708-7B-16570	· PLUG	7	SN:5001--
6	07002-12034	· O-RING	7	SN:5001--
7	07040-13016	· PLUG	1	SN:5001--
8	07002-03034	· O-RING	1	SN:5001--
9	07040-11409	· PLUG	1	SN:5001--
10	07002-01423	· O-RING	1	SN:5001--
11	07043-70108	· PLUG	2	SN:5001--
12	709-25-11380	· PLUG	2	SN:5001--
13	709-25-11390	· O-RING	2	SN:5001--
14	07000-12010	· O-RING	2	SN:5001--
15	709-23-11290	· RING	2	SN:5001--
16	(709-20-62100)	· VALVE ASS'Y,SUCTION AND SAFETY	2	SN:5001--
17	(709-20-52300)	· VALVE ASS'Y,RELIEF	1	SN:5001--

Ref. Y0660-22A0 Page 450100

https://truckmanualshub.com/

メイン バルブ (リヤ-) (3/3)
FIG. Y0660-23A0 MAIN VALVE (REAR) (3/3)

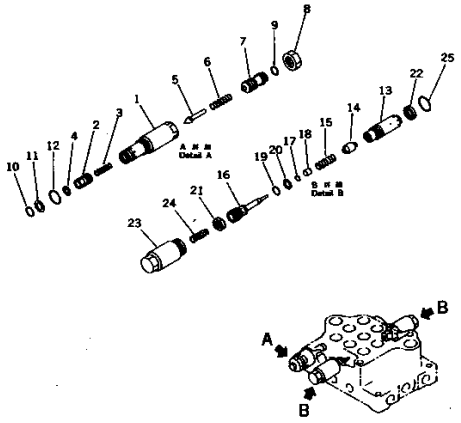

PC75 AVANCE UU

PC75UU-2 S/N 5001-UP

MAIN VALVE (REAR) (3/3)


Item	Part No.	Description	Qty	Options
	(709-23-13502)	VALVE ASS'Y	1	SN:10371--
	(709-23-13501)	VALVE ASS'Y	1	SN:5001--10370
THESE ASSEMBLIES CONSIST OF ALL PARTS SHOWN IN FIGS.Y0660-21A0 TO Y0660-23A0.				
	709-20-52300	· VALVE ASS'Y,RELIEF	1	SN:5001--
1	☆	· · SLEEVE	1	SN:5001--
2	☆	· · VALVE	1	SN:5001--
3	☆	· · SPRING	1	SN:5001--
4	☆	· · RING	1	SN:5001--
5	☆	· · POPPET	1	SN:5001--
6	☆	· · SPRING	1	SN:5001--
7	☆	· · SCREW	1	SN:5001--
8	☆	· · NUT	1	SN:5001--
9	☆	· · O-RING	1	SN:5001--
10	700-22-11410	· · O-RING	1	SN:5001--
11	700-80-64220	· · RING,BACK-UP	1	SN:5001--
12	07002-02434	· · O-RING	1	SN:5001--
	709-20-62100	· VALVE ASS'Y,SUCTION AND SAFETY	2	SN:5001--
13	☆	· · VALVE	1	SN:5001--
14	☆	· · POPPET	1	SN:5001--
15	☆	· · SPRING	1	SN:5001--
16	☆	· · PISTON	1	SN:5001--
17	☆	· · O-RING	1	SN:5001--
18	☆	· · SEAL	1	SN:5001--
19	☆	· · O-RING	1	SN:5001--

https://truckmanualshub.com/

MAIN VALVE (REAR) (3/3)

Item	Part No.	Description	Qty	Options
20	☆	・・ RING,BACK-UP	1	SN:5001--
21	☆	・・ NUT	1	SN:5001--
22	☆	・・ SEAL	1	SN:5001--
23	☆	・・ SLEEVE	1	SN:5001--
24	☆	・・ SPRING	1	SN:5001--
25	709-25-11390	・・ O-RING	1	SN:5001--

https://truckmanualshub.com/

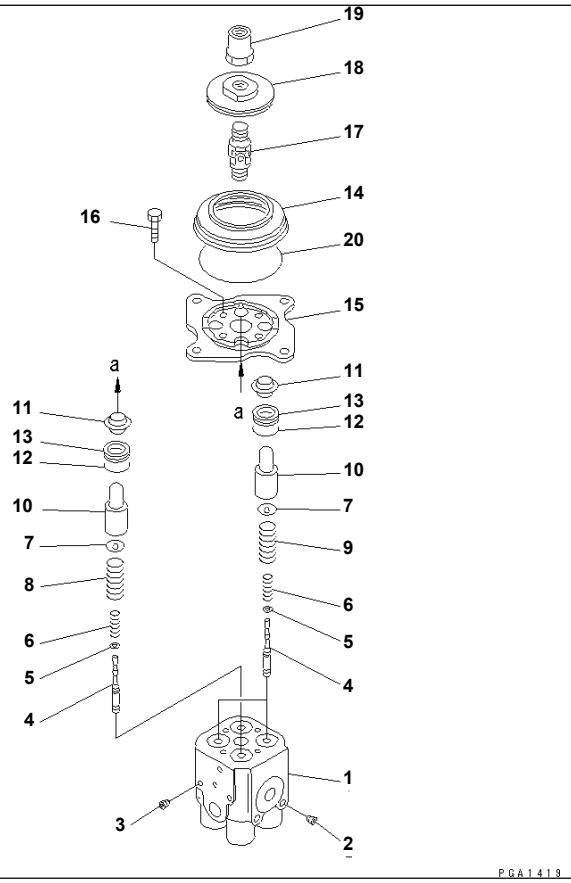


PC75UU-2 S/N 5001-UP

P.P.C. VALVE (FOR WORK EQUIPMENT CONTROL) (R.H.)(#5001-7927)

Item	Part No.	Description	Qty	Options
	702-16-01091	PILOT VALVE	1	SN:5001--7927
1	☆	· BODY,VALVE	1	SN:5001--@
2	☆	· PLUG	2	SN:5001--@
3	☆	· PLUG	2	SN:5001--@
4	☆	· VALVE	4	SN:5001--@
5	702-16-51140	· SHIM¤ 0.30MM	4	SN:5001--@
6	702-16-53420	· SPRING	4	SN:5001--@
7	702-16-53140	· RETAINER	4	SN:5001--@
8	702-16-53160	· SPRING	2	SN:5001--7927
9	702-16-53590	· SPRING	2	SN:5001--@
10	702-16-53170	· PISTON	4	SN:5001--@
11	702-16-51270	· SEAL	4	SN:5001--@
12	07000-02020	· O-RING	4	SN:5001--@
13	702-16-53290	· COLLAR	4	SN:5001--7927
14	702-16-53190	· BOOT	1	SN:5001--@
15	702-16-53210	· PLATE	1	SN:5001--@
16	01010-50620	· BOLT	4	SN:5001--@
17	702-16-51240	· JOINT	1	SN:5001--@
18	702-16-53220	· DISC	1	SN:5001--@
19	702-16-53230	· NUT	1	SN:5001--@
20	07000-02070	· O-RING	1	SN:5001--@

https://truckmanualshub.com/

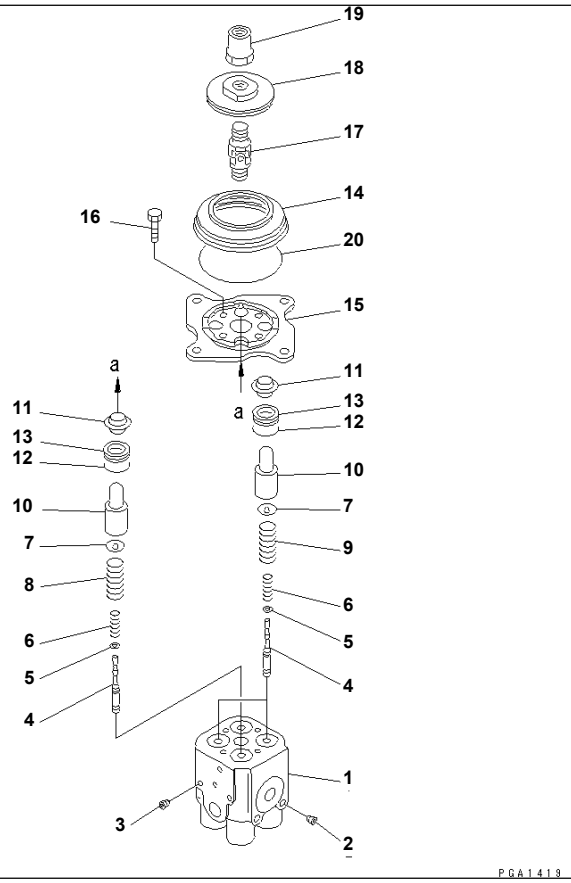


PC75UU-2 S/N 5001-UP

P.P.C. VALVE (FOR WORK EQUIPMENT CONTROL) (L.H.)(#5001-7927)

Item	Part No.	Description	Qty	Options
	702-16-01091	PILOT VALVE	1	SN:5001--7927
1	☆	· BODY,VALVE	1	SN:5001--@
2	☆	· PLUG	2	SN:5001--@
3	☆	· PLUG	2	SN:5001--@
4	☆	· VALVE	4	SN:5001--@
5	702-16-51140	· SHIM¤ 0.30MM	4	SN:5001--@
6	702-16-53420	· SPRING	4	SN:5001--@
7	702-16-53140	· RETAINER	4	SN:5001--@
8	702-16-53160	· SPRING	2	SN:5001--7927
9	702-16-53590	· SPRING	2	SN:5001--@
10	702-16-53170	· PISTON	4	SN:5001--@
11	702-16-51270	· SEAL	4	SN:5001--@
12	07000-02020	· O-RING	4	SN:5001--@
13	702-16-54170	· COLLAR	4	SN:5001--@
14	702-16-53190	· BOOT	1	SN:5001--@
15	702-16-53210	· PLATE	1	SN:5001--@
16	01010-50620	· BOLT	4	SN:5001--@
17	702-16-51240	· JOINT	1	SN:5001--@
18	702-16-53220	· DISC	1	SN:5001--7927
19	702-16-53230	· NUT	1	SN:5001--@
20	07000-02070	· O-RING	1	SN:5001--@

https://truckmanualshub.com/

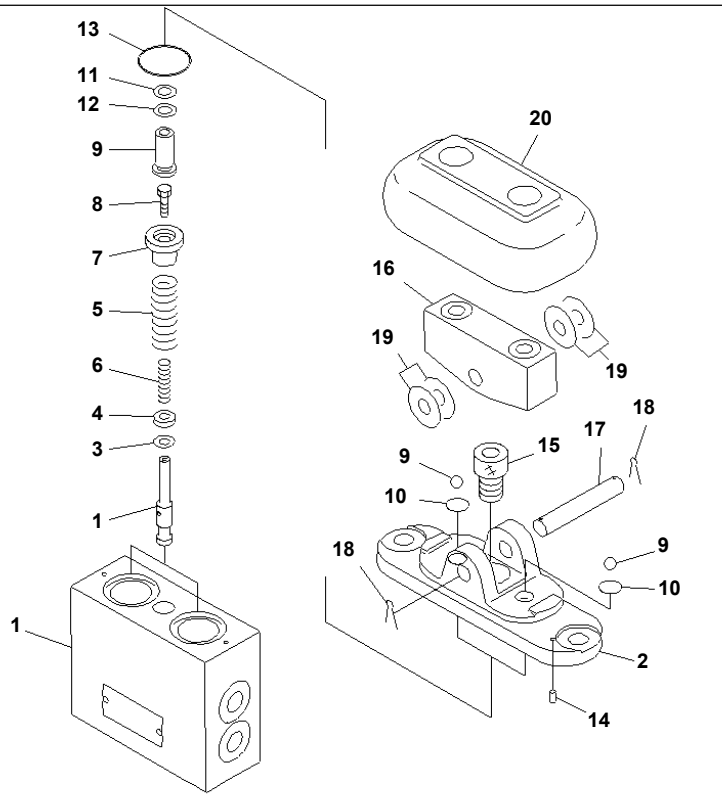


PNA1414

PC75UU-2 S/N 5001-UP

P.P.C. VALVE (FOR OFFSET ATTACHMENT CONTROL)(#5001-7927)

Item	Part No.	Description	Qty	Options
1	20U-43-21351	VALVE ASS'Y,OFFSET CONTROL	1	SN:5001--7927
THE NISINA KOGYO PART NUMBER IS THAT NY IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
	☆	· BODY ASS'Y	1	SN:5001--7927
2	NY05960-1060A	· COVER	1	SN:5001--7927
3	NY83007-02060	· WASHER	2	SN:5001--7927
4	NY11028-10400	· SHIM¤ 0.2MM	2	SN:5001--7927
5	NY06322-1010A	· SPRING	2	SN:5001--7927
6	NY06322-10400	· SPRING	2	SN:5001--7927
7	NY05960-10500	· SLEEVE	2	SN:5001--7927
8	NY81900-00032	· BOLT	2	SN:5001--7927
9	NY05960-00100	· PUSHER ASS'Y	2	SN:5001--7927
10	NY86710-01010	· O-RING	2	SN:5001--7927
11	NY00558-10800	· SHIM¤ 0.1MM	2	SN:5001--7927
12	NY00558-10900	· SHIM¤ 0.2MM	2	SN:5001--7927
13	NY86711-03024	· O-RING	2	SN:5001--7927
14	NY84204-21006	· PIN,SPRING	2	SN:5001--7927
15	NY81446-12020	· BOLT	1	SN:5001--7927
16	NY11028-1030A	· CAM	1	SN:5001--7927
17	NY05960-1090B	· PIN	1	SN:5001--7927
18	NY84215-00916	· PIN,SPLIT	2	SN:5001--7927
19	NY83017-02100	· WASHER	4	SN:5001--7927
20	NY05960-11000	· BOOT	1	SN:5001--7927

https://truckmanualshub.com/

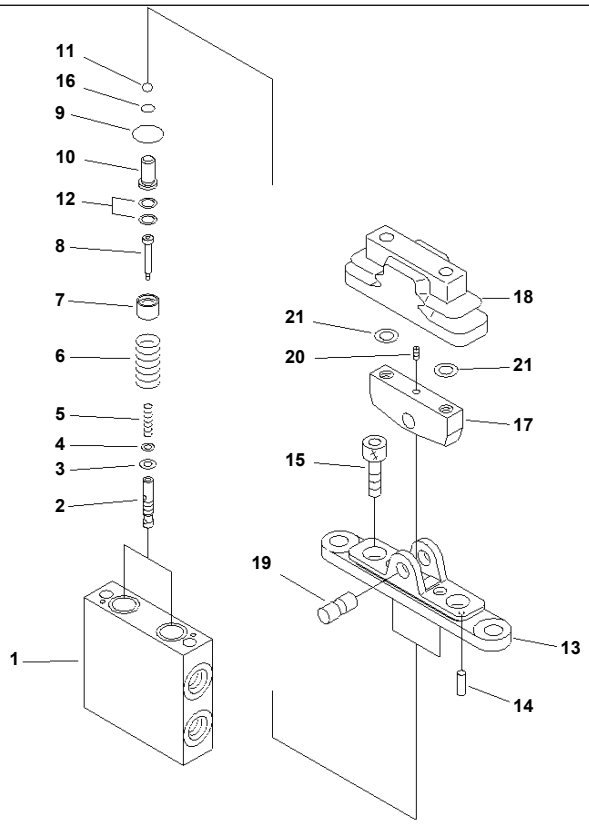

PC75UU-2 S/N 5001-UP

P.P.C. VALVE (FOR OFFSET ATTACHMENT CONTROL)(#7928-10370)


Item	Part No.	Description	Qty	Options
	21Y-43-11191	VALVE ASS'Y	1	SN:7928--10370
THE NISINA KOGYO PART NUMBER IS THAT NY IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
1	NY07000-10110	· BODY	1	SN:7928--10370
2	NY07000-10210	· SPOOL	2	SN:7928--10370
3	NY83007-02040	· WASHER	2	SN:7928--10370
4	NY07000-10700	· SHIM¤ 0.1MM	6	SN:7928--10370
5	NY07000-11100	· SPRING	2	SN:7928--10370
6	NY07000-11020	· SPRING	2	SN:7928--10370
7	NY07000-10610	· HOLDER	2	SN:7928--10370
8	NY07000-10400	· END	2	SN:7928--10370
9	NY86900-60024	· O-RING	2	SN:7928--10370
	NY07000-00510	· PUSHER ASS'Y	2	SN:7928--10370
10	NY07000-10510	· · PUSHER	1	SN:7928--10370
11	NY85100-00026	· · BALL	1	SN:7928--10370
12	NY07000-11400	· SHIM¤ 0.1MM	4	SN:7928--10370
13	NY07000-1030A	· COVER	1	SN:7928--10370
14	NY84204-21006	· PIN	2	SN:7928--10370
15	NY81446-08016	· BOLT	2	SN:7928--10370
16	NY86710-01008	· O-RING	2	SN:7928--10370
17	NY07000-1081A	· CAM	1	SN:7928--10370
18	NY07000-11200	· BOOT	1	SN:7928--10370
19	NY07000-10900	· PIN	1	SN:7928--10370
20	NY82744-04008	· SCREW	1	SN:7928--10370

Ref. Y0670-21A0A Page 450170

https://truckmanualshub.com/

P.P.C. VALVE (FOR OFFSET ATTACHMENT CONTROL)(#7928-10370)

Item	Part No.	Description	Qty	Options
21	NY07000-11300	· WASHER	2	SN:7928--10370

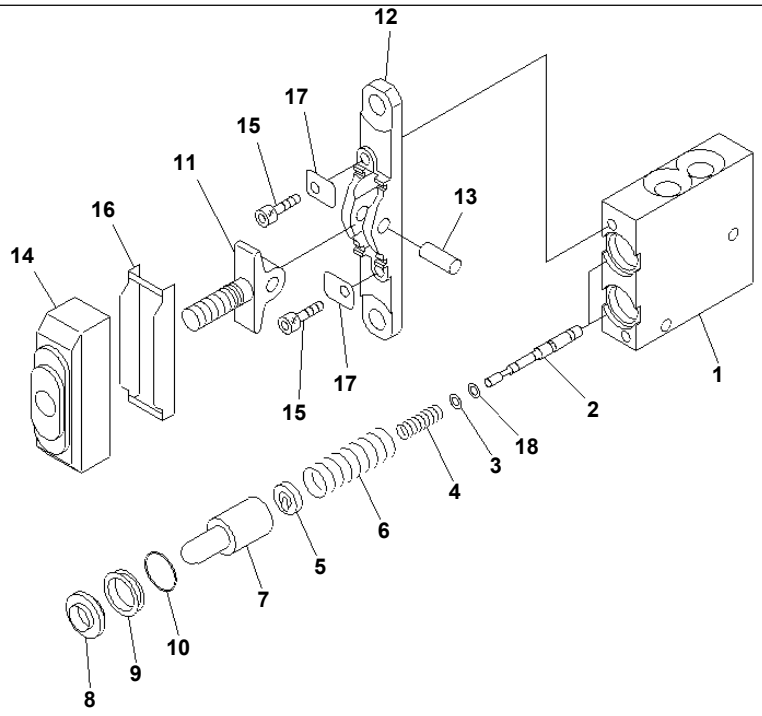


PDB4542

PC75UU-2 S/N 5001-UP

P.P.C. VALVE (FOR OFFSET ATTACHMENT CONTROL)(#10371-)

Item	Part No.	Description	Qty	Options
	702-16-01230	PILOT VALVE	1	SN:10371--
1	☆	· BODY,VALVE	1	SN:10371--
2	☆	· VALVE	2	SN:10371--
3	702-16-51140	· SHIM¤ 0.30MM	2	SN:10371--
4	702-16-54550	· SPRING	2	SN:10371--
5	702-16-54570	· RETAINER	2	SN:10371--
6	702-16-54560	· SPRING	2	SN:10371--
7	702-16-53170	· PISTON	2	SN:10371--
8	702-16-51270	· SEAL	2	SN:10371--
9	702-16-54580	· COLLAR	2	SN:10371--
10	702-16-54590	· O-RING	2	SN:10371--
11	☆	· LEVER	1	SN:10371--
12	☆	· PLATE	1	SN:10371--
13	☆	· SHAFT	1	SN:10371--
14	702-16-54640	· BOOT	1	SN:10371--
15	01252-30625	· BOLT	2	SN:10371--
16	702-16-54660	· PLATE	1	SN:10371--
17	702-16-54650	· PLATE	2	SN:10371--
18	702-16-54670	· SHIM¤ 0.20MM	4	SN:10371--

メイン ポンプ (コントロール ピストン) (1/3) (インナ パーツ)
FIG. Y1610-01A0 MAIN PUMP (CONTROL PISTON) (1/3) (INNER PARTS)

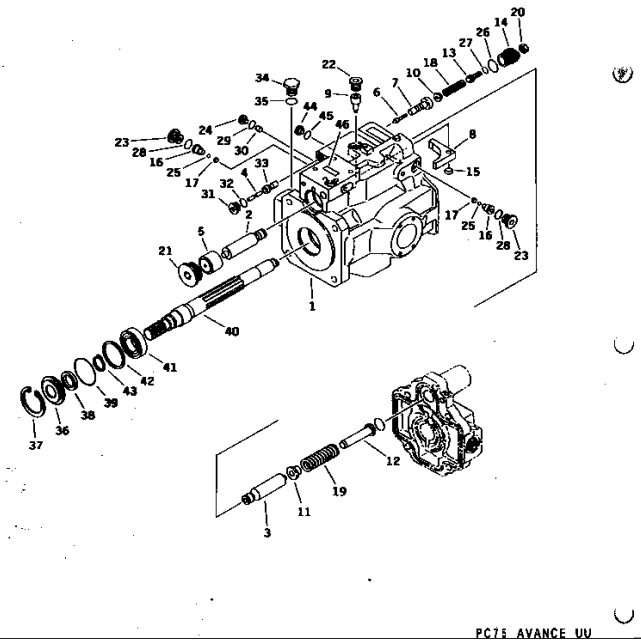

PC75UU-2 S/N 5001-UP

MAIN PUMP (CONTROL PISTON) (1/3) (INNER PARTS)


Item	Part No.	Description	Qty	Options
	21W-60-22111	PUMP ASS'Y	1	SN:5001--
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.Y1610-01A0 TO Y1610-03A0. THE UCHIDA YUATSU PART NUMBER IS THAT UC IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
1	☆	· HOUSING	1	SN:5001--
2	☆	· PISTON	1	SN:5001--
3	☆	· PISTON	1	SN:5001--
4	☆	· PISTON	1	SN:5001--
5	☆	· PISTON	1	SN:5001--
6	☆	· SPOOL	1	SN:5001--
7	☆	· BARREL	1	SN:5001--
8	☆	· ARM	1	SN:5001--
9	☆	· SHAFT	1	SN:5001--
10	UC1100245915	· RETAINER	1	SN:5001--
11	UC1100245906	· RETAINER	1	SN:5001--
12	UC1100245924	· RETAINER	1	SN:5001--
13	UC1100245896	· SCREW,ADJUST	1	SN:5001--
14	UC1100245887	· GUIDE	1	SN:5001--
15	☆	· SHIM	1	SN:5001--
16	☆	· SEAT,VALVE	2	SN:5001--
17	UC1182398006	· GUIDE	2	SN:5001--
18	UC1100100692	· SPRING	1	SN:5001--
19	UC1100246211	· SPRING	1	SN:5001--
20	UC1303027338	· NUT	1	SN:5001--

https://truckmanualshub.com/

MAIN PUMP (CONTROL PISTON) (1/3) (INNER PARTS)

Item	Part No.	Description	Qty	Options
21	UC1701538623	· PLUG	1	SN:5001--
22	UC1701538155	· PLUG	1	SN:5001--
23	UC1198273603	· PLUG	2	SN:5001--
24	UC1198273502	· PLUG	1	SN:5001--
25	UC1303021165	· BALL	2	SN:5001--
26	UC1301208003	· O-RING	1	SN:5001--
27	UC1300142003	· O-RING	1	SN:5001--
28	UC1301169009	· O-RING	2	SN:5001--
29	UC1301157006	· O-RING	1	SN:5001--
30	UC1180769066	· ORIFICE	1	SN:5001--
31	UC1198273704	· PLUG	1	SN:5001--
32	UC1301181009	· O-RING	1	SN:5001--
33	UC1100354716	· BUSHING	1	SN:5001--
34	UC1100321138	· PLUG	1	SN:5001--
35	UC1100324173	· O-RING	1	SN:5001--
36	UC1100236149	· CASE	1	SN:5001--
37	UC1303028726	· RING,SNAP	1	SN:5001--
38	UC1100159079	· SEAL,OIL	1	SN:5001--
39	UC1300253002	· O-RING	1	SN:5001--
40	UC1100377168	· SHAFT	1	SN:5001--
41	UC1100235596	· BEARING	1	SN:5001--
42	UC1303032358	· SHIM	1	SN:5001--
43	UC1302129002	· RING,SNAP	1	SN:5001--
44	UC1100163684	· PLUG	1	SN:5001--
45	UC1301169009	· O-RING	1	SN:5001--
46	☆	· PLATE	1	SN:5001--

メイン ポンプ (ピストン ポンプ) (2/3) (インナ パーツ)
FIG. Y1610-02A0 MAIN PUMP (PISTON PUMP) (2/3) (INNER PARTS)

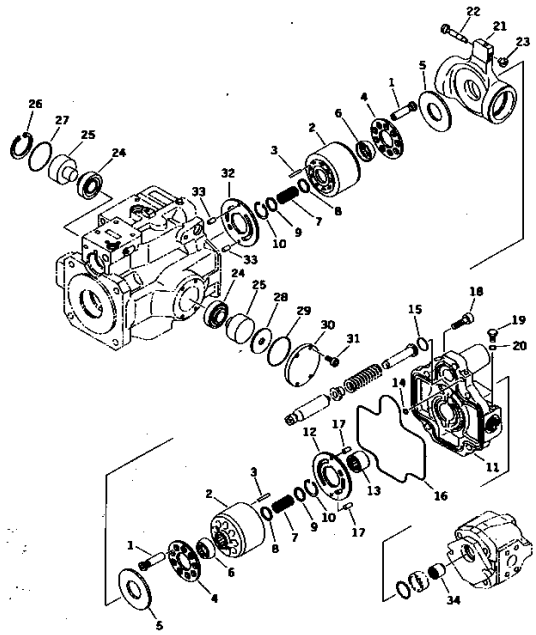

PC75 AVANCE (U)

PC75UU-2 S/N 5001-UP

MAIN PUMP (PISTON PUMP) (2/3) (INNER PARTS)

Item	Part No.	Description	Qty	Options
	(21W-60-22111)	PUMP ASS'Y	1	SN:5001--
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.Y1610-01A0 TO Y1610-03A0. THE UCHIDA YUATSU PART NUMBER IS THAT UC IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
1	UC4607050477	· PISTON	18	SN:5001--
2	UC1100268532	· BLOCK,CYLINDER	2	SN:5001--
3	UC1607854153	· PIN	6	SN:5001--
4	UC1100231402	· RETAINER	2	SN:5001--
5	UC1100235743	· PLATE	2	SN:5001--
6	UC1100195746	· GUIDE	2	SN:5001--
7	UC1100235752	· SPRING	2	SN:5001--
8	UC1100268541	· RETAINER	2	SN:5001--
9	UC1100235633	· RETAINER	2	SN:5001--
10	UC1302160003	· RING,SNAP	2	SN:5001--
11	☆	· COVER	1	SN:5001--
12	UC1100245731	· PLATE,CONTROL	1	SN:5001--
13	UC1100046002	· BEARING	1	SN:5001--
14	UC1301157006	· O-RING	1	SN:5001--
15	UC1301011001	· O-RING	1	SN:5001--
16	UC1100359683	· O-RING	1	SN:5001--
17	UC1302180025	· PIN	2	SN:5001--
18	UC1301613001	· BOLT	5	SN:5001--
19	UC1100321138	· PLUG	1	SN:5001--
20	UC1100324173	· O-RING	1	SN:5001--


https://truckmanualshub.com/

MAIN PUMP (PISTON PUMP) (2/3) (INNER PARTS)

Item	Part No.	Description	Qty	Options
	UC4100268483	· HANGER ASS'Y	1	SN:5001--
21	☆	· · HANGER	1	SN:5001--
22	☆	· · PISTON	1	SN:5001--
23	☆	· · PLUG	1	SN:5001--
24	☆	· · BEARING	2	SN:5001--
25	☆	· · SHAFT	2	SN:5001--
26	UC1302164005	· RING,SNAP	1	SN:5001--
27	UC1301022001	· O-RING	1	SN:5001--
28	UC1100271217	· SHIM	1	SN:5001--
29	UC1300269007	· O-RING	1	SN:5001--
30	UC1100127798	· PLATE	1	SN:5001--
31	UC1301537008	· BOLT	4	SN:5001--
32	UC1100245749	· PLATE,CONTROL	1	SN:5001--
33	UC1302180025	· PIN	2	SN:5001--
34	UC1100377388	· COUPLING	1	SN:5001--

https://truckmanualshub.com/

FIG. Y1610-03A0 MAIN PUMP (GEAR PUMP) (3/3) (INNER PARTS)

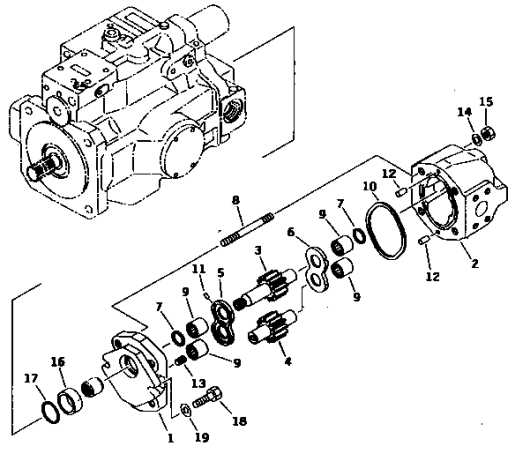

PC75 AVANCE UU


PC75UU-2 S/N 5001-UP

MAIN PUMP (GEAR PUMP) (3/3) (INNER PARTS)

Item	Part No.	Description	Qty	Options
	(21W-60-22111)	PUMP ASS'Y	1	SN:5001--
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.Y1610-01A0 TO Y1610-03A0. THE UCHIDA YUATSU PART NUMBER IS THAT UC IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
	UCH0125R9469	· GEAR PUMP ASS'Y	1	SN:5001--
1	☆	· · CASE	1	SN:5001--
2	☆	· · BODY	1	SN:5001--
3	☆	· · GEAR,DRIVE	1	SN:5001--
4	☆	· · GEAR,DRIVEN	1	SN:5001--
5	☆	· · PLATE,SIDE	1	SN:5001--
6	☆	· · PLATE,SIDE	1	SN:5001--
7	☆	· · SEAL,RING	2	SN:5001--
8	UC1181856006	· · STUD	4	SN:5001--
9	UC1100046002	· · BEARING,NEEDLE	4	SN:5001--
10	UC1303002403	· · RING	1	SN:5001--
11	UC1100168496	· · O-RING	6	SN:5001--
12	UC1100016643	· · PIN	2	SN:5001--
13	UC1301892002	· · PLUG	1	SN:5001--
14	UC1303004711	· · WASHER	4	SN:5001--
15	UC1303008915	· · NUT	4	SN:5001--
16	UC1182160003	· · BUSHING	1	SN:5001--
17	UC1303030453	· · O-RING	1	SN:5001--
18	UC1303030875	· · BOLT	4	SN:5001--
19	UC1302061007	· · WASHER,SPRING	4	SN:5001--

https://truckmanualshub.com/

FIG. Y1610-11A1 CONTROL PUMP (PUMP) (INNER PARTS) (FOR P.P.C. MAIN LINE)

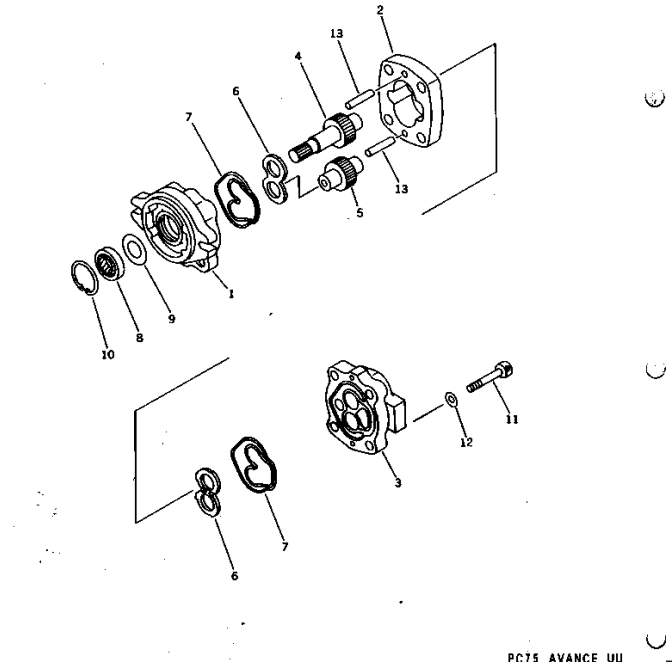


PC75 AVANCE UU

PC75UU-2 S/N 5001-UP

CONTROL PUMP (PUMP) (INNER PARTS) (FOR P.P.C. MAIN LINE)

Item	Part No.	Description	Qty	Options
	705-40-01370	PUMP ASS'Y	1	SN:5001--
1	(★705-40-80210)	· BRACKET	1	SN:5001--
	(★705-40-80610)	· · BUSHING,PLANE	1	SN:5001--
	(★705-40-80620)	· · BUSHING,PLANE	1	SN:5001--
2	(★705-40-18011)	· CASE,GEAR	1	SN:5001--
3	(★705-40-80150)	· COVER	1	SN:5001--
	(★705-40-80610)	· · BUSHING,PLANE	2	SN:5001--
4	(★705-40-18410)	· GEAR,DRIVE	1	SN:5001--
5	(★705-40-18511)	· GEAR,DRIVEN	1	SN:5001--
6	705-40-80720	· PLATE,SIDE	2	SN:5001--
7	705-40-80760	· SEAL,RING	2	SN:5001--
8	705-40-80810	· SEAL,OIL	1	SN:5001--
9	705-40-80870	· PLATE	1	SN:5001--
10	04065-03515	· RING,SNAP	1	SN:5001--
11	705-41-80810	· BOLT	4	SN:5001--
12	01643-51232	· WASHER	4	SN:5001--
13	705-67-01910	· PIN,DOWEL	2	SN:5001--


https://truckmanualshub.com/

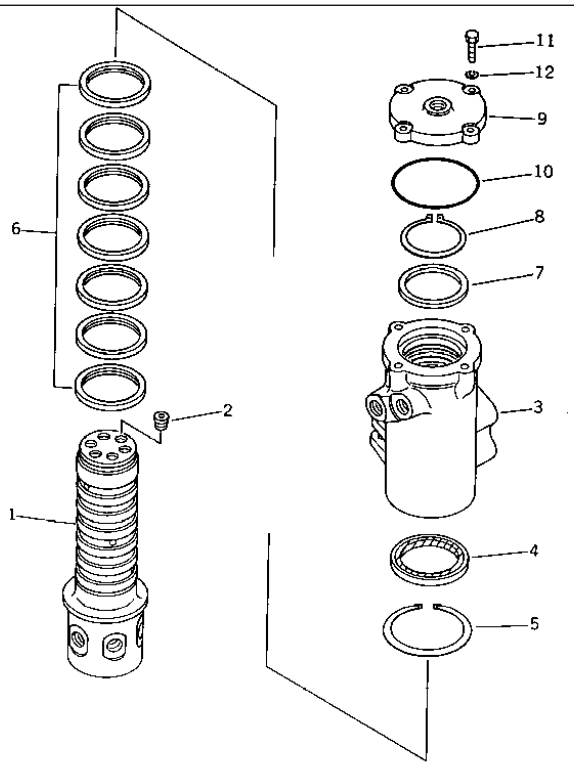

PC75UU-2 S/N 5001-UP

SWIVEL JOINT (INNER PARTS)(#5001-7927)

Item	Part No.	Description	Qty	Options
	703-08-12122	SWIVEL JOINT ASS'Y	1	SN:5001--7927
1	703-08-92551	· SHAFT,SWIVEL	1	SN:5001--7927
2	703-08-98110	· PLUG	6	SN:5001--7927
3	703-08-91530	· ROTOR	1	SN:5001--7927
4	703-08-96510	· SEAL,OIL	1	SN:5001--7927
5	04077-00100	· RING,SNAP	1	SN:5001--7927
6	703-08-95611	· SEAL,SLIPPER	7	SN:5001--7927
7	703-08-94510	· RING	1	SN:5001--7927
8	04064-07525	· RING,SNAP	1	SN:5001--7927
9	703-08-93520	· COVER	1	SN:5001--7927
10	07000-02105	· O-RING	1	SN:5001--7927
11	01010-50835	· BOLT	4	SN:5001--7927
12	01602-20825	· WASHER,SPRING	4	SN:5001--7927

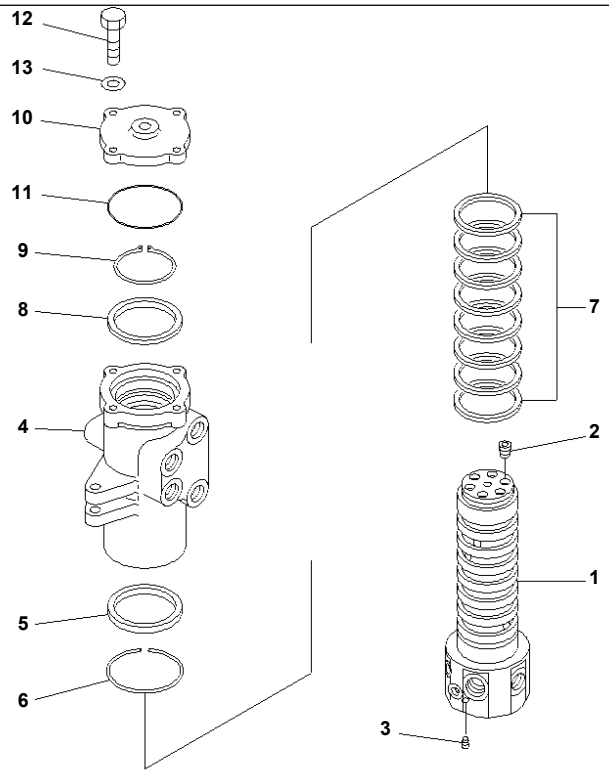


PN09531

PC75UU-2 S/N 5001-UP

SWIVEL JOINT (INNER PART)(#7928-)

Item	Part No.	Description	Qty	Options
	703-08-23111	SWIVEL JOINT ASS'Y	1	SN:7928--
1	703-08-92811	· SHAFT,SWIVEL	1	SN:7928--
2	703-08-98110	· PLUG	6	SN:7928--
3	07043-20108	· PLUG	1	SN:7928--
4	703-08-91810	· ROTOR	1	SN:7928--
5	703-08-96510	· SEAL,OIL	1	SN:7928--
6	04077-00100	· RING,SNAP	1	SN:7928--
7	703-08-95620	· SEAL,SLIPPER	8	SN:7928--
8	703-08-94510	· RING	1	SN:7928--
9	04064-07525	· RING,SNAP	1	SN:7928--
10	703-08-93520	· COVER	1	SN:7928--
11	07000-02105	· O-RING	1	SN:7928--
12	01010-50835	· BOLT	4	SN:7928--
13	01643-30823	· WASHER	4	SN:7928--

https://truckmanualshub.com/

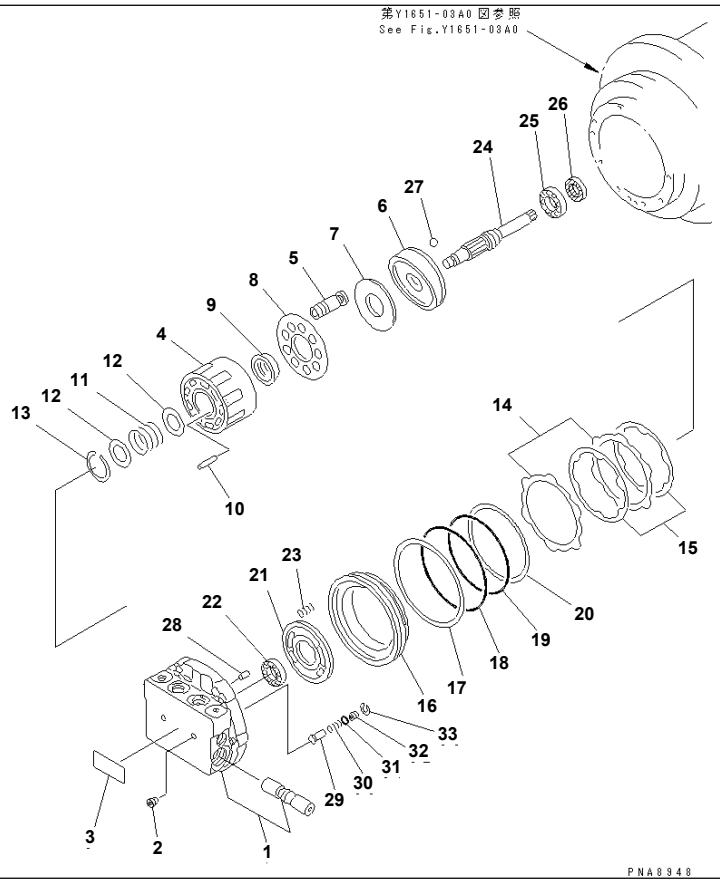

PC75UU-2 S/N 5001-UP

TRAVEL MOTOR (1/3) (HYDRAULIC MOTOR)


Item	Part No.	Description	Qty	Options
	21W-60-22130	TRAVEL MOTOR ASS'Y	2	SN:5001--
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.Y1651-01A0¤ 02A0 AND 03A0.				
	TZ920A200000XA	· MOTOR ASS'Y,HYDRAULIC	1	SN:5001--
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.Y1651-01A0 AND Y1651-02A0.				
1	TZ880A210100-D	· · FLANGE KIT,REAR	1	SN:5001--
2	TZGM1-8	· · · PLUG	2	SN:5001--
3	TZ850A0006-00	· · · PLATE¤ NAME	1	SN:5001--
4	TZ810B2004-00	· · BLOCK,CYLINDER	1	SN:5001--
5	TZ810B2105-00	· · PISTON KIT (9 PIECES)	1	SN:5001--
6	TZ910B200300-X	· · PLATE,SWASH	1	SN:5001--
7	TZ800B2032-00	· · PLATE,THRUST	1	SN:5001--
8	TZ810B2007-00	· · PLATE,RETAINER	1	SN:5001--
9	TZ810B2008-00	· · BOWL,THRUST	1	SN:5001--
10	TZJB150625-238	· · PIN	3	SN:5001--
11	TZ810B2014-00	· · SPRING	1	SN:5001--
12	TZ880A2010-00	· · WASHER	2	SN:5001--
13	TZ1RTW-42	· · RING	1	SN:5001--
14	TZ800B2016-01	· · PLATE	2	SN:5001--
15	TZ800A2015-00	· · PLATE	2	SN:5001--
16	TZ880A2012-00	· · PISTON	1	SN:5001--
17	TZSUN-2BG140	· · RING,BACK-UP (K1)	1	SN:5001--
18	07000-12140	· · O-RING (K1)	1	SN:5001--
19	TZJB1516-G28-9	· · O-RING (K1)	1	SN:5001--
20	TZSUN-2WG28	· · RING,BACK-UP (K1)	2	SN:5001--

https://truckmanualshub.com/

TRAVEL MOTOR (1/3) (HYDRAULIC MOTOR)

Item	Part No.	Description	Qty	Options
21	TZ860A2009-01	· · PLATE,TIMING	1	SN:5001--
22	06000-06203	· · BEARING	1	SN:5001--
23	TZ880A2013-00	· · SPRING	8	SN:5001--
24	TZ910B2002-00	· · SHAFT	1	SN:5001--
25	TZ880A2029-00	· · BEARING	1	SN:5001--
26	TZ15Z-22-42-10	· · SEAL,OIL (K1)	1	SN:5001--
27	TZJB1501-22	· · BALL	2	SN:5001--
28	TZJB1354-4-10	· · PIN	2	SN:5001--
29	TZ860A2019-00	· · VALVE	1	SN:5001--
30	TZ860A2020-01	· · SPRING	1	SN:5001--
31	07000-11009	· · O-RING (K1)	1	SN:5001--
32	TZ860A2018-00	· · SEAT	1	SN:5001--
33	TZ100A2022-00	· · RING	1	SN:5001--


https://truckmanualshub.com/

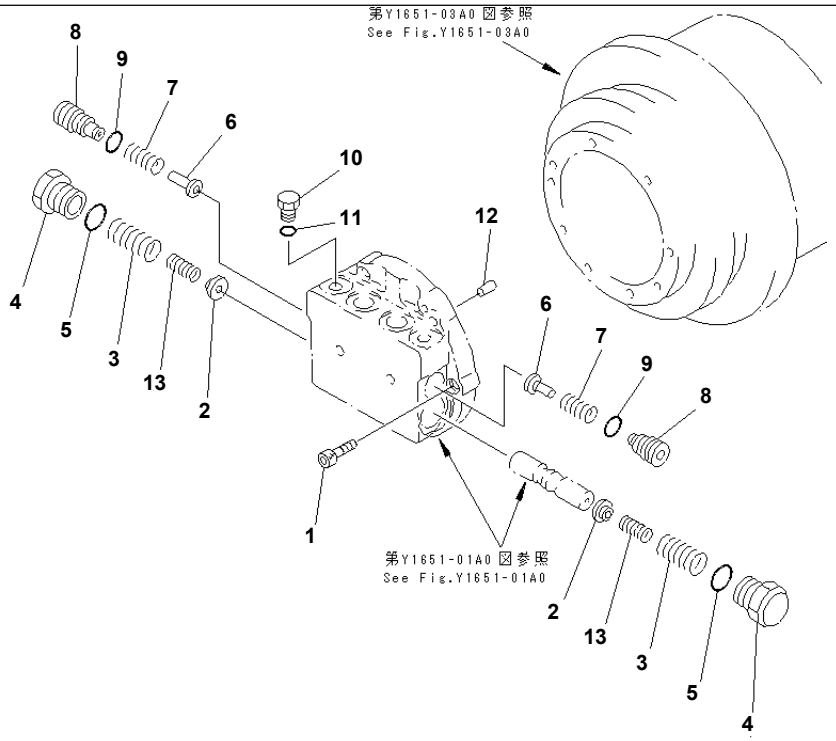

PC75UU-2 S/N 5001-UP

TRAVEL MOTOR (2/3) (BRAKE VALVE)

Item	Part No.	Description	Qty	Options
	(21W-60-22130)	TRAVEL MOTOR ASS'Y	2	SN:5001--
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.Y1651-01A0¤ 02A0 AND 03A0.				
	(TZ920A200000XA)	· MOTOR ASS'Y,HYDRAULIC	1	SN:5001--
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.Y1651-01A0 AND Y1651-02A0.				
1	01252-31030	· · BOLT	8	SN:5001--
2	TZ861A2052-00	· · STOPPER	2	SN:5001--
3	TZ860A2056-00	· · SPRING	2	SN:5001--
4	TZ860A2051-00	· · PLUG	2	SN:5001--
5	TZJB2401-P26-9	· · O-RING (K1)	2	SN:5001--
6	TZ860A2054-01	· · VALVE	2	SN:5001--
7	TZ860A2055-01	· · SPRING	2	SN:5001--
8	TZ860A2053-01	· · PLUG	2	SN:5001--
9	07000-12016	· · O-RING (K1)	2	SN:5001--
10	TZ100A2021-00	· · PLUG	1	SN:5001--
11	07002-02034	· · O-RING (K1)	1	SN:5001--
12	TZJB1354-8-25	· · PIN	2	SN:5001--
13	TZ880A2057-00	· · SPRING	2	SN:5001--

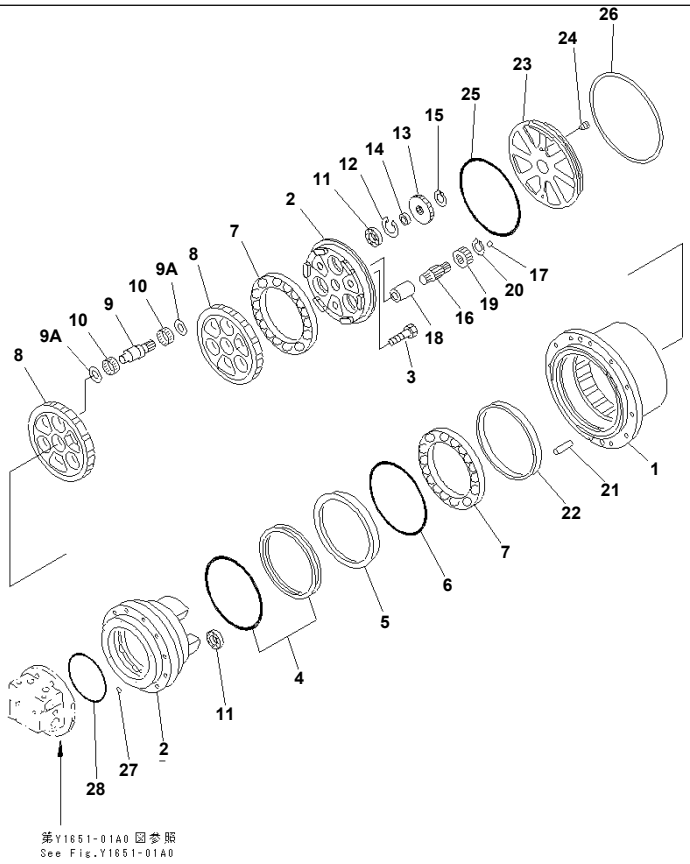

Ref. Y1651-03A0 **Page 450310**

PC75UU-2 S/N 5001-UP
TRAVEL MOTOR (3/3) (FINAL DRIVE)


Item	Part No.	Description	Qty	Options
	(21W-60-22130)	TRAVEL MOTOR ASS'Y	2	SN:5001--
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.Y1651-01A0¤ 02A0 AND 03A0.				
	TZ922A1000-00	· FINAL DRIVE ASS'Y	1	SN:5001--
1	(★TZ810B1001-00)	· · HUB	1	SN:5001--
	(★TZ920A1102-00)	· · SPINDLE KIT	1	SN:5001--
2	(★TZ920A1132-00)	· · · SPINDLE ASS'Y	1	SN:5001--
3	TZ910B1019-01	· · · BOLT,REAMER	3	SN:5001--
	TZ192-230-30-B	· · FLOATING SEAL ASS'Y (K1)	1	SN:5001--
4	(★TZES100-192-B)	· · · SEAL,FLOATING	1	SN:5001--
5	(★TZ861A1010-00)	· · · PIECE,DISTANCE	1	SN:5001--
6	07000-15230	· · O-RING (K1)	1	SN:5001--
7	(★TZ810B1021-00)	· · BEARING	2	SN:5001--
	(★TZ910B1104-00)	· · RV GEAR ASS'Y	1	SN:5001--
8	(★TZ900B1204-00)	· · · RV GEAR (2 PIECES)	1	SN:5001--
9	(★TZ910B1009-00)	· · · SHAFT,CRANK	3	SN:5001--
9A	(★TZ910B1012-00)	· · · SPACER	6	SN:5001--
10	(★TZ910B1023-00)	· · · BEARING	6	SN:5001--
11	(★TZ860A1022-00)	· · · BEARING	6	SN:5001--
12	(★TZ860A1013-00)	· · SNAP RING SET (12 KINDS)	3	SN:5001--
13	TZ814B1107-00	· · SPUR GEAR KIT (3 PIECES)	1	SN:5001--
14	TZ800B1014-00	· · PIECE,DISTANCE	3	SN:5001--
15	04064-02512	· · RING,SNAP	3	SN:5001--
16	TZ910B1016-00	· · SHAFT	1	SN:5001--
17	04260-00952	· · BALL	1	SN:5001--

https://truckmanualshub.com/

TRAVEL MOTOR (3/3) (FINAL DRIVE)

Item	Part No.	Description	Qty	Options
18	TZ800A1015-00	· · JOINT	1	SN:5001--
19	TZ814B1006-00	· · GEAR,INPUT	1	SN:5001--
20	TZJB2804-S19	· · RING,SNAP	1	SN:5001--
21	TZ810B1017-00	· · PIN	24	SN:5001--
22	TZ810B1020-00	· · COLLAR	1	SN:5001--
23	TZ810B1008-00	· · COVER	1	SN:5001--
24	TZGM3-8	· · PLUG	1	SN:5001--
25	TZJW1516-P74-9	· · O-RING (K1)	1	SN:5001--
26	TZ810B1018-00	· · RING	1	SN:5001--
27	07000-11007	· · O-RING (K1)	1	SN:5001--
28	TZJW1516-G35-9	· · O-RING (K1)	1	SN:5001--
SERVICE KIT				
K1	TZ922A9000-00	SERVICE KIT	1	SN:5001--
	TZSUN-2BG140	· RING,BACK-UP	1	SN:5001--
	07000-12140	· O-RING	1	SN:5001--
	TZJB1516-G28-9	· O-RING	1	SN:5001--
	TZSUN-2WG28	· RING,BACK-UP	1	SN:5001--
	TZ15Z-22-42-10	· SEAL	1	SN:5001--
	07000-11009	· O-RING	1	SN:5001--
	TZJB2401-P26-9	· O-RING	2	SN:5001--
	07000-12016	· O-RING	2	SN:5001--
	07002-02034	· O-RING	1	SN:5001--
	TZ192-230-30-B	· FLOATING SEAL ASS'Y	1	SN:5001--
	07000-15230	· O-RING	1	SN:5001--
	TZJW1516-P74-9	· O-RING	1	SN:5001--
	07000-11007	· O-RING	1	SN:5001--
	TZJW1516-G35-9	· O-RING	1	SN:5001--

FIG. Y1680-01A0 MAIN VALVE (UPPER VALVE) (1/2) (INNER PARTS)

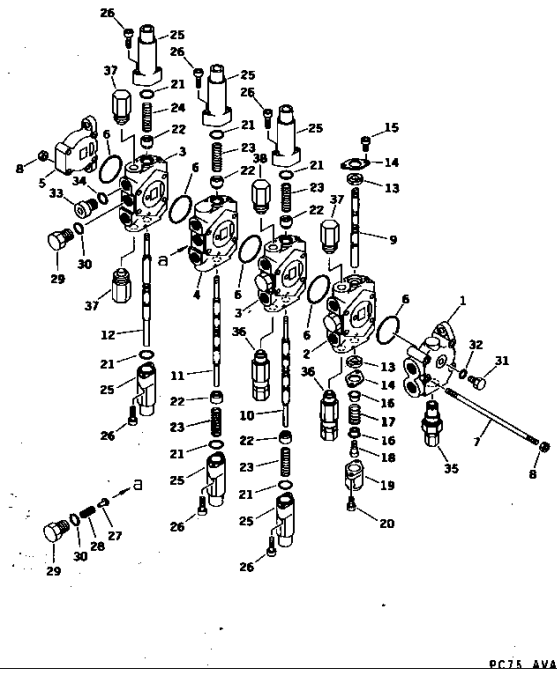

PC75UU-2 S/N 5001-UP

MAIN VALVE (UPPER VALVE) (1/2) (INNER PARTS)

Item	Part No.	Description	Qty	Options
	21W-60-22120	VALVE ASS'Y	1	SN:5001--
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.Y1680-01A0 AND Y1680-02A0.				
THE NABCO PART NUMBER IS THAT NA IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
1	NAD33217152101	· BLOCK	1	SN:5001--
2	☆	· BLOCK	1	SN:5001--
3	☆	· BLOCK	2	SN:5001--
4	☆	· BLOCK	1	SN:5001--
5	NAD33214825301	· BLOCK	1	SN:5001--
6	NAC01200055010	· O-RING	5	SN:5001--
7	NAE51413047126	· BOLT	4	SN:5001--
8	NAB01011008004	· NUT	8	SN:5001--
9	☆	· SPOOL,BLADE	1	SN:5001--
10	☆	· SPOOL,OFFSET	1	SN:5001--
11	☆	· SPOOL,SWING	1	SN:5001--
12	☆	· SPOOL,BOOM HIGH	1	SN:5001--
13	NAE55414586501	· SEAL,OIL	2	SN:5001--
14	NAD33090504004	· PLATE	2	SN:5001--
15	NAA02010601051	· BOLT	2	SN:5001--
16	NAD33414362401	· RETAINER	2	SN:5001--
17	NAE574134171	· SPRING	1	SN:5001--
18	NAE51417062001	· BOLT	1	SN:5001--
19	NAD33414760401	· CASE	1	SN:5001--
20	NAE51416985101	· BOLT	2	SN:5001--
21	NAC01100022010	· O-RING	6	SN:5001--

Ref. Y1680-01A0 Page 450340


https://truckmanualshub.com/

MAIN VALVE (UPPER VALVE) (1/2) (INNER PARTS)

Item	Part No.	Description	Qty	Options
22	NAD33416861901	· RETAINER	5	SN:5001--
23	NAE57416861701	· SPRING	4	SN:5001--
24	NAE57417321301	· SPRING	1	SN:5001--
25	NAD33416861801	· CASE	6	SN:5001--
26	NAA02010604051	· BOLT	12	SN:5001--
27	NAD33090701014	· POPPET	3	SN:5001--
28	NA4M82472	· SPRING	3	SN:5001--
29	NAD33090703014	· PLUG	4	SN:5001--
30	NAC01100014010	· O-RING	4	SN:5001--
31	07040-11007	· PLUG	1	SN:5001--
32	07002-11023	· O-RING	1	SN:5001--
33	NAE14412921801	· PLUG	1	SN:5001--
34	NAC01100015010	· O-RING	1	SN:5001--
35	(NAD33316087823)	· VALVE ASS'Y,MAIN RELIEF	1	SN:5001--
36	(NAD33417031603)	· VALVE ASS'Y,SAFETY	2	SN:5001--
37	(NAD33417057801)	· PLUG ASS'Y	3	SN:5001--
38	(NAD33415911901)	· VALVE ASS'Y,SUCTION	1	SN:5001--

https://truckmanualshub.com/

FIG.Y1680-02A0 MAIN VALVE (UPPER VALVE) (2/2) (INNER PARTS)

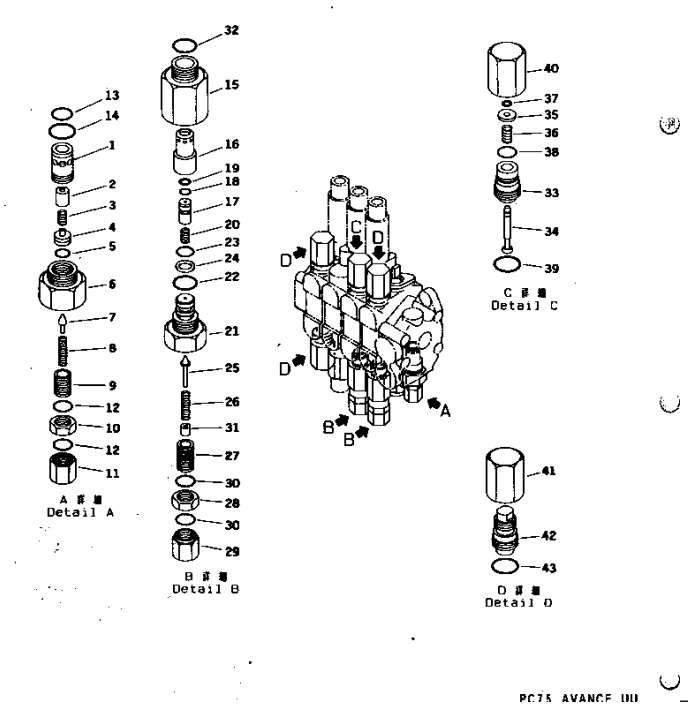

PC75UU-2 S/N 5001-UP
MAIN VALVE (UPPER VALVE) (2/2) (INNER PARTS)

Item	Part No.	Description	Qty	Options
	(21W-60-22120)	VALVE ASS'Y	1	SN:5001--
THIS ASSEMBLY CONSISTS OF ALL PARTS SHOWN IN FIGS.Y1680-01A0 AND Y1680-02A0.				
THE NABCO PART NUMBER IS THAT NA IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.				
	NAD33316087823	· VALVE ASS'Y,MAIN RELIEF	1	SN:5001--
1	☆	· · SLEEVE	1	SN:5001--
2	☆	· · POPPET	1	SN:5001--
3	NAE574130025	· · SPRING	1	SN:5001--
4	NAE114130026	· · SEAT	1	SN:5001--
5	NAC01101010010	· · O-RING	1	SN:5001--
6	☆	· · RETAINER	1	SN:5001--
7	NAD51090205004	· · POPPET	1	SN:5001--
8	NAE574120838	· · SPRING	1	SN:5001--
9	NAE12416087901	· · SCREW	1	SN:5001--
10	NAE51414733901	· · NUT	1	SN:5001--
11	NAE14414733801	· · NUT	1	SN:5001--
12	NAE54414762001	· · O-RING	2	SN:5001--
13	NAC03100001510	· · O-RING	1	SN:5001--
14	NAC01100022010	· · O-RING	1	SN:5001--
	NAD33417031603	· VALVE ASS'Y,SAFETY AND SUCTION	2	SN:5001--
15	☆	· · RETAINER	1	SN:5001--
16	☆	· · SLEEVE	1	SN:5001--
17	☆	· · POPPET	1	SN:5001--
18	☆	· · O-RING	1	SN:5001--
19	☆	· · RING,BACK-UP	1	SN:5001--

https://truckmanualshub.com/

MAIN VALVE (UPPER VALVE) (2/2) (INNER PARTS)

Item	Part No.	Description	Qty	Options
20	☆	· · SPRING	1	SN:5001--
21	☆	· · SEAT	1	SN:5001--
22	☆	· · O-RING	1	SN:5001--
23	☆	· · O-RING	1	SN:5001--
24	☆	· · RING,BACK-UP	1	SN:5001--
25	☆	· · POPPET	1	SN:5001--
26	☆	· · SPRING	1	SN:5001--
27	☆	· · SCREW	1	SN:5001--
28	☆	· · NUT	1	SN:5001--
29	☆	· · NUT	1	SN:5001--
30	☆	· · O-RING	2	SN:5001--
31	☆	· · GUIDE	1	SN:5001--
32	NAE54408521204	· · O-RING	1	SN:5001--
	NAD33415911901	· VALVE ASS'Y,SUCTION	1	SN:5001--
33	☆	· · SLEEVE	1	SN:5001--
34	☆	· · POPPET	1	SN:5001--
35	NAE51414524401	· · SEAT	1	SN:5001--
36	NAE57414524501	· · SPRING	1	SN:5001--
37	NAB80000005001	· · RING,SNAP	1	SN:5001--
38	NAC01100015010	· · O-RING	1	SN:5001--
39	NAE54408521204	· · O-RING	1	SN:5001--
40	NAD33415910901	· · NUT	1	SN:5001--
	NAD33417057801	· PLUG ASS'Y	3	SN:5001--
41	☆	· · NUT	1	SN:5001--
42	☆	· · PLUG	1	SN:5001--
43	NAE54408521204	· · O-RING	1	SN:5001--